

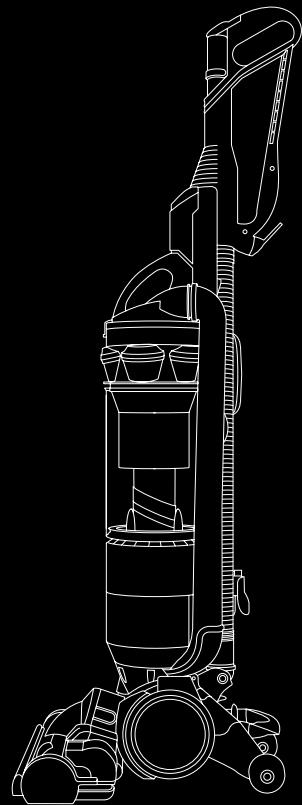


DC  
18


dyson slim

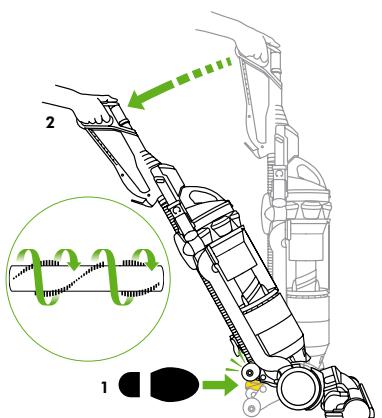

**Power/brushbar controls** Boutons de commande de la brosse rotative Ein-/Aus-Schalter & Einstellungen der Bürstwalze Aan/uit knop bediening van de borstel Controles de potencia/cepillo motorizado Controllo della spazzola/accensione

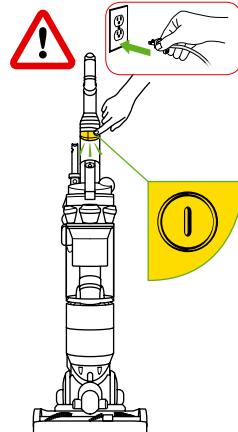






4

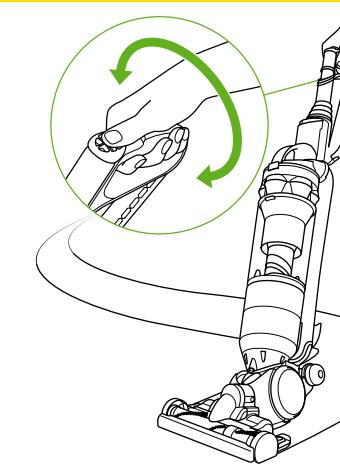








Washing filter Nettoyage du filtre Filter waschen Het wassen van het filter Lavado del filtro Lavaggio del filtro



3-6 Months  
Mois  
Monate  
Maanden  
Meses  
Mesi

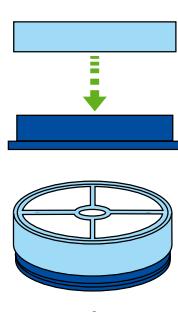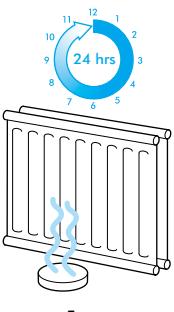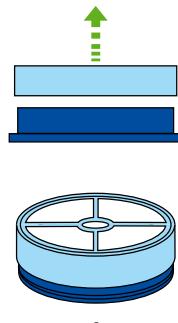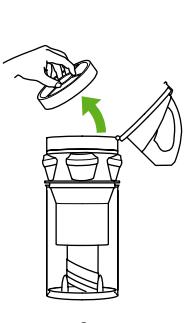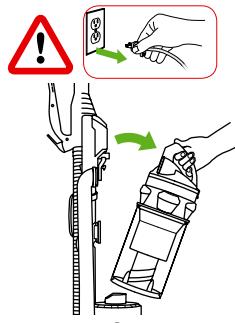



Clearing blockages Élimination des blocages Blockierungen entfernen Het verwijderen van blokkades Quitar bloqueos Eliminare le ostruzioni

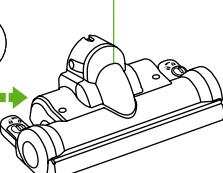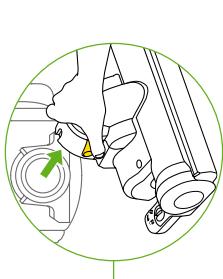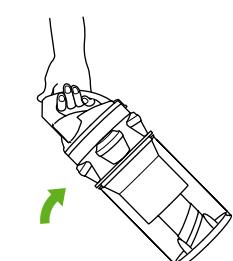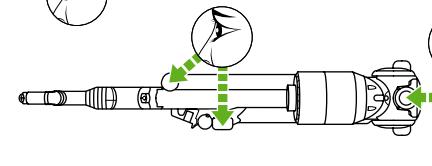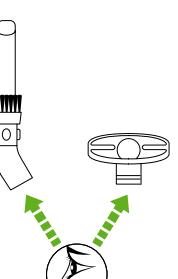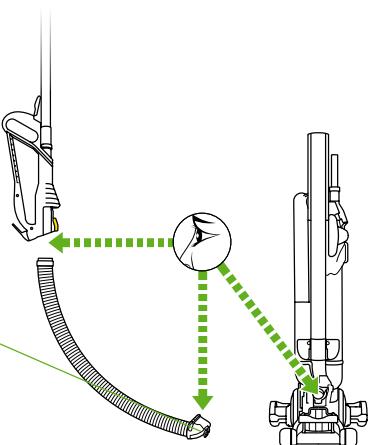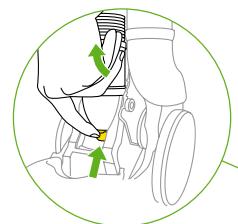


Clearing brus  
De borstel sch




## Gebrauch Ihres DC18 Gebruik van uw DC18 Uso de la DC18 Uso del DC18

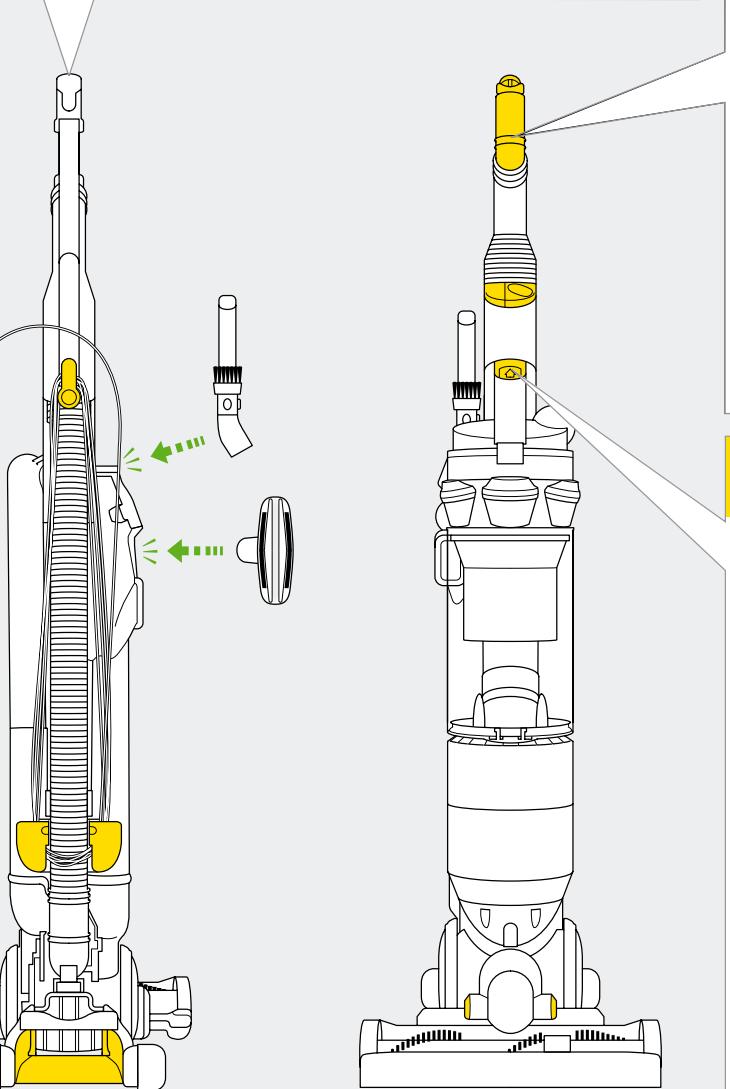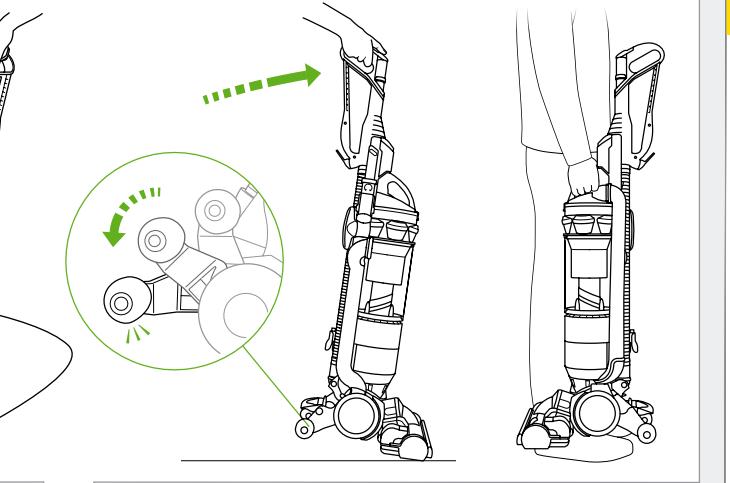


**Brushbar** Nettoyage de la brosse rotative Bürstwalze reinigen  
 schoonmaken Limpiear el cepillo Pulire la spazzola

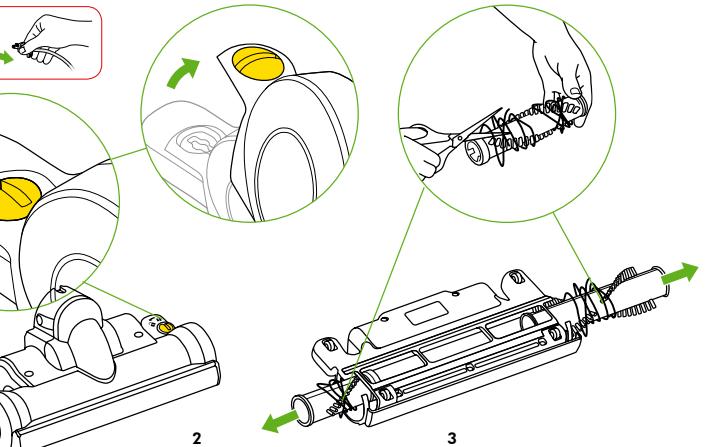

## Wand release & using tools Déploiement du tube & utilisation des accessoires Teleskoprohr lösen & Gebrauch des Zubehörs De handgreep ontgrendelen & accessoires gebruiken Sacar la empuñadura y utilizar los accesorios Allungamento del tubo e uso degli accessori

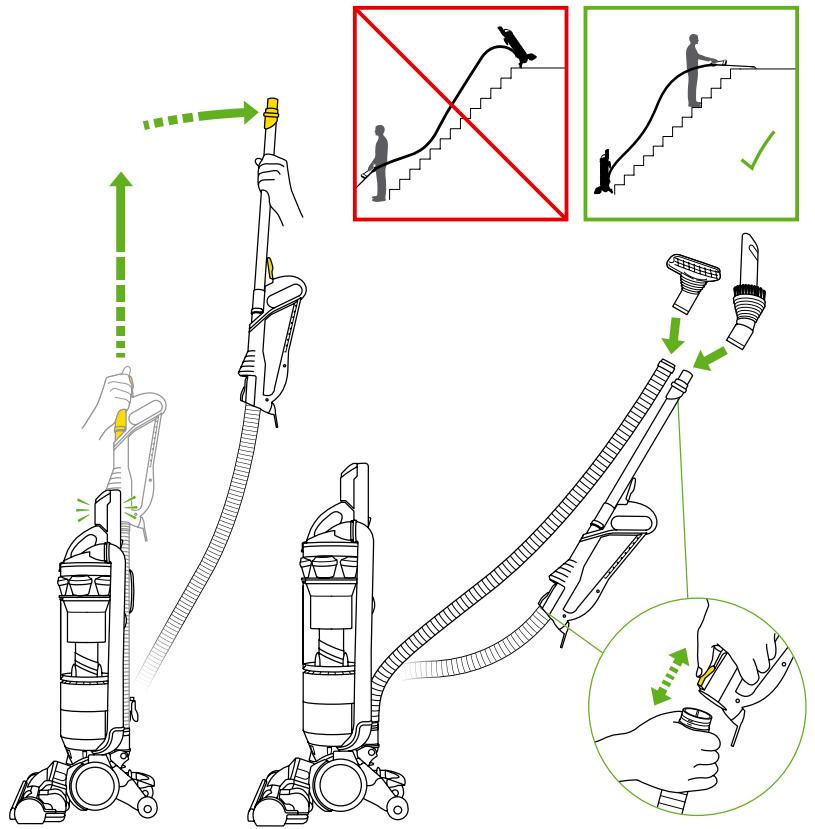

**Emptying the Clear bin™** Vider le collecteur transparent™ Behälterentleerung Het stofreservoir  
 legen & schoonmaken Vaciado y limpieza del cubo Svuotare e pulire  
 il contenitore

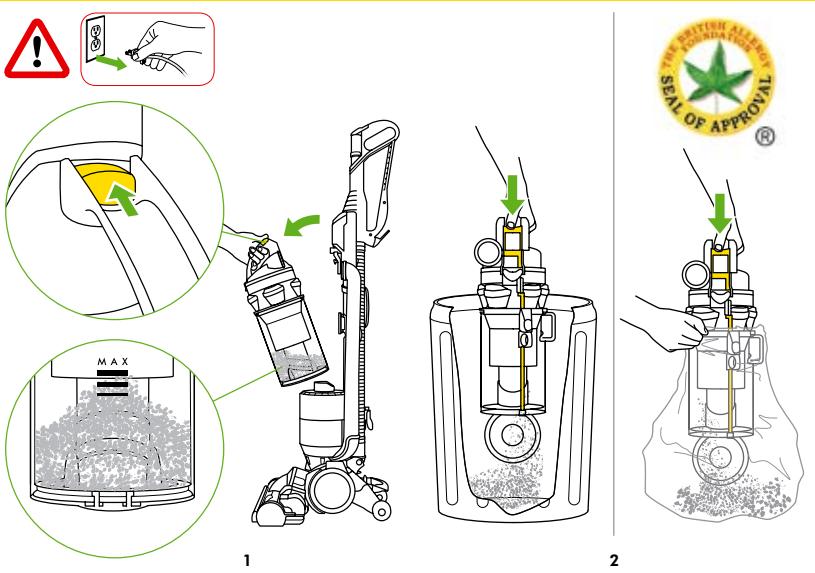

**Brushbar reset** Activation de la brosse motorisée Knopf drücken, um Bürstwalze wieder  
 zu aktivieren Roterende borstel terugplaatsen Reiniciar el cepillo Riattivare la spazzola

