



Using Other Functions

The following operations are used by a combination of the FUNCTION button with other operating buttons. The combination of the FUNCTION button can only be used on the main unit.

To skip a long blank space between musics (BL SKIP function) (see Fig. D-C)

- While holding down FUNCTION, press the FF button. The BL SKIP indicator will be lit.
- To cancel the BL SKIP mode, hold down FUNCTION and then press FF. Then the BL SKIP indicator goes off.

Note on BL SKIP

- For the BL SKIP function, you need a blank of 12 seconds or longer between the tracks. Therefore, if there is noise between the tracks, these functions will not detect the blank and will not operate. Likewise, if the recording level is moderately low within a track, this function may inaccurately operate.

To play a tape recorded with Dolby® NR system (see Fig. D-C)

- While holding down FUNCTION, press ■. The ■ NR indicator will be lit.
- To cancel the Dolby function, hold down FUNCTION and then press ■. Then the ■ NR indicator goes off.

Notes on FUNCTION

- Even when the tape is stopped, the FUNCTION may be operated. When FUNCTION and other operating buttons are pressed the LED lamp will light to show the present mode, and when FUNCTION and other operating buttons are released, the LED will go off.
- Do not press the FUNCTION button on the Walkman when switching SOUND+AVLS on the remote control.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.
- When you press any button, "Hold" appears in the display.
- To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.
- To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Caring for others
Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Operating the remote control (EX662 only)

Press SOUND+AVLS to select the desired mode. With each press, the indications in the display changes as follows:

MB: emphasizes bass sound
GRV: emphasizes deeper bass sound

No message: off (normal)

Note

- If the sound is distorted with the mode "GRV", select the mode "MB".
- or no message.

To skip a long blank space between musics (BL SKIP function) (see Fig. D-C)

- While holding down FUNCTION, press the FF button. The BL SKIP indicator will be lit.

To cancel the BL SKIP mode, hold down FUNCTION and then press FF. Then the BL SKIP indicator goes off.

Note on BL SKIP

- For the BL SKIP function, you need a blank of 12 seconds or longer between the tracks. Therefore, if there is noise between the tracks, these functions will not detect the blank and will not operate. Likewise, if the recording level is moderately low within a track, this function may inaccurately operate.

To play a tape recorded with Dolby® NR system (see Fig. D-C)

- Press and hold SOUND+AVLS for two seconds or more. "■" appears in the display.
- To cancel, press SOUND+AVLS again.

Notes

- If the sound is distorted when you listen to the bass-boosted sound with the AVLS, turn down the volume.
- The setting is stored as long as the battery is not replaced.

Notes on FUNCTION

- Even when the tape is stopped, the FUNCTION may be operated. When FUNCTION and other operating buttons are pressed the LED lamp will light to show the present mode, and when FUNCTION and other operating buttons are released, the LED will go off.
- Do not press the FUNCTION button on the Walkman when switching SOUND+AVLS on the remote control.

Emphasizing Bass (see Fig. E)

- While holding down FUNCTION, press ▲•REPEAT.

The MB or GRV of the SOUND mode will be lit, and switches each time you press ▲•REPEAT.

Either MB or GRV indicator will be lit when the SOUND mode is being used.

To cancel the SOUND mode, while holding down FUNCTION, press ▲•REPEAT repeatedly until the MB and GRV indicators go off.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Additional Information

Maintenance

To clean the tape head and path

Use the cleaning cassette CHK-1 (not supplied) every 10 hours of use.

Note

- MB: accentuates bass sound
GRV: accentuates deep bass sound

Aucun message: hors service (normal)

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

To clean the exterior

Use a soft cloth slightly moistened in water. Do not use alcohol, benzine or thinner.

Note

• Si le son présente de la distorsion lorsque le mode est réglé sur "GRV", réglez-le sur "MB" ou sans message.

Protecting Your Hearing (AVLS) (see Fig. E)

When AVLS (Automatic Volume Limiter System) is turned on, the maximum volume is kept down to protect your ears.

- While holding down FUNCTION, press REW. The AVLS indicator will be lit.

To cancel the AVLS, while holding down FUNCTION, press REW. The AVLS indicator goes off.

On batteries

Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the batteries are accidentally contacted by a metallic object.

On the unit

- Do not drop the unit or give a shock to the unit, or it may cause a malfunction.
- Do not leave the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or in a car with its windows closed.

• (EX662 only) The LCD display may become hard to see or slow down when using the unit at high temperatures (above 40°C/104°F) or at low temperatures (below 0°C/32°F). At room temperature, the display will return to its normal operating condition.

• If the unit has not been used for long, set it in the playback mode and warm it up for a few minutes before inserting a tape.

On tapes longer than 90 minutes

We do not recommend the use of tapes longer than 90 minutes except for a long continuous playback. They are very thin and tend to be stretched easily.

On the remote control

Use the supplied remote control only for each unit.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headphones/earphones at high volume while walking, especially at pedestrian crossings.

You should exercise extreme caution or discontinue use in potentially hazardous situations. Preventing hearing damage. Do not use headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

Design and specifications are subject to change without notice.

Using the Remote Control (see Fig. F)

To lock the buttons

For EX662

- Slide HOLD in the direction of the arrow.

When you press any button, "Hold" appears in the display.

To unlock, slide HOLD so that the yellow HOLD indicator is hidden.

For EX660

- Slide HOLD so that the HOLD indicator turns yellow.

To unlock, slide HOLD so that