



Operating Instructions  
Before operating the unit, please read this manual and "User's Guide/Troubleshooting" (separate volume) thoroughly, and retain them for future reference.



Printed on 100% recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

Checking the accessories supplied

- Battery charger BC-CSG/BC-CSGB (1)
- USB cable (1) (DSC-W30/W40)
- A/V cable (1) (DSC-W30/W40)
- Wrist strap (1) (DSC-W30/W50/W70)
- Neck strap (1) (DSC-W40)
- Soft carrying case (1) (DSC-W40)
- USB, A/V cable for multi-use terminal (1) (DSC-W50/W70)
- CD-ROM (Cyber-shot application software) (1)
- Operating instructions: "Read This First" (this manual) (1)
- Operating instructions: "User's Guide/Troubleshooting" (1)

A "Memory Stick Duo" is not supplied.

The camera has its own internal memory 58 MB (DSC-W70) or 32 MB (DSC-W30/W40/W50), however, purchase of a "Memory Stick Duo" is recommended for shooting more images.

"Memory Stick Duo": you can use a "Memory Stick Duo" with your camera.

"Memory Stick": you cannot use a "Memory Stick" with your camera.

Other memory cards cannot be used.

For details on "Memory Stick Duo" → "User's Guide/Troubleshooting" (page 95)

Notes

- Charge the battery pack (supplied) before using the camera for the first time.
- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue or green in color) that constantly appear on the LCD screen. These points are normal in the manufacturing process and do not affect the recording in any way.
- The camera is a precision instrument. Be careful not to bump the lens or the LCD screen, and not to apply force to it. Attach the strap to prevent the camera from damage by being dropped, etc.


Designed for use with compatible Sony batteries.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

1 Prepare the battery pack

1 Insert the battery pack.

Push the battery pack gently until it clicks into place.

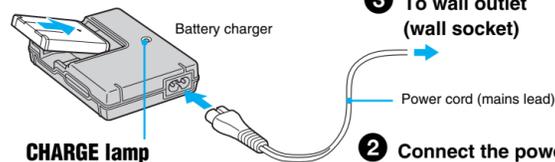

CHARGE lamp


Light on: Charging

Light off: Completed (Practical charge)

If you continue charging the battery pack for about one more hour (until it is fully charged), the charge will last slightly longer.

- Connect the battery charger to an easily accessible wall outlet (wall socket) close by.
- Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- The time required to fully charge the battery pack (supplied) from when it is completely discharged at a temperature of 25°C (77°F) is approximately 330 min., and the practical charging time is approximately 270 min. Charging may take longer under certain circumstances or conditions.

4 Insert the charged battery pack.

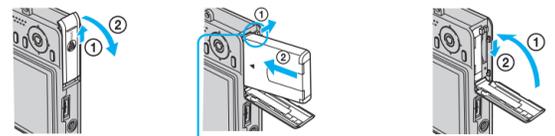


Open the battery/"Memory Stick Duo" cover. Insert the battery pack while pressing the battery eject lever with the tip of the battery. Close the battery/"Memory Stick Duo" cover.

2 Turn the camera on/set the clock

1 Select [CAM].




2 Press the POWER button.

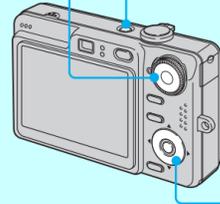


3 Set the clock with the control button.


1 Select the date display format with ▲/▼, then press ●.

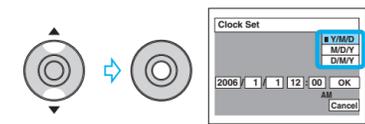

2 Select each item with ◀/▶ and set the numeric value with ▲/▼, then press ●.

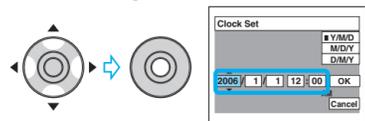


3 Select [OK] with ▶, then press ●.

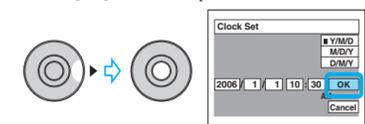

To cancel, select [Cancel] and press ●.

3 Insert a "Memory Stick Duo" (not supplied)

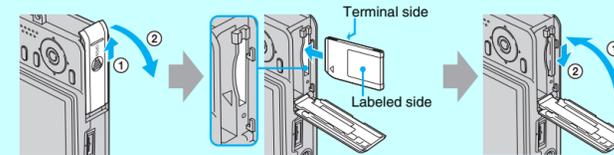

Insert the "Memory Stick Duo" all the way in until it clicks.

When there is no "Memory Stick Duo" inserted

The camera records/plays back images using the internal memory. → "User's Guide/Troubleshooting" (page 26)


4 Select the image size for use

1 Select a mode.




2 Press [Image Size].

3 Select the size with ▲/▼.

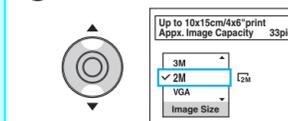

- The screen above is for still images.
- For movies, select [640(Fine)] ("Memory Stick PRO Duo" only), [640(Standard)] or [160].

4 Press [Image Size] to complete the setting.

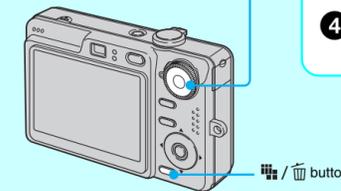

Using the AC Adaptor

You can connect the camera to a wall outlet (wall socket) using the AC-LS5K AC Adaptor (not supplied). → "User's Guide/Troubleshooting" (page 18).

To check the remaining battery time


Press POWER button to turn on and check the remaining battery on the LCD screen.

Battery remaining indicator					
Battery remaining guidelines	Sufficient power remaining	Battery half full	Battery low, recording/playback will stop soon.	Change the battery with fully charged one, or charge the battery. (The warning indicator flashes.)	

- It takes about one minute until the correct battery remaining indicator appears.
- The displayed battery remaining indicator may not be correct under certain circumstances.

To remove the battery pack

 Slide the battery eject lever to pull the battery pack out. Be sure not to drop the battery pack when pulling it out.



To use your camera abroad — Power sources

You can use your camera, the battery charger, and the AC-LS5K AC Adaptor (not supplied) in any country or region where the power supply is within 100 V to 240 V AC, 50/60 Hz.

Do not use an electronic transformer (travel converter), as this may cause a malfunction.

To change the date and time

 
Select [Clock Set] in the [Setup] screen and perform the procedure in step 3 above. → "User's Guide/Troubleshooting" (pages 46 and 55)

On the clock display

- Midnight is indicated as 12:00 AM, and noon as 12:00 PM.
- If you selected [D/M/Y] in step 1, set the time on a 24-hour cycle.

When turning on the power

- Unless you set the clock, the Clock Set screen appears each time the camera is turned on.
- Do not touch the lens portion as the cover opens and the lens portion extends. Also, do not leave the camera with the lens portion extended for a long period of time with the power off as this may cause malfunction.
- The following screen appears when the camera is turned on for the second time or afterwards.



To turn off the power

Press the POWER button again.

- If the camera is running on battery power and you do not operate the camera for about three minutes, the camera turns off automatically to prevent wearing down the battery pack (Auto power-off function).

Changing the language setting

You can change the screen display to show messages in a specified language. To change the language setting, press MENU to display the menu screen. Select [Setup] with the control button, then, select [Language] in [Setup1], and select the desired language. → "User's Guide/Troubleshooting" (page 53)

On still image sizes

For details on the image size → "User's Guide/Troubleshooting" (page 15)


Image size	Guidelines	No. of images	Printing
7M (DSC-W70 the default setting)	Up to A3/11x17" print	Less	Fine
6M (DSC-W30/W40/W50 the default setting)	Up to A4/8x10" print		
3:2 <sup>1)</sup>	Match 3:2 Aspect Ratio	More	Rough
5M (DSC-W70)	Up to A4/8x10" print		
3M	Up to 13x18cm/5x7" print		
2M	Up to 10x15cm/4x6" print		
VGA	For E-mail		
16:9 <sup>2)</sup>	Display On 16:9 HDTV <sup>3)</sup>		

<sup>1)</sup> Images are recorded in the same 3:2 aspect ratio as photograph printing paper or postcards, etc.  
<sup>2)</sup> Both edges of the image may be cut off when printing → "User's Guide/Troubleshooting" (page 89)  
<sup>3)</sup> By using a Memory Stick slot or USB connection, you can enjoy higher quality images.

On the recordable number of still images and recordable time of movies


Recordable number of still images and recordable time of movies vary depending on the image size selected.

 For details on recordable number or time → "User's Guide/Troubleshooting" (page 24)



- The number of recordable images and time can differ according to shooting conditions.

To remove a "Memory Stick Duo"

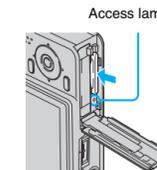

Open the battery/"Memory Stick Duo" cover, then push the "Memory Stick Duo" in once.

When the access lamp is lit

Never remove the battery/"Memory Stick Duo" or turn off the power. The data may be corrupted.

# 5 Shoot images easily (Auto adjustment mode)

## Holding the camera




Position the subject in the center of the focus frame.

### 1 Select a mode.


Still image (auto adjustment mode):



Movie:

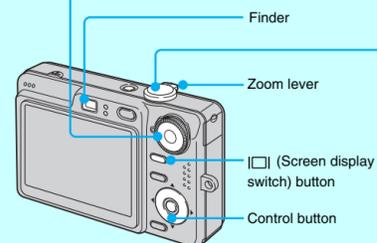

## Using the control button

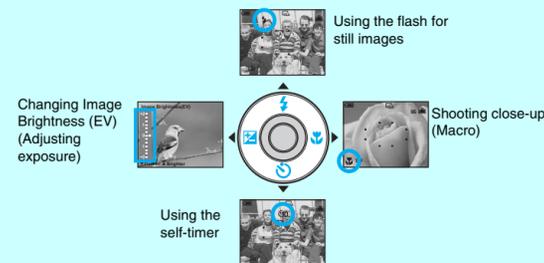

### Changing Image Brightness (EV) (Adjusting exposure)

Before Step 2, press ◀ (EV) on the control button.  
Adjust the image brightness with ▲ (Brighter) / ▼ (Darker).  
To delete the displayed scale bar, press ◀ again.



- The compensation value can be set in 1/3EV increments.
- If a subject is being shot in extremely bright or dark conditions, or the flash is used, the exposure adjustment may not be effective.
- For details on the exposure → "User's Guide/Troubleshooting" (page 14)

### Selecting a flash mode for still images

Before step 2, press ▲ (Flash) on the control button repeatedly until the desired mode is selected.

No indicator	Flash Auto Strobes when there is insufficient light or backlight (default setting)
⚡	Flash forced on
⚡SL	Slow synchro (Flash forced on) The shutter speed is slow in a dark place to clearly shoot the background that is out of flash light.
⚡	Flash forced off

- Shooting distance (when [ISO] is set to [Auto])  
DSC-W70  
W side: Approx. 0.2 to 3.7 m (7 7/8 inches to 12 feet 1 3/4 inches)  
T side: Approx. 0.3 to 2.1 m (11 7/8 inches to 6 feet 10 3/4 inches)  
DSC-W30/W40/W50  
W side: Approx. 0.2 to 4.2 m (7 7/8 inches to 13 feet 9 3/8 inches)  
T side: Approx. 0.3 to 2.2 m (11 7/8 inches to 7 feet 2 5/8 inches)
- The flash strobes twice. The first time is to adjust the light quantity.

### Shooting close-up (Macro)


Before step 2, press ▶ (Macro) on the control button.  
To cancel, press ▶ again.

- Setting the zoom all the way to the W side is recommended.
- The in-focus range becomes narrow, and the complete subject may not entirely be in focus.
- The Auto Focus speed drops.


Shortest shooting distance from the lens surface  
Setting all the way to the W side: Approx. 2 cm (13/16 inches)  
Setting all the way to the T side: Approx. 30 cm (11 7/8 inches)

### 2 Shoot with the shutter button.

Still image:

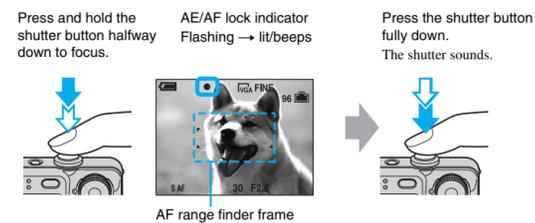

Movie:

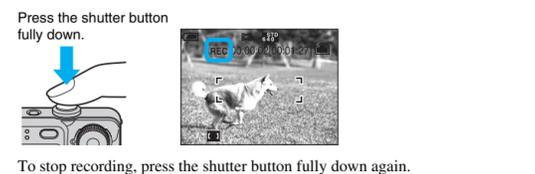


## Using the zoom



- When the zoom scale exceeds 3x, the camera uses the Digital Zoom function. For details on the [Digital Zoom] settings and the image quality → "User's Guide/Troubleshooting" (page 47)
- You cannot change the zoom scale while shooting a movie.

## Using the self-timer

Before Step 2, press ▼ (Self-timer) on the control button repeatedly until the desired mode is selected.

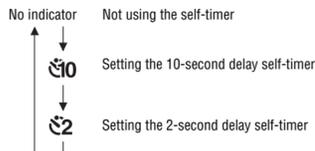

Press the shutter button, the self-timer lamp flashes, and a beep sounds until the shutter operates.

To cancel, press ▼ again.

- If you use the 2-second delay self-timer, you may prevent blur.



### If you shoot a still image of a subject that is difficult to focus on

- The shortest shooting distance is 50 cm (19 3/4 inches). Shoot in the close-up (Macro) mode (left) when shooting a subject closer than the shortest shooting distance.
- When the camera cannot focus on the subject automatically, the AE/AF lock indicator changes to flashing slowly and the beep does not sound. Recompose the shot and focus again.

Subjects difficult to focus on are:

- Distant from the camera and dark
- Reflective light or with a lustrous finish
- Flashing
- Seen through glass
- Moving fast
- Backlit

### To brighten up the display (DSC-W50/W70 only)

If you view images in bright outside light, adjust the brightness of the LCD backlight up. However, the battery power may decrease faster under such condition.  
If you press [Screen display switch] button longer (above), the backlight brightens. If you press again, the backlight is cancelled.

### To identify items on the screen


→ "User's Guide/Troubleshooting" (page 19)

### To turn off the LCD screen

Press [Screen display switch] button (above) repeatedly. Use the finder (above) for saving battery power, or shooting images when it is difficult to confirm using the LCD screen.


# 6 Shoot still images (Scene Selection)

### 1 Select the desired mode of Scene Selection (ISO, Moon, Beach, Twilight, Snow, etc.).

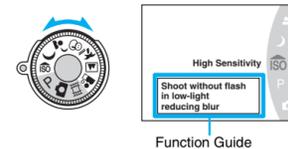

- For details on modes, see below.

### 2 Shoot with the shutter button.

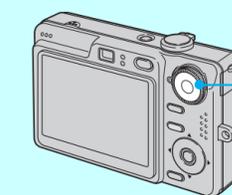

## On Function Guide


The operational instructions displayed on the Function Guide are automatically turned off in a few seconds. When you want to cancel the Function Guide, press the Shutter Button half way down. You can set the Function Guide not to be displayed on the [Setup] screen. → "User's Guide/Troubleshooting" (page 48)

## To cancel the Scene Selection

Set the mode dial to other than the mode of Scene Selection.

## Scene Selection modes

The following modes are predetermined to match the scene conditions.

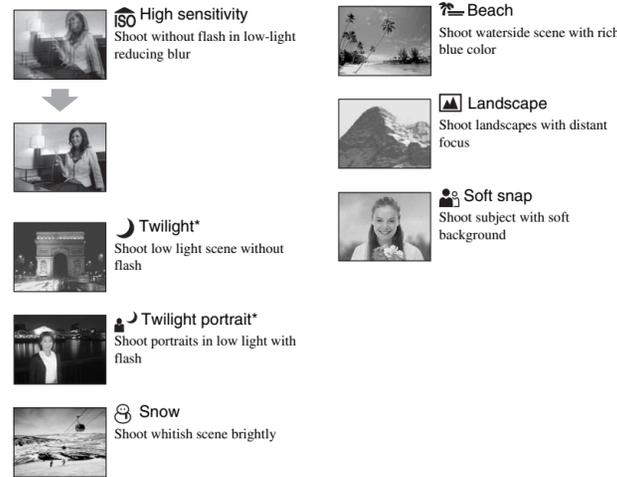

\* The shutter speed becomes slower, so using a tripod is recommended.


### To use the functions set by the control button with Scene Selection

Before shooting in step 2, select the settings with the control button. Some functions are not available, depending on the Scene Selection mode. When you press the button to select functions that cannot be combined with Scene Selection, a beep sounds. → "User's Guide/Troubleshooting" (page 29)

# 6 View/delete images

### 1 Press ▶ (Playback).

- If you press ▶ button when the camera is powered off, the camera is turned on in the playback mode.

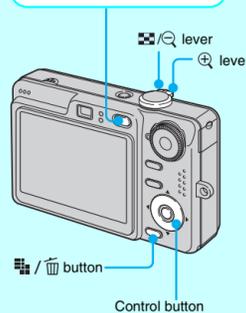


### To return to the shooting mode

- Press ▶ (Playback) again.
- Press and hold the shutter button halfway down.
- Change the position of the mode dial.

## To delete images

- 1 Display the image you want to delete and press [Delete].
- 2 Select [Delete] with ▲, then press ●.

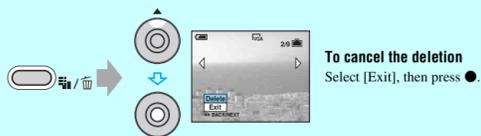

## To view an enlarged image (playback zoom)

Slide [Zoom] lever while displaying a still image.

To undo the zoom, press [Zoom] lever.

Adjust the portion: ▲▼/◀▶

Cancel playback zoom: ●

To store enlarged images: [Trimming] → "User's Guide/Troubleshooting" (page 45)

## Viewing an index screen

Slide [Index] lever and select an image with ▲▼/◀▶.

To return to the single-image screen, press ●. To display the next (previous) index screen, press ◀▶.



## To delete images in index mode

- 1 While an index screen is displayed, press [Delete] and select [Select] with ▲▼ on the control button, then press ●.
- 2 Select the image you want to delete with ▲▼/◀▶, then press ● to display the [Delete] indicator on the selected image.



## To delete all the images in the folder

- 3 Press [Delete].
- 4 Select [OK] with ▶, then press ●.

• To delete all the images in the folder, select [All In This Folder] with ▲▼ in step 1 instead of [Select], then press ●.