


FM/MW/LW Compact Disc Player


Installation/Connections
Installation/Anschluss
Installation/Connexions
Installazione/Collegamenti
Montage/Aansluitingen

CDX-NC9950

© 2005 Sony Corporation Printed in Korea

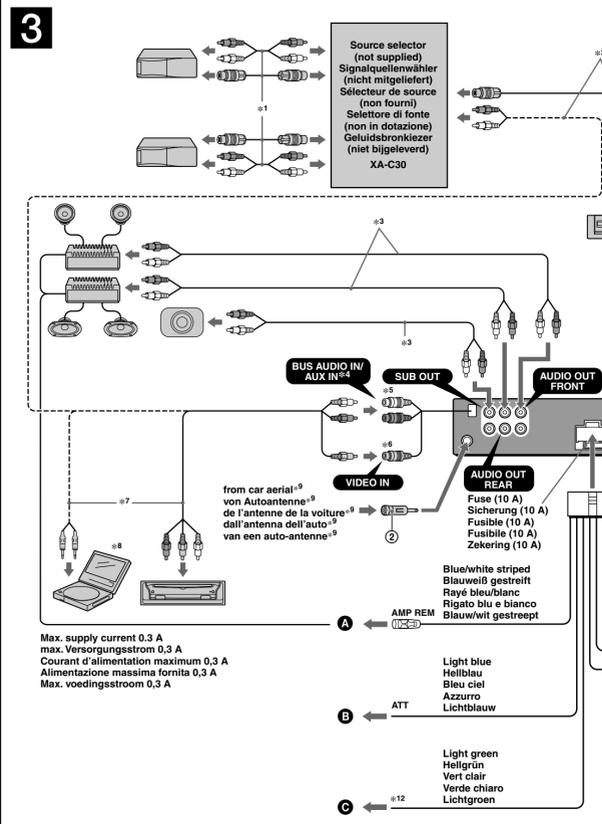

Technical specifications and notes in multiple languages. Includes sections for 'Supplied with the CD/MD changer', 'Fourni avec le changeur de CD/MD', and 'In dotazione con il cambio CD/MD'. Also includes a 'Power connection diagram' and a 'from the car's speaker connector' diagram.

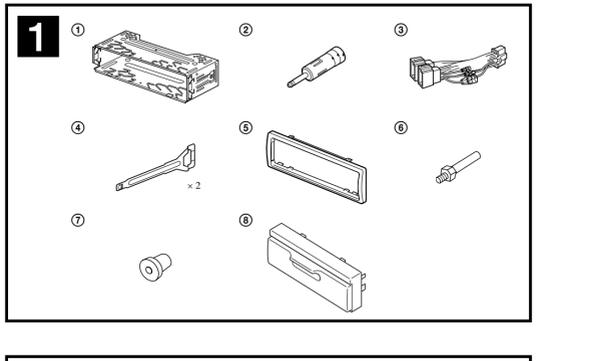

Equipment used in illustrations (not supplied). Lists components like Front speaker, Rear speaker, Active subwoofer, Power amplifier, and their corresponding part numbers and descriptions in multiple languages.

Cautions

- This unit is designed for negative earth 12V DC operation only.
- Do not get the leads under a screw, or caught in moving parts (e.g. seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the power connecting lead (3) to the unit and speakers before connecting it to the auxiliary power connector.
- Run all earth leads to a common earth point.
- Be sure to insulate any loose unconnected leads with electrical tape for safety.

Notes on the power supply lead (yellow)

- When connecting this unit in combination with other stereo components, the connected car circuit's rating must be higher than the sum of each component's fuse.
- When no car circuits are rated high enough, connect the unit directly to the battery.

Vorsichtsmaßnahmen

- Dieses Gerät ist ausschließlich für den Betrieb bei 12 V Gleichstrom (negative Erdung) bestimmt.
- Achten Sie darauf, dass die Kabel nicht unter einer Schraube oder zwischen beweglichen Teilen wie z. B. in einer Sitzschiene eingeklemmt werden.
- Schalten Sie, bevor Sie irgendwelche Anschlüsse vornehmen, die Zündung des Fahrzeugs aus, um Kurzschlüsse zu vermeiden.
- Verbinden Sie das Stromversorgungs-kabel (3) mit dem Gerät und den Lautsprechern, bevor Sie es mit dem Hilfsstromanschluss verbinden.
- Schließen Sie alle Erdungskabel an einen gemeinsamen Massepunkt an.
- Aus Sicherheitsgründen müssen alle losen, nicht angeschlossenen Drähte mit Isolierband abisoliert werden.

Hinweise zum Stromversorgungs-kabel (gelb)

- Wenn Sie dieses Gerät zusammen mit anderen Stereokomponenten anschließen, muss der Autostromkreis, an den die Geräte angeschlossen sind, eine höhere Leistung aufweisen als die Summe der Sicherungen der einzelnen Komponenten.
- Wenn kein Autostromkreis eine so hohe Leistung aufweist, schließen Sie das Gerät direkt an die Batterie an.

Précautions

- Cet appareil est conçu pour fonctionner sur un courant continu de 12 V avec masse négative.
- Évitez de coincer les câbles sous des vis ou dans des pièces mobiles (par exemple, armature de siège).
- Avant d'effectuer des raccords, couper le moteur pour éviter les courts-circuits.
- Brancher le câble d'alimentation (3) sur l'appareil et les haut-parleurs avant de les brancher sur le connecteur d'alimentation auxiliaire.
- Rassemblez tous les câbles de terre en un point de masse commun.
- Veillez à isoler tout câble ou câble non connecté avec du ruban isolant.

Remarques sur le câble d'alimentation (jaune)

- Lorsque cet appareil est raccordé à d'autres équipements stéréos, la valeur nominale des circuits du véhicule raccorcés doit être supérieure à la somme des fusibles de chaque élément.
- Si aucun circuit de la voiture n'est assez puissant, raccordez directement l'appareil à la batterie.

Attenzione

- Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.
- Evitare che i cavi rimangano bloccati da una vite o incastrati nelle parti mobili (ad esempio nelle guide scorrevoli dei sedili).
- Prima di effettuare i collegamenti, spegnere il motore dell'automobile onde evitare di causare cortocircuiti.
- Collegare il cavo di collegamento dell'alimentazione (3) all'apparecchio e ai diffusori prima di collegarlo al connettore di alimentazione accessoria.
- Portare tutti i cavi di massa a un punto di massa comune.
- Verificare che i cavi non collegati siano isolati con nastro adesivo.

Note sul cavo di alimentazione (giallo)

- Se questo apparecchio viene collegato in combinazione con altri componenti stereo, la potenza nominale dei circuiti dell'automobile deve essere superiore a quella prodotta dalla somma dei fusibili di ciascun componente.
- Se la potenza nominale dei circuiti dell'automobile non è sufficiente, collegare l'apparecchio direttamente alla batteria.

Etendo dei componenti


- I numeri nella lista corrispondono a quelli riportati nelle istruzioni.
- La staffa (5) e la cornice di protezione (6) vengono applicate separatamente. Si schiubano omni de beugel (5) en de beschermende rand (6) te verwijderen van het apparaat. Zie de beschermende rand en de beugel voor meer informatie.
- Bewaar de ontgrensingsleuzes (6) voor toekomstig gebruik omdat u deze ook nodig hebt om het apparaat uit de auto te verwijderen.

Let op

- Dit apparaat is ontworpen voor gebruik op een auto-accu van 12 V gelijkstroom, negatief geaard.
- Zorg ervoor dat de draden niet onder een schroef of vastzittende onderdelen (bv. zetelrail) terechtkomen.
- Voordat u de aansluitingen maakt, moet u het contact uitzetten om kortsluitingen te vermijden.
- Sluit het netsteek (3) aan op het apparaat en de luidsprekers voordat u het aansluit op de hulpvoedingsaansluiting.
- Sluit alle aarddraden op een gemeenschappelijk aardepunt aan.
- Voorzie niet aangesloten draden om veiligheidsredenen altijd van isolatietape.

Onderdelenlijst

- De nummers in de afbeelding verwijzen naar die in de montage-aanwijzingen.
- De beugel (5) en de beschermende rand (6) worden bevestigd op het apparaat voordat dit wordt verzonden. Voordat u het apparaat plaats, moet u de applicatiegreinsleuzes (6) afschubben om de beugel (5) en de beschermende rand (6) te verwijderen van het apparaat. Zie de beschermende rand en de beugel voor meer informatie.
- Bewaar de ontgrensingsleuzes (6) voor toekomstig gebruik omdat u deze ook nodig hebt om het apparaat uit de auto te verwijderen.

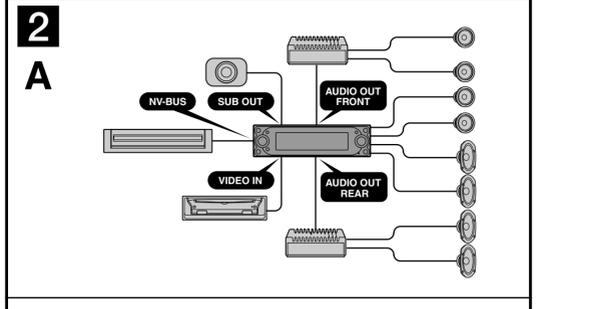

Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning


If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

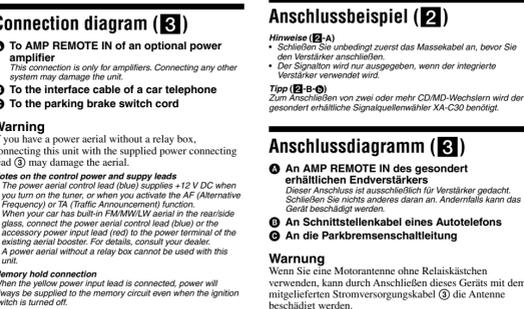

Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning


If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

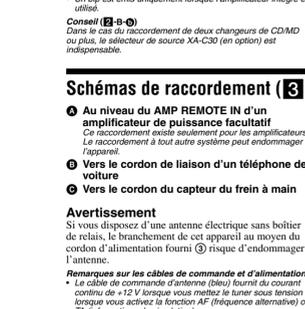

Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning


If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

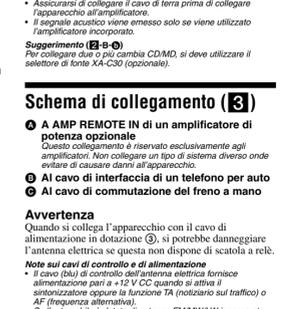

Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning

If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.



Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning

If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.



Connection diagram (3)

- AMP REMOTE IN of an optional power amplifier.
- To the interface cable of a car telephone.
- To the parking brake switch cord.

Warning

If you have a power aerial without a relay box, connecting this unit with the supplied power connecting lead (3) may damage the aerial.

Notes on the control power and supply leads

- The power aerial control lead (blue) supplies +12 V DC when you turn on the tune, or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.
- When your car has built-in FM/MW/LW aerial in the rear-side glass, connect the power aerial control lead (blue) or the accessory power input lead (red) to the power terminal of the existing aerial booster. For details, consult your dealer.
- A power aerial without a relay box cannot be used with this unit.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use the correct polarity (+) and (-) terminals, and with adequate power handling capacities to avoid its damage.
- Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.
- Do not connect the earth lead of this unit in the negative (-) terminal of the speaker.
- Do not install the speakers in parallel.
- Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.
- To avoid a malfunction, do not use the built-in speaker leads (with built-in amplifiers) for a common negative (-) lead for the right and left speakers.
- Do not connect the unit's speaker leads to each other.

Note on connection

If speaker and amplifier are not connected correctly, 'Failure' appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

4

Foot brake type
Fußbremse
Frein au pied
Freno a pedale
Type voetrem




Parking brake switch cord
Parkbremsenschaltleitung
Cordon du capteur du frein à main
Commutazione del freno a mano
Schakel snoer van de parkeerrem

Hand brake type
Handbremse
Frein à main
Freno a mano
Type handrem




Parking brake switch cord
Parkbremsenschaltleitung
Cordon du capteur du frein à main
Commutazione del freno a mano
Schakel snoer van de parkeerrem

5 1

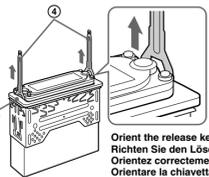


Orient the release key correctly.
Richten Sie den Löseschlüssel korrekt aus.
Orientez correctement la clé de débloqué.
Orientare la chiavetta di rilascio nel modo corretto.
Plaats de ontgrendelingsleutel op de juiste manier.

2

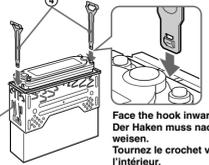

Face the hook inwards.
Der Haken muss nach innen weisen.
Tournez le crochet vers l'intérieur.
Con il gancetto rivolto verso l'interno.
Het haakje moet naar binnen wijzen.

7 *

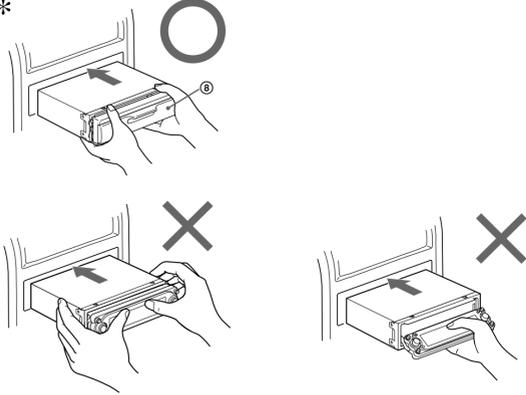

Connecting the parking brake cord (4)

Be sure to connect the parking cord (Light green) of (4) to the parking brake switch cord. The mounting position of the parking brake switch cord depends on your car. Consult your car dealer or your nearest Sony dealer for further details.

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Removing the protection collar and the bracket (5)

Before installing the unit, remove the protection collar (5) and the bracket (5) from the unit.

- Remove the protection collar (5).
 - Engage the release keys (2) together with the protection collar (5).
 - Pull out the release keys (2) to remove the protection collar (5).
- Remove the bracket (5).
 - Insert both release keys (2) together between the unit and the bracket (5) until they click.
 - Pull down the bracket (5), then pull up the unit to separate.

Before installation (6)

Do not install the unit where its operation interferes with driving.
Example:
—Opening and closing of the front panel or disc tray interfere with operation of the gear lever.
—With the front panel open, operation of hazard lamps, switches etc., is impaired.

Mounting example (7)

Installation in the dashboard

When installing this unit, be sure to close the front panel of the unit and attach the front panel cover (7). (1-1)

- Do not push the LCD display directly. The display may break and cause injury to your fingers. When installing the unit, be sure to attach the supplied front panel cover (7).
- Do not hold the unit by its front panel or disc tray when installing as this can damage the unit, or cause malfunction.

Notes
• Bend these claws outward for a tight fit, if necessary (1-2).
• Make sure that the 4 catches on the protection collar (5) are properly engaged in the slots of the unit (1-3).

Warning if your car's ignition has no ACC position

After turning off the ignition, be sure to press and hold (OFF) on the unit until the display disappears.
Otherwise, the display does not turn off and this causes battery drain.

RESET button

When the installation and connections are completed, be sure to press the reset button with a ballpoint pen, etc.



Warnhinweis, wenn die Zündung Ihres Fahrzeugs nicht über eine Zubehörposition (ACC oder I) verfügt

Nachdem Sie die Zündung ausgeschaltet haben, halten Sie am Gerät unbedingt (OFF) gedrückt, bis die Anzeige ausgeblendet wird.
Andernfalls wird die Anzeige nicht ausgeschaltet und der Autobatterie wird Strom entzogen.


Taste RESET

Wenn Sie das Gerät eingebaut und alle Anschlüsse vorgenommen haben, drücken Sie die Rücksetztaste mit einem Kugelschreiber oder ähnlichem, um das Gerät zurückzusetzen.



6


6

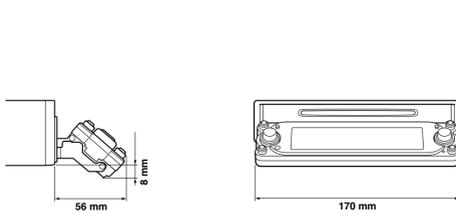

Dimensions include unit size, front panel and disc tray open, etc.
Abmessungen des Geräts einsch. Frontplatte und CD-Fach in geöffnetem Zustand usw.
Les dimensions prennent en compte la taille de l'appareil avec la façade et le plateau de disque ouverts.
Le misure riportate includono le dimensioni dell'apparecchio, il pannello anteriore e il vassoio per i dischi aperto e così via.


Armetings omvatten de grootte van het apparaat, het voorpaneel en de geopende disclade, enzovoort.

1

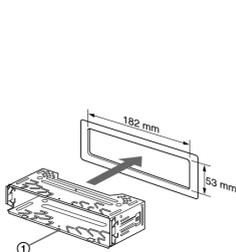


Claws
Klammern
Griffes
Morsetti
Klemhaken

2

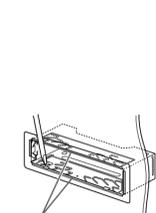

3

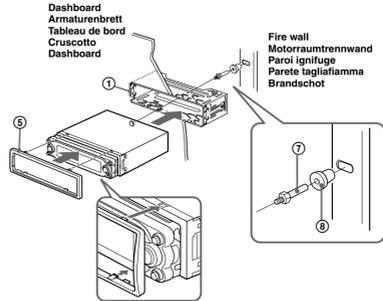

Connecting the parking brake cord (4)

Be sure to connect the parking cord (Light green) of (4) to the parking brake switch cord. The mounting position of the parking brake switch cord depends on your car. Consult your car dealer or your nearest Sony dealer for further details.

Precautions

- Choose the installation location carefully so that the unit will not interfere with normal driving operations.
- Avoid installing the unit in areas subject to dust, dirt, excessive vibration, or high temperature, such as in direct sunlight or near heater ducts.
- Use only the supplied mounting hardware for a safe and secure installation.

Mounting angle adjustment

Adjust the mounting angle to less than 45°.

Removing the protection collar and the bracket (5)

Before installing the unit, remove the protection collar (5) and the bracket (5) from the unit.

- Remove the protection collar (5).
 - Engage the release keys (2) together with the protection collar (5).
 - Pull out the release keys (2) to remove the protection collar (5).
- Remove the bracket (5).
 - Insert both release keys (2) together between the unit and the bracket (5) until they click.
 - Pull down the bracket (5), then pull up the unit to separate.

Before installation (6)

Do not install the unit where its operation interferes with driving.
Example:
—Opening and closing of the front panel or disc tray interfere with operation of the gear lever.
—With the front panel open, operation of hazard lamps, switches etc., is impaired.

Mounting example (7)

Installation in the dashboard

When installing this unit, be sure to close the front panel of the unit and attach the front panel cover (7). (1-1)

- Do not push the LCD display directly. The display may break and cause injury to your fingers. When installing the unit, be sure to attach the supplied front panel cover (7).
- Do not hold the unit by its front panel or disc tray when installing as this can damage the unit, or cause malfunction.


Notes
• Bend these claws outward for a tight fit, if necessary (1-2).
• Make sure that the 4 catches on the protection collar (5) are properly engaged in the slots of the unit (1-3).

Warning if your car's ignition has no ACC position

After turning off the ignition, be sure to press and hold (OFF) on the unit until the display disappears.
Otherwise, the display does not turn off and this causes battery drain.

RESET button

When the installation and connections are completed, be sure to press the reset button with a ballpoint pen, etc.

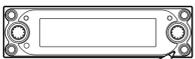

Warnhinweis, wenn die Zündung Ihres Fahrzeugs nicht über eine Zubehörposition (ACC oder I) verfügt

Nachdem Sie die Zündung ausgeschaltet haben, halten Sie am Gerät unbedingt (OFF) gedrückt, bis die Anzeige ausgeblendet wird.
Andernfalls wird die Anzeige nicht ausgeschaltet und der Autobatterie wird Strom entzogen.

Taste RESET

Wenn Sie das Gerät eingebaut und alle Anschlüsse vorgenommen haben, drücken Sie die Rücksetztaste mit einem Kugelschreiber oder ähnlichem, um das Gerät zurückzusetzen.



Raccordement du cordon du frein à main (4)

Veillez à raccorder le cordon du frein (vert clair) (4) au cordon du capteur du frein à main. La position de montage du cordon du capteur du frein à main varie selon la voiture. Consultez votre concessionnaire automobile ou votre revendeur Sony le plus proche pour obtenir plus de détails.

Précautions

- Choisissez soigneusement l'emplacement de l'installation afin que l'appareil ne gêne pas la conduite normale du véhicule.
- Évitez d'installer l'appareil dans un endroit exposé à la poussière, de la saleté, des vibrations violentes ou à des températures élevées, comme en plein soleil ou à proximité d'un conduit de chauffage.
- Pour garantir un montage sûr, n'utilisez que le matériel fourni.
- Usare solo il materiale di montaggio in dotazione per un'installazione stabile e sicura.

Réglage de l'angle de montage

Ajuster l'inclinaison à un angle inférieur à 45°.

Retrait du tour de protection et du support (5)

Avant d'installer l'appareil, retirez le tour de protection (5) et le support (5) de l'appareil.

- Enlevez le tour de protection (5).
 - Enclenchez les clés de débloqué (2) simultanément dans le tour de protection (5).
 - Tirez sur la clé de débloqué (2) pour retirer le tour de protection (5).
- Retirez le support (5).
 - Insérez les deux clés de débloqué (2) simultanément entre l'appareil et le support (5) jusqu'au dé clic indiquant qu'elles sont en place.
 - Tirez le support (5) vers le bas, puis tirez l'appareil vers le haut pour les séparer.

Avant l'installation (6)

N'installez pas l'appareil dans un endroit où il pourrait gêner le conducteur dans ses mouvements.
Exemple :
—dans un endroit où l'ouverture et la fermeture de la façade ou du plateau de disque pourraient nuire aux changements de vitesse ;
—dans un endroit où l'ouverture de la façade pourrait bloquer l'accès à l'interrupteur de feux de détresse et aux autres commandes.

Exemple de montage (7)

Installation dans le tableau de bord

Avant d'effectuer l'installation de cet appareil, veillez à refermer la façade de l'appareil et à mettre en place le couvercle de la façade (7). (1-1)

- N'appuyez pas sur l'écran à cristaux liquides lui-même. L'écran pourrait se briser et entraîner des blessures aux doigts. Avant d'effectuer l'installation de l'appareil, veillez à mettre en place le couvercle de la façade (7).
- Né tenez pas l'appareil par la façade ou le plateau de disque lors de l'installation, car cela risque d'endommager l'appareil ou d'entraîner un problème de fonctionnement.

Remarques
• Pliez ces griffes pour assurer une prise correcte si nécessaire (1-2).
• Assurez-vous que les 4 taquets du tour de protection (5) sont correctement insérés dans les fentes de l'appareil (1-3).

Notes
• Piegare verso l'esterno questi morsetti per un'installazione più sicura, se necessario (1-2).
• Assicurarsi che i 4 fermi della cornice di protezione (5) siano correttamente inseriti negli alloggiamenti dell'apparecchio (1-3).

Avertissement au cas où le contact de votre voiture ne dispose pas d'une position ACC

Après avoir coupé le moteur, n'oubliez pas de maintenir la touche (OFF) de l'appareil enfoncée jusqu'à ce que l'affichage disparaisse.
Sinon, l'affichage n'est pas désactivé et la batterie se décharge.

Touche RESET

Lorsque l'installation et les raccordements sont terminés, appuyez sur la touche de réinitialisation avec un stylo à bille, pour réinitialiser l'appareil.



Collegamento del cavo del freno a mano (4)

Assicuratevi di collegare il cavo del freno a mano (verde chiaro) di (4) al cavo di commutazione del freno a mano dell'auto. La posizione di montaggio del cavo di commutazione del freno a mano varia in base all'auto. Per ulteriori informazioni, consultare l'autococessionario di fiducia o il più vicino rivenditore Sony.

Precauzioni

- Scegliere con attenzione la posizione per l'installazione in modo che l'apparecchio non interferisca con le operazioni di guida del conducente.
- Evitare di installare l'apparecchio dove sia soggetto ad alte temperature, come alla luce solare diretta o al getto di aria calda dell'impianto di riscaldamento, o dove possa essere soggetto a polvere, sporcizia e vibrazioni eccessive.
- Usare solo il materiale di montaggio in dotazione per un'installazione stabile e sicura.

Regolazione dell'angolo di montaggio

Regolare l'angolo di montaggio in modo che sia inferiore a 45°.

Rimozione della staffa e della cornice di protezione (5)

Prima di installare l'apparecchio, rimuovere la cornice di protezione (5) e la staffa (5) dall'apparecchio.

- Rimuovere la cornice di protezione (5).
 - Inserire la chiavetta di rilascio (2) nella cornice di protezione (5).
 - Per rimuovere la cornice di protezione (5) estrarre la chiavetta di rilascio (2).
- Rimuovere la staffa (5).
 - Inserire contemporaneamente entrambe le chiavette di rilascio (2) tra l'apparecchio e la staffa (5) fino a che non scattano in posizione.
 - Estrarre la staffa (5), quindi sollevare l'apparecchio per rimuoverlo.

Prima di installare l'apparecchio (6)

Evitare di installare l'apparecchio in luoghi nei quali potrebbe interferire con la guida dell'auto.
Esempio:
—L'apertura e la chiusura del pannello anteriore del vassoio per i dischi interferiscono con il funzionamento del cambio.

—Quando il pannello anteriore è aperto, il funzionamento delle spie di avvertimento, degli interruttori e così via viene ostacolato.

Esempio di montaggio (7)

Installazione nel cuscotto

Prima di installare l'apparecchio, assicuratevi di chiudere il pannello anteriore dell'apparecchio e di applicare il coperchio del pannello anteriore (7). (1-1)

- Non premere direttamente il display LCD, onde evitare di danneggiarlo o di fermare le dita. Per installare l'apparecchio, assicuratevi di applicare il coperchio del pannello anteriore (7) in dotazione.
- Non installare l'apparecchio tenendolo per il pannello anteriore o per il vassoio per i dischi, onde evitare di danneggiare l'apparecchio stesso o di causare problemi di funzionamento.

Note
• Piegare verso l'esterno questi morsetti per un'installazione più sicura, se necessario (1-2).
• Assicurarsi che i 4 fermi della cornice di protezione (5) siano correttamente inseriti negli alloggiamenti dell'apparecchio (1-3).

Avvertenza relativa all'installazione su un'auto sprovvista della posizione ACC (accessoria) sul blocchetto di accensione

Dopo avere spento il motore, assicuratevi di tenere premuto (OFF) sull'apparecchio finché il display non scompare.
Diversamente, il display non viene disattivato e questo potrebbe causare lo scaricamento della batteria.

Tasto RESET

Dopo avere completato l'installazione e i collegamenti, assicuratevi di premere il tasto azzeramento con una penna a sfera e simili per ripristinare l'apparecchio.



Power connection diagram

Auxiliary power connector may vary depending on the car. Check your car's auxiliary power connector diagram to make sure the connections match correctly. There are three basic types (illustrated below). You may need to switch the positions of the red and yellow leads in the car stereo's power connecting lead. After matching the connections and switched power supply leads correctly, connect the unit to the car's power supply. If you have any questions and problems connecting your unit that are not covered in this manual, please consult the car dealer.

Stromanschlussschema

Der Hilfsstromanschluss kann je nach Fahrzeugtyp unterschiedlich sein. Sehen Sie im Hilfsstromanschlussschema für Ihr Fahrzeug nach, wie die Verbindung ordnungsgemäß vorgenommen werden muss. Es gibt, wie unten abgebildet, drei grundlegende Typen. Sie müssen möglicherweise die rote und gelbe Leitung des Stromversorgungskabels der Autostercoanlage vertauschen. Stellen Sie die Anschlüsse her, schließen Sie die geschalteten Stromversorgungsleitungen richtig an und verbinden Sie dann das Gerät mit der Stromversorgung Ihres Fahrzeugs. Wenn beim Anschließen des Geräts Fragen oder Probleme auftreten, die in dieser Bedienungsanleitung nicht erläutert werden, wenden Sie sich bitte an den Autohändler.

Diagramma dei collegamenti di alimentazione

Il connettore di alimentazione accessoria può variare a seconda della macchina. Controllare il diagramma del connettore di alimentazione accessoria della macchina per essere sicuri che i collegamenti corrispondano correttamente. Vi sono tre tipi di base (illustrazione sotto). Potrà essere necessario cambiare le posizioni dei fili rosso e giallo nel cavo di alimentazione dello stereo della macchina. Als de aansluitingen en geschakelde voedingskabels kloppen, sluit u het apparaat aan op de voeding van de auto. Indien u nog vragen of problemen hebt in verband met het aansluiten van het apparaat die niet in deze handleiding vermeld staan, raadpleeg dan de autodealer.


Voedingsaansluitschema

De hulpvoedingsaansluiting kan verschillen afhankelijk van de auto. Controleer het voedingsaansluitschema dat bij dit apparaat wordt geleverd om te zien of de aansluitingen kloppen. Er zijn drie basistypen (zie afbeelding hieronder). Het is mogelijk dat u de posities van de rode en gele kabels in het aansluitsnoer van het car audiosysteem moet omwisselen. Als de aansluitingen en geschakelde voedingskabels kloppen, sluit u het apparaat aan op de voeding van de auto. Indien u nog vragen of problemen hebt in verband met het aansluiten van het apparaat die niet in deze handleiding vermeld staan, raadpleeg dan de autodealer.


Schéma de raccordement d'alimentation

Le connecteur d'alimentation auxiliaire peut varier suivant le type de voiture. Vérifiez le schéma du connecteur d'alimentation auxiliaire de votre voiture pour vous assurer que les connexions correspondent. Il en existe trois types de base (illustrés ci-dessous). Il se peut que vous deviez commuter la position des fils rouge et jaune du cordon d'alimentation de l'autoradio. Après avoir établi les connexions et connecté correctement les fils d'alimentation, raccordez l'appareil à l'alimentation de la voiture. Si vous avez des questions ou des difficultés à propos de cet appareil qui ne sont pas abordées dans le présent mode d'emploi, consultez votre concessionnaire automobile.

Auxiliary power connector
Hilfsstromanschluss
Conneteur d'alimentation auxiliaire
Connetore di alimentazione accessoria
Hulpvoedingsaansluiting

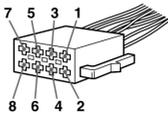


a

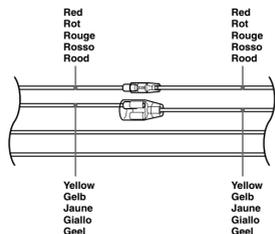


4	Yellow Gelb Jaune Giallo Geel	continuous power supply permanente Stromversorgung alimentation continue alimentazione continua continuu voeding	7	Red Rot Rouge Rosso Rood	switched power supply geschaltete Stromversorgung alimentation commutée alimentazione commutata geschakelde voeding
---	---	--	---	--------------------------------------	---

b

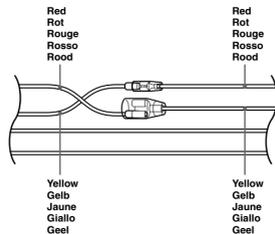

4	Yellow Gelb Jaune Giallo Geel	switched power supply geschaltete Stromversorgung alimentation commutée alimentazione commutata geschakelde voeding	7	Red Rot Rouge Rosso Rood	continuous power supply permanente Stromversorgung alimentation continue alimentazione continua continuu voeding
---	---	---	---	--------------------------------------	--

c

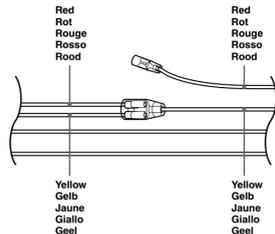

the car without ACC position
Fahrzeug ohne Zubehörposition (ACC)
Vehicule sans position ACC
Auto priva della posizione ACC
Auto zonder ACC-positie