

PDP TV

QUICK SETUP GUIDE

The Supplied Accessories



Owner's Instructions



Remote Control/
AAA Batteries (2ea)



Power Cord



Cloth-Clean



Holder-Wire Cable



Screw (4ea)



Cover-Bottom



Holder-Ring (4ea)




Ferrite Core for
Power Cord




Ferrite Core for
Headphone

Installing Batteries in the Remote Control

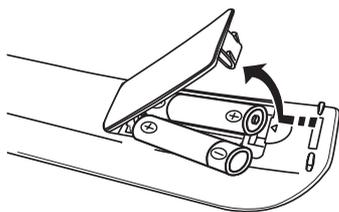

Installing the Stand

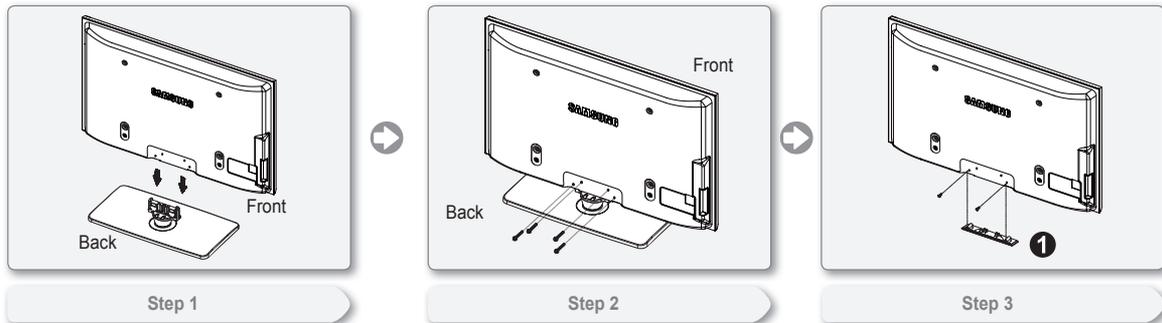

Step 1. Attach your PDP TV to the stand.


- ☑ Firmly secure the stand to the TV before moving it, as the stand may fall and could cause serious injury.
- ☑ Two or more people should carry the TV. Never lay the TV on the floor because of possible damage to the screen. Always store the TV upright.

Step 1. Using the 4 screws for securing the stand base and the monitor, firmly attach the monitor to the stand base. (The exterior of the set may be different than the picture.)


Step 3. In case of installing your TV on the wall, close the cover ① on the stand-base connection part using two screws for hiding.

Assembling the Cables

Enclose the cables in the Holder-Wire Cable so that the cables are not visible through the transparent stand.

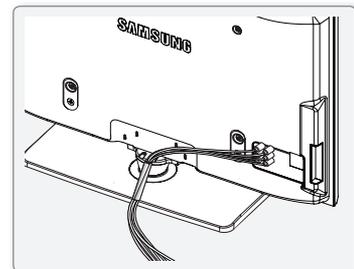


Using the remote control buttons

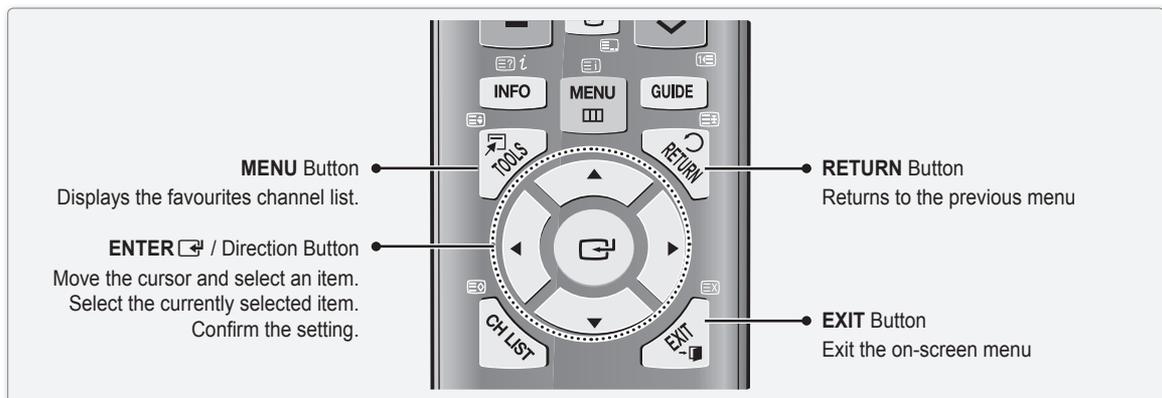

Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently. If you want to reset this feature, press the **MENU** button to display menu. You can set the Plug & Play by selecting **Setup** → **Plug & Play**.

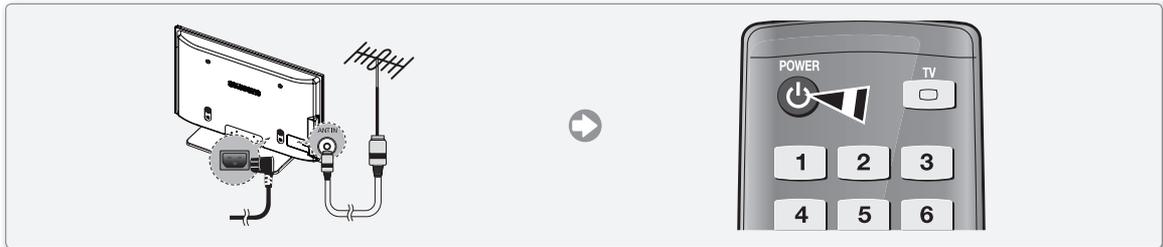


On the screen, you can set as follows.

☑ The each step may vary depending on the Antenna source.



Connecting a AV device

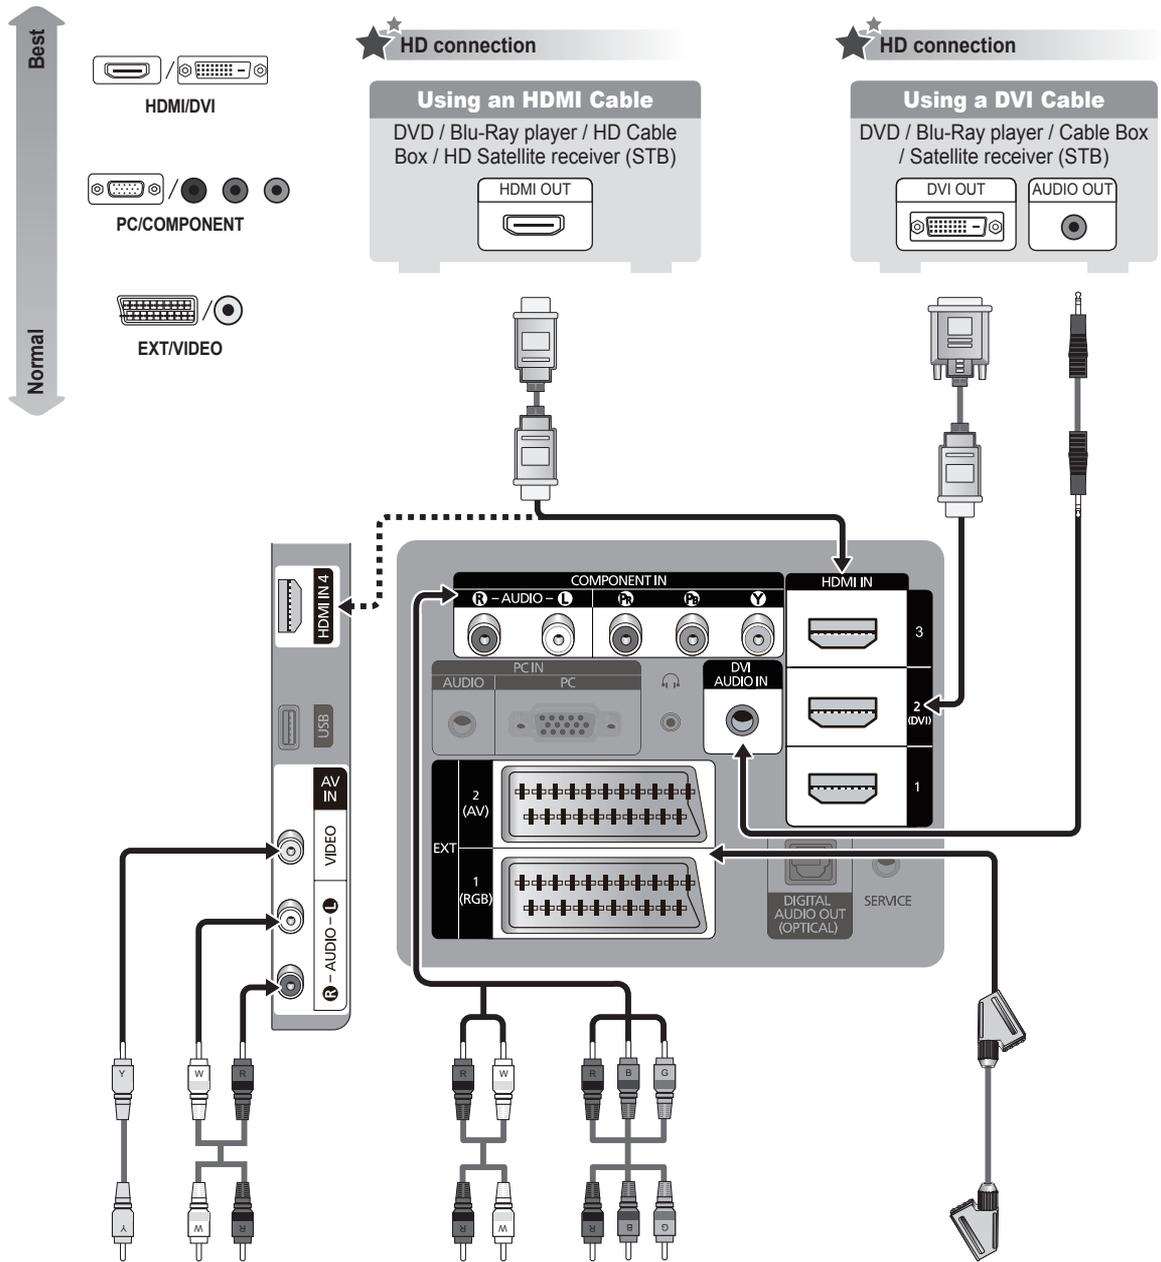

Audio/Video connection

Using an Audio/Video Cable

VCR

VIDEO OUT AUDIO OUT

Component connection

Using a Component Cable

DVD / Blu-Ray player / Cable Box / Satellite receiver

AUDIO OUT COMPONENT OUT

Using a Scart Cable

VCR / DVD

EXT



BN68-02138D-00