

TELME EMERGENCY SYSTEM

You can store up to 4 emergency numbers (family, neighbours, friends, emergency services).

- In case of an emergency press and hold the emergency button. The emergency key will still work when the key lock is enabled.
- Press the emergency button to make an emergency call. Up to 4 numbers will be called in a predetermined order until the emergency call is answered. This process is repeated 3 times.

Note: The phone does not recognize whether a person, an answering machine or voice mail takes off and sees this as a successful emergency!

- To abort the emergency call press long 
- During the emergency call sequence, the mobile telephone sounds a warning signal to alert the people around you about the emergency.
- If no emergency number is stored, your prepaid-card has run out or you are outside of the reception area of your network operator, the international emergency number 112 will be called.

Note: If you want to save numbers from official services, police, firefighter, etc. as emergency numbers, you have to clarify this with these institutions. No liability will be assumed for possible costs incurred if you dial accidentally.

Saving emergency numbers:

- Go to **Settings** ⇒ **SOS settings** ⇒ **SOS-numbers list** ⇒ choose the contact number (1-4) you want to save or edit ⇒ select **Options** with  ⇒ enter the emergency number of your choice (**Edit** or **Add from contacts**) ⇒ confirm with .

Enable the emergency button:

- Go to **Settings** ⇒ **SOS settings** ⇒ **Status** ⇒
- to enable the emergency function, set the status to **On**
 - to disable the emergency function, set the status to **Off**

ALARM

Enable/disable an alarm:

- Press  or enter menu with  ⇒ **Extras** ⇒ **Alarm** ⇒ choose an entry with  or  and **Edit** with  ⇒ press  to enable/disable this alarm-entry ⇒ scroll down  ⇒ enter alarm time ⇒ scroll down  ⇒ set: **Once**, **Everyday** or **Custom** ⇒ scroll down  ⇒ select ringtone and vibra setting with  ⇒ confirm with  ⇒ press  to save the alarm entry.

Stop an ringing alarm: press 

Mute a ringing alarm: press  (rings again in 5 minutes).

RADIO

Enable/disable the FM Radio:

Enter menu with  ⇒ **Extras** ⇒ **FM Radio** ⇒  or 

Search/enter a station:

- Search channels with  or  (automatic search). The found channels are stored in the Channel list.
- When the frequency of the desired station is known, select **Options** with  ⇒ **Manual input** ⇒ enter with keypad.

Adjusting the volume: (does not work in auto. search) use  and  on the left side of the phone

CAMERA

Your mobile phone has a camera.


- **Take a picture:** turn on the camera with  ⇒ press  to take a shot
- **Pictures:** Here you find your stored shots. Enter menu with  ⇒ **Pictures**. Available **Options** for an image are: **View, Image information, Rename, Delete, Storage** (decide whether to store your pictures in the phone storage or on a memory card)

PC-CONNECTIVITY

You can connect your mobile phone to a PC to transfer pictures to your computer.

Connect your mobile phone to a PC:

Turn on your mobile phone ⇒ use a USB cable to connect the phone with the PC ⇒ after this the computer will recognize the phone as a «mass storage» and you can transfer the pictures.

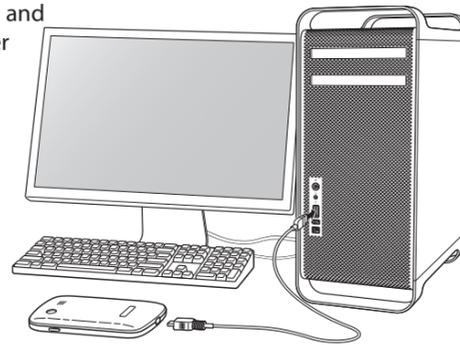

FREQUENTLY ASKED QUESTIONS

The mobile telephone display is blank/black:

Telephone is in energy saving mode (press keylock). Or it is switched off ⇒ press  for 2 seconds to turn it on.

The mobile phone is not responding:

Remove battery, re-insert and switch on the device again. If still no response, please contact the Service Center.

The charging process will not start:

It may take a few minutes. If there's no response after 10 minutes, please contact the Service Center.

SUPPORT

- **TELME Service Centre**
Industriezeile 36 · 4020 Linz · Austria
office@telme.at · www.telme.at

WARRANTY

- This warranty is valid only if the original telme batteries are used.
- Mobil phone: 12 months ■ Battery: 6 months

PACKAGE CONTENT

- Mobile phone ■ USB cable with USB AC - adaptor
- Battery: Li-Ion 3.7V / 1350mAh ■ Desktop charger

TECHNICAL PRODUCT DESCRIPTION

- Dualband GSM 900/1800MHz ■ Stand-by-time: 380 h
- Dimensions: 120 x 59 x 12.3 mm ■ Talk time: 6 h
- Weight: 95 g ■ Internal antenna: SAR 0.594 W/kg
- Battery: Li-Ion 3.7V / 1350mAh

DECLARATION OF CONFORMITY (DOC)

We, Emporia Telecom Produktions- und Vertriebs- GmbH & Co. KG declare as our sole responsibility that this product conforms with the following relevant harmonized standards.

Type of product: **Dual Band Mobile Phone**

Article number: **C155**

Governing EU-regulations: Council Directive R&TTE 1999/5/EC

Radio equipment and telecommunications terminal equipment

Harmonized EN standards:

Safety: EN 50332-1, EN 60950-1+A11, EN 60950-1+A12

Health: EN 50360, EN 62209-1

EMV: EN 301 489-1 V1.8.1+V1.9.2, EN 301 489/-7 V1.3.1

EN 301 489/-17 V2.1.1, EN 301 489/-34 V1.1.1

Radio: EN 301 511 V9.0.2

CE0678

Eveline Pupeter
CEO

27.09.2012, Linz/Austria

DISPOSAL

Disposal of packaging:

The packaging and packaging materials should always be recycled.

Disposal of batteries:

Batteries must not be disposed of with household rubbish/garbage! As a consumer you are required by law to recycle used batteries. You may return them to your local collection point or to the dealer.

Disposal of the device:

Do not throw your mobile phone into the rubbish/garbage once it has outlived its usefulness. For the benefit of the environment, take it to a recycling location for used phones so it can be disposed of in an environmentally responsible way.



CORRECT USAGE

- This mobile phone is robust and designed for mobile operation. However, it must be protected from moisture (rain, bath...), shock and impact.
- Do not expose it to direct sunlight.
- Using this product in ways other than described above will damage the device, and may be hazardous (electric shock, fire, etc.). The entire product must not be altered or rebuilt, and the housing must not be opened.
- The power plug is suitable only for use with residential-type outlets of the public mains with 230 Volt/ 50 Hz (10/16 A) alternating current.

SAFETY INSTRUCTIONS

- Switch off the mobile phone in hospitals or in the vicinity of medical equipment, as the mobile phone may cause it to malfunction. Keep your mobile phone a minimum distance of 20 cm away from a pacemaker if it is turned on.
- Never drive a car while holding the mobile phone in your hand. Observe national laws and traffic regulations governing the use of mobile phones in traffic.
- Always turn off your mobile phone inside an airplane.
- You must switch off the mobile phone in the vicinity of petrol/gas stations and other places where there are explosive materials.
- Don't shine the torch/flashlight directly into the eyes of people or animals.
- If the speaker or headset is set at high volume, this can cause hearing damage. Never hold the phone to your ear when the speakerphone mode or the emergency button is activated.
- The device and its accessories may contain small parts. Keep this product out of the reach of small children.
- As a precaution, we recommend disconnecting the charger from the phone during a thunderstorm.



TELME
mobilephones

C155



PartNo: C155_ShortManual-V3a_55259-ENG_201304

INSERTING THE SIM CARD

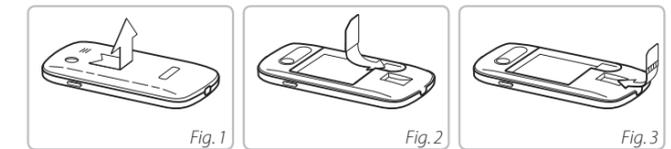


Fig. 1: Remove the battery cover

Fig. 2: Insert the SIM card with the golden chip downside

Fig. 3: Insert the memory card (optional)

INSERT THE BATTERY AND CHARGING

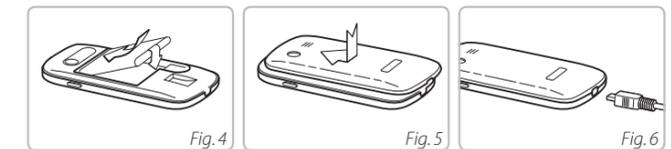



Fig. 4: The battery contacts have to touch the gold coloured contacts of the mobile phone.

Fig. 5: Slide battery cover back to its previous position until it locks with a click.

Fig. 6: Plug the charging cable into the socket.

- Battery is charging: bars in the battery icon fill up
- Battery is fully charged: bars in the battery icon stop moving

Please note: The battery should be charged for at least 4 hours before your first call. Use only batteries and chargers which are approved for use with this model.

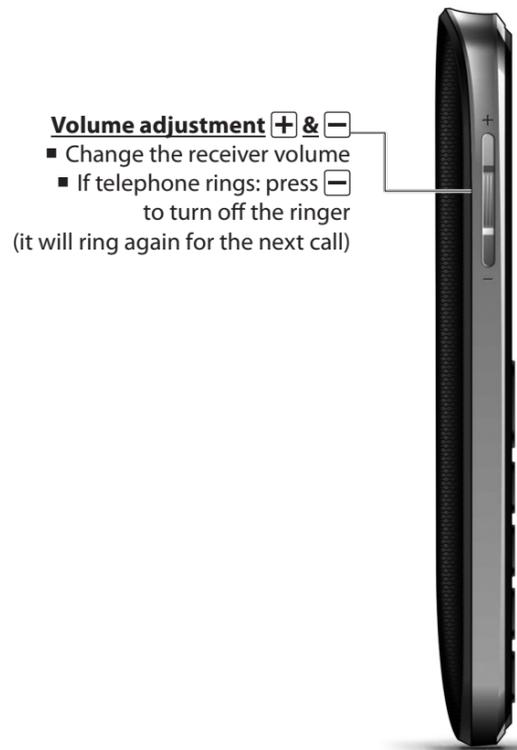

Volume adjustment + & -

- Change the receiver volume
- If telephone rings: press - to turn off the ringer (it will ring again for the next call)

Arrow keys ✓ / △

- Scroll through phone book and menus
 - In standby access the menu with △
 - In standby access **Phonebook** with ✓
- Hearing Radio: △ or ✓ for channel search

Make or receive a call/OK key [OK]

- Make or receive a call
 - In menu: select
- In standby: access to **Call list** (dialled, received, missed calls)

1-key / Voicemail key

Press and hold: connect to your voicemail

Star key *

- Press and hold: + (for country codes, i.e. +44 for UK)
- When writing: special symbols (?! , () @ - + \$ € etc)
 - Press twice: activate shortcut function

0-key

- When writing (SMS, phone book): insert a space



End Call/Back/Delete key [End]

- During a call: end call
- In menu: one step back
- When entering numbers or text: delete
- To switch on or off: press and hold for 2 seconds

Key lock [Lock]

- Press and hold: enable/disable key lock

Camera-key [Camera]

- Press to turn on the camera

Alarm [Alarm]

- Press to access the alarm settings

Emergency button

- Press to start emergency call process

Pound key #

- Press and hold: enable/disable mute
- When writing: Switch from upper to lower case or numbers
- press twice: activate shortcut function



Flashlight

- Press and hold: turn the torch on/off

DISPLAY SYMBOLS

Signal strength
Roaming

Battery indicator
Keylock enabled

Missed call
Call forwarding

New text
Alarm on

Profile: Silent (mute)
Profile: Meeting

Profile: Maximum

USB connected

FIRST STEPS

Press and hold the [Power] key for 2 seconds to switch on the phone. To turn off, press and hold 2 seconds again. When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with [OK].
Note: The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.

Incoming call:

- Pick up: press the [OK] key
- Reject: press the [End] key
- Muting the ringer temporarily: press the [-] key

End a call: press the [End] key

Dialling:
Enter the phone number with the keypad (including area code with 0) ⇒ start call with [OK].

Call log:
Enter the **Call log** by press the [OK] key. ⇒ Select a number with ✓ or △ from a redial list (**Missed calls, Dialed numbers or Received calls**). ⇒ Start the call with [OK].

Handsfree:
Press [OK] during a call, to enable or disable the handsfree function.

Enter the menu:
Press the [△] key in standby mode

Scroll through menu:
Use ✓ and/or △: on top of the screen the currently marked menu item is mentioned.

Choose/confirm: with [OK]

Standby mode:
In standby mode the phone is turned on, but no active applications (calling, messaging, ...) are running.

- In menu press the [OK] key or [End] key to select the shown option on the screen right above the keys.
- After a few seconds without input, the display is switched off to save power. By an incoming call or pressing any key, the screen turns on again automatically.
- To return to the standby screen from any application you are in, press the [End] key repeatedly or press and hold the [End] key until the standby screen appears.

Shortcut keys # & *:
Start a function of your choice by pressing * or # twice in standby mode.
Enter menu with [△] ⇒ **Settings** ⇒ **Phone settings** ⇒ **Dedicated key** ⇒ choose **Double-click star** or **Double-click pound** ⇒ [OK] ⇒ choose the function with ✓ ⇒ confirm with [OK].

Keylock:
Your mobile phone supports an automatically key lock to avoid activating any functions, f.i., when your mobile phone is in your pocket.
Enter menu with [△] ⇒ **Settings** ⇒ **Phone settings** ⇒ **Auto keypad lock** ⇒ define **5 sek, 30 sek** or **Off**

Security settings:
Edit the PIN code or to Activate/Deactivate the PIN code query or the **Phonecode** (default: 4321).

PHONEBOOK

Save names and numbers (always include the area code, e.g. +44 for UK)
Enter **Phonebook** with [OK].

Save a contact (name & number):
Enter menu with [△] ⇒ enter **Phonebook** with [OK], [OK] ⇒ choose **Add new contact** with [OK] ⇒ enter name with the keypad (See **Text message**-chapter for writing text) ⇒ [OK] ⇒ enter number ⇒ **Save** with [OK].

Search a Phonebook entry:
Enter menu with [△] ⇒ enter **Phonebook** with [OK], [OK] ⇒ enter the initial letters of the searched name (may continue to scroll with [OK]). ⇒ When the requested name is shown, select **Options** with [OK] for **Call, Send SMS, View, Edit, Delete this, Delete several, Delete all contacts, Copy, Copy all, Phonebook settings**.

TEXT MESSAGE (SMS)

SMS (Short Message Service) is a short text message, up to 160 characters in length. Costs are only incurred when sending, not receiving SMS.

Writing text: Enter menu with [△] ⇒ enter **SMS** with [OK] ⇒ choose **Write message** with [OK].
Entering text with the keypad. Every key represents several signs, depending on how often you press the key. (e.g. 2x [4], 2x [3], 3x [5], 3x [5], 3x [6] for **hello**)

[1] .,!? " @ : 1	[7] p q r s 7 B \$
[2] a b c 2 ä æ å à	[8] t u v 8 ü ù ú
[3] d e f 3 è ê ë	[9] w x y z 9 ý þ
[4] g h i 4 i i i i	[0] Space; 0
[5] j k l 5 £	[*] special character: . , ? ; ! ' ' ' @ _ ~ & + - () < > { } [] ...
[6] m n o 6 ö ø ó	

Use the [#] key, to Choose from 4 Writing Styles:

- abc** ⇒ lower case
- ABC** ⇒ Upper and lower
- ABC** ⇒ upper case
- 123** ⇒ numbers

Sending a message: After typing the text, press 2x [OK] **Send**. ⇒ **Enter number** or **Add from Phonebook** ([OK], scroll to the contact and select with [OK]). ⇒ Press [OK] again to send the message.

Receiving a message: A short signal and an display prompt inform you about a new, incoming text message. With [OK] you can read the message now or enter the menu **SMS** ⇒ **Inbox** to access the list of received messages.