

Rowenta®

GUIDE DE PRISE EN MAIN RAPIDE

QUICK START GUIDE

GUÍA DE CONSULTA RÁPIDA

GUIDA RAPIDA

GUIA DE CONSULTA RÁPIDA

KORTE HANDLEIDING

KURZANLEITUNG

RYCHLÝ NÁVOD K OBSLUZE

RÝCHLY NÁVOD NA OBSLUHU

GYORS HASZNÁLATBAVÉTELI ÚTMUTATÓ

GHID DE ÎNȚIERE RAPIDĂ

KRATKO PŮKOVODŤSTVO ZA UPOTREBA

VODIČ ZA BRZI POČETAK

VODIČ ZA BRZI POČETAK

VODNIK ZA HITRI ZAGON

UPUTSTVO ZA BRZI POČETAK

EXTREM' AIR MOTION

www.rowenta.com



FR

EN

ES

IT

PT

NL

DE

CS

SK

HU

RO

BG

HR

SR

SL

BS

1 MISE EN MARCHÉ

1 Installation de la station.

2

Installation correcte

Installation incorrecte

3 Appuyez sur le bouton POWER du robot.

4 Appuyez sur le bouton CHARGE du robot / de la télécommande.


5

2 MODES DE NETTOYAGE

FR

4 modes de nettoyage au choix (selon modèle)

1 Mode Smart

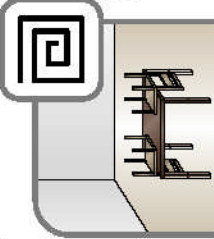

MODE




x1



2 Mode Random



MODE

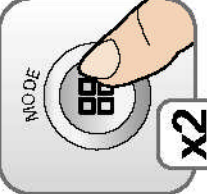


x2



3 Mode Spot



MODE

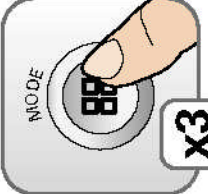

x3



4 Mode Manuel




x4



5

Après sélection du mode de nettoyage, appuyez sur le bouton START / STOP

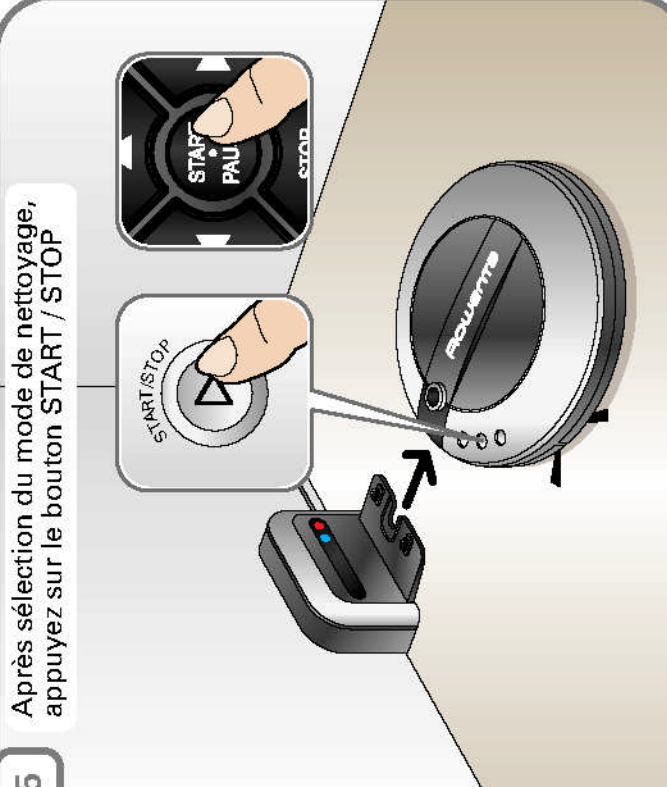

3

PROGRAMMER UN NETTOYAGE

Exemple : il est 12:00 PM. Lancer un nettoyage à 3:00 PM.

1. Permet d'entrer l'heure actuelle.

MANUAL

TIME

2. Ces boutons font augmenter ou diminuer l'heure.

START PAUSE STOP

3. Permet de valider l'heure actuelle.

MANUAL

TIME

1. Activez la programmation du nettoyage.

L POWER

PROG

2. Ces boutons font augmenter ou diminuer l'heure.

START PAUSE STOP

3. Permet de valider l'heure du nettoyage.

L POWER

PROG

4. Permet de régler le niveau de puissance.

START PAUSE STOP

5. Le nettoyage est programmé à 03:00 PM.

C. Programmer le nettoyage quotidien

POWER

DAILY




Permet d'activer le nettoyage quotidien.







FR

4 NETTOYAGE DU ROBOT




A. Vidage du bac à poussières

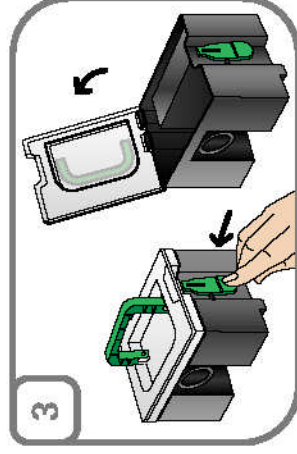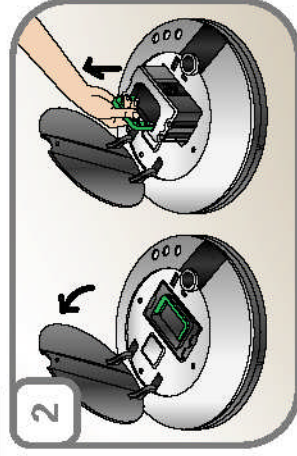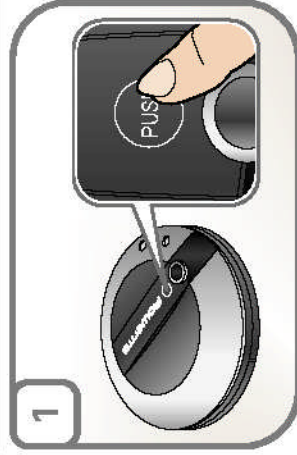




B. Nettoyage du filtre mousse

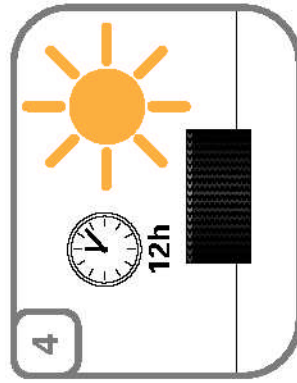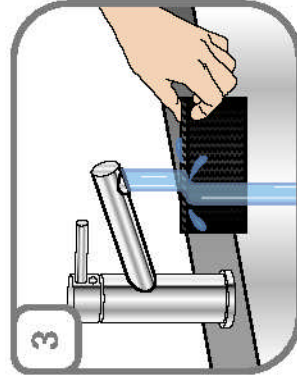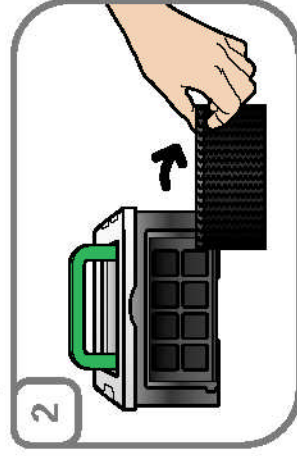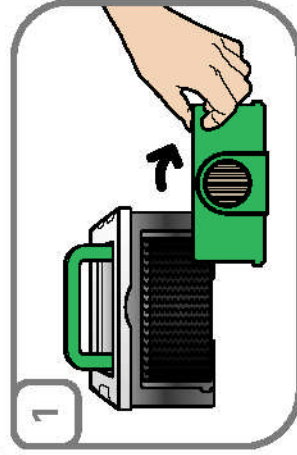

C. Nettoyage du filtre (H)epa

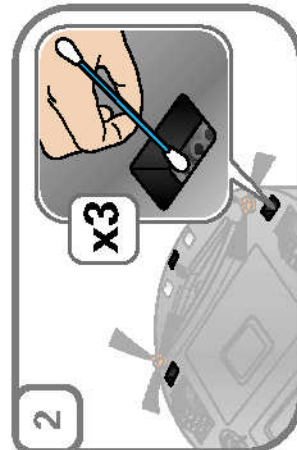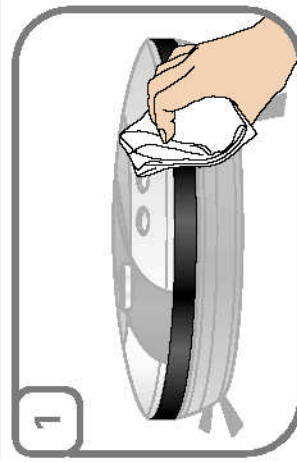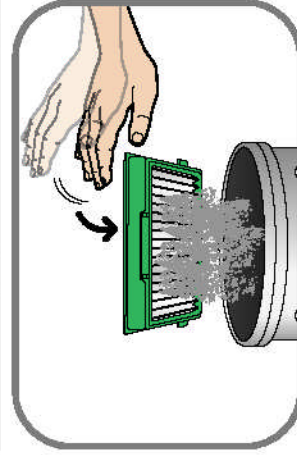


D. Nettoyage des capteurs

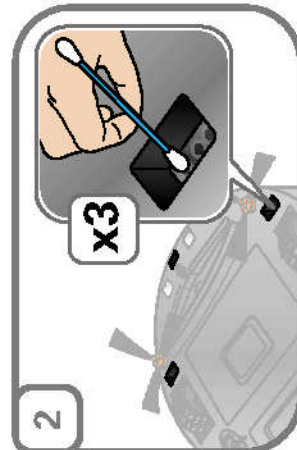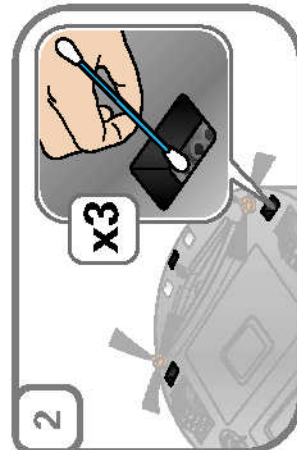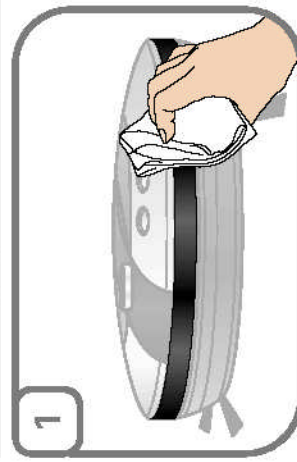


1 GETTING STARTED

1 Installing the station

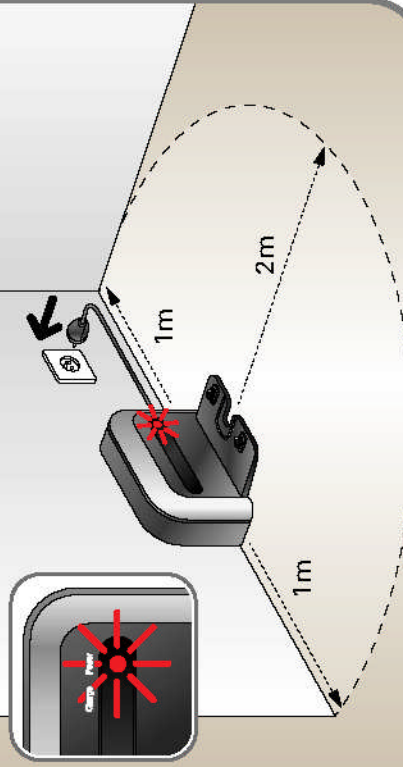


2

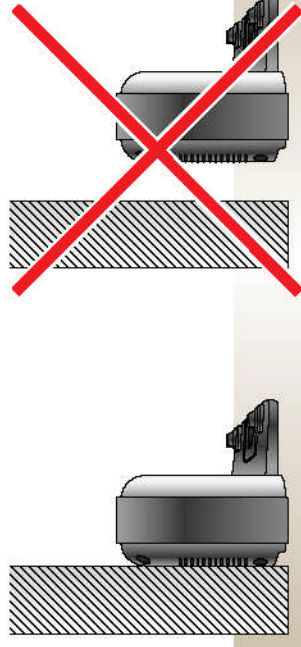


Correct installation

Incorrect installation

 
3 Press the POWER button on the robot

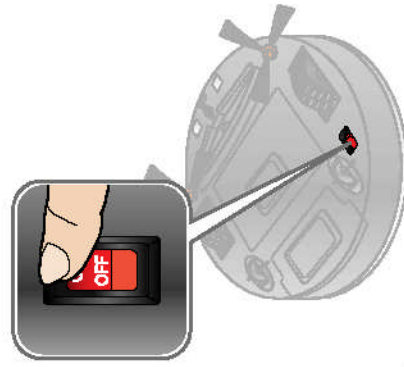

 4 Press the CHARGE button on the robot/remote control

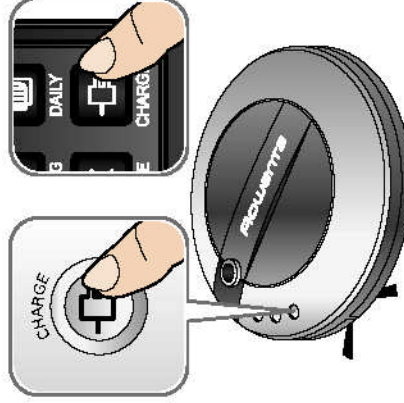

5

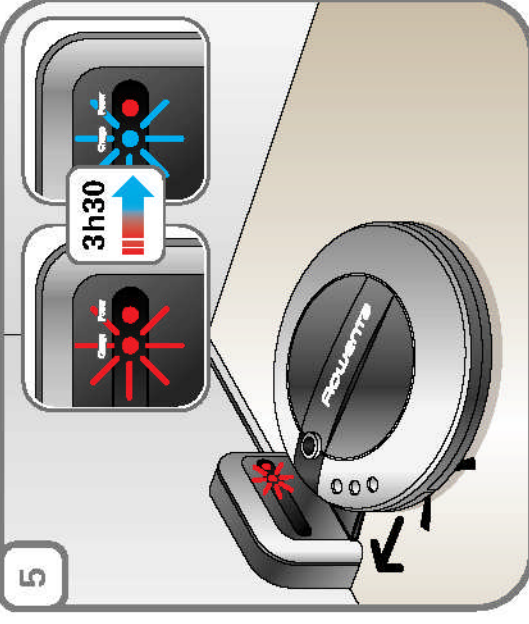

2 CLEANING MODES

EN 4 cleaning modes to choose from (depending on model).

1

Smart Mode

x1

2

Random Mode

x2

3

Spot Mode

x3

4

Manual Mode

x4

5

After selecting the cleaning mode, press the START/STOP button

3

PROGRAMMING CLEANING

Example: it is 12:30 PM. Start cleaning at 3:00 PM

MANUAL

TIME

START

PAUSE

STOP

MANUAL

TIME

1. Allows you to enter the current time.

2. These buttons move the time forwards or backwards.

3. Allows you to confirm the current time.

L POWER

PROG

START

PAUSE

STOP

L POWER

PROG

4. Allows you to regulate the power level.

5. The cleaning is programmed for 3:00 PM.

C. Programme daily cleaning

POWER




DAILY

Allows you to activate daily cleaning.





EN

4 CLEANING THE ROBOT




A. Emptying the dust bag

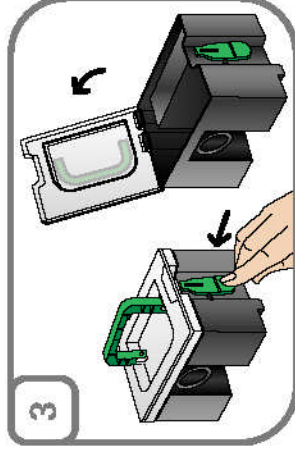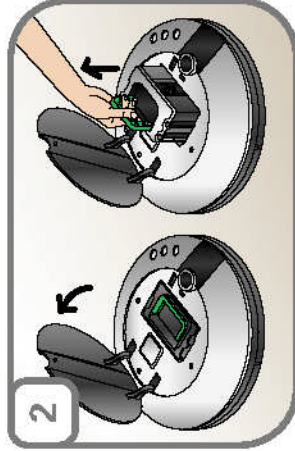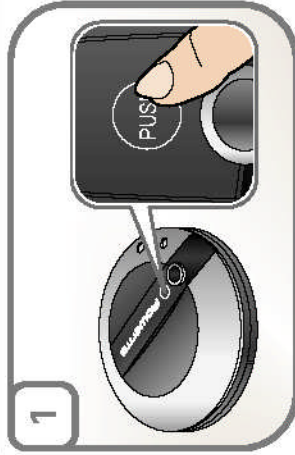

B. Cleaning the foam filter

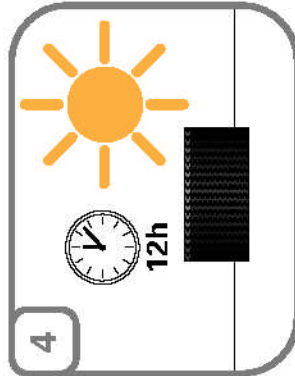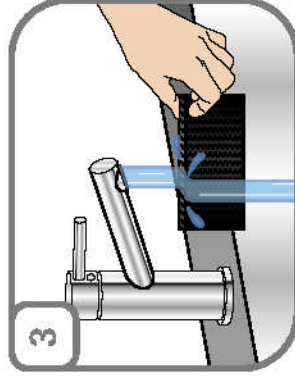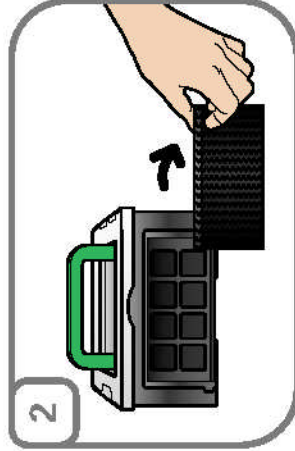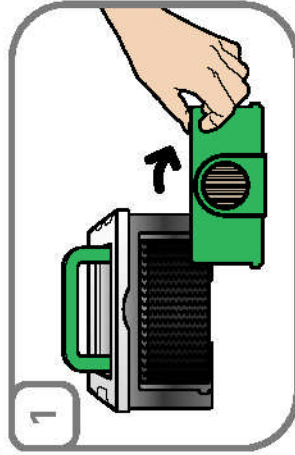

C. Cleaning the Hepa filter

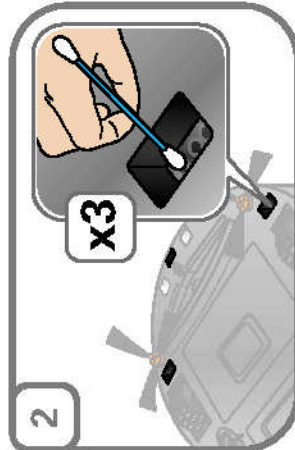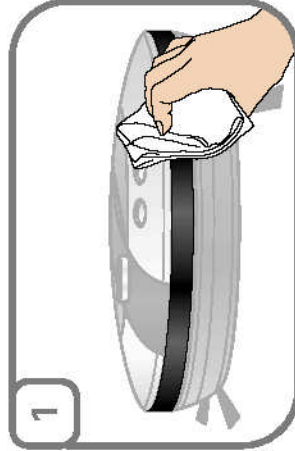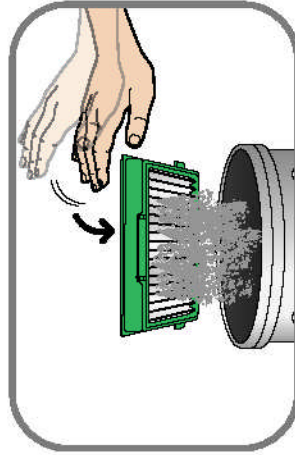

D. Cleaning the sensors

