

GORENJE VC 0399, 1657, 0516, 1658, 1296, 0513, 0333, 0051
GR 1552, 0222, 0329, 0262, 0359.
GP 15 VC 0372.
GRADIENITE VC 0502.
GRAETZ TV 0062, 0066, 0083, 0096, 0108, 0111, 0126, 0149, 0153, 0167, 0252, 0090, 0322, 0327,
0374, 0390, 0391, 0222, 0513, 0539, 1423, 1445,
0052, 1654, 1713 / VCR 2356, 0469, 1469, 0341,
0372, 0212, 0280.
GRANADA TV 0062, 0066, 0083, 0096, 0108, 0111,
0126, 0149, 0153, 0167, 0252, 0090, 0322, 0327,
0374, 0390, 0391, 0222, 0513, 0539, 1423, 1445,
0052, 1654, 1713 / VCR 2356, 0469, 1469, 0341,
0372, 0212, 0280.
GRANDIN TV 0062, 0066, 0083, 0096, 0108, 0111,
0126, 0149, 0153, 0167, 0252, 0090, 0322, 0327,
0374, 0390, 0391, 0222, 0513, 0539, 1423, 1445,
0052, 1654, 1713 / VCR 2356, 0469, 1469, 0341,
0372, 0212, 0280.
GRANDEN TV 0025, 0062, 0083, 0111, 0114, 0136,
0540, 0196, 0227, 0320, 0322, 0354, 0359, 0435,
0542, 0513, 1637, 1639, 1654 / VCR 0323, 0277,
2315, 0383, 2356, 0469.
GRANDINI TV 1453, 1654, 0073, 1548, 1569, 0544,
0141, 0424, 1560, 0330, 0536, 0114, 0262, 0540,
0422, 1549, 1412, 1383, 0537, 0513 / VCR 0533,
0383, 0277.
GREAT WALL TV 0490, 0322.
GRENIADIER TV 0547, 0513, 0230, 1174 / VCR 0383.
GRONIC TV 0238, 1174, 0067, 0359, 0230 / VCR
0372.
GRUNDIG TV 0096, 0103, 0517, 0292, 0327, 0335,
0549, 1491, 1450, 1649, 1652, 1695, 0351, 1702 /
VCR 0381, 0465, 0460, 2371, 0275.
GTNORIC 0430, 0454, 0513, 0543, 0540, 0067,
0372 / VCR 2315, 0372.
GTT TV 0424, 1638, 0374, 0513 / VCR 0469.
GUTTA B TV 0495.
H & B TV 0513.
HAER TV 0540.
HAIRFAX TV 0322.
HAMMERSTEIN TV 0322, 0067, 0384, 0422, 1082,
0359.
HANDELMANN TV 0067, 0115.
HANIMEX TV 0262.
HANNOVER TV 1139, 1420.
HANSATEC TV 0359, 1639, 0114, 0422, 0162, 0195,
0230, 0554, 0540, 0435, 0513, 1638, 0262, 0351,
0277, 0101, 0391, 0296, 0336, 0067, 0202, VCR
0372, 0430, 0195, 0377, 0277, 0460.
HANTAREX TV 0513, 1436, 1383, 0077, 0238, 0359,
0025 / VCR 0277.
HAROLD KARBON VCR 0353.
HARROW TV 0513.
HARWOOD TV 0540, 0513.
HAUPTGASSE TV 0540, 0513.
HB TV 0537, 0513, 1489, 1459.
HBS TV 0322, 0540, 0454, 0513, 0543, 0540, 0067,
0372 / VCR 2315, 0372.
HEDZON TV 0540, 0513.
HEIUR TV 0322.
ELECTRONIC TV 0025, 0067, 0083, 0111, 0114,
0115, 0136, 0540, 0227, 0320, 0322, 0354, 0359,
0435, 0542, 0513, 1637, 1639, 1654 / VCR 0277,
0323, 0383, 2315, 2356, 0469.
HEMMERMANN TV 0391, 0127, 1009, 0077.
HIENA TV 0513.
HEXA TV 0230, 0204.
HIFVOX TV 0051, 0055, 0052, 0090, 0092, 0094,
0095, 0096, 0119, 0136, 0164, 0181, 0229, 0320,
0242, 0455, 0549, 1045, 1435, 1478, 1425, 0236,
0101, 0169, 0455, 2301, 0404, 0395, 2335, 0337, 0320,
2360.
HIGHASHI TV 0067.
HIGHWAY TV 0556, 0544, 0424, 0262, 0067, 0513,
0359, 0415, 0073, 1420 / VCR 0372.
HIL TV 0513.
HIKONA TV 0556, 0544, 0424, 0262, 0067, 0513,
0359, 0415, 0073, 1420.
HILINE TV 0359, 0415, 0513, 0322 / VCR 0277.
HINARI TV 0322, 0113, 0329, 0262, 0327, 0065, 0359,
0383, 0543 / VCR 2351, 0372, 2329, 2358.
HISAWA TV 0513, 0262, 0073, 0544, 0557 / VCR
0323.
HISENSE TV 0083, 0145, 0359, 0540.
HITACHI TV 0167, 0197, 0296, 0337, 0557, 1423,
1608, 0467, 0351 / VCR 0271, 0169, 2365, 0467.
HITONITSU TV 0359, 0415.
HIT TV 0024.
HITACHI TV 0513, 0067, 0082, 0083, 0094, 0095,
0106, 0178, 0181, 0167, 0252, 0090, 0322, 0327,
0329, 0326, 0431, 0496, 1393, 0547, 0554, 0569,
1016, 1076, 1259, 1369, 1423, 0052, 0540, 0222,
1711, 1714 / VCR 0169, 0344, 0272, 0460, 2319.
HITSU TV 0262, 0544, 0073, 0513.
HMA TV 0513.
HOHER TV 0513, 0540, 0557, 1383, 1423.
HOME ELECTRONICS TV 1437.
HORIZONT TV 0024, 0042, 0067, 0111, 0119, 0133,
0135, 0157, 0302, 0291, 0536, 0586, 1317, 1364,
1380, 1383, 1557, 1607, 1617, 1618, 1630, 0540,
0513, 0409, 1672, 1705 / VCR 0460, 0540, 0341,
0327, 2325, 0212, 2367, 1463.
HORNTHYPHON TV 0540, 0513.
HOSHINO TV 0097, 0424, 0262, 0513.
HOWELL TV 0513.
HYD TV 1467, 1550.
HYPER TV 0067, 0125, 0262, 0322, 0336, 0359,
0415, 0424, 0435, 0467, 0513, 1435, 1638, 1639,
0540, 0513, 0097 / VCR 0372, 0323.
HYUNDAI TV 1475, 1450, 1568.
I.B.A. TV 0513.
IBERIA TV 0428, 0513.
IBERVISO TV 0391.
ICE TV 0262, 0415, 0057, 0111, 0067, 0540, 0513,
0359, 0322.
IEG TV 0067, 0322.
IEG TV 0067.
IMC TV 0513.
INTERBU TV 0322, 0359, 0111, 0262.
IMPERIAL

NASSA TV 0547, 0534, 0322, 0607 / VCR 0533.
NARITA NAGEL TV 1563, 0230, 1611.
NATIONAL TV 0518, 0310.
NEC TV 0149, 0359, 0065, 0427, 1497, 1418, 0404,
0330, 1359, 0472, 0540, 0237, 0544, 0518, 0544,
0513 / VCR 0430, 0472, 2315.
NICOLA PVR 0277, 2315.
NIET TV 0435, 0230, 0410, 0262, 0513.
NEOVIA TV 0513, 1459, 1568, 1383, 1543, 1382,
1514, 1450, 1301.
NESCO TV 0327, 0125, 0375, 0312, 0222 / VCR 0372,
0373, 2328, 2351, 0277.
NETSAR TV 0540, 0513.
NEUFUNK TV 0513.
NEW GOLDVISION TV 0322, 0359, 0067, 0513, 0505,
0411, 0111, 0557 / VCR 2313, 2356, 0383, 0272.
NEWMAIR TV 0067, 0230, 1174.
NEWMAIR TV 0556, 0544, 0424, 0262, 0067, 0513,
0359, 0415, 0373, 1420 / VCR 0372.
NETWITCH TV 0542, 0513.
NEW TV 0556, 1422, 0513, 1393, 0540.
NFREN TV 1555.
NICAMGAE TV 0025, 0067, 0083, 0111, 0114, 0115,
0116, 0540, 0227, 0320, 0322, 0534, 0359, 0435,
0542, 0513, 1637, 0359, 1654 / VCR 0277, 0383,
0372, 2315, 0469.
NIKIKAI TV 0513, 0322, 0067, 0329, 0082, 0141 / VCR
0277, 2315.
NIKKEI TV 1467, 1550, 1390, 0540, 0556, 1537, 0513,
0322, 0097.
NIKKEI TV 0547, 0513, 0111.
NISSAN TV 0383.
NOBLEX TV 0149, 0354, 0422, 0197, 1661, 0415,
0359, 1283, 0288.
NOBIS TV 0149, 1126, 0136, 0311, 1227.
NOGAMATTI TV 0051, 0055, 0052, 0090, 0092, 0094,
0095, 0096, 0119, 0136, 0164, 0181, 0229, 0230,
0242, 0515, 0445, 1045, 1443, 1478, 1445, 0206 /
VCR 0169, 0455, 3301, 0405, 0359, 2335, 0537, 0320.
NOKIA TV 0066, 0162, 0513, 0252, 0322, 0390, 0431,
0359, 0556, 0558, 0591, 1232, 0222 / VCR 0469,
2356, 0339, 0573, 0169, 2355.
NORDING TV 0037, 0131.
NORDEMEIDE TV 0049, 0052, 0062, 0090, 0092, 0094,
0095, 0115, 0119, 0229, 0422, 0424, 0455, 0524,
0556, 0557, 1045, 0513, 1422, 1423, 0450, 1435,
1514, 0359, 0395, 0169, 0435, 0320, 0404, 1435,
2315, 2355, 2349.
NORTON TV 0062, 0080, 0110, 0153, 0052, 0197,
0422, 0295, 0390, 0428, 0429, 0435, 0222, 0513,
1149, 1181, 0540, 1653 / VCR 0395, 0169, 0404,
0513, 0372, 0377, 0383, 0533, 2315, 2319, 2325,
2388, 0469.
NORFOLK TV 0298, 1657.
NORFOLK TV 0441.
NORMERLE TV 1630, 0540.
NORTH TV 0513, 0057, 0141.
NORTON TV 0359, 0424.
NORWAY TV 0298, 1657.
NOVA TV 0329.
NOVIK TV 0540, 0513.
NOVOTRONIC TV 0359, 0111, 0322, 0513, 0354,
0540, 0329.
NU-TEC TV 0359, 0516.
NUCLEAR TV 1227, 0080, 0115, 0540, 0097, 0302,
0411, 0372, 0083.
O GENERAL TV 0359, 0149.
OCEANIC TV 0062, 0083, 0162, 0178, 0203, 0204,
0251, 0252, 0431, 0359, 0052, 1654, 0222, 2356,
4340, 4341 / VCR 0460, 0169, 2356, 0469.
OCIAN TV 0024, 0042, 0067, 0111, 0119, 0133, 0153,
0157, 0302, 0391, 0536, 0586, 1317, 1364, 1380,
1383, 1557, 1607, 1617, 1618, 1630, 0540, 0541,
0409, 1672, 1705 / VCR 0460, 0540, 0341, 0333,
0372, 0275, 0212, 0272, 2367, 1463.
ODEON TV 0359, 0322, 0111, 0513 / VCR 0372.
OE ELECTRONIC TV 0329, 1494.
OKANO TV 0359, 0227, 0302, 0513 / VCR 0373,
0372, 2315.
ODATA TV 1378.
OIVETTI TV 0527.
OMAL TV 0025, 0237, 0513, 0262, 0322, 0125, 0230,
174, 1639.
OLYMPIC TV 1423.
OLYMPIC TV 0359, 0424 / VCR 2315.
OLYMPUS VCR 0275.
OMEGA TV 0513, 0322, 0262.
ONCESA TV 0359, 0067, 0060 / VCR 2315.
ONIDA TV 0513.
ONIEL TV 0359.
ONWA TV 0514, 0556, 0262, 0361, 0077, 0322.
OPR TV 0540, 0513.
OPTONICA VCR 0383.
ORAVA TV 0320, 0204, 0513.
ORBISAT TV 0067.
ORBIT TV 0513.
ORIENT TV 0359.
ORION TV 0065, 0127, 0195, 0116, 0262, 0300, 0322,
0329, 0359, 0407, 0409, 0415, 0418, 0440, 0472,
0544, 0556, 0557, 0513, 1009, 0411, 1368, 1422,
0540, 0111, 0119, 0232, 1422, 0415, 0441, 0513,
0372, 0377, 0323, 2317, 0359, 2328, 0460,
2372.
ORLINE TV 0540, 0513.
ORMOND TV 0097, 0513.
ORSION VCR 0272.
ORVICA VCR 2315.
ORSOWE TV 0025.
OSAKA TV 0195.
OSAKI TV 0111, 0195, 0513, 0067, 0262 / VCR 0277,
0272.
OST TV 0075, 0513, 0262 / VCR 0277.
OSO TV 0262.
OSUME TV 0540.
OTAKE TV 0540.
OTHER TV 0513, 0523.
OTHER TV 0513, 0523.
OTTO VERSAND TV 0047, 0067, 0083, 0111, 0114,
1125, 0127, 0133, 0157, 0162, 1637, 0178, 0189,
0191, 0242, 0329, 0422, 0296, 0300, 0310,
0311, 0321, 0326, 0337, 0359, 0391, 0409, 0415,
0418, 0427, 0445, 0435, 0174, 0551, 0540, 0513,
1652, 0495, 0445, 1684 / VCR 0383.
PACIFIC TV 0513.
PAEL TV 0067, 1126, 0096.
PALADIUM TV 0024, 0069, 0080, 0083, 0114, 0448,
0317, 0174, 1637, 0227, 0295, 0359, 0409, 0331,
0540, 0513, 0329, 0422, 0296, 0300, 0310,
0430, 0169, 0272, 2328, 2319, 0372, 0435, 0513,
1652, 0495, 0445, 1684 / VCR 0383.
PALSONIK TV 0322, 0067, 0329, 0302, 0262, 0359 /
VCR 0323, 0372, 0373, 0372, 0373.
PANAMA TV 0067, 0322, 0057, 0540, 0513.
PANASHIBA TV 0359.
PANASONIC TV 0157, 0310, 0439, 0402, 0518, 1371,
1431, 0351, 0052, 0320, 1684, 1685, 1686,

SKREIL TV 0002, 0075, 0082, 0083, 0067, 0137, 0540, 0178, 0162, 0252, 0309, 0431, 0539, 0556, 0116, 0222, 1713, / VCR 2384, 0469, 2356, 0280.

SKAY TV 0540, 0513, 0424.

SKY LINE TV 0411, 0067.

SLAVA TV 0067.

SUDING TV 1549, 0513, 1555, 0556, 1383, 1543, 1453, 2008, 2395, 1496, 4551, 0540, 1569, 1564, 1412.

SMARAGD TV 0549.

SMR TV 0025, 0077, 0513.

SOLARFOX TV 1654, 1713, 0162, 0082, 0230, / VCR 2315.

SOMBER TV 0024, 0025, 0096, 0111, 0204, 0237, 0490, 0540, 0230, 1611.

SONAMEK VCR 0272.

SONICK TV 0513.

SONIKO TV 0540, 0513.

SONITRON TV 0067, 0290, 0539, 0024, / VCR 0277, 2356, 2319.

SONNEK TV 0540, 0513.

SONOR TV 0322, 0359, 0067, 0513, 0505, 0424, 0111, 0557, / VCR 2315, 2356, 0383, 0372, 0469.

SONOLOR TV 0162, 0431.

SONORO TV 0359, 0322, 0111, 0513, / VCR 0372.

SONTEC TV 0359, 1657, 1639, 0513, 0125, / VCR 0277, 0383.

SONY TV 0065, 0149, 0539, 0513, 0785, 1382, 0167, 1672, 0174, 0495, / VCR 2336, 2369, 0065, 0458, 2387, 0494, 0495, 0402, 2202.

SOUND DESIGN TV 1638, 0540, 0322, 0513, 0557, 0114, 0415, 0143.

SOUND DESIGN TV 0547.

SOUNDMASTER TV 0359.

SOUNDVISION TV 0077, 0513, 0262.

SOUNDWAVE TV 0374, 0322, 0513.

SOUTHERN CROSS TV 1614.

SOWTECH TV 1657.

SPARKLE TV 0513.

SPECIAL VCR 0277.

SPECTRA TV 0322, 0513, 0354.

SPECTRUM TV 0547.

SPOR GENEXIA TV 0025, 0067, 0083, 0111, 0114, 0136, 0540, 0196, 0227, 0230, 0322, 0354, 0359, 0455, 0542, 0513, 037, 1639, 1654, / VCR 0277, 0323, 0383, 2315, 2356.

SSANGYONG TV 0064, 0067, 0075, 0082, 0227, 0296, 0313, 0322, 0339, 0375, 0384, 0422, 0453, 0513, 0515, 0542, 0544, 0347, 1309, 0111, 1382, 0556, 0528, 1657, 1658, 2066, 4267, / VCR 0212, 0463, 0271, 0453, 2356.

SSS TV 0359, 0557, 1558, 0513, 0149, 1644, 0322, 0540, / VCR 0478, 0272, 0359.

STAG TV 0064, 0540, 0424, 0282, 0067, 0513, 0359, 0415, 0073, 1420, / VCR 0372.

STANDARD TV 0359, 0060, 0067, 0262, 0513, 0111, 0114, / VCR 2315.

STAR TV 0513.

STARLINE TV 0513.

STARLITE TV 0322, 0359, 1638, 0111, / VCR 0272.

STARLUK TV 0359, 0513, 0067.

START TV 0513.

STASSFURV TV 0024, 0540, 0242, 0359, 0336, 0363, 1615, 0202, 0077, 0311, / VCR 2329, 0372, 2315.

STERNWAY TV 0262.

STERLING TV 0540, 0513.

STERN TV 0062, 0080, 0108, 0153, 0052, 0197, 0242, 0295, 0309, 0428, 0426, 0453, 0222, 0513, 1149, 1181, 0540, 1653, / VCR 0395, 0169, 0404, 0345, 0453, 0377, 0533, 2315, 2351, 0277, 2325, 2388, 0383.

STRATO TV 0540, 0513, 0322.

STROK TV 1432, 1586, / VCR 0272, 0372.

STI SONG TV 0111.

STV TV 0162.

STV TV 0230, 0067.

STV VCR 0272.

SUNIC LINE TV 0513.

SUNKAI TV 0447, 0073, 0513, 0549, 0300, 0195, / VCR 0353.

SUNNY TV 0513.

SUNSTAR TV 0356, 1639, 0322, 0359, 0513, / VCR 0272.

SUNTRONIC VCR 0320.

SUNWATT TV 0111.

SUNWOD TV 0313, 0359, / VCR 0372.

SUPERB TV 0230, 0202, 0513, 0359.

SUPERSONIC TV 0359, 0544, 1637, 0415, 0513, 0561, 0196, 0322, / VCR 0345.

SUPERTECH TV 0359, 0513, 0415, 0474, 0262, 1638, 1453, 0298, / VCR 0272, 0212.

SURFONTO TV 0025, 0067, 0114, 0204, 0237, 0435, 0230.

SUPRA TV 0359, 0354, 0322, 0329, 0547, 0067, 0422, / VCR 0277, 0383, 0372, 0122, 2364.

SUPREME TV 0136, 0060.

SUTTON TV 0359.

SVA TV 0561.

SYC LINE TV 0067, 0359.

SYDNEY TV 0067.

SYNCHRO VCR 2384, 0345, 0272.

SYMPHONIC VCR 2384, 0345, 0272.

SYSLINE TV 0540, 0513.

TACTIS TV 0246, 0114, 0025, 0230, 0359, 0513.

TACTUS VCR 0212.

TADISTAR TV 0374, 0262.

TAISHO TV 0230.

TAKARA TV 0513.

TALITA TV 1085.

TALITA TV 0024, 0025, 0096, 0111, 0204, 0237, 0490, 0540, 0322, 1611.

TAMASHI TV 1323.

TANDBERG TV 0024, 0050, 0092, 0094, 0195, 0246, 0295, 0349, 0222, 1628, / VCR 2328, 2351.

TANDY TV 0083, 0080, 0067, 0262, / VCR 0277, 0372.

TASHIRO TV 0080, / VCR 0333, 0272, 0372.

TASTICK TV 0111, 0322, 0262.

TATUNG TV 0246, 0067, 0111, 0375, 1637, 0254, 0945, 0242, 0513, / VCR 0272, 0169, 2305.

TAUTO TV 0513.

TCL TV 0540.

TCM TV 0561.

TD DESIGN TV 1637.

TD TV 0540, 0557.

TEAC/TEAC TV 1637, 1607, 0391, 0544, 0561, 0222, 0359, 1592, 0111, 0047, 1269, 0513, / VCR 0272, 0169.

TEAM TV 0424.

TEC TV 0047, 0057, 0097, 0111, 0067, 0125, 0133, 0141, 0153, 0052, 0162, 0196, 0540, 0222, 0298, 0312, 0329, 0354, 0359, 0391

UNIVERSAL

Compatible avec la majorité des marques

BY  **METRONIC**

ZAP 2
EVOLUTION 4







495304
495305

MET804



FR	ASSISTANCE TECHNIQUE : Tél. 0892 350 315 (0,34€ TTC la minute depuis un poste fixe)
GB	UK E-MAIL ADDRESS : info@metronic.com
NL	HOTLINE : Tél. +32 (0)4 264 86 68
ES	HOTLINE : Tél. +34 (0)93 865 22 38
PT	HOTLINE : Tél. 00 351 707 200 550
IT	HOTLINE : Tél. +39 (0)2 94 94 36 91
GR	HOTLINE : Tél. 210 883 6512
PL	HOTLINE : Tél. +48 (0)603 38 98 41

1,5 V 1,5 V



2 x 1,5V / LR3 (AAA)

FR - Non incluses
 GB - Niet meegeleverd
 NL - Niet meegeleverd
 ES - No incluidas
 PT - Não incluidas
 IT - Non incluso
 GR - Δεν συμπεριλαμβάνεται
 PL - Nie załączone







