
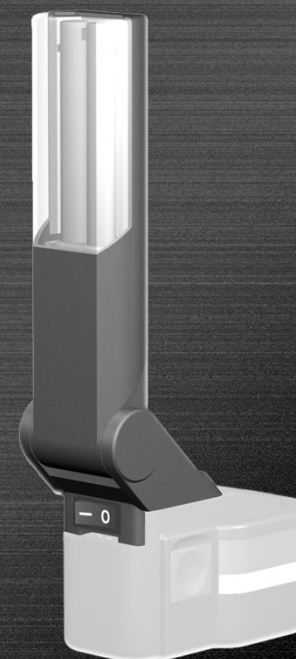



AEG

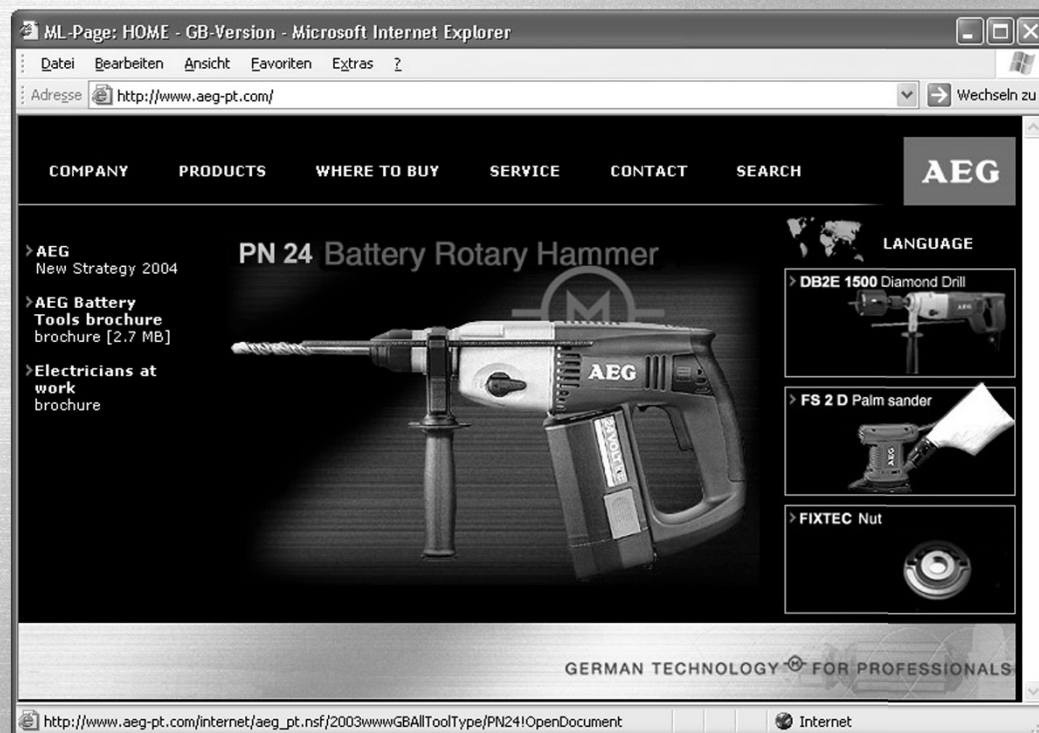

PL Option 7,2-14,4 v

Instructions for use
 Gebrauchsanleitung
 Instruction d'utilisation
 Istruzioni d'uso
 Instrucciones de uso
 Instruções de serviço
 Gebruiksaanwijzing
 Brugsanvisning
 Bruksanvisning
 Käyttöohje
 Οδηγίες χρήσεως
 Kullanım kılavuzu

Návod k používání
 Návod na používanie
 Instrukcja obsługi
 Kezelési útmutató
 Navodilo za uporabo
 Upute o upotrebi
 Lietošanas pamācība
 Naudojimo instrukcija
 Kasutamisujuhend
 Инструкция по использованию
 Упътване за експлоатация
 使用指南

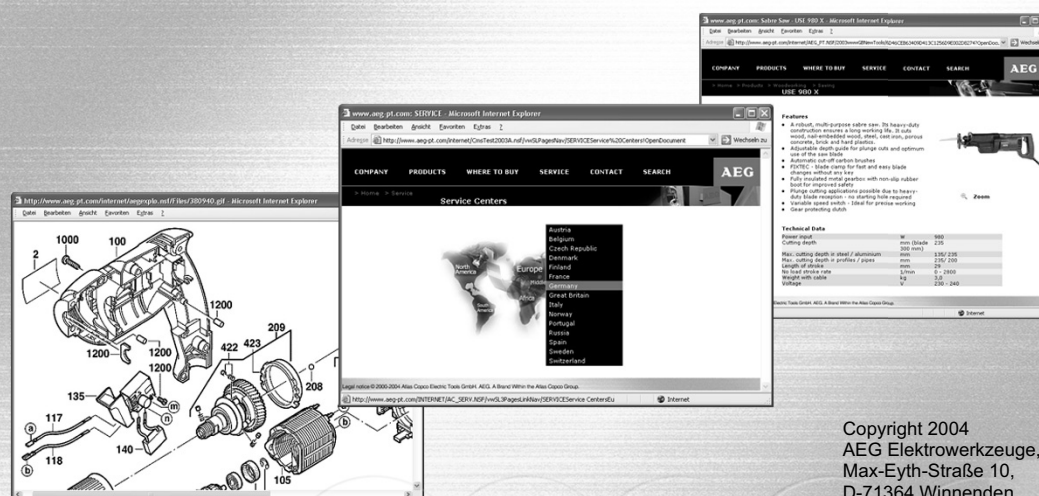


(11.04)
 4000 2891 27



Copyright 2004
 AEG Elektrowerkzeuge,
 Max-Eyth-Straße 10,
 D-71364 Winnenden,
 Germany
 +49 (0) 7195-12-0
 www.aeg-pt.com


www.aeg-pt.com

1

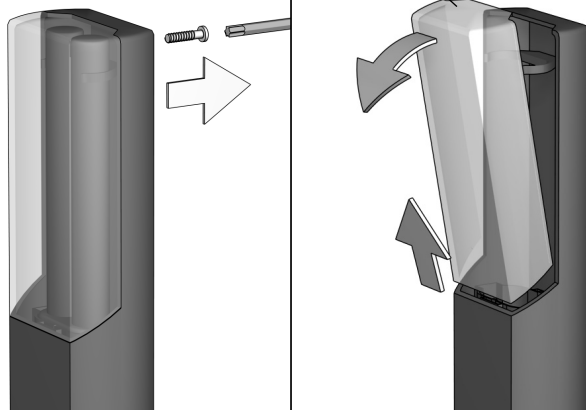

4931 3904 83



2

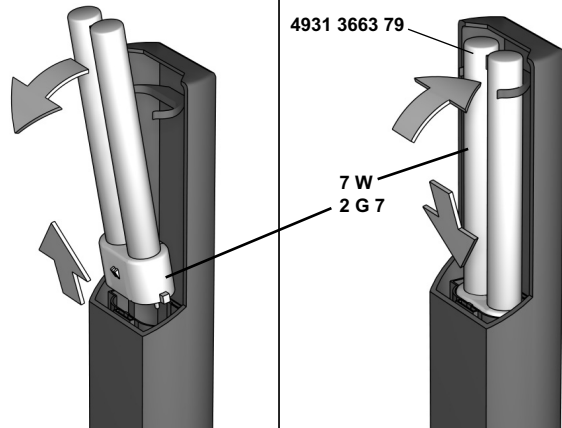

4931 3663 79

7 W
2 G 7

3

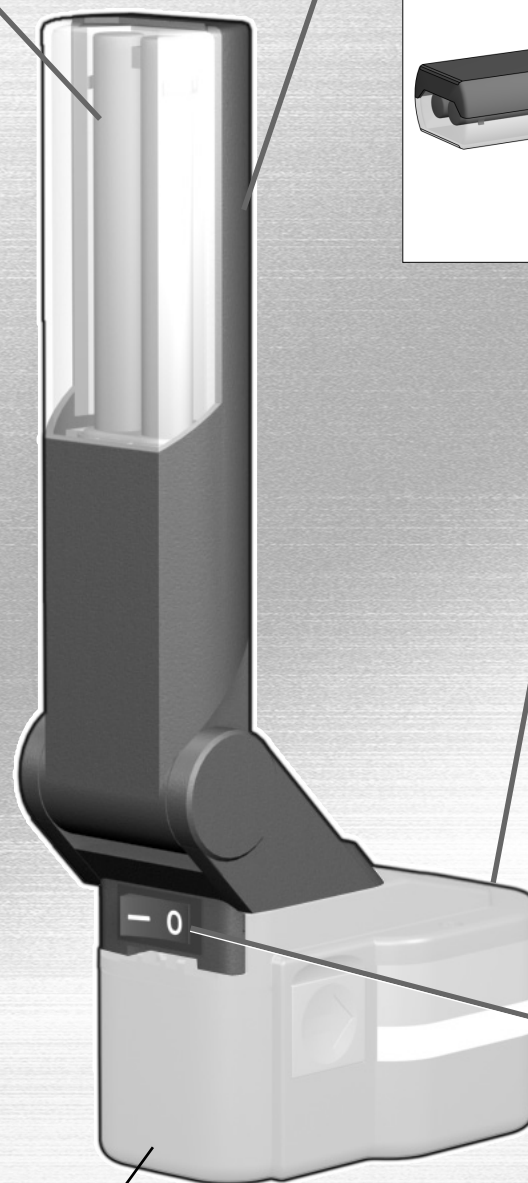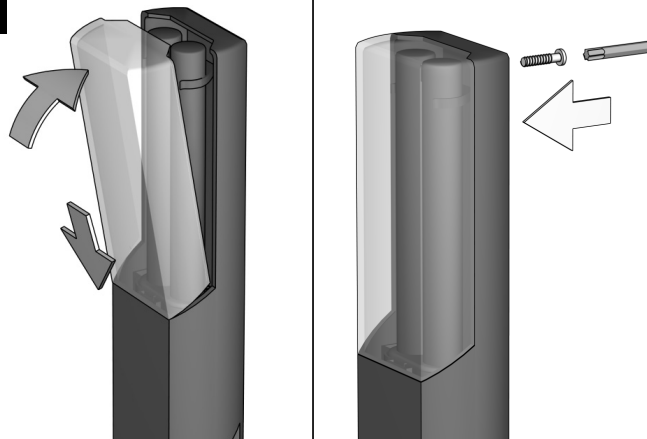


Accessory
Zubehör
Accessoire
Accessorio
Accessório
Toebehoren
Tilbehør
Tilbehør


Tilbehør
Lisälaite
Εξοπλισμός
Akseuar
Příslušenství
Príslušenstvo
Element wyposażenia
dodatkowego
Tartozék

Oprema
Pribor
Papildus aprīkojums
Priedas
Tarvikud
Дополнитель
Аксесоар
配件

1

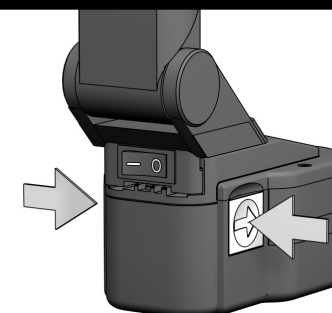


2

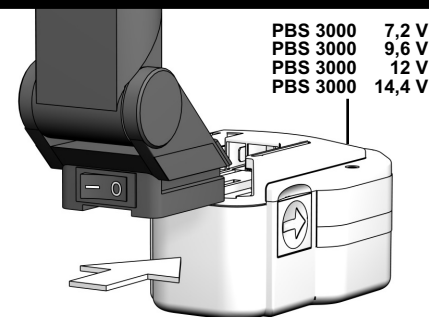

PBS 3000 7,2 V
PBS 3000 9,6 V
PBS 3000 12 V
PBS 3000 14,4 V

I ON
0 OFF

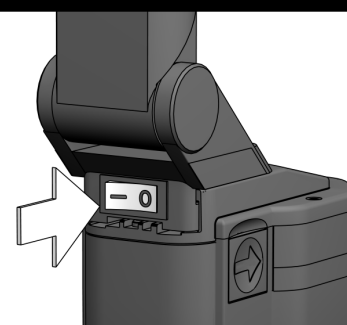

2

3