

Fold 3
vertical
"Z" fold

Fold 4
vertical
"Z" fold

InstantFM Music

Personal FM and Web Radio Recorder

English / French / German / Spanish / Portuguese

North America **Support Hours**

Phone: 562-926-4338

M-F: 8:00 am - 5:00 pm, PST

www.adstech.com

Support: www.adstech.com/support/support.asp

ADS Tech

North America Office

Cerritos, CA 90703, USA

Fax: 562.926.0518

European Office

Unit 18, Shannon Industrial Estate

Shannon Co. Clare, Ireland

Phone: +353.61.702042

Fax: +353.61.702001

Southern Europe and MEA Office

51-55 rue Hoche

94200 Ivry sur Seine, France

Phone: +33 1.43.90.19.20

Fax: +33 1.46.58.67.06

 
Hardware/Software **Installation**




Quick Guide

RDX-155-589


5. Remember to select your Instant FM Music as your Recording Device.

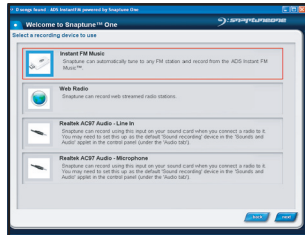

 6. For more detailed information, open the User Guide available on the Installation CD by clicking the Help button.

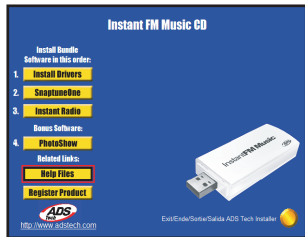

 7. To start your first recording click the Record tab and Add a New recording schedule or tune to a radio station and click the Red Button.

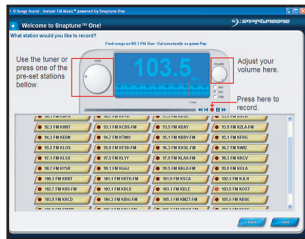


English


5. N'oubliez pas de sélectionner Instant FM Music comme périphérique d'enregistrement.



 6. Pour en savoir plus, ouvrez le Guide de l'utilisateur inclus dans le CD d'installation en cliquant sur le bouton « Help ».

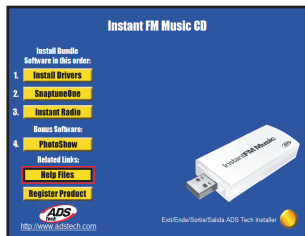



 
7. Pour lancer votre premier enregistrement, sélectionnez une station et cliquez sur le bouton rouge.

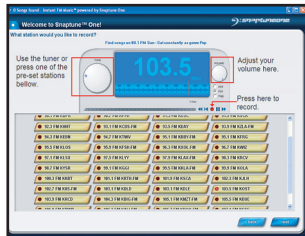

Français

Hardware Installation

 
 
 
1. Connect the 6 inch USB extension cable to the Instant FM Music device.
2. Plug the other end of the USB cable to an available USB port on your PC.
3. The system will automatically load drivers in preparation for use of this device.
4. Check your Device Manager for proper device installation.
 - a. Right-click "My Computer" and select "Properties."
 - b. Go to the "Hardware" tab.
 - c. Click "Device Manager."
 - d. This device adds the following components:
 - Human Interface Devices/HID-compliant device.
 - Human Interface Devices/USB Human Interface Device.
 - Sound, video and game controllers/USB Audio Device.
5. The device is ready to use.
6. Insert the CD and install the software provided.

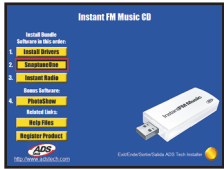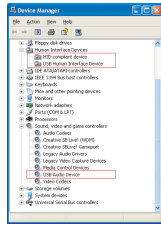

English

Guide rapide d'installation du matériel

   1. Branchez la rallonge USB 15 cm au périphérique Instant FM Music.
2. Branchez l'autre extrémité du câble à un port USB libre sur votre PC.
3. Le système chargera automatiquement les pilotes permettant d'utiliser ce périphérique.
4. Vérifiez la bonne installation du périphérique en consultant le « Gestionnaire de périphériques ».
 - a. Faites un clic droit sur « Poste de travail » et sélectionnez « Propriétés ».
 - b. Cliquez sur l'onglet « Matériel ».
 - c. Cliquez sur « Gestionnaire de périphériques ».
 - d. Ce périphérique ajoute les éléments suivants :
 - Périphériques d'interface utilisateur/Périphérique compatible HID.
 - Périphériques d'interface utilisateur/Périphérique d'interface utilisateur USB.
 - Contrôleur audio, vidéo et jeu/Périphérique audio USB.
5. Ce périphérique est prêt à l'utilisation.
6. Insérez le CD et installez le logiciel fourni.

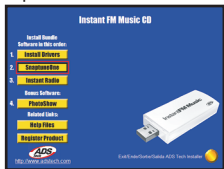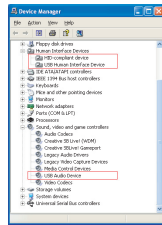

Français

Service and Warranty

Service:

If you require assistance with the installation, operation, or application of your ADS Technologies, Inc. product the best option available to you is our website at www.adstech.com. Your primary source for information and assistance is always your computer store or computer parts dealer. If your ADS product needs repair or replacement, contact your dealer for on-site repair service.

The ADS Technologies technical support and customer service staff can aid in solving many problems. Our technical support department is available to repair any ADS Technologies product. You or your dealer must return products to our factory for repair or warranty replacement.

Return/Replacement:

If you need to return your ADS Technologies product you should return the product directly to the dealer or store where you purchased the product. Each individual computer store or dealer sets product returns policies for their customers. ADS Technologies, Inc. cannot be responsible for the actions or policies set by our dealers. If you desire to return the product for a refund, you must get the refund from the dealer or store you purchased the product from. If you purchased the product directly from ADS please see the "Terms and Conditions of Sale" on the reverse side of your sales invoice.

Returns to ADS Technologies, Inc. are for repair or warranty replacement only. If you need to return product to ADS Technologies, Inc. for repair or replacement you must follow these steps:

1. Call our Technical Support department at (562) 926-4338 in the USA or +353-61-702042 in Europe to obtain a Return Merchandise Authorization (RMA) number.
2. The RMA number is valid for 30 days.
3. Ship the product to the ADS factory with the RMA number marked on the inside and outside of the package. If there is no RMA number on the package or the RMA number has expired, the shipment will be refused. ADS will not be liable for lost or mis-shipped products.
4. Replacement product cannot be shipped to you until the defective product has been received by ADS.
5. Once the product is received at the factory it will be tested and then repaired or replaced.
6. Turn around time is approximately one week. A repaired or replacement product will be shipped back to you.

Warranty:

This ADS Technologies, Inc. product comes with a One (1) year hardware warranty. ADS Technologies, Inc. (ADS) warrants this product against defects in material and workmanship for a period of One (1) year from the date of original purchase from ADS or an authorized ADS dealer. This warranty applies only to the original purchase of the product and is not transferable. This warranty does not cover any incompatibilities due to the user's computer, hardware, software or other related system configuration in which the product interfaces. Proof of purchase will be required before any warranty consideration by ADS occurs.

This warranty does not cover any damage caused by negligence, non-authorized modifications, or parts installed without prior written permission from ADS. This warranty does not apply if the product has been damaged by accident, abuse, or misapplication, nor as a result of service to the product by anyone other than ADS. If your ADS product is not in working order, your only recourse is repair or warranty replacement, as described above. UNDER NO CIRCUMSTANCES will ADS Technologies, Inc. be liable for consequential damages, including but not limited to any lost savings, lost profits, or any other damages, caused by the use of any ADS Technologies, Inc. product or inability to use the product, even if the dealer or ADS Technologies, Inc. has been advised of such liability or other claims. This includes damage to property and, to the extent permitted by law, damages for personal injury. This warranty is in lieu of all other warranties including implied warranties of merchantability and fitness for a particular purpose.

Software Installation

 
1. In the SnapTune One Software installation, follow the instructions provided on each installation screen.
2. Make sure your Instant FM Music device is plugged in to a USB Port. See Step 4 of Hardware Installation.
3. After the installation completes, you can start the SnapTune One application.
4. The first time you run SnapTune One, a guide will help you get started. Follow the instructions on the screen.



English

Guide rapide d'installation du logiciel

1. Pour installer le logiciel SnapTune One, suivez les instructions affichées sur chaque écran d'installation.
2. Vérifiez que votre périphérique Instant FM Music est bien branché à un port USB.
3. Une fois l'installation terminée, vous pouvez lancer l'application SnapTune One.
4. La première fois que vous lancez SnapTune One, un assistant apparaît pour vous guider. Suivez les instructions affichées à l'écran.

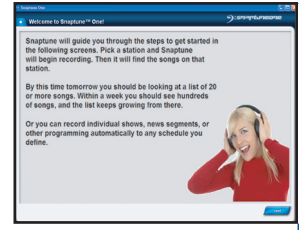

Français

FCC Information

Federal communications Commission Radio Frequency Interference Statement

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio TV technician for help.

Notice:

- (1) The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- (2) Shielded interface cables and AC power cord, if any, must be used in order comply with the emission limits.

© 2006 ADS Technologies. All Rights Reserved
First Edition: August, 2006

ADS is a registered trademark of ADS Technologies Inc. ADS Technologies (ADS) makes no warranty of any kind with regard to this material, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The information furnished within this written document is for information purposes only and is subject to change without notice. ADS Technologies assumes no responsibility or liability for any errors or inaccuracies that may appear herein. ADS Technologies makes no commitment to update or to keep current information contained within this document.

Fold 1
horizontal
"Z" fold

Fold 2
horizontal
"Z" fold


Fold 3
vertical
"Z" fold

Schnellanleitung Hardware-Installation



1. Schließen Sie das 15 cm-USB-Verlängerungskabel an das Instant FM Music Gerät an.
2. Stecken Sie das andere Ende des USB-Kabels in eine verfügbare USB-Buchse auf Ihrem PC.



 3. Das System lädt die Treiber für den Einsatz dieses Gerätes automatisch.



  
4. Überprüfen Sie die richtige Geräteinstallation im Gerätemanager.
 - a. Mit der rechten Maustaste „Systemsteuerung“ anklicken und „Eigenschaften“ wählen.
 - b. Selektieren Sie die Karteikarte „Hardware“.
 - c. Klicken Sie auf „Gerätemanager“.
 - d. Dieses Gerät fügt folgende Komponenten hinzu:
 - Eingabegeräte\HID konformes Gerät.
 - Eingabegeräte\USB Eingabegerät.
 - Audio-, Video- und Gamecontroller\USB Audiogerät.
5. Das Gerät ist einsatzbereit..
6. Legen Sie die CD ein und installieren Sie die mitgelieferte Software.

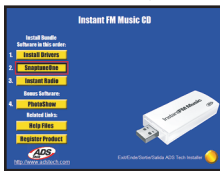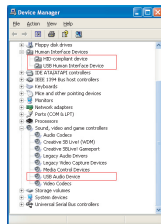

Deutsch

Schnellanleitung Software-Installation

 1. Bei der Installation der Snaptune One Software führen Sie die Anweisungen in den einzelnen Installationsbildschirmen aus.
2. Stellen Sie sicher, dass Ihr Instant FM Music Gerät an eine USB-Buchse angeschlossen ist.
3. Wenn die Installation abgeschlossen ist, können Sie die Snaptune One Anwendung starten.
4. Ein Leitfaden begleitet Sie beim ersten Aufruf von Snaptune One. Führen Sie die Anweisungen am Bildschirm aus.

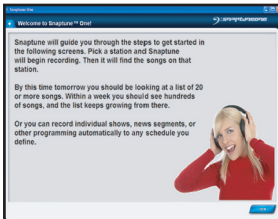


Deutsch

Fold 4
vertical
"Z" fold


5. Vergessen Sie nicht, Instant FM Music als Aufnahmegerät zu selektieren.



 6. Genauere Informationen finden Sie im Benutzerhandbuch, das sich auf der Installations-CD befindet und durch Anklicken der Hilfe-Taste geöffnet wird.

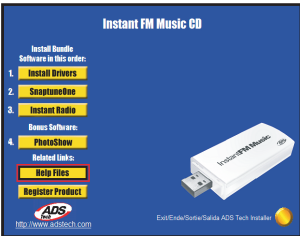

 7. Um die erste Aufnahme zu starten, den gewünschten Sender wählen und die rote Taste drücken.

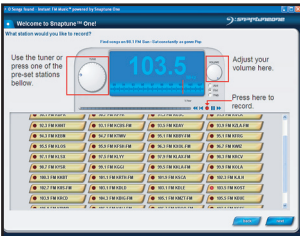



Deutsch

Guía rápida de instalación del hardware

1. Conecte el cable de extensión USB de 15 cm al dispositivo Instant FM Music
2. Enchufe el otro extremo del cable USB a un puerto USB disponible en el PC.



  
3. El sistema cargará automáticamente los controladores en preparación para el uso de este dispositivo.
4. Compruebe a través del administrador del dispositivo que el dispositivo se ha instalado correctamente.
 - a. Haga clic con el botón derecho del ratón en "Mi ordenador" y seleccione "Propiedades."
 - b. Vaya a la pestaña "Hardware".
 - c. Haga clic en "Administrador del dispositivo."
 - d. Este dispositivo añade los siguientes componentes:
 - Dispositivos de interfaz del usuario/Dispositivo cumple HID.
 - Dispositivos de interfaz de usuario/Dispositivo USB de interfaz de usuario.
 - Controladores de sonido, vídeo y juego/Dispositivo de audio USB.
5. El dispositivo está listo para ser usado.
6. Introduzca el CD e instale el software incluido.

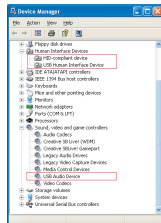

Español

Guía rápida de instalación del software

 1. En el software de instalación Snaptune One, siga las instrucciones que ofrece cada pantalla de instalación.
2. Compruebe que el dispositivo Instant FM Music está conectado al puerto USB.
3. Después de completar la instalación, puede iniciar la aplicación Snaptune One.
4. La primera vez que ejecute Snaptune One, encontrará una guía que le ayudará a empezar. Siga las instrucciones que se ofrecen en pantalla.

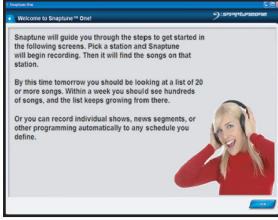


Español


5. Recuerde que debe seleccionar Instant FM Music como el dispositivo de grabación.



 6. Si desea información más detallada, abra la Guía de usuario disponible en el CD de instalación haciendo clic en el botón de ayuda.

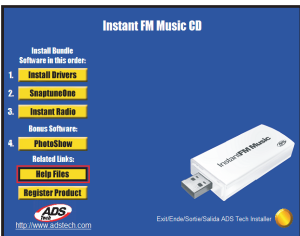

 7. Para empezar la primera grabación, sintonice y haga clic en el botón rojo.

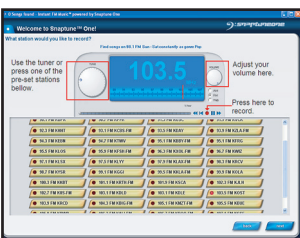




Español

Guia rápido de Instalação de Hardware

1. Conecte o cabo de extensão USB de 15 cm ao seu dispositivo Instant FM Music.
2. Conecte o outro extremo do cabo a uma entrada USB disponível no seu PC.



   
3. O sistema instalará automaticamente os drivers para a utilização do dispositivo.
4. Confirme através do Gerenciador de Dispositivos de que o dispositivo foi instalado corretamente.
 - a. Clique com o botão direito do mouse em "Meu Computador", clique "Propriedades".
 - b. A seguir clique guia de "Hardware".
 - c. A seguir clique na opção "Gerenciador de Dispositivos".
 - d. Este dispositivo é adicionado no seguinte grupo:
 - Human Interface Devices\HID-compliant device.
 - Human Interface Devices\USB Human Interface Device.
 - Controladores de som, vídeo e jogo\USB Audio Device.
5. O dispositivo está pronto para uso.
6. Insira o CD e instale o software incluído.

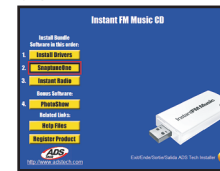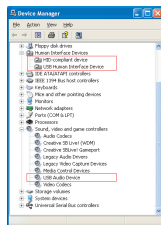

Portuguese

Guia rápido de Instalação de Software

 1. Na instalação do software Snaptune One, siga as instruções disponíveis em cada tela.
2. Certifique-se de que o dispositivo Instant FM Music esta conectado corretamente na entrada USB.
3. Após completar a instalação, você pode iniciar o software Snaptune One.
4. A primeira vez que executar o program Snaptune One, um guia de auxílio te ajudará a fazer a configuração. Siga as instruções em cada tela.

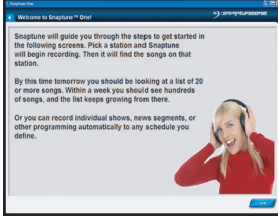


Portuguese


5. Lembre de selecionar o Instant FM Music como Dispositivo de Gravação.



 6. Se precisar de informação mais detalhada, abra o Guia de Usuário disponível no CD de Instalação fazendo um clic no botão "Help".

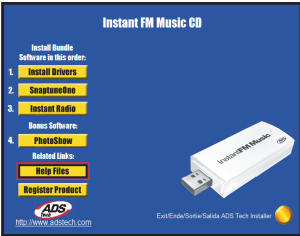

 7. Para iniciar usa primeira gravação, sintonize e faça um clic no botão vermelho para gravar.

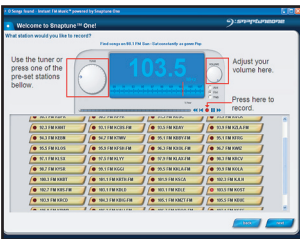

Portuguese

Fold 1
horizontal
"Z" fold



Fold 2
horizontal
"Z" fold

