

INSTRUCTIONS FOR USE

**INSTALLATION INSTRUCTIONS
BEFORE USING THE APPLIANCE
PRECAUTIONS AND GENERAL ADVICE
ENERGY SAVING TIPS
OVEN ACCESSORIES
CLEANING AND MAINTENANCE
TROUBLESHOOTING GUIDE
AFTER-SALES SERVICE**

For best use of the oven, carefully read the operating instructions and keep them for future consultation.

 
 
INSTALLATION INSTRUCTIONS

Electrical connection

Before connecting the appliance, make sure:

1. the mains voltage in your home matches that specified on the appliance dataplate;
 2. the electrical system adequate for appliance max. power absorption specified on the dataplate;
 3. the house electrical system is suitably earthed.
- **Connect the appliance to the power supply by means of a suitable disconnecting switch with min. contact opening distance allowing complete disconnection in category III overvoltage conditions, in compliance with the installation regulations.**

Notes: After installation, the electrical components must only be accessible with the use of a special tool. The power cable must be H05VV-F type and electric connections must be in compliance with below electric information.

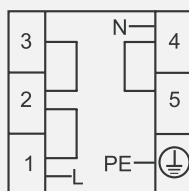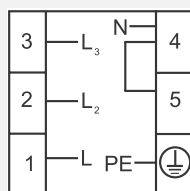

3 x 2.5 mm ² 220 V ~ 50 Hz	5 x 1.5 mm ² 380 V ~, 3N 50 Hz
3 x 2.5 mm ² 230 V ~ 50 Hz	5 x 1.5 mm ² 400 V ~, 3N 50 Hz
3 x 2.5 mm ² 240 V ~ 50 Hz	5 x 1.5 mm ² 415 V ~, 3N 50 Hz

Instructions for the installer

Warning

- **Disconnect the appliance from the power supply before carrying out any repairs or operation.**
- **Installation must be carried out by a qualified technician, in compliance with the current safety regulations.**
- **The appliance must be earthed.**

The Manufacturer declines any liability for injury or damage to people or property due to non-compliance with the above-mentioned regulations. The appliance dataplate is located at the bottom right of frame of the oven cavity and visible with the door open. Adjustment conditions are given on a label on the packing. Do not use the oven door for handling operations, or for removing the appliance from the packing.

ELECTRICAL CONNECTION AND SAFETY

For the electrical connection, make sure to follow the instructions given below:

- The earth wire must be connected to the earth terminal (⏚). If there is no approved earthed electrical outlet in the place where the appliance is to be installed, immediately contact to our Authorised Service.
- The earthed electrical outlet must be close to the appliance. Do not use extension cords.
- The power cable must not touch hot parts of the product.
- If the power cable is damaged, contact a Qualified Service Centre. The cable must be replaced by the Authorised Service.
- An incorrect electrical connection could damage your appliance. Such damage is not covered by the warranty.
- The appliance is arranged for a 230 Volt power supply. If the power supply voltage is different, immediately contact to our authorised service.

The power cable must not touch hot parts of appliance, otherwise it may become damaged.

This situation could cause short circuiting.

The manufacturer declines any liability for damage and loss due to failure to comply with the following safety regulations.

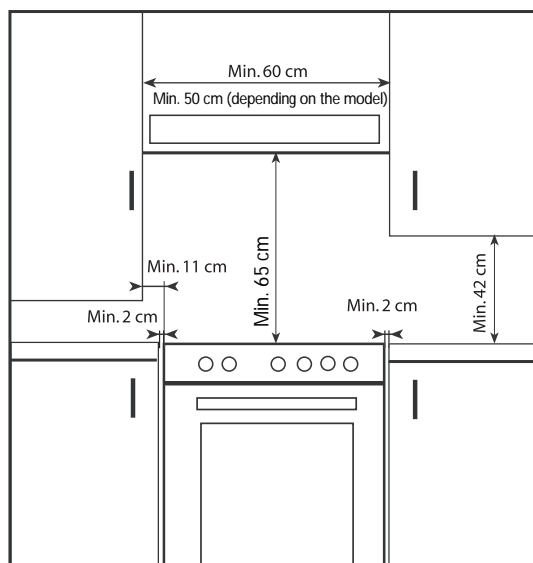 


Fig. 1

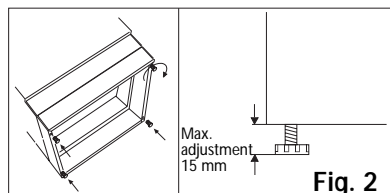 


Fig. 2

Installation

Important: The covering of the cabinets must be in heat resistant (min. 90°C) material.

If the appliance is installed next to kitchen cabinets, ensure the minimum clearances indicated in the following figure.

There are certain points to pay attention to when positioning the cooker. Make sure to take into consideration the following recommendations, in order to prevent any problems and hazardous situations that may occur!

The cooker can be positioned near other cabinets provided their height does not exceed the hob level.

In selecting a position for the cooker, make sure the appliance is not placed next to a refrigerator and that there are no flammable or combustible materials in the vicinity, such as curtains, etc. which can quickly catch fire.

A minimum space of 20 mm between the metal rear cover of the cooker and the wall is required to ensure air circulation.

If the counter tops are higher than hob level, they should be at least 110 mm from the sides of the cooker.

To fit them, tilt the appliance and screw the 4 feet in the special threads located in the corners (see Fig. 2).

Connecting the appliance to the power supply

Open the terminal board (see Fig. 3), unscrew the cable clamp screw.

- Strip approx. 70 mm. of the cable sheath from the power supply cable
- Strip approx. 10 mm. of sheath from the conductors
- Insert the cable into the cable clamp and connect the conductors to the terminal block as indicated in the diagram printed on the label close to the main box
- Secure the power cable by means of the cable clamp
- Close and refit the main box plastic cover



Fig. 3


NOTE: the yellow-green earth wire must be connected to the screw with symbol \perp .

BEFORE USING THE APPLIANCE

- Remove the accessories from the oven and heat it at 200°C for about two hours to eliminate the smell of protective grease and insulating materials. Keep the window open during this operation.
- Before use, remove:
 - stickers located on the front of the appliance and on the oven door, except the dataplate;
 - cardboard protection and protective plastic film on the control panel and other parts of the appliance;
 - any stickers on the accessories (e.g. under the drip-tray).




1. Packing

The packing material is completely recyclable, and is marked with the recycling symbol , which identifies it as a type of material that must be sent to local waste-disposal centres.

2. Product

This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is correctly scrapped, the user can help prevent potentially harmful consequences for the environment and the health of people.

The  symbol on the appliance or accompanying documentation indicates that this product must not be treated as household waste, but must be taken to a collection centre for the recycling of electrical and electronic appliances.

Disposal must be carried out in accordance with the local environmental regulations on waste disposal.

For more detailed information about the treatment, recovery and recycling of this product, please contact your competent local authority, the household waste collection service or the shop where you purchased the appliance.

PRECAUTIONS AND GENERAL ADVICE

- The appliance is designed solely for domestic use for cooking food. No other use is allowed. The Manufacturer declines all liability for inappropriate use or incorrect setting of the controls.
- Any repairs or adjustments must be carried out exclusively by a qualified technician.
- Never expose the oven to atmospheric agents.
- Do not place heavy objects on the door as they could damage the oven compartment and hinges. Do not cling to the door.
- Do not hang anything heavy on the oven door handle.
- **Do not cover the oven floor with aluminium foil or other objects.**
- The oven door must close properly. The door seals must be kept clean.
- Do not pour water directly inside a hot oven. The enamel coating could become damaged.
- Fruit juice dripping from the baking tray may leave permanent stains. It is advisable to clean the appliance before reusing it.
- To prevent the oven coating from being scratched, do not drag pots and pans across the bottom of the oven.
- The accessible parts of the appliance may become very hot during use. Keep children away.
- Never use abrasive materials or substances to clean the GLASS, as they could damage it.
- The unit becomes very hot during use. Do not touch the heating elements in the oven.
- Residual condensation after cooking could eventually damage the oven and surrounding kitchen units. We recommend that you:
 - set the lowest temperature;
 - cover food;
 - remove food from the oven;
 - dry wet parts when the oven is cool.
- **Caution: The front panel and oven door handle become hot when the appliance is used for a long time at high temperatures.**
- Do not touch the appliance with wet parts of the body or use it when barefoot.
- Do not pull the appliance or the power cable to unplug it.
- **Do not allow children to touch:**
 - the controls and the appliance in general, especially during and immediately after use: risk of injury;
 - packing (bags, polystyrene, metal parts, etc.);
 - any appliance to be scrapped.
- The appliance is not intended for use by children or persons with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are under the supervision of or instructed in its use by a person responsible for their safety.
- Make sure the electrical cables of any other appliances used near the oven do not touch hot parts or get caught in the oven door.
- Do not place flammable materials in the oven or nearby, due to the risk of fire if the oven is inadvertently switched on.
- Use oven gloves to remove pans and accessories when the oven is hot.
- If alcoholic beverages (e.g. rum, cognac, wine, etc.) are added when roasting or baking cakes, etc., remember that alcohol evaporates at high temperatures. Vapours released by the alcohol may catch fire on coming into contact with the electrical heating element.
- Do not heat or cook foods in closed containers. The pressure created inside could cause them to explode, damaging the oven.
- Do not use containers made of synthetic material for cooking (except for packages specifically designed for this purpose; see the manufacturer's instructions). They could melt at high temperatures.
- Always pay attention when cooking with oil and grease. Oil and fat can overheat and catch fire!
- Never pull out fully loaded shelves. Use extreme caution.

DECLARATION OF CONFORMITY

- **This appliance is suitable for contact with foodstuffs and complies with EEC (EC) Regulation no. 1935/2004.**
- **This appliance is designed for cooking only. Any other use (e.g. for room heating) is deemed improper and potentially dangerous.**
- **This appliance has been designed, manufactured and marketed in compliance with:**
 - the safety objectives of Low Voltage Directive 2006/95/EC (which replaces 73/23/EEC as amended).
 - the protection requirements of EMC Directive 89/336/EEC;
 - the requirements of Directive 93/68/EEC.

ENERGY SAVING TIPS

- The cooking hob is equipped with cooking zones and hotplates of different diameters (depending on the model). Use pots and pans whose bottom diameter is equal to that of the hotplate/cooking zone, or slightly larger.
- Only use flat-bottomed pots and pans.
- Pots and pans must not protrude over the control panel.
- If possible, keep pans covered when cooking.
- Cook vegetables, potatoes, etc. with a small amount of water in order to reduce cooking time. Using a pressure cooker will further reduce energy consumption and cooking time

OVEN ACCESSORIES

The accessories supplied depend on the model. The accessories provided with the oven are listed in the Product Description Sheet provided separately (under Accessories).

Wire shelf (1)

The wire shelf can be used to grill food or as a support for baking trays, cake tins and other cooking containers. It can be placed on any of the runners in the oven.

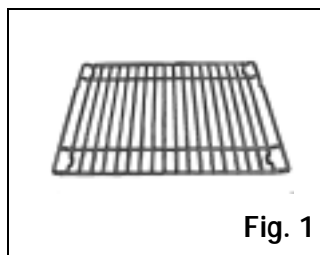 


Fig. 1

Baking tray (2)

For baking biscuits, cakes and pizzas.

This tray can also be used for collecting fat and any scraps of food when placed under the grill; pour a little water in the drip-tray to prevent spatters of fat and smoke.

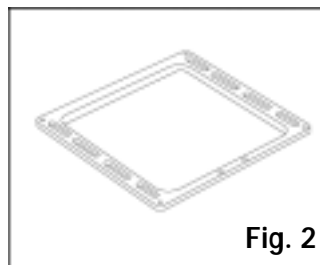 


Fig. 2

Turnspit (3)

Use the turnspit as indicated in the relevant chapter in the Product Description Sheet supplied separately.

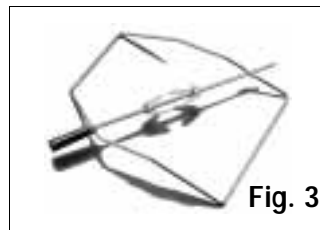 


Fig. 3

Drip tray (4)

Used for collecting fat and any scraps of food when placed under the grill, pour a little water into the drip tray to prevent spatters of fat and smoke.

The drip tray can be used as a container for cooking meat, chicken and fish with or without vegetables.

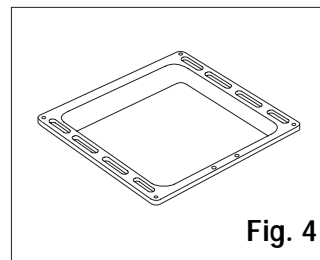 


Fig. 4

CLEANING AND MAINTENANCE

Disconnect the appliance from the power supply before carrying out any cleaning operation.

- Clean using a cloth moistened with warm soapy water or diluted liquid detergent.
- Do not use abrasive, corrosive or chlorine products, or steel wool.
- Do not use steam cleaners.
- Do not use flammable products.
- Do not leave acid or alkaline substances such as vinegar, salt, lemon juice, etc., on the hob.

Stainless steel surface

- Clean with a specific commercial product.

Cleaning the electric hotplates (depending on the model)

- The electric hotplates must be cleaned when they are lukewarm.
- Wipe them with a cloth moistened with water and salt, and polish with a cloth moistened with oil.

Cleaning the glass-ceramic cooktop

It is good practice to clean the cooktop after each use. Always wait for the cooktop to cool completely before cleaning. This will prevent the build-up of dirt and make cleaning easier.

Important: never clean the appliance using steam cleaning equipment.

- Use a clean cloth, absorbent kitchen wipes and washing up liquid or a specific glass-ceramic cleaner.
- Remove difficult to remove dirt with the supplied scraper tool and specific cleaning products.
- Food spills should be cleaned off before they bake onto the glass-ceramic surface.
- Foods with high sugar content (toffee, fruit juice, jam, etc.) that boil over while cooking, or spattered sugar stains must be removed immediately using a scraper.
- Do not use abrasive products, bleach, oven-cleaner spray or metal pan scourers.
- The cooktop should be treated periodically with a proprietary brand of protective wax for glass-ceramic surfaces.

Oven cleaning

- After cooking, wait for the oven to cool then clean it to prevent the accumulation of cooking residuals.
- For stubborn grime, use a specific oven cleaning product, following the instructions given on the package.
- Clean the outside of the oven with a sponge and lukewarm water.
- **Do not use abrasive products or steel wool.**
- Clean the door glass with a liquid detergent.
- Soak the accessories in water with washing up detergent immediately after use. Food residues can be easily removed using a brush or sponge.

Removing the side grids (depending on models)

Grip the bottom part of the side grids and pull towards the middle of the oven. Lift upwards to completely remove.

Pull the side grid as shown in the picture (fig. 1). After releasing it from clips, lift up.

Carry out the above steps in reverse order to refit the side grid.

Caution: After cleaning, be sure that the grids are fitted in their original sides. The notches on the grids must be close to the front, not rear.

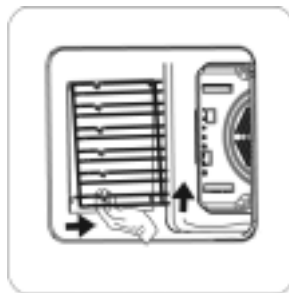 


Fig. 1

Removing the door

Caution: When carrying out the following operations it is advisable to wear protective gloves. Carefully follow these instructions to prevent injury and/or damage to the oven door and hinges.

Pay attention to the oven door hinges: risk of injuring hands!

DETAIL A

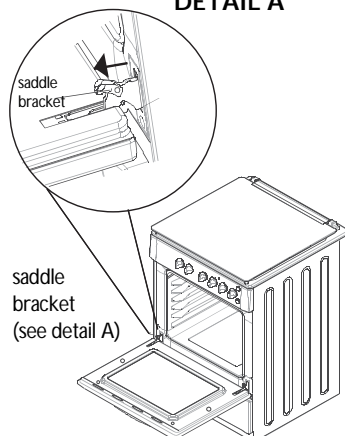 


Fig. 2

Open the oven door

Fully open the saddle brackets

While opening the saddle brackets, use a metal tool such as handle side of a spoon for easy opening.

Close the door almost completely (Fig. 3), and remove by pulling it outwards.

NOTE: Proceed in reverse order to refit the door. Make sure the saddle brackets are lowered before closing the oven door.

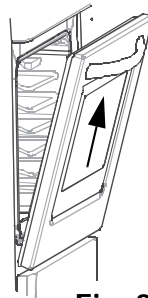 


Fig. 3

Replacing the rear oven lamp:

1. Disconnect the oven from the power supply.
2. After the oven has cooled down, unscrew (anticlockwise) the lamp cover **A** (Fig. 4).
3. Replace the lamp (see note).
4. Refit the lamp cover.
5. Reconnect the oven to the power supply.

Note: Only use 25 W/230 V E-14 type T300°C lamps available from the After-Sales Service.

Important: Do not use the oven until the lamp cover has been refitted.

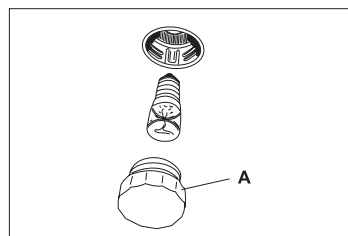 



Fig. 4

TROUBLESHOOTING GUIDE

1. The appliance does not work:

- Check the mains power supply and that the appliance is electrically connected.
- Switch the appliance off and on to see if the problem persists.

IMPORTANT:

- Check that the oven selector is not turned to "0" or to the "lamp" symbol .
- If the oven does not switch on, check that the cooking time programmer (depending on the model) is set to manual mode (see instructions on Product Description Sheet).

AFTER-SALES SERVICE

Before calling the After-Sales Service

1. See if you can eliminate the problem on your own (see "Troubleshooting Guide").
2. Switch the appliance off and on again to see if the problem persists.

If the fault persists after the above checks, contact your nearest After-Sales Service.

Specify:

- the type of fault;
- exact type and model of oven;
- the After-Sales Service number (the number given after the word "Service" on the dataplate) located at the bottom right of frame of the oven cavity and visible with the door open. The service number is also given in the warranty booklet;
- your full address;
- your telephone number.

For repairs, contact an **Authorised After-Sales Service**, indicated in the warranty.

If any work is carried out by technicians not belonging to the Manufacturer's authorised After-Sales Service centres, request a receipt specifying the work performed and make sure the replacement parts are **original**.

Failure to comply with these instructions can compromise the safety and quality of the product.

