Advanced Software Upgrade Guide

Applicable models:

LCD TV and PDP TV are released on 2008 for SD DTV model. (Not MX or Not WX model)

- LE32A756R1FX, LE**A786R2FX, LE**A786R2FX
- LE**A900G1FX (ARMANI)
- LE**A65****X,LE**A68****X
- LE**A61****X, LE**A55****X, PS50A55****X, PS**A65****X
- > The appearance of the TV and the remote control may differ depending on your TV model.

Downloading the software.

- ✓ Download new S/W on-line (www.samsung.com/support/download)
 - Connect to www.samsung.com and press the button at the top right to move to the website for the corresponding country.



- The name of the file may differ depending on the model.

Model Name	Folder Name / File Name
LE32A756R1FX	MT8226 / T-AMBPEUMD.exe
LE**A786R2FX	MT8226 / T-RB2PEUMD.exe
LE**A55****X, LE**A615A3FX, PS50A55****X, PS**A65****X	MT8226 / T-PRLPEUMD.exe
LE**A900G1FX	MT8226 / T-AMNPEUMD.exe
LE**A616A3FX, LE**A65****X, LE**A68****X	MT8226 / T-AMBPEUMD.exe

- ✓ How to prepare the USB Memory Drive
 - 1. Save the firmware file from 'Samsung.com' onto your computer. File Name : T-AMBPEUMD.exe, T-AMNPEUMD.exe, T-RB2PEUMD.exe, T-AMBPEUMD.exe, T-PRLPEUMD.exe
 - 2. Connect the USB Memory Drive to the USB port of your PC. Copy the file onto the USB Memory Drive.
 - 3. Go to the USB Memory Drive and then double click the file.
 - 4. Press the 'Install' button.
 - 5. Unzipping is in progress and the program will close automatically when the installation is complete.



- 6. A folder containing the firmware files has been added to the USB memory drive. Folder Name · MT8226
- 7. Safely disconnect the USB memory drive by right clicking the green check mark on the taskbar and then left click 'Safely Remove'.

Δ

The USB device should have only one folder ("MT8226").

- MemoRive (G:)	🖿 МТ8226
File Edit View Favorites Tools Help 🌺 🍂	File Edit View Favorites Tools Help 🌺 🦓
🕝 Back 👻 🌍 - 🎲 🔎 Search 🂙	🕞 Back + 🕥 - 🎲 🔎 Search 🎽
Address 🥪 G:# 🗸 🖌 🚱 Go	Address 🥪 G:\WMT8226 🔍 🄁 Go
MT8226	T-CRL32PEUMD-1009,0 BIN File 2.048KB
×	×



Connecting the USB device to the TV.

V Insert USB to "WISELINK" on Side TV.

- When the TV is in Standby state, connect the USB device to the TV.





Running the software upgrade file.

Press the SOURCE button on the TV and the POWER button on the remote control at the same time.

- The software upgrade screen appears.



After searching for the connected USB device, the upgrade is automatically executed.

- If the TV fails to recognize the upgraded file, check the files in the software folder and copy the files to the folder of the USB memory again.



Warning!!

Please be careful to not disconnect the power or remove the USB drive while upgrades are being applied.

SW Upgrade	SW Upgrade
USB Searching	– Upgrading.
It will be take over 30 seconds.	Do not detach USB aquipment.

During upgrading, do not disconnect USB (Wait)

- If upgrade is stopped, disconnect and reconnect the power cord, and then restart the upgrade procedures.

	SW Upgrad	e		
– Upgrading. Do not detach USB aquipment.				
•				



The TV will turn off and turn on automatically after completing the S/W upgrade.
You can check power off/on with LED on the front. (When power is on, LED is blinking.)



- If the TV does not turn on automatically after the software update, disconnect the power cord and then wait until the LED turns off completely. (This will take about 30 seconds.)
- Reconnect the power cord when the LED is completely turned off and then turn the TV on. The TV is now upgraded and you can watch TV.
- ✔ Disconnect USB

Warning!!

After or while upgrading, if the TV freezes for more than 10 minutes or does not turn on, disconnect and reconnect the power cord.However, if the TV still has a problem, contact a Samsung Customer center.

Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre 🕿	Web Site	
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com/at	
BELGIUM	02 201 2418	www.samsung.com/be	
	800 - SAMSUNG (800-726786)	www.samsung.com/cz	
CZECH REPUBLIC	Distributor pro Českou republiku: Samsung Zrt., česká organizační složka, Oasis Florenc, Sokolovská394/17, 180 00, Praha 8		
DENMARK	8 - SAMSUNG (7267864)	www.samsung.com/dk	
EIRE	0818 717 100	www.samsung.com/ie	
FINLAND	30 - 6227 515	www.samsung.com/fi	
FRANCE	3260 'dites' SAMSUNG (€ 0,15/Min) 0825 08 65 65 (€ 0.15/Min)	www.samsung.com/fr	
GERMANY	01805 - SAMSUNG (7267864, € 0.14/Min)	www.samsung.de	
HUNGARY	06 - 80 - SAMSUNG (7267864)	www.samsung.com/hu	
ITALIA	800 - SAMSUNG (7267864)	www.samsung.com/it	
LUXEMBURG	02 261 03 710	www.samsung.com/lu	
NETHERLANDS	0900 - SAMSUNG (7267864, € 0.10/Min)	www.samsung.com/nl	
NORWAY	3 - SAMSUNG (7267864)	www.samsung.com/no	
POLAND	0 - 801 - 1SAMSUNG (172678) 022 - 607 - 93 - 33	www.samsung.com/pl	
PORTUGAL	808 20 - SAMSUNG (7267864)	www.samsung.com/pt	
SLOVAKIA	0800 - SAMSUNG (7267864)	www.samsung.com/sk	
SPAIN	902 - 1 - SAMSUNG (902 172 678)	www.samsung.com/es	
SWEDEN	075 - SAMSUNG (726 78 64)	www.samsung.com/se	
SWITZERLAND	0848 - SAMSUNG (7267864, CHF 0.08/min)	www.samsung.com/ch	
U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk	
TURKEY	444 77 11	www.samsung.com/tr	
ESTONIA	800-7267	www.samsung.ee	
LATVIA	8000-7267	www.samsung.com/lv	
LITHUANIA	8-800-77777	www.samsung.lt	
KAZAHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru	
KYRGYZSTAN	00-800-500-55-500	-	
RUSSIA	8-800-555-55-55	www.samsung.ru	
TADJIKISTAN	8-10-800-500-55-500	-	
UKRAINE	8-800-502-0000	www.samsung.ua	
UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru	