SIEMENS Mobile

SIEMENS Mobile

Issued by Information and Communication mobile

© Siemens AG 2004 All rights reserved. Subject to availability. Rights of modification reserved.

Siemens Aktiengesellschaft www.siemens-mobile.com/a65



A65

Legal notices Safety precautions	
Phone overview	
Display symbols (selection)	
Getting started	
Using the SIM card/battery	
Charging the battery Switching on/off, PIN	
Enter PIN	
Strong reception signal	
Emergency number (SOS) Without a SIM card	10
General information	
User guide Menu control	
Standby mode	
Security	
Clear SIM card barring	10
Making a phone call	
Text entry	
Text entry without T9	
Text entry with T9	
Predef. texts	
Phonebook	
<new entry=""></new>	
Call (search for an entry)	
Edit entry	
Assign picture	
Groups	
Call log	
Durat/charges	
Camera	
Voicemail/CB services	16
SMS	
MMS	
Message lists/	-
Message settings	19

Surf & fun	
Internet browser (WAP)	19
Games & more	20
Setup	21
Profiles	21
Display	21
Call setup	22
Clock	23
Connectivity	23
Security	23
Network	24
Accessories	24
Ringtones	25
Extras	
Alarm clock	25
Calculator	25
Stopwatch	
SIM services (optional)	26
Fast access	
Own stuff	
Questions & Answers	
Customer Care	
Care and maintenance	
Product data	32
U.S. FDA	
FCC/Industry Canada Notice	
Ten driving safety tips	40
Intellectual property	42
Accessories	43
SAR (A65)	
End user license agreement	46
Menu tree	51
Index	55

See also Index at the end of this User Guide

Legal notices

2

The mobile phone described in this guide is approved for use on the GSM and GPRS networks operating on the GSM 900, 1800 (DCS/PCN) and 1900 (PCS) bands. It is approved for use in the country where it was originally sold and may be approved for use in other countries.

 $\ensuremath{\textcircled{\sc l}}$ 2004 Siemens Information and Communication Mobile, LLC. All rights reserved.

Siemens and the A65 model phone are trademarks or registered trademarks of Siemens AG and/or its affiliates in the United States and/or other countries.

T9[®] is a registered trademark of America Online, Inc. in the United States. Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S and other countries. The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Disclaimer

THE INFORMATION CONTAINED IN THE USER GUIDE IS WRITTEN FOR THE A65 PHONE. SIEMENS RESERVES THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS TO THE PRODUCTS AND ANY OF THE FEATURES OF THE PRODUCTS DESCRIBED IN THIS DOC-UMENT WITHOUT PRIOR NOTICE. THE CONTENTS OF THE USER GUIDE ARE PROVIDED "AS IS". EXCEPT AS REOUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. SIEMENS RESERVES THE RIGHT TO REVISE THE USER GUIDE OR WITH-DRAW IT AT ANY TIME WITHOUT PRIOR NOTICE. UNDER NO CIRCUM-STANCES SHALL SIEMENS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL. INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

Export Information

The mobile phone may be subject to export regulation of the United States and other countries. Diversion contrary to law is prohibited. You must comply with all applicable export laws, restrictions and regulations of the United States foreign agencies or authorities, and may not export, or transfer for the purpose of re-export, the mobile phone or any part of the phone in violation of any applicable restrictions, laws or regulations, or without all necessary approvals.

Network Services

A number of features included in this guide are called Network Services. They are special services provided by wireless service providers. In order to use any of these Network Services, you must subscribe to these service(s) from your service provider and obtain instructions for their use. Some of these Network Services may not be available when roaming on a network other than your home network.

Standby and Talk Time Information

The mobile phone incorporates features that are new to the mobile phone world. These may include color displays and lighting, graphic games, music reproduction and browsing the Internet. The way you use the display and the features will affect the performance of the battery and how long it lasts between charge cycles. The quoted standby times and talk times show the minimum and maximum performance that can be expected from the battery under normal network conditions and with the default settings as set by the factory. However, playing games (particularly with the backlight continuously switched on) and listening to music will shorten the time available for standby and to make and receive telephone calls. Operation times also vary depending on network conditions, SIM settings, charging and battery condition, how you use your phone and other factors.

Memory

The mobile phone contains an internal memory device that stores the software required to operate the mobile phone, communicate with the GSM/GPRS network and provide the user interface. Some features in the internal memory run additional devices and some additional games and utilities. The amount of memory available in the mobile phone is finite and may be insufficient to store large numbers of applications and files.

Warning!

Remember to back up your data and to do so frequently. Always back up all data and programs before sending the mobile phone in for repair.

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.

Small parts such as the SIM card, sealing stop, lens ring and lens cap can be dismantled and swallowed by small children. The phone must therefore be stored out of the reach of small children.



The mains voltage specified on the power supply unit (Volt) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (S. 25), info tones and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (S. 12). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100 % mercury-free) and – charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



You may only open the phone to replace the battery (100 % mercuryfree) or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the operating licence.

Important:



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.

SIEMENS Original Accessories

Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

Phone overview

① Call key (press lower part of button)

Dial phone number /name displayed, take calls. Show last phone numbers dialed in standby mode.

② On/Off/End key (press lower part of button)

- Switched off: press and hold to switch on.
- During a call or in use: press briefly to finish
- In menus: press briefly: one level back. Press and hold: return to standby mode.
- · In standby mode: Press and hold to switch off phone.

3 Control key

In lists and menus:

- Scroll up and down.
 - Select function.
- (Back a menu level.

During a call:



 \bigcirc

Open call menu.

In standby mode:

- Open Phonebook.
- Open menu.
- GPRS info.



0 Integrated antenna

Do not interfere unnecessarily with the phone above the battery cover. This reduces reception quality.

② Loudspeaker

6

③ Display symbols

Signal strength/GPRS available/battery level.

④ Display keys (press upper part of button)

The current functions of these keys are shown in the bottom line of the display as text/symbol (e. g. \square).

⑤ Input keys


Numbers, letters.

- 6 * Press and hold
- In standby mode: switch on/off all signal tones (except alarm).
- For incoming calls: switch off ring tones only.
- ⑦ # Press and hold

In standby mode: switch key lock on/off.

- ⑧ Microphone
- 9 Plug socket

Connection for charger, headset, camera etc.

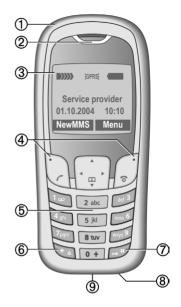

Display symbols (selection)

D: 1 1 1

Display s	ymbols
	Signal strength.
	Charging.
-	Battery charging status, e.g., 50%.
a6‡	Phonebook
9t>	Call log
Ð	Surf & fun
<u>A</u>	Ringtones
\square	Messages
Ō	Camera
	Extras
	Own stuff
Ð	Setup
jŌ	All calls are diverted.
Ŗ	Ringer off.
QΠ	Short ring (beep) only.
+¦€	Ring only if the caller is stored in the Phonebook.
	Alarm set.
((Alarm clock active.
- 0	Key lock active.
	Phone numbers/names:
0	On the SIM card
-0	On the SIM card (PIN 2 protected).
Q	In the phone memory.
×	No network access.
V,	Function activated/deactivated.

,	
ß	Phonebook.
ABC/ Abc/abc	Indicates whether upper- or lower case letters are active.
■Abc	Text input with T9.
GPRS	Activated and available.
GPRS	Registered.
GPRS	Temporarily interrupted.
GPRS►	GPRS download.
67	WAP Online.
GP ←RS	WAP via GPRS online.
	WAP No network.
0	Headset active.
	Auto answer feature on.
Depending symbols d the phone	on your service provider, some of the splayed here may differ from those on
symbols d	isplayed here may differ from those on
symbols d the phone	isplayed here may differ from those on
symbols d the phone Soft keys	splayed here may differ from those on
symbols d the phone Soft keys	splayed here may differ from those on Message received.
symbols d the phone Soft keys	isplayed here may differ from those on Message received. MMS received.
symbols d the phone Soft keys Mms Mms	Message received. MMS received. MMS notification.
symbols d the phone Soft keys Mms Mms	Splayed here may differ from those on Message received. MMS received. MMS notification. Voice mail received.
symbols d the phone Soft keys Mms Mms CO CO	splayed here may differ from those on Message received. MMS received. MMS notification. Voice mail received. Data received.
symbols d the phone Soft keys	Image: splayed here may differ from those on Message received. MMS received. MMS notification. Voice mail received. Data received. Picture received.
symbols d the phone Soft keys	splayed here may differ from those on Message received. MMS received. MMS notification. Voice mail received. Data received. Picture received. Melody received.

Getting started


Using the SIM card/battery

Your phone's display is delivered with a protective film. **Remove this film before getting started**. To avoid damage to the display, the phone should not be used without the front cover. The service provider supplies you with a SIM card on which all the important data for your account is stored. If the SIM card is credit card-sized, snap out the smaller segment and trim any rough edges.


Remove the battery cover upwards ①.



Insert SIM card O and push it fully into the locating slot (make sure the angled corner is in the correct position O). Then push the retaining catch over the top of the SIM card O.

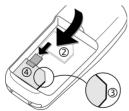

Insert the battery sideways into the phone (5), then press downwards (6) until it engages.

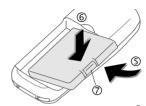

To remove, press the retaining tab \bigcirc then lift the battery out.

Insert the battery cover by the tabs at the bottom ^(®), then press downwards ^(®), until it engages.




Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider if you have an older card.

Functions without SIM card p. 10.

Charging the battery

The battery is not supplied fully charged. Plug the charger cable into the bottom of the phone, plug the power supply unit into a mains power socket and charge for at least **two hours**. The power supply unit will become hot after extended use. This is normal and is not dangerous.

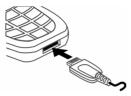

Display when charging is in progress



Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The voltage specified on the power supply unit must not be exceeded.

Charge icon not visible

If the battery was fully discharged, the charging symbol will not be immediately visible on connection to the power supply unit. It will appear after up to two hours. In this case the battery is fully charged after 3 - 4 hours.

Only use the power supply unit provided!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is displayed correctly only after uninterrupted charging/discharging. You should therefore not remove the battery unnecessarily and where possible not interrupt charging prematurely.

Switching on/off, PIN

Turning the phone on/off

Press and hold the On/Off/End key form to switch on or off.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.

Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with Clear.

Confirm your input with OK. Logging on to the network will take a few seconds.

Switching on your phone for the first time

Time/date

The clock must be set to the right time once at start-up.

Press Yes. First enter the date (day/month/ year), then the time (24 hours, including seconds). Press OK. The time and date are updated.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Time zones

Specify your current time zone.

Select the desired time zone from the list with \bigcirc . Apply it with Set.

Strong reception signal

Strong receive signal.

- A weak signal reduces the callquality and may lead to loss of

the connection. Change your location.

Emergency number (SOS)

Use only in real emergencies!

By pressing the soft key SOS you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Without a SIM card

If you switch on the phone without a SIM card you can still use some phone functions.

Press Menu. The functions are displayed (f.e. Emergency, SOS).

General information

User guide

The following symbols are used to explain operation:

0 Enter numbers or letters

ি (On/Off/End key

Call key

Press the control key on the side indicated

Soft key left

Soft key right

Menu Displays a soft-key function

c8! Function depends on the service provider, special registration may be necessary

Menu control

The steps needed to reach a function are shown in concise form in this user guide.

E. g. to display call list for missed calls:

press Menu

This corresponds to: Open the main menu, select the Call log menu, then select the function Calls missed. You have to confirm with Select.

Standby mode

When the name of the service provider appears on the display, the phone is in standby mode and ready for use.

The left soft key may have different functions pre-assigned to it.

Press and **hold** the On/Off/End key 🕋 to return to standby mode from any menu option

Security

Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

Menu → ⇒ > Security → Codes Select a function

PIN control

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Change PIN

You can change the PIN to any 4-8 digit number you may find easier to remember.

Change PIN2

(Display only if PIN 2 is available). Proceed as with Change PIN.

Change phonecode

You define the phone code (4 to 8 digits) when calling up a phone-code protected function for the first time. It is then valid for all phone-code protected functions. Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. In such an instance contact Siemens Service (p. 30).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN entry is deactivated (p. 10) confirmation is required to switch on phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.

After long press of the On/Off/End key to switch on the phone or abort the operation with Cancel.

Making a phone call

Dialing with number keys

The phone must be switched on (standby mode). Dial number (always with area code, if necessary with international dialing code). To dial International dialing codes press and **hold 0** until a "+"-is displayed. Press **+List** and select country.

Short press Clear to clear the last digit, a long press clears the entire phone number. To dial press the *C* key.

End call

Press the End key 🔊 briefly. Press this key even if the person on the other end of the line has hung up first.

Set volume

Use the control key $(^{\bullet})$ to start adjusting the volume during conversation. Set volume with $(^{\bullet})$ and confirm with **OK**.

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

For redialing previously dialed numbers press the Call key \checkmark once, pick out the required phone number from the list with (a), then press \checkmark again.

If number busy

Press Auto dial for automatically dialing the phone number ten times at increasing time intervalls or press Call back ((3!) for phone ringing when the busy number is free. Press Prompt and a beep will remind you to redial the dispayed phone number after 15 minutes.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone. Press Answer or \checkmark .

Please make sure you have accepted the call before holding the phone to your ear. This will prevent a loud ring tone from damaging your hearing!

If the phone number has been transmitted by the network, it is displayed. If the caller's name also appears in the Phonebook, this will appear instead of the number. If set, a picture can be displayed instead of the bell icon

Reject call

Reject or m press briefly.

Speakerphone

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

Activate handsfree function with Speaker. and switch on with Yes.

Adjust the volume with (). Pressing Speaker, switches off "handsfree talking".

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing!

Swapping between 2 calls

Make a new connection during a call with \bigwedge menu \rightarrow Hold \rightarrow \bigwedge (dial a new phone number). With C menu - Swap you can swap back and forth between both calls.

If you are called during a phone call and you can hear the "call waiting tone" (p. 22), you can accept the waiting call with Swap, putting the current call on hold to do so. Swap back and forth between the calls as previously described or end the current call with rand accept the new call with Answer.

Multi Partv

Make a new connection during a call with \checkmark menu \rightarrow Hold \rightarrow \bigcirc (dial a new phone number). With / menu -> Multi Party you can join the held call.

Repeat this procedure until all participants are linked together (up to 5 participants).

All calls in the conference are ended simultaneously when the End key 🕋 is pressed.

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. The cursor advances after a short delay. Example:

- 2 Pressing briefly once types the letter a, twice the letter b, etc. Press and hold to write the number
- Ä.ä.1-9 Umlauts and numbers are displayed after the relevant letters.
- Clear Press briefly to delete the letter before the cursor, press and hold to erase the whole word.
- Move the cursor (forwards/back).
- Press briefly: Switch between abc, # Abc, ABC, ^{T9}abc, ^{T9}Abc, ^{T9}ABC, 123. Status indicator in the top line of the display. Press and hold: All input modes are displayed.
- * Press briefly: Special characters are shown. Press and hold: Open input menu.
- 0 Press once/repeatedly: .,?!'"0-()@/:_ Press and hold: Writes 0.

1

Writes blank. Press twice = skip line.

Special characters

Press **briefly** * . The character map is displayed:

1)	ż	i	_	;		,	?	!	+	-
"	,	:	*	1	()	¤	¥	\$	£
€	@	١	&	#	[]	{	}	%	~
<	=	>	Ι	^	§	Г	Δ	Θ	٨	Ξ
П	Σ	Φ	Ψ	Ω						

1) Line skip

Navigate to characters with (-), (-) and press Select.

Input menu

Press and **hold *** with text input. The input menu ist displayed:

Text format (SMS only) Input language Mark text Copy/Add

Text entry with T9

T9 deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options → T9 input → T9 preferred → Change (activate or deactivate T9)

Select Input language

Select the language in which you want to compose your message.

Options → T9 input → Input language → Select (the new language can be selected) or Delete (T9 dictionary for the selected language will be deleted).

Type a word using T9

The display changes as you proceed. Therefore, it is best if you finish a word without looking at the display. Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

Press briefly # for T9Abc then

46835 and 1 (the blank ends a word).

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional notes

#

*

- 0 Setting a full stop. Word is ended when followed by a blank space. Within a word, a full stop represents an apostrophe or hyphen: e.g. provider.s = provider's.
- Move to the right. Ends a word.

Press **briefly:** Swap between: abc, Abc, ^{T9}abc, ^{T9}Abc, 123. Status indicator in the top line of the display.

Press and **hold**: All input modes are displayed.

Press **briefly:** Select special characters. Press and **hold:** Open input

menu.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. The word must be highlighted as inverted. Then press fight, the displayed word is replaced with a different word. If this is also incorrect, repeat until the correct word is displayed.

To add a word to the dictionary,

select Spell. Now write the word without T9-support and accept with Save into the dictionary.

Correct a word

Words written with T9:

With (*) move left or right, word by word, until the required word is inverted. With files scroll through the T9 word suggestions again. Clear deletes the character to the left of the cursor **and** displays a new possible word!

Words not created using T9:

With (•) move letter by letter to the left/right. Clear deletes the letter to the left of the cursor. New characters are inserted at the cursor position.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Predef. texts

The phone contains predefined texts that you can add to your messages (SMS, MMS). You can also create and store up to 5 personal stored texts. Each stored text can contain up to 32 characters.

Unlike personal stored texts, predefined texts cannot be changed or deleted.

Write personal stored texts

 $\begin{array}{c} \underline{\mathsf{Menu}} \rightarrow \boxtimes \rightarrow \mathsf{Predef. texts} \rightarrow \overline{\mathsf{Options}} \\ \rightarrow < \mathsf{New entry} \rightarrow \rightarrow \underbrace{\mathsf{He}}_{\mathsf{He}} (\mathsf{write personal} \\ \mathsf{stored text}) \rightarrow \underbrace{\mathsf{Save}}_{\mathsf{Save}} \end{array}$

Use predefined texts

(write message text) → Options → Insert text → (‡) (select predefined text from the list) → Select The predefined text is inserted into the text to the left of the cursor.

Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. To dial them, simply highlight the name. If a phone number is stored with a name, it appears on the display when you are called. Important numbers can be assigned to different groups.

<New entry>

Open Addressbook (in standby mode)

♦ Select → Select entry fields Number: Always enter phone number with prefix.

Name: Enter first name or surname.

E-mail: Enter email address for MMS (max. for 50 addresses).

Group: Organise entries in groups, select with Change.

Location: Select location: Mobile, SIM or Protected SIM.

Record no.: This is automatically assigned to the entry.

Press Save to store the new entry.

Call (search for an entry)

Open phonebook \bigcirc , select name and select phone number with \checkmark .

Edit entry

- → Select entry → Options → Edit
- → Make changes → Save.

Assign picture

Assign a maximum of 50 phone numbers to an individual picture. This picture will appear in the display when there is a call from this number.

The picture is assigned to the phone number and it appears with a \bigcirc symbol in the Phonebook.

Delete/change image

If a picture is assigned to a phone number, it can be deleted or replaced.

Select entry with picture ③

→ Options → Select → ✓ Picture

→ Delete

Groups

Four groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these groups.

Open Addressbook (in standby mode) (♣) → <Groups> (the number of entries is listed behind the group name)

→ Select a group → Select (open group) or Rename (give group a name)

Ring tone for group

If you assign a ring tone to a group, it sounds when one of the group members rings.

Menu → 🕼 → Group calls

- → Select a group → Select
- → Select ring tone → Select

Call log

Your phone stores the phone numbers of calls for convenient redialing.

Menu 🔿 🔂 🔿 Select

→ Select call record → Select

→ Select phone number → 🥻

Calls missed

-8!

15

The phone numbers of calls that you have not accepted are stored for call-back purposes, if the network supports the "Caller Identity" feature.

Symbol for acc. call.

Calls received

8

Accepted calls are listed, if the network supports the "Caller Identity" feature.

Calls dialed

In standby mode you have access to the last numbers dialed with $\ensuremath{\ell}$.

Delete calls

The records are deleted.

Call list menu

Options 🕂 Edit entries.

Durat/charges

You can display the charges and the duration of a call and set a unit limit for outgoing calls.

Menu → ()() → Durat/charges → Select a function: Last call, All outgoing, All incoming, Remain. units

Select Display data.

Reset OK Clear display. End display.

Charge sett.

Menu → 😳 → Durat/charges → Charge sett.

Currency

(PIN 2 prompt) Currency for charge display.

Personal rate

(PIN 2 prompt) Charges per unit/period.

A/c limit

c8!

SI S

SI S

(PIN 2 prompt)

Fix a credit/usage period on a special SIM card.

Auto display

Call duration and call charges are automatically displayed for each call.

Camera

You can use the phone to immediately view, save and send photos you have taken with the "QuickPic Camera". Pictures can be taken in two different formats:

- Low resolution: QQVGA 160x120 pixels, memory size up to 6 KB for sending as an MMS image (p. 18).
- High resolution: VGA 640x480 pixels, memory size of one picture up to 40 KB – e.g. for further editing on PC. To allow the picture to be viewed on the phone display, a QQVGA picture is created for every VGA picture.

In standby mode press Camera or Menu → ©

First the number of shots still available is shown (depends on resolution chosen). Confirm with OK (the last picture taken is shown) and scroll through photos with $\begin{pmatrix} \bullet \\ \bullet \end{pmatrix}$.

Picture

A picture requires a few seconds to be processed.

Press Take. You will hear an advisory tone when the exposure time has expired. The photo is shown on the display and saved automatically.

Flashlight

In the option menu the flashlight function can be switched on/off.

If the flash is switched on, a command is given to charge the flashlight before taking a picture:

Press Load briefly. The flashlight is charged (battery capacity at least approx. 30%). Press Take and the photo is taken.

Sending a photo by MMS

You can easily send a photo as an MMS immediately after taking it.

Options \rightarrow Send via MMS \rightarrow Select (select the desired resolution) \rightarrow Skip (skip recording a melody, p. 18)

Voicemail/CB services

Voice mail/mailbox

Menu → ▷ → Msg. setup → Voice message

Most service providers offer you an external answering service. In this mailbox, a caller may leave a voice message for you

- if your phone is switched off or not ready to receive,
- · if you do not want to answer,
- or if you are making a phone call.

You may have to register for this service with your service provider and perform some manual settings.

Settings:

c8!

Your service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.

Menu → ▷ → Msg. setup → Voice message

Enter mailbox phone number and confirm with OK.

Save call divert number

Calls are diverted to this phone number.

Menu $\rightarrow \bigcirc \rightarrow$ Call setup \rightarrow e. g. Unanswered \rightarrow Set

Enter call divert number and log on **OK** to network. Divert will be confirmed after a few seconds (see also p. 22).

Play back messages

-8!

A new voice mail can be announced as follows:

A construction of the symbol with beep or a SMS indicates a new voice mail or that you are receiving an automatic announcement. Dial into your mailbox and listen to your message(s).

Press and **hold 1** (if necessary enter mailbox number once only). Confirm with OK and Mailbox depending on your service provider.

CB services

Menu → ◯◯ → Msg. setup → CB services

Some service providers offer information services (info channels,). If reception is activated, your Topic list will supply you with messages on the activated topics.

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Writing/sending SMS messages

Menu $\rightarrow \bigotimes \rightarrow \text{New SMS} \rightarrow \bigcup$ (write text) $\rightarrow \land \rightarrow \bigcirc / \bigcirc$ (enter phone number or select from Phonebook) $\rightarrow \bigcirc \ltimes$

The SMS is sent to the service centre for transmission.

Receiving SMS

An arrival of a new SMS is announced on display with \bowtie . To read the SMS, press left soft key.

With () you scroll through message line by line. Select Reply for a direct reply.

SMS archive

Menu → 🖂 → SMS archive

The list of SMS messages stored in the phone is displayed.

Special functions

SMS to group

Send SMS as a "circular" to a group.

Options \rightarrow Send \rightarrow Group \rightarrow Select group members and send SMS.

Picture&Sound

Insert pictures and sounds into message.

Options → Picture&Sound select. The menu contains:

Fix animations, Fix sounds, Own animat., Own pictures, Own sounds

MMS

The Multimedia Messaging Service enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

Menu → 🖂 → New MMS

Input fields:

- To: Phone number/ e-mail address of recipient/s.
- Subject: Enter MMS heading (up to 40 characters)
- Picture: Insert. The picture list is opened for selection.

Additional information

You can also easily send an image by MMS immediately after taking it with the QuickPic Camera (p. 16).

Text: Edit. Write text with the help of T9.

Tones/Alerts: Insert. Select a melody or record a new melody.

Slide duration:

Enter length of display for individual pages (minimum 0.1 seconds).

Record new melody (ring tone) for MMS

If you press Insert in the Tones/Alerts: field when completing the input fields, you have the option of recording a new melody for sending messages by MMS.

Press Record. Recording starts, and the maximum available time and recording duration are displayed. To end recording, press Stop.

Insert additional pages

Options Open menu.

New slide Select.

Send MMS

Options Open menu. Send Select.

Receive/read MMS

8

Indicates reception or notification of an MMS.

Depending on the profile setting (p. 19):

- Receive complete MMS
- Open the message. Press Receiving, in order to receive the complete MMS, with Play automatic MMS presentation. Cancel with any key.

Functions for editing MMS can be found under Options.

Message lists/ Message settings

All SMS/MMS messages are stored in one of the following lists according to status.

Inbox

Menu → ▷ → Inbox → SMS/MMS

The list of received SMS or MMS messages is displayed.

Draft

Menu → 🖂 → Draft → SMS/MMS

The list of unsent SMS or MMS messages is displayed.

Unsent

Menu → 🖂 → Unsent → SMS/MMS

The list of SMS or MMS messages not yet successfully sent is displayed.

Sent

Menu → 🖂 → Sent → SMS/MMS

The list of sent SMS or MMS messages is displayed.

T9 settings

Menu → ▷ → Msg. setup → Select a function

T9 preferred

Activate/deactivate intelligent text entry (see also p. 13).

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

SMS profiles, MMS profiles

Menu → ▷ → Msg. setup → SMS profiles/MMS profiles Profiles have to be created for SMS and MMS. The transmission characteristics are defined in these. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. Additional information is available in the comprehensive operating instructions on the Internet at: www.siemens-mobile.com/a65

Surf & fun

service provider.

Internet browser (WAP)

Menu → ⑦ → Select a function Get the latest information from the Internet that is specifically adapted to the display options of your phone. Internet access may required registration with your

Home

8!

A connection is established with the Internet provider's portal (may be specified/configured by default by your service provider).

Bookmarks

List of URLs for fast access.

Internet

8!

The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary set how the Internet access should be made. To this end open the browser menu with and select Setup/Start with...

Additional notes

- Browser menu.
- ① Offline.
- Online.
- GPRS online.

No network.

- Select special characters, such as
 @, ~, \, see p. 13 or
- 0 press repeatedly for: .,?!'"0-()@/:_

End connection

Press and hold \bigcirc to end the connection and close the browser.

WAP profiles

Menu → ③ → Internet → Profiles

Preparation of the phone for WAP Internet access depends on your service provider. If these settings have already been applied by the service provider, select and activate profile. If you have to configure the access profile manually, consult your service provider if necessary.

Activate WAP profile

You can change the active profile each time before you access the Internet (if the profile has been set already). For this, select profile, then Select.

WAP profile setting

Up to 5 WAP profiles can be configured (may be limited by the service provider). The specifications may vary according to service provider. Select profile, then edit and fill in the data fields.

Select the connection profile: see p. 23.

Games & more

Download games and other applications. You are advised about relevant applications on the Internet. Once you have selected a game or application you can start to download it immediately. Then you can use the application. Most applications include instructions. Applications and games can be found at:

wap.siemens-mobile.com or on the Internet at www.siemens-mobile.com

Additional information

To download applications, the WAP profile, HTTP profile and access must be configured (p. 23).

Depending on the service provider, the access and functionality could differ from the present description.

Games and applications

Applications and links that are already stored on the phone are found under:

Menu → ③ → Games & more

Different functions are available depending on which entry is highlighted:

Download new

Internet

The selected Internet page is loaded.

☆ Carry out game/application offline

Select

Loadable application can be started immediately.

📩 Load game/application online



Only description file, application has still to be loaded.

You will find special instructions or information for each game in the option menu.

Key control

The following key control is used for many games (virtual joystick):

function	K 1	1 2	3
depends on the game	4	5	6 🔿
·	7	8	9
	K	∔	*

or use the key 💮 .

Setup

Profiles

Menu → ⇒ Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five profiles are standard with default settings, they can be changed however: Normal envi., Quiet environ., Noisy environ., Car Kit, Headset
- You can set two personal profiles (<No Title>).
- The special profile Aircraft mode cannot be changed.

Activate

Select default profile or personal profile Activate.

Setup

Select profile \rightarrow Options \rightarrow Change sett. The list of available functions is displayed.

Car Kit

The profile is only activated automatically as soon as the phone is inserted into the cradle if a Siemens original Car Kit is used.

Headset

The profile is only activated automatically if used with an original Siemens headset.

Aircraft mode

The alarm tone is deactivated. An alarm is only shown on the display. It is not possible to modify this profile. The phone will automatically switch off if you select this profile.

Normal mode

The next time you switch on the phone and return to normal operation the default profile will be activated.

Display

Menu $\rightarrow \bigcirc \rightarrow$ Display \rightarrow Select a function

Language

Set the language of the display text. "Automatic" will set the language of your home service provider. Reset to this language in standby status:

*#0000#

Background

Logo

Color scheme

Own greeting

Big letters

Illumination

Contrast

Screensaver

The screensaver shows a picture on the display as soon as a period that can be set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Call setup

Menu → ⇒ → Call setup → Select a function

Hide ID

-8

When switched on, the display of the calling party shows your phone number (dependent on service provider).

Call waiting

c8!

If you are registered for this service, you can check whether it is set and you can activate/deactivate it with Call waiting.

Call Forward

You can set the conditions for which calls are diverted to your mailbox or other numbers.

Set up call divert (example):

• All calls

All calls are diverted. $\exists 0$ is shown in the top line of the display in standby mode.

• Unanswered

Includes Unanswered, Not reachable, No reply, Busy.

Select \rightarrow Set \rightarrow (Enter the phone number, to which the call should be diverted) \rightarrow OK

After a short pause, the setting is confirmed by the network.

Other divert options: Not reachable, No reply, Busy

Status check

After a short pause the current information is shown.

Condition set.

Not set.

Pisplay if status is unknown (e, g, with a new SIM card).

Clear all

All set diversions are cleared.

Any to answer

Incoming calls can be accepted by pressing any key (except for ...).

Minute beep

During the call, you will hear a beep after each minute as a reminder of the time elapsed. The recipient does not hear this beep.

23

Clock

Menu $\rightarrow \bigcirc \rightarrow$ Clock \rightarrow Select a function

Time/date Change Enter the date first, then the

time Time format:

Select Format 24h or Format 12h

Time zones Specify your current time zone.

Format date DD MM YYYY or MM/DD/YYYY or MM-DD-YYYY

Show clock Switch on/off time display.

Buddhist year

Change to Buddhist date (not available in all phones).

Connectivity

Menu → ⊃ → Connectivity Select a function

GPRS

Switch GPRS on /off.

Yes / No

Data counter

Display connection information.

Data services

Menu → ⊃ → Connectivity → Connection profiles

Select function

For the MMS, Wap and Java application at least one connection profile must be set up and activated. If necessary enter CSD settings and GPRS settings (your service provider will supply you with information on this or www.siemens-mobile.com/ mobilescustomercare under "FAO").

Options -> Change sett. -> Edit → Enter data → Save

HTTP profile

Select profile with (*). Enter or modify settings. If necessary, check with your service provider for details.

Authentication

Menu → ⇒ Connectivity

- → Authentication → Change
- Activate encrypted WAP dial-up

Security

Menu → ⊃ → Security Select function

Auto key lock

If activated, the keypad is locked automatically if no key has been pressed for one minute in standby mode. This prevents the phone from being used accidentally. However, you can still be called and you can still make an emergency call.

Direct call

Only one phone number can be dialed. To do so press and hold the right soft key.

Only -0

Restrict calls to SIM-protected numbers in the Phonebook

Last 10 only

<u>8</u>

R

Limit calls tocall list of "dialed numbers" (p. 15).

Codes

(see p. 10)

This SIM only

d RI

Your phone is prevented from being used with a different SIM card.

Menu → ⇒ Security → Select a function

8

Barrings

c8!

Network barring restricts the use of your SIM card.

All outgoing: Outgoing calls, except emergency 999 calls, are blocked.

Outgo internat: Only domestic calls are possible.

Outgo internat. x home barred: International calls are not permitted, ecept for calls to your home country.

All incoming calls: The phone is blocked from receiving all incoming calls.

When roaming: You do not receive any calls outside your home network.

Status check: Query the status of your barrings.

Clear all: Remove all barrings.

Phone identity

Display the phone identity number (IMEI) and software version.

Filesystem clean up

(Phone code is protected) The file system is defragmented.

Master reset

Rest phone to standard values (factory setting).

Network

Menu → ⊃ → Network → Select a function

Line



Two independent phone numbers have to be registered.

Network info

The list of GSM networks currently available is displayed.

Auto network

If activated, the next network is dialed in the order of your "preferred networks".

Choose network

The network search is restarted.

Preferred network

Set the service providers you prefer when you leave your home network.

Fast search

When this function is active, network reconnection is speeded up (standby time is reduced).

Accessories

Menu → ⊃ → Accessories → Select a function

Car Kit

Only in combination with an original Siemens handsfree Car Kit. If an original Siemens Car Kit Portable is used the profile is activated automatically as soon as the phone is inserted into the cradle.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

Headset

Only in conjunction with an original Siemens headset. If an original Siemens Headset is used the profile is automatically activated when the headset is plugged in. Accept call with the Call key when the key lock is activated.

Auto answer

Calls are accepted automatically after a few seconds. Eavesdropping is possible!

If you do not notice that your phone has accepted a call, there is the danger that the caller may eavesdrop.

Ringtones

Menu $\rightarrow \square \rightarrow \rightarrow$ Select function

You can set the tones to match your needs.

Ringer setting

Activate/deactivate the ringer or reduce it to a short beep.

Vibrating alert

Activate/deactivate the silent alert (functions in addition to ringer).

Volume

Set the same volume for all ring tones.

Calls, Group calls, Other calls:, Alarm clock, Messages

The ring tones for the stated types of call/functions can be set separately.

More tones...

Menu → ﷺ → More tones... → Select a function

Call screening

Only calls from numbers that are in the Phonebook or in a predefined group are signalled audibly or by silent alert. Other calls are only displayed.

Key tones

Set acoustic key acknowledge: Click or Tone or Silent

Minute beep

During the call, you will hear a beep once a minute as a reminder.

Info tones

Set service and alarm tones.

Extras

Menu → 🗁 → Select function

Alarm clock


The alarm will ring at the time set by you, even when the phone is switched off.

On/off Switch on/off.

Setting

Set the time for the alarm call (hh:mm), then OK.

Calculator

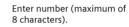



R

.

Select calculate function.

- Repeat procedure with other numbers.
- # Result is displayed.
- .=+-*/ Press the right display key repeatedly.
- ± Toggle between "+" and "-".
- % Convert to percent.
- 📩 , 📩 🛛 Save, recall number.
- e Exponent (maximum of two digits).

Special keys:

- Set decimal point.
- 0 Add (press and hold).

Stopwatch

Two intermediate times can be recorded and saved.

- Reset Reset to zero.
- # Start/stop.
- * Intermediate time.

SIM services (optional)

Your service provider may offer special applications such as mobile banking, share prices, etc. via the SIM card. If you have such a SIM card, the SIM services will appear in the main menu under "Extras" or directly above the control key (on the left) with symbol

With the SIM services menu, your phone is ready to support future additions in your service provider's user package. For further information, please contact your service provider.

Fast access

The left soft key and the number keys 2 to 9 (speed dialing numbers) can each be assigned an important phone number or a function. The phone number can then be dialed or the function can be started at the touch of a button.

Left soft key

Assign an Assign function/phone number to this key.

Change (example)

Internet -> Change

→ Search for application, e.g. New SMS, Phone number → Select

Apply (example)

Key assigned with Phone number/name. Press and **hold** Carol.

Speed dialing keys

Only possible for keys 2 to 9. Key 1 is reserved for the mailbox.

Change (example)

3 → Set → Select application, e.g. New SMS, Phone number → Select

Apply (example)

d RI

Press and hold key 3.

Own stuff

The following folders are provided for organizing your photos: Pictures, Animations, Sounds.

Menu 🔿 🛅

Files and folders are displayed.

You can scroll through these lists using (to scroll up and down) and (to jump back from a folder). To open a folder or execute a file using related application press Open.

Index structure

Special folders are provided in the file system for the different data types.

Folders	Contents	Format
Pictures	Images	*.bmp *.gif *.jpg *.jpeg
Camera	Own Photos (p. 16)	*.png
Anima- tions	Animations	*.bmx *.gif
Sounds	Ring tones, melodies, sounds	*.mid

The following folders are also included in these main folders:

Download new	This enables you to download new files from the Internet.
EMS	Files that can be received per SMS/MMS.

Questions & Answers

If you have any questions regarding the use of your phone, you can contact us at www.siemens-mobile.com/mobilescustomercare at any time. In addition to this we have listed some frequently asked questions and answers below.

Question	Possible causes	Possible solution		
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for at least two seconds.		
	Flat battery.	Charge battery. Check charging indicator in the display.		
Insufficient standby	Speed search active.	Deactivate speed search (p. 24).		
time.	Display illumination switched on.	Switch off display illumination (p. 21).		
Charging error (charge icon not displayed).	Battery totally discharged.	 Plug in charger cable, battery is on charge Charge icon appears after approx. 2 hours Charge battery. 		
	Contact problem.	Check power supply and connection to the phone. Check battery contacts and device plug socket, clean them if necessary, then insert battery again.		
	No mains voltage.	Use different mains power socket, check mains voltage.		
	Wrong charger.	Only use original Siemens accessories.		
	Battery faulty.	Replace battery.		
SIM error.	SIM card not correctly inserted.	Check that the SIM card is inserted correctly (p. 8).		
	SIM card contacts dirty.	Use a dry cloth to clean the SIM card.		
	SIM card with wrong voltage.	Use 3 V SIM cards only.		
	SIM card damaged (e.g. broken).	Visually inspect the damage. Have SIM card replaced by service provider.		
No connection to network.	Weak signal.	Move to higher location, to a window or open space.		
	Outside GSM range.	Check coverage area of service provider.		
	SIM card not valid.	Contact the service provider.		
	New network not authorised.	Try manual selection or select a different net- work (p. 24).		
	Network barring is set.	Check barrings (p. 24).		
	Network overloaded.	Try again later.		
Phone loses network.	Signal too weak.	Reconnection to another service provider is automatic (p. 24). Switching the phone off and on may speed this up.		

28 Questions & Answers

Question	Possible causes	Possible solution
Calls not possible.	2nd line set.	Set first line (p. 24).
	New SIM card inserted.	Check for new restrictions.
	Charge limit reached.	Reset limit with PIN 2 (p. 16).
	Credit used up.	Load credit.
Certain uses of the phone not possible.	Call restrictions are set.	Barrings may be set by your service provider. Check barrings (p. 24).
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook.
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p. 22).
SMS (text message) flashing.	SMS memory full.	To free up capacity, delete or file messages (SMS).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Memory problems for, e.g. messages, ring tones, pictures.	Phone memory full.	Delete files in the applicable areas and unneeded T9 dictionaries.
No WAP access, no download possible.	Profile not activated, profile set- tings wrong/incomplete.	Activate WAP profile (p. 20), set (p. 20). If necessary ask your service provider.
Message cannot be sent.	Service provider does not support this service.	Check with your service provider.
	Phone number of the service cen- tre is not set or is wrong.	Set service centre (p. 19).
	SIM card contract does not support this service.	Contact your service provider.
	Service centre too busy.	Repeat message.
	Recipient does not have a com- patible phone.	Check.
EMS pictures and sounds not displayed at destination phone.	Recipient's phone does not sup- port EMS standard.	
No Internet access possible.	Wrong WAP profile set or settings wrong, incomplete.	Check settings, speak to service provider if necessary.
PIN error/ PIN2 error.	Three wrong entries.	Enter the PUK (MASTER PIN) supplied with the SIM card according to the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.