SIEMENS Mobile SIEMENS Mobile

Issued by Information and Communication mobile Haidenauplatz 1 D-81667 Munich

© Siemens AG 2004 All rights reserved. Subject to availability. Rights of modification reserved.

Siemens Aktiengesellschaft www.siemens-mobile.com Designed for life

CX65 CXT65 CXV65

Safety precautions3	Phonebook	35
Telephone list (schematic) 5	New entry	35
Display symbols7	Call (search for an entry)	36
Getting started9	Change entry	36
Inserting the SIM card/battery 9	<special books=""></special>	
Charging the battery 10	Call records	38
Changing CLIPIt™ covers 11	Durat/charges	39
Switching phone on and off/	Camera	
entering PIN12	Photo mode	
Enter PIN12	Video mode	
Emergency number (SOS) 12	Inbox	42
General instructions13	SMS	43
Standby mode 13	Write/send	43
Signal strength 13	Read	
Digital Rights Mgmt. (DRM) 13	Setting	
Main menu13	MMS	
Standard functions15	Create	
Highlighting mode 16	Templates	
Menu speed dialling 16	Sending an MMS	
Security 17	Receiving an MMS	53
Codes 17	Reading an MMS	54
Preventing accidental	Setting	
activation 18	E-mail	
Text entry19	Write	
My phone 23	Receive/read	
Calling 24	Setting	
Default book30	Voice message/mailbox	
Addressbook31	Inst. message	
New entry 31	Start menu	
Change entry 33	Login	62
Dialling an entry33	Contact lists	
Groups	Starting to Inst. Message	65
310aps	Msg. history	66
	Setting	ხნ

CB services68	Extras104
Surf & fun 69	SIM services (optional)104
Internet69	Alarm clock104
Bookmarks 71	Sound recorder105
Games and Applications 72	Calculator106
Downl. assis 72	Unit converter106
Setup 74	Stopwatch107
Profiles	Countdown108
Themes 76	Remote synchronisation 108
Display 77	Media player110
Dynamic light 79	My stuff111
Ring tones 80	Mobile Phone Manager 113
Call setup 82	Questions & Answers115
Phone setup 84	Customer Care118
Clock 86	
Connectivity 87	Care and maintenance 120
Security90	Product data121
Network 92	Accessories122
Accessories94	Battery quality statement 124
My menu 95	Guarantee certificate (UK) 125
Fast access key 96	Guarantee certificate (IRL) 126
Organiser 98	Menu tree127
Calendar 98	
Appointments 99	SAR – European Union
Tasks 100	(RTTE)133
Notes 101	SAR – International
Missed appts 101	(ICNIRP)135
Dictating mac 102	Index136
Time zones 103	

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content to your children and the hazards associated with using the phone.



Remember to comply with legal requirements and local restrictions when using the phone. For example in aeroplanes, petrol stations, hospitals or while driving.



 
Only use original Siemens batteries (100 % mercury-free) and charging devices. Otherwise you risk serious damage to health and property. The battery could explode, for instance.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20 cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Explain the content and the hazards asociated with using the phone to your children





The mains voltage specified on the power supply unit (Volt) must not be exceeded. Otherwise the charging device may be destroyed.



The ring tone (p. 80), info tones (p. 84) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 26). Otherwise you risk serious permanent damage to your hearing.



You may only open the phone to replace the battery, face-plate, keypad or SIM card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the operating licence.



Do not use an optical magnifier to look at the activated infrared interface [Class 1 LED product (classification as per IEC 60825-1)].

Important



Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee! These safety instructions also apply to Siemens original accessories.

Telephone list (schematic)

① Call key

Dial phone number/name displayed/ highlighted, take calls. Show last phone numbers dialled in standby mode.

- ② On/Off/End key
 - Switched off: Press and hold to switch on.
 - During a conversation or in an application: press briefly to finish.
 - In menus: Press briefly to go back a level. Hold down to go back to standby mode.
 - In standby mode: hold down to switch off phone.

3 Joystick

Press the joystick down vertically to start an application or function

In standby mode:

- Open main menu.
- Open user profiles.
- Open phonebook/addressbook.
- Inbox open
- Start the camera.


In lists, messages and menus:

- Scroll up and down.
- Back one level.

During a call:




Call options.

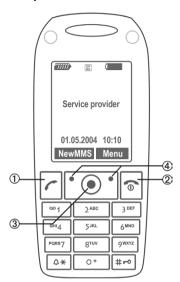

4 Soft keys

The current functions of this key are shown in the bottom line of the display as Text/symbol (e.g.).

 S Additional key for WAP access (if required, and no other default setting is made).



① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.


- 2 LED for Dynamic Light (p. 79)
- 3 Loudspeaker
- 4 Display
- ⑤ Infrared interface (IrDA)
- 6 Input keys
- - Press and hold in standby mode: Switch all audible signals on/off (except alarm).
 - Hold down on incoming call: Switch off ringtone for this call only.
- ® #⊷ Key lock


Press and hold in standby mode: Switch key lock on/off.

Connection socket

For charger, headset, flash, etc.

- Connection for external antenna
- (1) Camera lens
- Mirror (depending on telephone model)

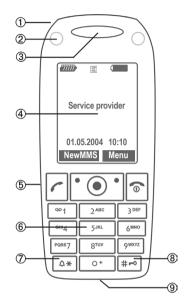

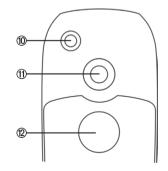

Display symbols

Display symbols (selection)			Keypad locked
111111	Signal strength	- G	Auto answer feature on
\Longrightarrow	Charging	T9Abc	Text input with T9
	Battery charge level, e.g. 50 %	GP RS	Activated and available
a6 -	Phonebook	IGPI IRSI	Registered
	Records	GP RS	Temporarily interrupted
(£)	Surf & fun Service supplier portal	•	Browser Offline
1/	Organiser		Browser online
	Messages	GPRS	Browser via GPRS online
	Camera	Ø	Browser no network
<u></u>	Extras	D :	IrDA activated
	File management	Dm	IrDA transmission
	0.11	Events (sele	ction)
	Settings	. □!	SIM memory full
4	All calls are diverted	[<u>[</u>]	SIM memory full
Ø	Ringing tone off		Phone memory full
- Ĉî	Short ring (beep) only	<u> </u>	No network access
≯¦Û	Ringer only if the caller is stored in the Phonebook.		Missed call
(<u>Ö</u>)	Alarm set		Memory assistant

Message symbols (selection)				
\searrow	Unread			
	Read			
	Draft			
Ē	Sent			
	MMS not sent			
XX	MMS received			
N.	MMS read			
	MMS with DRM contents (p. 13)			
4	E-mail forwarded			
ΣŲ	E-mail with attachment			
00	Voice mail received			

Camera symbols				
02	Switches between photo and video			
\$ (\$\$)+2	Brightness			
€Q ×1	Zoom factor			
	White balance			
S.	Flash connected			

Getting started

Inserting the SIM card/ battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

Press the grooved area ①, then push cover towards the front in the direction indicated by the arrow ②.



 Place the SIM card in front of the slot with the contact surface facing downwards. Then press the SIM card slightly to push it in ③ (ensure that the chamfered corner is in the correct position).



 Insert the battery sideways into the phone ⁽⁴⁾, then press it downwards ⁽⁵⁾ until it engages.



- To remove, press the retaining tab on the side of the battery, then lift the battery out.



Additional information

Please switch off your phone before removing the battery!

Only 3 V SIM cards are supported. Please contact your service provider if you have an older card.

Charging the battery

Charging the battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.





Display during charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to 45 °C. If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Operating time

The operating time depends upon the respective conditions of use. Extreme temperatures considerably reduce the phone's standby time. Avoid placing the phone in the sun or on a heater.

Call time: 100 to 330 minutes Stand-by time: 60 to 300 hours.

Charge icon not visible

If the battery has been discharged fully, the charge icon is not immediately visible when the power supply is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3 to 4 hours.

Only use the plug-in power supply included in delivery!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not finish the charging process prematurely.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Changing CLIPIt™ covers

You can use CLIPItTM covers (accessories) to adjust the appearance of your phone according to your personal taste.

Please switch the phone off before changing the keypad mat or face-plate.

 
Dismantling the phone

Remove battery cover (see p. 9). To remove the faceplate, insert the lug on the battery cover into the opening and open the lock by simultaneously applying slight pressure ① and turning the lug ②.



Assembling the phone

Remove the old keypad mat and insert the new keypad mat ③ into the faceplate. Take care that it is correctly positioned.



Insert the phone into the bottom of the faceplate ④ and then push it in carefully until it clicks into position ⑤.



CLIPit™ Covers

The new keypad has an additional key beneath the joystick to permit direct access to the Internet information from the service provider.

Switching phone on and off/entering PIN

Switching phone on and off



Hold **down** the On/Off/End key.

Enter PIN

The SIM card can be protected with a 4 to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correction with ...



Confirm by pressing the joystick. Logging on to the network will take a few seconds.

Additional information	
Change PIN	p. 17
Clear SIM card barring	p. 18

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key SOS you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Switching on your phone for the first time

Time/date

During commissioning, set the clock so that it displays the correct time. You will not have to make this setting again.



Press this key, then select Change.



First enter the date (day/ month/year), then the time (24 hours, including seconds).



Press this key. The time and date are updated.

Time zones

Set the time zone for your area.



Select the city in the desired time zone from the list ...



... and specify this firmly.

Copying SIM addresses

The first time the SIM card is inserted, the entries on it can be copied to the Addressbook. Please **do not interrupt this procedure**. During this time, **do not accept incoming calls**. Follow the instructions in the display.

You can also copy data from the SIM card at a later time (p. 36).

General instructions

Standby mode

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Hold down the On/Off/End key to return to standby mode from any situation.

Signal strength



Strong receive signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Digital Rights Mgmt. (DRM)

Remember that you telephone has digital rights management. The use of downloaded pictures, sounds or appliations can be restricted by the suppliers, e.g. copy protection, use for a limited period of time only, number of times it can be used etc. (see also p. 73).

Main menu

The main menu is displayed graphically with symbols:



Call up from standby mode.



Select the application symbols.



Start an application.

Main menu options

Options Open menu.

Different functions are available depending on the context:

Big letters	Selection between two font sizes.
Illumination	Set display light brighter/darker.
Help	Display of a help text

User guide

Menu controls

The steps needed to reach a function are shown in a **condensed form** in the user guide, e. g. to display call list for missed calls in condensed form:



This comprises the following steps:



Open the main menu.

Select $\mathbb{G}^{\mathbb{Q}}$, then function Calls missed.



Confirm.

Symbols

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key



Soft keys



Displays a soft-key func-



Press the joystick vertically, e.g., to call up the menu.



Press the joystick in the direction indicated.



Function dependent on service provider, may require special registration.

Standard functions

Option menus

Functions which appear repeatedly in the options menu are listed here.

Options Open menu.

Edit	Open the entry to edit.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send	Select transmission service and medium for sending or printing.
Reply/ Reply to all	The sender becomes the recipient, "Re." is placed in front of the subject matter and the received text is transferred into the new message.
Save	Store entry.
Save to 2	Save recipients in the current address directory.
Sort	Set sort criteria (alphabetical, type, time).

Text input (p. 19)	T9 preferred: Activate/ deactivate T9 input.
	Input language: Select language for text.
Rename	Rename selected entry.
Capacity	Display memory capacity.
Attributes	Display properties of the highlighted object.
Help	Display help text.

Highlighting mode

With some applications (e.g. Phonebook/Addressbook) one or more entries in a list can be highlighted to carry out a function jointly.

Options

Open menu.

Mark

Activate highlighting

mode.

If a **non-highlighted** entry is selected, this can be highlighted:

Mark

The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark

Dehighlight the current entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Menu speed dialling

All menu functions are numbered internally. A function may be selected directly by entering these numbers in sequence.

E.g., write new SMS (from standby mode):



Press this key to display the main menu.



Press this key for Messages.



Press this key to Write message.



Press this key for SMS.

Security

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

Codes

PIN


	sonal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions on special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

Protects your SIM card (per-



PIN control

 The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you Some service providers do not permit deactivation of the controls.






Change PIN

 You can change the PIN to any 4 to 8-digit number you find easier to remember.







- → Security → Codes

Change PIN2

(Display only if PIN 2 is available). Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4–8 digits) when you call up a phone-code protected function for the first time (e.g. Direct call, p. 28). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. Contact the Siemens Service (p. 118).

Clearing SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN) provided by your service provider with the SIM card in accordance with the instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN use is deactivated (p. 17) confirmation is required to switch on the phone.

This prevents accidental activation of the phone, e.g. when you are carrying it in a bag or when you are travelling in an aircraft.



Press down.



Press. The phone switches on.



Press or take no action. The phone does not switch on

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:

2^{ABC}

Press **once briefly** to type the letter **a**, twice to type **b** etc.

Hold down to write the number.

Ä, ä, 1–9

Umlauts and numbers are displayed after the relevant letters.

√C

Press briefly to delete the letter before the cursor, hold down to erase the whole word.

()

Move the cursor (forwards/back).

#⊷

Press briefly: Swap between abc, Abc, ^{T9}abc, ^{T9}Abc, ^{T9}ABC, 123. Status shown in top line of display.

Hold down: All inputvariants are displayed.

△*

Press briefly: Special characters are shown.

Hold down: Open input menu.

0+

Press once/repeatedly:

.,?!'"0+-()@/:_

Hold down: Writes 0.

∞1

Writes blank. Press twice = jumps a line.

Special characters

Δ*

Press **briefly**. The symbols chart is displayed

								•	
1	1)	ż	i	_	;	!	?	,	
	+	-	"	,	:	()	1	*
1	¤	¥	\$	£	€	&	#	1	@
Г	[]	{	}	%	~	<	=	>
Г		٨	§	Γ	Δ	Θ	٨	Ξ	П
1	Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.



Confirm.

Input menu

With text input:



Press down: The input menu is displayed:

Text format (SMS only)

Input language

Mark

Copy/Insert

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options

Open text menu.

Text input Select.

T9 preferred

Select.

Change

Activate T9.

Select input language

Select the language in which you want to compose your message.

Options Open text menu.

Text input Select.

Input language

Select.

Select

Confirm, the new language is set. Languages with T9 support are marked with the T9 symbol.

Writing with T9

Since the display changes as you proceed

it is best if you finish a word without looking at the display.

Simply press the keys once only where the relevant letter is located. For "hotel", for example:



GHI₄

Press briefly for T9Abc then



6^{MNO}

3 DEF

<u></u> 00 1 A blank ends a word.

Do not use special characters such as Ä but rather use the standard characters, e.a. A: T9 will do the rest for vou.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5.818.437, 5.953.541. 5.187.480. 5.945 928 and 6.011.554: Canadian Pat. No. 1.331.057: United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329: Republic of Singapore Pat. No. 51383: Euro.Pat. No. 0 842 463 (96927260.8)

DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must highlighted be displayed. Then press



again. The displayed word is replaced with a different word. If this word is also incorrect, press



again, press until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

To add a word to the dictionary:



Select

The last suggestion is deleted and the word may now be entered without T9 support. Press Save to add it automatically to the dictionary.

Correct a word

Move left or right, word by word, until the required word is hiahliahted



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor and displays a new possible word!

Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to rewrite the complete word.



Set a full stop. The word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. provider.s = provider's.

Moving the cursor to the right ends the word



Press briefly: Switch between: abc, Abc, T9abc, T9Abc. 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 19).

Hold down: Open input menu (p. 20).

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS, e-mail).

Write text modules



Options Select New text.

Write text module.

Options Open menu and select Save. Accept the specified name or allocate a new

one.

Save.

Use text modules

Write message (SMS, MMS, e-mail).

Options Open text menu.

Insert Select.

Select Text modules.

Select text module from the list.

Select Confirm. The text module is displayed.

Confirm. The text module is inserted in the message to the right of the cursor.

My phone

Adjust your phone according to your own wishes in the following ways to give it a personal touch:

Ringtones (p. 80)

Assign individual ringtones to caller groups or special dates

Pictures (p. 111)

Assign individual pictures or photos to your Addressbook entries.

Animations (p. 78)

Choose a start-up and closing animation as well as a personal greeting.

Screensaver (p. 77)

Choose an analogue or digital clock, or a personal picture.

(Operator) Logo (p. 77)

Choose an individual picture (to be displayed in standby mode)

Wallpaper (p. 77)

Choose your own permanent background image.

Colour scheme (p. 77)

Select a colour scheme for the user interface.

Applications (p. 72)

Download your own applications from the Internet.

Where do I get what?

You can purchase additional ringtones, logos, animations and Java applications from your service provider or directly from Siemens.

Service supplier portal

Depending on your service provider, you will find direct access to his portal on your telephone via menu items or bookmarks. Please contact your service provider for more information on these services.

Siemens Mobile Portal

You will find additional ringtones, logos, animations and screensavers as well as more application, games and services in the Internet at this address:

www.siemens-mobile.com

Or you can download them directly via WAP:

wap.siemens-mobile.com

You will also find a service for saving data here as well as a list of the countries in which these services are available.

My menu

Create your own menu with frequently (p. 95) used functions, phone numbers or WAP pages.

Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter the number (always with prefix/international dialling code).

A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

Fnd call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume



Regulate the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press the Call key twice.

To redial other numbers that were dialled previously:



Press the Call key once.



Pick out the phone number from the list.



Press this key to select the phone number.

If the number is busy

If the called number is busy or cannot be reached because of network problems several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions

Either

Auto redial

Auto dial

The phone number is automatically dialled ten times at increasing time intervals. End with:

Tend key.

Or

Call back

Jack

Call back

Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder

Prompt

A beep reminds you to redial the displayed phone number after 15 minutes.

Additional information

→□

Store phone number in the Addressbook/Phonebook.

Handsfr. Handsfree switch on (playback from loud-

speaker).

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

△*

0+

Press and hold to switch microphone off.

International dialling codes

⊗!

Press and hold until a "+" is displayed.

Country

Press and select country.

Phone number memo

You can enter a phone number during the call. The person to whom you are speaking can hear these entries. When the connection has ended you can save or dial the phone number.

Accept call

The phone must be switched on. An incoming call will interrupt any other use of the phone.



Press.

Or



Press.

A phone number and the name of the caller transmitted by the network will be displayed if the number is saved in the Phonebook/Addressbook. A picture of the caller may also be displayed (p. 32).

Reject call

Reject

Press.

0r

Press briefly.

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information



Press and hold to switch off the ringing tone and vibration.

@

Missed call display.

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.

Handsfr.

Activate handsfree talking.



Switch on.



Use the joystick to adjust the volume.

Handsfr.

Deactivate.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! Otherwise, you will damage your hearing!

Swapping between 2 calls

Establish a second connection

You can call another number during a call

Options

Open call menu.

Hold

The current call is put on hold.

Now dial the new phone number or

Options, select the Phonebook, Addressbook, or phone number.

When the new connection is established:

Swap

Swapping between calls.

Incoming calls during a call

You may need to register for this service with your service provider and set your phone accordingly (p. 82). During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You have the following options:

 Accept the waiting call in addition to the first

Swap

Accept the waiting call, putting the current call on hold to do so.

Always proceed as above to swap between the two calls.

· Reject the waiting call

Reject

Press.

Or

Divert

The waiting call is diverted, for example, to the mailbox.

 Accept the waiting call and end the current call



End the current call.



Accept new call.

Ending call(s)



Press the End key.

After the Return to held call? display, you have the following selection:

Yes

You accept the call on hold.

No

You end the 2nd call.

Conference

Call up to 5 parties one by one and link them together in a multiparty call. Some of the functions described may not be supported by your service provider or may have to be enabled specially.

A connection has already been established:

Options

Open menu and select Hold. The current connection is maintained.



Now dial a new number. When the new connection is established ...

Options

... open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the multiparty conversation are ended when the End key is pressed.

Call options

The following functions are only available during a call:

Options Open menu

 
Options Op	Jen menu.
Hold	Maintain current call.
Microphone on	If switched off, the person on the other end of the line cannot hear you (muting). Also: [ax] Hold down
Handsfree	Call via the loudspeaker.
Volume	Adjust handset volume.
Default book	Phonebook/Addressbook.
Conference	(p. 27)
Time/charge	Display duration of call up to now and (if set) the charges incurred while the call is in progress.
Send DTMF	Enter tone sequences (numbers) for remote inquiries to an answering machine.
Call transfer < !!	Connect current call to a second call. For you, both calls are now ended.
Main menu	Access to the main menu.
Call status	List all held and active calls (e.g. participants in a conference).

Direct call

If this is active, only one number can he dialled


Switch on






Enter phone code.

 When first prompted you define and enter the phone code (4-8 digits).



Please do not forget this code (p. 17)!

 

Confirm.

Apply

Carola To dial the phone number (e.g. Carol's phone num-

ber), press and hold the right display key.

Switch off

Press down:

Enter phone code.

Confirm input.

Tone sequences (DTMF)

You can, for example, enter control codes (numbers) for remote access to an automatic answering machine while another connection exists. These entries are transmitted directly as DTMF codes (control codes).

Options

Open menu.

Send DTMF

Select.

Using the Phonebook/ Addressbook

Store phone numbers **and** control codes (DTMF codes) in the Phonebook/Addressbook in the same way as a normal entry.



Enter phone number.



Press until a "+" appears in the display (wait for the connection to be established).



Enter DTMF codes (numbers).



If necessary, wait again for three seconds at a time for the receiver to process the entries safely.



Enter a name.



Store entry.

You may also store just the DTMF codes (numbers) and then send them during the call.

Default book





Select function.

Show entries

The entries in the standard directory (Addressbook or Phonebook) are shown



Select a name with the first letter and/or scroll

New entry

Create new entry.

Phonebook (see also p. 35)

Addressbook (see also p. 31)

Default book

You can set a particulary directory as your preferred one to use.

The selected standard book is opened in standby mode with the iovstick.



Open Phonebook or Addressbook

Addressbook

In the Addressbook, a lot of data can be recorded for each entry and additional functions such as pictures, birthdays, chat can be used.

Phonebook

The Phonebook is located on the SIM card. Only one phone number can be entered per entry. The Phonebook on the SIM card can easily be transferred into a different telephone.

Business card

Create your own business card to sent to a different GSM-phone. If no business card has been created yet, you will be asked for your input.



Move from field to field to enter vour details.



Press.

Additional information

The content of the business card corresponds to international standards (vCard).



Copy numbers from Addressbook/Phonebook

Groups

See p. 34.

<Info numbers>

See p. 37.

Addressbook

The Addressbook can store up to 1000 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However, you can exchange data between the Addressbook and the Phonebook on the SIM card.

New entry

The address book is set as standard:



Open Addressbook (in standby mode)



Display input fields.



Select requiredinput fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

At least one name must be entered. Always enter phone number with prefix

Possible input fields

Last name:	URL:
First name:	Inst. message >>
Phone number:	Group:
Phone no./office:	Company:
Phone no./mobile:	Address: >>
Fax:	Birthday: >>
Fax 2:	Picture:
E-mail address:	
E-mail 2:	All fields

Additional information

Group: Allocation to a group

(p. 34).

Address: Extension to enter the

complete address:

Street:, Post code:, City:,

Country:

Com. services

Information if the entry is being used as a chat con-

tact (p. 61):

Nickname:, WV user ID:,

ICQ number:,
AIM screen name:

Birthday: After activation, the date

of birth is entered.

Reminder: The telephone reminds you one day before the birthday at the

time entered.

Picture: Assign a picture to the entry. It is displayed if you

are called by the corresponding phone number.

All fields/Reduced fields

Display of number of input fields.

Save the entry.

Additional information

ficf)

Temporary switch to Phonebook.

Synchronisation

With the mobile phone manager, (p. 113) you can synchronise your Addressbook with Outlook® and other Siemens telephones.

Using Remote sync. you can synchronise your mobile with an organiser stored on the Internet (see also p. 108).

Display/find entry



Open Addressbook (in standby mode).



Select required entry.



Display.

Display options

Options

The options menu only ever offers the functions for the currently selected input field.

Move to ...

Allocate current or highlighted entries to a group.

View

Display an allocated picture.

Copy to SIM

Copies name and **one** phone number to the SIM card (Phonebook).

New SMS, New MMS, New e-mail Create a message with the selected entry.

Browser

Start WAP browser and visit URI

Inst. message Begin chat p. 61.

(For standard functions see p. 15)

Change entry



Open Addressbook (in standby mode).



Select required entry.



Press.



Select input field.



Open entry.



Make changes.



Save.

Dialling an entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.



The number is dialled.

If there are several numbers in the address book entry, these are offered for selection.



Select phone number.



The number is dialled.

Address book options

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options Open menu.

Move to	Allocate current or high-lighted entries to a group.
Copy to SIM	Copies name and number to the SIM card (Phonebook).

Filter	Only those entries which match the filter criteria are displayed.
--------	---

Import	Set up readiness to receive
	for a Phonebook entry via
	IrDA (p. 87) or SMS (p. 43).

Sort	Specify sorting criteria for
	output of the Addressbook
	entries.

Search	Enter search term.
(For standard functions see p. 15)	

Groups

Nine groups are specified in your phone to enable you to arrange your Addressbook entries clearly. You can rename seven groups.

Open Addressbook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).



Select group.

Groups menu

Options

Open menu.

Rename group

Change name of group.

Group symbol Assign a symbol to a group. The symbol must then appear in the display when one of the group members calls.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Received: Contains Addressbook entries received by IrDA (p. 87) or SMS (p. 43) (name cannot be changed).

Ringing tone for group

Assign a ringtone to a group that plays when one of its members calls you.



 
→ ⊃ → Ring tones → Group calls



Select group.



Confirm. If a ringtone has already been set, it will be played. Otherwise, the ringtone list will be displayed and you can select one.





Confirm.

Phonebook

Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook, You can. however, exchange data between the Phonebook and the Addresshook

New entry

If the Phonebook has been selected as standard.



Open Addressbook (in standby mode).



Select < New entry>.



Display input fields.



Select input field.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

Phone number:

Always enter phone number with prefix. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

Group:

Default: No group

Important phone numbers are combined together in a group (VIP).

Location:

Default SIM

Special SIM cards can save phone numbers in a protected area (Protected SIM) (PIN2 required).

Record number:

Each entry is automatically assigned a record number. You can also dial using the record number.



Press to store the new entrv.

Additional information



Temporary switch to Addresshook

Country International dialling code... p. 25

Funktionen zur Text entry.....p. 19

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook



Press and select Edit.



Select desired input field.



Make changes.



Press.

Phonebook options

The following functions are available, depending on the current situation.

Options

Open menu.

Copy all to
Delete all
Import

Copy all highlighted entries to the Address-book.

Copy all entries to the Addressbook.

The entire Phonebook is deleted. PIN-protected

Set up readiness to receive for a Phone-book entry via IrDA (p. 87) or SMS (p. 43).

(For standard functions see p. 15)

<Special books>



Open Addressbook (in standby mode).

<Special books>

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information. These numbers can be changed, deleted and also sent as an SMS message.

<VIP numbers>

Display the phone numbers saved in the VIP group.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing.

<Service nos.>/<Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider. They may be used to call local or national information services or to use services offered by your service provider.

Phone number extensions in the Phonebook

Digits may be replaced by a "?" when phone numbers are entered in the Phonebook/Addressbook:



Press down:

These wildcards must be replaced with numbers before dialling (e.g., with the extension numbers in a phone system).

To make a call, select the phone number from the Phonebook/Addressbook.



Press



Replace "?" with numbers.

Number is dialled.

Call records

The phone number of a caller is displayed if

- the caller has switched off the Incognito function and
- the network supports the "Caller Identity" function.

Alternatively, a caller's name is displayed if it is stored in the Phonehook / Addresshook

Your phone stores the phone numbers of calls for convenient redialling.







Select record.



Open call list.



Select phone number.



Dial phone number.

Or

View

Display information on the phone number.

Up to 500 entries are stored in the records:

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Icon for missed call (in standby mode). Press the display key beneath the symbol to call up the Inbox (p. 42).

Calls received

Accepted calls are listed.

Calls dialled

Access to the last numbers dialled by you.



Fast access in standby mode

Delete records

The records are deleted.

Call list menu

The records menu can be called up if an entry is highlighted.

Options

Open menu.



Copy the currently selected phone number into the preferred directory.

(For standard functions see p. 15)

Durat/charges

You can display the charges and duration during a call. You can set a unit limitation for outgoing calls.



Select

Last call

All outg, calls

All incoming

Remain, units

Charge sett.



Select.



Reset the selected report.





Reset

Open menu.

Currency

Edit your currency.

Personal rate

(PIN 2 prompt)

Enter the currency as well as the charge per unit and time.

Account limit

(PIN2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.



Press



Enter PIN2.

Account limit

Switch on.



Enter number of units

Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary depending on the service provider.

Auto display

Call duration and charges are automatically displayed.

Camera

You can view photos/videos recorded on the integrated camera immediately,

- use the photo as a background image, logo, a switch on/off animation or a screensaver
- · send the photo/video via MMS or e-mail

Switch on



Or

Starts camere in standby mode



Switches between frame and videorecording.

The current (preview) image is displayed. You will see the following in the first line from left to right:



Brightness



700m factor



White balance.

Flash connected.

In the top right-hand corner of the preview image, the number of photos which can still be taken in the selected resolution is displayed. This number varies considerably from motif to motif (storage space required). Beneath the preview image, you will find a reference to the selected resolution. In video

mode, the recording time already used and the maximum recording time still available is shown here.



Photo mode



Takes a photo.



Displays the preview image of the next photo.

The photo is saved with a name, the date and the time. To enter the name, see Setup in the options menu.

Settings prior to taking a photo:



Setting the brightness.

Sets the zoom factor.



A setting can be made for the quality of the image regardless of the preview image resolution.

Premium: 640 × 480 (VGA) High: 320 × 240 (QVGA) Medium: 160 × 120 (QQVGA)

Wallpaper: 132 × 176

The resolution may decrease depending on the selected digital zoom.

Video mode

The video mode resolution is the same as the preview image resolution.



Start the video recording.



Terminate the video recording.

A red point appears in the top right in the display while the video recording is being made.



Plays the video recording.

Flash (Accessories)

If the flash is active, this is shown by a symbol in the display. The flash is constantly loaded while connected to the telephone. This reduces the stand-by time.



This symbol appears when the flash is being loaded.

Seettings, see options menu.

Camera options

The following functions are available, depending on the current situation.

Options

Open menu.

Settings

- · Name for recordings
- · Image resolution.
- Colour mode: Normal, sepia, grey tones.

Pictures

Displays list of photos.

Other videos

Display the video list.

Microphone on

Switches the microphone on or off

on or or

Use flash

Choose between:

Automatic, Off, Red eve red.

Self timer

The photo is taken approx. 15 seconds after triggering. For the last 5 seconds, you will hear a signal tone each second

Cho

Choose between:

Automatic, Indoor,

(For standard functions see p. 15)

Additional information



White

halance

Insufficient memory available. Start the memory assistant to delete specific data (p. 84).

A mirror can be attached to the rearside of the telephone depending on the telephone variant. This makes it easier to make self portraits.

Inbox

The central input folder offers immediate access to the messages currently received. This means that you no longer have to look through all input folders for the various message types. The entries are marked with a symbol to indicate their type and status. You will find a list of the symbols on p. 7.

To call up the central input folder, e.g. if a new SMS has been received:



Press the display key beneath the symbol.

Or

In standby mode:

In the central input folder, you will find the following message types:

SMS, MMS, E-mail

System messages:

Message about MMS, Missed alarm, Missed appts., Calls missed, WAP push, Voice message

Data objects

Ring tones, Pictures and Video, calendar entries. Notes and Business card.



When you open an entry, the relevant application also starts.

After a set time span, entries which have already been read and opened are only displayed in the messagerelated incoming lists (see Setup in the options menu).

Inbox options

Options Open menu.

Receive e-mail Select set access and send all e-mails Setup If entries have been read, remove them from the Inhox: Daily, Never. **Immediately** If Daily has been selected, specified the time

(For standard functions see p. 15)

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Write/send









Enter text.

You will find informationen on writing texts with and without T9 in the chapter "Text entry" (p. 19).

The following is displayed in the to display line: Text entry status, number of SMS required, number of characters still available.



Start sending procedure.



Select phone number from the Phonebook/ Addressbook or enter it.

Group If necessary, select a group.



Confirm. The SMS is transmitted to the service centre to be sent and saved in the Sentbox list.

Text options

	Options	Open menu.
	Save	Save composed text in draft list.
	Picture& sound	Add pictures, animations and sounds into message (see following text).
	Text modules	Insert text module (p. 22).
	Format	Font size: Small font, Medium font, Large font Underline
		Alignment: Default alignm., Left, Centre, Right
		Mark (highlight text with the joystick)
	Delete text	Delete the whole text.
	Send with	Select SMS profile so the SMS can be sent.

(For standard functions see p. 15)

Picture&sound

Send the pictures and tones with or without accompanying text.

Remember that these may be protected (DRM, p. 13).

The text input field is open:

Options

Open menu.



Select Picture&sound.

The menu contains:

Fix animations

Fix sounds

Own animat.

Own pictures

Own sounds



Select area.



Confirm. The first entry of the selected section is displayed.



Scroll to entry required.

For Fix animations/Fix sounds:



The selection is added to the SMS.

For Own animat./Own pictures/ Own sounds:



The selection is displayed/ played back.



The selection is added to the SMS.

The pictures which have been added are displayed, sounds are displayed in the form of "wildcards".

SMS to group

You can send an SMS message as a "circular" to a recipient group.



Open menu.

Group

Select.

The list of groups is displayed.



Select group.



Open group and highlight all/individual entries.



A safety inquiry is made and then sending is started.

Read



Arrival of a new SMS announced in the display. Open it with the display key beneath it Inbox (p. 42).



Reading the SMS.

Scroll through message line by line.



Reply

You can answer the SMS now open immediately. The new additional text is placed above the received text.



Functions for a direct reply.

Reply options



Open reply menu.

•	
Write message	Create a new reply text.
Edit	Edit received SMS or add new text.
Answer is YES	Add Answer is YES to the SMS.
Answer is NO	Add Answer is NO to the SMS.
Call back, Delay, Thanks	Add a standard text as a reply to the SMS.

Read options

Options	Open	reply menu.
Reply		See "Reply options" above.
Picture&s	ound	Save picture/sound contained in the SMS

Picture&sound Save picture/sound contained in the SMS

Text zoom Enlarge/reduce text display.

Archive Move SMS message to archive.

(For standard functions see p. 15)

Lists

All SMS messages are archived in different lists, according to their status. (List of message symbols, see p. 7):

Inhox



The list of received SMS messages is displayed.

Draft





The list of not yet transmitted SMS messages is displayed.

Unsent



→ Unsent → SMS

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted

Sent





The list of sent SMS messages is displayed.

SMS archive



→ SMS archive

The list of SMS messages stored in the phone is displayed.

List options

Different functions are offered depending on the list.

Options

Open menu.

Send Send with

Archive

Send or forward entry. Select an SMS profile for

transmission

Move SMS message to archive

(For standard functions see p. 15)

Setting

SMS signature



 → Msg settings → SMS → SMS signature

You can enter a "signature" with a maximum of 16 characters. This signature will then be attached to each SMS except Reply and when changes are made to an existing SMS.

SMS profiles



 → Msg settings → SMS → SMS profiles

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The presetting depends on the SIM card inserted.

Activate profile



Select profile.



Activate.

Set profile



Select profile.

Edit

Open to edit the profile.

Service centre

Enter the phone numbers for the service centre as provided by the service provider.

Recipient

Enter a standard recipient for the profile.

Message tvpe

- · Manual: Inquiry for all messages.
- Standard text: Normal SMS message.
- Fax: Transmission via SMS
- · F-mail: Transmission via SMS
- · New: You may need to obtain the required code number from your service provider.

Validity period

Period in which the service centre is to try to deliver the message:

Manual 1 hour 3 hours 6 hours 1 day 1 week. Maximum*

* Maximum period that the service provider permits.

Status report 81

Receive confirmation of successful/failed transimssion of a message. This service may be subject to a charge.

Direct reply < ₹ !

If activated, the reply to your SMS message is handled via your service centre (for information, please contact your service provider).

SMS via **GPRS** 81

Sent SMS automatically via GPRS (p. 87).

Save aft. send

Sent SMS messages are saved in the Sentbox list.

More information on SMS

SMS status report

If the message cannot be transmitted to the service centre you are offered the chance to repeat the transmission. If this also fails, contact your service provider. The Message sent! message only indicates transmission to the service centre. This will then attempt to relay the message within a certain period.

See also Validity period (p. 47)..

Phone number in SMS

Phone numbers displayed in the highlighted text can be dialled () or saved in the Phonebook/Addressbook.

Downloading ringtones and logos

You can receive links for downloading ringtones, logos, screensavers, animations and information about applications with an SMS. Please highlight this link and, by pressing the Call key , start the download. Please check that the dial-in access (p. 88) is configured.

Remember that these may be protected (DRM, p. 13).

SIM memory full

If the message icon flashes the SIM memory is full. **No** more SMS messages can be received. Messages must be deleted or archived.

MMS

The Multimedia Messaging Service enables you to send texts, pictures/ videos and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show"

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Create





() → Write message → MMS

An MMS consists of the address header and the content

An MMS may consists of a series of pages. Each page may contain a text, a picture/video and a sound. Remember that pictures and sounds may be protected (DRM, p. 13).

Write texts with the help of T9 (p. 19).

Pictures and videos can be recorded with the integrated camera and/or loaded from My stuff (p. 111).

You can record Sounds with the sound recorder and/or load them from My stuff (p. 111).

First select an object for processing to be added to the first page of the MMS.

Pictures/videos

Limits on picture size can be set in the user settings.

<Picture> Select.



Display picture/video functions:

Insert picture

Open list to select a picture.

Insert video

Open list to select a video.

Camera

Activate the camera to take a photo or record a video for the MMS (p. 40).



Also possible.

Open

Display picture.

Delete

Delete inserted picture/video.

Save

Save picture/video for use later on.

Msg. details

Display properties, incl. any user right restrictions (p. 13).

Sounds

<Sound> Select.



Display sound functions:

Insert sound

Open list to select a tone.

Record

Activate tone recording in order to record tones (p. 105).



Also possible.

Open

Play back the tone.

Delete

Delete inserted tone.

Save

Save tone for use later on.

Msg. details

Display properties, incl. any user right restrictions (p. 13).

Text

<Text> Select and write the text.



The text functions are displayed (see also p. 19):

Insert from...

Choose any of the following for insertion: Text modules, Bookmark, Insert from

Delete text

Delete text on current page.

Save

Save text on the page as text module.

Text input

T9 settings:

T9 preferred, Input language

Mark

Text processing together with Copy and Insert.

Generation options

Options Open menu.		
Send MMS	Send MMS.	
Play	Play entire MMS on the display.	
Picture	See above.	
Sound	See above.	
Text	See above.	
Page	Add page: Insert new page behind current one.	
	Delete page: Delete current page.	

pages. Timing: Set the temporal sequence of the MMS presentation:

Page list: Display available

· Page duration: Automatic or Manual

· Show page: Only if Manual is set in front of it. Enter the lifespan of a page.

Msq. details

Enter sending parameters (see next chapter).

Save as templ.	After creating MMS, save it as a template. See also below:	
Layout	Select one of four possible layouts:	
	Text above, beneath, beside (on left or right) of picture.	
Colours	Select the colours for: • Message • Page • Bitmap • Text backg. • Text colour	
(For standard functions see p. 15)		

Templates





→ MMS templates

MMS templates are saved MMS with not address. They can be sent as new MMS or used as part of a new MMS. A maximum of 10 templates can be saved.

Create templates by writing a new MMS or using an MMS which you have already received.

Options

Open menu and select Save as templ.

Sending an MMS

The page(s) of the new MMS is (are) already created and the MMS is displayed.



Open address entry.



Subject: Enter a brief description.

Send to: Enter one or more phone

number(s)/e-mail address(es).
Insert from Addressbook.

Size: Display the size of the cur-

rent MMS.

Start sending procedure.

The MMS is sent after confirmation

Expanded address fields



Scroll downwards.

More: Provide additional

address fields.

Cc: Address(es) of copy

recipient(s).

Bcc: Address(es) of copy

recipient(s) who are not visible to the other recipi-

ents.

Attachments:

Insert attachments.

Date: Creation date.

Use delivery time:

Usee specified send time.

If Yes:

Delivery date: Send date.

Delivery time: Send time.

Icons for status information

ннѕ

Priority

 $\succeq_{\mathbf{i}}$

Send report.



Contains DRM (p. 13).

Sending options

Options Open menu.		
Send MMS	Send MMS.	
Play	Play entire MMS on the display.	
Edit	Object selection to change an object.	
Add recipient	Add recipient from the current address directory.	
Delete recip.	Delete individual recipient.	
Add attachm.	Add attachment: File Business card Appointment	
Page list	Display MMS pages for viewing and/or changing.	
Save as templ.	After creating MMS, save it as a template.	
(For standard	functions see p. 15)	

Receiving an MMS

Depending on the setting, an MMS can (p. 55) be received in two ways:

Complete transmission

The complete MMS is sent to your telephone. This can take quite long if the MMS is large.



Shown in the display.



Start reception. The MMS is sent.

Preliminary notification

You are notified that an MMS is awaiting reception.



Shown in the display.



Read the notification. Display the size of the MMS in KB.

Receive

The complete MMS is sent.



Display in Inbox.

Reading an MMS

An MMS has been fully received.



Select the MMS



Start automatic playing of the MMS.

Key functions for playback:

To the next page.

Press briefly once to 4 return to the start of the current page: press briefly twice to return to the start of the previous page.



Set volume.



Terminate

When the MMS is complete, the message details are displayed.

Description of the MMS. Subject:

From: Information about the sender.

Size of the MMS in KB. Size:

Expanded address fields

Scroll downwards.

More: Additional input fields.

Cc: Copy recipient.

Attachments:

Save attachments.

Date: Reception date. Symbols for status information

(see p. 52)

Lists

All MMS are saved in four different lists (list of message icons, see p. 7):

Inhox



The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press Receive.

Draft



→ Draft → MMS

The list of stored drafts is displayed.

Unsent



→ Unsent → MMS

The list of the MMS messages not yet completely transmitted is displayed.

Sent



→ Sent → MMS

The list of sent MMS messages is displayed.

List options

Different functions are offered depending on the list/situation.

Options Open menu.

Options Open	i ilieliu.	
Play	Play MMS on the display.	
Edit	Display MMS for processing.	
View	Display MMS for viewing only (write-protected).	
Send MMS	Send MMS.	
Reply MMS	Reply to MMS immediately.	
Forward MMS	Enter recipient(s) for forwarding.	
Msg. details	Display message parameters.	
Receiv.all MMS	Send all new MMS immediately.	
(For standard functions see p. 15)		

Setting



Msg settings → MMS → Select unction.

MMS profile:

6 MMS profiles can be set (5 in the telephone memory, one on the SIM card). The send properties can be specified in them. In most cases, the setting has already been made. If necessary, check with your service provider for details.

Activate profile



Select profile.

Options

Open menu and select **Activate**

Set profile



Select profile.

Options

Open menu and select Change sett.

User settings

Set the MMS dispatch to suit your requirements:

Delivery	Re
report:	tio

Earliest

Request delivery confirmation for sent messages.

Read reply: Request confirmation that the MMS has been read

Default Send priority:

Normal, High, Low

Validity: Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 1 day, 1 week, Maximum*

* Maximum period that the service provider permits.

Transmission from the

deliv. time: service centre to the recipi-

ent:

Immediate, Tomorrow

Default duration:

Length of display for an MMS page (standard requirement).

Retrieval:

Receive complete MMS or only notification of arrival.

Immediate
Receive complete MMS

immediately. Auto.homenet

Receive complete MMS immediately in home net-

work Manual

Only receive the notifica-

Spam filter: Settings for receipt of promotional MMS

Size indica-

Set max. message size and message handling.

E-mail

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write

→ Write message → E-mail

Enter the address data for the e-mail:

Send to: Enter one or more

E-mail address(es).

Insert them from the Addressbook/Phonebook.

Subject: Enter e-mail heading

(up to 255 characters).

Content Enter text.

To send:

Options Open menu.

Send e-mail

Select.

Or

All fields Opens additional input

fields.

Cc: Address(es) of copy recip-

ient(s).

Bcc: Address(es) of copy

recipient(s) who are not visible to the other recipi-

ents.

Attachments:

Add attachments such as images and sounds.

Options

Different functions are offered depending on the position of the cursor.

Options Open menu.

Send e-mail	Send e-mail.
Send later	Transfer e-mail into the Unsent list.
Save	Save e-mail in the Draft list.
Add recipient	Add recipient from the current address directory.
Delete line	Delete current line.
Insert from	Bookmark Insert them from the Addressbook/ Phonebook.
Add attachm.	My stuff Open to make a selection. Remember that pictures and sounds may be pro- tected (DRM, p. 13).
Delete text	Delete the whole text.
Text input	T9 preferred Input language

Receive/read



→ Inbox

→ Select function.

Before an e-mail can be read, it must be retrieved from the server. You have two options:

Retr e-mail

Only the message header in Inbox (p. 42) is sent. You can then decide if you also want to receive the contents:

Options

Open menu and select Retrieve body.

or want to delete the e-mail on the server:

Options

Open menu and select Del. on server.

Send/rec_mail

The set access is selected and all e-mails transferred into Inbox (p. 42). At the same time, completed e-mails are transferred from the Unsent list.

Attachments

Contains the e-mail attachments. these can be saved in My stuff (p. 111).

Options

Open menu and select Save attach

Lists

All e-mails are saved in different lists depending on their status (list of message icons, see p. 7):

Inhox



() → Inbox → E-mail

The list of received e-mails is displayed.

Draft



→ Draft → E-mail

The list of e-mails not yet transmitted is displayed.

Unsent





The list of e-mails not vet transmitted is displayed.

Sent





The list of transmitted e-mails is displayed.

List options

Different functions are offered depending on the list.

Options

Open menu.

Retr. e-mail

Only transfer the message header into Inbox (p. 42).

Retrieve body

Fetch the contents from the server if only the message header was received.

Del. on server

Delete the contents on the server if only the message header was received.

(For standard functions see p. 15)

Setting





Before using this service, you must set the server access and your e-mail options. Most of this data has already been entered. If not, you can obtain this from your service provider. See also on the Internet at:

www.siemens-mohile.com/screensaver

Accounts



Select account.

Open

Activating access



Select access.

Activates access

Set access



Select access or <Empty>.

Edit

Start the processing and fill in the data fields as specified by the service provider.

General sett.

Enter an e-mail address to which a Bcc (blind carbon copy) is always sent.

Voice message/mailbox





(→ Voice message

Most service providers provide a mailbox in which a caller can leave a voice mail for you if

- if your phone is switched off or not ready to receive,
- · if you do not want to answer.
- · if you are making a phone call (and if Call waiting (p. 82) is not activated).

If the voice mail service is not part of vour service provider's standard package, you will need to register for it, and possibly make the settings manually. The following sequence may vary from service provider to service provider.

Setup



The service provider supplies you with two phone numbers:

Save mailbox number

You call this phone number to listen to the voice mails left for you.







Select number from Phonebook/Addressbook or enter/change it.



Confirm.

Save call divert number

Calls are diverted to this phone number.



) → 🥽 → Phone setup → Divert → e. g. Unanswered → Set



Enter phone number.

Registration with the network is confirmed a few

seconds later.

OK

Listening to message



A new voice message can be announced as follows, depending on the service provider:



Icon plus beep.

Or

Notification via SMS.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold down (if necessary enter mailbox number once only). Confirm with OK and Mailbox depending on your service provider.

Inst. message

With this function you can transfer text, audio clips, pictures and files straight to and from one or more terminals (mobile phone, PC). This function is not offered by all service providers. Please ask your service provider about this.

Your dialogue partners are entered in contact lists. When a connection has been established, these lists show who is available, whether they want to be disturbed and what mood they are in.

GPRS must be switched on





Start menu

Login

Select the access via which the dialogue runs

or

Account: select (p. 66).

Msg. history

Read the messages from

the last meeting.

Setup Settings for your repre-

sentation, the applica-

tions and servers

Quit End application.

Rapid access ...

Select the access (p. 66)



⊘1



() → Inst. message → Login

The current contact list or the list is displayed (if necessary, set access first, p. 66).

Specify your own status (p. 67)

Options

Open menu.

My settings

Select and make entries.



Return to contact list.

Enter new contact (p. 61)

Options

Open menu.

Manage Press, then:

Add contact

select and enter the user ID at least.



Return to contact list.

Inst. Message with new contact (p. 65)



Select the contact.



Start Inst. Message.



Open editor.



Write text.



Send text



... etc.

Login



→ Inst. message → Login

Select the last access to be used (see also Automatic login: p. 67).

Contact lists

When the connection has been established, the contact list or the list of the contact lists is shown for selection

In the contact list, you will find a list of the most recently used contacts. The first time you log in, an "empty" contact list will be generated by the server if necessary.

Displays in the list:

-Conversation

Displays of the online contacts for the messages are available.

-Online

Online contacts with whom no conversation is being held at the moment.

-Group

Ø.

Groups for Inst. Message with several contacts.

-Offline

Contacts who are not online at present.

Managing the contacts



Select a contact.

Options

Open menu.

Manage

Select.

Contacts

Add contact

Different functions are offered depending on the selection:

Auu contact	User ID:
	Enter a non-ambiguous user (login) name.
	Nickname:
	Enter your own nick- name for the contact.
	Friend:
	T1 1 1 1 1

The contact receives the status Friend: and access to personal information (p. 67).

Search contact

Search for contact

Delete contact

Delete contact from the list

Block contact

No more messages are received from the contact and the contact receives no status information from you. This function works for all vour lists.

Managing the groups



Select one of the groups you set up yourself.

Ø.

Options

Select.

Manage

Manage group

Different functions are offered depending on the selection:

Open menu.

Add member	Add a new group member, see also Add contact
Search memb.	Search for group member.
Invite	Invitation to the contacts in your own group to Inst. Message.
Delete member	Delete contact from the group member list.
Add group	Add new group.
Search group	Search for group on the server (no longer in the "administered groups" list).

Create group	Group ID: Enter a non-ambiguous group name. Name: Name of group. Topic: Topic of group. Searchable: Other people can look for the group. Welcome note: Enter welcome text.
Delete group	Delete group.

Creating a new contact list

The current contact list is displayed.

Options

Open menu.

Contact list

Available contact lists are displayed.

Options

Open menu.

Create

Select.

Contact list ID:

Give the contact list its

own, specific name.

Name:

Allocate self-explanatory names.

Confirm.

Contact list options

Options Open menu.

Additional information about the contact or the group.

My settings Information on your current personal status

(p. 67). Manage Functions for managing

a contact or a group. Contact list Display contact lists for

selection Block list Display all blocked con-

tacts. Can be unblocked.

Appl. settings Set the application (p. 67).

Suspend Terminate the application, the server remains connected

Logout Log off from the server and return to start menu

Help Display help text.

Start chat

A contact list must be displayed.



Select a contact or a group.



Start communication with the contact.

The page is displayed. During Inst. Message with a group, the name of the sender is placed in front of each contribution.



Open editor.



Write text



Send text. The text appears in the chat soon afterwards.

Naturally, you can also receive messages from contacts whom you do not know. This will be pointed out to you in the display, and you can either switch to Inst. Message or ignore/block the contact.

Options (individual contact)

Options Open menu. Send sound Select and send a melody/ 8 tone from the list (DRM p. 13). Send Select and send a picture picture <8! from the list (DRM p. 13). Send anv Send any file. 8! Details Information about the contact (if this is authorised by him). Clear all Delete all texts in the current Inst. Message. Block No more messages are contact received from the contact and the contact receives. no status information from

vou. This function works

for all your lists.

Options (group contact)

Options

Open menu.

Leave group	Exit group.
Details	Information about the group: Group ID:, Name:, Topic:, Owner:
Clear all	Delete all texts in the current Inst. Message.

Receiving objects



Ø.

You will be informed in the display if sounds or pictures are sent to you during a dialogue.

Receive

Accept object.

or

Reject

Reject object.

Msg. history



→ Inst. message → Msg.

The messages from the last meeting are displayed. You can read and delete the contributions.

Requirement: The server must be disconnected, see Suspend (p. 64) and Automatic login: (p. 67).

Setting



→ Select function.

Account

The list of available accesses is displayed.



Select an access to establish a connection.

Or

<New entry>/Account sett.

8!

Set up an access or change the settings as specified by the service provider. Depending on the service provider, the settings may not be changeable.

Name:	Name of the access.
URL:	Enter URL, e.g. http:// www.abc.com
User ID:	Enter a non-ambiguous user (login) name.
Password:	Enter password (shown as a series of asterisks).

My settings

Information on your current personal status:

Alias:	Your own alias by which you can be found on the server.
AIM screen name:	Name to be displayed in the group.
Mood:	Information about your own mood, e.g. Happy, Sad, Sleepy, etc.
Status text:	Random text information, e.g. "Am at home".
Availability:	Availability: Available, Not available, Discreet
Mobile:	Enter the phone number with internal extension

Options

For **each** setting, specify who is allowed to view your personal information:

Public All contacts.

code.

Private

Contacts designated as

Friend: (p. 62).

Hidden Nobody.

Appl. settings

Settings for the application used:

settings for the application used.		
Automatic login:	Auto-reconnect to the last access to be used.	
Timeout:	Time without action after which the application is terminated. However, the server remains connected.	
Message info:/ Online info:	Signal the receipt of messages: Yes/No Signal given as: Sound Silent alert Pop-up Popup windows authorised: Yes/No	

CB services



→ Setup → CB services

Some service providers offer information services (info channels, Cell Broadcast). If reception is activated. your Topic list will supply you with messages on the activated topics.

CB messages are displayed in standby mode. longer messages are scrolled automatically.

Receive CB

You can activate and deactivate the CB service. If the CB service is activated, standby time for the phone will be reduced.

Topic list

You can add any topics to this personal list from the topic index. You can preset 10 entries with their channel numbers (ID) and, if applicable, with their names.

New topic Select.

- · If no topic index is available, enter a topic with its channel number and confirm with OK.
- · If the topic index has already been transmitted, select a topic and activate it with Options

Topic Select

Options Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it. edit it or delete it.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays Topic activated/deactivated.

New messages received on

the topic.

Messages already read.

Surf & fun

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Access to the service provider

Direct call-up of the browser with the URL from your service provider.

Internet





The browser is activated with the pre-set option as soon as you call up the function (Browser settings, S. 70; may be specified/pre-assigned by service provider).

Browser menu

Options

Open menu.

Homepage

Call up the pre-set homepage for the current profile.

Bookmarks

- List bookmarks Display list of bookmarks stored in the phone.
- Bookmark site The current page is saved as a bookmark.

Go to...

Enter URL for direct dial to an Internet address, e.g. wap.siemens-mobile.com

Reload

Reload current page.

Show URL

Display the URL of the page currently loaded for sending via SMS/MME/ e-mail.

History

Display last Internet sites to be visited.

Disconnect

Disconnect the Internet

File

Save object on the current page or save the complete page; display saved pages.

Setup

Set or reset browser (p. 70).

Exit browser

Close the browser.