

SIEMENS
mobile

Be inspired



Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2003
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.my-siemens.com

MC60

Safety precautions	2	Organiser	45
Phone overview	4	Calendar	45
Display symbols	6	Alarm	45
Getting started	7	Notes	46
Switch on, off / PIN entry	10	Missed appointments	46
Emergency number (SOS)	10	Time zones	46
Switching on your phone		Extras	47
for the first time	10	Alarm clock	47
General instructions	11	Calculator	47
Standard functions	12	Currency conv	47
Security	13	Stopwatch	48
Codes	13	Countdown	48
Calling	14	Voice command	48
Text entry	18	New ringtone	49
Text modules	21	SIM services (optional)	49
Phonebook	22	Fast access key/My menu	50
<New entry>	22	Filesystem	51
Assign picture	23	Questions & Answers	52
Voicedialling	24	Customer Care	55
Groups	25	Care and maintenance	57
Records, Durat/charges	26	Product data	58
Camera	27	Battery quality statement	59
Voicemail/CB services	29	Guarantee certificate (UK)	60
SMS	30	Guarantee certificate (IRL)	61
MMS	32	Menu tree	62
Message lists/settings	34	SAR - European Union (RTTE) ...	68
Surf & fun	35	SAR - International (ICNIRP)	70
Internet browser (WAP)	35	Index	72
Games & more	36		
Setup	37		

This is a summarised version of the operating instructions.

The detailed version is available on the Internet at:

www.my-siemens.com/mc60

Safety precautions

Information for parents

Please read the operating instructions and safety precautions carefully before use. Explain the content and the hazards associated with using the phone to your children.



Remember to comply with legal requirements and local restrictions when using the phone. For example, in aeroplanes, petrol stations, hospitals or while driving.



Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20cm between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



The SIM card may be removed. Caution! Small parts like this could be swallowed by young children.



The mains voltage specified on the power supply unit (V) must not be exceeded. Otherwise the charging device may be destroyed.



The ringtone (p. 39), info tones (p. 39) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to your ear when it rings or when you have switched on the handsfree function (p. 15). Otherwise you risk serious permanent damage to your hearing.



Only use original Siemens batteries (100% mercury-free) and -charging devices. Otherwise you risk serious damage to health and property: The battery could explode, for instance.



Do not open the phone. Only the battery (100% mercury-free), front and back covers, keypad or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval required for operation of the unit.

Important:

Please dispose of unwanted batteries and phones as permitted by the laws in your country.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Use only Siemens original accessories. This will avoid potential risks to health or property and ensure compliance with all relevant regulations.

Improper use will invalidate the guarantee!

Phone overview

① Call key

Displayed/selected phone number /name displayed, take calls. Show last phone numbers dialed in standby mode.

② On/Off/End key


- Switched off: hold **down** to switch on.
- During a conversation or in an application: press **briefly** to finish.
- In menus: **press** briefly to go back a level. **Hold** down to return to standby mode.
- In standby mode: hold **down** to switch off phone.

③ Control key top/bottom

In lists, messages and menus:


 scroll up and down.

During a call:

 Start adjusting the volume.


 Open Addressbook/Phonebook.


In standby mode:

 Voice control (hold down).

 Open Phonebook.

③ Control key left/right

The current functions of this key are shown in the bottom line of the display as **Text**/symbol (e.g., ).

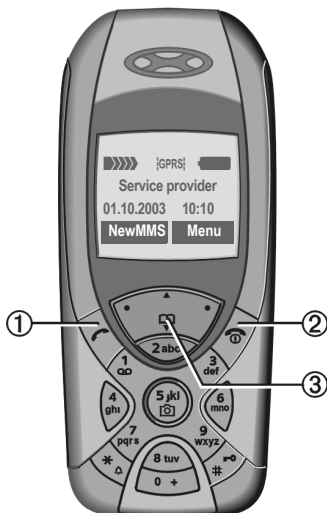

① Integrated antenna

Do not obstruct the phone above the battery cover unnecessarily. This reduces the signal quality.

② Loudspeaker

③ Display

④ Input keys

⑤ Camera

Hold down in standby mode:
Start camera function (p. 27).

⑥ Ringtone

- **Hold down in standby mode:** switch all audible signals on/off (except alarm).
- **Hold down** on incoming call: switch off ringtone for this call only.

⑦ Key lock


Hold down in standby mode: switch key lock on/off.

⑧ Plug socket

For charger, headset etc.

⑨ Socket for external antenna

⑩ Camera lens

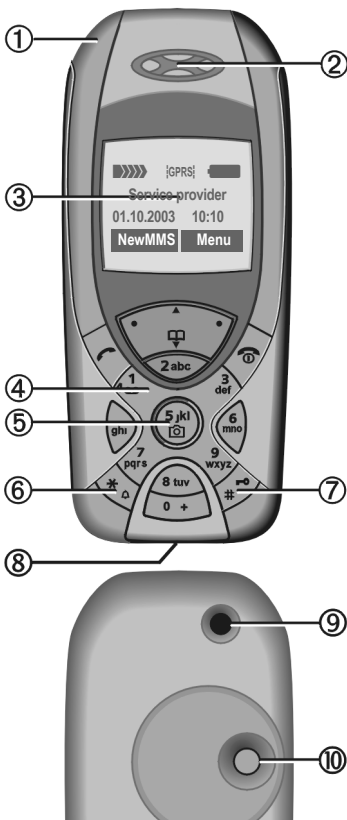

Display symbols

Display symbols (selection)

	Signal strength.
	Charging.
	Battery charge level, e.g. 50%.
	Phonebook
	Records
	Surf & Fun/Service provider portal
	Organiser
	Messages
	Camera
	Extras
	File system
	Settings
	All calls are diverted.
	Ringtone off.
	Short ring (beep) only.
	Ringtone only, if the caller is stored in the Phonebook.
	Alarm set.
	Alarm clock activated.
	Keypad locked.
	Message memory full.
	No network access.
ABC/ Abc/abc	Indicates whether upper or lower-case letters are active.
T9Abc	Text input with T9.

GPRS Activated and available.

Registered.

Temporarily interrupted.

GPRS ► GPRS download.

WAP online.

WAP via GPRS online.

WAP no network.

Auto answer feature on.

Organiser symbols (selection)

	Memo
	Call
	Meeting
	Birthday
	Anniversary

Access with left control key (selection)

	Message received.
	MMS received.
	MMS notification received.
	Voice message received.
	Unanswered call.

Depending on the service provider, some of the symbols shown here may vary from those in the phone,

Getting started

The front and back covers of the casing as well as the keypad can be changed in a matter of seconds - no tools required. Please switch the phone off first:

Assembling



Dismantling



Note

Your phone is supplied with a protective film applied to the display and the display cover of the front shell. **Remove this film before getting started.**

In rare cases the static discharge may cause discoloration at the edges of the display. However this will disappear within 10 minutes.


To avoid damage to the display, the phone should not be used without the top shell.




Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.


Press grooved area ①, then remove the cover forwards/upwards in the direction of the arrow ②.

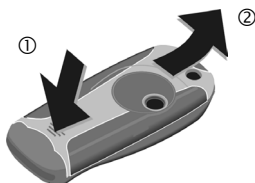


- Place the SIM card into the slot with the contact surface facing **downwards**. Gently push the holder tab over the SIM card ③ (ensure the bevelled corner is correctly positioned).

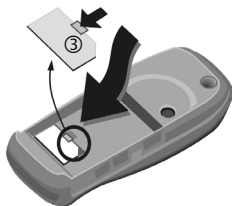

- Insert the battery sideways into the phone ④, then press downwards ⑤ until it engages.

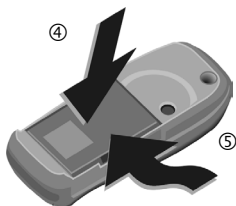

- To remove, press the retaining tab on the side of the battery, then lift the battery out.
- Place cover on phone ⑥ and then push to the lower edge ⑦, until it clicks into place.

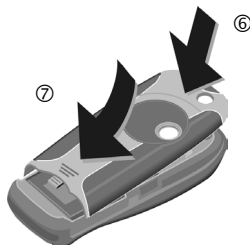

Additional information


Please switch off your phone before removing the battery!

Only 3V SIM cards are supported.
Please contact your service provider if you have an older card.

SIM card problemsp. 52

Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least **two hours**.

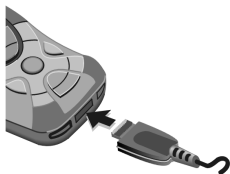

Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within a temperature range of +5 °C to +40 °C.

If the temperature rises/falls 5 °C above/below this, the charge symbol flashes a warning. The mains voltage specified on the power supply unit must not be exceeded.

Charge icon not visible

If the battery has been discharged fully the charge icon is not immediately visible when the power supply unit is plugged in. It will appear after up to two hours. In this case the battery is fully charged after 3-4 hours.

Only use the power supply unit supplied!

Display while in service

Charge level display during operation (empty-full):



A beep sounds when the battery is nearly empty. The charge level of the battery is only displayed correctly after an uninterrupted charging/discharging cycle.

You should therefore **not remove the battery unnecessarily** and where possible **not terminate the charging process before completion**.

Additional information

The power supply unit heats up when used for long periods. This is normal and not dangerous.

If the battery is removed for longer than 30 seconds, the clock must be reset.

Switch on, off / PIN entry

Switch on/off



Hold **down** On/Off/End key.

Enter PIN

The SIM card can be protected with a 4- to 8-digit PIN.



Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with **Clear**.

OK

To confirm, press the right of the control key. Logging on to the network will take a few seconds.

Additional information

Change PIN.....	p. 13
Clear SIM card barring	p. 13
Clock settings.....	p. 41

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the left side of the control key **SOS** you can make an emergency call on any network **without** a SIM card and without entering a PIN (not possible in all countries)

Switching on your phone for the first time

Time/date

Set the clock to the right time once at start-up.

Yes

Press.



First enter the date (day/month/year), then the time (24 hours, including seconds).

OK

Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the required time zone from list ...

Set

... and set it.

Signal strength



Strong reception signal.



A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

General instructions

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press control key (left/right).



Press control key (top/bottom).



Displays a function.



Function dependent on service provider, may require special registration.

Without SIM card

If you switch on the phone **without** a SIM card you can still use some phone functions.



The functions are displayed.



Emergency, SOS.

Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide.

For example,

To display call list for missed calls in condensed form:


Menu →  → **Calls missed**

This comprises the following steps:



Open main menu.



Select , then select the **Calls missed** function.



Confirm.

Standby mode

Very often function descriptions begin in standby mode.

The phone is in **standby mode** and is **ready for use** when the name of the service provider appears on the display.



Hold down the On/Off/End key to return to standby mode from any situation.

Standard functions

Option menus

Menu functions are made available in options menus. A selection of functions that occur frequently is shown here.

Options Open menu.


Edit	Open the entry to edit.
Capacity	Display available capacity.
View	Display entry.
Delete/ Delete all	Delete entry/delete all entries after confirmation.
New entry	Create new entry.
Send MMS	Send entry as MMS message.
Send	Dial number or select from the Phonebook, then send.
Save	Store entry.
Sort	Set sort criteria (alphabetical, type, time).
Text input (p. 18)	T9 preferred: Activate/deactivate T9 input. Input language: Select language for text.
Rename	Rename selected entry.

Highlighting mode

With some applications (e.g. Phonebook) one or more entries in a list can be highlighted to perform multiple functions at once.

Options Open menu.

Mark text Activate highlighting mode.

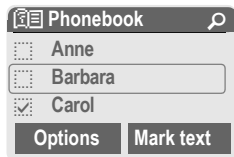

If an **unmarked** entry is selected, this can be highlighted:

Mark text The current entry is highlighted.

If a **highlighted** entry is selected, the highlighting can be deleted:

Unmark Unmark the current entry.

Additional highlighting functions:

Mark all	Highlight all entries.
Unmark all	Delete highlighting on all marked entries.
Delete marked	All selected entries are deleted.

Security

Menu →  → **Security**
→ Select a function

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

Codes

PIN control

You can stop the PIN prompt being activated when the phone is switched on, but you then risk unauthorised use of the phone.

Select Press, then enter PIN and confirm with **OK**.

Change Press and confirm with **OK**.

Change PIN

You can change the PIN to any 4- to 8-digit number you find easier to remember.



Enter current PIN and confirm with **OK**.



OK **Enter** new PIN.



OK **Reenter** new PIN.

Change PIN2

(Display only if PIN2 is available). Proceed as with **Change PIN**.

Chg.phonecode

(Change phone code)

You define the phone code (4-8 digits) the first time you call up a protected function. It is then valid for all phone-code protected functions.

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Preventing accidental activation

Even if PIN control is deactivated confirmation is required to switch on the phone. This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Hold **down**, then confirm with **OK**. The phone switches on.

Calling

Dialling with number keys

The phone must be switched on (standby mode).



Enter number (always with area code/international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

End call



Press the End key **briefly**. Press this key even if the person on the other end of the line has hung up first.

Set volume



Use the top of the control key to start adjusting the volume. Then press top/bottom to adjust the volume as required (only possible during a conversation).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial

To redial numbers that were dialled previously:



Press the Call key once.



Pick out the required phone number from the list, then to dial ...



Press ...

If the number is busy

Auto. redial

Auto dial Press. The phone number is automatically dialled ten times at increasing time intervals.

Or

Call back



Call back Press. Your phone rings when the busy number is free.

Reminder

Prompt Press. A beep reminds you to redial the displayed phone number after 15 minutes.

International dialling codes



Hold **down** until a "+" is displayed.



Press and select country.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

Answer Press.

Or



Press.

A phone number transmitted by the network is displayed or the corresponding name if it is contained in the Phonebook (p. 22). A picture may also appear (settings p. 23).

Reject call

Reject Press. To divert call, see p. 40.

Or



Press **briefly**.

Warning!


Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones.

Additional information

Missed calls.....	p. 26
Accept call using any key	p. 40
Switch off ringtone.....	p. 39

Handsfree

You can put the phone down during a call. You can then hear the caller via the loudspeaker.

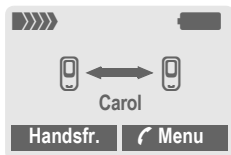

Handsfr. Activate handsfree talking.

Yes Switch on.



Use the control key to adjust the volume.

Handsfr. Switch off.

Warning!

Always switch off "handsfree talking" before holding the phone to your ear! This will avoid damage to your hearing.

menu Call menup. 17

Swapping calls



- You can call another number during a call.

 **menu** Open call menu

Hold Put current call on hold.

Now dial the new phone number.
When the new connection is established:

 **menu** Open call menu

Swap Swap back and forth between both calls.

- You are advised during a call that there is another call waiting by a special "call waiting" tone (p. 40).

Swap Accept the waiting call and put the current call on hold. To swap between the two calls, see above.

Or




End the current call.

Answer Accept new call.

Conference




- Call up to 5 parties and link them together in a conference call.
When a call is established:

 **menu** Open menu and select **Hold**. The current call is put on hold.



Now dial a new number.
When the new connection is established ...

 **menu** ...open menu and select **Conference**. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).


End





All calls in the conference are ended simultaneously when the End key is pressed.

Call menu

The following functions are only available during a call:

 **menu** Open menu.

Hold	(p. 16)
Microphone on	If the microphone is switched off the person on the other end of the line cannot hear you (muting). Also: Hold  down .
Handsfree	(p. 15)
Volume	Adjust handset volume.
Conference	(p. 16)
Durat/charges	Display call duration and (if set, p. 26) costs accruing during the call.
Send DTMF	Enter numbers, e.g., for remote access to an automatic answering machine.
Call transfer 	The original call is joined to the second one. For you, both calls are now ended.
Main menu	Access to main menu.
Call status	List all held and active calls (e.g. conference call participants).


Babysitter

If this is active, only **one** number can be dialled.

Switch on

Menu →  → **Security**
→ **Babysitter**

Select Press.



 Enter phone code.

The phone code (4- to 8-digits) is set by you and entered at the first security setting.

Please note this code down (see also p. 13).

OK Confirm input.

Change Press.

  Select phone number from Phonebook (p. 22) or enter new number.


OK Confirm "On".

Apply

To dial, hold **down** the right of the control key.

Switch off

 Press **down**.

 Enter phone code.

OK Confirm input.

Change Press.

OK Confirm "Off".

Text entry

Text entry without T9

Press number key repeatedly until the required letter appears. After a brief interval the cursor will advance. Example:



Press **once briefly** to type the letter **a**, twice to type **b** etc.

Hold down to write the number.

Ä, ä, 1-9

Umlauts and numbers are displayed after the relevant letters.

Clear

Press briefly to delete the letter before the cursor, **hold down** to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between **abc**, **Abc**, **T9abc**, **T9Abc**, **T9ABC**, **123**.

Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Special characters are shown.

Hold down: Open input menu.



Press once/repeatedly:

., ? ! ' " 0 - () @ / : _



Hold down: Writes 0.

Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	¿	¡	_	;	!	?	,	.
+	-	"	'	:	()	/	*
¤	¥	\$	£	€	&	#	\	@
[]	{	}	%	~	<	=	>
	^	§	Γ	Δ	Θ	Λ	≡	Π
Σ	Φ	Ψ	Ω					

1) Line break



Navigate to characters.

Select

Press.

Input menu

With text input:



Press **down**. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

Text entry with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

Text input Select.

T9 preferred

Select.

Change Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu.

Text input Select.

Input language

Select.


Select Confirm, the new language is set.
Languages with T9 support are marked with the **T9** symbol.

Write a word using T9

Since the display changes as you proceed,

it is best if you finish a word without looking at the display.

Simply press the keys **once only** where the relevant letter is located. For "hotel", for example:

 press **briefly** for **T9** **Abc** then type



Press. A blank ends a word.

Do not use special characters such as Ä but rather use the standard characters, e.g. A; T9 will do the rest for you.

Additional information



Set a full stop. A word is concluded if it is followed by a space. Within a word, a full stop represents an apostrophe or hyphen:

e.g. **provider.s** = provider's.



Go to the right. Ends a word.



Press briefly: Swap between: **abc**, **Abc**, **T9abc**, **T9Abc**, **123**. Status shown in top line of display.

Hold down: All input modes are displayed.




Press briefly: Select special characters (p. 18).

Hold down: Open input menu (p. 18).



again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.

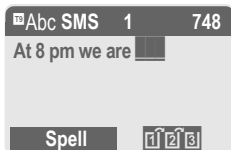

To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press **Save** to add it automatically to the dictionary.

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be **highlighted**.

Then press



again. The displayed word is replaced with a different word. If this word is also incorrect, press

Correct a word

Words written **with** T9:



Move left or right, word by word, until the required word is **highlighted**.



Scroll through the T9 word suggestions again.

Clear

Deletes the character to the left of the cursor **and** displays a new possible word!

Words **not** written with T9:



Move letter by letter to the left/right.

Clear

Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

Additional information

Within a "T9-word", individual letters may not be edited without first removing the T9-status. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437; 5,953,541; 5,187,480; 5,945 928 and 6,011,554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Text modules

Text modules can be stored in the phone for adding to your messages (SMS, MMS).

Write text modules

Menu →  → Text modules

Options Select **New text**.



Write text module.

Options Select **Save**.

Accept the default name or give it a new name, then save with **OK**.

Use text modules



Write message (SMS, MMS).

Options Open text menu.



Select **Text modules**.



Select text module from the list.

Select Confirm. The text module is displayed.

OK Confirm. The text module is inserted in the message to the right of the cursor.


Phonebook

Enter frequently used phone numbers in the Phonebook with a special name. If a phone number is stored with a name, it appears on the display when you are called. You can assign important phone numbers to different groups.

<New entry>



Open Phonebook (in standby mode).

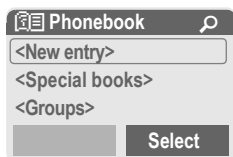

Display input fields.



Select input fields.



Fill in input fields. The maximum number of characters available is shown at the top of the display.

Number:

Always enter phone number with dialling code. An entry is not saved without a phone number.

Name:

Enter first and/or last names.

E-Mail:

Enter e-mail address for MMS (up to 50 addresses).

Group:

Default: **No group**

Change

Entries can be organised by groups (p. 25) e.g.: Family, Friends, Office, VIP...

Location:

Default: **SIM**



Specify where to save the group: **Mobile**, **SIM**, **Protected SIM** (p. 24).

Record no.:

Each entry is automatically assigned a record number. You can also dial using the record number (p. 23).



Change the record number.

Save

Press to store the new entry.

Additional information

Entries are not saved without phone numbers.

+List	International dialling code.....p. 14
	Text entryp. 18

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



Number is dialled.

Call using record no.

A record number is automatically assigned to every new entry in Phonebook.



Enter record number.



Press.



Press.

Change entry



Select entry in Phonebook.

Options

Press and select **Edit**.



Select input field required.



Make change.

Save

Press.

Phonebook options

The following functions are available, depending on the current situation. Special functions:

Options

Open menu.

Voicedialling

Record or change voice dialling for an entry. (p. 24).

Picture

Assign a picture to a Phonebook entry.

Send SMS...

Send as a Phonebook entry or text.

(For standard functions see p. 12)

Assign picture

Assign a specific picture or photo to Phonebook entries. This picture will appear in the display when there is a call from this number.



Open Phonebook and select an entry.

Options

Open menu and select **Picture**. Select a picture.

Select

The picture is displayed.

Select

The picture is assigned to the phone number. It appears with a 😊 symbol in the Phonebook.

<Special books>



Open Phonebook (in standby mode).

<Special books>

Select

<Own numbers>

Enter "own" phone numbers in Phonebook (e.g., fax) for information.

<Service numb.>/ <Info numbers>

There might be phone numbers saved in your Phonebook that have been provided by your service provider.

<SIM phonebook>

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

<Protected SIM>



On special SIM cards, phone numbers can be stored in a protected location. PIN2 is required for editing (p. 13).

See also function **Only**  (p. 43).

<Mobile>

Phonebook entries are stored in the phone memory when the SIM card memory is full.

Voicedialling

You can dial numbers by voice command. Up to 20 voice recordings can be saved in the phone for voice dialling or voice commands (not on SIM card).

Make a recording



Open Phonebook.



Select entry.



Open menu.

Voicedialling

Select.



Start recording.

A short signal sounds. Now say the name and **repeat** it when prompted by a beep. A further beep confirms the recording, which is saved automatically.



Identification of entries in the Phonebook that have voice dialling.

Apply voice dialling



Press **down** (in standby mode).

Now state the name; the number is dialled.

Groups

Eight groups are specified in your phone to enable you to arrange your Phonebook entries clearly. You can rename these.



Open Phonebook (in standby mode).

<Groups> Select (the number of entries is listed behind the group name).



Select group.

Select Open group.

<New entry>

- Insert an entry from the Phonebook.



Open Phonebook.



Select entry.

Select Copy entry to the group.

- Create new entry.

Select Create a new Phonebook entry (the selected group is the default).

Change group name

Rename Select and enter a new name.

Additional information

No group: Contains all Phonebook entries that do not belong to a group (name cannot be changed).

SMS to group.....p. 31

Ringtones for group

Assign a ringtone to a group that plays when one of its members calls you.

Menu → → Audio
→ Ringtones
→ Incoming calls
→ Group calls



Select group.

Select Confirm.



Select ringtone.

Select Confirm.

Records, Durat/charges

Records

Your phone stores the phone numbers of calls for convenient redialling.

Menu → 

Select Press.



Select call list and press

Select.



Select phone number.



Dial phone number.

Calls missed



The phone numbers of calls that you have received but not answered are stored for call back purposes.



Symbol for a missed call.

Calls received



Accepted calls are listed.

Calls dialled

Access to the last numbers dialled.



Fast access in standby mode.

Erase records

The records are deleted.

Call list menu

Options Edit entries.

Durat/charges

You can display the charges and the duration of calls and set a unit limit for outgoing calls.

Menu →  → Durat/charges

Select a function:

Last call, All outg. calls, All incoming, Remain. units

Select Display data.

Reset Clear display.

OK End display.

Charge settings

Menu →  → Durat/charges
→ Charge sett.

Conv. (PIN2 prompt).



Currency for charge display.

Personal rate (PIN2 prompt).



Charges per unit/period.

A/c limit (PIN2 prompt).



Fix a credit/usage period on a special SIM card.

Auto display

Display duration and charge automatically at end of each call.

Camera

Photos you have taken with the integrated camera may be viewed, saved,

- used as wallpaper, startup and shutdown animation and screensaver, and
- sent as an MMS message.

Switch on

Menu → 

Or



Hold down (in standby mode).

Shot

The current (preview) image is displayed.

At the top left of the display, information on the brightness setting for the shot is shown, and on the right the number of shots possible at the selected resolution. The number of possible shots also depends on the size of the image (required memory space).

A shot (especially at high resolution) requires a few seconds to be processed and saved.



Setting the brightness.



Press to take a photo.

Or

Photo

As the shot is taken, you will hear an advisory tone. The photo is saved automatically with a time stamp as its name (to change the name, p. 28).

After taking the photo:

View pic. View shot.

Delete Delete shot.

Shot options

Options Open menu.

View pictures The saved photos are displayed on the phone at a resolution of 101 x 80 pixels. To display them at a higher picture quality (See Picture quality below), you must transfer them to PC.

Picture quality Setting the picture quality (pixel resolution).
Prem. 352x288 (CIF).
High 320x240 (QVGA).
Med. 176x144 (QCIF).
Low 160x120 (QQVGA).

Brightness Set with: 


White balance	Automatic, Indoor, Outdoor Set with: 
Info	Displays help text

Photo album

Options Open menu.

View pictures

Select.






Scroll through photos taken.

Photo options

You can

- use the displayed photo as wallpaper, startup and shutdown animation and screensaver, and
- send it as an MMS message.

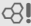Options Open menu.

Send MMS	Send photo as MMS (p. 32).
Send to Album 	Save the photo in the personal album your service provider makes available for you on the Internet. The provision and description of this facility depends on your service provider.
Full screen	Switch to full screen mode. Also with 
Zoom	Enlarge image section. Navigation using 
Set as...	Use current photo as wallpaper, startup or shutdown animation or screensaver.
Attributes	Information about picture quality.
File system	Open to select saved photos.
Rename	Give the photo a new name.
(For standard functions see p. 12)	

Additional notes

If Please wait appears in the display, the telephone's memory is being reorganised to make the most efficient use of the storage capacity. This operation may take longer than a minute.

Voicemail/CB services

Menu →  → Setup
→ Voice message

Most service providers offer you an external answering service. A caller may leave a voice message for you in this mailbox

- if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and **Call waiting** is not activated, p. 40).

You may have to register for this service with the service provider and enter the settings manually.

Settings



The service provider supplies you with two phone numbers:

Save mailbox number


Call this phone number to listen to the voice messages left for you.

Menu →  → Setup
→ Voice message

Enter mailbox number and confirm with **OK**.

Save call divert number

Calls are diverted to this phone number (see also p. 40).



Menu →  → Phone setup
→ Divert
→ e. g., Unanswered → Set

Dial divert number and register it at the network with **OK**. Divert will be confirmed after a few seconds (see also p. 40).

Listening to message



A new voice message can be announced as follows:

An  icon with beep or  a text message announces a new voice mail or you receive a call with an automatic announcement. Dial into your mailbox and listen to your message(s).



Hold **down** (if necessary enter mailbox number once only). Confirm with **OK** and **Mailbox** depending on your service provider.

CB services

Menu →  → Setup
→ CB services

Some service providers offer information services (info channels). If reception is activated, your “**Topic list**” will supply you with messages on the activated topics.

SMS

You can transmit and receive very long messages (up to 760 characters) on your phone. They are automatically composed of several "normal" SMS messages (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Depending on the service provider, e-mails and faxes can also be sent and e-mails received via SMS (change setting if necessary, p. 34).

Writing and sending text messages (SMS)

Menu →  → New SMS



Write text (Text entry with T9, p. 19).

Clear Press **briefly** to delete letter by letter, hold **down** to delete an entire word.



Press.



Dial number or select from the Phonebook.

OK

Confirm. The SMS is sent to the service centre for transmission.

Text options

Options Open text menu

Save	Save composed text in draft list.
Picture&sound	Add pictures, animations and sounds into message (see following text).
Text modules	Insert text module (p. 21).
Format	Line feed Small font, Medium font, Large font Underline Def. alignment, Left, Right, Centre Mark text (highlight text using control key)
Clear text	Delete the whole text.
Insert from...	Insert entry from Phonebook.
Send via ...	Select an SMS profile for transmission (p. 34).

(For standard functions see p. 12)

Special functions

Options Open menu.

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Send Select.

Group The list of groups is displayed. Select and open group, select group members and send SMS.

Picture&sound

Insert pictures and sounds into message.

Picture&sound

Select.

The menu contains:

Fix animations, Fix sounds,
Own anim., Own pictures,
Own sounds



Select area, then select the required entry and confirm.

Receive/read SMS



Arrival of new SMS announced on display. To read the SMS press the left control key.




Scroll through message line by line.



Function for replying directly.

Other functions for editing SMS can be found under **Options**.

SMS archive

Menu →  → SMS archive

The list of SMS messages stored in the phone is displayed.

Additional information

Insert special characters p. 18

SMS profile p. 34

MMS

The **M**ultimedia **M**essaging **S**ervice enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.



Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

Menu →  → **New MMS**

Input fields:

To:   Phone number/e-mail address of recipient(s).

Subject: Enter MMS heading (up to 40 characters).

Picture: Press **Insert** again. The picture list is opened for selection.

Additional information

You can also easily send an image by MMS immediately after taking it with the camera (p. 27)

Text: Press **Edit** again. Write text with the help of T9.

Sound: Press **Insert** again.

File system You can now select a stored melody (see also p. 51).

New sound: Record new tones, for sending by MMS only (see below).

Slide duration:

Enter length of display for individual pages (minimum 0.1 seconds).

New recording

The phone records via its microphone.

Record Start recording. The current recording duration and available time remaining are displayed.

Stop End recording.

Play Replay recording.

Save Save. To give the recording its own name, the description **Clear**.

OK Save.

Attach extra pages

Options Open menu.

New slide Select.

Attach business card

Options Open menu.

Extras Select.



Scroll to **Businesscard**.



Attach business card.

Attach appointment

Options Open menu.

Extras Select.



Scroll to **Appointment**.



Import appointment from calendar.

Send MMS

Options Open menu.

Send Select.

Receive/read MMS



Indicates Receipt/notification of an MMS. Press the left control key to read the MMS or notification.

Depending on the setting, (p. 34) the

- complete MMS is received
- or the notification is opened. Press **Receiving** to receive the complete MMS, with **Play** automatic presentation of the MMS. Cancel using any key.
- Open attachments using **Options** and **Attachments**.
- Open images and tones using **Options** and **Content**.

Other functions for editing MMS can be found under **Options**.

Message lists/settings

All SMS and MMS messages are saved in four different lists:

Inbox

Menu →  → **Inbox** → **MMS/SMS**

The list of SMS and MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press **Receiving**.

Draft

Menu →  → **Draft** → **MMS/SMS**

The list of stored drafts is displayed.

Unsent

Menu →  → **Unsent**
→ **MMS/SMS**

The list of MMS messages not yet successfully sent or not yet completely sent concatenated SMS messages is displayed.

Sent

Menu →  → **Sent** → **MMS/SMS**

The list of sent SMS or MMS messages is displayed.

SMS profiles, MMS profiles

Menu →  → **Setup** → **SMS/MMS**

Profiles have to be created for SMS and MMS. The transmission characteristics are defined in these. The data for these may already have been entered. If not, you can obtain this from your service provider. Additional information is available in the comprehensive operating instructions on the Internet at:


www.my-siemens.com/mc60

Surf & fun

Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone.

Note

Depending on your service provider, you may have direct access to its portal instead of the Surf&Fun menu option. Contact your service provider for details of the services offered on the portal. In this case, you will find the **Internet** and **Games & more** menu options in the  **Extras**, p. 47 menu.

Internet access



Menu →  → Internet

The browser is activated as soon as you call up the function. If necessary, configure how WAP access should be established (see **browser menu**, **Setup**, **Start with...**).



Select the function from the start menu.

Select

Confirm.

End connection



Hold **down** to terminate the connection and close the browser.

Additional information



Browser menu.



Offline / Online.



GPRS Online.



No network.



Select special characters, such as @, ~, \, see p. 18.



Press repeatedly for:
., ? ! ' " 0 - () @ / : _

WAP profiles

Menu →  → Internet → Profiles

Activate WAP profile

You can change the current profile each time you access the Internet.



Select profile.

Select

Activate. The current profile is selected.

Set WAP profile

Up to 5 WAP profiles can be configured (may be barred by your provider). The entries may vary depending on the service provider:



Select profile.

Edit

Open to configure, then fill in the data fields.

To select the connection profile, see **Data services**, p. 42.

Games & more

Download games and other applications. Once you have selected a game or application you can start to download it. Then you can use the application. Applications and games can be found at: **wap.my-siemens.com** or on the Internet under **www.my-siemens.com/city**

Games and applications

Stored applications and links are found in the folder:

Menu →  → **Games & more**

Different functions are available depending on which entry is highlighted:

★ **Use game/application offline**

Select Application ready to run immediately.

★ **Load game/application online**


Select Just descriptive file; application yet to be loaded.

 **Load link (optional)**

Internet The selected Internet page is loaded.

You can use WAP to download applications (e.g. ringtones, games, images, animations) from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications and for any direct damage or consequential damage of whatever nature resulting from the use of this application. For technical reasons, such applications and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In such cases, the buyer is required to download or release the application again. Please ensure that your phone has Digital Rights Management (DRM) so that individual applications downloaded via WAP are protected from unauthorised reproduction. These applications are then exclusively intended for your phone and cannot be transferred from this even to create a backup. Siemens does not warranty, guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge. Where technically possible, back up your applications to PC using the Siemens Data Exchange Software (to download from the Internet: **www.my-siemens.com/mc60**).

Useful for many games (Virtual Joystick):

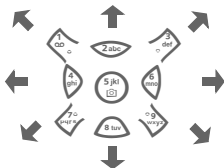

Setup

Profiles

Several settings can be stored in a phone profile in order, for example, to adapt the phone to the surrounding level of noise.

- Five standard profiles are provided with default settings. They can be changed however:

Normal envi., Quiet environ., Noisy environ., Car Kit, Headset

- You can set two personal profiles (<Name>).
- The special profile **Aircraft mode** cannot be changed.

Menu →  → Profiles

Switch on



Select default profile or personal profile.

Select

Switch on profile.

Setup



Select profile.

Options

Open menu, then select **Change sett.**. The list of available functions is displayed.

Car Kit

If a Siemens original Car Kit is used the profile is activated automatically as soon as the phone is inserted into the cradle (p. 44).

Headset

If an original Siemens headset is used the profile is activated automatically as soon as the headset is in operation.

Aircraft mode

All alarms (appointments, alarm clock) are deactivated. This profile **cannot be modified**. The phone will switch off automatically if you select this profile.

Switch on



Select

Scroll to **Aircraft mode**.

Switch on profile.
A security prompt must be confirmed. The phone switches itself off automatically.

Normal mode

When you switch on your phone again, the previously set profile will be reactivated automatically.