SIEMENS

Be inspired



SL55

Safety precautions3	3
Overview of the phone5	j
Display symbols (selection) 9)
Getting started11	
Insert SIM card/battery 11	
Charge battery12	2
Switch on, off / PIN entry 13	3
Switching on your phone for the	
first time13	
Signal strength14	
Standby mode 14	
General instructions 15	j
User guide 15	
Menu controls 15	
Security17	
Prevent accidental activation 18	3
My phone19	
Calling20	
Dialling with number keys 20)
End call20	
Set volume20	
Redial previous numbers 20	
When the number is busy 21	
Accept call21	
Reject call22	
Handsfree22	
Swap22	
Conference24	
Babysitter	
Text entry 26	
Text modules29	,

🖶 Default book	30
honebook	31
<new entry=""></new>	31
Call (search for an entry)	32
Change entry	32
Addressbook	34
<new entry=""></new>	34
Read/change an entry	35
Call, search for an entry	
Addressbook menu	36
Voicedialling	37
Groups	
Records	
Durat/charges	
Voice mail/Mailbox	
SMS	
Writing and sending text	
messages (SMS)	42
Picture&Sound	
SMS to group	
Read SMS	
Ringtones, icons	45
Lists	
Archive	46
⊠ MMS	
Writing/sending MMS	
Writing/sending MMS messages	47
messages	
	50

🔀 E-mail53	Tasks	93
Write/send e-mails 53	Notes	94
Receive e-mail54	Missed appointments	95
Read new e-mail54	Dictating machine	96
Lists 55	Time zones	97
Message profiles57	Extras	98
SMS profile57	Alarm clock	98
MMS profile58	Calculator	98
E-mail settings59	Currency conv	99
Voice message60	Stopwatch	.100
CB services60	Countdown	
CB services 61	Camera (Accessories)	.101
Surf & fun62	Voice command	
Internet browser (WAP) 62	Remote synchronisation	.104
Games & more 65	Fast access key	.106
é Setup 68	Tilesystem	.108
Display 68	Print via/Send via	.110
Audio 70	Notes A-Z	.111
Keys 72	Siemens Data Suite	.119
Phone setup73	Questions & Answers	.121
Clock76	Customer Care	
Connectivity77	Care and maintenance	
Security80	Product data	
Network 82		
Accessories 84	Accessories	
ProSlide 85	Battery quality statement	
(Profiles86	Guarantee certificate (UK)	
My menu 88	Guarantee certificate (IRL)	.133
① Organiser89	SAR - European Union (RTTE)	.135
Calendar 89	SAR - International (ICNIRP)	.137
Alarm 91	Index	.138

Notes for parents

Read the user manual and safety instructions carefully before using the phone! Explain the contents of the phone to your children and the risks associated with using the phone!



When in a hospital switch off your phone. Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. Keep at least 20cm/9 inches between phone and pacemaker. When using the mobile phone hold it to the ear which is further away from the pacemaker. For more information consult your doctor.



Only use a handsfree kit while driving (p. 84).



Mobile phones must be switched off at all times in an aircraft. To prevent accidental activation, see (p. 87).



Switch off near petrol stations, fuel depots, chemical plants or blasting operations. Mobile phones can interfere with the operation of technical installations.



The SIM card may be removed. Caution! Small parts could be swallowed by children.



The mains voltage (V) specified on the power supply unit must not be exceeded.



Ringtones (p. 70), message tones (p. 71) and handsfree talking are reproduced through the loudspeaker. Do not hold the phone to the ear when it rings or when you have switched on the handsfree function (p. 22). Otherwise you could cause serious damage to your hearing.



Do not view the activated infrared interface [Class 1 LED product (classification under IEC 60825-1)] with an optical magnifier.



We recommend you only use Siemens original batteries (100% mercury-free) and charging devices. Otherwise considerable health risks and damage to the product cannot be excluded. For example, the battery may explode.



Do not open the phone. Only the battery (100% mercury-free) or SIM card may be replaced. You must not open the battery under any circumstances. Any other changes to this device are strictly prohibited, as they will invalidate the type approval criteria required for operation of the unit.

Please note:



Dispose of used batteries and phones according to the legal regulations.



Mobile phones can interfere with the operation of nearby TVs, radios or PCs.



Only use Siemens original accessories. In this way you will avoid possible health risks and damage to the product and ensure compliance with all relevant provisions.

Improper use invalidates the warranty!

The phone may only be used if the keypad is fully closed or fully opened; for optimum audio quality, however, it is recommended you open the keypad completely.

- ① Loudspeaker
- ② Display icons

Signal strength/ GPRS available/battery level.

3 Control key

See next page.

④ Input keys

Numbers, letters

- ⑤ Microphone
- 6 Integrated antenna

Do not interfere with the phone above the battery cover unnecessarily. This reduces the signal quality/signal strength.

Dictation key

(in standby mode):

Hold **down**: record. Press **briefly**: play back.

8 Plus/minus side key

- · During a call: volume loud-quiet.
- In menus, lists and WAP pages: scroll up and down.
- · In standby mode:

Press side key at top **briefly**: show profile selection. Hold **down** key at bottom: start voice control

Infrared interface

(IrDA, e.g. for communication between PC/PDA and mobile phone).

Device interface

Connection for charger, headset etc.



① Soft keys

The current functions of these keys are shown in the bottom line of the display as text or symbols (e.g. 111)

② Control key

In the main menu:

(p) Navigation.

In lists and menus:

Scroll up/down.

Select function. Menu level back

During a call:

Open call menu.

In standby mode:

Voice control (hold down).

Open Address/Phonebook.

Open menu. GPRS info

3 Call key

Dial phone number/name displayed, take calls. Show last phone numbers dialled in standby mode.



① ① On/Off/End key

- · Switched off: hold down to switch on.
- During a conversation or in an application (except for Surf&Fun); press briefly to finish
- · In menus: press briefly to go back a level. Hold down to go back to standby mode.
- · In standby mode: if the keylock is disabled, hold down to switch off the phone if the kevpad is closed.
- Kevlock in standby mode, keypad closed: press briefly to lock keypad. Press briefly and confirm with OK to unlock the keypad.

Hold down

- In standby mode: switch all audible signals on/off (except alarm).
- · For incoming calls: only switch off ringtones.



3 Mold down

· In standby mode: Lock or unlock keys.




Note

Your phone's display is delivered with a protective film.

Remove this film before getting started.

Open keypad:

- · Light on.
- · Keypad unlocked.
- · Opening melody on (if set).
- · The call is accepted.
- · Alarm sound off (appointment, alarm).

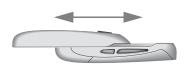

Close keypad:

- · Back to standby mode.
- · Light off.
- · Keypad locked (if set).
- · Closing melody on (if set).
- · The call is ended.
- · The call is rejected.
- · Alarm sound off (appointment, alarm).



Display symbols (selection)

Display	symbols	*	No network access.
$ \rangle\rangle\rangle\rangle\rangle$	Signal strength.	✓.,	Function activated/deactivated.
	Charging.	ß	Phonebook/Addressbook.
	Battery charging status.	ABC/	Indicates whether upper or lower-
	Standard directory (Phonebook/ Addressbook).	Abc/ abc	case letters are active.
	Call lists.	7 10 0	Text input with T9.
•	Surf & Fun.	D;	IrDA activated.
1	Organiser.	D 111	IrDA during transmission.
	Messages.	GPRS	Activated and available.
- <u>~</u>	Profile.	GPRS	Registered.
- 7	Extras.	GPRS▶	GPRS Download.
		3 7	WAP online.
$\frac{\square}{\mathbb{Z}}$	File system.	GP ←RS	WAP via GPRS online.
	Settings.		WAP No network.
10	All calls are diverted.	Ω	Headset mode.
<u> </u>	Ringer off.	13	Auto answer feature on.
ΨΠ	Short ring (beep) only.	Organis	er/Extras symbols
→ ¦₽	Ringer only if caller is stored in the Phonebook/Addressbook, or is a		Memo.
	member of a group.	0	Call.
•	Alarm set.	8.8	Appointment.
((-	Alarm clock activated.		Dictating mach./Voice memory.
P 0	Key lock activated.		Birthday.
	Phone numbers/names:		<u> </u>
0	On the SIM card.	ب ایدر	, ruann dioditatophaton.
- 0	On the SIM card (PIN 2 protected).		

0

In the phone memory.

Soft keys	
\times	Message received.
00	Voice mail received.
\cong	Data received.
~	Picture received.
9	Melody received.
(r.j	Unanswered call.
→ □	Store in Phonebook/Address-book.
Щ→	Retrieve from Phone/Address-book.
	Change Phonebook/Address-book.

Insert SIM card/battery

The service provider supplies you with a SIM card on which all the important data for your line is stored. If the SIM card has been delivered in credit-card size, snap the smaller segment out and remove any rough edges.

 Press the lock ①, then remove the battery upwards in the direction of the arrow ②.



 Insert the SIM card in the opening with the contact area facing downwards and push gently until it engages below the holder (make sure the angled corner is in the correct position 3).



 Insert the battery in the lower edge 4, then press downwards 5 until it engages.



Remove SIM card

Remove the battery. First push the SIM card ③ gently through the slot for the holder and at the same time lift it up slightly ② on the other side. Then remove the SIM card completely.



Additional information

Always switch off phone before removing the battery!

Only 3V SIM cards are supported. Please contact your service provider, if you have an older card.

Functions with SIM cardp. 118

Charge battery

The battery is not fully charged when delivered. Plug charger cable into the bottom of the phone, plug power supply unit into a mains power socket and charge for at least two hours.



Display when charging is in progress



During charging.

Charging time

An empty battery is fully charged after about 2 hours. Charging is only possible within the temperature range 5 °C to 40 °C. At 5 °C above or below, the charge icon blinks as a warning. The mains voltage specified on the power supply unit must not be exceeded

Charge icon not visible

If the battery is totally discharged, no charge icon is displayed when the charger is plugged in. It will appear after two hours at most. In this case the battery is fully charged after 3-4 hours.

Only use the charger provided!

Display while in service

Charge level display during operation (empty-full):







A beep sounds when the battery is nearly empty. The battery level is only shown correctly during an unbroken charging/discharging cycle. You should therefore not remove the battery unnecessarily and where possible not finish the loading process early.

Additional information

The charger heats up when used for long periods. This is normal and not dangerous. Outside vour own home networkp. 114 Performance.....p. 115

Activate/deactivate



Hold **down** On/Off/End key to switch on or off.

Enter PIN

The SIM card can be protected with a 4-8 digit PIN.



Open keypad. Enter the PIN using the number keys. The characters **** appear to ensure nobody can read your PIN on the display. Correct errors with Clear.



OK

Confirm entry with right soft key. Logging on to the network will take a few seconds.

Additional information	
Change PIN	p. 17
Other network	p. 82
SIM card problems	p. 116
Clear SIM card barring	p. 18

Switching on your phone for the first time

Contrast



Set display contrast.

Time/date

The clock must be set to the right time once at start-up.

Yes

Press.

Open keypad. First enter the date (day/month/ year), then the time (24 hours, including seconds).

OK

Press. The time and date are updated.

Time zones

Set the time zone for your area.



Select the required time zone from list ...

Set

... press to set.

Additional information

If the battery is removed for longer than seconds, the clock must be reset.

Additional clock settingsp. 76

Phonebook or Addressbook

You can choose whether you want to use the **Phonebook** on the SIM card or the internal **Addressbook** as standard.

You can copy the SIM card Phonebook to the Addressbook on the phone. Please **do not interrupt this procedure**. During this time **do not accept incoming calls**. Follow instructions in the display.

To copy data on the SIM card at a later time, highlight entries (see p. 113) and copy these with the function "Copy into "Phonebook options menu p. 32).

You can change the standard phone-book at any time (p. 30).

Signal strength



Strong receive signal.

A weak signal reduces the call quality and may lead to loss of the connection. Change your location.

Emergency number (SOS)

Only to be used in real emergencies!

By pressing the soft key SOS, you can make an emergency call on any network without a SIM card and without entering a PIN (not available in all countries).

Standby mode



When the name of the service provider appears on the display, the phone is in **standby mode** and **ready for use**. If you now close the keypad, the phone remains in standby mode.

The left soft key may have different functions pre-assigned.



Hold **down** the On/Off/End key to return to standby mode from any situation.

Additional information SIM services (optional)p. 105

User guide

The following symbols are used to explain operation:



Enter numbers or letters.



On/Off/End key.



Call key.



Press the control key on the side indicated





Menu Displays a soft-key function.



Function dependent on service provider, may require special registration.

Menu controls

The steps needed to reach a function are shown in a **condensed form** in this user guide, e.g. to display call list for missed calls:



This corresponds to:







Menu

nu Open menu.

From standby mode: press **right** soft key.









Records Select.


Press top of control key.









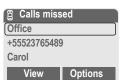



Select

Press.

Press **right** soft key to open the **Records** submenu.









(A B ▷

Scroll to the required entry.

Press control key at the bottom to scroll down.





Select

Press.

Press right soft key to open the Calls missed list.

View

Press.

Press **left** soft key to show phone number with date, time and number of calls





Codes

The phone and SIM card are protected against misuse by several security codes.

Keep these confidential numbers in a safe place where you can access them again if required.

PIN	Protects your SIM card (personal identification number).
PIN2	This is needed to set the charge detail display and to access additional functions requiring special SIM cards.
PUK PUK2	Key code. Used to unlock SIM cards after the wrong PIN has been entered repeatedly.
Phone code	Protects your phone. Must be entered at the first security setting.

PIN control

Menu → Security
→ Select function.

The PIN is usually requested each time the phone is switched on. You can deactivate this feature but you risk unauthorised use of the phone. Some service providers do not permit deactivating the control.

Select	Press.
7	Enter PIN.
OK	Confirm input.
Change	Press.
OK	Confirm.

Change PIN

You can change the PIN to any 4-8 digit number you find easier to remember.

	Enter current PIN
OK	Press.
J, OK	Enter new PIN.
UH, OK	Repeat new PIN.

Change PIN2

(display only if PIN 2 is available). Proceed as with **Change PIN**.

Q.



Chg.phonecode

You define and enter the phone code (4-8 digits) when you call up a phone-code protected function for the first time (e.g. Babysitter p. 25). It is then valid for all phone-code protected functions.

Following the third unsuccessful attempt, access to the phone code and the functions that use it is denied. If this happens please contact Siemens Service (p. 124).

Clear SIM card barring

If the PIN is entered incorrectly three times, the SIM card is barred. Enter the PUK (MASTER PIN), provided by your service provider with the SIM card, according to instructions. If the PUK (MASTER PIN) has been lost, please contact your service provider.

Additional information	
Screensaver	p. 69
Key lock	p. 72
Further security settings	p. 80

Prevent accidental activation

Even if PIN entry is deactivated (see p. 17), confirmation is required to switch on phone.

₿!

This prevents the phone from being switched on accidentally, e. g. when carried in a pocket or whilst you are on an aircraft.



Hold down.



OK

Press. The phone switches on.

Cancel

Press or take no action. The switching-on operation is broken off. Change your phone to match your personal requirements.

Ringtones

Assign individual ringtones to caller groups or for special dates (p. 71).

Animations, screensavers, logos, applications

Adjust your phone in the following ways to give it a personal touch and make it just how you want it:

Animations

Choose a start-up and closing animation (p. 69) as well as a personal greeting (p. 69).

Screensaver

Choose an analogue clock or a personal picture (p. 69).

(Provider) logo

Choose an individual picture (p. 68) to be displayed in standby mode.

Background image

Choose your own permanent background image (p. 68).

Applications

Download your own applications from the Internet (p. 65).

Colour scheme

Choose a colour scheme for the entire service system (p. 68).

Where do I get what?

You can order additional ringtones, logos and screensavers on the Internet and receive them by SMS/MMS:

www.my-siemens.com/ringtones www.my-siemens.com/logos

www.my-siemens.com/screensaver

www.my-siemens.com/animations

Or you can download them direct via WAP:

wap.my-siemens.com

Siemens City Portal

Further applications, games and services for your mobile phone (e.g. a Photo Logo Composer to create personal pictures for your Addressbook) can be found at:

www.my-siemens.com/city

The Siemens City Portal also provides a list of countries in which these services are available.

My menu

Create your own menu with frequently used functions, phone numbers or WAP pages (p. 88).

Dialling with number keys

The phone must be switched on (standby mode) and the keypad must be open.



Enter number (always with area code, if necessary with international dialling code).

Clear A **short** press clears the last digit, a **long** press clears the entire phone number.



Press the Call key. The displayed phone number is dialled.

Fnd call



Press End key **briefly**. The call is ended. Press this key even if the person on the other end of the line has hung up first.

Or Close keypad.

Set volume

Using the plus/minus side key (press top/bottom), adjust the volume (only possible during a call).

If a Car Kit is used, its volume setting will not affect the usual setting on the phone.

Redial previous numbers

To redial the phone number **last** called:



Press Call key twice.

To redial other numbers that were dialled previously:

... to dial.



Press the Call key once.



Pick out the required phone number from the list, then press ...



Auto key lockp. 72

(Hide ID).....p. 73

International dialling codes.....p. 113

Phone number memo.....p. 115

Control codes (DTMF).....p. 111

Phone number transmission off/on

When the number is busy

If the number called is busy or cannot be reached because of network problems, several options are available (depending on the service provider). An incoming call or any other use of the phone interrupts these functions.

Either

Automatic Redial previous numbers

Auto dial

Press. The phone number is automatically dialled ten times at increasing time intervals. End with:

Or

Call back



Call back Press. Your phone rings when the busy number is free. Press the Call key to dial the number.

Reminder



Press. A beep reminds you to redial the displayed phone number after . 15 minutes.

Accept call

The phone must be switched on (standby mode). An incoming call will interrupt any other use of the phone.

If the keypad is closed, press the soft key Mute to disable the ringer for the current call



Reply

Press.

Or

Press

Or

Open keypad.

If the phone number has been transmitted by the network, it is displayed. If the caller's name appears in the Phonebook or Addressbook. this will appear instead of the number. If set, a picture can be displayed instead of the bell icon (p. 34).

Warning!

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones!

Reject call

Reject

Press. The call will be diverted if this has been set previously. (p. 73)

Or

0

Press briefly.

Or Close keypad.

Handsfree

You can put the phone aside during a call. You can then hear the caller via the loudspeaker.



Handsfr.

Activate handsfree talking.

Yes

Switch on.



Use the plus/minus side key to regulate volume.

Handsfr. Deactivate.

Warning!

To avoid damage to hearing always deactivate "handsfree talking" before holding the phone to your ear! This will avoid damage to hearing!

menu Call menup. 24

Swap

Ø!

Establish a second connection

You can call another number during a call.

menu Hold

Open call menu.

The current call is put on hold.



Now dial the new number (Phonebook/Addressbook ().

When the new connection is established:

menu

Open call menu.

Swap

Swap back and forth between the calls.

End current call



End the current call and press Yes. You are now connected to the caller.

· End both calls

Close keypad.

Incoming calls during a call

During a call, you may be advised that there is another call waiting. You will hear a special tone during the call. You may need to register for this service with your service provider and set your phone accordingly (p. 73).

You have the following options:

· Accept the waiting call



Accept the waiting call and put the current call on hold To swap between the two calls, proceed as above.

End call

Press the End key O ...
The following is displayed: "Return to call on hold?"

Accept the waiting call by pressing Yes.

Or

End the second call also by pressing No.

· Reject waiting call



Reject the waiting call.

Or

Divert

The waiting call is diverted, for example, to mailbox.

 Accept the waiting call and end the current call



End the current call.



Accept new call.

End both calls

Close keypad.

Conference



Call up to 5 parties one by one and link them together in a conference call. Some of the functions described may not be supported by your service provider or may have to be enabled specially. You have established a connection:

menu

Open menu and select Hold. The current call is put on hold.



Now dial a new number. When the new connection is established ...

🗸 menu

... Open menu and select Conference. The held call is joined.

Repeat procedure until all participants are linked together (up to 5 participants).

End



All calls in the conference finish simultaneously when the End key is pressed.

Or

Close keypad.

Call menu

The following functions are only available during a call:

pen menu.
(p. 22)
(p. 22)
Switch microphone on/off. If switched off, the person on the other end of the line cannot hear you (muting). Also: \times hold down.
(p. 22)
Adjust handset volume.
(See above)
Display call duration and (if set,p. 40) costs accruing during the call.
(p. 111)
The original call is connected to the second one. For you, both calls are now ended.
Access to main menu.
List all held and active calls (e.g. conference call participants).

Babysitter

If this is active, only one number can be dialled.

Switch on



Press.



Enter phone code.

The phone code (4 to 8 digits) is set by you and entered at the first security setting.

Please don't forget the number (see also p. 18)!

OK

Confirm input.

Change

Press.



Select phone number from Addressbook (p. 35) or Phonebook (p. 32) or

enter new number.

OK

Confirm "On".

Apply





Use the right soft key and hold it down to dial (e.g. Carol's phone number).

Switch off

Hold down

Enter phone code.

OK

Confirm input.

Change

Press.

OK

Confirm "Off".

Enter text without T9

Press number key repeatedly until the required letter appears. The cursor will jump forward after a brief interval. Example:



Press briefly once for a, twice for b etc. The first letter in each name is automatically written in upper case.

Hold down to write the number, in this case 2.

Ä,ä/1-9 Umlauts and numbers are displayed after the relevant letters.



Press briefly to delete the letter before the cursor, hold down to erase the whole word.



Move the cursor (forwards/back).



Press briefly: Swap between abc, Abc, ^{T9}abc, ^{T9}Abc, ^{T9}ABC, 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters.

Hold down: Open input menu.



Press once/repeatedly:

.,?!'"0-()@/:_ **Hold down**: Writes 0.



Writes blank. Press twice = jumps a line.

Special characters



Press **briefly**. The symbols chart is displayed:

1)	ż	i	_	;		,	?	!	+	-
**	,	:	*	1	()	n	¥	\$	£
€	@	1	&	#	[]	{	}	%	~
<	=	>		٨	§	Γ	Δ	Θ	٨	Ξ
π	Σ	Φ	Ψ	Ω						

1) Line skip



Navigate to character.

Select

Press.

Input menu With text input:

with text input



Hold **down**. The input menu is displayed:

Text format (SMS only)

Input language

Mark text

Copy/Add

Text input with T9

"T9" deduces the correct word from the individual key entries by making comparisons with an extensive dictionary.

Activate, deactivate T9

Options Open text menu.

T9 input Select.

T9 preferred

Select.

Edit Activate T9.

Select Input language

Select the language in which you want to compose your message.

Options Open text menu.

T9 input Select. Input language

Select.

Select

Confirm, the new lanquage is set. Languages with T9 support are

marked by the T9 symbol.

T9 language versions

If you want to load a dictionary in another language, you will find a large selection to download from the Internet as well as installation instructions under:

www.my-siemens.com/t9

Write a word using T9

Since the display changes as you proceed

it is best if you finish a word without looking at the display.

Simply press the keys once only where the relevant letter is located. For "hotel", for example:

press briefly for T9Abc then type



8 tuv 3 def Press. A blank ends a



word.

Do not use special characters such as Ä but write the standard character. e.a. A: T9 will do the rest for you.

Additional information



Entering a full stop finishes a word, if it is followed by a blank. Within a word, a full stop represents an apostrophe or hyphen:



e.g. provider.s = provider's. Go to the right: Ends the word.

Press briefly: Swap between abc, Abc, T9abc, T9Abc. T9ABC, 123. Status shown in top line of display.

Hold down: All input modes are displayed.



Press briefly: Select special characters (p. 26).

Hold down: Open input menu (p. 26).

T9 word suggestions

If several options are found in the dictionary for a key sequence (a word), the most probable is displayed first. If the word you want has not been recognised, the next suggestion from T9 may be correct.

The word must be highlighted. Then press



again. The displayed word is replaced with a different word. If this word is also incorrect,



press again. Repeat until the correct word is displayed.

If the word you want is not in the dictionary, it can also be written without T9.



To add a word to the dictionary:

Spell Select.

The last suggestion is deleted and the word may now be entered without T9 support. Press Save to add it automatically to the dictionary.

Correct a word

Words written with T9:



Move left or right, word by word, until the required word is highlighted.



Scroll through the T9 word suggestions again.



Deletes the character to the left of the cursor **and** displays a new possible word!

Words not written with T9:



Move letter by letter to the left/right.



Deletes the letter to the left of the cursor.



Letters are inserted at the cursor position.

Additional information

Within a "T9 word", individual letters may not be edited without first removing T9. In most cases it is better to rewrite the complete word.

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro Pat. No. 0842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Text modules

Text modules can be stored in the phone for adding to your SMS messages.

Write text modules

Menu → 🖂 → Text modules

Options Select New text.

Write text module.

Options Select Save.

Accept the default name or give it a new name, then save with OK.

Use text modules

Write message.

Options Open text menu.

Select Text modules.

Select text module from the list.

Select Confirm. The text module is displayed.

Select Confirm. The text module is inserted in the message to the right of the cursor.



Show entries

Entries in the standard directory (Addressbook or Phonebook) are shown for selection.



Select a name with the first letter and/or scroll.



The number is dialled.

<New entry>

Create new entry in standard directory.

Phonebook (see p. 31)

Addressbook (see p. 34)

Default book

Select either Phonebook or Addressbook as your standard directory. Your preference should be for the Addressbook, because more entries and functions (e.g. pictures, birthdays, several phone numbers per entry, etc.) are possible.



Select Phonebook or Addressbook

Select

Set as standard.

Groups

(see p. 38)

Businesscard

Create your own business card. Send this by SMS or infrared to another GSM phone or to a suitable PC/printer.

If no business card has been created yet, you will be asked for your input.



Move from field to field to put in your details. You will find explanations of these input fields on p. 34 and p. 35.

una pross.	
Last name:	E-mail 2:
First name:	URL:
Phone:	Company:
Phone/office:	Street:
Phone/mobile:	Post code:
Fax:	City:
Fax 2:	Country:
E-Mail:	Birthday:

Save

Press.

Additional information

The content of the business card corresponds to international standards (vCard).

Щ+

Copy numbers from Address-book/Phonebook.

Options

See Addressbook menu,

(p. 36).

Service numbers

(see p. 115)


Entries in the Phonebook (on the SIM card) are managed separately from those in the Addressbook, You can however exchange data between the Phonebook and the Addresshook

<New entry>

If the Phonebook is set as standard (Addressbook as standard, p. 30):



Open Phonebook (in standby mode).

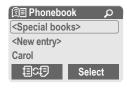



<New entry> Select.



Press.



Select input fields.



Fill in the input fields described below. The maximum number of letters available is displayed at the top of the screen.

Number:

Always enter phone number with prefix.

Name:

Enter first and/or last names.

Location:

Default: SIM



Select the storage location such as SIM or Protected SIM (p. 33).

Record no.:

Each entry is automatically assigned a record number. You can also dial using the record number (p. 32).



Change the record number.



Press to store the new entry.

Additional information Temporary swap

to Addressbookp. 34 +List International dialling code ...p. 113 Store control codesp. 111 Text entryp. 26

<Special books>:

<Own numbrs>: Enter personal phone numbers (p. 114). <VIP numbers>: Assign important phone numbers to group.

<SIM phonebook> (p. 33),

<Protected SIM> (p. 33). <Service numb.> (p. 115).

Call (search for an entry)



Open Phonebook.



Select a name with the first letter and/or scroll.



A record number is automatically assigned to every new entry in Phonebook.



Enter record number.

Press.

Press.

Change entry



Select entry in Phonebook.



Press and select Change.



Select input field.



Edit. Press.

Phonebook menu

The following functions are available, depending on the current situation. Some functions may be applied to the current entry as well as multiple highlighted entries:

Options Open menu.

Options Open menu.	
View	Display entry.
Change	Open the entry to edit.
New entry	Create new entry.
Copy into 🗐	Copy new entry/entries into Addressbook.
Delete	Delete entry.
Delete all	Delete all entries after confirmation.
Mark	Activate highlighting mode, the entry currently selected is highlighted (p. 113).
Mark all	Activate highlighting mode, all entries are highlighted (p. 113).
Send/Print	(p. 110)
Import	Import entries and appointments via IrDA/Bluetooth™ in vCard format.
Capacity	Display maximum and available capacity.

Location:

An entry can be moved from one storage location to another.

SIM (Standard)

Entries stored in the Phonebook on the SIM card can also be used on other GSM phones.

Protected SIM

Ø!

Phone numbers can be stored in a protected location on a special SIM card. The PIN 2 is needed for editing (p. 17).

Activate with the function Only (p. 80).

The Addressbook can store up to 500 entries, each with a variety of telephone and fax numbers as well as additional address details. These entries are managed separately from those in the Phonebook in the phone memory. However you can exchange data between the Addressbook and the Phonebook on the SIM card.

<New entry>

If the Addressbook has been selected as standard:



Open Addressbook (in standby mode).



Select

Press.





Enter first and/or last name.

Group

Entries can be organised by groups (p. 38). Select with Change.



Make further entries field by field.

Phone:	URL: (Internet address)
Phone/office:	Company:
Phone/mobile:	Street:
Fax:	Post code:
Fax 2:	City:
E-Mail:	Country:
E-mail 2:	Birthday: (p. 35)

Bitmap

Select Assign an individual picture to an Address-book entry. It is displayed if you are called by the corresponding phone number (see p. 108).

All fields

Select Show all input fields if the display was previously reduced (see p. 36, Addressbook menu, Field setup).

Save

Save the entry.

Additional information

<Groups> Group functions (p. 38).

Birthday After entering the date of birth,

the "reminder box" can be activated. Now you can enter the date and time of the reminder in the organiser calendar.

Copy data from another Ad-

dressbook entry.

Import The phone is ready to receive multiple vCard entries via IrDA

multiple vCard entries via IrD/ (p. 110).

+List Copy international dialling code from the list (p. 113).

Temporarily switch to Phone-book.

Synchronising with a PC

Using XTNDConnect® PC (p. 119) you can synchronise your Addressbook with Outlook® or Lotus Notes™.

Using Remote sync. you can synchronise your mobile with an organiser stored on the Internet (p. 104).

Read/change an entry

Open Addressbook (in standby mode).

Select required entry.

View Press.





Select input field.

Change

Open entry. Make changes.

Options See p. 36.

Save

Save setting.

Right soft key:

When you jump from line to line while reading, the right soft key changes depending on the type of data. Press this key to activate the relevant application:

VoiceDial Voice dialling menu.(p. 37).

E-mail Create e-mail. (p. 53).

Link Visit URL (p. 62).

Show Display respective picture.

Call, search for an entry



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

The number is dialled.

If an Addressbook entry has several numbers stored:





Select phone number.



The number is dialled.

Addressbook menu

Depending on the actual situation, different functions will be offered. These functions can be applied to the entry currently selected as well as to multiple selected entries:

Options	Open menu.
---------	------------

View	Display entry.
Change	Open the entry to edit.
New entry	Create new entry.
Move to	Assign entry to a group.

Copy to SIM	Copy entry/entries with name and selected phone number to SIM card.	
Delete	Delete entry.	
Delete all	Delete all entries after confirmation.	
Mark	Switch on highlighting mode (p. 113).	
Mark all	Activate highlighting mode, all entries are highlighted (p. 113).	
Filter	Display only those Addressbook entries with the following criteria: Voicedialling E-mail URL Birthday Bitmap	
Business- card	Define an entry as your own business card.	
Voicedialling	Apply voice dialling to an entry (p. 37).	
Send/Print	(p. 110)	
Import	Import entries via $IrDA^{TM}$ in vCard format.	
Capacity	Display maximum and available capacity.	
Field setup	Select input fields for new entry.	

Voicedialling

Dial numbers by voice command. Up to 20 recorded names for voice dialling or voice commands (p. 103) can be saved on the mobile (not on the SIM card).


Record



Open Addressbook (in standby mode).



Select a name with the first letter and/or scroll.

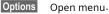

Voicedialling



Select.



Choose phone numbers, if there are more than one.



Press.



Start recording.

A short signal sounds. Now speak the name. After a second beep and message in the display, repeat the name. A beep now confirms the recording, which is saved automatically.

Voice dialling menu

Depending on the actual situation, different functions will be offered.

Optio	ns	Open menu.
Play		Play back a voice command.
New		Record a new voice command.
Delete	_	Delete voice command from an entry.
Delet		After confirmation delete all voice commands for this entry.

Apply voice dialling

Hold down the **plus/minus** side key (in standby mode).

Now say the name. The number is dialled.

Additional information

Noisy environments may affect voice recognition. If attempt was unsuccessful, press the side key once more and repeat the name.

9 groups are specified in your phone, to enable you to arrange your Addressbook entries clearly. You can rename seven groups.



Open Addressbook (in standby mode).

<Groups>

Select (the number of entries is listed behind the group name).





Select group.

Options

Open menu.

Rename group

Select and give group a name.

Additional information

No group: Contains all Addressbook entries that do not belong to a group (name cannot be changed).

Empfangen: Contains vCard Addressbook entries received by IrDA or SMS (name cannot be changed).

SMS to groupp. 44

Group menu

Options	Open menu.
Open	Display all members of the selected group. View Addressbook p. 35. Options See p. 36
Group symbol	Assign a symbol to a group, see below.
Rename group	Change name of group.
Move	Transfer one or more high- lighted entries from one group to another.
Delete all	After confirmation, delete all members of the current group.

Group symbol

Assign to a group a symbol that appears on the display when one of its members calls you.



Select group.

Options

Open menu.

Group symbol

Select.



Choose a symbol.



Confirm.

Your phone stores the phone numbers of calls for convenient redialling.





Select call list.



Press.



Select phone number.



Dial phone number.


Or

View Display information on the phone number.

10 phone numbers can be stored in each call list:

Calls missed

8 The phone numbers of calls that you have received but not answered are stored for call back purposes.

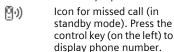

Requirement: The network supports the "Caller Identity" feature.

Calls received

⊗!

Accepted calls are listed.

Requirement:

The network supports the "Caller Identity" feature.

Calls dialed

Access to the last numbers dialled.



Fast access in standby mode.

Erase records

The contents of all call lists are deleted.

Call list menu

The call list menu can be called up if an entry is highlighted.

Options Open list menu.

View	View entry.
Correct no.	Load number to display and edit there if necessary.
Save to 🗐	Store entry in the Address-book/Phonebook.
Delete	Delete entry after confirmation.
Delete all	Delete all entries in call list after confirmation.

You can display charge details and the duration of different types of calls while you speak, as well as setting a unit limit for outgoing calls.

Menu → 🖨 → Durat/charges Select type of call:

> Last call All calls

Remain. units
Display the data.

Once displayed you can:

Reset Clear display.

OK End display.

Charge sett.

Select

Menu → □ → Durat/charges → Charge sett.

Conv.

(PIN 2 prompt)

Enter the currency in which the charge details are to be shown.

Personal rate

(PIN 2 prompt)

Enter the charges per unit/period.

A/c limit

(PIN 2 prompt)

Special SIM cards allow you or the service provider to define a credit or a period after which the phone is barred for outgoing calls.

₿!

Change Press, enter PIN 2.

A/c limit Activate.

Enter number of units.

OK Confirm.

Then confirm the credit or reset the counter. The status display for prepaid cards may vary, depending on the service provider.

Auto display

Ø.

Call duration and call charges are automatically displayed for each call.



Most service providers supply an external voice mail service. A caller may leave a voice message for you in this mailbox

- · if your phone is switched off or not ready to receive,
- if you do not want to answer,
- if you are making a phone call (and Call Waiting is not activated, p. 73).

If voice mail is not part of your service provider's package, you will need to register and settings may have to be made manually. The following description may vary slightly, depending on the service provider.

Settings:



The service provider supplies you with two phone numbers:

Save mailbox number

Call this phone number to listen to the voice mails left for you.



Select number from Phonebook/Addressbook or enter/change it.

OK Confirm

Save call divert number

Calls are diverted to this phone number.



Enter call divert number.



Registration with network. Divert will be confirmed after a few seconds.

Further information on call divert can be found on p. 73.

Listen to



A new voice mail can be announced as follows, depending on the service provider:



Icon plus beep.

Or



A text message announces a new voice mail.

Or

You receive a call with an automatic announcement.

Call your mailbox and play the message(s) back.



Hold down (if necessary enter mailbox number once only). Confirm with OK or Mailbox depending on your service provider.

Away from your home network you may have to dial a different mailbox number and enter a password before you can listen to any messages.


You can transmit and receive very long messages (up to 760 characters) on your phone. These are automatically composed of several "normal" SMS messages of 160 characters each (note higher charges).

Additionally you can insert pictures and sounds in an SMS.

Depending on the service provider, e-mails and faxes can also be sent and e-mails received via SMS (change setting if necessary, p. 57).

Writing and sending text messages (SMS)



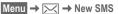

Text input using "T9" (p. 26) allows you to create longer messages very quickly using just a few key strokes.

Clear Press briefly to delete letter by letter, hold down to delete an entire word.



Press.

Dial number or pick out from the Phonebook/Addressbook.

Groups SMS to group (p. 44).

OK

Confirm. Send the SMS to the service centre for

transmission. The sent SMS is saved in the "Sent"

list.

Return to Edit mode.

Display in the uppermost line:

MADC SMS 1 739
We start at 8

■Abc abc/Abc/ ABC/123

739

T9 active.

Switch between upper-case/ lower-case letters and digits.

SMS [

Display title.

Number of SMS messages

required.

Number of characters still available.

Additional information

, taatti on at in to mation
Insert pictures & sounds into textp. 43
SMS profilep. 57
A Message type, Validity period, Service centre may be requestedp. 57
SMS status reportp. 116

Enter special characters......p. 26

Text menu

Options	Open text menu.
Send	Enter recipient's phone number/select from Phone- book/Addressbook, then send.
Save	Save composed text in draft list.
Picture& Sound	Add pictures, animations and sounds into message (see following text).
Text modules	Insert text module (p. 29).
Format	Line feed
	Small font, Medium font, Large font
	Underline
	Left, Right, Centre (align) Mark text (highlight text using control key)
Clear text	Delete the whole text.
Insert from	Insert entry from Phone-book/Addressbook.
T9 input (p. 26)	T9 preferred: Activate/de- activate T9.
	Input language: Select language for text.
Print via IrDA	Send SMS message to a suitable printer.
Send via	Select an SMS profile for transmission (p. 57).

Picture&Sound

Insert pictures and sounds into message.



Write message.

Options

Open text menu at the end of a word.



Select Picture&Sound.

The menu contains:

Fix animations

Fix sounds

Own anim.

Own pictures

Own sounds



Select section.

Select

Confirm.

The first entry of the selected section is displayed.



Scroll to entry required.

When Fix animations/Fix sounds:

Select

the selection is added to

the SMS.

When Own anim./Own pictures/Own sounds:

Load

the selection is displayed/played back.

Select

the selection is added to

the SMS.

Additional information

Playback only occurs if the destination phone supports the EMS standard(p. 112). In input mode, when sound is selected, it is shown as a wildcard

SMS to group

You can send an SMS message as a "circular" to a recipient group.

Options Open menu.

Send Select.

Groups Press. The Addressbook is opened in highlighting mode (p. 113). There are the following options:

• Highlight individual entries.

- <Groups> Select, open a group and highlight individual entries/all entries there.
- <Groups> Select. Select a group.

Send Press. The first of the highlighted recipients is displayed. If this recipient has several phone numbers, one number can be

selected.

Skip Skip recipient.

Send Transmission is started after confirmation.

Read SMS



Display indicates a new SMS.





Press the left soft key to read SMS message.

Date/time	25.04.2003
Tel. no./sender	5553698987
Message	Are we meet

25.04.2003 23:45 55536989876 Are we meeting tomorrow?

Reply Options



Scroll through message line by line.

Reply

See below.

Options

see p. 46.

Additional information

Pictures and sounds in SMSp. 43
🕑 Message memory fullp. 114
Use highlighted phone number/e-mail address/WAP addressp. 115
address/WAP addressp. 115

Reply menu

Reply Open reply menu.

Write mess.	Create a new reply text.
Change	Edit received SMS or add new text.
Answer is YES	Add YES to the SMS.
Answer is NO	Add NO to the SMS.
Call back Delay Thank you	Add a standard text as a reply to the SMS.

When the SMS has been edited in the edit mode, it can be saved or sent with Options.

Ringtones, icons ...

You can receive ringtones, icons, screensavers, animations and information on applications (p. 66) with an SMS in which a link is displayed. Please highlight this link and, by pressing the Call key, start the download.

Please ensure that the HTTP profile (p. 67) and the connection (p. 78) are configured.

Lists

All SMS messages are archived in four different lists, according to their status:

Inbox

Menu $\rightarrow \bowtie$ Inbox \rightarrow SMS

The list of received SMS messages is displayed.



Draft

Menu → 🔀 → Draft → SMS

The list of not yet transmitted SMS messages is displayed.

Unsent

Menu → 🔀 → Unsent → SMS

The list of concatenated SMS messages not yet completely sent is displayed. Transmission can be restarted.

Sent

Menu $\rightarrow \bowtie \rightarrow SMS$

The list of sent SMS messages is displayed.



Lists menu

Each list offers different functions:


	_	
Options	Open	menu.

Options	Open menu.
View	View entry.
Reply	Directly answer incoming SMS messages.
Delete	Delete selected SMS messages.
Delete all	Delete all SMS messages after confirmation.
Send	Dial number or select from the Phonebook, then send.
Change	Open SMS message to edit.
Capacity	Display free capacity on SIM card/phone. In case of segments: number of concatenated SMS messages.
Mark a.unread	Mark message as unread.
Save to	Copy a highlighted phone number to Phone/Address-book.
Archive	Move SMS message to archive.
Print via IrDA	Send SMS message to a suitable printer.
Send via	Select an SMS profile for transmission (p. 57).
Picture& Sound	Save pictures or tones from the SMS.

Archive

Menu → 🖂 → SMS archive

The list of SMS messages stored in the phone is displayed.

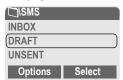



Different functions are available, depending on context:

Archive menu

Options Open menu.

View	View entry.
Send	Dial number or select from the Phonebook, then send.
Change	Open edit mode for changes.

For further services, see Filesystem, p. 108.

The Multimedia Messaging Service enables you to send texts, pictures (also photos) and sounds in a combined message to another mobile phone or to an e-mail address. All elements of an MMS message are merged to form a "slide show".

Depending on your phone's settings, you will receive either the complete message automatically or notification that an MMS has been saved in the network, giving sender and size details. You may then download it to your phone to read it.

Ask your service provider whether this service is available. You may need to register for this service separately.

Writing/sending MMS messages

An MMS consists of the address header and the content.

An MMS message can consist of a series of pages, each one of which may include a combination of text, sounds and pictures.

Texts can be written with the help of T9 (p. 26).

Pictures and graphics that have been produced with accessories such as digital cameras can be attached in JPEG, WBMP, GIF or GIF format. See also Filesystem, p. 108.

Music is sent and received in a MIDI file, single tones/sounds in an AMR file. Up to 48 KB can be played back.

Navigation



Scroll line by line with the control key.

Scroll page by page with the plus/minus side key, by pressing top/bottom.





Input fields:

To:

Phone number/ e-mail address of recipi-

ent(s).

Subject:

Enter MMS heading (up to

40 characters)

Picture:

Insert Press. The picture list is opened for selection (see also Filesystem.

p. 108).

Text:

Edit Press. Write text with the help of T9. Text menu,

see p. 48.

Sound:

Insert Press. The music list is opened for selection

(see also Filesystem,

p. 108).



Duration: Enter length of display for

individual pages (minimum 0.1 seconds).

Attach other pages

Options Open menu.

New slide Select.

Additional information

No more than 20 phone numbers/ addresses, (of 50 characters each) can be addressed

Options MMS main menu.....p. 48

Attach business card

Options Open menu.

Select. Extras

Scroll to Businesscard.

Attach appointment

Options Open menu.

Extras Select

Scroll to Appointment.

Attach business card.

Import appointment from calendar

Check MMS

Check the MMS message before sending it:

Options Open menu.

Preview slide

View a single page.

Prev. message

Play back the whole MMS in the display. Press any key to break off.

Send MMS.

Options Open menu.

Send Select.

Text menu

Options Open menu.

Line feed	Start new line.
Save	Save MMS text.
Insert text	Insert text module (p. 29).
Clear text	Delete the whole text.
T9 input (p. 26)	T9 preferred: Activate/ deactivate T9.
	Input language: Select language for text.

MMS menu

Different functions are available, depending on the context:

Options Ope	en menu.
Insert line	Extend address field by one line.
Save	Store MMS in the draft list.
Send	Send MMS.
Insert from	Insert number from Phonebook/Address- book and appointments/ tasks.
Clear text	Delete the whole text.
New slide	Insert new page behind current one.
Delete item	Delete element on a page.
Delete slide	Delete page currently displayed.
Preview slide	Playback of complete page.
Slide list	Display pages available for selection.
Prev. message	Playback of complete MMS. Press any key to break off.

T9 input (p. 26)	T9 preferred: Activate/ deactivate T9.
	Input language: Choose language in which the text is to be written.
Attributes	Show Date:, Size:, Priorität: of MMS.
Extras	Enter other features of MMS and attach Businesscard and Appointment.



Receive MMS



Indicates reception or notification of an MMS.





Press the left soft key to read the MMS.

Depending on the setting, (p. 58) the

- · complete MMS is received.
- the notification is opened. Press Receiving to receive the complete MMS.

Press any key to break off function.

Read MMS



Automatic presentation of the MMS. Use any key to cancel.



Scroll page by page with the control key.

Scroll page by page with the plus/minus side key, by pressing top/bottom.



Call up individual pages directly by number key.

Attachment

A single MMS can contain several attachments.

Options

Open menu.

Attachment

Select attachment.

Open

The attachment is opened with the available

application.

Select

Save

The attachment is saved under a name.

Pictures and sounds

Pictures and sounds received in an MMS can be saved separately. To do this, stop the MMS by pressing any key, or alternatively scroll through to the required page.

Options

Open menu.

Content Select.

Proceed as for attachments, as described above. Show as icons at the top of every page.

Functions for editing MMS can be found under Options.

Lists

All MMS messages are saved in four different lists:

Inbox

Menu
$$\rightarrow \bowtie \rightarrow Inbox \rightarrow MMS$$

The list of MMS messages and notifications received is displayed. To receive an MMS subsequently, open notification and press Receiving.

Draft

$$Menu \rightarrow \bowtie \rightarrow Draft \rightarrow MMS$$

The list of stored drafts is displayed.

Unsent

The list of the MMS messages not yet completely transmitted is displayed.

Sent

The list of sent MMS messages is displayed.

Lists menu

Each list offers different functions:

Options Open menu.

Play	Play back MMS.
Change	Open edit mode for changes.
Reply	Reply to MMS immediately.
Send	Send MMS.
Receive MMS	Start inward transmission of MMS when only notification is highlighted (p. 58).
Receiv.all MMS	Start receipt of all MMS messages.
Forward	Forward MMS to new recipients.
Delete	Delete selected MMS messages.
Delete all	Delete all entries after confirmation.
Mark a.unread	Mark MMS as unread.
Save to 🗐	Copy phone number/e-mail address into Phonebook/ Addressbook.
Attributes	Information on MMS is displayed: • Sender • Arrival time • Subject • Size • Priority



Capacity	Size of current MMS as well as capacity still available are shown.
Preview slide	Play back current page.
Slide list	Display pages available for selection.
Attachment	Open list of attachments received.
Content	Selection of page contents to be archived, such as picture or sound.
Save	Store MMS in outbox list.

lcon:	Meaning
MMS	MMS unread
MMS	MMS read
MMS	MMS draft
= MA	MMS sent
MMS	MMS read and forwarded
MMS	MMS read with despatched confirmation
:N:	Notification unread
N.	Notification read

Your phone has an e-mail program (client). You can use it to create and receive e-mails.

Write/send e-mails



Enter e-mail address



To: E-mail address of recipient(s).

Cc: E-mail address for the copy recipient.

Bcc: E-mail address for blind copy recipients (the other recipients are not shown the Bcc recipient).

Attach.: See below.

Press **briefly** to write special characters such as @ (p. 26).

T9 helps you write e-mails (p. 26).



Subject: Enter e-mail heading (up to 200 characters).



Content: Enter text.



Open menu.

Send

Send e-mail.

Add attachments

A file from the file system (e.g. ringtone) can be inserted in an e-mail as an attachment (p. 108).

Attach. Open file system.

Select file to be inserted.

Mark Highlight file.

OK Copy file as an attachment.

E-mail editor menu

Options Open menu.

Insert line	Extend address field by one line.
Delete line	Delete line in address field.
T9 input (p. 26)	T9 preferred: Activate/ deactivate T9. Input language: Select language for text.
Insert from	Insert entry from Phone-book/Addressbook.
Attach.	(see above).
Save	Save in draft list.
Send	Establish connection with server and send e-mail. If necessary, select different access (p. 78).
Send later	Transfer to outbox list to be sent later.

Receive e-mail



Before an e-mail can be read, it must be retrieved from the server. The service provider is dialled with the default access profile (p. 78) and all e-mails are transmitted to the inhox list.

Additional information

The e-mail client always receives complete messages including header, content and, if applicable, attachments. You can restrict the size of the received messages (p. 59).

A maximum of 50 e-mails can be stored in the phone. E-mail size is limited to 99 KB.

Synchronising with a PC

With XTNDConnect® PC (p. 119) you can synchronise your incoming/outgoing e-mails with Outlook® or Lotus Notes™.

E-mail	with attach- ment	Meaning
<u>~</u> @	<u>6</u>	Unread
@	<u>69</u>	Read
[@	<u> </u>	Draft
<u>=</u> [@	<u>=[9</u>	Sent

Read new e-mail



The e-mail is displayed.

Switch between small,

normal and large font sizes.

Scroll line by line with the control key.

Scroll page by page with the plus/minus side key, by pressing top/bottom.

The left soft key offers different functions depending on which text area you have selected:

→M

E-mail addresses/phone numbers in the message are highlighted and can be stored in the Addresshook

Dial phone number or start new e-mail.

Save

Save attachment (e.g. bitmap).

Reply

Reply to sender.

Link

Start WAP browser and visit URL (p. 63).

Read menu

Options O	pen menu.
Reply	The original e-mail is re- trieved. The sender is en- tered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Change	To edit, open e-mail in edit mode.
Delete	Delete selected e-mail.
Delete all	Delete all e-mails in the inbox or outbox.
Font size	Select font size.
Save attach.	The attachment is stored in the file system (Filesystem,

p. 108).

Lists

All e-mails are stored in four different lists:

Inbox

Menu → → Inbox → E-mail

The list of received e-mails is displayed.



Select e-mail.

View

The e-mail is displayed for reading.

Draft

Unsent

Menu → ✓ → Unsent → E-mail

The list of not yet transmitted e-mails is displayed.

Menu → ✓ → Unsent → Send e-mail

Send all e-mails queued for transmission to the server.

Menu → 🔀 → Unsent → Send/rec. mail

Transmit all e-mails queued for transmission to the server and receive all new e-mails from the server.

Sent

Menu → 🖂 → Sent → E-mail

The list of transmitted e-mails is displayed.

Lists menu

Delete all

Each list offers different functions:

Options Open menu.

	peri mena.
View	(p. 54)
Change	Edit e-mail.
Reply	The original e-mail is retrieved. The sender is entered as recipient and can be changed as can the header and CC.
Reply to all	As above, but all recipients are listed in the "Send to" field.
Forward	The original e-mail is retrieved. Enter the new recipient to whom it should be forwarded.
Delete	Delete selected e-mail in phone.

Delete all e-mails in phone.

Sort	Sort • by subject • by sender • by recipient • by date/time • by status Not all sort criteria are possible in all lists.
Send e-mail	Establish connection with server and send e-mails.
Receive e-mail	Establish connection with server and receive incoming e-mails.
Send/rec. mail	Establish connection with server, send e-mails and receive incoming e-mails.

SMS profile

Menu → 🔀 → Setup → SMS

Up to 5 SMS profiles can be set. The transmission characteristics of an SMS are defined in these. The presetting depends on the SIM card inserted.



Select profile.



Open menu.

Change sett.

Select.

Service centre

Enter or change the servicecentre phone numbers as supplied by service provider.

Recipient

Enter the standard recipient for this transmission profile or select from Phonebook.

Message type

Manual

The message type is requested for each message.

Standard text

Normal SMS message.

Fax

Transmission via SMS.

E-mail

Transmission via SMS.

New

You may need to obtain the required code number from your service provider.

Validity period

Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum

*) Maximum period that the service provider permits.

Status report

You will receive confirmation whether delivery of a message has been successful or unsuccessful. This service may be subject to a charge.

Direct reply **⊗!**

The reply to your SMS message is handled via your service centre when Direct Answer is activated (for information please contact your service provider).

SMS via GPRS Send SMS automatically by GPRS (if available).

Requirement: GPRS is activated (p. 77). Ensure that your service provider offers this function

Save aft. send

Sent SMS messages are saved in the **Sent** list.

Activate profile



Select profile.

Activate

Press to activate profile.

MMS profile

Menu → 🖂 → Setup → MMS

A number of MMS profiles can be selected. The transmission characteristics of an MMS are defined in these.



Select profile.

Options

Open menu.

Change sett.

Select.

Expiry time Select the period in which the service centre is to try to deliver the message:

Manual, 1 hour, 3 hours, 6 hours, 12 hours, 1 day, 1 week, Maximum*

*) Maximum period that the service provider permits.

Def. Send priority: Medium, priority High, Low

Def.
duration

Length of display for an
MMS page (standard
requirement).

Retrieval Receive complete MMS or only notification of arrival.

Automatic
Receive complete MMS im-

Auto.homenet

Receive complete MMS immediately in home network

Manual

mediately.

Only the notification is received.

Conn.pro- Select or set access profile (p. 78).

Activate profile



Select profile.

Activate

Press to activate profile.

E-mail settings



Before using this service, you must set the server access and your e-mail options. The data for these may already have been entered. If not, your service provider will supply you with the relevant information. See also on the Internet at:

www.my-siemens.com/sl55

Additional information

Your service provider must support the following protocols for successful data exchange with the e-mail server:

POP3, IMAP4 and SMTP or eSMTP.

E-mails will be MIME-encoded for transmission

Encryption of e-mail transmission (SSL, APOP) is not possible at present.

Accounts

5 accounts can be defined. If no access data have been defined for the account, the entry card is displayed.

Alternatively:

Options Press.

Change sett.

Select, then:

User settings

Provider	Select provider.
User name:	Your name.
E-mail addr.: *	Your e-mail address, e.g.:name@domain.ab
Reply-t.addr.:	Additional e-mail address for replies.
User ID: *	Your user ID.
Password: *	Your password.

*Your service provider will supply you with this

information. Mail settings

	Downl. only mails smaller than <10> KB	Set maximum size for incoming e-mails.
	Leave copy on server?	E-mails remain on the server after they have been retrieved.
	Types	POP3 or IMAP4.
	POP3 server: *	Enter Internet address if the server type is POP3 and SMTP.

POP3 Port: *	(Default: 110)
IMAP4*	Enter Internet address if the server type is IMAP4 and SMTP.
IMAP4 Port: *	(Default: 143)
SMTP server: *	Enter Internet address.
SMTP port: *	(Default: 25)
SMTP Authentic.:	Authentication: Yes/No
SMTP Password:	A user password will be required if "Authentication" is set to Yes.

*Your service provider will supply you with this information.



Save and activate settings.

General sett.

Enter the preset default of an e-mail address for blind-copy recipient (Bcc).

Activate profile



Select profile.



Press to activate profile.

Voice message

These functions are described in a separate chapter (see p. 41).

CB services

These functions are described in a separate chapter (see p. 61).



Some service providers offer information services (info channels, **c**ell **b**roadcast). If reception is activated, your "Topic list" will supply you with messages on the activated topics.

Broadcast

You can activate and deactivate the Cell Broadcast (CB) service. If the CB service is activated, standby time for the phone will be reduced.

Read new CB

All unread CB messages are displayed.

Topic list

Add an unrestricted number of topics to this personal list from the topic index (Topic index). You can preset 10 entries with their channel number (ID) and, if necessary, their names.

New topic Select.

- If no topic index (Topic index) is available, enter a topic with its channel number and confirm with OK.
- If the topic index has already been transmitted, select a topic and confirm with OK.

Channel: Select

Options Open list menu.

If a topic is selected in the list you can view it, activate/ deactivate it, edit it or delete it.

Auto display

CB messages are displayed in standby mode, longer messages are scrolled automatically. This display can be activated/deactivated for all or only new messages.

For "full page view":

press , then View CB.

Topic index



The list of topics is displayed for you to choose from. If nothing is displayed, you must enter the channel numbers (ID) manually (Topic list). Please contact your service provider for details.

CB languages

Receive Cell Broadcast messages in only one specific language or in all languages.

Displays

✓ ,

Topic activated/deactivated.



New messages received on the topic.



Messages already read.

Internet browser (WAP)

Get the latest information from the Internet that is specifically adapted to the display options of your phone. In addition, you can download games and applications to your phone. Internet access may require registration with the service provider.

Internet access

രി



The browser is activated as soon as you call up the function. The functions of the soft keys vary, depending on the internet page, for example "link" or "menu". The contents of the option menus are also variable. If necessary, set the way in which WAP access should be made (see Browser menu, Setup, Start with..., p. 63).

For example the start menu appears:





Select required function.

Confirm.

Start menu

Home	The connection to the pro- vider's portal is set up. This may be defined or pre-set by your service provider.
Bookmarks	Up to 50 URLs stored in the phone for fast access.
Resume	Call up recently visited pages that are still in memory.
Inbox	Inbox for messages from the WAP server (WAP push).
Profiles	The list of profiles is displayed for activation/setting (p. 64).
Exit browser	Close browser and clear down connection.
Additional information Operating instructionsp. 117	

Fnd connection



Hold down to clear down the connection and to close the browser.

Your Internet browser is licensed by:





Browser menu

If the browser is active, the menu can be activated as follows:



Press







confirm. Home The connection to the provider's portal is set up. This may be defined or pre-set by your service provider. **Bookmarks** Up to 50 URLs stored in the phone for fast access (p. 118). Resume Call up most recently visited page still in memory. Go to... Enter URL to access WAP page directly, e.g. wap.my-siemens.com Select from list of most recently visited WAP addresses. Reload Reload page. Inbox for messages from

Inbox the WAP server (WAP push). Disconnect End connection

Save bitmap Save a picture on the page.

More ... See helow Exit browser Close browser and clear down connection.

More ... (in menu)

Openwave

Profiles	The list of profiles is displayed for activation/setting (p. 64).
Setup	Font size
	Protocol parameters Push Push can force online Timeout for unanswered network requests
	Security Connection prompt Secure prompt Current certificate CA certificates Private Key PINs Encryption
	Start with • Start menu • Browser menu • Home • Resume • Bookmarks
Reset	Restart session and clear cache.
About	Display browser version.

Notes ☐ Browser menu. Offline. Online. ☐ PRS Online. No network. Select special characters, such as @, ~, \, see p. 26. or ☐ press repeatedly for:

WAP profiles

Menu → ♠ → Internet → Profiles

Preparation of the phone for WAP In-

ternet access depends on the current service provider:

.,?!@/&~+-=

- The settings have already been installed by provider. You can start immediately.
- Access profiles for a number of providers have already been set.
 Then select and activate profile.
- The access profile must be set manually.

If necessary, check with your service provider for details.

Activate WAP profile

You can change the current profile each time you access the Internet.



Select profile.



Activate. The current pro-

Set WAP profile

Up to 5 WAP profiles can be set (if not barred by provider). The entries may vary depending on the service provider:



Select profile.

Edit

Open to make settings.

Profile name

Enter/change name.

WAP param.

æ.

wai paraiii.	⊗!
IP address:	Enter IP address.*
Port:	Enter port number.*
Homepage:	Enter homepage, if not set by the service provider.
Due time:	Time in seconds after which a connection should be end- ed if no input or data ex- change takes place.
Account sett.	Select or set access profile (p. 78).

^{*)} depends on service provider, if necessary enter 2nd IP address and 2nd port

Save

Save settings.

Games & more

Download games and other applications. You are advised about relevant applications on the Internet.

Once you have selected a game or application you can start to download it immediately. Then you can use the application.

Most applications include instructions.

Additional information

Applications and games can be found at:

wap.my-siemens.com

or on the Internet at:

www.my-siemens.com/city

Games and applications

Applications and links that are already stored on the phone are found under:

Menu → 🌎 → Games & more



Different functions are available depending on which entry is highlighted:



Select

Loadable application can be started immediately.

toad game/application online

Select

Only description file (p. 114); application has still to be loaded

Internet

The selected Internet page is loaded.

Receive information

If information required, say, by an application that has already been installed, is received via **SMS**, the symbol appears in the display. By pressing the left soft key, the relevant application is started and the information is processed.

Additional information	
The following key control is used for many games (virtual joystick):	
K T >	
1 ∞ 2 abc 3 def	
4 ghi 5 jkl 6mno	
Zpars 8 tuv 9wyg	

Games&More menu

All functions required for editing and managing your applications and folders are found in the Options menu:

Options Open menu.

Start	Start application.
Download	An application is downloaded from the Internet and installed.
New folder	Create and name new folder.
Delete	Delete selected application/folder.

Delete all	Delete all applications/folders after confirmation.
Rename	Rename highlighted applications/folders.
Move	Move applications between folders.
HTTP profile	The list of profiles is displayed for activation/setting (p. 67).
Reinstall	Reinstall an application (update).
More info	Download further instructions via Internet (WAP), if available.
Details	Show details of the application/folder (name, version, size, path, producer, date).
Sort	Set sort criteria (alphabetical, time).
Capacity	Display maximum and available capacity.

HTTP profile



Menu → 🕞 → Games & more Open menu



Select HTTP profile.

Preparation of the phone depends on current service provider:

- The settings have already been installed by provider. You can start immediately.
- Access profiles have already been set by your provider. Then select and activate profile.
- The access profiles have to be set manually.

If necessary, check with your service provider for details.

WAP can be used to download applications from the Internet. Downloading or running applications will not affect or change the software already installed on your Java™-enabled mobile phone. Siemens excludes all warranty and liability claims in respect of or in connection with any applications subsequently installed by the customer and any software not included in the original delivery package. This also applies to functions enabled subsequently at the customer's instigation. The purchaser bears sole risk for the loss of, damage to, and any defects arising in, this device or the applications or software and for any direct damage or consequential damage of whatever nature resulting from the use of these applications or software. For technical reasons, such applications or software and subsequent enabling of certain functions are lost in the event of the device being replaced/re-supplied and may be lost if it is repaired. In these cases the purchaser will need to download the application again or re-enable it. Siemens does not warranty or guarantee or accept any liability for the customer's ability to download or enable applications again or to do so free of charge.



Display

Menu → J → Display
→ Select function.

Language

Set the language of the display text. When "automatic" is set, the language of your service provider is used. If a language that you do not understand happens to be set, the phone can be reset to the language of your service provider with the following input (in standby mode):

*#0000# ~

T9 input

(see also p. 27)

T9 preferred

Activate/deactivate intelligent text entry.

Input language

Select language for text entry. Languages with T9 support are marked by the T9 symbol.

Wallpaper

Set background graphic for display.

Logo

Choose picture to be displayed instead of the provider logo.

Color scheme

Select colour scheme for the whole service system.

Activate colour scheme



Select colour scheme.

Select

Activate.

Load colour scheme

Up to three colour schemes can be included in the selection list. These can be loaded by WAP, for example.

Options

Open menu.

Load

Select colour scheme.



Screensaver

The screensaver shows a picture in the display when a period set by you has elapsed. The function is ended by an incoming call or by pressing any key.

Enable	Activate/deactivate screensaver.
Style	Analog clock, Bitmap or Energy saving.
Bitmap	Select picture in file system.
Preview	Display screensaver.
Timeout	Set period after which the screensaver starts.
Security	Phone-code protected termination of screensaver.
Auto key lock	The keypad is locked when the screensaver starts.

Additional information

You can also receive individual logos, screensavers and animations by SMS (p. 42), MMS (p. 47) or WAP (p. 62). See also My phone (p. 19).

Start up anim.

Select animation to be shown when phone is switched on.

Shutdn anim.

Select animation to be shown when phone is switched off.

Own greeting

Enter greeting to be displayed instead of animation when phone is switched on.

Edit	Activate/deactivate.
	Delete old message and create new message.
OK	Confirm changes

Big letters

You can choose between two font sizes for the display.

Illumination

Set display light brighter/darker. The darker the setting the longer the standby time.



Press the control key repeatedly to adjust up or down.

Contrast

Set display contrast.



Press the control key repeatedly to adjust up or down



Audio

You can set the tones to match your needs

Ringer setting

On/Off Activate/deactivate all

tones.

Beep Reduce ringtone to a

short signal (beep).

Additional information

Display: Ringer off.

Switch off ringerp. 116

Silent alert

To avoid the disturbance caused by a ringing phone, you can activate the silent alert function as an alternative. The silent alert can also be activated in addition to the ringer (e.g. in noisy environments). This function is deactivated when the battery is charged.

Volume

Set different volumes for types of call/functions.



Select:

Calls
Group calls

Other calls

Δlarm

Alarm clock

Messages

Cell broadcast

Start melody End melody

ProSlide (common setting for opening and closing melody)

Press. The ringtone is

played.

Select

🗓 🖒 🛮 Set volume.

Confirm.

Additional information

Please make sure you have accepted the call before holding the phone to your ear. This will avoid damage to your hearing from loud ringtones!

If two independent phone numbers are registered on your phone, you can set different volumes for them (p. 116).





Melodies

Set different ringtones for types of call/functions.



Select:

Calls Calls

Group calls

Other calls

Alarm

Alarm clock

Messages

Cell broadcast

Start melody

End melody

Open. melody

Closing melody

Select

Press. The melody is played.



Choose ringtone.

OK

Confirm.

Additional information

Individual ringtones can be sent to you via SMS (p. 42) or you can download them via WAP (p. 62). See also My phone (p. 19).

Call screening

æ.

Only calls from phone numbers that are in the Phonebook/Addressbook or in a group are signalled audibly or by silent alert. Other calls are merely displayed.

If you do not accept these calls, they are diverted to your mailbox (if set, p. 73).

≯¦↓

Display in standby mode: when call screening is activated.

Key tones

You can set the type of acoustic key tone:

Click or Tone or Still

Minute beep

During a call, you will hear a beep after every minute as a reminder of the time elapsed. The recipient does not hear this beep.

Info tones

Set service and alarm tones:

On/Off

Activate/deactivate tones.

Extended

If switched on, a wider range of service tones is

available, e.g.:

- · End of menu,
- · Maximum text length reached,
- · Network connection broken.