

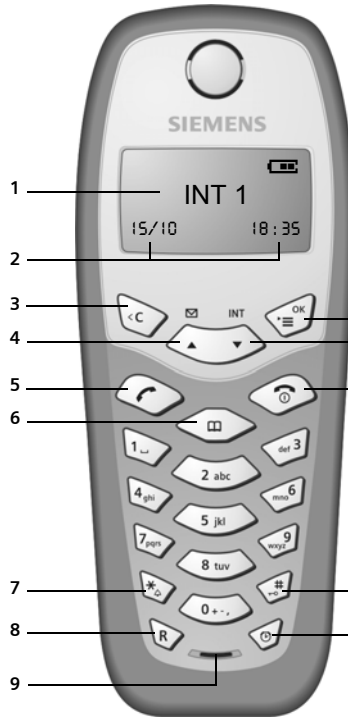 
EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH.</p> <p>Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.</p> <p>Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH & Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>

CS	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	PL	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
SK	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	TR	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
RO	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	RU	Уважаемые покупатели! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
SR	Poštovani potrošaču, Gigaset Communications GmbH je pravni nasljednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
BG	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
HU	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		

Gigaset A155 english

The handset at a glance

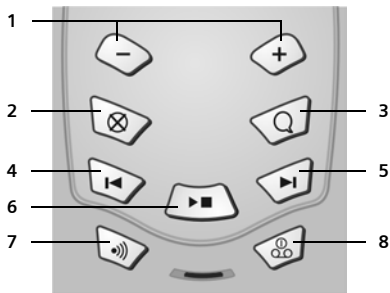 
- 1 Internal number of the handset
- 2 Date and time
- 3 **During entries:**
backspace delete one character at a time
- 4 Open calls list (page 5)
In lists: scroll up
- 5 Talk key:
- Accept call
- Last number redial list
Open (press briefly)
- Start dialing
(press and hold)
- 6 Open directory
- 7 Ringer on/off
(press and hold)
- 8 Recall key
- Confer (flash)
- Dial pause
(press and hold)
- 9 Microphone



Display symbols

- External line busy
- Alarm clock activated
- Flashing:**
new entry in calls list
- Answering machine activated
- Ringtones deactivated
- Keypad blocked
- Charge status of the batteries
- 10 Open main/submenu, confirm menu function or store entry
- 11 Internal calls
In lists: scroll down
- 12 End call, On/Off key
In menus:
Go back one level
With Phonebook open:
Exit Phonebook without saving
- 13 Keypad lock
(press and hold)
- 14 Alarm clock key

Base station at a glance



- 4 Skip back to beginning of message (press once) or to previous message (press briefly twice).
- 5 Skip to next message.
- 6 Play/stop key
Playback new messages or cancel the playback (press briefly).
- 7 Registration/paging key
Press briefly: search for handsets ("Paging", page 7).
Press and hold: register handsets (page 6)
- 8 On/Off key
Activate/deactivate answering machine.
Lights up: answering machine is activated.
Flashes: at least one new message is present.

- 1 Adjust volume during message playback:
- = quieter; + = louder.
- 2 Delete current message or personal announcement.
- 3 Play back and record the announcement message.

Safety precautions



Read this user guide and the safety precautions carefully before use. Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use **the mains unit supplied**.



Fit only the recommended, rechargeable batteries (page 9), i.e. never use any other battery type or any non-rechargeable batteries as they could damage your health and cause injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment (e. g. doctor's practice).



The handset may cause an intrusive 'hum' in hearing aids. Do not hold the handset against your ear while it is ringing (incoming call).



Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof (page 9).



Do not use your phone in environments subject to explosion hazard (e.g. auto paint shops).



If you give your Gigaset to someone else, make sure you also give them the operating instructions.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

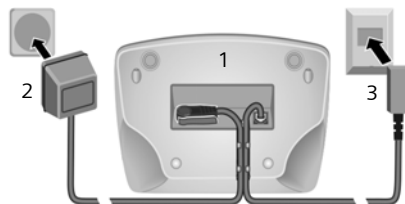 
For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Not all of the functions described in these operating instructions are available in all countries.

Setting up the telephone for use

Step 1: Connecting the base

◆ **First** connect the mains adapter and **then** the phone jack as shown below and place the cords in the cord recesses.

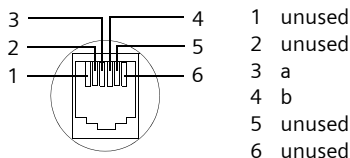 


- 1 Underside of base station (detailed view)
- 2 Mains adapter 230 V
- 3 Phone jack with phone cord

Please remember:

- ◆ Keep the mains adapter **plugged in at all times** for operation as the phone does not work without a mains connection.
- ◆ If you buy a replacement phone cord from a store ensure, that the phone jack is connected correctly.

Correct phone jack assignment



Step 2: Setting up the handset

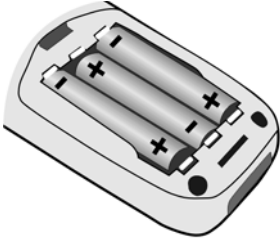 
Inserting the batteries

Caution:

Use only the rechargeable batteries recommended by Siemens (page 9). I.e. on no account may conventional (non-rechargeable) batteries or other battery types be used, otherwise serious damage to health and property cannot be ruled out, e.g. the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

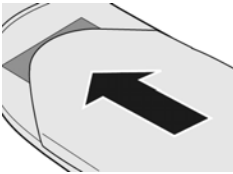 
- ◆ Fit the batteries with the **correct** polarity (see diagram).

The polarity is indicated in/on the battery compartment.



Closing the battery cover

- ◆ Position the cover pointing slightly downwards and push it up until it clicks into position.



Opening the battery cover

Press below the upper curve on the battery cover and slide down.

Step 3: Charging the batteries

To charge the batteries, place the handset in the base/charging cradle and leave for approx. 12-15 hours. The batteries are now fully charged. The battery charging status is correctly displayed only after uninterrupted charging/discharging. Therefore you should not interrupt the charging process. Charging is controlled electronically to prevent the batteries from overcharging. The batteries heat up during charging. This is normal and not dangerous. After a time the charge capacity will decrease for technical reasons.

- ◆ Never use non-Siemens chargers as these could damage the batteries.
- ◆ Only place the handset in the base/charging cradle that is intended for it.

The charge status of the batteries appears at the top right of the display:

- batteries flat
- batteries 1/3 charged
- batteries 2/3 charged
- batteries fully charged

The handset is already registered with the base station. You must set the date and time to ensure that the times of calls are logged correctly (page 7). Your telephone is now ready to use.

Activating/deactivating the handset

Press **and hold** the end call key .

If you place a deactivated handset in the base station/charging cradle, it will automatically activate.

Activating/deactivating the keypad lock

You can "lock" the keys on the handset to protect the keypad against inadvertent activation.

To activate: press **and hold** the hash key **#**.

The display shows the icon .

To deactivate: press **and hold** the hash key **#**.

The keypad lock deactivates automatically when you receive a call and activates again after the call. When the keypad lock is active you cannot even call emergency numbers!

Making calls

Making external calls/Ending a call

External calls are calls using the public telephone network.

(Enter the number) → .

The number is dialed. (Or you can **first press and hold** [dial tone] and then enter the number.)

During the call you can adjust the earpiece volume as follows:

***≡ → H/SET VOL → OK**

Select the volume with and and confirm with **OK**.

Ending the call/canceling dialing:

Press the end call key .

Answering a call

Your handset rings and you wish to take the call: Press the talk key .

If "Auto Answer" is active (page 8) just lift the handset out of its base/charging cradle.

Calling Line Identification

When you receive a call, the caller's number will be displayed on your handset; the caller's name will be displayed if it is stored in the directory or if CNIP has been requested.

Requirements:



- 1 You have asked your network provider for the caller's number (CLIP) or name (CNIP) to be displayed on your handset screen.
- 2 The caller has asked the network provider for his number to be identified (CLI).

In the display you will see **EXTERNAL** if you have not requested Calling Line Identification, **WITHHELD** if the caller has withheld CLI or **UNAVAILABLE** if CLI has not been requested.

Using the directory and other lists

Directory

You can store up to 20 numbers and associated names.

Press the  key and then . The following functions are available:

NEW ENTRY	Save new phone number.
SHOW NUMBER	Display number. Return to directory with the <C key.
USE NUMBER	Use phone number to dial. If necessary extend it.
EDIT ENTRY	Add/edit phone number.
DELETE	Delete a single entry.
DELETE ALL	Delete all entries.

If you select **SHOW NUMBER** the first 12 digits of the phone number are displayed. For long numbers: press ▼ or ▲ to display the first or last part of the number.

Storing a number in the directory

 →  → **NEW ENTRY**

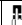



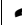
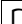


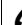
 	Enter phone number and confirm.
 	Enter the name and confirm.
	Press and hold (back to idle status).

Table for text/numerical entry: see page 9.


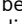
Backspace delete one character at a time: press <C key.

Dialing with the directory

	Open directory.
 	Select the required entry or enter the first letters of the name.
	Press the talk key.




Speed dial list

You can store up to ten numbers e.g. private phone numbers.

Press  and select **SHORTCUT**. The speed dial list will be displayed with entries **SHORTCUT 1**, **SHORTCUT 2** etc. Shortcuts that have already been assigned are marked ✓. Pressing  again displays the name stored in the directory.

Storing a telephone number in the speed dial list

 → **SHORTCUT** → **OK**


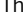

	Select the required entry from the speed dial list.
OK	Confirm. The directory is displayed.
 	Select the required entry or enter the first letters of the name.
OK	Confirm. The shortcut is marked ✓.

Speed dialing

For example, press and hold key **3**.

Last number redial list

This list contains the ten last dialled numbers. If the number is already saved with a name in the telephone book, the name of the caller is displayed.




 → Select entry with  → .

The following functions are available:

COPY TO DIR	Store number in directory.
SHOW NUMBER	Display number. Press the <C button to return to the last number redial list.
USE NUMBER	Use phone number to dial. If necessary extend it.
DELETE	Delete displayed numbers.
DELETE ALL	Delete entire list.



Dialing a number


You can select a number from the last number redial list:

 → Select entry with  → .

Calls list

The numbers of the last 10 **missed** calls are stored. Set the date and time (page 7) so that the time of the call can be shown in the display.

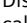
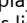
When the phone is in idle status, new missed calls are indicated by a **flashing** . You can call up the calls list with the  key.


If the calls list is open, a new call is marked with the symbol .

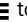
Using the calls list

 key → Select entry → .



The following functions are available:

COPY TO DIR	Store a number in the directory.
SHOW NAME	Display name of caller, if your network provider has provided this information.
SHOW NUMBER	Display number. Return to the calls list with the   key.
DELETE	Delete an individual number.
DELETE ALL	Delete entire calls list.

If you select **SHOW NUMBER** the first 12 digits of long numbers are displayed. To display the last part: press .

If there is already a directory entry for the phone number, the caller's name is displayed. Call up the directory menu with  to display the relevant phone number.

Calling back a caller from the calls list:

 key → Select entry → .

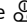
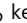
Answering machine

The answering machine is operated from the base station.

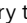
Set the date and time (page 7) so that the time of the recording can be shown on the handset.

The answering machine is supplied set up ready to use. You can make individual settings from the handset (see Menu Tree, page 12).

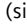
Switching answering machine on/off

Your answering machine is activated and ready for use as soon as your handset has been set up. When the answering machine is switched on the handset display shows the  icon and the  key on the base is illuminated.

Until you have recorded your own personal announcement, the stored pre-recorded announcement will be used.

If the memory is full the answering machine turns itself off. The  key flickers, if you try to switch the answering machine back on. In this case, you must delete some old messages (page 6).

Recording your own announcement

Press and **hold** the announcement key  (signal tone). Now record your announcement.

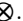
Press the play/stop key  to end the recording.

The recording stops automatically if you exceed the maximum recording time of 60 seconds.

Checking an announcement or deleting it

Press the announcement key  **briefly**.

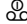
The announcement message is played.

The announcement message can be deleted during playback by pressing the delete key .

The default announcement is then active again.

You cannot delete the default announcement.

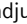
Playing/deleting messages

New messages are shown on the base by the  key flashing, and on the handset by displaying the number of new messages, e.g. **1 MESSAGES**.

Playing back answering machine messages

Press the play/stop key .

The playback begins immediately with the first new message. After the last new message you will hear the end tone and playback ends.

Once the new messages have been played you can play back old messages by pressing the play/stop key  again. You can adjust the playback volume with the +/- keys.

While the messages are being played the message counter, status, plus the date and time of the message are shown on the handset display.

Skiping forward and back/stopping while playing back messages

◀	Playback lasts longer than 1 sec.: To the start of the current message.
◀	Playback lasts no longer than 1 sec.: To the previous message.
▶	To the next message.
■	Stop playback.

Deleting individual messages


A message can be deleted during playback by pressing the delete key ☒ (short signal tone).

Deleting all old messages

Press and **hold** the delete key ☒ (long signal tone).

This function is not possible during playback.

Picking up a call from the answering machine

While the answering machine is recording a message you can still answer the call by pressing and holding the  key. Recording stops and you can speak to the caller.


Registering and de-registering handsets

You can register up to four handsets to your base station.

Manual registration of other handsets

Other handsets are registered as follows:

1. On the base station

Press and hold the register/paging key  (page 1) for about 5 seconds. The registration process starts.

2. On the handset

Start to register your handset as described in its user guide.

De-registering handsets

You can de-register another handset from any supplied and registered handset as follows:

 → **DE-REG HS** → **OK** →

Enter system PIN (default: 0000)

→ **OK** → Enter number of the handset that is to be de-registered

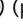
A long signal tone sounds and the internal number disappears from the de-registered handset. Hand-

sets that have not been de-registered retain their internal number.

Manual registration of a handset included in package


You only need to carry out this procedure if you have de-registered your handset or reset the system PIN.

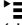
1. On the base station

Press and hold the register/paging key  (page 1) for about 5 seconds.

If the base is ready for registering (approx. 60 secs.), you will here a signal tone. If you have not completed the registration within this time, repeat the action.

2. On the handset

Within **60 seconds** after pressing the register/paging key  on the base:

 → **REGISTER HS** → Enter system PIN (default: 0000) → **OK**.

After a brief pause, the display shows the internal numbers that are available for the handset. Key in the required number on the keypad.

A long signal tone concludes the registration.

If internal numbers 1 to 4 have already been assigned (four handsets have already been registered) it is not possible to register another handset.



A31008- M1717- L101- 2- 7619

Siemens Aktiengesellschaft,
issued by Siemens Communications
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2005




All rights reserved. Subject to availability.
Rights of modification reserved.


Siemens Aktiengesellschaft
<http://www.siemens.com/gigaset>

Using several handsets

Internal calls

Internal calls are free calls to other handsets that are registered to the same base.

INT	Press the key. The display shows CALL ALL .
either ...	Call all handsets:
 or OK	Press the talk key or OK .
or ...	Call a single handset:
	Enter number of handset, e.g. 2 .
or ...	End the call:
	Press the end call key.

The number of the calling handset is shown in the display of the called handset. To accept the call press the talk key .


Internal conference/Call connecting/ Three-party conference


You are in conversation with an **external** caller.

To confer:

- 1 Call the internal number
- 2 Confer
- 3 Press the **INT key**. You are reconnected with the external caller.

Connecting a call:

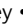
- 1 Call the internal number
- 2 If required, announce the call
- 3 Press the end call key . The internal number is connected with the external caller.

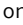
You can also press the end call key  immediately (without announcing the call). If the internal number is not available the call will come back to you automatically.

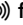
Three-party conference:

- 1 Call the internal number
- 2 If required, announce the call
- 3 Press **and hold** the star key *****. The external caller is connected. The display shows **CONFERENCE**.

Looking for a handset ("Paging")

If you have mislaid your handset you can page it with the help of the base. To do this, **briefly** (2 seconds max.) press the register/paging key  on the base. All handsets will ring at the same time.

End paging: Press the register/paging key  on the base **briefly** or any key on the handset.

i Pressing the register/paging key  for **more than 2 seconds** puts the base station into registration mode. The handsets will not ring in this case.

Handset settings

Changing the display language

You can view the display texts in different languages:

***≡ → SETTINGS → LANGUAGE → OK**

i If you have inadvertently set a language you don't understand, press the following keys:
***≡ → with ▼ 5 x scroll down → OK → OK**. Then select the correct language.

Setting the date/time

Set the current date and time.

***≡ → DATE/TIME → OK**

To enter numbers press the relevant key on the keypad.

The digit that is to be changed flashes. Use four digits to enter the date, e.g. **0905** for the 9th May. The display will then change automatically to allow you to enter a time. Use four digits to enter the time, e.g. **0715** for 7:15 am. Confirm your entries with **OK**.

You can correct each entry by pressing the **<C** key.

Setting the alarm clock

Switch on: *≡ → **ALARM CLOCK** → **ALARM ON** → **OK**

Switch off: *≡ → **ALARM CLOCK** → **ALARM OFF** → **OK**

Setting the alarm time:

After switching on the alarm clock you are automatically required to enter the wake-up time. The digit that is to be changed flashes. Use four digits to enter the alarm time, e.g. **0715** for 7:15 am. Confirm your entries with **OK**

You can correct each entry by pressing the <C key.

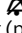
Ringtones on the handset

Ringer volume

Set the volume of the ringer:

*≡ → **H/SET RINGER** → **RINGER VOL** → **OK**

▲ ▼	Select required level.
OK	Confirm.

You can switch the ringtone on and off temporarily by pressing and **holding** the star key (*). When the ringtone is switched off  is shown in the display. If a wake-up time is set (page 8) the alarm will still sound even if the ringer has been switched off.


Ringer melody

Select a melody for the ringer:

*≡ → **H/SET RINGER** → **MELODY** → **OK**

▲ ▼	Select required melody.
OK	Confirm.

Activating/deactivating Auto Answer

When you receive a call you can simply lift the handset out of the base/charging cradle without having to press the talk key .

*≡ → **SETTINGS** → **AUTO TALK**


Press **OK** to switch Auto Answer on or off (✓ = on).

Resetting the handset

Restoring the factory settings of the handset will not affect entries in the directory, the calls list or the speed dial list, or the handset's registration to the base.

*≡ → **SETTINGS** → **RESET H/SET** → **OK**

After the security prompt press **OK**.

You can exit the menu at any point by pressing the end call key .

Base station settings

For instructions on how to set the dialing mode and flash time see the menu tree, page 12.

Ringtones on the base station

The ringtone volume and melody are set in the same way as for the handset (page 8).



*≡ → **BASE RINGER** → **RINGER VOL** or **MELODY** → **OK**

System PIN

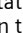
The system PIN default setting is **0000**.

Changing the system PIN:

*≡ → **SETTINGS** → **BASE SET** → **SYSTEM PIN** → **OK**

	Enter old PIN.
OK	Confirm.
	Enter new PIN.
OK	Confirm.

If you have forgotten your system PIN you can reset the base to the original code **0000**:

Disconnect the power cord from the base station. Press and hold the register/paging key  on the base while at the same time reconnecting the power cable to the base. Do not release the key until you hear a **signal tone**.

The base has now been reset and the system PIN **0000** set.

Resetting the base station

When restoring the factory settings the handset registration on the base is **retained**.

☰ → SETTINGS → BASE SET → RESET BASE → OK

Enter the **system PIN** and press **OK**.

You can exit the menu at any point by pressing the end call key **☎**.

Appendix

Character set chart for entering names

For letters and special characters (see table) press the relevant key repeatedly. Numbers appear after letters.

	1 x	2 x	3 x	4 x
0	+	-	,	0
1	Space	_	1	

Specifications

Recommended batteries

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

Sanik SN-AAA55HJ

Sanyo Twicell 650

Sanyo Twicell 700

Panasonic 700mAh "for DECT"

GP 550mAh

GP 700mAh

Yuasa Technology AAA Phone 600

Yuasa Technology AAA Phone 700

Varta Phone Power AAA 700mAh

The handset is supplied with recommended batteries.

Power consumption

In ready status: approx. 1 Watt. During charging: approx. 2 Watt. During a call: approx. 1 Watt.

General specifications

Standard	DECT and GAP (compatible)
Range	up to 300 m outdoors, up to 50 m indoors
Mains adapter	230 V ~/50 Hz
Operating temperature	0 °C to +35 °C
Dimensions/base station	85 x 192 x 115 mm (L x W x H)
Dimensions/handset	142 x 54 x 25 mm (L x W x H)
Weight/Base	approx. 242 g
Weight/handset	approx. 125 g (including batteries)
Rechargeable batteries	NiMH, 3xAAA batteries
Battery capacity	550 mAh
Charging time	approx. 12-15 hours
Calling time	approx. 10 hours
Standby time	approx. 170 hours (7 days)

Care

Wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth! This can cause static!

Contact with liquid

If the handset has come into contact with liquid:

- 1 Switch the handset off and remove the batteries immediately.**
- Allow the liquid to drain from the handset.
- Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
- 4 Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your telephone, visit our Website

www.siemens.com/gigasetcustomercare

for assistance 24/7. This site can be accessed at any time wherever you are. It provides you with 24/7 support for all our products. It also provides interactive troubleshooting, a list of FAQs and answers plus user guides for you to download.

For personal advice on our range of products, call

United Kingdom:

0906 9597555 0.75 £/minute

You can talk to qualified Siemens technicians who will guide you expertly through product information and installation.

If your Siemens device needs repair or if you have a guarantee or warranty claim, you can get fast, reliable help from our Service Centres.

Service-Centre United Kingdom:

08705 334411

Please have your proof of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

This device is intended for analogue phone lines in the UK.

Country-specific requirements have been taken into consideration.

We, Siemens AG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: <http://www.siemens.com/gigasetdocs>.

CE 0168

Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Siemens plc, Information & Communication Mobile Devices. Siemens House, Oldbury, Bracknell, RG12 8FZ.

- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

Menu tree

Your phone has an extensive range of features. These are offered in the form of menus.

When the phone is **idle**, press **≡** (Open menu), scroll to the desired function using keys **▲** and **▼**, and press **OK** to confirm.

To return to idle status: press and **hold** the **☎** key.

1	ALARM CLOCK	1-1	ALARM ON	Activate the alarm clock	
		1-2	ALARM OFF	Deactivate the alarm clock	
2	SHORTCUT	Enter speed dialing numbers 0 to 9			
3	DATE/TIME	Entry format: DD/MM and HH/MM			
4	H/SET RINGER	4-1	RINGER VOL	5 levels selectable (handset)	
		4-2	MELODY	10 melodies selectable (handset)	
5	BASE RINGER	5-1	RINGER VOL	OFF and 5 levels selectable (base station)	
		5-2	MELODY	10 melodies selectable (base station)	
6	SETTINGS	6-1	LANGUAGE	Set the display language	
		6-2	INFO TONES	Activate/deactivate tones (✓ = on)	
		6-3	AUTO TALK	Activate/deactivate Auto Answer (✓ = on)	
		6-4	BASE SET	6-4-1	SYSTEM PIN Change system PIN (Default: 0000)
				6-4-2	DIAL MODE Select between TONE and PULSE
				6-4-3	TBR Use ▼ to select the setting
				6-4-4	RESET BASE Restore factory settings (system PIN does not change; handsets are still registered)
		6-6	RESET H/SET	Reset the handset to the factory settings (directory entries are retained; the handset is still registered)	
7	ANS MACHINE	7-1	CALL SCREEN	Listen in on the base station during recording (ON/OFF)	
		7-2	RING DELAY	Link up the answering machine immediately or after 2 to 9 ring- tones	
8	REGISTER HS				
9	DE-REG HS				