

SIEMENS



Issued by
Gigaset Communications GmbH
Schlavenhorst 66, D-46395 Bocholt
Gigaset Communications GmbH is a trademark licensee of Siemens AG

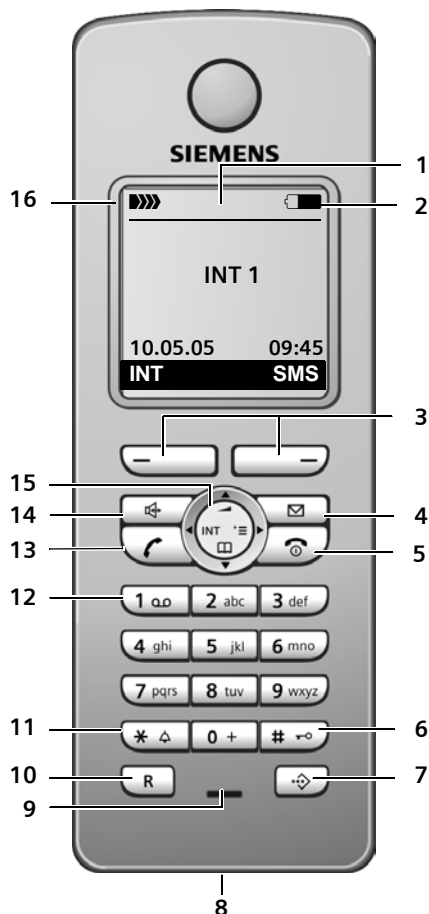
© Gigaset Communications GmbH 2008
All rights reserved.
Subject to availability. Rights of modifications reserved.

www.gigaset.com

Gigaset E450

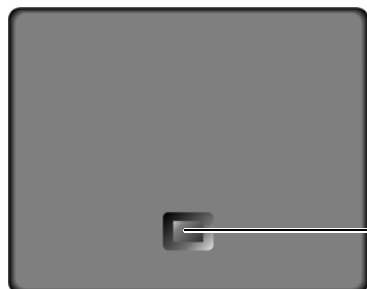
Gigaset

Handset at a glance



- 1 **Display** in idle status
- 2 **Battery pack charge status**
 (flat to full)
 flashes: battery pack almost flat
 flashes: battery pack charging
- 3 **Display keys** (page 13)
- 4 **Message key**
 Access to calls and message lists;
 Flashes: new message or new call.
- 5 **End call key, On/Off key**
 End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**
 Key lock on/off (press and hold in idle status),
 Toggle between upper/lower case and digits
- 7 **Call-by-call list key**
 Open call-by-call list
- 8 **Connection socket** for headset
- 9 **Microphone**
- 10 **Recall key**
 - Confer (Flash)
 - Insert a dialling pause (press and hold)
- 11 **Star key**
 Ringtones on/off (press and hold),
 Open table of special characters
- 12 **Key 1**
 Select network mailbox (press and hold)
- 13 **Talk key**
 Answer a call, open last number redial list (press briefly), start dialling (press and hold)
- 14 **Handsfree key**
 Switch between earpiece and handsfree mode;
 Lights up: handsfree activated;
 Flashes: incoming call
- 15 **Control key** (page 13)
- 16 **Signal strength**
 (high to low)
 flashes: no reception

Base station at a glance



Registration/Paging key
(page 31/page 31)

Contents

Safety precautions 4

Gigaset E450 – more than just a telephone 5

First Steps 5

Pack contents 5

Installing the base station

and charging cradle 5

Setting up the handset for use 6

Menu tree 9

Making calls 11

Making an external call 11

Ending a call 11

Answering a call 11

Calling Line Identification 11

Handsfree operation 12

Muting 12

Operating the handset 13

Control key 13

Display keys 13

Returning to idle status 14

Menu guidance 14

Correcting incorrect entries 14

Network services 15

Setting functions for all
subsequent calls 15

Functions during a call 15

Using the directory and lists ... 16

Directory/call-by-call list 16

Last number redial list 18

Opening lists with the message key . 19

Making cost-effective calls 20

Linking call-by-call numbers
with one number 20

Automatic network provider
code (preselection) 20

SMS (text messages) 22

Writing/sending a SMS 22

Receiving a SMS 24

Notification by SMS 26

SMS mailboxes 26

Setting SMS centre 27

SMS info services 28

SMS to a PABX 28

Activating/deactivating the

SMS function 29

SMS troubleshooting 29

Using the network mailbox 30

Configuring the network mailbox
for fast access 30

Viewing the network mailbox
message 30

Using several handsets 31

Registering handsets 31

De-registering handsets 31

Locating a handset ("paging") 31

Changing the base station 32

Making internal calls 32

Linking internal callers to
an external call 33

Changing the name of a handset ... 33

Changing a handset's internal
number 33

Using a handset as a room monitor . 34

Handset settings 35

Changing the display language 35

Setting the display 35

Setting the screen picture 35

Setting display illumination 36

Activating/deactivating auto answer . 36

Adjusting the loudspeaker volume ... 36

Changing ringtones 37

Activating/deactivating first
ring muting 37

Activating/deactivating
advisory tones 38

Setting the alarm clock 38

Restoring the handset
default settings 39

Base station settings 39

Protecting against unauthorised
access 39

Activating/deactivating the
wait melody 39

Repeater support	39
Restoring default settings to base station	39
Connecting the base station to the PABX	40
Flash time	40
Setting pauses	40
Appendix	41
Care	41
Contact with liquid	41
Questions and answers	41
Customer service & product warranty – Australia and New Zealand	42
Accessories	44
Specifications	44
Notes on the operating instructions	45
Symbols used	45
Example: menu input	45
Example: multiple line input	46
Writing and editing a text message ..	46
Index	48

Safety precautions

Caution:

Read the safety precautions and the user guide before use.

Explain their contents to your children, and the potential hazards associated with using the telephone.



Only use the mains adapter supplied, as indicated on the back of the base station or charging cradle.



Fit only the **approved rechargeable battery pack**! Never use a conventional (non-rechargeable) battery pack as this could damage your health and cause injury. Use the battery pack as directed in this user guide (page 44).



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base or charging cradle in bathrooms or shower rooms. Base and charging cradle are not splash proof (page 41).



Do not use the phone in environments with a potential explosion hazard, e.g. auto paint shops.



If you give your Gigaset to someone else, make sure you also give them the user guide.



Dispose of unusable batteries and telephones in accordance with statutory requirements.

Note:

Not all of the functions described in this user guide are available in all countries.

Caution:

- ◆ **IMPORTANT NOTICE:** Under power failure conditions, this telephone will not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.
- ◆ **WARNING:** This equipment may not provide for the effective handover of a call to another device connected to the same line.

Gigaset E450 – more than just a telephone

Your phone not only enables you to send and receive text messages over the fixed network and store up to 150 telephone numbers (page 16) – it can do a whole lot more:

- ◆ You can designate important people as VIPs so you can tell important calls from the ringtone (page 17).
- ◆ You can store anniversaries (page 18) in your phone and it will remind you of them in advance.
- ◆ Select frequently used phone numbers at the press of a **single** key (page 16).
- ◆ View missed calls on your phone (page 19).

Have fun using your new telephone!

First Steps

Pack contents

- ◆ one Gigaset E450 base station,
- ◆ one Gigaset E45 handset,
- ◆ one charging cradle,
- ◆ 2 mains adapters,
- ◆ one phone cord,
- ◆ one battery pack,
- ◆ one battery cover,
- ◆ one bayonet lock ring,
- ◆ one belt clip,
- ◆ one headset socket cover,
- ◆ one user guide.

Installing the base station and charging cradle

The base station and charging cradle are designed for use in closed, dry rooms with a temperature range of +5 °C to +45 °C.

Set up the base station at a central point in the apartment or house.

Connecting the charging cradle is described at the end of this user guide.

Please note:

- ◆ Never expose the telephone to heat sources, direct sunlight, other electrical appliances.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

Range and reception strength

Range:

- ◆ Up to 300 m in the open
- ◆ Up to 50 m in buildings

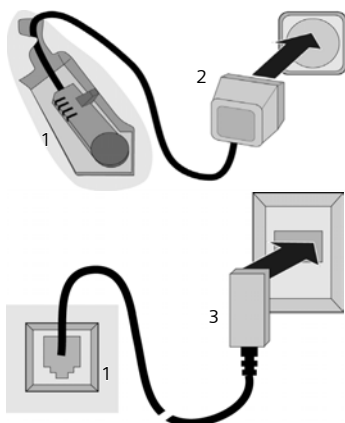
Reception strength:

The display shows the quality of the radio contact between the base station and handset:

- ◆ Good to poor:    
- ◆ No reception:  flashes

Connecting the base station

- **First** connect the mains adapter and **then** the phone jack as shown below and place the cables in the cable recesses.

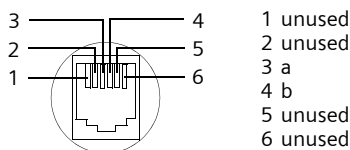


- 1 Back of the base station (detailed view)
- 2 Mains adapter 240 V
- 3 Phone jack with phone cord

Please note:

- ◆ The mains adapter must be **always connected**, as the phone will not operate without mains connection.
- ◆ If you buy a replacement phone cord from a store, ensure that the phone jack is connected correctly.

Correct phone jack assignment



Setting up the handset for use

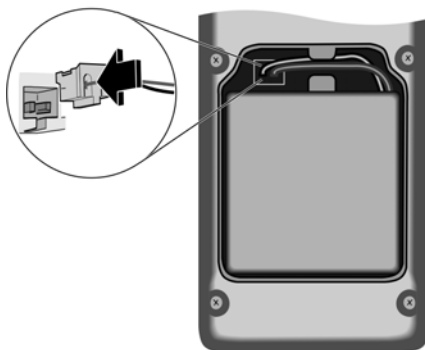
Fitting the battery pack

Caution:

Use only the rechargeable battery pack recommended by Gigaset Communications GmbH * (page 44). Never use a conventional (non-rechargeable) battery pack, as this may cause significant damage to health and property. For example, the outer casing of the battery pack could be destroyed or the battery pack could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

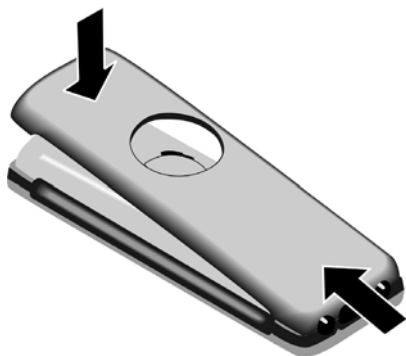
* Gigaset Communications GmbH is a trademark licensee of Siemens AG.

- Insert the plug into the socket as shown in the enlarged view.
- Insert the battery pack.
- Place the cords in the cord routing.



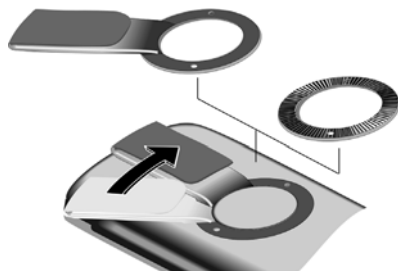
Closing the battery cover

- ▶ Hold the battery cover at a slight angle and introduce the two lower lugs into the casing first. Then close the cover so that it clicks into place.



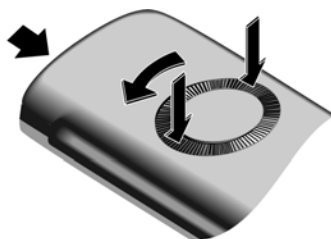
Locking the battery cover

Insert the catches on the lock ring or belt clip into the notches in the casing and make sure that the arrow markings on the casing are facing those on the bottom of the ring. Turn the lock ring or belt clip clockwise to the end stop. When both holes are horizontally aligned with the upper edge of the handset the lock ring is closed.



Opening the battery cover

Position both thumbs on the lock ring and at the same time turn the lock ring or belt clip anticlockwise and remove.



- ▶ Insert a coin into the cavity at the top of the battery cover and twist it until the cover opens.

Placing the handset in the charging cradle

- ▶ Plug the charging cradle mains adapter into a mains power socket.
- ▶ Place the handset in the charger with the **display facing forward**.

The handset is already registered with the base station at the factory. INT 1 appears in the display. You do not have to re-register. If, nonetheless, you have to register your handset with the base station, please see page 31.

Leave the handset in the charging cradle to charge the battery pack.

Notes:

- If the handset has switched itself off because the battery pack is flat and is then placed in the charging cradle, it will switch itself on automatically.
- The handset must only be placed in the designated charging cradle.


For questions and problems see page 41.

Headset socket

You can connect most types of headsets that have a 2.5mm jack connector.

If you do not connect a headset, please insert the cover supplied for the headset socket to guarantee the unit is still splash proof.

Initial charging and discharging of the battery pack

If the handset is activated, the flashing battery icon  in the top right of the display indicates that the battery pack is being charged.

During handset operation, the battery icon indicates the charge status of the battery pack (page 1). The correct charge status can only be displayed if the battery pack is first fully charged **and** discharged.

- ▶ To do this, leave the handset in the charging cradle **continuously** for **ten** hours. Your handset need not be switched on for it to charge.
- ▶ Afterwards, remove the handset from the charging cradle and do not put it back again until the battery pack is fully discharged.

Note:

After the initial charge **and** discharge you may replace your handset in the charging cradle after every call.

Please remember:

- ◆ Always repeat the charging and discharging procedure if you remove the battery pack from the handset and insert it again.
- ◆ The battery pack may warm up as it is charging. This is not dangerous.
- ◆ After a time the charge capacity of the battery pack will decrease for technical reasons.
- ▶ Set the date and the time, for example to ensure the correct time of incoming calls is recorded.

Setting the date and time

- ▶ If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field via:



 
 
 →  → Date/Time

- ▶ Change multiple line input:

Date:

Enter day, month and year in 6-digit format.

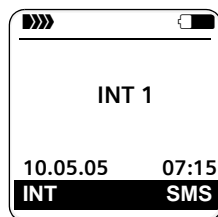
Time:

Enter hours and minutes with 4 digits, e.g.     for 07:15 a.m.

Save

Press the display key.



Once the phone is registered and the time set, the idle display looks as shown here (example):



Your phone is now ready for use.

Menu tree

Instead of scrolling to locate a menu function, you can select a menu function faster by opening the menu and keying in the digit combination ("shortcut").

Example:   2 11 for "Set ringtone for external calls".

With the telephone in **idle status**, press  (open main menu):

1 SMS 

You have activated a SMS mailbox (general or private) without a PIN

1-1	New SMS	(page 22)
1-2	Incoming 0	(page 24)
1-3	Outgoing 0	(page 23)


You have activated a SMS mailbox with a PIN or 2-3 mailboxes

1-1	Mailbox	1-1-1	New SMS	(page 22)
		1-1-2	Incoming 0	(page 24)
		1-1-3	Outgoing 0	(page 23)
1-2 to 1-4	Mailbox 1 Mailbox 2 Mailbox 3	1-2-1 to 1-4-1	New SMS	(page 22)
		1-2-2 to 1-4-2	Incoming 0	(page 24)
		1-2-3 to 1-4-3	Outgoing 0	(page 23)
1-5	SMS Service	(page 28)		
1-6	Settings	1-6-1	Service Centres	(page 27)
		1-6-2	SMS Mailboxes	(page 26)
		1-6-3	Notify Number	(page 26)
		1-6-4	Notify Type	(page 26)
		1-6-5	Status Report	(page 23)
		1-6-6	Subscribe to SMS	(page 22)

2 Sel. Services 

2-6	All Calls	2-6-1	Call Divert	(page 15)
		2-6-3	Call Waiting	(page 15)

3 Alarm Clock 

4 Add. Features 

4-3	Room Monitor	(page 34)
-----	--------------	-----------

Menu tree

5 Settings 

5-1	Date/Time			
5-2	Audio Settings	5-2-1	Ringer Settings	(page 37)
		5-2-2	Advisory Tones	(page 38)
5-3	Display	5-3-1	Screen Picture	(page 35)
		5-3-2	Colour Scheme	(page 35)
		5-3-3	Contrast	(page 35)
		5-3-4	Backlight	(page 36)
5-4	Handset	5-4-1	Language	(page 35)
		5-4-2	Auto Answer	(page 36)
		5-4-3	Register H/Set	(page 31)
		5-4-4	Select Base	(page 32)
		5-4-5	Reset Handset	(page 39)
5-5	Base	5-5-2	Music on hold	(page 39)
		5-5-3	System PIN	(page 39)
		5-5-4	Base Reset	(page 39)
		5-5-5	Add. Features	(page 33, page 39, page 40)
		5-5-6	Preselection	(page 21)
		5-5-7	Calls List Type	(page 19)
5-6	Voice Mail	5-6-1	Set Key 1	(page 30)

Making calls

Making an external call

External calls are calls using the public telephone network.




Enter the number and press the talk key.

Or:



Press **and hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

Notes:

 
- Dialling using the directory, call-by-call list (page 1, page 16) or calls list (page 19) saves time re-entering numbers and network provider prefixes ("call-by-call numbers").

Ending a call


 


Press the end call key.

Answering a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing handsfree key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .

If the handset is in the charging cradle and the Auto Answer function is activated (page 36), the handset will take a call automatically when you lift it off the charging cradle.

If the ringtone is intrusive, press the display key **Silence**. You can take the call as long as it is displayed on the screen.

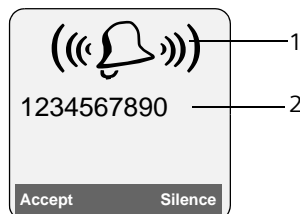
Calling Line Identification

When you receive a call, the caller's number and/or name is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI and CNIP.
 - CLI (Calling Line Identification): number of the caller is transmitted.
 - CLIP (Calling Line Identification Presentation): number of the caller is indicated.
 - CNIP (Calling Name Identification Presentation): name of the caller is indicated.
- ◆ You have arranged CLIP or CNIP with your network provider.
- ◆ The caller has arranged CLI with the network provider.

Call display with CLIP/CLI

If the number of the caller is stored in your directory, you will see their name.



- 1 Ring symbol
- 2 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Screen display with CNIP

If you have CNIP, then the name (town) that is registered with your network provider for the calling number will **also** be displayed. If the number of the caller is stored in your directory, the CNIP display is replaced by the corresponding directory entry.

1234567890	1
Anna Fielding, London	2

1 Caller's number

2 Name and town

The display shows:

- ◆ **External**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Handsfree operation

In handsfree mode, instead of holding the handset to your ear you can put it down e.g. on the table in front of you to allow others to participate in the call.

Activating/deactivating handsfree

Activating while dialling



Enter the number and press the handsfree key.

- You should inform your caller before you use the handsfree function so that they know someone else is listening.


 
Switching between earpiece and handsfree mode



Press the handsfree key.

During a call switch handsfree on or off.

If you wish to place the handset in the charging cradle during a call:

- Press and hold the handsfree key  while placing the handset in the base station. If handsfree key  does not light up, press the key again.

For how to adjust the volume, see page 36.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears a wait melody.



Press the control key on the left to mute the handset.



Press the display key to reactivate the microphone.

You can switch the wait melody on and off (page 39).

Operating the handset

Activating/deactivating the handset




Press and **hold** the end call key. You will hear the confirmation beep.

Activating/deactivating the keypad lock




Press and **hold** the hash key.

You will hear the confirmation beep. The icon  appears in the display when the keypad lock is activated.

The keypad lock is deactivated automatically if someone calls you. It is re-activated when the call is finished.

Control key



In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key".

The control key has a number of different functions:

When the handset is in idle status



Open the directory.



Open main menu.







Open list of handsets.



Set the ringtones on the handset (page 37).

In the main menu and in input fields

You can use the control key to move the cursor up , down , right  or left .

In lists and submenus



Scroll up/down line by line.



Open submenu or confirm selection.



Go back one menu level, or cancel.

During an external call



Open the directory.



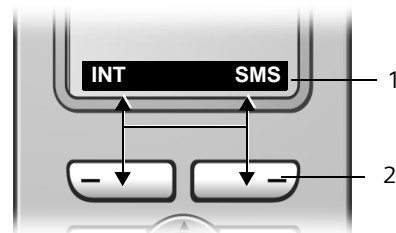
Initiate an internal consultation call.



Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The function of the display keys changes depending on the particular operating situation. Example:



1 The display keys' current functions are shown in the bottom display line.

2 Display keys

The most important display symbols are:



Open the main menu.



Open a context-dependent menu.



Delete key: deletes one character at a time from right to left.



Go back one menu level or cancel operation.




Copy number into directory.



Open the last number redial list.

Returning to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 10 seconds the display will **automatically** revert to idle status.


Changes that you have not confirmed or saved by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry** **OK** will be lost.

An example of the display in idle status is shown on page 1.

Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.

Main menu (first menu level)

- ▶ Press  with the handset in idle status to open the main menu.

The main menu functions are shown in the display as a list with icon and name.


To access a function, i.e. open the corresponding submenu (next menu level):

- ▶ Navigate to the function using the control key . Press the display key **OK**.

Submenus


The functions in the submenus are displayed as lists.

To access a function:

- ▶ Scroll to the function with the control key  and press **OK**.

Or:

- ▶ Enter the corresponding digit combination (page 9).

Pressing **briefly** on the end call key  returns you to the previous menu level / cancels the operation.

Correcting incorrect entries

You can correct incorrect characters in the text by navigating to the incorrect entry using the control key. You can then:

- ◆ press **<C** to delete the character to the left of the cursor,
- ◆ insert characters to the left of the cursor,
- ◆ overwrite the character (flashing) when entering the time and date etc.

You will find examples of symbols used, menu entries and multiple line input in the appendix to this user guide, page 45.


Network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

Setting functions for all subsequent calls

If you have completed one of the following procedures, a code is sent.

- ▶ After confirmation from the telephone network, press the end call key .

You can set the following features:

General call diversion

 →  → All Calls → Call Divert

- ▶ Change multiple line input:

When:

All Calls / No Answer / When Busy dialling.

Call No.:

Press the display key **Edit**. Enter number to which call is to be diverted, and press **Save Entry OK**.

Status:

Activating/deactivating call diversion.

- ▶ Press the display key **Send**.

Activating/deactivating call waiting

 →  → All Calls → Call Waiting

Status: Activating/deactivating.


Send Press the display key.

Functions during a call

Consultation


During a call:

Ext.Call Press the display key.


 Enter number.

You have the following options:

◆ Toggling:

- ▶ Use  to toggle between the participants.

End the call with one participant:

- ▶ Use  to switch to the caller. Then:
Options End Active Call.


◆ Conference call:

- ▶ Press the display key **Conf**.

End the conference call (toggle):

- ▶ Press **EndConf**.

◆ End call with both participants:

- ▶ Press the end call key .

Accepting a waiting call

Accept Press the display key.

You have the option of toggling or holding a conference call.

Note:

Without CLIP a waiting call is only announced with a beep.

Accept call waiting

Options → Accept waiting call

Reject call waiting

Options → Reject waiting call

Favour call waiting

Options → Favour waiting call

Using the directory and lists

The options are:


- ◆ Directory,
- ◆ Call-by-Call list,
- ◆ Last number redial list,
- ◆ SMS list,
- ◆ Calls list,

You can store a maximum of 150 entries in the directory and call-by-call list (the actual number depends on the size of the individual entries).


You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (page 17).

Directory/call-by-call list

In the **directory**, you can store numbers and the associated names.

- ▶ With the handset in idle status, open the directory by pressing the  key.

In the **call-by-call list**, you can store prefixes of network providers (so-called "call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.

Length of entries

Number: max. 32 digits

Name: max. 16 characters

Note:

For quick access to a number from the directory or the call-by-call list (quick dial), you can assign the number to a key.

Storing a number in the directory

 → New Entry

- ▶ Change multiple line input:

Number :

Enter number.

Name :

Enter name.

Annivers.:

Enter anniversary if required (page 18).

Speed Dial:

Select key for quick dial.

- ▶ Save changes.

Storing a number in the call-by-call list

 → New Entry

- ▶ Change multiple line input:



Number :

Enter number.



Name :

Enter name.

Selecting entries in the directory and call-by-call list


 /  Open directory or call-by-call list.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, or scroll to the entry with  if required.

Dialling with the directory/call-by-call list

 /  →  (select entry)

 Press the talk key. The number is dialled.

Managing entries in the directory/call-by-call lists

 /  →  (select entry)

Viewing an entry

View

Press the display key.
The entry is displayed.
Back with **OK**.

Editing entries




View


Edit

Press display keys one after the other.

- ▶ Carry out changes and save.

Using other functions

 /  →  (select entry)
→ **Options** (open menu)

The following functions can be selected with :

Display Number

Edit or add to a stored number. Then dial or call up further functions by pressing **Options**.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

VIP Entry (directory only)

Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You can then identify VIP calls by their ringtones.

Requirement: Calling Line Identification (page 11).

Copy Entry

Send a single entry to a handset (page 17).

Delete List

Delete **all** entries in the directory/call-by-call list.

Copy List

Send complete list to a handset (page 17).

Available Memory

Display the available entries in the directory and call-by-call list (page 16).

Using quick dial keys




- ▶ Press and **hold** the required quick dial key (page 16).

Sending the directory/call-by-call list to another handset

Requirements:

- ◆ The sending and receiving handsets must both be registered to the same base station.

- ◆ The other handset and base station can send and receive directory entries.

 /  →  (select entry)
→ **Options** (open menu)
→ **Copy Entry / Copy List**



Enter the internal number of the receiver handset. You see **Copying entry**.

Yes / No Press the display key.

A successful transfer is confirmed by a message and confirmation tone on the receiver handset.

Please remember:

- ◆ Entries with identical numbers are not overwritten on the receiver handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiver handset is full.

Adding a displayed number to the directory

Numbers that appear in a list, e.g. the calls list or the last number redial list, in a text message or displayed during a call can be added to the directory.

If you have CNIP, the first 16 characters of the transmitted name are copied to the **Name** line.



A number is displayed:

Options → **Copy to Directory**

- ▶ Complete the entry, see page 16.

Copying a number from the directory

There are many operating situations in which you can open the directory, e.g. to copy a number. Your handset need not be in idle status.



- ▶ Depending on the operating situation, open the directory with  or  or **Menu** **Directory**.




Select an entry (page 16).

Storing anniversaries in the directory

You can store an anniversary for every number in the directory and specify a time when you will receive a reminder call on the anniversary.

 →  (Select entry; page 16)

View **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

Edit Press the display key.

► Change multiple line input:

Date:

Enter the day/month in 4-digit format.

Time:

Enter the hour/minute for the reminder call in 4-digit format.

Prompt:



Select the type of signal for the reminder and press **OK**.

► Save changes (page 46).


Note:

Reminder calls require a time stamp. If you select a visual signal, then a time stamp is not required and is automatically set to 00.00.

Deleting anniversaries

 →  (Select entry; page 16)

View **Edit** Press display keys one after the other.

 Scroll to the Annivers.: line.

Edit **Delete** **Save**
Press display keys one after the other.

Reminder call on an anniversary

A reminder call is signalled on the handset using the selected ring tone.

Silence Press the display key to stop the reminder call.

Last number redial list

The last number redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial



Press the key **briefly**.



Select entry.



Press the talk key again. The number is dialled.

When displaying a name, you can have the respective phone number displayed by using the display key **View**.

Managing entries in the last number redial list




Press the key **briefly**.



Select entry.

Options Open menu.

The following functions can be selected with :


Display Number (as in the directory, page 17)

Copy to Directory
Copy an entry to the directory (page 17).

Delete Entry (as in the directory, page 17)

Delete List (as in the directory, page 17)

Opening lists with the message key

You can use the message key  to open the following lists:


- ◆ SMS list

If **several** mailboxes are set up (page 26), several lists are displayed.

- ◆ Network mailbox

If your network provider supports this function and the network mailbox is configured for fast access (page 30).

- ◆ Calls list

An advisory tone sounds as soon as a **new entry** appears on a list. The  key flashes (it goes off when the key is pressed). In idle status, the displays shows an icon for the new message.

Icon	New message...
ao	... in network mailbox
Ⓜ)	... in calls list
✉	... in SMS list

The number of new entries is shown beneath the corresponding icon.

Only the lists that contain messages are shown (exception: network mailbox). Lists with new messages are shown first and identified in bold. The number of new or old messages contained are each shown in brackets.

Select the list with . To open, press **OK**.


SMS incoming message list

All received SMS messages are saved in the incoming message list, see page 24.

Calls list

Requirement: Calling Line Identification (CLIP, page 11)



Depending on the type of list set, the calls list contains

- ◆ accepted calls ()
- ◆ missed calls
- ◆ calls recorded by the answering machine of your network mailbox (ao)

 
The numbers of the last 30 incoming calls are stored.

Multiple missed calls from the same number are only stored once (the last call).

Setting list type for calls list

 →  → Base → Calls List Type

Missed Calls / All Calls

Select and press **OK** ( = on).



Press and **hold** (idle status).

The entries in the calls list are retained when you change the list type.

List entry


 
New messages are at the top.

Example of list entries:




- ◆ List type (in header)
- ◆ Status of entry
Bold: new entry
- ◆ Number or name of caller
You can add the number of the caller to the directory (page 17).
- ◆ Date and time of call (if set, page 8)

Making cost-effective calls

- ◆ Type of entry:
 - accepted calls ()
 - missed calls
 - calls recorded by the answering machine of your network mailbox ()

Pressing the display key **Delete** deletes the marked entry.

After pressing the display key **Options** you can select more functions with :

Copy to Directory

Add a number to the directory.

Delete List

Delete complete list.

Information

See following section "Displaying CNIP information".

When you leave the calls list all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.

Answering machine list of your network mailbox

You can use the **answering machine list** to listen to the messages that are on the answering machine.

Displaying CNIP information

If you have CNIP, you can display the name and town that is registered with your network provider for this number.

You have selected a list entry.

Options Open menu.

Information Select and press **OK**.

If the name and town are not shown, it means that the caller has not requested caller display or that caller display has been withheld.

Press **OK** to return to the list.

Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

Linking call-by-call numbers with one number

You can insert the dialling code of a network provider in front of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).

Options

Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (page 17).



Press talk key. Both numbers are dialled.

Automatic network provider code (preselection)

You can specify a call-by-call number (preselection number), which is **automatically** placed in front of numbers according to two lists.

- ◆ The list "**with preselection**" contains the "rule" for dialling code numbers or the first digits of dialling code numbers with which you wish the preselection number to be used.

- ◆ The list "**without preselection**" contains the "exception to the rule".

Example:



You have entered 08 for "with preselection". Now all numbers that start with 08 will be dialled with preselection.


However, if you require, for example, that 081 is still dialled without preselection, enter 081 for "without preselection".

When dialling, after pressing the talk/handsfree key the **first** digits of the dialled number are compared with both lists:

 
- ◆ The preselection number is not inserted in front if the dialled number
 - matches **no** entry in either list
 - matches an entry in the list "**without preselection**"
- ◆ The preselection number is inserted in front if the first digits of the dialled number match with **only** one entry in the list "**with preselection**".

Storing preselection numbers

 →  → Base → Preselection
→ Preselect No.

 Enter or edit preselection number (call-by-call number).



- ▶ Save changes (page 46).


 Press and **hold** (idle status).


Saving/editing entries in the preselection lists


Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means, for example, that all national calls or calls into the mobile phone network will **automatically** be linked to the preselection number which you have previously stored.

 
 →  → Base → Preselection
→ With Preselect / Without Presel.

 Select entry.

 **Edit** Press the display key.

 Enter or edit first digits of number.

- ▶ Save changes (page 46).

 Press and **hold** (idle status).

Permanently deactivating preselection

- ▶ Delete the preselection number (page 21).

SMS (text messages)

Your unit is supplied ready for you to send text messages immediately.

Requirements:

- ◆ Calling Line Identification (page 11) is enabled for your phone connection.
- ◆ Your network provider supports SMS in the fixed network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive text messages.

Text messages are exchanged between SMS centres that are operated by service providers. You must enter the SMS centre in the unit through which you wish to send and receive. You can receive SMS from **every** SMS centre that is entered if you have registered with your service provider.

Your text messages are sent via the **Service Centr.** that is entered as the **send service** centre. However, you can activate any other SMS centre as the active send service centre to send a current message (page 27).

If no SMS Service Centre is entered, the SMS menu only consists of the entry **Settings**. Enter a SMS Service Centre (page 27).

- ◆ Entering text, see page 46.
- ◆ Writing using the predictive text tool EATONI, see page 47.

Rules

- ◆ a SMS can be up to 612 characters long.
- ◆ If there are more than 160 characters or a lot of image data, the text message is sent as a **linked** SMS (up to 4 messages with 153 characters each).

Please remember:

- ◆ Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such a SMS "call" on the first ring, the SMS will be lost. To prevent this ringing, suppress the first ringtone for all external calls (page 37).
- ◆ If your phone is connected to a PABX, please read page 28.
- ◆ To receive text messages you must be registered with your service provider.

Registering with the registration wizard

The first time you press the display key **SMS** you will be asked if you wish to register automatically with all entered SMS centres (see page 27). Confirm with **OK**. You can now receive text messages from any of the SMS centres whose number you have entered.

You can call up automatic registration thereafter via the menu:



 →  → **Settings** → **Subscribe to SMS**

The registration wizard does not support setting up personal mailboxes (page 26).

Writing/sending a SMS

Writing a SMS

 → 

- | | |
|---|--|
| Mailbox 2 | Select mailbox if necessary and press OK . |
|  | Enter mailbox PIN if necessary and press OK . |
| New SMS | Select and press OK . |
|  | Write a SMS. |
| Options | Press the display key. |
| Send | Select and press OK . |
| SMS | Select and press OK . |

Sending a SMS



Select number with area code (even if you are in that area) from the directory or call-by-call list or enter it directly. For SMS to a SMS mailbox: put the mailbox ID at the **end** of the number.

Options

Press the display key.

Send

Select. The SMS is sent.

Notes:

- If you are interrupted by an external call while writing a SMS, the text is automatically saved in the draft message list.
- If the memory is full, or if the SMS function on the base is being used by another handset, this cancels the operation. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Setting input language

► You are writing a SMS (page 22).

Options

Press the display key.

Select Language

Select and press **OK**.



Select input language and press **OK**.



Press the end call key **briefly** to return to the text panel.

The input language setting only applies to the current SMS.

SMS status report

Requirement: Your service provider supports this feature.

If you have activated the status report, you will receive a message with a confirmation text after you have sent your SMS.

Activating/deactivating the status report



→ → Settings

Status Report

Select and press **OK** (☒ = on).

Reading/deleting a status report

► Open the incoming message list (page 24) and then:



Select SMS with the status State OK or State not OK.

Read

Press the display key.

Or:

Delete

Press the display key. The text message is deleted.

Draft message list

In the draft message list, you can save, edit later and send a SMS.

Saving a SMS in the draft message list

► You are writing a SMS (page 22).

Options

Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list



→ → (Mailbox, mailbox PIN)
→ Outgoing (3)

The first list entry is displayed, e.g.:

1234567890
21.09.05 09:45

Reading or deleting individual SMS

► Open the draft message list and then:



Select SMS.

Read

Press the display key.
The entry will be displayed.
Scroll line by line using .

Or:

Delete

Press the display key. The text message is deleted.

Writing/editing a SMS

► You are reading a SMS in the draft message list.

Options

Open menu.

You have the following options:

New SMS

Write and then send a new SMS (page 22) or save.

SMS (text messages)

Edit

Edit the text of the saved SMS and then send (page 23).

Character Set


Text is shown in the selected character set.

Deleting draft message list

► Open the draft message list and then:

Options Open menu.

Delete all Select, press **OK** and confirm with **Yes**. The list is cleared.


 Press and **hold** (idle status).


Sending a SMS to an e-mail address

If your service provider supports the SMS to e-mail service, then you can also send your text messages to e-mail addresses.

The e-mail address must be written at the beginning of the text. You must send the SMS to the e-mail service of your SMS send centre.

 →  → (Mailbox, mailbox PIN)
→ New SMS

 Enter the e-mail address. End with a space or colon (depending on the service provider).

 Enter the SMS text.

Options Press the display key.

Send Select and press **OK**.

E-mail Select and press **OK**. If the number of the e-mail service is not entered (page 27), enter the number of the e-mail service.

Options Press the display key.

Send Select and press **OK**.

Sending a SMS as a fax

You can also send a SMS to a fax machine.



Requirement: Your service provider supports this feature.


► You are writing a SMS (page 22).

Options Press the display key.

Send Select and press **OK**.

Fax Select and press **OK**.

 /  Select number from the directory or enter directly. Enter the number with dialling code (even when you are in the same area).

 Press the display key.

Send Select and press **OK**.

Receiving a SMS

All received text messages are saved in the incoming message list. Linked text messages are displayed as **one** message. If this is too long or has not transferred completely, it will be split into individual messages. Since a SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

 

The display tells you if the message memory is full.

► Deleting text messages you no longer require (page 25).

Incoming message list

The incoming message list contains:

- ◆ all received text messages, starting with the most recent.
- ◆ messages that could not be sent on account of an error.

New text messages are signalled on all Gigaset E45 handsets by the  icon in the display, the flashing message key  and an advisory tone.

Opening the incoming message list with the key



Press.

Select mailbox if necessary and enter mailbox PIN.

The incoming message list is displayed as follows (example):

SMS:	(2)	1
		2

1 **bold**: number of new entries

not bold: number of read entries

2 name of mailbox, here: general mailbox

Open list with **OK**.

An entry in the list is displayed e.g as follows:

1234567890
21.09.05 09:45

Opening the incoming message list via the SMS menu



→  → (Mailbox, mailbox PIN)

→ Incoming (2)

Reading or deleting individual SMS messages

- ▶ Open the incoming message list.
- ▶ Continue as described at "Reading or deleting individual SMS", page 23.

A new message which you have read acquires the status **Old**.

Deleting incoming message list

All **new** and **old** SMS in the list are deleted.

- ▶ Open the incoming message list.

Options

Open menu.

- ▶ To continue, see "Deleting draft message list", page 24.

Replying to or forwarding text messages

- ▶ Read the SMS (page 25):

Options

Press the display key.

You have the following options:

Reply

Write and send a reply SMS directly (page 22).

Edit

Edit the text in the SMS and then send it (page 22). Attachments (e.g. pictures, melodies) are not sent.

Forwarding a SMS

- ▶ You are reading a SMS (page 25):

Options

Press the display key.

Forward

Select and press **OK**.

To continue see page 22.

Attachments are forwarded. If a service provider does not permit the forwarding of attachments:

- ▶ Select Edit to forward the SMS without attachments.
- ▶ Confirm the prompt **New SMS will not contain picture/ melody. Continue?** with **Yes**.

Adding a number to the directory

Adding the sender's number

- ▶ Open incoming message list and select entry (page 24).

Options

Press the display key. Continue see page 17.


Notes:

- You can create a special directory for text messages within your main directory by putting a star (*) before the names.
- An attached mail box identifier is added to the directory.


Copying/selecting numbers from a SMS text

- ▶ Read SMS (page 25) and scroll to the telephone number.

The digits are reverse-highlighted.

 Press the display key. Continue see page 17.

Or:

 Press the talk key to dial the number.

If you wish to use the number to send a SMS:

- ▶ Save the number with the area code (dialling code) in the directory.

Changing the character set

- ▶ Read the SMS (page 25):

Options Press the display key.

Character Set

Text is shown in the selected character set.

Notification by SMS

You can be notified by SMS about missed calls or new messages on the answering machine of your network mailbox.


Requirement: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to set the phone number to which notification should be sent (notification number) and the notification type.

Storing the notification number

 →  → Settings → Notify Number

 Enter the number to which the SMS should be sent.

Options Press the display key.

Save Entry Select and press **OK**.



Press and **hold** (idle status).

Caution:

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

Setting the notification type

 →  → Settings → Notify Type

- ▶ Change multiple line input if necessary:

Missed Calls:

Set On if you want SMS notification.

- ▶ Save changes (page 46).

SMS mailboxes




The **General Mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can also set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "Mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports such a function. You can tell that this is supported by the fact that a star (*) is added to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's factory settings. This will **delete all messages from all mailboxes**.

Setting up and changing a personal mailbox

Setting up a personal mailbox

 →  → Settings → SMS Mailboxes
 Select a mail box,
 e.g. Mailbox 2 , and press **OK** .

► Change multiple line input:

On/Off:

Activate or deactivate mailbox.

ID:

Select mailbox ID (0–9). You can only select the available numbers.


Protection:

Activate/deactivate PIN protection.

PIN

Enter 4-digit PIN, if necessary.

► Save changes (page 46).

Active mailboxes are marked with ☒ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

► Set On/Off: to Off . Confirm message with **Yes** if necessary.




All SMS saved in this mailbox will be deleted.

Deactivating PIN protection

► Set Protection: to Off .

The mailbox PIN is reset to "0000".

Changing the name of a mailbox

 →  → Settings → SMS Mailboxes
 →  (Select mailbox)




Edit Press the display key.

 Enter new name.

Save Press the display key.

 Press and **hold** (idle status).

Changing a mailbox's PIN and ID

 →  → Settings → SMS Mailboxes
 →  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

► Set ID:, Protection: and PIN (page 27).

Sending a text message to a personal mailbox

To send a text message to a personal mailbox, the sender must know your ID and enter it after your number.


► You can send your SMS contact a SMS via your personal mailbox.


Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centre

Entering/changing SMS centres

► You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → Settings → Service Centres

 Select SMS centre (e.g. Service Centr. 1) and press **OK**.

► Change multiple line input:

Active Send:

Select **Yes** if the text messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS:

Press the display key **Edit**. Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

E-mail:

Press the display key **Edit**. Enter the number of the e-mail service.

SMS (text messages)

- Save changes (page 46).

Note:

Ask your service provider for details of how you should enter service numbers if you wish to use personal mailboxes (requirement: your service provider supports this function).

Sending a SMS through another SMS centre

- Activate the SMS centre (2 to 4) as send centre.
- Send the SMS.

This setting only applies to the SMS that is being sent next. Afterwards, the setting automatically changes back to Service Centr. 1.

SMS info services

You can have your service provider send you certain information (e.g. weather forecast or lottery numbers) via SMS. Up to 10 info services can be stored. You can obtain information about the info services available and their costs from your service provider.

Setting up/ordering an info service

Ordering an info service



→ SMS Service



Select info service.

Send

Press the display key.

Setting up an info service

- Select info service (see above). Now:

View

Press the display key.

Edit

Press the display key.



If necessary, enter code, designation and destination number.

Save

Press the display key.

Changing the entry of an info service

- Select info service (see above). Now:

View

Press the display key.

Edit

Press the display key.



If necessary, change code, designation or destination number.

Save

Press the display key.

Deleting an info service

- Select info service (see above). Now:

Options

Open menu.

Delete Entry

Select and press **OK**.

SMS to a PABX

- ◆ You can only receive a SMS when the **Calling Line Identification is forwarded to the extension of the PABX (CLIP)**. The CLIP of the phone number for the SMS centre is evaluated in your **Gigaset**.

- ◆ If required, you must prefix the number for the SMS centre with the access code (depending on your PABX).

If in doubt, test your PABX e.g. by sending a text message to your own number: once with and once without the access code.

- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.

Sending and receiving SMS on ISDN

PABXs is only possible via the MSN number assigned to your base station.

 
Activating/deactivating the SMS function

When you switch off you cannot send or receive any SMS with your phone.

The settings which you have made for sending and receiving SMS (e.g. the call numbers of the SMS centres) and the entries in the incoming and draft message lists are saved when you switch off your phone.



Open menu.



Enter the digits.



Deactivate the SMS function.

Or:



Activate SMS function (default settings).

SMS troubleshooting

Errors when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed, see self-help.

Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

You cannot send messages.	
1.	You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none">▶ Ask your service provider to enable this service.
2.	Text message transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none">▶ Re-send the text message.
3.	Feature is not supported by network provider. .

4. No number or an invalid number is entered for the SMS centre activated as the send centre.
 - ▶ Enter the number (page 27).

You receive a message whose text is incomplete.

1. Your phone memory is full.
 - ▶ Delete old messages (page 25).
2. The provider has not yet sent the rest of the message.

You have stopped receiving messages.

1. You have changed the ID of your mailbox.
 - ▶ Tell your SMS contacts your new ID or undo the change (page 27).
2. You have not activated your mailbox.
 - ▶ Activate your mailbox (page 27).
3. Call diversion is activated with When: All Calls or the call diversion All Calls is activated for the network mailbox.
 - ▶ Change your call diversion.

The message is played back.

1. The "display call number" service is not activated.
 - ▶ Have your service provider enable this service (there is a charge for this).
2. Mobile phone operator and network SMS service provider have not agreed on a cooperation.
 - ▶ Obtain information from your network SMS service provider.
3. Your terminal is recorded in the records of your SMS provider as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - ▶ Start the registration wizard for automatic registration (see page 22).
 - Register the terminal (again) for SMS reception.

Messages are only received during the day.

1. The terminal is stored in your SMS provider's database as having no fixed network SMS functionality, i.e. you are no longer registered with the provider.
 - ▶ Start the registration wizard for automatic registration (see page 22).
 - ▶ Register the terminal (again) for SMS reception (see above).

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested it** from your network provider.

Configuring the network mailbox for fast access

With fast access, you can dial the network mailbox directly.

 
Ask your network provider about this.

Configuring the network mailbox for fast access and entering the network mailbox number



→  → Voice Mail → Set Key 1

Network Mailb.

Select and press **OK** ( = on).



Enter the number for the network mailbox.



Press the display key.

Save Entry Select and press **OK**. The entry is stored.



Press and **hold** (idle status).

The setting for fast access applies to all Gigaset E45 handsets.

 
Calling the network mailbox



Press and **hold**.

You are connected straight to the network mailbox.



Press handsfree key  if required. You hear the network mailbox announcement.

Viewing the network mailbox message

If a message arrives for you, you receive a call from the network mailbox. If you have requested Calling Line Identification, the displays shows the network mailbox number. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number will be stored in the missed calls list and the message key flashes (page 19).

Using several handsets

Registering handsets

You can register up to a total of six handsets on your base station.

A Gigaset E45 handset can be registered on up to four base stations.

Manual registration Gigaset E45 to Gigaset E450

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. INT 1. If it does not, repeat the procedure.

On the handset



→ → Handset → Register H/Set



Select base station, e.g. Base 1 and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. The screen will display, e.g. Base 1.

On the base station

Within 60 secs. press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

On the handset

- ▶ Start to register the handset as described in its user guide.

On the base station

Press and **hold** the registration/paging key on the base station (page 1) (approx. 3 secs.).

De-registering handsets

You can de-register any registered handset from any registered Gigaset E45 handset.



Open list of internal users. The handset you are currently using is indicated by < .



Select the internal user you wish to de-register.

Options

Open menu.

De-reg. H/Set No.

Select and press **OK**.



Enter current System PIN and press **OK**.

Yes

Press the display key.

Locating a handset ("paging")

You can locate your handset using the base station.




- ▶ Press the registration/paging key on the base station **briefly**.
- ▶ All handsets will ring at the same time ("paging"), even if the ringers are switched off.

Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key on the handset.

Changing the base station



If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (Best Base).

-  →  → Handset → Select Base
-  Select one of the registered base stations or Best Base and press **OK**.



 
Making internal calls

Internal calls to other handsets registered on the same base station are free.



Calling a specific handset

-  Initiate internal call.
-  Enter the number of the handset.

 
Or:

-  Initiate internal call.
-  Select handset.
-  Press the talk key.

Calling all handsets ("group call")



-  Initiate internal call.
-  Press the star key. All handsets are called.

Ending a call

-  Press the end call key.

 
Transferring a call to another handset

You can transfer an external call to another handset (connect).

-  Open list of handsets. The external caller hears the wait melody if activated (see page 39).
-  Select a handset or Call All and press **OK**.


When the internal participant answers:

- If necessary announce the external call.

-  Press the end call key.

The external call is transferred to the other handset.



If the internal participant does **not** answer or is busy, press the display key **End**, to return to the external call.

When diverting a call you can also press the end call key  before the internal participant lifts the receiver.

Then, if the internal participant does not answer or is busy, the call will automatically return to you (the display will show Recall).

Internal consultation calls

When you are speaking to an **external** participant you can simultaneously call an **internal** participant for consultation.

-  Open list of handsets. The external caller hears the wait melody if activated (see page 39).
-  Select handset and press **OK**.

Ending an enquiry call

- End** Press the display key.

You are reconnected with the external caller.

Accepting/rejecting call waiting

If you get an **external** call while conducting an **internal** call, you will hear the call waiting tone (short tone). The caller's number or name will appear in the display if phone number identification is enabled.

Ending an internal call, accepting an external call

- Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting external call

Reject Press the display key.



The call waiting tone is turned off. You remain connected with the internal participant. The ringtone can still be heard at other registered handsets.


Linking internal callers to an external call

Important: The **Listening In** function must be activated.

You are conducting an external call. An internal caller can listen in on this call and take part in the conversation. All the participants are made aware of the 'listening-in' by a signal tone.


Activating/deactivating internal listening in

 →  → Base → Add. Features
→ Listening In

 Press and **hold** (idle status).


Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the existing external call.

 
 Press and **hold** the talk key.

You are linked into the call. All participants hear a signal tone. During this time, this handset will not display any information or messages and no selection can be made from this handset.

Ending listening in

 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has 'listened-in' remains connected to the external caller.

Changing the name of a handset

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open list of handsets. Your own handset is indicated by <.



Select handset.



Press the display key.



Enter name.



Press the display key.

Changing a handset's internal number

A handset is **automatically** assigned the lowest unassigned number when it is registered. If all the numbers have been assigned, number 6 is overwritten, provided the handset is in idle status. You can change the internal number of all registered handsets (1–6).



Open list of handsets. Your own handset is indicated by <.



Open menu.

Edit H/Set No.

Select and press **OK**. The list of handsets is displayed.



The current number flashes. Select a handset.



Enter the new internal number(1–6). The handset's old number is overwritten.



Press the display key to save the input.



Press and **hold** (idle status).

You will hear the error tone (descending tone sequence) if you assign an internal number twice.

► Repeat the process with an unused number.

Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as a set noise level is reached. You can store an internal or external number in your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.



If you accept an incoming call, the room monitor mode is suspended for the duration of the call, but the function **remains** activated.

If you switch off the handset, the room monitor mode is deactivated. You must reactivate the function after switching on the handset again.

Caution!

- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.**
- When the function is switched on the handset's operating time is severely reduced. If necessary, place the handset in the charging cradle. This ensures that the battery pack does not run down.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the number to be called

 →  → Room Monitor

- ▶ Change multiple line input:


Room M.:

Select On to activate.

Call to:

Press the display key **Edit** and enter destination number.

External number: select number from the directory or enter directly. Only **the last 4 digits** are displayed.


Internal number: delete any stored external number. **INT**  (select handset or Call All, if all registered handsets are to be called) **OK**.

Store number with **Save Entry** **OK**.

Level:


Set noise level sensitivity (Low or High).

- ▶ Save changes (page 46).

The function is now activated. With , you can move directly to settings.

Changing previously set external destination number

 →  → Room Monitor






 Scroll to the Call to: line.

Edit Press the display key.

<C Delete existing number.



- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 34).
- ▶ Save changes (page 46).

Changing previously set internal destination number

-  →  → Room Monitor
-  Scroll to the **Call to:** line.
-  Press the display key.
-  Press the display key to confirm the prompt.
- ▶ Enter number as described in "Activating the room monitor and entering the number to be called" (page 34).
- ▶ Save changes (page 46).


Deactivating the room monitor remotely

Important: The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Take the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings on the handset (e.g. no ring-tone) will however remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:



 
- ▶ Turn on the activation again and save (page 34) with .

Handset settings


Your handset is preconfigured, but you can change these settings to suit your individual requirements.

Changing the display language

You can view the display texts in different languages.

-  →  → Handset → Language
- The current language is indicated by .



Select a language and press .



Press and **hold** (idle status).


If you accidentally choose a language you do not understand:



Press keys one after the other.



Select the correct language and press .


Setting the display

You have a choice of four colour schemes and several different contrasts.


 


→  → Display

Colour Scheme

Select and press .




Select a colour scheme and press  ( = current colour).



Press **briefly**.

Contrast

Select and press .



Select contrast.



Press the display key.




Press and **hold** (idle status).


Setting the screen picture

You can display a screen picture (picture or digital clock) when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is not displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with .



→  → Display → Screen Picture

The current setting is displayed.

- ▶ Change multiple line input:

Handset settings

Activation:

Select On (screen picture is displayed)
or Off (no screen picture).

Selection:


Change screen picture if necessary (see below).

- ▶ Save changes.

If the screen picture conceals the display, press the end call key **briefly** to show the idle display with time and date.

Changing the screen picture

 →  → Display → Screen Picture

 Scroll to the picture line.

View Press the display key.
The active screen picture is displayed

 Select picture/Clock and press **OK**.

- ▶ Save changes.

Setting display illumination

Depending on whether or not the handset is in the charging cradle you can set different levels of display illumination. If the charging cradle is switched on, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

- ▶ Change multiple line input:

In Charger

Select On or Off .


without Charger



Select On or Off .

Save Press the display key.

 Press and **hold** (idle status).

Activating/deactivating auto answer

If you have activated this function, when you get a call you can simply lift the handset out of the charging cradle without having to press the talk key .

 →  → Handset

Auto Answer

Select and press **OK** ( = on).



Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during an external call.

The handsfree volume can only be adjusted when this function is set.

You are conducting an external call.




Open menu.



Select volume.

Save

Press display key if necessary to save the setting permanently.

If  is assigned a different function, e.g. when toggling (page 15):

Options

Open menu.



Volume

Select and press **OK**.

Configure setting (see above).

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g. volume 2 = ) and the "Crescendo" ring (6; volume increases with each ring = )

◆ Ringtones:

You can choose between 15 different melodies.


You can configure the following functions with different ringtones:

- ◆ Ext. Calls : for external calls
- ◆ Internal Calls : for internal calls
- ◆ All: the same for all functions

Settings for individual functions

Set the volume and melody depending on the type of signalling required.



→  → Audio Settings →
Ringer Settings



Set, e.g. select Ext. Calls and press **OK**.

► Change multiple line input:



Set volume (1–6).




Scroll to the next line.



Select melody.


Save

Press the display key to save the setting.

In idle status, you can also open the menu Ringer Settings by pressing  briefly.

Settings for all functions to ring the same



→  → Audio Settings →
Ringer Settings → All

► Set volume and ringtone (see "Settings for individual functions").

Yes

Press the display key to confirm the prompt.



Press and **hold** (idle status).

Activating/deactivating the ringtone

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently



Press the star key and hold until you can no longer hear the ringtone.

The  icon appears in the display.

Re-activating the ringtone



Press and **hold** the star key.

Deactivating the ringtone for the current call

Silence

Press the display key.

 
Activating/deactivating the alert tone

In place of a ringtone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringtone.



Press and **hold** the star key and **within 3 seconds**:

Beep

Press the display key. A call is now signalled by **one** brief alert tone. You will now see  in the display.

Activating/deactivating first ring muting



Open menu.

5 jkl

5 jkl

9 wxyz

1 oo

9 wxyz

Press keys.

0 +

OK

First ring audible.

Or:

1 oo



OK

First ring muted.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- ◆ **Key beep:** Each key press is acknowledged.
- ◆ **Acknowledged tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when a SMS or a new entry arrives in calls list
 - **Error beep** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling at the end of a menu
- ◆ **Battery low beep:** the battery pack requires charging.

 →  → Audio Settings
→ Advisory Tones

- ▶ Change multiple line input:

Key Tones:

Select On or Off .

Confirm.:

Select On or Off .

Battery:

Select On, Off or In Call. The battery warning tone is activated/deactivated or only sounds during a call.

 
- ▶ Save changes (page 46).

You cannot deactivate the confirmation tone for placing the handset in the base station.

Setting the alarm clock

Requirement: The date and time have already been set (page 8).

Activating/deactivating and setting the alarm clock



- ▶ Change multiple line input:

Alarm Clock:

Select On or Off .

Time:

Enter the wake-up time in 4-digit format.


Melody:

Select melody.

Volume:

Set the volume (1-6).

- ▶ Save changes (page 46).

You will see the icon .

A wake-up call with the selected ringer melody is signalled on the handset. The wake up call sounds for 60 seconds. The display shows Alarm Clock . If no key is pressed the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (slumber mode)

Requirement: A wake-up call is sounding.

OFF

Press the display key. The wake-up call is deactivated.

or

Snooze

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

 
Restoring the handset default settings

You can reset any individual settings and changes that you have made. This will not affect entries in the directory, call-by-call list, calls list, or SMS lists or the handset's registration to the base station.

 →  → Handset → Reset Handset

Yes Press the display key.

 Press and **hold** (idle status).

Cancel the restoring process by pressing  or the display key **No**.

Base station settings

The base station settings are carried out using a registered Gigaset E45 handset.

Protecting against unauthorised access

Protect the system settings of the base station with a PIN known only to yourself. The system PIN must now be entered when, for example, registering/de-registering a handset to/from the base station or when restoring the default settings.


Changing the system PIN


You can change the 4-digit system PIN set on the base station (default setting: 0000) to a 4-digit PIN known only to yourself.

Caution:

Memorise the new system PIN well! If you forget it, the phone will require specialist attention. If this happens, contact our Service Centre (page 42).

 →  → Base → System PIN

 Enter current System PIN and press **OK**.

 Enter new system PIN. For security the PIN is shown as four stars (****).



 
Scroll to the next line, re-enter new system PIN and press **OK**.



Press and **hold** (idle status).

Activating/deactivating the wait melody


 
 →  → Base → Music on hold

Press **OK** to activate or deactivate the wait melody ( = on).

 
Repeater support

With a repeater you can increase the range and reception strength of your base station. First you must activate the repeater mode. This will terminate any calls currently running through the base station.

Requirement: A repeater is registered.

 →  → Base → Add. Features
→ Repeater Mode

Yes Press the display key.

When repeater mode is active, the menu item is marked with .

Restoring default settings to base station

When resetting, the handsets remain registered. The following settings are not reset:

 
- ◆ System PIN
- ◆ Setting "First ringtone suppressed"
- ◆ SMS info services

 →  → Base → Base Reset



Enter the system PIN and press **OK**.

Yes Press the display key.


Cancel the restoring process by pressing  or the display key **No**.

Connecting the base station to the PABX



The following settings are only needed when your PABX requires them. Please refer to the user guide for your PABX.


 
You cannot send or receive SMS on PABXs that do not support Calling Line Identification.

 
Flash time

The current setting is indicated by .

Setting the flash time

 
 →  → Base → Add. Features
→ Recall

 Select flash time ( = on) and press **OK**.

 
 
 
 
 
 Press and **hold** (idle status).

Setting pauses


Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.

 Open menu.

Press keys.

 
 
 
 
 
 Enter digit for the pause length (1 = 1 sec.; 2 = 3 secs.; 3 = 7 secs.) and press **OK**.

Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open menu.

Press keys.

 
 
 
 
 


Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

Changing the dialling pause



 
Open menu.

Press keys.



Enter a digit for the length of the pause (1 = 1 sec.; 2 = 2 secs.; 3 = 3 secs.; 4 = 6 secs.) and press **OK**.

To insert a dialling pause: press  for 2 seconds. A P appears in the display.

Appendix

Care

- ▶ Wipe the base station and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid

Your handset is splash proof.

If it comes into contact with water, knock the water out of the microphone opening and remove any water on the handset with an absorbent cloth. Your handset is ready for use.

If your handset comes into contact with a larger amount of liquid take the following steps:

1. **Do not switch the handset on under any circumstances!**
2. Remove the battery pack immediately.
3. Remove the headset socket cover.
4. Hold the handset horizontally with the open battery compartment facing down.
5. Hold the handset vertically. Tilt the handset backwards and forwards slightly, giving it a gentle shake each time.
6. Dab all parts dry and then leave the handset for **at least 72 hours** with the battery compartment open and the keypad facing down in a dry, warm place (not in a microwave, oven or similar).


When it has fully dried out, you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your telephone, you can contact us at any time at

 
www.gigaset.com/customercare . The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
 - ▶ Press and **hold** the end call key .
2. The battery pack is flat.
 - ▶ Charge/replace the battery pack (page 8).

The handset does not respond to a key press.

The keypad lock is activated.

- ▶ Press and **hold** the hash key  (page 13).

"Base station x" is flashing in the display.

1. The handset is outside the range of the base station.
 - ▶ Reduce the distance between handset/ base station.
2. The handset has been de-registered.
 - ▶ Register the handset (page 31).
3. The base station is not switched on.
 - ▶ Check the base station mains adapter (page 6).

Base Search is flashing in the display.

The handset is set for Best Base and no base station is switched on or within range.

- ▶ Reduce the distance between handset/base station.
- ▶ Check the base station mains adapter (page 6).

Handset does not ring.


1. The ringtone is switched off.
 - ▶ Activate the ringtone (page 37).
2. Call diversion set to All Calls.
 - ▶ Switch off Call Diversion (page 15).

You cannot hear a ringtone/dialling tone.

Base station's phone cord has been replaced.

- ▶ When purchasing a new cord, ensure that it has the correct pin connections (page 6).

The other party cannot hear you.

You have pressed the  (INT) key. The handset is "muted".

- ▶ Switch on the microphone again (page 12).

The incoming call number is not displayed although CLIP is set.

Phone number identification is not enabled.

- ▶ **Caller** should ask network provider to activate phone number identification (CLI).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the operating instructions if necessary.

You cannot listen to messages on the network mailbox.

Your phone system is set for pulse dialling.

- ▶ Set your phone system to tone dialling.

The calls list does not indicate a time for a message.

Date/time are not set.

- ▶ Set the date/time (page 8).

The answering machine reports "PIN is incorrect" during remote operation.

1. System PIN entered is incorrect
 - ▶ Repeat input of system PIN,
2. System PIN is still set to 0000.
 - ▶ Change system PIN to a number other than 0000 (page 39).

The answering machine does not record any messages/has switched over to 'announce only'.

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

Customer service & product warranty – Australia and New Zealand

Gigaset Communications provides you with product information that can be accessed from the Customer Care section of our website.

www.gigaset.com/au

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

Gigaset Cordless telephones come with a 2 Year limited warranty that covers faults with the manufacturing process or components.

Gigaset Communications will at its discretion, repair or replace, any product supplied that is found to have a manufacturing defect.

Please retain your proof of purchase details for warranty purposes.

IMPORTANT

Please retain your sales receipt as proof of the date of purchase.

Customer Service

If you require assistance in operating this product please contact us

AUS: 1300 780 878 or by e-mail at

gigasetsupport@ingrammicro.com.au

NZ: 0800 780 878

If you are trying to access a Network Service and require assistance specifically related to the network service or would like to subscribe to the service, contact your service provider.

Product Warranty

Subject to the conditions below, this product is guaranteed against any defect in materials or workmanship under conditions of normal use for a period of 24 months from date of purchase.

The benefits conferred by this warranty are in addition to other warranties and remedies that are implied under the Trade Practices Act and similar Country, State and Territory laws (Statutory Rights).

Subject to your Statutory Rights, the goods will not be eligible for service under this warranty if:

- Proof of purchase cannot be provided;
- The defect was caused by an accident, misuse, abuse, improper installation or operation, vermin infestation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Gigaset Communications; or
- The product has been damaged by lightning or a mains power surge.

To obtain service during the terms of this warranty call the TechHelp Information Line on

AUS: 1300 780 878 or by e-mail at

gigasetsupport@ingrammicro.com.au

NZ: 0800 780 878

If it is necessary to have the product serviced, the Customer Service Representative will inform you of the product return process.

Please ensure that:

- You provide proof of purchase;
- Your product is suitably packaged; and
- You have included all components from the original purchase.

Subject to your Statutory Rights:

- Any claim under this warranty is limited to the cost of repair or replacement of the product; and
- If the goods are found to be in sound working order by the authorised service centre, you may be charged a fee for service and for any other direct costs associated with having the product delivered for service.

Replacement or repair services are only offered for products purchased in Australia and New Zealand that bear Gigaset Communications GmbH local registered N Number and Telepermit markings.



Please have your proof of purchase ready when calling.

Accessories

You can purchase accessories for your Gigaset, simply contact our Service Centre at gigaset.com.au/servicecentre.

Specifications

Recommended battery pack

(Valid at the time of going to press)

Nickel-metal-hydride (NiMH):

V30145-K1310-X382

The handset is supplied with the recommended battery pack.

Handset operating times/charging times

Capacity	620 mAh
Standby time	Approx. 160 hours (6 days)
Calling time	Approx. 12 hours
Charging time	approx. 6 hours

The operating and charging times apply only when using the recommended battery pack.

Base station power consumption

In standby mode: approx. 2 watt

During a call: approx. 3 watt.

General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s

Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	240 V ~/50 Hz
Environmental conditions for operation	+5 °C to +45 °C; 20 % to 75 % relative humidity
Dialling mode	DTMF (tone dialling)
Base station dimensions	105 x 132 x 46 mm (L x W x H)
Handset dimensions	143 x 51 x 25 mm (L x W x H)
Base station weight	131 g
Weight of handset with battery pack	133 g

Notes on the operating instructions

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols used

Copy Entry / Copy List (example)

Select one of the two menu functions specified.



Save

Enter digits or letters.

The display keys' current functions are shown reverse highlighted in the bottom display line. Press the display key below to launch the function.



Press the top or the bottom of the control key: scroll up or down.



Press the right or left of the control key: e.g. select setting.






/ 0 + / * Δ etc.

Press the corresponding key on the handset.

Example: menu input

In the user guides, the steps you need to perform are shown in abbreviated form. This is illustrated below using the example of "Setting the contrast for the display". The things you have to do are explained in the boxes.

 →  → Display

- ▶ With the handset in idle status, press on the right of the control key to open the main menu.
- ▶ Select the  icon using the control key – press the control key at the top or bottom.

In the display header, **Settings** is displayed.

- ▶ Press the **OK** display key to confirm the function **Settings**.

The **Settings** submenu is displayed.

- ▶ Press the bottom of the control key repeatedly until **Display** is selected.
- ▶ Press the **OK** display key to confirm the selection

Contrast Select and press **OK**.

- ▶ Press the bottom of the control key repeatedly until **Contrast** is selected.
- ▶ Press the **OK** display key to confirm the selection



Select contrast and press **OK**.

- ▶ Press on the right or left of the control key to select the contrast.
- ▶ Press the **Save** display key to confirm the selection



Press and **hold** (idle status).

- ▶ Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide symbols are used to guide you step by step through multiple line input. This is illustrated below using the example of "Setting the date and time". The things you have to do are explained in the boxes.

You will see the following display (example):



Date:


Enter day, month and year in 6-digit format.

The second line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.

Time:

 
Enter hours/minutes in 4-digit format.

- ▶ Press the  key.

The fourth line is marked with [] to show it is active.

- ▶ Enter the date using the digit keys.





 
- ▶ Save changes.

- ▶ Press the **Save** display key.
- ▶ Then press and **hold** the  key.

 
The handset changes to idle status.

Writing and editing a text message

 
 
The following rules apply when writing a text message:

- ◆ Control the cursor with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  to show the table of special characters.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Entering special characters

You can call up the table of special characters when writing a SMS using the  key. Select the required character and insert it with **Insert**.

Writing a SMS/name (without predictive text)

Press the hash key  and **hold** it to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key  **before** entering the letter.

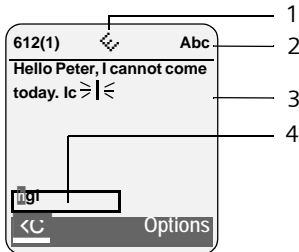
The following applies when writing a SMS:

- ◆ The display shows whether upper case, lower case or digits is selected. "Abc", "abc" or "123" appears at the top right of the display.
- ◆ When you press a key and **hold** it, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

Writing a SMS (with predictive text)

EATONI predictive text helps you when you are writing a SMS.

Each key between **0 +** and **9 wxyz** is assigned several letters and characters (see the character set tables, page 46). These appear in a selection line immediately under the text panel (above the display keys) as soon as you press a key. The letter you are most likely looking for is reverse-highlighted and is at the beginning of the selection line. It is copied into the text panel.



- 1 EATONI is activated
- 2 Upper/lower case or digits
- 3 SMS text
- 4 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the hash key **# v-o** repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.

If you press and **hold** the hash key **# v-o** you switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc".

Deactivating/activating predictive text

Requirement: You are writing a SMS.

Options Press the display key.

Predictive Text

Select and press **OK** (**✓** = on).



Press the end call key **briefly** to return to the text panel.
Enter the text.

Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Index

A

Access protection	39
Accessories	44
Acknowledge tones	38
Activating	
advisory tones	38
auto answer	36
handset	13
internal listening in	33
keypad lock	13
muting ringtone	37
room monitor	34
Adjusting	
loudspeaker volume	36
Advisory tones	38
Alarm clock	38
Alert tone	37
Anniversary	18
storing in directory	18
Answering machine list	20
Answering machine, see	
Network mailbox	
Auto answer	11, 36
Automatic network provider code	20

B

Base station	
changing	32
connecting and setting up	5
connecting the device	6
connecting to PABX	40
range	5
restoring to factory settings	39
setting	39
system PIN	39
Battery pack	
charging	8
display	8
icon	8
inserting	6
recommended battery pack	44
tone	38
Best base station	32
Birthday, see Anniversary	

C

Call

answering	11
caller listening in	33
disconnecting (toggle)	15
ending	11
external	11
forwarding (connecting)	32
internal	32
transferring (connecting)	33
Call acceptance	36
Call diversion	15
Call duration	11
Call history	18
Call waiting	
accepting/rejecting	15
activating/deactivating	15
favouring waiting call	15
internal call	32
Call-by-call list	16
key	1
Call-by-call numbers	16, 20
Calling	
external	11
Calling Line Identification	11
Cancelling (operation)	13
Care of the telephone	41
Changing	
destination number	34
dialling mode	40
display language	35
internal number of a handset	33
name of handset	33
pause time	40
ringtone	37
system PIN	39
Changing PIN	39
Changing system PIN	39
Character set table, see	
Special characters	
Charge status display	8
CLI, CLIP	11
CNIP	11
Conference call	15
Confirmation beep	38
Connecting, base station to PABX	40

Consultation	15
Consultation (internal)	32
Control key	1, 13
Correcting incorrect input	14
Customer service & product warranty – Australia and New Zealand	42

D

Deactivating	
advisory tones	38
auto answer	36
handset	13
internal listening in	33
keypad lock	13
muting ringtone	37
room monitor	35
Delete key	13
Deleting	
characters	14
De-registering (handset)	31
Dialling	
call-by-call list	16
directory	16
with quick dial	17
Dialling pause	40
entering	1
Directory	16
copying number from text	17
managing entries	16
opening	13
order of entries	47
saving entry	16
sending entry/list to handset	17
storing anniversary	18
storing number of sender (SMS)	25
using to enter numbers	17
Disconnecting waiting caller (toggle)	15
Display	
changing display language	35
contrast	35
illumination	36
in idle status	14
keys	1, 13
memory	17
name (CNIP)	11
network mailbox message	30
number (CLI/CLIP)	11
screen picture	35
setting	35

wrong language	35
Display keys	13
Draft message list (SMS)	23

E

Earpiece mode	12
Earpiece volume	36
EATONI (predictive text)	47
E-mail address	24
End call key	1, 11
Ending, call	11
Ending, see Deactivate	
Entry	
saving, changing (preselection)	21
selecting (menu)	45
selecting from directory	16
Error beep	38
Example	
menu input	45
multiple line entry	46

F

Fast access	
assigning key 1	1
network mailbox	30
Fax (SMS)	24
Flash time	40

G

Group call	32
----------------------	----

H

Handset	
activating/deactivating	13
advisory tones	38
changing internal number	33
changing name	33
changing number	33
changing to best reception	32
changing to different base station	32
contact with liquid	41
de-registering	31
display illumination	36
display language	35
forwarding call	32
idle status	14
list	13
loudspeaker volume	36
muting	12
paging	31

Index

reception strength 5
registering 31
registering on another
 base station 32
restoring to factory settings 39
screen picture 35
setup 6
 using room monitor 34
 using several handsets 31
Handset charging times 44
Handset operating time 44
 in room monitor mode 34
Handset settings 35
Handsfree key 1
Handsfree talking 12
Hash key 1, 13
Headset socket 8
Hearing aids 4

I

Icon
 alarm clock 38
 battery pack 8
 display 13
 keypad lock 13
 new SMS 24
 ringtone 37
Idle status (display) 14
Idle status, returning to 14
Incoming message list (SMS) 24
Incorrect input (correction) 14
Info services (SMS) 28
Input language (SMS) 23
Internal
 consultation 32
 listening in 33
 making calls 32
Internal call 32
 call waiting 32

K

Key 1 (fast access) 1
Keypad lock 13
Keys
 assigning directory entry 16
 call-by-call key 1
 cancel key 13
 control key 1, 13
 delete key 13
 display keys 1, 13

end call key 1, 11
fast access 1
handsfree key 1
hash key 1, 13
menu key 13
message key 1
On/Off key 1
quick dial 16, 17
recall key 1
star key 1, 37
talk key 1, 11

L

Language, display 35
Last number redial 18
Linking, see SMS
Liquid 41
List
 answering machine list 20
 call history 18
 call-by-call list 16
 handsets 13
 missed calls 19
Listening in to call 33
Lock
 activating/deactivating keypad
 lock 13
Loudspeaker volume 36

M

Mailbox ID, see SMS
Mailboxes, see SMS
Mains adapter 4
Making calls
 answering a call 11
 external 11
 internal 32
Making cost-effective calls 20
Manual last number redial 18
Medical appliances 4
Memory 17
Menu
 back one menu level 13
 end tone 38
 key 13
 menu guidance 14
 menu input 45
 opening 13
 overview 9
Message key

opening lists	19
Message list	
opening list	24
Messages	
key	1
Microphone	1
Missed call	19
Multiple line entry	46
Muting	12
first ring	37
Muting handset.	12

N

Name	
display caller's name (CNIP)	11
of a handset.	33
Network mailbox.	30
Network provider (number list)	16
Network provider code,	
automatic.	20
Network services.	15
Notification via SMS	26
Number	
adding to directory.	17
as destination for room monitor	34
copying from a SMS text.	26
copying from directory	17
display calling number (CLIP)	11
entry using directory	17
saving in directory	16
Number list	
network provider	16

O

On/Off key	1
Order of entries in directory.	47

P

PABX	
connecting base station	40
pause times	40
setting dialling mode	40
setting flash time	40
SMS.	28
Pack contents	5
Paging	31
Paging, handset	31
Pause	40
Phone jack assignment	6
Placing the handset.	7

Power consumption	44
Predictive text	47
Preselection	20
Protecting phone from access	39

Q

Questions and answers.	41
Quick dial.	16

R

Range	5
Recall key.	1
pause after	40
Reception booster, see Repeater	
Reception strength	5
Registering (handset)	31
Reminder call	18
Repeater	39
Ringtone	
changing	37
muting	37
setting	13
setting melody	37
setting volume	37, 39
Room monitor	34

S

Screen picture	35
Searching in directory.	16
Sending	
directory entry to handset	17
Sensitivity (room monitor)	34
Setting	
display illumination	36
screen picture	35
Setting date	8
Setting melody.	37
Setting time.	8
Setting up, base station	5
Setup	
handset	6
Shortcut.	9
Signal beep, see Advisory tones	
Slumber mode	38
SMS.	22
changing mailbox	27
deleting	23
draft message list	23
forwarding	25
info services	28

Index

- input language 23
- linked 22
- mailbox ID 26
- mailboxes 26
- notification number 26
- notification type 26
- notification via SMS 26
- PIN protection 27
- reading 23
- receiving 24
- registration wizard 22
- replying to and forwarding 25
- rules 22
- self help with error messages 29
- sending as fax 24
- sending to a personal mailbox 27
- sending to e-mail address 24
- status report 23
- storing number 25
- to a PABX 28
- troubleshooting 29
- SMS centre
 - changing number 27
 - setting 27
- Sound, see Ringtone
- Special characters 46
- Special functions 40
- Specifications 44
- Star key 1, 37
- System settings 39

T

- Talk key 1, 11
- Text message, see SMS
- Toggling 15
- Troubleshooting 41
- Troubleshooting (SMS) 29

U

- Unknown 11
- Unknown caller 11

V

- Viewing network mailbox message . . . 30
- VIP (directory entry) 17
- Volume
 - earpiece 36
 - handset loudspeaker 36
 - loudspeaker 36
 - ringtone 37, 39
 - setting 37

W

- Wait melody 12, 39
- Warning beep, see Advisory tones
- Writing (SMS) 22
- Writing, editing ext. 46

