

SIEMENS

Be inspired

Gigaset


A 200

A 200 Duo



Brief overview

Brief overview

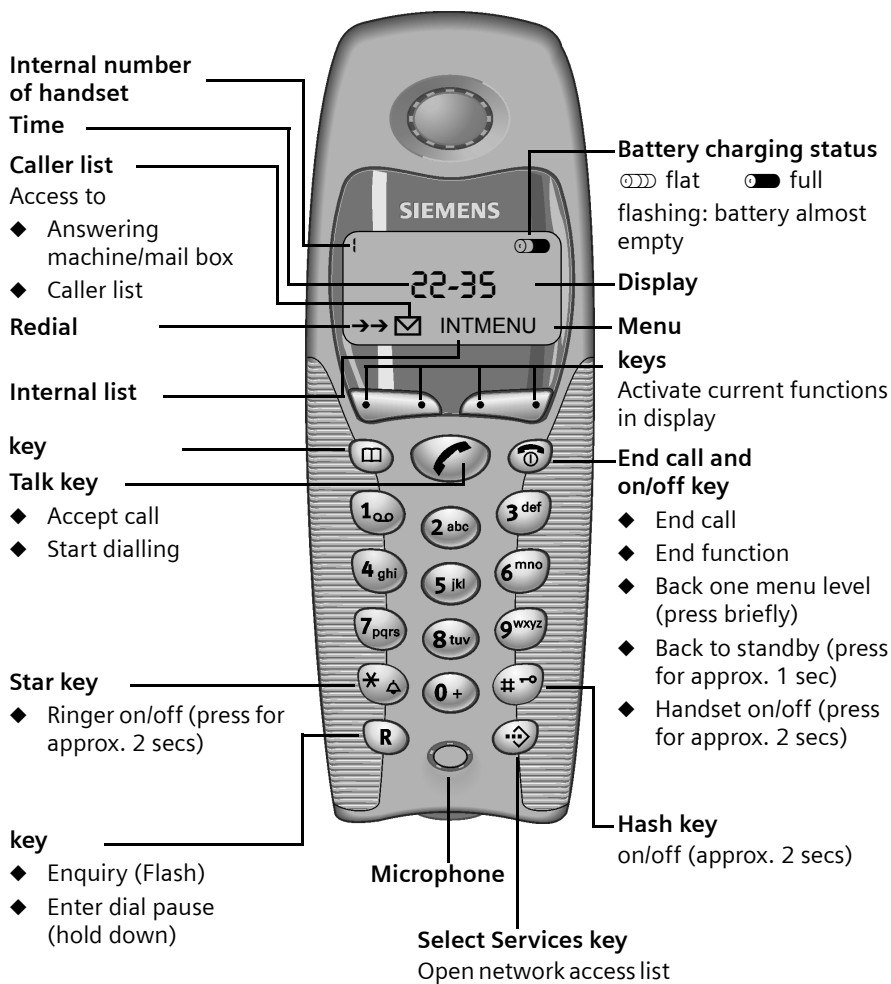

Contents

Brief overview	II
Safety precautions	3
Making the phone ready for service	4
Positioning the base station	4
Step 1: Connecting the base station	5
Step 2: Making the handset ready for service	6
Step 3: Registering the handset with the base station and charging the batteries	7
Switching the handset on and off	8
Activating/deactivating keypad protection	8
Operating the phone and menu management	9
Display keys	9
Signal tones	9
Display in idle status	10
Menu management	10
Time functions	11
Set date and time	11
Making calls	12
Making external calls and ending a call	12
Accepting a call	12
Displaying the caller's phone number (CLIP/CLI)	12
Putting on hold	13
Using the directory and other lists	14
Directory and network access list	14
Redial list	17
Caller list	18
Registering and de-registering handsets	20
Automatic registration: Gigaset A 2 handset	20
Manual registration: Gigaset A 2 handset	20
Specific registration: other handsets	21
De-registering handsets.	21

Contents

Operating more than one handset 22

Making internal calls and ending calls	22
Internal enquiry call	23
Accepting/rejecting a waiting call during an internal call	23
Barging in on an external call	24
Paging	24

Handset settings 25

Change display language	25
Activate/deactivate automatic call acceptance	25
Change volume and ringtone	25
Activate/deactivate ringer	26
Activate/deactivate battery warning tone	26
Return handset to factory settings	26

Base station settings 27

Changing the system-PIN	27
Return base station to factory (default) settings	27

Appendix 28

Questions and Answers	28
Care	29
Contact with liquid	29
Operation with a PABX	29
Other Settings	30
Technical data	32
Service (Customer Care)	33

Menu overview 35

Main menu	35
Directory key and network operator list key	36
Caller list	36

Index 37

Safety precautions



Use **only the power unit supplied**, as indicated on the underside of the base station.



Insert only **approved rechargeable batteries of the same type** (page 32)! Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.



Make sure you insert rechargeable batteries the right way round and use the battery type specified in this operating manual (as indicated in the handset battery compartment).



The phone may affect medical equipment. Always observe the technical restrictions in your environment (e.g. hospitals or doctors' practices).



The handset may cause an unpleasant humming noise in hearing aids. Do not hold the handset against your ear while it is ringing (incoming call).



Do not install the phone in a bathroom or shower. The handset and base station are not splash proof (page 29).



Do not operate the phone in places where there is a risk of explosion (such as paint workshops).



If you give your Gigaset to someone else, make sure you also give them the operating manual.



Dispose of batteries and phone carefully. Do not pollute the environment.

i

- ◆ Emergency numbers cannot be dialled if the keypad lock (page 8) is activated!
- ◆ Not all the functions described in this operating manual are available in all countries.

Making the phone ready for service

Making the phone ready for service

Positioning the base station

Advice on a suitable place

The base station is designed for use in a dry, closed space with a temperature range between +5 °C and +45 °C. Place the base station in a central position in the flat/house, e.g. in the hallway.



- ◆ Avoid exposing your phone to sources of heat, direct sunshine, and other electrical devices.
- ◆ Protect your Gigaset from damp, dust, dangerous liquids and steam.


Range

The range is dependent on the nature of the building and other local conditions. Outdoors it is approx. 300 m. Indoors the range is up to 50 m.

Making the phone ready for service

Step 1: Connecting the base station

First connect your base station to the mains supply and the telephone socket.

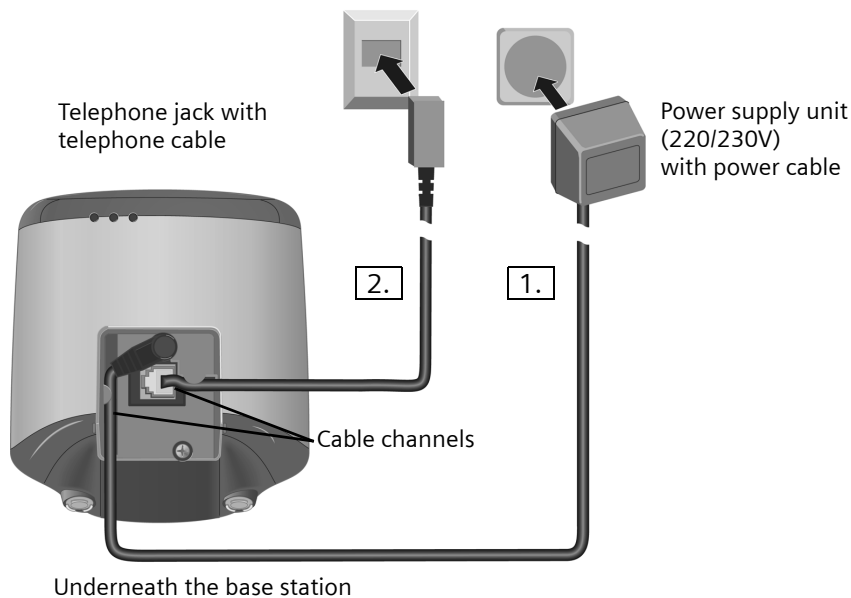


1.

- ◆ Insert small power cable plug into the socket under the base station.
- ◆ Lay the cable correctly in the cable channel.
- ◆ Plug the power supply unit into the power socket.

2.

- ◆ small coloured plug on the telephone cable into the socket (clicks in).
- ◆ Lay the cable correctly in the cable channel.
- ◆ Plug the phone into the phone socket.

Telephone jack assignment:

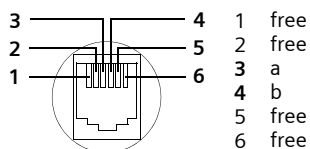

 
Making the phone ready for service

i

- ◆ Use only the power supply unit supplied.
- ◆ If you buy another phone cable, ensure that it has the right connector assignment for your country.
- ◆ To keep your phone operational, the power supply unit must **always remain plugged in**.


Step 2: Making the handset ready for service

Remove protective film



The handset display is protected by a film.
Please remove the protective film!

Insert batteries

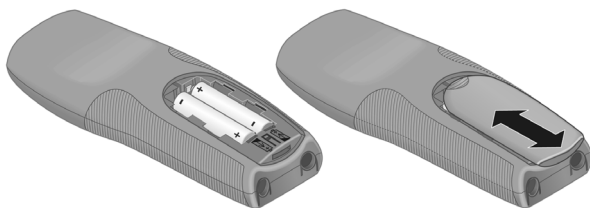

- ◆ Insert the batteries the **right way round** – see illustration left.
- ◆ Place the cover on the battery compartment **about 3mm down from the latch** and push it **up** until it clicks into position.

To **open** the cover, press on the ridged section and push **downwards**.

⚡

- ◆ Insert only approved, rechargeable **batteries of the same type** (page 32)! Never use normal batteries, since these could lead to a health hazard or cause injury.
- ◆ Do not use a non-Siemens charging unit as this could damage the batteries.


Making the phone ready for service


Step 3: Registering the handset with the base station and charging the batteries

Place your handset in the base station with the **display visible at the front** – the confirmation tone will ring (rising sequence of tones). The handset will then register itself automatically with the base station (page 20), all symbols flashing in the display. The process takes about a minute. Once completed, "1" will appear in the top, left-hand corner of the display. This handset has been allocated the first internal number.

Only for A200 Duo: To register a second handset, proceed as described above. After successful registration, "2" will then appear in the top, left-hand corner of the display.

<i>i</i>	◆ To register further handsets , see page 20 onwards.
----------	--

Now leave the handset in the base station to allow the batteries to charge, since these are not charged prior to delivery. The battery charging process is indicated on the handset by a flashing battery symbol .

 Flat batteries

 Batteries $\frac{2}{3}$ charged

 Batteries $\frac{1}{3}$ charged


 Batteries full

Once the batteries have been charged, your phone is ready for service. You need to set the date and time to ensure that the time of incoming calls can be noted correctly (page 11).

<i>i</i>	<ul style="list-style-type: none">◆ For the first charging we recommend a continuous charging time as shown in the table (page 32) – regardless of the charging status shown in the display! Battery capacity reduces for technical reasons after a period of time.◆ The batteries warm up during charging - this is normal and not a cause for concern.◆ The correct charging status for the batteries will only be shown after an unbroken charging/discharging cycle. You should therefore not open the battery compartment unnecessarily.◆ Once the first charging cycle is completed you can put your handset back in the base station after each call. Charging is controlled electronically. This ensures optimum battery charging without overloading.
----------	--

Making the phone ready for service

Switching the handset on and off

To switch the handset on or off, press the end call key .

Afterwards the confirmation tone rings (see page 9).


 
i

If you place a handset that is switched off in the base station or a charging unit, it will automatically switch itself on.

Activating/deactivating keypad protection

You can lock the handset keypad if, for example, you are carrying the handset. This prevents keys being pressed by accident.

Activating keypad protection:

Hold hash key  **down** (confirmation tone). The symbol  appears in the display.

Deactivating keypad protection:

Hold hash key  **down** (confirmation tone).

i

- ◆ The key lock switches itself off automatically if you receive a call. At the end of the call it switches itself on again.
- ◆ Emergency numbers cannot be dialled if the key lock is activated!

Operating the phone and menu management


Operating the phone and menu management

Display keys

Display keys are the long keys directly below the display. Your handset has **two display keys**. Each of these is operated like a rocker key, i.e. it can be pushed down on the left-hand as well as the right-hand side. Dependent on the current operating status and which side of the key you press, you will call up a particular function. This function is shown directly above the display key.

An example of the right-hand display key:

The word **MENU** is shown above the right-hand side of the display key. By pressing the right-hand side you will open the menu. The display symbol **INT** is shown above the left-hand side of the display key. By pressing the left-hand side you will open the list of internal phones.

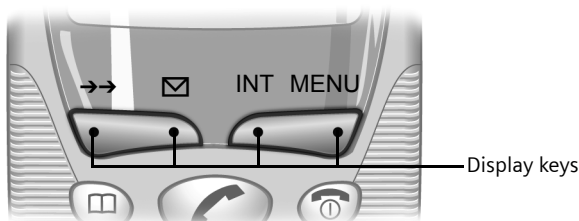

The various **display symbols** have the following meanings:

Display symbol	Meaning when pressed
→→	Automatic redial key: Opens a list of the last 5 numbers dialled (page 17)
☐	Mailbox symbol: Opens caller list and answering machine/mailbox (page 18).
INT	Internal: Opens the list of internal phones.
MENU	Menu: Activates the main menu when in standby. Activates a status-dependent menu when in talk mode.
↑ or ↓	Scrolls up or down.
← or →	Moves cursor to the left or right.
↔	Delete key: Deletes character by character, from the right to the left.
OK	Confirm menu function or confirm and save entry.


Signal tones

Your phone will inform you acoustically about certain actions and situations.

- ◆ Rising ringtone (confirmation tone):
The action has been carried out or the entry is correct.
- ◆ Falling ringtone (error tone):
The function has not worked or the entry is incorrect.


Operating the phone and menu management

Display in idle status

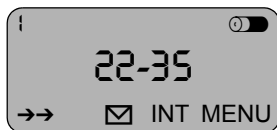

Display in idle status
(date and time already
set)

Return from any position in the menu to idle status

- ◆ Hold down call end key  for approx. 1 sec. or
 - ◆ don't press a key: after 60 secs. the display will **automatically** return to idle status.
- Changes that you have not confirmed by pressing OK will be rejected.



i

If you press the call end key  **briefly** and just once, you will return to the previous menu level.

Menu management

Your phone has an extensive range of features. They are presented to you by a menu that is made up of a number of levels. You will find functions such as AUDIO SET, BASE SET etc. in the main menu, with their respective sub-menus in the next level. A menu overview provides the necessary orientation (page 35).

There are two ways to access a function

- ◆ by scrolling with the  and  keys,
- ◆ by entering the relevant combination of digits (page 35).

Extract from the menu overview

3	BASE SET	3-1	DATE/TIME			
				3-1-1	DATE SET	
				3-1-2	CLOCK SET	
				3-1-3	CLOCK MODE	
				3-1-3-1	24 H	
				3-1-3-2	12 H	

Time functions










Set date and time

Settings for date and time are needed to ensure that these are shown correctly for incoming calls. For the time you can choose between a 12-hour and 24-hour display (default setting).

Date

MENU → BASE SET → DATE/TIME → DATE SET








The current setting is displayed in the format DD-MM-YY.

 


 
 	Enter day/month/year and confirm. Example: Press the keys       for "20.05.2003".
	Long press (return to idle status).

Time

MENU → BASE SET → DATE/TIME → CLOCK SET


 
 

The current setting is displayed in the format HH-MM.

 	Enter hours/minutes. Example: Press the keys     for "19.05".
	Long press (return to idle status).

<i>i</i>	If you want a 12-hour display you must enter     for "19:05", confirm with OK and then confirm PM OK for the 2nd half of the day (AM = 1st half; PM = 2nd half).
----------	--

Display mode (24-hour or 12-hour display)

MENU → BASE SET → DATE/TIME → CLOCK MODE




either ...	Select 12-hour display:
 12 H 	Select and confirm.
or ...	Select 24-hour display:
24 H 	Confirm.
	Long press (return to idle status).



Making calls

Making calls

Making external calls and ending a call


External calls are calls using the public telephone network.

 	Enter the phone number and press the talk key. The phone number is dialed.
	Finish call:
	Press end call key.

<i>i</i>	<ul style="list-style-type: none"> ◆ You can also first press the talk key  (you will hear the dial tone) and then enter the phone number. ◆ You end the call by pressing the end call key . ◆ To find out how to make internal calls read page 22.
----------	---

Accepting a call

Your handset rings, the call is shown in the display.

Press the call key  to accept the call. If the handset is in the base station/charge station and automatic call acceptance is activated (page 25), you only have to pick up the phone from the station to accept the call.

<i>i</i>	If the ringer is disturbing you , press the MENU display key and confirm SILENT with OK. As long as the call is shown in the display, you can accept it.
----------	---

Displaying the caller's phone number (CLIP/CLI)

The phone number of the caller is shown in the display during a call.


Requirements:

1. You have asked your network operator to enable the caller's phone number to be shown in your display (CLIP).
2. The caller has asked the network operator to pass on his/her phone number (CLI).

<i>i</i>	Passing on a phone number may incur costs. For more information please contact your network operator.
----------	---

Making calls

If you have stored an entry for a phone number in your handset directory (see page 14), the name in the directory will appear instead of the phone number, e.g. "Tom".

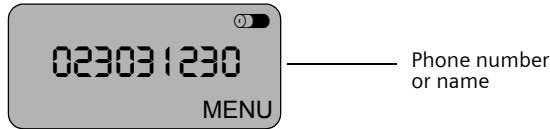

If you do not have CLIP, "<< >>" will appear instead of the phone number.


If the caller does not have CLI or has withheld his/her phone number, "WITHHELD" will appear in the display.

CLIP	Calling Line Identification Presentation = the caller's phone number is displayed
CLI	Calling Line Identification = your own phone number is passed on during external calls.

Putting on hold

During external calls you can put the incoming call on hold, so that, you can talk discreetly to another person in the room for example. During this time the caller on the phone cannot hear you (music on hold). Nor can you hear the caller.

 

INT	Press (INT). The conversation takes place (music on hold).
	Ending call hold:
MENU	Press display key to open menu.
GO BACK OK	Confirm.


<i>i</i>	You can also cancel the "on hold" function by briefly pressing the "replace handset" key  .
----------	--

 
Using the directory and other lists

Using the directory and other lists

Directory and network access list

Both lists are used in the same way, except that the  key is pressed to open the directory and the  key to open the network access list.











You can save up to 20 phone numbers and names in the **directory** . This makes dialling easier.

You can save up to 10 prefix numbers from phone companies (call-by-call) in the **network access list** , for cost-effective calling.

Maximum number of characters per entry

- ◆ Directory entry 22 characters
- ◆ Network access list entry 12 characters

Save phone number in directory network access list



 
 or 	Open directory or network access list.
	Press display key to open menu.
 <input type="text" value="NEW ENTRY"/> 	Select and confirm.
 	Enter phone number and confirm.
 	Enter name (max. 12 characters) (Text entry page 31) and confirm.
	Long press (return to idle mode).

<i>i</i>	If your phone is connected to a PABX that requires a prefix (e.g. "0") for an outside line, then you must save this prefix number as the first digit in all your directory entries.
----------	---

Directory entries are generally sorted alphabetically, however blanks and digits have first priority. The **sort sequence** is as follows:






1. Blank
2. Digits (0–9)
3. Letters (alphabetically)
4. Other characters.

To avoid the alphabetical sort sequence of entries in the directory, enter a blank before a name. This entry then moves up to the first place (e.g. enter the name " Tom").

<i>i</i>	Control the cursor with   . Delete characters with  . Letters are always inserted to the left of the cursor.
----------	---


Using the directory and other lists




 

Dialling with the directory

	Open directory.
	Enter the first letter of the name. For example: with the name Emma (first letter "E") press the  key twice. The first name with "E" is displayed.
	If there is more than one entry starting with "E", select the name you want.
	Press the talk key. The number is dialled.

Dialling with the network access list (call-by-call)

With this function the prefix for a network operator can be inserted in front of a phone number ("chained").

 → MENU → EDIT ENTRY

 

 
 

either ...	Key in phone number:
	Enter phone number.
or ...	Select phone number from the directory:
	Open directory.
 	Select phone number and confirm.
... then	
	Press the talk key. The number is dialled.

Speed dialling (call-by-call) from the network access list

You can save eight numbers (2-9) in the network access list for speed dialling. To do so you must insert the number for speed dialling **in front** of the name of the network operator.

Example: Enter **2** and then the name of the network operator.






 → MENU → SHOW ENTRY

	Confirm.
	Move the cursor to the first position in the name field.
	Enter speed dialling number, e.g.  (press 4 times)
	Confirm.







 
<i>i</i>	When saving a new entry simply enter the speed dial number as the first digit.
-----------------	--

Using the directory and other lists






In order to use speed dialling:

either ...	
	Hold down speed dial number e.g. 2 <small>abc</small> : The previously saved network operator number is displayed.
	Enter phone number to be "linked".
or ...	
	Open directory.
 <input type="button" value="OK"/>	Select entry and confirm.
	Press the talk key.

View entry from directory/network access list and change




 

 or 	Open directory or network access list
 <input type="button" value="MENU"/>	Select entry and press display key.
 <input type="text" value="SHOW ENTRY"/> <input type="button" value="OK"/>	Select and confirm.
 <input type="button" value="OK"/>	Change phone number and confirm.
 <input type="button" value="OK"/>	If necessary change name (text entry page 31) and confirm.
	Long press (return to idle mode).

Delete single entry from directory/network access list

 or 	Open directory or network access list
 <input type="button" value="MENU"/>	Select entry and press display key.
 <input type="text" value="DELETE ?"/> <input type="button" value="OK"/>	Select and confirm.
	Long press (return to idle mode).

Delete directory/network access list

Deletion means the selected list is selected **with all entries**.

 or 	open directory or network access list
<input type="button" value="MENU"/>	Press display key to open menu.
	Press key  .
<input type="text" value="DELETE ?"/> <input type="button" value="OK"/>	Confirm safety check.
	Long press (return to idle mode).

 


Using the directory and other lists

Redial list

The last five numbers dialled are shown in the redial list. If names have been saved for these numbers in the directory, then these names will be displayed.

 






Redialling

You can dial a phone number from the redial list.

 



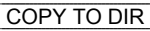
 





	Open redial list.
 	Select entry and press talk key. The phone number is redialled.

<i>i</i>	In order to extend or change the phone number, press MENU and confirm EDIT ENTRY mit OK .
-----------------	--

Delete redial list



	Open redial list.
	Press display key to open menu.
	Press key  .
 	Confirm safety check.
	Long press (return to idle mode).

Copy number from the redial list to the directory

	Open redial list.
 	Select entry and press display key.
  	Select and confirm.
 	If necessary change number. Confirm.
 	If necessary enter name (text entry page 31). Confirm.
	Long press (return to idle mode).

Using the directory and other lists

Caller list

Use the display key  to access the caller list and the answering machine/mail box. The **caller list** contains the numbers of the last 10 **missed** calls. Missed calls are displayed by a flashing symbol  when the phone is in idle mode.




Requirement for this: The caller's number has been sent (CLIP, page 12).


The caller list is shown in the display as follows:

CALLS	02/08	Number of old, previously read entries in the list
		Number of entries in the list

Open caller list and select entry


You can view entries in the caller list that have already been read.

	Open caller list.
 CALLS <input type="text"/> OK	Select and confirm. The last incoming call is displayed.
	Select entry.

<i>i</i>	For new incoming calls press the display key  . You can then immediately select a new entry.
----------	---





Calling back a caller from the list

Open caller list and select entry. **Then:**

	Press the talk key.
---	---------------------

Copying an entry from the caller list to the directory or deleting





Open caller list and select entry (see above). **Then:**

MENU	Press display key to open menu.
either ...	Copy phone number to the directory:
 COPY TO DIR OK	Select and confirm.
 OK	If necessary change number. Confirm.
 OK	Enter name (text entry page 31) and confirm.
or ...	Delete phone number:
OKDELETE <input type="text"/>	Confirm.
... then	
	Long press (return to idle mode).

Using the directory and other lists

Delete complete caller list

Open caller list (see above). **Then:**



 

	Press display key to open menu.
 <input type="text" value="DELETE LIST"/> 	Select and confirm. Caution: All old and new entries will be deleted.
	Long press (return to idle mode).

Establish date and time of a call

You can check in the caller list to see when a phone call was received.

Requirement: Date and time have been set (see page 11).

Open caller list and select entry (page 18). **Then:**

	Press display key to open menu.
 <input type="text" value="TIME"/> 	Select and confirm.
	Long press (return to idle mode).

Example:

23/12 15-56: The call came on 23.12. at 15.56.

If the clock is set on a 12-hour display, an "A" behind the time indicates the first half of the day and a "P" the second half (for example: "03-56P").

Registering and de-registering handsets

Registering and de-registering handsets

You can register up to six handsets with your base station.

Registration of a Gigaset A 2 handset that has not yet been registered with a base station takes place **automatically**. You must register **manually** all handsets from the 1000, 2000, 3000 and 4000 Gigaset ranges, as well as C1, C2 and S1 Gigaset handsets and those from other manufacturers.

Automatic registration: Gigaset A 2 handset






 
Automatic registration with a base station is only possible for those handsets supplied with it that have never been registered before.

For first-time registration, place your handset with its **display to the front** in the base station. The registration process lasts about a minute, with all symbols flashing in the display. The handset **automatically** receives the first unallocated internal number (1-6). After successful registration this number is shown in the top left of the display, e.g. "1". That means that the handset has been given the first internal number. If the internal numbers 1 to 6 have already been allocated (if six handsets have already been registered with a handset), number 6 is de-registered and replaced.

Manual registration: Gigaset A 2 handset

You must activate manual registration of the handset at both the handset and the base station.



1. At the handset

	Press display key to open menu.
  	Select and confirm.
 	Enter the system PIN for the base station (default setting: 0000) and confirm.

During the following registration process, all symbols will flash in the display.

2. At the base station

Within **60 secs.** of entering the system PIN

	<p>press the registration/paging key on the front of the base station for approx. 3 secs.</p>  <p>The registration process then starts.</p>
---	--

After successful registration the handset is automatically allocated the next free number, as described in the section "Automatic registration" (see above).

Registering and de-registering handsets


Specific registration: other handsets

Handsets from the 1000, 2000, 3000 and 4000 Gigaset ranges, C1, C2 and S1 Gigaset handsets, as well as other GAP-capable handsets can be registered as follows:

1. At the handset

Start the registration of your handset as described in the relevant operating manual.






2. At the base station

	Press the registration/paging key (page 20) on the front of the base station for approx. 3 secs. Registration is completed.
---	--

During registration the handset is automatically allocated the next free internal number (1–6). If all numbers are allocated, number 6 is overwritten.

De-registering handsets.

You can de-register any handset from another registered Gigaset A2 handset.

 INT	Open list of handsets.
 MENU	Select handset and press display key.
 DE-REG H/SET OK	Select and confirm.
 OK	Enter system PIN for the base station (default setting: 0000) and confirm.
DE-REGISTER? OK	Confirm safety check.
	Press end call key.

i






 

- ◆ The internal number disappears from the de-registered handset.
- ◆ Handsets that have not been de-registered retain their internal numbers.

Operating more than one handset

Operating more than one handset

Making internal calls and ending calls





Internal calls are those between handsets that are registered with the same base station. They cost nothing.


	Open list of handsets. Your own handset is identified by a "<".
either ...	Call a specific handset:
 	Select handset and press talk key.
or ...	
	Enter number of handset, e.g.  .
or ...	Call all handsets (collective call):
	Press star key. All handsets are called.
... then	End call:
	Press end call key.

i	If you receive a call during an internal call or collective call, the collective call will not be interrupted.
----------	--

Forwarding a call to another handset

You can forward an external call to another handset.



	Open list of handsets. The external caller hears the music on hold.
 	Select handset and press talk key. If the internal party replies, announce the external call.
	Press end call key. The external call is forwarded to the other handset.

i	Instead of announcing the call you can immediately press the end call key  . If the other internal party doesn't answer, or their phone is in use, the call will automatically return to you.
----------	--

Operating more than one handset


Internal enquiry call

You are in conversation with an **external** caller. You can call another internal party in order to speak to them, without having to lose the external call. Once you have finished this internal call, you are connected again with the external caller.

<input type="text" value="INT"/>	Open list of handsets. The external caller hears the music on hold.
 	Select handset and press talk key.
	End enquiry call:
<input type="text" value="MENU"/>	Press display key to open menu.
<input type="text" value="GO BACK"/> <input type="text" value="OK"/>	Confirm. You are reconnected with the external caller.

Accepting/rejecting a waiting call during an internal call

If you receive an external call during an **internal** one, you will hear the call waiting tone (a short tone). If you have CLIP (page 12), you will also see the number/name of the waiting caller. This function has to be applied for from the network operator

<input type="text" value="MENU"/>	Press display key to open menu.
either ...	End internal call, accept external call:
<input type="text" value="ACCEPT"/> <input type="text" value="OK"/>	Confirm. The internal call is ended .
or ...	Reject external call:
 <input type="text" value="REJECT"/> <input type="text" value="OK"/>	Select and confirm. The call waiting tone is turned off. You remain connected with the internal party.

<i>i</i>	If you reject the waiting call on your handset, it will still be heard on other registered handsets.
-----------------	--



Operating more than one handset

Barging in on an external call

You are on an external call. An internal party can barge in on this call and take part in the conversation. The barge-in is signalled to all participants in the call by a signal tone. It is only possible if the function **BARGE IN** is activated on the base station (default status: deactivated).



Activating/deactivating the function

 
MENU → BASE SET → ADD FEATURES

 BARGE IN OK	Select and confirm, in order to activate or deactivate link up (✓ = on).
	Long press (return to idle status).

Barging in


LINE IN USE is shown on your handset display. You would like to link up with an existing external call.

	Press the talk key. You are linked into the call. All parties hear a signal tone. CONFERENCE is shown in your handset display.
	End barge in:
	Press end call key (signal tone).

i	If one of the parties presses the end call key  , a signal tone sounds. The connection between the other handset and the external party remains open.
----------	--

Paging

If you have mislaid your handset, you can search for it with the help of the base station. Press the registration/paging key (page 20) on the front of the base station for no more than 2 secs. All handsets will then ring at the same time (paging).

To end the search, either press the registration/paging key again briefly or press the end call key  on a handset.





 
 
i	If you press the registration/paging key for more than 2 seconds, the base station will then go into registration mode. The handsets will then not ring.
----------	--

Handset settings

Your handset has default settings. You can change these settings individually.


Change display language




 




You can set the display texts to appear in one of a number of languages.

MENU	Press display key to open menu.
	Using the keys   call up the procedure.
	Press keys   for English (default status).

Other languages: see page 31

Activate/deactivate automatic call acceptance

For an incoming call simply take the handset out of the base station or charging unit, without having to press key  (default setting: on).



MENU	Press display key to open menu.
either ...	Deactivate automatic call acceptance:
	Press keys    .
or ...	Activate automatic call acceptance:
	Press keys    .

Change volume and ringtone

Loudspeaker volume

You can set the loudspeaker volume at three levels – even during an external call.

MENU → AUDIO SET → H/SET VOL

 OK	Select volume and confirm.
	Long press (return to idle status).

Handset settings



 
Ringer volume

You can choose between seven alternatives:

- ◆ Five ringer volumes (1–5),
- ◆ "CRESCENDO" (6; volume increases with each ring),
- ◆ "OFF" (0; no ringtone)

The current setting is marked with a ↓, e.g. "RINGER 5 ↓".

MENU → AUDIO SET → RINGER



 
 	Select volume and confirm.
	Long press (return to idle status).

Ringtones

You can choose between ten ringtones (1–10).

The current setting is marked with a ↓, e.g. "MELODY 1 ↓".



MENU → AUDIO SET → MELODY

 	Select ringtone and confirm.
	Long press (return to idle status).


Activate/deactivate ringer

All handsets ring to indicate an incoming external call. You can deactivate the ringer on your handset permanently or just for the current call. This can be done in the idle status or during an incoming call before it is accepted.

Deactivating the ringer permanently:

Press the star  key until the ringer can no longer be heard. The ringer is now **permanently** switched off. The symbol  appears in the display.

Reactivating the ringer:




Hold **down** the star key  in idle mode or during an incoming call before it is accepted.

<i>i</i>	To deactivate the ringer for the current call , open the MENU and confirm SILENT with OK.
----------	--

Activate/deactivate battery warning tone

With the function activated (default setting: on) you will be informed by an acoustic signal that the battery is almost flat.

Deactivate battery warning: MENU →   






Activate battery warning: MENU →   

Return handset to factory settings

You can return individual settings and changes to the original factory (default) settings (overview of handset default settings see page 30). Entries in the directory, the caller

Base station settings

list and network access list as well as registration of the handset with the base station remain unchanged.

 MENU	Press display key to open menu.
	Use the keys   to call up the procedure.
RESET ? 	Confirm safety check.





Base station settings

All base station settings are made via a registered Gigaset A 2 handset.

Changing the system-PIN

To protect the system settings from unauthorised access you should change the system-PIN (factory setting: 0000) to a PIN that only you know.



MENU → BASE SET → SYSTEM PIN

 OK	Enter the currently valid system PIN (4 digits) and confirm. For security reasons the entry is shown as four stars (****).
 OK	Enter new PIN (4 digits) and confirm.
 OK	Repeat new system PIN and confirm.
	Long press (return to idle status).

Return base station to factory (default) settings

A reset does not alter the system PIN; handsets remain registered. Overview of base default settings see page 31.


MENU → BASE SET → BASE RESET

 OK	Enter system PIN and confirm.
RESET ? 	Confirm safety check.

Appendix

Appendix

Questions and Answers

What happens if ...	Possible cause	Possible solution
... the display is blank?	The handset is not switched on. The batteries are empty.	Press the end call key  for approx. 5 secs. Charge or replace batteries (page 7).
... the handset doesn't react to a key being pressed?	The keypad protection is activated.	Press the hash key  for approx. 2 secs (page 8).
... all the icons are flashing in the display and there is no connection with the base station?	The handset is outside the range of the base station. The handset has not been registered. The base station is not switched on. The cable has not been correctly placed in the bottom of the base station.	Reduce distance between handset and base station. Register handset (page 20). Check power cable plug on base station (page 5). Check cable placement (page 5)
... (where multiple handsets are in use) the handset in the base station is not charging?	Charging in the base station only takes place when a phone call is not being made at the same time.	Use additional charger unit.
... the handset does not ring?	The ringer is switched off. The ringer volume has been set to "0". Call divert has been set on AUTOMATIC.	Switch on (page 26) ringer. Increase ringer volume (page 26).
... the caller can't hear me?	You've pressed the INT key. As a result the handset has been "muted".	Activate the microphone again with MENU, BACK, OK (page 13).
... despite CLIP, the caller's number is not displayed?	Sending the phone number (CLI) has not been enabled.	The caller should request the network operator to enable the transfer of his or her phone number.
... entries in the caller list don't show time or date?	Date and time have not been set.	Set date and time (page 11)
... I can't hear the ringer or dialling tone?	You have changed the phone cable on your Gigaset.	When buying a cable at a specialist shop make sure it has the correct plugs (page 32).
... I can hear an error tone (descending tone sequence) when keying in?	The task has been unsuccessful or the entry is faulty.	Repeat the process; watch the display when doing so and if necessary check with the operating manual.

Care

Wipe the base station and handset with a **damp** cloth or with an antistatic wipe. A dry cloth must **never** be used. This can cause static discharge.

Contact with liquid

Should the handset come in contact with liquid, **under no circumstances switch on the device. Remove all batteries immediately.**

Allow the liquid to drip out of the device and afterwards dab all parts dry.

Place the handset without the batteries in a warm, dry place for at least 72 hours. In many cases it will subsequently be possible to put the phone into service again.

Operation with a PABX


 

The following settings are only necessary if your PABX requires them, **please refer to the operating instructions for your PABX.**

Changing the dialling procedure

You have the following options for the dialling procedure:

- ◆ Tone dialling (DTMF),
- ◆ Pulse dialling (IWW).

MENU → BASE SET → ADD FEATURES → DIAL MODE

 	Select dialling procedure and confirm.
	Long press (return to idle status).

i

Temporary switch to tone dialling (DTMF)




If your PABX works with pulse dialling but you need tone dialling for a call (e.g. to listen to an external mail box/answering machine), you must switch to pulse dialling during the call.

Requirement: You have already started the call.

MENU → TEMP TONE


Setting the flash time





 
 


MENU → BASE SET → ADD FEATURES → TBR

 	Select flash time (80 ms, 100 ms, 120 ms, 180 ms, 250 ms, 300 ms or 600 ms) and confirm.
	Long press (return to idle status).

Appendix






 


Changing pause after line seizure

You can set the length of the pause that is inserted between pressing the talk key  and sending the phone number (default setting: 3 secs.).


	Press display key to open menu.
	Press keys     . "916 SET" appears in the display. The number for the currently set pause length flashes. 1 = 1 sec.; 2 = 3 secs.; 3 = 7 secs.; 4 = 2.5 secs.
 	Enter number and confirm.

Changing pause after recall key (dialling pause)

You can change the length of the dialling pause if your PABX requires this (refer to your PABX operating instructions).

	Press display key to open menu.
	Enter     . "912 SET" appears in the display. The number for the currently set pause length flashes. 1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms.
 	Enter number and confirm.

i

To insert a dialling pause between a prefix and a phone number: After entering the prefix, hold down the  key for 2 seconds. A "P" appears in the display. Then enter the phone number.

Other Settings

Factory settings of handset

	Default settings	Status after reset	Description
Loudspeaker volume	1	1	page 25
Ringer volume	5	5	page 26
Ringtones	1	1	page 26
Directory	empty	unaffected	page 14
Redial list	empty	empty	page 17
Caller list	empty	unaffected	page 18
Network ccess list	empty	unaffected	page 14
Automatic call acceptance	activated	activated	page 25
Battery warning tone	activated	activated	page 26
Display language	country specific	country specific	page 25, page 31

Factory settings of base station

	Default settings	Status after reset	Description
System PIN	0000	unaffected	page 27
Barge in	deactivated	deactivated	page 24
Pause after R key	800 ms	800 ms	page 30
Pause after line seizure	3 s	3 s	page 30
Flash time	250 ms	250 ms	page 29
Dialling procedure	MFV	MFV	page 29

Display language

Setting the display language page 25. Other languages:

(0+) (1_{ad}) for German, (0+) (3_{def}) for French, (0+) (4_{ghl}) for Italian,
 (0+) (5_{jkl}) for Spanish, (0+) (6_{mno}) for Portuguese, (0+) (7_{pqrs}) for Dutch,
 (0+) (8_{tuv}) for Danish, (0+) (9_{wxyz}) for Norwegian, (1_{ad}) (0+) for Swedish,
 (1_{ad}) (1_{ad}) for Finnish, (1_{ad}) (2_{abc}) for Czech, (1_{ad}) (3_{def}) for Polish,
 (1_{ad}) (4_{ghl}) for Turkish, (1_{ad}) (5_{jkl}) for Russian, (1_{ad}) (6_{mno}) for Croatian.

Character map and text entry

Either press the relevant key several times, or hold down.

	1 x	2 x	3 x	4 x	5 x	6 x
(1 _{ad})	blank	1				
(2 _{abc})	A	B	C	2		
(3 _{def})	D	E	F	3		
(4 _{ghl})	G	H	I	4		
(5 _{jkl})	J	K	L	5		
(6 _{mno})	M	N	O	6		
(7 _{pqrs})	P	Q	R	S	7	
(8 _{tuv})	T	U	V	8		
(9 _{wxyz})	W	X	Y	Z	9	
(0+)	+	0	-		?	_
(*) (Δ)	*	/	()	,	

Appendix

Technical data

Recommended batteries

Nickel-metal-hydride (NiMH) - Type AAA	
Sanyo Twicell 700 (700 mAh)	GP 700mAh (700 mAh)
Sanyo Twicell 650 (650 mAh)	Varta Phone Power AAA (700 mAh)
Panasonic 700mAh „for Dect“ (700 mAh)	YDT AAA SUPER 700 (700 mAh)

Handset operating times/charging times

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 170 (7 days)	approximately 13	approximately 5

Power consumption

- ◆ In standby mode (without charging) approx. 1.9 watts.
- ◆ In standby mode while charging approx. 4.6 watts.
- ◆ During a call approx. 2.1 watts.

General technical data

Feature	Value
The DECT standard	is supported
The GAP standard	is supported
Number of channels	60 duplex channels
Frequency range	1880 – 1900 MHz
Duplex mode	Time division, 10 ms frame length
Channel grid	1728 kHz
Bitrate	1152 kbit/s
Modulation	GFSK
Speech coding	32 kbit/s
Transmission power	Average 10 mW per channel
Range	up to 300 m outside, up to 50 m indoors
Power supply	Base station 220/230 V ~/50 Hz
Environmental requirements for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling methods	DTMF (tone dialling)/DP (pulse dialling)
Flash time	250 ms
Dimensions/base station	115 x 102 x 105 mm (W x L x H)
Dimensions/handset	55 x 152 x 30 mm (W x L x H)
Weight	Base station 138 g; handset with batteries 117 g

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

www.my-siemens.com/customer care

or by referring to the section entitled **Questions and answers** in this manual (page 28).

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi	0 26 42 38 00	Luxembourg	43 84 33 99
Argentina	0 80 08 88 98 78	Macedonia	02 13 14 84
Australia	18 00 62 24 14	Malaysia	03 21 63 11 18
Austria	05 17 07 50 04	Malta	00 35 32 14 94 06 32
Bahrain	40 42 34	Mauritius	2 11 62 13
Bangladesh	0 17 52 74 47	Mexico	01 80 07 11 00 03
Belgium	0 78 15 22 21	Morocco	22 66 92 09
Bosnia Herzegovina	0 33 27 66 49	Netherlands	0900-3333102
Brazil	0 80 07 07 12 48	New Zealand	08 00 27 43 63
Brunei	02 43 08 01	Norway	22 70 84 00
Bulgaria	02 73 94 88	Oman	79 10 12
Cambodia	12 80 05 00	Pakistan	02 15 66 22 00
Canada	1 88 87 77 02 11	Philippines	0 27 57 11 18
China	0 21 50 31 81 49	Poland	08 01 30 00 30
Croatia	0 16 10 53 81	Portugal	8 00 85 32 04
Czech Republic	02 33 03 27 27	Qatar	04 32 20 10
Denmark	35 25 86 00	Romania	02 12 04 60 00
Dubai	0 43 96 64 33	Russia	(800) 200 10 10
Egypt	0 23 33 41 11	Saudi Arabia	0 22 26 00 43
Estonia	06 30 47 97	Serbia	01 13 22 84 85
Finland	09 22 94 37 00	Singapore	62 27 11 18
France	01 56 38 42 00	Slovak Republic	02 59 68 22 66
Germany	01805 333 222	Slovenia	0 14 74 63 36
Greece	0 80 11 11 11 16	South Africa	08 60 10 11 57
Hong Kong	28 61 11 18	Spain	9 02 11 50 61
Hungary	06 14 71 24 44	Sweden	0 87 50 99 11
Iceland	5 11 30 00	Switzerland	08 48 21 20 00
India	01 13 73 85 89 - 98	Taiwan	02 25 18 65 04
Indonesia	0 21 46 82 60 81	Thailand	0 22 68 11 18
Ireland	18 50 77 72 77	Tunisia	0 71 86 19 02
Italy	02 66 76 44 00	Turkey	0 21 65 79 71 00
Ivory Coast	80 00 03 33	Ukraine	8 80 05 01 00 00
Jordan	0 64 39 86 42	United Arab Emirates	0 43 31 95 78
Kenya	2 72 37 17	United Kingdom	0 87 05 33 44 11
Kuwait	2 45 41 78	USA	1 88 87 77 02 11
Latvia	7 50 11 14	Vietnam	45 63 22 44
Lebanon	01 44 30 43		
Libya	02 13 50 28 82		
Lithuania	8 22 74 20 10		

Appendix

In some countries repair and replace services are impossible where the products are not sold through our authorised dealers.

Your Gigaset A200 is designed for operation in your country, as indicated on the packaging and on the device itself. Country-specific conditions have been taken into account. If you have any questions about the differences between the public phone networks, please contact your specialist dealer or network provider.

The CE mark attests to the phone's compliance with the essential requirements of the R&TTE directive.

Excerpt from the original declaration:

„We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH in compliance with ANNEX V of the R&TTE-Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/05/EC is ensured.“

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need a copy of the original DoC can be made available via the company hotline.

CE 0682

Menu overview

You can select a menu function more quickly by opening the menu and then entering a combination of digits, rather than scrolling through ("shortcut").

For example: MENU **3** ^{def} **1** ₀₀ **2** ^{abc} to set the time.

Main menu

Open the phone menu while it is in **idle mode**. Then:

2	AUDIO SET UP	2-1	H/SET VOL		
		2-2	RINGER		
		2-3	MELODY		
3	BASE SET	3-1	DATE/TIME		
				3-1-1	DATE SET
				3-1-2	CLOCK SET
				3-1-3	CLOCK MODE
				3-1-3-1	24 H
				3-1-3-2	12 H
		3-2	SYSTEM PIN		
		3-3	BASE RESET		
		3-4	ADD FEATURES		
				3-4-1	DIAL MODE
				3-4-1-1	TONE
				3-4-1-2	PULSE
				3-4-2	TBR
				3-4-2-1	80 MS
				3-4-2-2	100 MS
				3-4-2-3	120 MS
				3-4-2-4	180 MS
				3-4-2-5	250 MS
				3-4-2-6	300 MS
				3-4-2-7	600 MS
				3-4-3	BARGE IN
		3-5	PRESELECT	3-5-1	PRESELECT NO
				3-5-2	WITH PRESEL
				3-5-3	W/O PRESEL
5	REGISTER HS				

Menu overview

Directory key and network operator list key

Press key or key to open the relevant list, and press MENU.

The following **menu functions** will then be available:

EDIT ENTRY	Extend phone number and use to dial
NEW ENTRY	Save new phone number
SHOW ENTRY	Show/change phone number
DELETE	Delete entry

Caller list

Press display key . **Two lists** are then available:

MAILBOX	00
CALLS	00/00

i

The mailbox/answering service list is only available if you have registered for this service with your network operator and have received the relevant phone number.

Index

- A**
 - A200 Duo 7
 - Access protection 27
 - Activate
 - keypad lock 8
 - Audio warning
 - see Tone 26
 - Automatic call acceptance 25
- B**
 - Base station
 - making ready for service 4
 - registering handset 5
 - resetting to factory settings 27
 - Batteries
 - charging 7
 - insertion 6
 - recommended 32
 - Battery display 7
 - Battery warning tone 26
 - Blocking
 - external calls 27
- C**
 - Call
 - end 12
 - transfer 22
 - Call acceptance, automatic 25
 - Call all 22
 - Call waiting
 - internal call 23
 - Call-by-Call 15
 - Caller list II, 18
 - delete complete list 19
 - delete single entry 18
 - Calling
 - external 12
 - Calls
 - internal 22
 - Care of the phone 29
 - Character map 31
 - Charging time for handset 32
 - CLI 12
 - CLIP 12, 13, 18, 23
 - Confirmation tone 8
 - Cursor 14
 - Customer Care (Service) 33
 - Customer service 33
- D**
 - Date
 - establish for a call 19
 - set 11
 - Deactivate
 - keypad lock 8
 - Default settings 27, 30
 - Delete
 - caller list 19
 - directory 16
 - network access list 16
 - Delete key 9
 - Dialling
 - internal 22
 - with directory 15
 - with network access list 15
 - Dialling pause 30
 - Dialling procedure 29
 - Directory
 - delete single entry/all entries 16
 - save phone number/entry 14
 - view and change entry 16
 - Directory key 36
 - Display
 - caller's number (CLIP) 12
 - change display language 25
 - in idle status 10
 - Display keys II, 9
- E**
 - End talk key II, 12
 - Enquiry call (internal) 23
 - Entry (directory)
 - delete 16
 - view and change 15, 16
 - External calls
 - blocking 27
- F**
 - Flash time 29

Index

H

Handset	
log off	21
making ready for service	6
operating and charging times	32
register	20
return to factory settings	26
search	24
silent alert	13
switch on/off	8
Handset access protection	27
Hash key	II, 8
Hearing aids	3
Hold music	13

I

Idle status (display)	10
Internal	9
calls	22
enquiry call	23
link up	24
Internal key	II
Internal phone number	II
IWV (impulse dialling procedure)	29

K

Keypad	
lock	8
lock/release	12
Keys	
display keys	9
on handset	9

L

Language (display)	
change	25
Link up	24
List	
caller	18
redialling	17
Lock	
keypad	8
Logging off handsets	21
Loudspeaker volume	25

M

Mailbox/answering machine symbol	9
Main menu	35
Making ready for service	
handset	4, 6
Medical equipment	3
Menu	
management	9, 10
symbol	9
Menu key	II
Microphone	II

N

Network access key	36
Network access list	
delete all entries	16
delete single entry	16
Network operator list	
save numbers	14
Number see Phone number	14

O

OK key	9
on/off key	II
Operating time for handset	32
Operation	
telephone system	29

P

Paging	24
Pause	
after R key	30
changing after obtaining line	30
Phone number	
save	14
show caller's (CLIP)	12
Phoning	
accept call	12
external	12
PIN (system PIN)	27
Power cable	5
Power supply unit	3, 5
Protective film	6

Q

Questions and Answers	28
---------------------------------	----

Index

R			
R key	II		
pause after	30		
Range	4		
Redial key	II		
Redialling	17		
redialling list	17		
Registration of handsets	20		
Repeat dialling			
symbol	9		
Returning call from caller list	18		
Ringer			
activate/deactivate	26		
ringtones	26		
volume	26		
Ringtone	26		
select	26		
S			
Safety precautions	3		
Service	33		
making handset ready for service	4		
Set			
date	11		
time	11		
Setting			
flash time	29		
ringer volume	26		
Settings			
loudspeaker volume	25		
Shortcut	35		
Signal tone	9		
Silent alert (handset)	13		
Speed dialling			
network operator prefixes	15		
Star key	II, 26		
Switch off			
handset	8		
Switching on			
handset	8		
System PIN			
change	27		
T			
Talk key	II, 12		
Technical data	32		
Telephone cable	5		
Telephone plug	5		
Telephone system			
setting dialling procedure	29		
setting flash time	29		
Telephone system (PABX)	29		
Text entry	31		
Time	II		
establish for a call	19		
set	11		
Time functions	11		
Tone			
battery warning tone	26		
signal tone	9		
Transfer	22		
V			
Volume			
loudspeaker	25		
ringer	26		



A31008- A200- J101- 2- 7619

Issued by
Information and Communication mobile
Schlavenhorst 88
D-46395 Bocholt

© Siemens AG 2003
All rights reserved. Subject to availability.
Right of modification reserved.
Printed in Germany (06/2003).

Siemens Aktiengesellschaft
<http://www.my-siemens.com>

No.: A31008-A200-J101-2-7619