

EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH.</p> <p>Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>

<b>CS</b>	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	<b>PL</b>	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
<b>SK</b>	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	<b>TR</b>	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
<b>RO</b>	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	<b>RU</b>	Уважаемые покупатель! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
<b>SR</b>	Poštovani potrošaču, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
<b>BG</b>	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
<b>HU</b>	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 Munich

© Siemens AG 2004  
All rights reserved. Subject to availability.  
Rights of modification reserved.

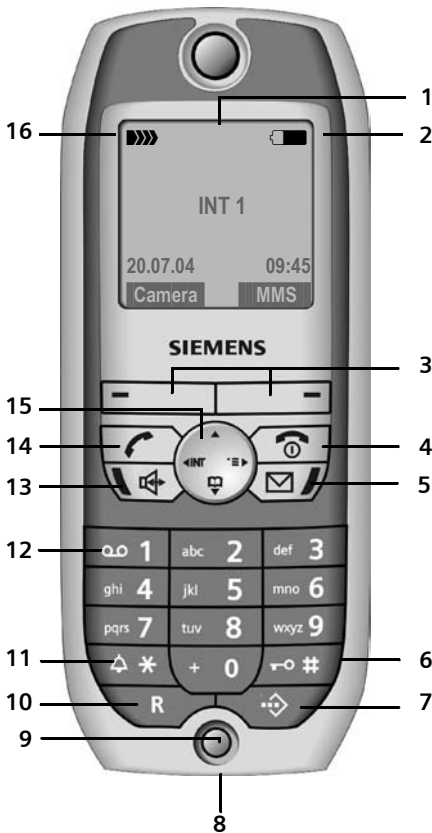
Siemens Aktiengesellschaft  
[www.siemens-mobile.com](http://www.siemens-mobile.com)



**Gigaset SL 74**

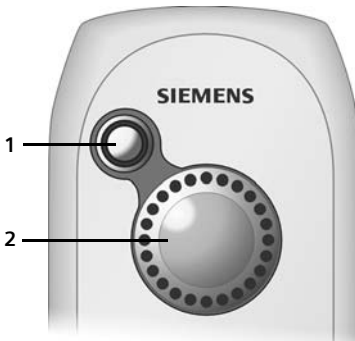
**Gigaset**

## Handset at a glance



1. **Display** (screen) in idle status (depending on the base station)
2. **Charge status of the battery**  
 [Battery icon] (flat to full)  
 [Battery icon] flashes: battery is almost flat/is charging
3. **Display keys** (see page 7)
4. **End call key, On/Off key**  
 End call, cancel function, one menu level back (short press), back to idle status (long press), handset on/off (long press in idle status)
5. **Message key**  
 Access to calls and messages lists, flashes: new message or call
6. **Hash key**  
 Keypad lock on/off (hold down)
7. **speed dial list key**  
 Open speed dial list
8. **Socket** for headset and PC interface
9. **Microphone**
10. **Recall key**  
 Initiate enquiry call (short press), Insert a dial pause (long press)
11. **Star key**  
 Ringer on/off (long press), Toggle between upper/lower case and digits
12. **Key 1**  
 Select answering machine/network mailbox (the answering machine in your network)(press and **hold** in idle status)
13. **Handsfree key**  
 Switch from "earpiece" to handsfree mode; Lights up: handsfree is activated; Flashes: incoming call, automatic last number redial
14. **Talk key**  
 Answer a call, switch from handsfree to earpiece mode, open last number redial list (short press, start dialling (long press)
15. **Control key** (see page 6)
16. **Signal strength**  
 [Signal strength icon] (high to low)  
 [Signal strength icon] flashes: no reception

### Back panel



### Back panel:

1. **Camera lens**
2. **Loudspeaker**

# Contents

<b>Handset at a glance</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>3</b>
<b>SL 74 – A handset with many extras</b> .....	<b>4</b>
<b>Preparing to use the handset</b> ...	<b>4</b>
Inserting the battery .....	4
Charging the battery .....	5
Registration .....	5
Changing the display language .....	6
Changing the base station .....	6
Activating/deactivating the handset ..	6
Activating/deactivating keypad protection .....	6
<b>Operating the telephone</b> .....	<b>6</b>
Control key .....	6
Display keys .....	7
Return to idle status .....	7
Notes on the operating instructions ..	7
<b>Date and time</b> .....	<b>8</b>
Setting the date and the time .....	8
Setting the alarm clock .....	8
Setting appointments .....	9
Displaying missed appointments, and anniversaries .....	9
<b>Making calls</b> .....	<b>10</b>
Making an external call .....	10
Ending calls .....	10
Making internal calls .....	10
Answering a call .....	10
Handsfree .....	11
Muting the handset .....	11
<b>Using the directory and lists</b> ...	<b>11</b>
Directory and speed dial list .....	11
Linking a call-by-call number with a phone number .....	14
Email directory .....	14
Displaying available memory .....	15
Last number redial list .....	15
<b>MMS</b> .....	<b>15</b>
Writing/sending MMS messages ....	16
MMS lists .....	18
Receiving and viewing MMS messages .....	19
Activating/setting up an MMS centre .....	20
<b>File Manager</b> .....	<b>21</b>
Editing entries .....	21
Pictures .....	22
Sounds .....	22
Texts .....	23
Memory .....	23
<b>Using the integrated camera</b> ...	<b>24</b>
Taking photographs .....	24
Changing settings .....	24
<b>Using several handsets</b> .....	<b>24</b>
Using a handset as a room monitor ..	25
Setting the Walk and Talk mode .....	26
<b>Handset settings</b> .....	<b>27</b>
Setting the display .....	27
Displaying a logo .....	27
Setting night mode .....	27
Activating/deactivating Auto Answer .....	27
Adjusting the loudspeaker volume ...	28
Ringer echo .....	28
Changing the ringer tone .....	28
Recording sounds .....	29
Activating/deactivating advisory tones .....	30
Restoring the handset factory settings .....	30
<b>Appendix</b> .....	<b>30</b>
Care .....	30
Contact with liquid .....	30
Customer Care .....	31
Specifications .....	31
Guarantee certificate (United Kingdom) .....	32
Guarantee certificate (Ireland) .....	32
PC Interface .....	33
"Balloon Shooter" game .....	34
Writing and editing text .....	34
Predictive text .....	34
<b>Index</b> .....	<b>36</b>

# Safety precautions

## Caution:

Before use, please read the safety precautions and operating instructions.  
Explain their contents and the risks involved in using the telephone to your children.



Use **only the mains adapter supplied**, as indicated on the underside of the charger.



Use only the rechargeable battery **recommended** (p. 31)! Never use conventional batteries (non-rechargeable) or other rechargeable battery types as this may cause significant damage to health and property.



Insert the rechargeable battery in accordance with the polarity symbols and use the battery type recommended in these operating instructions.



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive hum in hearing aids.



The handset is not watertight (p. 30).



Drivers must not use their phones while driving without a handsfree car kit (Walk and Talk function). Ensure that it cannot be switched on again accidentally.



Switch off your phone while on board an aircraft (Walk and Talk function). Make sure it cannot be switched on accidentally.



Do not use the phone in environments subject to explosion hazard (e.g. auto paint shops).



If you give your Gigaset to someone else, make sure you also give them the operating manual.



Dispose of the batteries and phone in accordance with environmental regulations.

## Note:

Not all of the functions described in these instructions are available in all countries.

## SL 74 – A handset with many extras

---

With your SL 74 you not only have an integrated digital camera and the ability to send and receive MMS messages via the fixed network (p. 19); your SL 74 can do much, much more:

- ◆ Link photographs and directory entries – and put a face to the caller (p. 14).
- ◆ Record your favourite melody with your handset and design your own personal ringer tone (p. 29).
- ◆ You can mark the directory entries of particularly important callers as VIP – then you can tell by the melody who is phoning (p. 12).
- ◆ Save appointments (p. 9) and birthdays (p. 13) in your SL 74 – Your handset will remind you in good time.

**Have fun with your new Gigaset SL74!**

## Preparing to use the handset

---

The pack contains:

- ◆ one handset SL 74,
- ◆ one data cable,
- ◆ one rechargeable battery,
- ◆ one battery cover,
- ◆ one charger (incl. power supply unit),
- ◆ one set of operating instructions.

The display is protected by a plastic film.

**Remove the protective plastic film!**

## Inserting the battery

---

### Caution:

Use only the rechargeable battery recommended by Siemens on page 31! Never use conventional batteries (non-rechargeable) or other types of rechargeable battery as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged.

1. Insert the battery **the right way round** and make sure it sits properly.

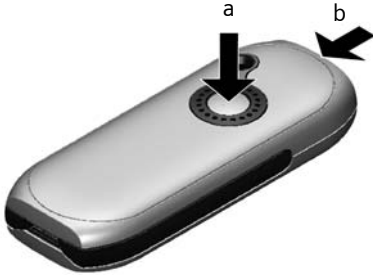


2. Position the battery cover at a slight angle and slide it with the two lower lugs into the case. Then push the cover towards the camera until it closes with a click.



### Opening the battery cover.

 
1. Hold the handset with the keypad facing down.
2. Place the thumb of the other hand on the mirror near the loudspeaker (a) and with the index finger of the same hand press the grooved area on the handset (b).



3. Lift the cover.

### Charging the battery

1. Plug the charger's power supply unit into a mains socket.
2. Place the handset in the charger with the **display up**.

Now leave the handset in the charger for the battery to charge. Battery charging is indicated in the top right of the display by changes in the level indicator on the battery icon .

#### First charging and discharging of the battery:

The battery charging status is correctly displayed only after uninterrupted charging **and** discharging.

For the initial charge we recommend leaving the handset in the charger **continuously for five hours**. Then remove the handset from the charger and do not recharge it until the battery is completely flat.

After initial charging **and** discharging, you can replace your handset in the charger after each call.

#### Please note:

- ◆ You must always repeat this procedure when you remove the battery from the handset and replace it again.
- ◆ The battery heats up during charging. This is normal and not dangerous.
- ◆ After a while the charge capacity of the battery will decrease for technical reasons.

### Registration

You have to **manually register** your SL 74 before you can use it. It can be registered on up to four base stations.

You must initiate handset registration on the handset and on the base station.

#### 1. On the handset



→ **Handset** → **Register H/Set**



Select base station, e.g. **Base 1** and press **OK**.



Enter the system PIN of the base station (the default is 0000) and press **OK**. In the display you will see for example **Base 1** flashing.

#### 2. On the base station

Please refer to the operating instructions for the base station to find out how to initiate handset registration on the base station.

#### SL 74 on data-enabled ISDN base stations

(CXxxx/SXxxx-series and SLX740isdn base stations)

Your handset automatically registers on data-enabled ISDN base stations **twice** for faster transmission of MMS messages:

- ◆ Once as handset, e. g. **Internal 11**.
- ◆ Once as data module, e. g. **INT 41:PC 41**.



## Operating the telephone


### Please remember:


- ◆ When you de-register your handset from a data-enabled ISDN base station, you have to do so individually as a handset and then as a data module.

## Changing the display language


 
 
 
You can view the display texts in different languages.

 →  → **Handset** → **Language**

 Select language. The current language is marked with √.

 **Long press** (idle status).


You have selected a language you do not understand:

 Press    and then choose the right language.

## Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

 →  → **Handset** → **Select Base**

 Select one of the registered base stations or **Best Base** and press **OK**.

### To ensure your Gigaset is always completely up to date...

You can download firmware updates from the Internet.

Do the following:

- ◆ Use the data cable supplied with the pack to connect the PC to the handset.
- ◆ On the Internet, go to <http://www.siemens-mobile.com/gigaset174> and click on the link "Service downloads".
- ◆ Then load the firmware update to your handset.

## Activating/deactivating the handset



Hold down the end call key to switch the handset on or off.

You will hear the confirmation tone.

 
The handset activates automatically when placed in the charger. The display is illuminated. You can switch off display illumination, see page 27.

## Activating/deactivating keypad protection

### Activating the keypad lock:



Hold **down** the hash key.

You will hear the confirmation tone and the symbol  will appear in the display.

### Caution:

When the keypad lock is active you **cannot call emergency numbers**.

### Deactivating the keypad lock:

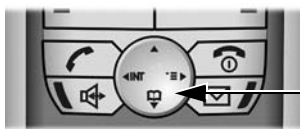



Hold **down** again.

The key lock deactivates automatically if someone calls you. It re-activates when the call is finished.

## Operating the telephone




### Control key







In these operating instructions, the side (top, bottom, right, left) of the control key you have to press in each situation is shown in black ( for right).

The control key has the following functions:

**In handset idle status:**





-  Open directory.
-  Open menu.
-  Open list of handsets.

**In lists and menus:**

-  /  Scroll up/down.
-  Confirm the selected entry (same as **OK**).
-  Go back one menu level, or cancel.

**In an input field:**

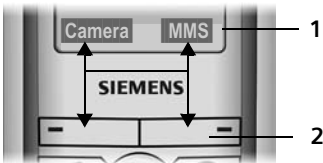
Use the control key to move the cursor up

, down , right  or left .

**Display keys**








The functions of the display keys change depending on the operating situation.

Example:




1. Current display key functions are shown in the bottom display line.
2. Display keys

The most important display icons are:

-  Open the last number redial list.
-  Open the main menu or a context-sensitive menu.
-  Delete key: Delete input from right to left.
-  Go back one menu level, or cancel.
-  Open email directory.
-  Open directory.
-  Copy a number to the directory.

**Return to idle status**

Reverting to idle status from anywhere in the menu:

- ◆ Press the end call key  and hold down or
- ◆ Press no key: The display **automatically** reverts to the idle status after 2 minutes.

Changes which you have not confirmed/ stored by pressing **OK**, **Yes**, **Save**, **Send** or **Save Entry OK** will be rejected.

The display in idle status is shown on page 1.

**Notes on the operating instructions**

The following symbols are used in these operating instructions:

**Copy Entry/Copy List**

Choose one of the two menu functions (the slash / means "or").



Enter numbers or letters.

 
The current functions for the display keys are shown reverse highlighted and are offered in the bottom display line. Press the display key underneath to apply the function.



Press the top or bottom of the control key (scroll up or down).


 




Press the right or left side of the control key (e. g. select setting).




Press the handset key shown.

The operating instructions show the steps you have to take in abbreviated form. This is shown below using "Handsfree Volume setting" as an example:

<b>Step 1:</b>		
<b>Step 2:</b>		
<b>Step 3:</b>	<b>Handset Volume</b>	Select and press <b>OK</b> .
<b>Step 4:</b>		Select volume.
<b>Step 5:</b>	<b>Save</b>	Press the display key.
<b>Step 6:</b>		<b>Hold down</b> (idle status).

1. With the handset in idle status, press on the right of the control key to open the main menu.

Use the control key to move to the  icon. This is done by pressing the appropriate arrow on the control key.



**Audio Settings** appears on the top line of the screen. Press the display key **OK** to confirm the selection. You will see the **Audio Settings** menu.


2. Press the bottom of the control key repeatedly until **Handset Volume** appears on the screen and confirm your choice with **OK**.
3. Press the left (quieter) or right (louder) side of the control key to select the required volume.
4. Press the display key under **Save** to apply the change.
5. Press and hold the end call key to return to the idle status.


## Date and time

### Setting the date and the time

 
The date and time have to be set if you want to know exactly when calls were received.

 →  → **Date/Time**

 In the **Date:** line, enter the day/month/year (6-digit).

 Scroll to the **Time:** line.




Enter the hours/minutes (4-digit format), e.g.  for 7:15 am.

    for 7:15 am.



Scroll to the **Time Mode:** line.



Choose between 12-hour - and 24-hour mode. In 12-hour mode you can scroll to the **Time:** line and then use the display key  to switch between **am** and **pm**.

**Save**

Press the display key.

### Setting the alarm clock

**Precondition:** The date and time have already been set (p. 8).

### Activating /deactivating and setting the alarm clock



→ **Alarm Clock**



In **Alarm Clock:** select **On** or **Off**.




Scroll to the **Time:** line and enter the alarm call (4-digit format).

**Save**

Press the display key.



**Hold down** (idle status). You will see the  icon.

The alarm will only ring if the handset is in idle status. A wake-up call with selected ringer melody (p. 28) is signalled on the handset. The alarm will ring for 60 seconds if it is not answered.

### Deactivating a wake-up call



Press the display key **Silence** or any key to turn off the wake-up call.

## Setting appointments

You can use your handset to remind yourself of up to 30 appointments (for volume and melody settings see page 28).



### Saving appointments



**Precondition:** The date and time have already been set (p. 8).

 →  → **Set Appoints.**


**New Entry** Select and press **OK**.

 In **Appoint.:** select **On** or **Off**.


  Scroll to the **Date:** line and enter the day/month in a 4-digit format.

  Scroll to the **Time:** line and enter the hours/minutes in a 4-digit format.


 
**am/pm** If in 12-hour mode (p. 8): you can switch between **am** and **pm**.

 Scroll to the **Notes:** line.

**Edit** Press the display key.

 Enter text (max. 32 characters) to appear in the display when the appointment is due, and press **OK**. If you do not enter a text, the display will then show "Appointment ..." when it is due.




**Save** Press the display key.

 **Hold down** (idle status). You will see the icon .


The appointment will be displayed in the appointment list with its date and time.

The handset will only display an appointment when it is in the idle status. An appointment is signalled with the selected ringer melody (p. 28). In the display you will see for example **Appoint. 2**. The appointment call will ring for 30 seconds if it is not answered.

## Managing appointments

 →  → **Set Appoints.**  
→  (Select appointment)

### Viewing and changing appointments:


**View** Press the display key. The appointment is displayed. Press  to return to the list.

 
**Edit** Press the display key if you want to change the entry. Make the changes.

**Save** Now press the display key to save the changes.

 **Hold down** (idle status).

### Using other menu functions:

 Open menu.

You can now select the following functions with  and confirm your choice with **OK**:

**Edit Entry** Change selected appointment.

**Delete Entry** Delete selected appointment.

**Delete List** Delete all appointments.

## Switching off or answering an appointment alarm

Press the display key **Silence** to switch off the appointment alarm, or select **MMS** to respond with an MMS.

## Displaying missed appointments, and anniversaries

Missed appointments/anniversaries (page 9/page 13) are stored in the **Missed Dates** list.

- ◆ You do not keep an appointment/anniversary.
- ◆ The handset is switched off at the time of the appointment/anniversary.

## Making calls

The newest entry is at the beginning of the list.



→ → **Missed Dates**



Select appointment/  
anniversary.  
This will display information  
about the appointment/  
anniversary. A missed  
appointment is marked  
with , a missed anniversary  
with .

**Delete**

Press the display key to delete  
the appointment/anniversary.

Or:

**MMS**

Press the display key to write  
an MMS.



**Hold down** (idle status).

If there is a new appointment/anniversary  
in the list, the display shows **Appoint.**  
Pressing the display key also opens the  
**Missed Dates** list.

If the list contains 30 entries, the oldest  
entry is deleted when the next  
appointment call rings.

## Making calls

### Making an external call

External calls are calls using the public  
telephone network.



Enter the phone number and  
press the talk key

or



Hold **down** the talk key   
and then enter the phone  
number.

You can cancel the dialling operation with  
the end call key .

## Ending calls



Press the end call key.

## Making internal calls

Internal calls to other handsets that are  
registered to the same base station are  
free of charge.



Initiate the internal call.

### Calling a specific handset:



Enter the number of the  
handset.

### Calling all handsets ("group call"):



Press the star key. All handsets  
are called.

### Ending the call:



Press the end call key.

## Answering a call

An incoming call is indicated on the  
handset by: ringing, a display on the  
screen and the flashing handsfree  
key .

You can accept the call by:

- ◆ pressing the talk key or
- ◆ pressing the handsfree key or
- ◆ pressing display key **Accept** (external  
call, on analog base stations)

If the **Auto Answer** function has been  
activated (page 27), you can accept a call  
by removing the handset from the  
charger.

If the ringer is disturbing, press the display  
key **Silence**. You can take the call so long as  
it is displayed on the screen.

## Handsfree

You should inform your caller that you intend to use the handsfree function before you activate it.


### Activating/deactivating handsfree

#### Activate while dialling:



Enter the number and press the handsfree key.


#### Activate during a call:

Press  (the handsfree key).

#### Deactivate during a call:



Press talk key. This switches to "earpiece mode".

If you wish to place the handset in the charger during a call you must press the handsfree key  and hold it down as you do so.

### Adjusting the volume while in handsfree mode during a call



Press the handsfree key again.



Select volume.



Press the display key.

## Muting the handset

You can switch the handset microphone off. Your caller on the telephone will then hear a wait melody.

During an external call:



Mute the handset.



Reactivate the microphone.

## Using the directory and lists

There are:

- ◆ Directory,
- ◆ Speed dial list,
- ◆ Email directory,
- ◆ Last number redial list,
- ◆ SMS list,
- ◆ MMS list.


You can save a total of up to 200 entries in the directory, speed dial list and email directory (number depends on the size of the individual entries).


You create the directory, email directory, and speed dial list for your individual handset. You can however send the lists/entries to other handsets (p. 13).

#### Note:

- How to enter names is described from page 34.
- The **EATONI** predictive text function helps you to write names and email addresses (page 34).

## Directory and speed dial list

You can use the **telephone directory** to store numbers and the corresponding names. You open the directory in idle status using the  key.

You can use the **speed dial** list to manage your call-by-call numbers of network providers and other important numbers. You can assign speed dial digits to entries in the list (p. 12). You can open the speed dial list with the  key.

#### Size of entries:

Number: up to 32 digits  
Name: up to 16 characters

### Storing a telephone number in the directory

---

#### → New Entry



Enter number.



Scroll to the **Name** line and enter the name.



Scroll to the **Annivers.:** line if you want to enter an anniversary (see page 13).



Scroll to the **Picture** line if you want to assign a picture (p. 14).



Press the display key.

**Save Entry** Select and press **OK**.




**Hold down** (idle status).

If the cursor is in the **Annivers.:** line, you can save the entry with **Save**.

If your phone is connected to a PABX you may have to enter the access code (outside line code) as the first digit of your directory entry.

### Storing a telephone number in the speed dial list

---

You can assign **nine** entries on your speed dial list one of the digits 0, 2-9. If you hold down one of these digits while the handset is in the idle status and then press the talk key , the assigned number is dialled immediately.



#### → New Entry



Enter number.



Scroll to the **PublicKey:** line and enter the name.



Scroll to the **Enter key:** and select the speed dial digit.



 
Press the display key.



**Hold down** (idle status).


 
### Selecting entries in the directory and speed dial list

---



Open directory or speed dial list.

You have the following options:

- ◆ Scroll to the entry, i. e. press the  key until the name you want is selected (framed).
- ◆ Enter the first character of the name and then scroll to the name with the  key.
- ◆ Enter the first characters of the name until it is selected.

### Dialling with the directory/speed dial list

---



 
→  (Select entry)



Press talk key.

### Managing entries in the directory and speed dial list

---




→  (Select entry)

#### Viewing and changing entries:

##### **View**

Press the display key. The entry is displayed.  
Back with **OK** or:

##### **Edit**

Press the display key if you want to change the entry. Make any changes you want and save them with  → **Save Entry**.




**Hold down** (idle status).


#### Using other menu functions:



Open menu.

You can now select the following functions with :

##### **Display Number**

You can change or add to a saved number and then dial or use other functions by pressing .

##### **Edit Entry**

Change selected entry.

**Delete Entry**

Delete selected entry.

**VIP Entry** (directory only)

Mark directory entry as **VIP** (Very Important Person) and assign it a particular sound (p. 22) as ringer melody. You can then tell who is calling you from the ringer melody.

**Precondition:** Calling Line Identification.

**Copy and Edit** (directory only)

So that you do not have to enter a similar entry twice, you can create a **copy** and then **edit** the copied entry.

**Copy Entry**

Send an entry to a handset (p. 13).

**Delete List**

Delete **all** entries in the directory and speed dial list.

**Copy List**

Send a complete list to a handset (p. 13).

**Available Memory**





Display the number of free entries in the directory, speed dial list and email directory.

**Transferring a directory or speed dial list call to another handset**

You can send individual entries or the entire list to another SL 74-, SL 1-, S1-, C2 handset or a Comfort handset in the Gigaset 4000, 3000 or 2000 series.

**Preconditions:**

- ◆ The receiving handset can receive and send directory entries.
- ◆ Both handsets have been registered to the same base station.

 /  →  (Select entry; page 12)  
→  (Open menu)

**Copy Entry/Copy List**

Select and press **OK**.



Enter the internal number of the receiving handset and press **OK**.

**Yes/No**

To **Copy Entry**: Confirm whether you want to send another entry.



The successful transfer is confirmed with a message and with the confirmation tone at the receiving handset.

**Please note:**

- ◆ Assigned pictures and speed dial digits are not transferred.
- ◆ Entries with identical numbers are not overwritten.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

**Storing an anniversary in the directory**

You can store an anniversary for every number in the telephone directory. You can enter a time for the reminder call for that anniversary.

 →  (Select entry; page 12)

**View**

Press the display key.

**Edit**

Press the display key.



Scroll to the **Annivers.:** line.

**Edit**

Press the display key.



In the **Date:** line, enter the day/month (4-digit).



Scroll to the **Time:** line and enter the hours/minutes in a 4-digit format for the reminder call.



Scroll to **Prompt:** and choose how you want to be reminded (any sound or visually). For sounds from the File Manager you have to enter the time for the reminder call. For optical indication, the time entry is optional.

**OK**

Press the display key.

**Save**

Press the display key.



**Hold down** (idle status).



### Deleting anniversaries

Open the directory entry and scroll to the **Annivers.:** line. Then press the following display keys: **Edit**, **Delete** and **Save**.



### Anniversary reminder call

The handset sounds a reminder call with the ringer melody selected on the handset.

Stop the reminder call with the **Silence** key.


### Linking a picture to a directory entry

**Precondition:** Calling Line Identification.

 →  (Select entry; page 12)

**View** Press the display key.


**Edit** Press the display key.


 Scroll to the **Picture** line.

**Insert** Press the display key.

#### MyPictures /Images

Select and press **OK**.

 Select the picture. When you press **View**, the picture appears in the display. When you press **OK**, the picture is applied.


 Press the display key.

**Save Entry** Select and press **OK**.

The picture is displayed on the screen when that person calls.

### Deleting picture assignments

Open the directory entry you want to change (p. 12). Scroll to the line **Picture**.

 Open menu.

**Clear Picture** Select and press **OK**.

The picture is not deleted from the File Manager.

### Changing picture assignments

Delete the old picture assignment and assign a new one.

## Linking a call-by-call number with a phone number

This function can be used to put a network provider's prefix, which is stored in the speed dial list, in front of the telephone number.



Open the network access list.



Select entry.



Press the display key.

#### Display Number

Select and press **OK**.



Enter number.

You can also dial a number from the directory (page 12).



Press talk key. The number is dialled.

## Email directory

You can store email addresses in the email directory. The entries can be managed just like directory entries (p. 12).

### Storing a new email address



Open directory.

#### <E-Mail Directory>

Select and press **OK**.

#### New Entry

Select and press **OK**.



Enter email address




Press the display key.

#### Save Entry

Select and press **OK**.



**Hold down** (idle status).

During entry you can open the menu with  and use the following functions:



**Insert '.'/Insert '@'**


Select and press **OK**.

 
#### Predictive Text

Select and press **OK** to activate or deactivate the predictive text function.

## Displaying available memory

 →  (Select entry; page 12)

→  (Open menu)  
Select and press **OK**.

 **Hold down** (idle status).


 
Display the number of free entries in the directory, speed dial list and (p. 11) email directory (p. 14).

## Last number redial list

The last number redial list contains the ten last dialled numbers. If one of the numbers is in the directory, then the caller's name is displayed.

### Manual last number redial


Press the talk key  briefly.

  Select entry and press the talkkey again. The number is dialled.


When a name is displayed, you can have the respective phone number displayed by using the display key **View**.

### Managing entries in the last number redial list

 
Press the talk key  briefly.

 Select entry.


 Open menu.

You can now select the following functions with :

#### Automatic Redial

The number is dialled automatically every 20 seconds. The handsfree key flashes. The loudspeaker is activated. If the party answers, press the talk key . If the call is not answered, ringing stops after about 30 seconds. The function is cancelled automatically after ten failed attempts or if a call is received.

### Display Number

You can change or add to a stored number in the last number redial list. Then you dial it or use other functions by pressing .

### Copy to Directory

Add telephone number to the directory.

### Delete Entry

Delete selected entry.

### Delete List

Delete all entries.

## MMS

The **Multimedia Messaging Service** enables you to send and receive texts, pictures, photographs and sounds in one message. These elements are put together as a "slide show" in the MMS message. An MMS message comprises the content and an address header. You can send an MMS message to a telephone with MMS function, mobile telephone or an email address.

### Preconditions:

- ◆ Your network provider supports SMS within the fixed network.
- ◆ Before you can send and receive MMS messages with your SL 74 handset, it has to be registered to a base station that supports the sending and receiving of linked SMS messages.

Text messages are exchanged between MMS centres that are operated by service providers. You can only send and receive text messages via the MMS centre that is activated as the active send service centre.

An MMS message is normally sent via **Centre 1** (p. 20). Ask your service provider if it provides this service. It may require separate registration.

You can use EATONI predictive text to help you enter the text (p. 34).

## MMS

With the telephone in idle status, you can open the MMS function via display key

**MMS**.



## Writing/sending MMS messages

 →  → **MMS** → **New MMS**

### Putting together MMS content

An MMS message must contain at least one page of content.

An MMS page can contain text, picture/photograph/animation and sounds:

MMS Page 1/1	MMS Page 1/1
<b>Text:</b> <Empty>	<b>Sound:</b> <Empty>
<b>Picture:</b> <Empty>	
<b>Edit</b> ▼ 	<b>Insert</b> ▲ 

### Entering the text

In the **Text** input field:

**Edit** Press the display key. This opens the text editor.



Enter text.



Press the display key.

**Save Text** Select and press **OK**.

Using other text editor functions:



Press the display key.

### Delete Text

Delete all the text displayed in the editor.

### Insert Text Module

Insert text from the File Manager.

### Save Text Module

Save as text in the File Manager.

### Predictive Text

Activate or deactivate predictive text (p. 34).

### Select Language

Select entry language.

### Inserting a picture:

In the **Picture** input field:

**Insert**

Press the display key.

<New Picture>/MyPictures /Images/ Animations

Select and press **OK**. <New Picture> starts the integrated camera (p. 24). **MyPictures / Images/Animations** opens the corresponding list of pictures in the File Manager. Copy-protected images cannot be added.



Select picture and press **OK**.

### Inserting sounds:

In the **Sound** input field:

**Insert**

Press the display key.


<New Sound>/Sounds

Select and press **OK**. <New Sound> starts the sound recorder (p. 29). **Sounds** opens the list of sounds stored in the File Manager. Copy-protected sounds cannot be added.



Select sound and press **OK**.

### Other functions in the "Putting together MMS content" submenu:

Pressing the display key  in the overview display gives you access to the following functions:

#### Add Page

Insert a new page after the displayed page (max. number of pages = 10).

#### Send

Write MMS header (page 17).

#### Save

Store MMS message in the **MMS-Draft** list.

#### Preview Page

Open the page displayed in the overview mode in presentation mode.

## Preview Message

Play the MMS message currently being edited in the overview mode in presentation mode.

## Page Duration

Enter the display duration of the currently displayed page. The page is displayed for at least as long as the longest sound/longest animation lasts.

## Delete Page




If the MMS message has several pages, the currently displayed page is completely deleted.

If the MMS message has only one page, the content of this page is deleted.


## Properties

View properties of the MMS message.

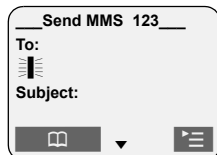
## Scrolling between pages:

- ◆ Enter number  of the page you want to view.
- ◆ Press  in **Text** to scroll to the previous page.
- ◆ Press  in **Sound** to scroll to the next page.

## Writing the MMS header

In overview mode select  → **Send** to put together the content of the MMS message.


 
The MMS header comprises the telephone number/email address and reference.




## Entering addressee:

In the **To** input field:



Enter telephone number (press display key ) or email address. If necessary, use  to change from "123" input mode to "abc" input mode.

### Note:


You can enter more than one addressee for an MMS message. Select  → **Add Recipient**. Separate addresses with a semicolon.

## Entering the reference:



Select entry field **Subject**:



Enter reference (max. 40 characters). You can use EATONI predictive text (p. 34) to help you enter the text. ( → **Predictive Text**).

## Using other overview mode functions:

### Send

Send MMS message (see page 18).

### Save

Store MMS message in the **MMS-Draft** list.

## Default settings

When you write an MMS message, the default settings will apply to this message unless you change them.



→  → **MMS** → **Settings** → **Presets**

### Expiry Time

Period during which the MMS centre tries to deliver the message:

**6 hours , 12 hours , 1 day , 1 week , Maximum**  
(Maximum period permitted by the service provider).

### Priority

Send priority: **Low , Normal , High**

## Page Duration

Display duration for an MMS page. Use this value to define how long an MMS page is to be displayed to the addressee. The MMS page is displayed for at least as long as the longest sound/longest animation lasts.

## Sending MMS messages

---

Your phone line is busy while an MMS message is being sent/received.

In overview mode for writing the MMS header:



Press the display key.

**Send**

Select and press **OK**. You are now told the size of the MMS message to be sent.

**Yes**

Confirm the prompt.  
The MMS message is sent.

All MMS messages sent are stored in the MMS outgoing message list.

If a problem occurs while the MMS message is being sent, this message will be stored in the MMS "not sent" list (p. 18).

## MMS lists

---

MMS messages are stored in four lists:

- ◆ **Inbox** (Incoming message list)  
Contains received MMS messages and notifications (p. 19).
- ◆ **Draft** (Draft message list)  
Contains drafts of MMS messages, sorted by date. Press **Send** to send MMS message, **Play** to play MMS message.
- ◆ **Sent** (outgoing message list)  
Contains sent MMS messages, sorted by date. Use **Delete** to delete displayed MMS message, use **Play** to play message.

## ◆ Unsent ("not sent" list)

Contains MMS messages if a problem arose during sending. Use **Send** to send MMS message, the MMS message is automatically moved to the outgoing message list. Use **Play** to play message.

## Opening lists

---



**MMS → Inbox/Draft/Sent/Unsent**

You can use the message key to open the MMS incoming messages list (p. 18) if there are new MMS messages.

## Menu options

---

Press for the following list options:

### Reply (Incoming message list)

Reply to an MMS message. The overview mode is opened for putting together the content of the MMS message (p. 16). The sender's phone number is automatically copied to the input field **To:** and the reference together with **Re:** to the reference line.

### Forward (Incoming/outgoing message list)

Forward the MMS message. The content of MMS messages for forwarding cannot be changed. The overview mode is opened for writing the MMS header (p. 17). **Fw:** is automatically added to the reference line.

### Edit (Incoming/outgoing/"not sent" list)

The content of an MMS message is copied to a new MMS message. Pictures/photographs, animations, sounds, texts and reference are copied, all other content discarded. The new MMS message is opened in overview mode for putting together the MMS content (p. 16).

### Edit (Draft message list)

The selected MMS message is opened in overview mode for putting together the MMS content (p. 16).

**Delete Entry** (Draft/"not sent"/ outgoing list)

Delete selected MMS message.

**Delete all** (All lists)

Delete all MMS messages in the list.


**Copy to Directory** (Incoming message list)

Store telephone number/email addresses from selected MMS message in telephone directory/email directory. Telephone numbers and email addresses are identified automatically.

**Mark as New** (Incoming message list)

Mark selected, already read MMS message as "new".

**Attachments** (Incoming message list)

List of objects attached to the selected MMS message is displayed. Press **View** / **Play** to open the selected object in the appropriate application. Press **Save** to save objects in the File Manager (p. 21). Install selected photographs/pictures/animations and sounds with  → **Install**.

**Properties** (All lists)

View properties of the selected MMS message.

**Capacity** (All lists)

Display available memory.

## Receiving and viewing MMS messages

---

While sending/receiving an MMS message, your telephone line or, with ISDN connections, one of the two telephone lines is busy.

### Receiving an MMS

---

The following settings for receiving MMS messages depend on the base station your handset is registered to:



- ◆ **Immediate** : MMS messages are transmitted direct to your telephone (CXxxx/SXxxx-series and SLX740isdn base stations).
- ◆ **Deferred**: MMS messages are saved in the network.

### To CXxxx/SXxxx-series and SLX740isdn base stations:

A notification about the sender and the size of the MMS message is added to the MMS incoming messages list. You can then download this MMS message from the network at your convenience.

**Other base stations:**

A text message is stored in the SMS incoming message list. When you open this text message, an MMS notification about the sender and the size of the MMS message is added to the MMS incoming messages list. The display shows a corresponding message. The SMS message remains in the SMS incoming message list until you delete it. You can download the MMS message from the network whenever it suits you.

 →  → **MMS** → **Settings** → **Retrieval Behav.**

**Immediate /Deferred**

Select and press **OK** (✓ = on).

### Select notification (CXxxx/SXxxx-series and SLX740isdn base stations only):

Notifications are stored in the incoming message list (p. 18).

**Note:**

Bear in mind that you can only download the MMS message during the period stated under **Expiry** in the notification!



Press to open the incoming message list.





Select notification.

**Receive**

Press the display key. The MMS message is downloaded from the network. Notification is deleted.

## Opening and viewing MMS messages

New MMS messages/notifications are indicated by the message **You have new messages** , by the  message key flashing and the confirmation tone.

When you open an MMS message, it is displayed in presentation mode.

### Note:

If an MMS message only contains a sound, an empty page is displayed and the sound played.

## Opening an MMS



Press to open the incoming message list.

**MMS:** MMS: If there are new entries in several lists: Select and press **OK**.







Select MMS.



Press the display key. The MMS message is opened.

## Presentation mode

The presentation mode plays the MMS message page by page. Presentation mode uses the entire screen. No display keys are available. You have the following options:



- ◆ Enter number  of the page you want to view.
- ◆ Press  to scroll to the next page.
- ◆ Press  to play the current page again.
- ◆ Press  twice to scroll to the previous page.

## Opening attachments

You can open/save/install MMS attachments via the incoming messages list (page 18).

## Activating/setting up an MMS centre

Up to 3 MMS centres can be set up. An MMS message is normally sent and received via **Centre 1**. **Centre 1** has been preconfigured for your country.

 →  → **MMS** → **Settings** → **Service Centres**


The list of MMS centres is displayed. The currently activated MMS centre is indicated.









**Centre 2** Select entry and press **OK**.









The settings of the selected MMS centre are displayed.

### Please note:

- ◆ If there is a preconfigured setting, only change it as instructed by your service provider!
- ◆ If you want to send an MMS via an MMS centre other than the one you have set, then you must change the MMS centre for your handset and the relevant data module (e.g. **Int41:PC 41**).

Use  to select the entry fields of the settings.

Centre 1	Centre 1
<b>Active Send:</b> ◀Yes ▶ <b>Server URL:</b> http:// 	<b>Dial in No. send:</b> 1234567  <b>Dial in No. receive:</b>
  	  

Centre 1	Centre 1
<b>Notification No.:</b> 1234567  <b>User Name:</b>	<b>Password:</b> xyz 
  	  


### Active Send

Is the MMS centre set up as the current send and receive centre (✓ = on)? If you want to change this setting, bear in mind that there always has to be one MMS centre activated as the current send centre. Save setting with **Save**.

**Server URL**

Web address of the MMS server. Save setting with **Save**.

**Dial in No. receive** (optional)/**Dial in No. send**

MMS send centre dial-up number for sending/receiving MMS messages. Save setting with  → **Save Entry**. If you do not enter a dial-up number for **Dial in No. receive**, the dial-up number entered for **Dial in No. send** will be used for sending and receiving messages.


**Notification No.**

Number of the SMS centre you receive notifications from. If **Notification No.** is not offered, you will have to enter the number of the SMS centre as additional SMS reception centre (see base station operating instructions).

**User Name** (Optional)

User name at this MMS centre. Save setting with **Save**.

**Password** (Optional)

If no password has been assigned, enter a password and save it with **Save**. If a password has already been assigned, it is shown as (\*\*\*\*\*). To change the password, delete it with . Enter a new password and save it with **Save**.

## File Manager

---

Your handset uses the File Manager to store various data types:

In menu	Data type	Formats
<b>MyPictures</b>	Own photographs	JPEG
<b>Images</b>	Graphics from any source	JPEG, BMP, GIF, PNG
<b>Animations</b>	Graphic sequences from MMS	Animated GIF
<b>Sounds</b>	Ringer tones, melodies	MIDI, MMF, AMR, iMelody, Gigaset melodies




<b>Text Modules</b>	Templates	Sent as Unicode/Unicode can be received
---------------------	-----------	---

A total of approx. 1 MB memory is available for the File Manager and MMS together.

For exchanging data with a PC see page 33.



 
 
## Editing entries

---

 →  → **MyPictures /Images/ Animations/ Sounds/Text Modules** →   
(Select entry)


## Renaming entries

---

 
-  Open menu.
- Rename** Select and press **OK**.
-  **OK** Edit the name (up to 16 characters, do not use spaces, special characters or umlauts) and press **OK**. The entry is stored with the new name.  
You cannot rename sounds that cannot be deleted ().
-  **Hold down** (idle status).

 
## Deleting entries

---

-  Open menu.

**Deleting a entry**

**Delete Entry** Select and press **OK**. The entry is deleted. Any ringer melody that is deleted is automatically replaced with Melody 4. A deleted logo is not replaced. If the entry cannot be deleted () , you will see an error message.

-  **Hold down** (idle status).



### Deleting all entries in a list

**Delete List** Select and press **OK**. All deletable entries in the list will be deleted.



**Hold down** (idle status).

### Sending entry as MMS



Open menu.

#### Send as MMS

Select and press **OK**.

Turn to section "Writing/sending MMS messages", page 16.

### Viewing properties



Open menu.

**Properties** Select and press **OK**. The name, format and size of the entry are displayed.



**Hold down** (idle status).

## Pictures

Own photographs are stored in **MyPictures**, all other pictures in **Images**. You have the same options with both types of images. Animated graphics are stored in **Animations** and cannot be used as a logo or in the directory.

### Viewing



→ → **MyPictures /Images/Animations**  
→ (Select entry)

#### View

Press the display key. The photograph/picture/animation is displayed.



Switch between entries. With **↩** you can return to the list.



**Hold down** (idle status).

### Installing pictures

You can use pictures as a logo or assign them to a directory entry so that it appears when the person with that number phones you.



→ → **MyPictures /Images**  
→ (Select entry)



Open menu.

#### Install

Select and press **OK**.

### Using picture as a logo

**as Logo** Select and press **OK**.

#### Yes

Press the display key to replace the current logo.



**Hold down** (idle status).

### Assigning a picture to a directory entry as CLIP Picture

Select and press **OK**.



Select the name you want to assign the picture to and press **OK**.

#### Yes

If another picture has already been assigned, press the display key to replace the picture.





**Hold down** (idle status).


## Sounds

### Note:

You can save sounds in the File Manager. How to record sounds is described in the section "Recording sounds" (p. 29).

## Playback

 → **Sounds** →  (Select entry)

**Play** Press the display key. Sounds are played back.  
Use the  key to go to the previous/next entry or to swap between entries.



**End** Press the display key. Playback ends. You will now see the **Sounds** sounds list again.

 **Hold down** (idle status).

While playing back the sounds, you can use the display key **Volume** to adjust the volume.


## Installation

You can assign different sounds for external calls, internal calls, appointments and alarm clock, or use the same sound for all of them.

 → **Sounds** →  (Select entry)

 Open menu.


**Install** Select and press **OK**.

 Select what the entry is to be used for and press **OK**. The entry is assigned to the category.

 **Hold down** (idle status).

## Texts


### Viewing

 → **Text Modules**  
→  (Select entry)

**View** Press the display key. The text is displayed.



## Adding a number to the directory


If the text contains a telephone number you can copy it to the directory. The number is marked automatically. If a text contains several numbers, then only one is marked at a time. Scroll down the text to have the next number marked.

 Press the display key. The number is added to the directory.

## Editing

You can edit text messages so that they can be sent as an MMS, for example. They can be up to 1,000 characters long.


 → **Text Modules**  
→  (Select entry) → **View**



**Edit** Press the display key. The text is displayed in edit mode. Use the display key  to save or delete the text, open predictive entry and select the language (section "Entering the text", page 16).

## Memory

You can make the file manager show how much memory is still available and what percentage of the individual sections is taken up.

**Please note:** If the maximum number of files used internally for saved MMS messages is exceeded, a message is displayed accordingly when an MMS is sent. In this case, please delete an MMS you no longer require even if, according to the file manager, there should still be memory available.



 Select **Capacity** and press **OK**.  
Use  to scroll in the list.

 **Hold down** (idle status).

## Using the integrated camera

---

You can take photographs and

- ◆ send them in an MMS message (p. 16),
- ◆ use them as a picture in the directory or as a logo (p. 22).


## Taking photographs

---



Use the screen as the viewer.

### Take

Press the display key to take a new photograph. You will see the photograph on the screen. Press the display key  to take a new photograph.

### Save/New

Press the display key to store the photograph or to take a new photograph.



**Hold down** (idle status).

You can view, rename and delete photographs (p. 21). If there is insufficient memory, the display does not change to search mode. Delete no longer required data in the File Manager or MMS lists.

## Changing settings

---

You can set the quality of the picture, its brightness and white balance:

- ◆ **Quality Normal:** 128 x 105 pixels
- ◆ **Quality High:** 352 x 288 pixels
- ◆ **Brightness Normal/High:** Depending on brightness
- ◆ **White Bal. Auto/Indoor/Outdoor**



→ **Camera setup**



Scroll to the **Quality** line.



**Normal** or select **High**.



Scroll to the **Brightness** line.



Select **Normal** or **High**.



Scroll to the **White Bal.** line.



Select **Auto**, **Indoor** or **Outdoor**.

### Save

Press the display key to save the settings.



**Hold down** (idle status).

## Viewing memory

---



**Info**

Used/available memory is displayed.



**Hold down** (idle status).

## Using several handsets

---

### Forwarding a call to another handset

---



Initiate the internal call. The external caller hears the wait melody.



Enter internal number or start group call. When the internal user answers: announce external call or immediately



Press the end call key. The external call is transferred to the other handset. If the internal user does not answer or is busy, the call will come back to you automatically (**Recall** appears in the display).

### Internal consultation calls

---

You can make an **internal** call while an **external** call is in progress.



Initiate the internal call. The external caller hears the wait melody.



Enter internal number.

### Ending enquiry call:

#### End

Press the display key. You are reconnected with the external caller.

## Accepting/rejecting call waiting during an internal call

If you get an external call while conducting an **internal** call, you will hear the call waiting tone (short tone).

### Ending internal call, accepting external call:

**Accept** Press the display key. The internal call is **ended**. You are connected to the external caller.

### Rejecting external call:

**Reject** Press the display key. The call waiting tone is turned off. You remain connected with the internal caller. The call waiting tone can still be heard on other registered handsets.

## Using a handset as a room monitor

With this function, a previously stored internal or external number is called when a set noise level in the room is reached. The room monitor **remains activated** on the handset even after you hang up.

The handset should be between 1 and 2 metres away from the baby. The microphone must be directed towards the baby.



When the room monitor is activated, incoming calls to the handset which is near the baby are indicated **without a ring tone**, they are just shown on the display. The display and the key pad are not illuminated.

### When entering an external telephone number, make sure:

- ◆ The handset must **not be blocked for outgoing calls**.
- ◆ The number to which the room monitor call is forwarded must not be blocked by an activated answering machine.

- ◆ Always check the settings of the room monitor before you leave home, e. g. sensitivity. Check the phone line if the room monitor is redirected to an external number.
- ◆ A room monitor stops calling an **external** number after around 90 seconds. Room monitor calls to an **internal** number (handset) stop after about 3 minutes.
- ◆ The room monitor function severely curtails the handset's operating time. Put the handset in the charger. This ensures that the battery does not go flat.
- ◆ The room monitor function can also be used in Walk and Talk mode.


## Activating the room monitor function and entering the "call to" number

 →  → Room Monitor


### Activate room monitor:


 In Room M.: select On.

### Enter the "call to" number:



 Scroll to the **Call to:** line.

**Edit** Press the display key. The input field for the phone number is opened.

 Enter **external number**. You can take the number from the directory or enter it manually.

 Press the display key.

**Save Entry** Select and press **OK**. The entry is stored.  
Only the **last 4 digits** of the number are displayed.

You can also enter an **internal number**: press the **INT** key and, depending on the base station, either select handset  and press **OK** or enter internal number  and press **Save**.

## Using several handsets

### Set the sensitivity:



Scroll to the **Level:** line.



Select sensitivity for the noise level (**Low** or **High**).

**Save**

Press the display key. The room monitor function is now activated.

#### Note:

Once the room monitor is activated, switch directly to the room monitor setting with (open menu).

## Deactivating the room monitor remotely

Take the call from the room monitor and press the keys. The room monitor function will deactivate around 90 seconds after the call ends. The room monitor will make no further calls. The other room monitor functions on the handset (e.g. no ringer) remain active until you press the **Off** display key on the handset.

To reactivate the room monitor function with the same telephone number, you must turn on the activation again and save with **Save**.

## Setting the Walk and Talk mode

The Walk and Talk function allows communication between two handsets (maximum range 300 metres) no matter how far they are from the base station.

### Precondition:

- ◆ Both handsets have been registered to the same base station (recommended for the room monitor function) **or**
- ◆ Both handsets are registered to different base stations and both are set to **Best Base** (p. 6) **or**
- ◆ One of the handsets is not registered to any base station and the registered handset is set to **Best Base** **or**
- ◆ Neither handset is registered to a base station.

In Walk and Talk mode the handsets cannot be reached by incoming calls. The handset operating times are **greatly** curtailed.

## Activating/deactivating the Walk and Talk mode



**Walk and Talk**

### Deactivating the Walk and Talk mode:

**Off**

Press the display key.

If, when you are in Walk and Talk mode, you press the talk key or the handsfree key , the call will go to all the handsets that are in Walk and Talk mode. The connection is made with the first handset to answer the Walk and Talk call.

- ◆ Ring and advisory tones are set in exactly the same way as if your handsets were in range of the base station (page 28).
- ◆ "Activate/deactivate ringer" (p. 29) and "Activate/deactivate keypad lock" (p. 6) are available in Walk and Talk mode.
- ◆ To open the menu, press the display key .
- ◆ The Walk and Talk mode is retained even when you switch your handset off and back on.

## Using a handset in Walk and Talk mode as a room monitor



Press the display key.

### Room Monitor



Select and press **OK**.



Scroll to the **Room M.:** line.



Activate the room monitor.



Scroll to the **Level:** line.

Select sensitivity for the noise level (**Low** or **High**).

**Save**

Press the display key. The room monitor function is now activated.

Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line.

The room monitor will only call handsets that are in the Walk and Talk mode.

Press the display key **Off** on the room monitor handset to deactivate the room monitor. The handset returns to the normal Walk and Talk mode.

## Handset settings

### Setting the display

You can choose from 4 colours and several contrast and brightness levels.

 →  → **Handset** → **Display**

#### Colour Scheme

Select and press **OK**.



Select colour and press **OK**.  
The current colour is marked with ✓.



**Short press.**

#### Contrast

Select and press **OK**.



Select contrast.



Press the display key.

#### Brightness

Select and press **OK**.



Select brightness.



Press the display key.



**Long press** (idle status).

### Displaying a logo

You can have a logo displayed while the telephone is in idle status.

 →  → **Handset** → **Display**

#### Screen Picture

Select and press **OK**. The current setting is displayed.



Activate/deactivate logo. Save with **Save**.

or



Scroll to the **Picture** line.




Press the display key to assign a picture.

#### MyPictures /Images

Select and press **OK**.



Select picture. When you press **View**, the picture appears in the display. You can move between the saved pictures by pressing . When you press **OK**, the picture is applied.




Press the display key.

#### Save Entry

Select and press **OK**.



**Long press** (idle status).

If you want to change the logo, delete the picture assignment with  **Clear Picture** **OK**. Then assign a new picture as described above.

### Setting night mode

The display is dimmed in idle state. When night mode is activated, the display illumination is switched off during idle state if the handset is in the charger.

 →  → **Handset** → **Display**



**Night mode** Select and press **OK** (✓ = on).



**Long press** (idle status).

### Activating/deactivating Auto Answer

If you have activated this function, when you get a call you can simply lift the handset out of the charger without having to press the talk key.

 →  → **Handset**

**Auto Answer** Select and press **OK** to activate or deactivate the function (✓ = on).



**Hold down** (idle status).

## Adjusting the loudspeaker volume

You can adjust the handsfree volume on five levels and the earpiece volume on three levels – you can even do this while an external call is in progress.



### Handset Volume

Select and press **OK**.



Select the handsfree talking volume (1–5).



Scroll one line lower and set the earpiece volume (1–3).

**Save**

 
Press the display key.



**Hold down** (idle status).

## Ringer echo

You can select an echo effect for the long ringer melodies (4–10).



### Ringer Echo

Select and press **OK** (✓ = on).



**Hold down** (idle status).

## Changing the ringer tone

You can choose any sound from the File Manager for the ringer tone. You can adjust the volume in six levels.

## Settings for external calls and time control

### Setting the volume and melody



→ **Ringer Settings**

**Ext. Calls**

Select and press **OK**.



Select volume.



Scroll to the next line.

**Edit**

Press the display key.



Select melody.

Using **Play** you can listen to the marked melody. You can move between the saved melodies by pressing . You can end the playback by pressing **End**.

**OK**

Press the display key.

**Save**

Press the display key to save the settings.

### Setting the time control



→ **Ringer Settings** → **Ext. Calls**

**Time C.**

Press the display key for time control.



In **Time ctrl**: select **On**.



Scroll to the **From**: line and enter the beginning of the time period (4-digit format).



Scroll to the **Until**: line and enter the end of the time period (4-digit format).



Scroll to the next line and set the ringer volume for this time period.







 
**Save**

Press the display key to save the time control.



 


**Hold down** (idle status).

## Settings for internal calls, wake-up calls and appointments

-  →  → **Ringer Settings**
-  Select setting, e. g. **Internal Calls**, and press **OK**.
-  Select volume (1–6).
-  Scroll to the next line.
- Edit** Press the display key.
-  Select melody. Using **Play** you can listen to the marked melody.
- OK** Press the display key.
- Save** Press the display key.
-  **Hold down** (idle status).


 
## The same settings for all functions

-  →  → **Ringer Settings**
- All** Select and press **OK**.
- Now set volume and ringer tone (as described in "Settings for internal calls, wake-up calls and appointments").
- Yes** Press the display key to confirm the prompt.
-  **Hold down** (idle status).

## Activating/deactivating the ringer

All handsets ring when there is an incoming call.

### Cancelling the ringer permanently

-  Press the star key and hold until the ringer cannot be heard any longer. The  icon appears in the display. To reactivate the ringer, press the star key and **hold**.

### Deactivating the ringer for the current call

- Silence** Press the display key


## Activating/deactivating the alert tone

In place of the ringer tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ringer tone.



Press and **hold** the star key and **within 3 seconds**:



Press the display key. A call is now signalled by **one** brief alert tone. You will now see  in the display.



To reactivate the ringer, press the star key and **hold**.

## Recording sounds

You can record melodies using the sound recorder (max. length 30 sec.) or transfer them by means of the data cable (max. 48 KB) (p. 33).

-  →  → **Sound Recorder**

### <New Sound>

Select and press **OK**.



Press the display key to start recording with the microphone. You can suspend recording with **Pause** and then continue with **record**.



Press the display key to end the recording. The recording is automatically repeated for you to check.



Press the display key to save/reject the recording and start again.



If required, delete the recommended name and enter a name for the sound (max. 16 characters, do not use spaces, special characters or umlauts) and press the **OK** display key.



**Hold down** (idle status).

Open the File Manager to play, edit or delete sounds (p. 22).



## Activating/deactivating advisory tones

Your handset uses "advisory tones" to tell you about different activities and statuses. The following advisory tones can be activated and deactivated individually.

◆ **Key click** (every key press is confirmed)

◆ **Acknowledge tones** (Confirmation tone, Error tone, End of menu tone)

◆ **Battery tone**



→ **Advisory Tones**



Scroll to the **Key Tones:** line and activate/deactivate key click.



Scroll to the **Confirm.:** line and activate/deactivate acknowledge tones.



Scroll to **Battery:** and choose **On, Off** or **during call**.

**Save**

Press the display key.



**Hold down** (idle status).

## Restoring the handset factory settings

You can reset individual settings and changes you have made. This will not affect entries in the directory, the calls list, the email directory or the speed dial list, the SMS lists, the MMS lists, the handset's registration to the base station and the contents of the File Manager.

Press to cancel the reset.



→ **Handset** → **Reset Handset**

**Yes**

Press the display key.



**Hold down** (idle status).

## Factory settings of the handset

Function	Factory settings	Page
Battery tone/Key click/Confirmation tone	on	page 30
Auto Answer	on	page 27
Room monitor/room monitor sensitivity	off//high	page 25
Display language	English	page 6
Ringer tone: Melody/time control	Melody 1/off	page 28
Volume: Earpiece/ ringer tone/ handsfree	1/5/3	page 28, page 28
MMS centre MMS1	country specific	page 20
System PIN	0000	page 5
Appointment name	deleted	page 9
EATONI predictive text	off	page 34
Last number redial list	empty	page 15
Alarm clock/ appointment	off	page 8p age 9

## Appendix

### Care

Wipe the handset with a **damp** cloth (use no solvent) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

### Contact with liquid

If the handset should come into contact with liquid, switch it off. **On no account switch the device on. Remove the battery immediately.**

Allow the liquid to drain out of the device. Then follow the instructions below:

1. Hold the device horizontally with the open battery case facing down.

2. Hold the handset vertically. Tilt the device slightly forwards and backwards, shaking it gently as you do so.
3. Pat all parts dry and keep the device in a warm, dry place **for at least 72 hours** with the battery compartment open and with the keypad facing downwards (do **not** place in a microwave, oven etc.).

In many cases, you will then be able to use it again.

## Customer Care

---

You have access to straightforward support concerning with technical aspects of your device and how to operate it through our Online Support on the Internet:

**[www.siemens-mobile.com/customer care](http://www.siemens-mobile.com/customer care)**

If you have any trouble with the equipment, please contact the **Siemens telephone service**:

**United Kingdom**      0 87 05 33 44 11  
**Ireland**                18 50 77 72 77

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

### Authorisation

This product is designed for world-wide operation, depending on national approval outside the European Economic Area (except Switzerland). Country-specific features are allowed for in the design. The CE sign confirms that the device meets the fundamental requirements of the R&TTE Directive.

### Excerpt from the original declaration

"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured." Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need a copy of the original DoC can be made available via the company hotline.

**CE 0682**

## Specifications

---

### Recommended battery

---

(Valid when these operating instructions were printed)

Lithium-Ion (Li-Ion), 700 mAh

The device is supplied only with a recommended battery.

### Handset operating times/charging times

---

Capacity	700 mAh
Standby time	approx. 115 hours (4 days)
Calling time	approx. 24 hours
Charging time	approx. 2 hours

These operating and charging times apply only when using the recommended battery.

## **Guarantee certificate (United Kingdom)**

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- ◆ This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens telephone service. The relevant number is to be found in the accompanying user guide.

## **Guarantee certificate (Ireland)**

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall

be valid for six months from the date of purchase.

- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - ◆ The device is opened (this is classed as third party intervention)
  - ◆ Repairs or other work done by persons not authorised by Siemens.
  - ◆ Components on the printed circuit board are manipulated
  - ◆ The software is manipulated
  - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - ◆ Devices fitted with accessories not authorised by Siemens
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.

- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

## PC Interface

---

You can connect the SL 74 handset to your computer using the data cable supplied. Your computer can then communicate with your SL 74 and access parameters and lists on your handset by means of a program you can download free of charge at <http://www.siemens-mobile.com/gigaset-sl74>. This permits:

- ◆ the downloading of polyphonic ringer tones and logos
- ◆ the synchronisation of Outlook contacts with the directory
- ◆ the synchronisation of Outlook appointments

During data transfer between the handset and the computer, the screen displays **Data Transfer**. During transfer, no entries are possible via the keypad and incoming calls are ignored.

## "Balloon Shooter" game


Try to hit as many balloons as you can.

### Starting the game

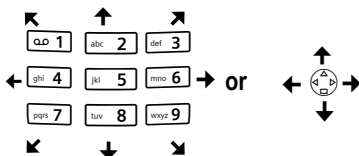
 →  → **Balloon Shooter**


**Start** Press the display key.

### Other options

To open the options menu, press the display key .





 
 
 
### To move the sights, press



To shoot the balloon, press .

## Writing and editing text

When writing a text:

- ◆ The cursor is controlled with    .
- ◆ Characters are added to the left of the cursor.
- ◆ Press the star key  **briefly** to switch from the "Abc" mode (upper case: 1st letter upper case, all others lower case) to "123", from "123" to "abc" and from "abc" back to "Abc". Press the star key  **before** entering the letter.
- ◆ Press the star key  **and hold**: Shows the selection line of the characters assigned to the star key.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

 
 
## Editing text (without predictive text)

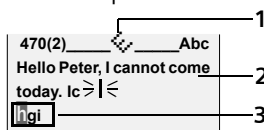
When you press a key **and hold it**, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

You can see in the display whether upper case, lower case or digits are selected: "A" or "a" appears on the bottom display line when you make an entry in the directory.

 
## Predictive text

 
The EATONI predictive text helps you to write MMS and SMS messages, plus names, in the directory, speed dial list or email directory.

Each key between  and  is assigned **several letters and characters**. These appear in a **selection line** immediately under the text panel (over the display keys) as soon as you press a key. The letter you are **most likely** looking for is **reverse highlighted** and is at the beginning of the selection line. It is copied into the text panel.



1. EATONI is activated
2. Text of the message
3. Selection line

If this letter is the one you want, confirm it by pressing the next key. If the letter selected by the EATONI is not the one you want, then press the **hash key**  repeatedly until the required letter appears reverse highlighted in the display line and is transferred to the text area.

If you press and **hold** the **hash key** , you will see the selection line of characters that are assigned to the hash key.

## Activating/deactivating predictive text

Predictive text is activated and deactivated according to specific functions.

**Precondition:** You are in a text input field (e.g. MMS, SMS, name in the directory, speed dial list or email directory).



Press the display key.

### Predictive Text

Select and press **OK** (✓ = on).



Press the end call key **briefly** to return to the text area. Now enter your text.

## Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The **sort order** is as follows:

1. Space (shown here as □)
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

If you want to work around the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will then move to the beginning of the directory.

Names which you have preceded with an asterisk will move to the end of the directory.

## Entering special characters

### Standard characters

	[ao 1]		[+ 0]	[*]	[#]
	*)	**) )			
1x	Space	Space	.	Abc-> 123	#
2x	1	↵	,	123 --> abc	@
3x	\	1	?	*	\
4x	£	€	!	/	&
5x	\$	£	0	(	\$
6x	¥	\$	+	)	/
7x	□	¥	-	<	
8x		□	:	=	
9x			¿	>	
10x			i	%	
11x			"		
12x			'		
13x			;		
14x			—		

\*) Directory and other lists.

\*\*) When writing a text message.

# Index

---

## A

Acknowledge tones	30
Advisory tones	30
Alarm clock	
activating/deactivating	8
assigning sound	23
setting	8
Alert tone	29
Anniversary	
not kept	9
reminder call	14
storing in the directory	12
Appointment	
activating/setting	9
deactivating	9
naming	9
not kept	9
setting the ringer	23, 29
Auto Answer	27
Automatic redial	15

## B

Balloon Shooter	34
Bar	
keypad lock	6

## Battery

charging	5
display	5
inserting	4
recommended battery	31

Battery tone	30
--------------	----

Belt clip	6
-----------	---

Best base station	6
-------------------	---

## Brief overview

handset	1
---------	---

Brightness (display)	27
----------------------	----

## C

### Call

ending	10
external	10
internal	10
transferring	24

Call waiting (internal call)	25
------------------------------	----

Call-by-Call numbers	11
linking with phone number	14

Camera	24
--------	----

changing settings	24
deleting photos	21
lens	1
memory	24
photographing	24
renaming photos	21
viewing photos	22

Cancel (operation)	7
--------------------	---

Care of the telephone	30
-----------------------	----

Changing the base station	6
---------------------------	---

Charge status display	5
-----------------------	---

Colour (display)	27
------------------	----

Confirmation tone	30
-------------------	----

Consultation call (internal)	24
------------------------------	----

Contents	4
----------	---

Contrast (display)	27
--------------------	----

Control key	6
-------------	---

## D

Data cable	33
------------	----

Date and time	7
---------------	---

### Deactivating

alarm clock	8
appointment call	9
handset	6
keypad lock	6
ringer (handset)	29
wake-up call	8

### Delete

anniversary	10
appointment	10
picture from directory	14
Delete key	7

### Digital camera, see Camera

Directory	11
-----------	----

adding number from MMS	19
------------------------	----

adding number from SMS text	23
--------------------------------	----

assigning a picture	12, 22
---------------------	--------

deleting pictures	14
-------------------	----

inserting picture	14
-------------------	----

memory	15
--------	----

opening the	7
-------------	---

order of entries	35
------------------	----

selecting an entry	12
--------------------	----

sending entry to a handset	13
----------------------------	----

storing a number	12
------------------	----

### Display

12/24 hour display	8
--------------------	---

changing language	6
-------------------	---

display keys . . . . .	1, 7
memory . . . . .	15
missed anniversaries . . . . .	9
missed appointments . . . . .	9
night mode . . . . .	27
setting . . . . .	27

## E

Earpiece mode . . . . .	11
Earpiece volume . . . . .	28
EATONI, see Predictive text	
Email directory . . . . .	14
Emergency number	
when keypad lock is active . . . . .	6
End call key . . . . .	1, 10
Enter dial pause . . . . .	1
Entry	
finding and dialling (directory) . . . . .	12
selecting (menu) . . . . .	7
Error/Error tone . . . . .	30
Escape key . . . . .	7
Exit	
call . . . . .	10

## F

Factory settings . . . . .	30
handset . . . . .	30
system PIN . . . . .	5
Fast acces, assigning key 1 . . . . .	1
File formats . . . . .	21
File Manager . . . . .	21
animated graphics . . . . .	21, 22
any graphics . . . . .	21, 22
assigning logo . . . . .	22
assigning sounds . . . . .	23
deleting an entry . . . . .	21
directory entry with picture . . . . .	22
editing entries . . . . .	21
editing text . . . . .	23
entry properties . . . . .	22
file formats . . . . .	21
installing sounds . . . . .	23
melodies . . . . .	21
memory . . . . .	23
number from SMS text to	
directory . . . . .	23
own photographs . . . . .	21
playing sounds . . . . .	23
renaming entries . . . . .	21
ringer tones . . . . .	21

sending entry as MMS . . . . .	22
templates . . . . .	21
viewing pictures . . . . .	22
viewing text . . . . .	23
Forward	
MMS . . . . .	18

## G

Game . . . . .	34
Group call . . . . .	10

## H

Handset	
activating/deactivating . . . . .	6
belt clip . . . . .	6
brief overview . . . . .	1
changing for best reception . . . . .	6
changing to another base	
station . . . . .	6
idle status . . . . .	7
list . . . . .	7
muting . . . . .	11
night mode . . . . .	27
operating and charging times . . . . .	31
preparing to use . . . . .	4
registering . . . . .	5
registering on another	
base station . . . . .	6
restoring factory settings . . . . .	30
setting the display . . . . .	27
use as room monitor . . . . .	25
using several . . . . .	24
Handset charging time . . . . .	31
Handsfree . . . . .	11
key . . . . .	1
setting volume . . . . .	11, 28
Hash key . . . . .	1, 6
Hearing aids . . . . .	3

## I

Idle status . . . . .	7
returning to . . . . .	7
Integrated camera . . . . .	24
Internal	
call . . . . .	10
enquiry . . . . .	24

## K

Key 1 (fast access) . . . . .	1
Key click . . . . .	30
Key press (confirmation tone) . . . . .	30



## Index

- Keypad lock. . . . . 6
  - activating/deactivating . . . . . 6
  - emergency number . . . . . 6
- Keys
  - cancel key . . . . . 7
  - confirmation tone . . . . . 30
  - control key. . . . . 6
  - delete key . . . . . 7
  - display keys . . . . . 1, 7
  - end call key . . . . . 1, 10
  - escape key. . . . . 7
  - fast access . . . . . 1
  - handsfree key . . . . . 1
  - hash key . . . . . 1
  - last number redial . . . . . 7
  - menu key . . . . . 7
  - message key . . . . . 1
  - On/Off key. . . . . 1
  - overview . . . . . 1
  - recall key . . . . . 1
  - speed dial key . . . . . 11
  - speed dial list key . . . . . 1
  - star key . . . . . 1
  - talk key . . . . . 10
- L**
- Language, see Display
- Last number redial list . . . . . 15
  - key . . . . . 7
  - managing entries. . . . . 15
- Last number redial, automatic . . . . . 15
- Lens . . . . . 1
- List
  - email directory. . . . . 14
  - handsets . . . . . 7
  - MMS . . . . . 18
- Logo. . . . . 27
  - picture from File Manager . . . . . 22
  - showing . . . . . 27
- Loudspeaker . . . . . 1
- Loudspeaker volume . . . . . 28
- M**
- Making calls . . . . . 10
  - accepting call. . . . . 10, 11
  - external. . . . . 10
  - internal . . . . . 10
- Medical appliances . . . . . 3
- Memory . . . . . 15
  - directory . . . . . 15
- File Manager. . . . . 23
- MMS lists . . . . . 19
- photograph. . . . . 24
- Menu
  - back one menu level . . . . . 7
  - end tone. . . . . 30
  - guidance through the menu . . . . . 6
  - key . . . . . 7
  - opening the . . . . . 7
- Message key. . . . . 1
- open list . . . . . 20
- Microphone . . . . . 1
- Missed
  - anniversary. . . . . 9
  - appointment. . . . . 9
- MMS . . . . . 15
  - "not sent" list . . . . . 18
  - adding number to the directory . . . . . 19
  - attachments . . . . . 19
  - default settings. . . . . 17
  - deleting entry from list . . . . . 19
  - draft message list . . . . . 18
  - editing . . . . . 18
  - entering text. . . . . 16
  - forwarding . . . . . 18
  - incoming message list. . . . . 18
  - inserting picture . . . . . 16, 22
  - inserting sounds . . . . . 16
  - lists . . . . . 18
  - memory . . . . . 19
  - MMS centre . . . . . 20
  - MMS properties . . . . . 19
  - opening attachment . . . . . 20
  - opening the . . . . . 20
  - outgoing message list . . . . . 18
  - presentation mode . . . . . 20
  - putting together content. . . . . 16
  - replying to . . . . . 18
  - sending . . . . . 16, 18
  - setting reception. . . . . 19
  - writing . . . . . 16
  - writing header . . . . . 17
- MMS centre
  - changing the number of . . . . . 20
  - setting . . . . . 20
- Muting (handset) . . . . . 11
- N**
- Network provider
  - (Number list) . . . . . 11

Night mode. . . . .	27
Noise level in room monitor mode . . . . .	26
Number adding to the directory. . . . .	12
adding to the directory (from text) . . . . .	23
adding to the directory (MMS) . . . .	19
<b>O</b>	
On/Off key . . . . .	1
Open directory . . . . .	7
list of handsets. . . . .	7
menu . . . . .	7
MMS . . . . .	20
Opening an attachment MMS . . . . .	19, 20
Operating time handset. . . . .	31
in room monitor mode. . . . .	25
in Walk and Talk mode . . . . .	26
Order in directory . . . . .	35
<b>P</b>	
PC Interface . . . . .	33
Photo white balance . . . . .	24
Photograph memory . . . . .	24
picture quality . . . . .	24
resolution . . . . .	24
saving . . . . .	24
sensitivity to light. . . . .	24
settings . . . . .	24
taking a . . . . .	24
viewing . . . . .	22
Picture deleting from directory. . . . .	14
editing. . . . .	22
inserting in MMS . . . . .	16, 22
inserting in the directory . . . . .	12, 14, 22
installing . . . . .	22
viewing . . . . .	22
white balance . . . . .	24
Picture quality (photographs). . . . .	24
Power supply unit . . . . .	3
Predictive text . . . . .	34
Preparing to use (the phone) . . . . .	4
Protective plastic film. . . . .	4

**R**

Recall key. . . . .	1
Register handset. . . . .	5
Reminder call . . . . .	14
Resolution (photographs) . . . . .	24
Ringer . . . . .	28
assigning from File Manager . . . . .	23
time control for volume. . . . .	28
Ringer echo . . . . .	28
Room monitor . . . . .	25
setting the noise level . . . . .	26

**S**

Safety precautions . . . . .	3
Select menu entry. . . . .	7
Send directory entry to a handset. . . . .	13
MMS. . . . .	16, 18
Setting alarm clock . . . . .	8
appointment. . . . .	9
camera . . . . .	24
date . . . . .	8
display . . . . .	27
display language . . . . .	6
earpiece volume . . . . .	28
loudspeaker volume . . . . .	28
melody. . . . .	29
ringer volume . . . . .	28
room monitor function . . . . .	25
time . . . . .	8
volume. . . . .	28, 29
Setting the date . . . . .	8
Setting the time . . . . .	8
Signal strength. . . . .	1
Signal tone, see Advisory tones. . . . .	30
Sounds inserting in MMS. . . . .	16
installing . . . . .	23
playing . . . . .	23
recording a . . . . .	29
Special characters entering . . . . .	35
Specifications. . . . .	31
Speed dial key . . . . .	11
Speed dial list. . . . .	11
editing a single entry. . . . .	12
key. . . . .	1
storing a number . . . . .	12

## Index

Star key. . . . .	1, 29
Storing	
directory entry. . . . .	12
number in the directory . . . . .	12
speed dial list entry . . . . .	12
Switch off, see Deactivate	
Switching on	
alarm clock . . . . .	8
appointment . . . . .	9
handset . . . . .	6
keypad lock . . . . .	6
room monitor . . . . .	25
Walk and Talk. . . . .	26
<b>T</b>	
Talk key. . . . .	10
Text	
editing. . . . .	34
predictive text . . . . .	34
special characters. . . . .	35
writing . . . . .	34
Time control	
ringer volume . . . . .	28
Tone	
confirmation/error/batt./	
end of menu . . . . .	30
error tone . . . . .	30
<b>V</b>	
VIP (directory entry) . . . . .	13
Volume. . . . .	28
during handsfree use . . . . .	11, 28
earpiece . . . . .	28
setting. . . . .	28, 29
<b>W</b>	
Wait melody . . . . .	11
Wake-up call	
deactivating. . . . .	8
setting the ringer . . . . .	29
Walk and Talk . . . . .	26
Warning tone, see Advisory tones . . .	30
White balance (photos) . . . . .	24