

EN	<p>Dear Customer,</p> <p>Gigaset Communications GmbH is the legal successor to Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), which in turn continued the Gigaset business of Siemens AG. Any statements made by Siemens AG or SHC that are found in the user guides should therefore be understood as statements of Gigaset Communications GmbH.</p> <p>We hope you enjoy your Gigaset.</p>	DA	<p>Kære Kunde,</p> <p>Gigaset Communications GmbH er retlig efterfølger til Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som fra deres side videreførte Siemens AGs Gigaset-forretninger. Siemens AGs eller SHCs eventuelle forklaringer i betjeningsvejledningerne skal derfor forstås som Gigaset Communications GmbHs forklaringer.</p> <p>Vi håber, du får meget glæde af din Gigaset.</p>
DE	<p>Sehr geehrte Kundin, sehr geehrter Kunde,</p> <p>die Gigaset Communications GmbH ist Rechtsnachfolgerin der Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), die ihrerseits das Gigaset-Geschäft der Siemens AG fortführte. Etwaige Erklärungen der Siemens AG oder der SHC in den Bedienungsanleitungen sind daher als Erklärungen der Gigaset Communications GmbH zu verstehen.</p> <p>Wir wünschen Ihnen viel Freude mit Ihrem Gigaset.</p>	FI	<p>Arvoisa asiakkaamme,</p> <p>Gigaset Communications GmbH on Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC)-yhtiksen oikeudenomistaja, joka jatkoi puolestaan Siemens AG:n Gigaset-liiketoimintaa. Käyttöoppaissa mahdollisesti esiintyvät Siemens AG:n tai SHC:n selosteet on tämän vuoksi ymmärrettävä Gigaset Communications GmbH:n selosteina.</p> <p>Toivotamme Teille paljon iloa Gigaset-laitteestanne.</p>
FR	<p>Chère Cliente, Cher Client,</p> <p>la société Gigaset Communications GmbH succède en droit à Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) qui poursuivait elle-même les activités Gigaset de Siemens AG. Donc les éventuelles explications de Siemens AG ou de SHC figurant dans les modes d'emploi doivent être comprises comme des explications de Gigaset Communications GmbH.</p> <p>Nous vous souhaitons beaucoup d'agrément avec votre Gigaset.</p>	SV	<p>Kära kund,</p> <p>Gigaset Communications GmbH övertar rättigheterna från Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som bedrev Gigaset-verksamheten efter Siemens AG. Alla förklaringar från Siemens AG eller SHC i användarhandboken gäller därför som förklaringar från Gigaset Communications GmbH.</p> <p>Vi önskar dig mycket nöje med din Gigaset.</p>
IT	<p>Gentile cliente,</p> <p>la Gigaset Communications GmbH è successore della Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) che a sua volta ha proseguito l'attività della Siemens AG. Eventuali dichiarazioni della Siemens AG o della SHC nei manuali d'istruzione, vanno pertanto intese come dichiarazioni della Gigaset Communications GmbH. Le auguriamo tanta soddisfazione con il vostro Gigaset.</p>	NO	<p>Kjære kunde,</p> <p>Gigaset Communications GmbH er rettslig etterfølger etter Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), som i sin tur videreførte Gigaset-geskjeften i Siemens AG. Eventuelle meddelelser fra Siemens AG eller SHC i bruksanvisningene er derfor å forstå som meddelelser fra Gigaset Communications GmbH.</p> <p>Vi håper du får stor glede av din Gigaset-enhet.</p>
NL	<p>Geachte klant,</p> <p>Gigaset Communications GmbH is de rechtsopvolger van Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), de onderneming die de Gigaset-activiteiten van Siemens AG heeft overgenomen. Eventuele uitspraken of mededelingen van Siemens AG of SHC in de gebruiksaanwijzingen dienen daarom als mededelingen van Gigaset Communications GmbH te worden gezien.</p> <p>Wij wensen u veel plezier met uw Gigaset.</p>	EL	<p>Αγαπητή πελάτισσα, αγαπητέ πελάτη,</p> <p>η Gigaset Communications GmbH είναι η νομική διάδοχος της Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), η οποία έχει αναλάβει την εμπορική δραστηριότητα Gigaset της Siemens AG. Οι δηλώσεις της Siemens AG ή της SHC στις οδηγίες χρήσης αποτελούν επομένως δηλώσεις της Gigaset Communications GmbH. Σας ευχόμαστε καλή διασκέδαση με τη συσκευή σας Gigaset.</p>
ES	<p>Estimado cliente,</p> <p>la Gigaset Communications GmbH es derechohabiente de la Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC) que por su parte continuó el negocio Gigaset de la Siemens AG. Las posibles declaraciones de la Siemens AG o de la SHC en las instrucciones de uso se deben entender por lo tanto como declaraciones de la Gigaset Communications GmbH.</p> <p>Le deseamos que disfrute con su Gigaset.</p>	HR	<p>Poštovani korisnici,</p> <p>Gigaset Communications GmbH pravni je sljednik tvrtke Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), koji je nastavio Gigaset poslovanje tvrtke Siemens AG. Zato sve izjave tvrtke Siemens AG ili SHC koje se nalaze u uputama za upotrebu treba tumačiti kao izjave tvrtke Gigaset Communications GmbH.</p> <p>Nadamo se da sa zadovoljstvom koristite svoj Gigaset uređaj.</p>
PT	<p>SCaros clientes,</p> <p>Gigaset Communications GmbH é a sucessora legal da Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), que, por sua vez, deu continuidade ao sector de negócios Gigaset, da Siemens AG. Quaisquer declarações por parte da Siemens AG ou da SHC encontradas nos manuais de utilização deverão, portanto, ser consideradas como declarações da Gigaset Communications GmbH.</p> <p>Desejamos que tenham bons momentos com o seu Gigaset.</p>	SL	<p>Spoštovani kupec!</p> <p>Podjetje Gigaset Communications GmbH je pravni naslednik podjetja Siemens Home and Office Communication Devices GmbH &amp; Co. KG (SHC), ki nadaljuje dejavnost znamke Gigaset podjetja Siemens AG. Vse izjave podjetja Siemens AG ali SHC v priročnikih za uporabnike torej veljajo kot izjave podjetja Gigaset Communications GmbH.</p> <p>Želimo vam veliko užitkov ob uporabi naprave Gigaset.</p>


<b>CS</b>	Vážení zákazníci, společnost Gigaset Communications GmbH je právním nástupcem společnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), která dále přejala segment produktů Gigaset společnosti Siemens AG. Jakékoli prohlášení společnosti Siemens AG nebo SHC, které naleznete v uživatelských příručkách, je třeba považovat za prohlášení společnosti Gigaset Communications GmbH. Doufáme, že jste s produkty Gigaset spokojeni.	<b>PL</b>	Szanowny Kliencie, Firma Gigaset Communications GmbH jest spadkobiercą prawnym firmy Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), która z kolei przejęła segment produktów Gigaset od firmy Siemens AG. Wszelkie oświadczenia firm Siemens AG i SHC, które można znaleźć w instrukcjach obsługi, należy traktować jako oświadczenia firmy Gigaset Communications GmbH. Życzymy wiele przyjemności z korzystania z produktów Gigaset.
<b>SK</b>	Vážený zákazník, Spoločnosť Gigaset Communications GmbH je právnym nástupcom spoločnosti Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), ktorá zasa pokračovala v činnosti divízie Gigaset spoločnosti Siemens AG. Z tohto dôvodu je potrebné všetky vyhlásenia spoločnosti Siemens AG alebo SHC, ktoré sa nachádzajú v používateľských príručkách, chápať ako vyhlásenia spoločnosti Gigaset Communications GmbH. Veríme, že budete so zariadením Gigaset spokojní.	<b>TR</b>	Sayın Müşterimiz, Gigaset Communications GmbH, Siemens AG'nin Gigaset işletmesini yürüten Siemens Home and Office Communication Devices GmbH & Co. KG (SHC)'nin yasal halefidir. Kullanma kılavuzlarında bulunan ve Siemens AG veya SHC tarafından yapılan bildiriler Gigaset Communications GmbH tarafından yapılmış bildiriler olarak algılanmalıdır. Gigaset'ten memnun kalmanızı ümit ediyoruz.
<b>RO</b>	Stimate client, Gigaset Communications GmbH este succesorul legal al companiei Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), care, la rândul său, a continuat activitatea companiei Gigaset a Siemens AG. Orice afirmații efectuate de Siemens AG sau SHC și incluse în ghidurile de utilizare vor fi, prin urmare, considerate a aparține Gigaset Communications GmbH. Sperăm ca produsele Gigaset să fie la înălțimea dorințelor dvs.	<b>RU</b>	Уважаемые покупатель! Компания Gigaset Communications GmbH является правопреемником компании Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), которая, в свою очередь, приняла подразделение Gigaset в свое управление от компании Siemens AG. Поэтому любые заявления, сделанные от имени компании Siemens AG или SHC и встречающиеся в руководствах пользователя, должны восприниматься как заявления компании Gigaset Communications GmbH. Мы надеемся, что продукты Gigaset удовлетворяют вашим требованиям.
<b>SR</b>	Poštovani potrošaču, Gigaset Communications GmbH je pravni naslednik kompanije Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), kroz koju je nastavljeno poslovanje kompanije Gigaset kao dela Siemens AG. Stoga sve izjave od strane Siemens AG ili SHC koje se mogu naći u korisničkim uputstvima treba tumačiti kao izjave kompanije Gigaset Communications GmbH. Nadamo se da ćete uživati u korišćenju svog Gigaset uređaja.		
<b>BG</b>	Уважаеми потребители, Gigaset Communications GmbH е правопреемникът на Siemens Home and Office Communication Devices GmbH & Co. KG (SHC), която на свой ред продължи бизнеса на подразделението Siemens AG. По тази причина всякакви изложения, направени от Siemens AG или SHC, които се намират в ръководствата за потребителя, следва да се разбират като изложения на Gigaset Communications GmbH. Надяваме се да ползвате с удоволствие вашия Gigaset.		
<b>HU</b>	Tisztelt Vásárló! A Siemens Home and Communication Devices GmbH & Co. KG (SHC) törvényes jogutódja a Gigaset Communications GmbH, amely a Siemens AG Gigaset üzletágának utódja. Ebből következően a Siemens AG vagy az SHC felhasználói kézikönyveiben található bármely kijelentést a Gigaset Communications GmbH kijelentésének kell tekinteni. Reméljük, megelégedéssel használja Gigaset készülékét.		

# SIEMENS

Be inspired



**Operating Instructions**

and safety precaution 

ENGLISH

# Brief overview



The display is protected by a plastic film.  
**Remove the plastic film.**

## Status LED

Lights up during a call;  
flashes for:

- incoming calls
- new messages
- alarm calls, appointments, anniversaries

## Signal strength

### Talk key

- Accept call
- Dial number

### Handsfree key

Switch from handset to handsfree talking

### Control key

### Open directory

### Key 1

Hold down to select answering machine/mailbox

### Ringer on/off

Hold down

### Keypad protection on/off

Hold down

## Charging status

flat    1/3  
 full    2/3

flashes: Caution

## Display keys

The display keys give you access to the functions shown in the display.

## End call and On/Off key

- End call
- Cancel function
- Back one menu level (press briefly)
- Return to idle status (hold down)
- On/off in idle status (hold down)

## Caller list/message list

## Sel Services key

Open network access list

## Microphone

# Control key and display keys

## Display keys



## Control key



The right **display key** lets you perform functions, some of which can also be controlled with the **control key**.


The **Control** is shown as follows in the operating instructions:

/ (left/right)

/ (up/down)

Press down on the side with the arrow filled in.

# Important menus

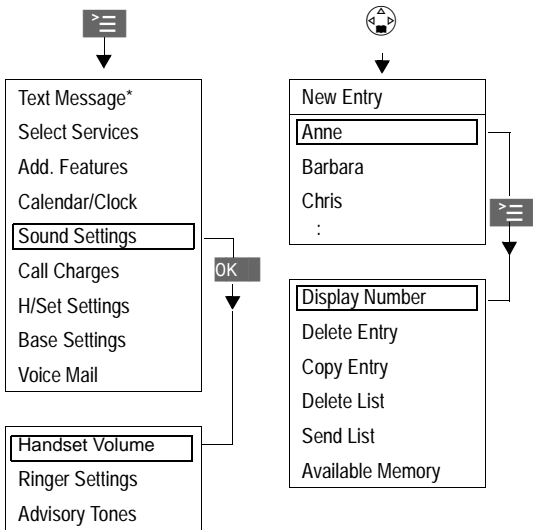

## Display symbols

The following symbols appear above the display keys depending on the situation:

Display keys	Meaning
	Menu key: Activates the main menu when the phone is idle. During a call, it activates a menu for the particular situation.
	Selects and confirms the menu function. Ends and saves an entry.
	Delete key (Backspace): Deletes characters from right to left.
	Automatic redial key: Opens a list of the last five numbers dialled.
	Displayed if SMS*, answering machine, mail service box or caller list is active
	One menu level back, cancel

\* Not available in all countries

# Safety precautions



**Only use the power supply unit supplied** as indicated on the underside of the device.



Only insert **approved rechargeable batteries of the same type**. Never use ordinary (non-rechargeable) batteries as they may pose a health hazard or cause injury.



Make sure the rechargeable batteries are inserted the right way round (as indicated in the battery compartment),



Use the batteries specified in these operating instructions (as indicated in the battery compartment)



The phone may affect medical equipment so always switch your phone off before entering hospitals or doctors' practices.



The handset may cause an unpleasant humming noise in hearing aids.



Do not operate the phone in places where there is a risk of explosion (such as paint workshops).



The handset is not splash-proof.



Drivers must not use the phone while driving (including the walkie-talkie function).



The phone must be switched off at all times in an aircraft (including the walkie-talkie function). Make sure it cannot be switched on accidentally.



If you give your Gigaset to someone else you should also give them the operating instructions.



Dispose of batteries and the phone carefully. Do not pollute the environment.

Not all the functions described in these operating instructions are available in all countries.

# Contents

---

<b>Brief overview</b>	<b>2</b>
Control key and display keys	2
Important menus	3
Display symbols	3
<b>Safety precautions</b>	<b>4</b>
<b>Preparing the handset</b>	<b>6</b>
Delivery package	6
Inserting the batteries (automatic registration)	6
Charging the batteries	6
Attaching the belt clip	7
Switching the handset on and off	7
Setting the date and time	8
Activating/deactivating the keypad lock	9
Changing the display language	9
<b>Registering the handset</b>	<b>10</b>
<b>Making calls</b>	<b>11</b>
Making an external call	11
Making internal calls	11
Answering a call	12
Open caller list/message list	12
Handsfree talking	12
Forwarding an external call, enquiry call	13
<b>Automatic redial</b>	<b>13</b>
<b>Directory and network</b>	
<b>access list</b>	<b>15</b>
Speed dialling from the network access list	16
Dialling with speed dialling	16
<b>Settings</b>	<b>21</b>
Setting the alarm clock	21
Activating the alarm clock	21
Deactivating the alarm clock	21
Turning off the alarm call	22
Setting an appointment	22
Handset and loudspeaker volume	23
Activating/deactivating warning and signal tones	25
Auto talk feature on/off	25
Resetting to the factory defaults	26
<b>Room monitoring (babyphone)</b>	<b>26</b>
Setting the room monitor	27
<b>Walk and Talk mode</b>	<b>28</b>
<b>Appendix</b>	<b>29</b>
Operating on base stations in the Gigaset family	29
Range	30
Guarantee	31
Customer Care	32

# Preparing the handset

 
## Delivery package

Gigaset 4000 Comfort handset, two batteries, charging unit, belt clip, operating instructions.

## Inserting the batteries (automatic registration)



- Make sure you insert the batteries **the right way round** – see diagram on the left.
- **Replace** the cover and push gently **upwards** until it clicks into place.
- **To open** press the grooved area on the cover and slide back.



Before activating your handset, place it in the **Gigaset 4010/4015 Comfort** base station **with the display facing upwards**. The handset is automatically registered; this is shown on the display (e.g. INT1)

If registration is successful you will hear a confirmation tone (rising sequence).

## Charging the batteries



Leave the handset for approx. five hours in the base station/charging unit to charge the batteries, as they are not charged when they leave the factory. The charging status icon flashes on the handset to indicate that the batteries are being charged:

- ☐ Batt. flat  
(battery symbol flashes)
- ◐ Batteries  $\frac{1}{3}$  charged


- ◑ Batteries  $\frac{2}{3}$  charged
- ◐ Batteries full



See the appendix for a list of recommended batteries.

- Once the initial charging process is completed you can replace your handset in the base station/charging unit after each call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging. This is normal and not dangerous.
- Opening the battery compartment unnecessarily may cause the wrong charging status to be displayed.

## Attaching the belt clip

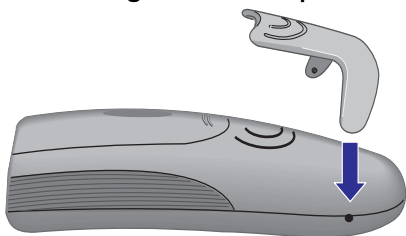

Push the belt clip onto the back of the handset until the lugs at the side click into place.

## Switching the handset on and off



To switch the handset on and off, **hold down** the end call key until you hear a confirmation beep (rising tone sequence).

The handset is switched on as soon as you insert the batteries and place the handset in the base station/charging unit.

# Setting the date and time

You need to set the date and time so that the time that messages and calls are received is shown correctly.



Open the menu.



Calendar/Clock

OK

Select and confirm.



Date/Time

OK

Select and confirm.

The current setting is shown.

## Enter the date

Enter the day/month/year.

In this case 20.05.2001.

e. g.



Go down one line.

## Enter the time

Enter hours and minutes.

In this case 19:05

e. g.



Go down one line.

## Select the display mode

use the left side of the control key to select the 12-hour mode (**am** or **pm**) or the 24-hour mode (default).

Save

Save the settings.

# Activating/deactivating the keypad lock

You can disable the handset keypad. If there is an incoming call, the key lock is automatically deactivated and re-activated after the call has ended.



To activate/deactivate, hold **down** key

Accepting a call: Press the talk key .

## Changing the display language



Open the menu.



H/Set Settings



Confirm the function.



Language



The current language is marked with a ✓.



OK

Select the language you want and confirm.

You will find a table on the last page of this booklet.

## Dialling an emergency number

You can dial the emergency numbers saved in the base station even if the telephone lock is activated. Please refer to the operating instructions for your base station.

# Registering the handset







To make calls with your handset, you must “introduce” it to its base station (registering)

- if your handset has already been registered at a **different base station (steps 1, 2 and 3)** or
- if you want to register the handset as a new handset at a **Gigaset base station of an older Gigaset range (steps 1 and 3)**.



**Step 1: On the base station or on the base station telephone:**

Gigaset	On the base station or base telephone
4010/4015	<b>Hold down</b> the key on the underside of the base station.
3010/3015	Hold down the paging-key ● on the base station until you hear <b>signal tones</b> .
3020/25 3030/35 4030/35	Select <b>settings</b> , <b>system settings</b> and <b>register handset</b> in the menu at the base station telephone and confirm with <b>OK</b> .
3070/75 4070/75	Press the LED – it will flash during registration.
<b>Non-Siemens base stations</b>	To register at “GAP base stations,” follow the relevant operating instructions (steps 2 and 3).

**Step 2: On the handset:**

-  Press the display key.
-  **H/Set Settings**  Select and confirm.
-  **Register H/Set**  Select and confirm.
-  **OK** Select the base station.

**Step 3: On the handset:**

-   Enter the **system PIN** and confirm (factory setting 0000) – e.g. **Regstr.Procedure Base 1** is displayed.

**Your handset is now ready for operation!**

Your handset can be registered at up to four base stations.

# Making calls

---

## Making an external call



Enter the telephone number. If you make a mistake use the key to correct individual digits.



Press the talk key.



Press the end call key to end the call.

- You can also press the talk key **first** and then enter the telephone number - each digit will be dialled immediately.
- You can **cancel the dialling operation** by pressing the end call key .
- You can insert a pause: After entering the prefix, open the menu using the display key and select "insert pause."

## Making internal calls



Open the list of internal users. Your own handset is identified by "<".



Select the handset you want and press the talk key.

**or** e. g.

Enter the internal number of the handset.

**or**

**or**

All handsets are called.



Press the end call key to end the call.

# Answering a call

Your telephone will ring (ringing tone) and the status LED will flash.



Press the talk key or handsfree key.



Simply remove the handset from the base station/charging unit (factory setting: "Auto talk").

## Open caller list/message list<sup>\*</sup>

A message appears in the display and the status LED flashes to indicate that there are new calls/messages.



Press

## Handsfree talking

Handsfree talking offers the following advantages:

- Before dialling, you can hear the dial tone without having to lift the handset to your ear.
- Other people can listen in and join in the call.
- You can place the handset on any convenient surface or replace it in the base station/charging unit **with the handsfree key pressed**.


### Handsfree talking when dialling



Dial the telephone number.



Press the handsfree key.

When **handsfree talking is activated**, the handsfree key  and the status LED are lit.

---


<sup>\*</sup> Not available in all countries

## Handsfree talking during a call



Activate handsfree talking.

### To set the volume:

Press the handsfree key  once more.



Raise or lower the volume.

**Save**

Save the volume level.



Change from handsfree talking to the handset



End the call.

## Forwarding an external call, enquiry call

You can forward an external call to another handset or make an internal enquiry call.




Open the list of internal users.



Select the internal user and call.

### If the internal user answers:

- **To forward the call:** Press the end call key .
- **To end the enquiry call:** Use **End** to return to the waiting party.

## Automatic redial

---

### Manual redial

You have access to the last five telephone numbers dialled.



Display and select the telephone number.




Press the talk key.

# Automatic redial

This function is not available in all countries.


The handsfree key flashes and open listening is activated. **The function is deactivated after ten unsuccessful call attempts or if a call was made in the meantime.**

Press **Off** or any key if the person you called is not available.


 Display and select the telephone number.


 Open the menu.


 **OK** Activate.

 If the other person answers press the talk key.


## Deleting a number from the redialling list

 Display and select the telephone number.


 Open the menu.


 **OK** The telephone number is deleted.

## Copying a telephone number to the directory

 Display and select the telephone number.

 Open the menu.

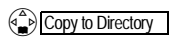 **OK** The telephone number is entered.


 If you like you can change the number and enter a name (you can also enter an anniversary s. page 20).  
For notes on how to enter letters and characters s. page 17.


 Open the menu.

 **OK** Save the entry.



# Directory and network access list

 
With the  **directory** you can store up to 200 telephone numbers and then dial them at the push of a button.

You can save the prefixes (Call-by-Call)\* of telephone companies in the **network access list** . The directory and network access list are used in exactly the same way.

## Storing an entry



Open the directory/network access list.




Select the menu item and confirm.



Enter **the telephone number** (no more than 32 digits).



 Scroll to the name field and enter **the name**. You can also enter an anniversary in the directory, see also page 20.



Open the menu.

Save Entry





Store the entry

## Dialling with the directory




Open the directory.

e. g.  

Enter the first letter of the name. For example for "E" press the  key twice or scroll with the  key.



Press the talk key.

After selecting the name you can also open the menu, select **Display Number**, extend/change the number and dial with the talk key .

\* Not available in all countries

 
## Dialling with the network access list (Call-by-Call)



Open the network access list.



Select call-by-call number and open the menu.



Select the menu item and confirm.



Enter the telephone number of the person you want to call.

or



Select the telephone number in directory and confirm.



Press the talk key. The telephone number is dialled.

## Speed dialling from the network access list

You can store 8 speed dialling numbers in the network access list. Enter a speed dialling number (2–9) **before** the name.

**Example:** Press speed dial key **2** and then enter the **network provider's name**.

## Dialling with speed dialling

e.g.

**Hold down** the key:

The stored network provider's name is displayed.

e.g.

Enter the telephone number

or



Select an entry from the directory and confirm.



Press.

# Character map

Press the relevant key repeatedly or hold down:

	1 x	2 x	3 x	4 x	5 x	6 x	7 x	8 x	9 x	10 x
	blank	1	€	£	\$	¥	¤			
	a	b	c	2	ä	á	à	â	ã	ç
	d	e	f	3	ë	é	è	ê		
	g	h	i	4	ï	í	ì	î		
	j	k	l	5						
	m	n	o	6	ö	ñ	ó	ò	ô	õ
	p	q	r	s	7	ß				
	t	u	v	8	ü	ú	ù	û		
	w	x	y	z	9	ÿ	ý	æ	ø	å
	a→A	*	/	(	)	<	=	>	%	
	.	,	?	!	0	+	-	:	¿	¡*
	#	@	\	&	§					

Other characters on this key: “, ‘, ;, \_

The **first letter** of the name is **automatically** written in **uppercase** and the rest in lowercase.

To change **one letter** from uppercase to lowercase or vice versa press .

**Control** the cursor with . **Delete** characters with .

Letters are always inserted to the left of the cursor.

**Inserting** a blank before a name takes that name to the top of the directory (for example “ Karla”).

Sort sequence:

1. Blank	3. Letters (alphabetical)
2. Digits (0-9)	4. Other characters

## Displaying, changing or deleting an entry



Open the directory/network access list.



**View**

Select the entry you want.

View all the information for the entry.

**Change**

Open the input field and make the necessary changes.



Change the number if necessary.



Go to the name field and change the name.

For notes on entering letters and characters s. page 17.

For the directory enter an anniversary if necessary s. page 20.



Open the menu.

**Save Entry**

**OK**

Confirm the changes.

**or**



Open the directory/network access list.



Select the relevant entry.



Open the menu.



**Delete Entry**

**OK**

You will hear a confirmation tone. The entry has been deleted.

## Copying an entry to another handset

You can copy an entry to another Comfort handset.



Open the directory/network access list.



Select the required entry.



Open the menu.



**Delete Entry**

**OK**

Select the menu item and confirm.



**OK**

Select the internal user (receiving handset) and confirm.

## Copying a further entry:

**YES**

Press.



Select the required number.

**Copy**

Initiate the copy process.

## Copying the directory/network access list

You can copy the **entire** directory/network access list to another Comfort handset.

See "Copying an entry to another handset."

Transmission is interrupted:

- if the memory of the receiving handset is full (the last entry is displayed on the sending handset).
- if you receive a call.

Copying of an entry is terminated.

## Deleting the directory/network access list



Open the directory/network access list.



Select the required entry.



Open the menu.



Delete List

**OK**

Select the menu item and confirm.

**YES**

Confirm delete all entries.

## Entering anniversaries (birthdays and so on)

You can store the date and time of anniversaries so you can be reminded of them.



Open the directory.



**View**

Select and display the entry.



**Change**

Open the input field.



Move the cursor into the birth-day/anniversary field.



**Change**

Confirm.



Enter or change the date (day/month).



Scroll forward one line and enter the time.



Scroll forward one line.



Choose the indicator for the alarm.



**OK**

Store entries.

Use the display key **Delete** to delete the anniversary alarm.

# Settings

---










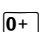

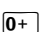
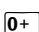



## Setting the alarm clock

You can use your handset as an alarm clock.

### Activating the alarm clock

If activated, the alarm clock (🔔 icon) on your handset will ring every day at the time entered.








With the handset idle:

-  Open the menu.
-  **Calendar/Clock**  Select the menu item and confirm.
-  **Alarm Clock**  Select the menu item and confirm.  
The current setting is displayed.
-   Select **On**.
-   Scroll forward one line.
-     Enter the hours/minutes.  
The example here is 06.00.
-  Scroll forward one line.
-   Choose the ringer melody for the alarm call.
- Save** Save the settings.

An alarm call will not be made if room monitoring (babyphone) is activated or during automatic redialling.

### Deactivating the alarm clock


The alarm clock is set but you do **not** want it to ring.

-  Open the menu.
-  **Calendar/Clock**  Select the menu item and confirm.
-  **Alarm Clock**  Select the menu item and confirm.
-   Select **Off**.
- Save** Save the settings.

# Turning off the alarm call

An alarm call is signalled like an incoming call. Press any key to turn it off.

## Setting an appointment

Your handset is able to remind you of **one** appointment. If you have set an appointment, this is indicated by the  icon in the display.

With the handset idle.



Open the menu.



Calendar/Clock



Select the menu item and confirm.

Set Appoints.



Select the menu item and confirm.



Select **On** to activate the appointment alarm.



Scroll forward one line.



Enter the day/month.  
The example here is 20th May.



Scroll forward one line.



Enter the hours/minutes.  
The example here is: 9.30.



Scroll forward one line.



Choosing the ringer melody for the appointment alarm.

Save

Save the settings.

An appointment alarm will only ring when the handset is idle. An appointment alarm is not made when room monitoring is activated or during automatic redial.

## Turning off the appointment alarm

An appointment alarm is signalled in the same way as an incoming call; press any key to turn it off.









## Missed appointments and anniversaries

An appointment and anniversaries that have been signalled on the handset but not been accepted are saved in a list.







A new missed appointment/anniversary is indicated by **Appt.**. Press the right display key to display the list Events list. Then select **Missed Appoint.** **OK**.

If you want to view your appointment again, proceed as follows:

-  Open the menu.
-  **Calendar/Clock** **OK** Select the menu item and confirm.
-  **Missed Dates** **OK** Select the menu item and confirm.
-  **OK** Select a missed appointment  or anniversary  Information on this entry is displayed.  
Use the display key **Delete** to delete the appointment/anniversary.



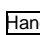







## Handset and loudspeaker volume

You can set the handset volume to one of three levels, and the loudspeaker for handsfree talking to one of five levels – **even during a call**.

-  Open the menu.
-  **Sound Settings** **OK** Select the submenu.
-  **Handset Volume** **OK** You will hear the current handset volume.
-  Set the required handsfree talking volume.
-  Scroll forward one line.
-  **Save** Select the required level for the handset volume and confirm.























## Setting the ringer volume/melody

You can choose from **five ringer volumes**, “**crescendo**” **ring** (increasing volume), **ringer off** and any of **ten ringer melodies**:

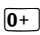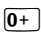-  Open the menu.
-  **Sound Settings**  Select the menu item and confirm.
-  **Ringer Settings**  You will hear the current **ringer volume** and its level will be displayed.
-   Select the ringer volume.
-  Scroll forward one line.
-   **Save** Select the required **ringer melody** (1–10) and confirm.
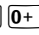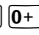
## Time control for ringer volume

You can set a different ringer volume for a particular time of day.

-  Open the menu.
  -  **Sound Settings**  Select the menu item and confirm.
  -  **Ringer Settings**  You will hear the current ringer volume and its level will be displayed.
  - Time C.**  Press.
  -   Activate/deactivate time control.
  -   Enter the period for the different ringer
- e. g.    
-     from 11:00 to 15:00.
-    Scroll forward one line and select the ringer volume
  - Save Entry** Save the settings.
  - Save** **or**  Press.

# Activating/deactivating warning and signal tones

- **Key beeps:** Every keystroke is confirmed.
- **Confirmation beeps:** Confirmation beep (a rising tone sequence) when you make entries/settings and when you replace the handset in the base station.
- **Battery low beep:** The battery must be recharged.



Open the menu.



Sound Settings

OK

Select the menu item and confirm.



Advisory Tones

OK

Select the menu item and confirm.




Select the required function.



,  or select  (battery low beep in the call).

Save the settings.

## Auto talk feature on/off

When this function is activated you can remove the handset from the charging unit without pressing the  key to accept a call (factory setting).



Open the menu.



H/Set Settings

OK







Select the menu item and confirm.

OK

Activate/deactivate with  (✓ = function on).

# Resetting to the factory defaults

The directory, the network access list and the caller list are not deleted when you reset the handset. Registration at the base station is not affected.

-  Open the menu.
-  H/Set Settings  Select the menu item and confirm.
-  Reset Handset  Select the menu item and confirm.
-  Confirm.

Function	Factory setting
Handset volume	1
Ringer volume ("ring tone,")	5
Ringer melody	1
Auto talk	On
Battery low beep	On
Handsfree volume	3
Room monitor level	high
Time control	off
Display language	local

## Room monitoring (babyphone)

You can use your handset as a baby monitor. The handset should be placed at least **1 to 2 meters** away from your baby. If a certain noise level is reached (for example if your baby is crying) the handset will automatically dial the **number you stored (internal or external)**. When the room monitor is active, incoming calls are merely displayed.

# Setting the room monitor



Open the menu.



Add. Features

OK

Select the menu item and confirm.



Room Monitor.

OK

Select the menu item and confirm.



Select **On** or **Off**.



Scroll forward one line.

Change

Open the entry field for the telephone number.

Delete an existing **external** number with **←**.

Delete an existing **internal** number with **YES** (you will be asked to confirm).



Open the list of **internal** users and select the internal number.

OK

Save the number.

or



Open the directory.



OK

Select an external user.



Open the menu.

Save Entry

OK

Confirm the setting.



Go down one line.



Set sensitivity to "high" or "low."

Save

Save the setting.

Room monitoring can be deactivated with the display key **Off**.

You can **deactivate** the room monitor from an **external number** (from your mobile phone for example). Answer a call made from the room monitor.

Deactivate with **9<sup>WXYZ</sup>** **#**.

The room monitor is now deactivated. The room monitor will **no longer** call.

# Walk and Talk mode

---

This function enables handsets (Gigaset 4000 Comfort only) to communicate free of charge outside the range of the base station. In Walk and Talk mode, handsets are not available for incoming calls.

## Requirements:

The handsets must have the same base settings (e.g. best base station) or they must not be registered at any base station. (Walk and Talk mode reduces the handset's talk time considerably).

## Activating Walk and Talk mode on the handset



Open the menu.



Add. Features

OK

Select the function.



Walk and Talk

OK

Activate Walk and Talk mode.

Walk and Talk mode can be deactivated with the display key **Off**.

## Using Walk and Talk mode

Two handsets are in Walk and Talk mode:

### Calling handset:



Press.

### Called handset:

The call is indicated by a message on the display.



Press.



Press.

The two handsets are connected to one another.



Press. The call is ended.

# Appendix

---

## Operating on base stations in the Gigaset family

### Gigaset 1000/2000/3000

The following functions on your 4000 Comfort handset are **not** supported by base stations in this Gigaset family:

- Setting the time (the time is not transferred after the handset has been switched off)
- Changing the display language
- Room monitoring (cannot be switched off **externally**)
- SMS transfer (SMS-compatible base stations only)\*

### Gigaset 4010/4015 Classic

The following functions on your 4000 Comfort handset are **not** supported by the above-mentioned base stations:

- Changing the display language
- SMS transfer\*
- Setting authorisation stages

\* Not available in all countries

## Looking after your phone

Wipe the base station and handset with a **damp cloth** or an antistatic wipe. **Never** use a dry cloth as this can cause static discharge.

## Recommended batteries:

Nickel cadmium (NiCd)	Nickel metal hydride (NiMH)
Sanyo N-3U (700 mAh)	Saft RH 6 NiMH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	Panasonic HHR-110 AA (1100 mAh)
Panasonic 600 DT (600 mAh)	Panasonic Pro+ 1500 (1500 mAh)
Emmerich 700 (700mAh)	Sanyo HR-3U (1600 mAh)
	GP GP 130 AAHC (1300 mAh)
	Varta Phone Power (1300 mAh)
	Emmerich 1300 (1300 mAh)

Always replace both batteries at the same time and only use batteries of the same type/manufacturer.

## Operating times/charging time of the handset:

Capacity (mAh)	Standby time (hours)	Talk time (hours)	Charging time (hours)
700	up to 180	more than 10	about 5.5
1200	up to 300	more than 17	about 11
1600	up to 400	more than 23	about 14

The charge capacity of the battery reduces after a number of years. This is quite normal.

## Range

The handset will operate away from the base station up to about 300 m outdoors and up to 50 m indoors.



# Guarantee

## Scope

- This equipment guarantee applies to end users ("customers"). This guarantee does not in any way affect the customer's statutory rights.
- The guarantee applies to the supplied devices and all their components but not to their installation or configuration or to the services provided by the dealer. Manuals and any software supplied on a separate data medium are excluded from the guarantee. This guarantee does not apply to decorative covers or any other personalised parts or software not included in the scope of supply. The guarantee also does not apply to decorative top or bottom shells for special editions.
- The guarantee provides for devices or components that, despite proper care and use, have demonstrably developed defects due to faulty workmanship and/or faulty materials to be replaced or repaired at our discretion free of charge. The guarantee does not cover normal wear and tear. Alternatively, we reserve the right to replace the defective device with a successor model or reimburse the original purchase price on return of the defective device. Our decision is final. Any legal claims are excluded.
- Claims under the guarantee cannot be made if
  - the defect or damage was caused by improper care or use. Improper care or use includes the following:
    - Opening the device (this is classed as third-party intervention)
    - Manipulating components on the printed circuit board
    - Manipulating the software
    - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g. microwave, sauna, etc.).
  - Repairs or other work done by persons not authorised by us.
  - Devices fitted with accessories not authorised by Siemens.
- Any further claims due to damage are excluded, such as damage arising outside the device, provided this was not due to gross negligence and/or intent on our part.
- Claims under the guarantee must be made as soon as the defect is noticed.
- A till receipt showing the date of purchase must be presented as proof. Each claim under the guarantee is accepted with the express reservation that subsequent investigations confirm the validity of the claim.
- Any devices or components that are replaced become our property.
- The costs of materials and labour will be borne by us, but not the costs of transport, postage or freight.
- We are entitled, at our discretion, to make technical changes (such as firmware updates) beyond repair or replacement in order to upgrade the device to the latest state of the art. There is no additional charge to the customer for this work. Our decision is final. Any legal claims are excluded.
- The guarantee is valid in the country of purchase. It applies only if the device is operated in the relevant geographical area in accordance with the information on the packaging and in the operating instructions.
- Any further claims are excluded. Siemens is not liable in any circumstances for downtime, loss of profits, loss of data or loss of any other information. The customer alone is responsible for safeguarding such data and information.
- Changes to this guarantee require prior approval by Siemens in writing.

## Guarantee period

- The guarantee applies in countries in the EU from 1 January 2002 for a period of 24 months.
- In all other countries the guarantee period shall be the relevant minimum statutory guarantee period, but no longer than 24 months.
- The guarantee period starts on the day of purchase by the customer.
- A successful claim under the guarantee does not extend the guarantee period.
- Work under the guarantee is handled by our Customer Care Centers.
- The guarantor is Siemens Aktiengesellschaft Deutschland, Schlavenhorst 88, D-46395 Bocholt.



To redeem the guarantee please contact your local Customer Care Center (see back cover)

---

## Customer Care

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:


**[www.my-siemens.com/customer care](http://www.my-siemens.com/customer care)**

If the device needs to be repaired, please contact one of our Customer Care Centers.

**Service telephone number** see back cover.

The CE symbol indicates that the telephone complies with the essential requirements of the R&TTE directive.

The 4000 Comfort handset is approved for use in Switzerland and throughout the EU.

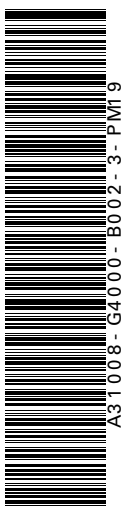

Issued by  
Information and Communication mobile  
Haidenauplatz 1  
D-81667 München

© Siemens AG 2002  
All rights reserved. Subject to availability.  
Right of modification reserved.  
Printed in Germany. (03/2002)

Siemens Aktiengesellschaft  
<http://www.my-siemens.com>

Best.-Nr.: A31008-G4000-B002-3-PM19