 
 


Gigaset 5005*

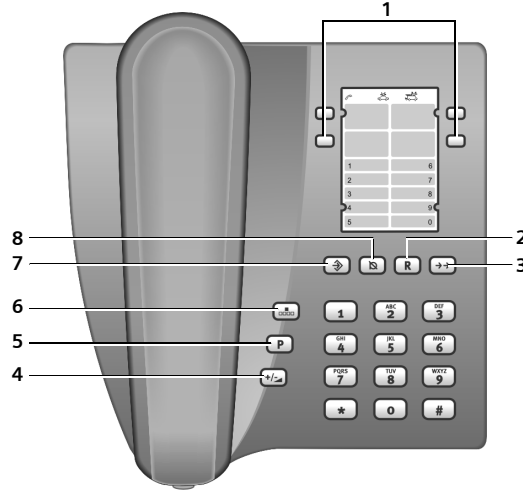

- 1 مفاتيح المجموعة
- 2 مفتاح الاستدعاء
- 3 مفتاح معاودة الاتصال
- 4 مفتاح التحكم في مستوى صوت سماعة الرأس
- 5 مفتاح إيقاف مؤقت
- 6 مفتاح الاتصال السريع
- 7 مفتاح الضبط
- 8 مفتاح كتم الصوت
- 1 Repertory keys
- 2 Recall key
- 3 Redial key
- 4 Handset volume control key
- 5 Pause key
- 6 Speed dial key
- 7 Set key
- 8 Mute key
- 1 Touches d'accès rapide
- 2 Touche de double appel
- 3 Touche bis
- 4 Touche de réglage du volume
- 5 Touche de pause
- 6 Touche de numérotation abrégée
- 7 Touche Enregistrer
- 8 Touche de désactivation du haut-parleur (Mute)

التوصيلات Connections Raccordement

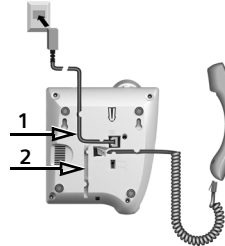

- 1 (Please insert here the arabic text)
- 2 (Please insert here the arabic text)
- 1 Table top operation
- 2 Wall mounting
- 1 Pour utilisation sur bureau
- 2 Pour montage mural

* Manufactured by
Gigaset Communications GmbH under
trademark license of Siemens AG

 
* يتم تصنيعها من قبل شركة
Gigaset Communications GmbH
لها بالاستعمال بموجب ترخيص
Siemens AG. استعمال العلامة من شركة

Wall mounting

(see figure)

Once the connecting leads have been connected, you can mount the telephone on the wall:

- ◆ Drill two dowel holes (5 mm Ø) 110mm apart, insert dowels and screw in

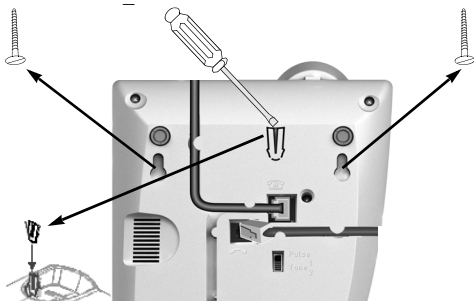

countersunk head wood screws with a slight gap to the wall.

- ◆ On underside of telephone: Lift out handset bracket with screwdriver.
- ◆ Clip handset bracket into handset shell mounting.
- ◆ Hang telephone on projecting screw heads.

Safety precautions

When installing, connecting and operating the telephone, always observe the following precautions:

- ◆ Only use the jacks and leads supplied.
- ◆ Only connect the connecting lead to the intended socket.
- ◆ Only connect approved accessories.
- ◆ Lay the connecting lead where it will not cause accidents.
- ◆ Position the telephone on a non-slip surface.
- ◆ For your safety and protection, the telephone may not be used in the bath or shower rooms (wet locations). The telephone is not splash proof.
- ◆ Never expose the telephone to sources of heat, direct sunlight or other electrical devices.

- ◆ Protect your telephone from moisture, dust, corrosive liquids and vapours.
- ◆ Never open up the telephone yourself.
- ◆ Do not touch the plug contact with pointed or metallic objects.
- ◆ Do not carry the telephone by the leads.
- ◆ If you give your telephone to someone else, make sure you also give them the operating manual.

Setting up the telephone for use

Recommended installation of telephone

- ◆ Do not expose the telephone to direct sunlight or other sources of heat.
- ◆ Operate at temperatures of between +5°C and +40°C.

- ◆ Maintain a distance of at least one metre between the telephone and radio equipment, e.g. radio telephones, radio paging equipment or TV sets. Otherwise, telephone communication could be impaired.
- ◆ Do not install the telephone in dusty rooms as this can limit the service life of the telephone.
- ◆ Furniture lacquer and polish can be adversely affected by contact with parts of the unit (e.g. feet).

Dialling and saving numbers

Dialling a number



Lift handset, dial number.

 
Last number redial

The last number dialled is automatically saved.



Lift handset, press last number redial key.

Repertory and speed dial

You can save 4 numbers (max. 21 digits) as repertory numbers on the 4 repertory keys  and 10 numbers as speed dial numbers on the number keys (max. 21 digits).

Saving (or saving with notebook function)



Lift handset, (or with notebook function: during a call) press Set key.

either ...



As repertory
Press repertory key;

or ...



As speed dial

Press speed dial key and speed dial number (number key);



Enter number for repertory or speed dial.



Press Set key, (or after the call:) replace handset.

Dialling a repertory number



Lift handset, press repertory key.

You can also dial any additional digits.

Dialling a speed dial number


 


Lift handset, press speed dial key.



Press speed dial number (number key).



Notes on saving and deleting repertory and speed dial numbers

 
 and  are saved regardless of the set dialling mode but are only dialled with DTMF dialling.

The following steps delete numbers saved to the repertory or speed dial keys:

- ◆ The number entered is longer than 21 digits
- ◆ Saving a number will delete the previous content of the memory

Dialling pauses

One or more dialling pauses (not at 1st digit) can be entered using . Pauses are transferred to the memory and are necessary for certain extension systems (e.g.: 0  2368).

- ◆ Dialling a dialling pause within the first 5 digits: The entire number saved is dialled, including the 2-second dialling pause.
- ◆ Dialling a dialling pause after the first 5 digits: The portion of the number saved after the pause is only dialled after pressing the  key.

Adjusting the telephone

Setting the handset volume

The handset volume can be set to 2 levels.



Press Handset volume control key.

Mute

You can deactivate the telephone's microphone.

During a call:



Press mute key.

To reactivate microphone:

Press the mute key again.

Setting the ringer

You can set the ringer frequency and volume to 9 levels (factory default: level 6) or turn it off.



Lift the handset, press the Set key. Press the hash key.



...



Press one of the number keys. (0: Ringer off until handset is next lifted).



Press Set key.



Pulse: Pulse dialling mode (DP)

Tone 1: Tone dialling mode, flash time 100 ms

Tone 2: Tone dialling mode, flash time 280 ms

Temporary DTMF switching in "Pulse" position

To use functions that require DTMF (e.g. remote control of answering machine), you can set the telephone to DTMF for the duration of the call without adjusting the switch.

After the connection is established:



Press the star key.

After the connection is broken, the setting reverts to DP.

Operation on a PABX

Special functions/Recall key

During an external call, you can make an enquiry or forward the call. To do this, press the recall key **R**. The subsequent procedure depends on your PABX.

By default, the recall key is set to flash time 1 (pulse/tone switch in "Tone 1" position). For connection to a PABX, it may be necessary to change the flash time (e.g. pulse/tone switch to "Tone 2"). To do this, please refer to the operating instructions for your PABX.

Changing the dialling mode

By default, your telephone is set to tone dialling mode (Tone 1). Depending on the dialling mode of your PABX, you may need to set the telephone to pulse dialling (DP). Slide switch on underside of unit:

Operation on public telephone systems

Public telephone systems - in some cases by special order/request – offer you a range of useful additional services (e.g. call divert, call back on busy, three-party conference etc.). These services can be selected using specified key combinations, which your network provider will notify you of.

You can save the entire key combination, including the number of a fixed call divert

destination, to your repertory or speed dial keys just like a normal number.

Recall key

In public telephone systems, the recall key is required to use certain additional services; e.g. for "Call back on busy". By default, your telephone is set to tone dialling with a flash time of 100 ms (Tone 1). You may need to adjust the flash time using the slide switch on the underside of the telephone.

Appendix

Care

To clean, wipe with a moist or antistatic cloth only, never with a dry cloth (risk of electrostatic charging and discharge) or strong cleaning agent.

If your telephone is not working perfectly

Lift handset, no dialling tone: Is the connecting lead correctly plugged into the telephone and the telephone socket?

Dialling tone audible but telephone will not dial: The connection is OK. Is the dialling mode set correctly?

The other party cannot hear you: Mute activated?

Regular pulse noises can be heard during a call: The connection is receiving metering pulses from the exchange, which the telephone cannot interpret. Contact your network operator.

Insert strips

Blank insert strips for the repertory keys can be found on the Internet at

www.gigaset.com/corded-phones.

Contacts

If you should encounter any problems when operating the telephone connected to a communication system with analogue network access, please contact the network operator responsible or your dealer.

Authorisation

This device is intended for connection to analogue networks outside the EEA (with the exception of Switzerland) depending on national type approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs.

CE 0682