

**morphy richards®**



## Blender



Please read and keep these instructions

### *Getting the best from your new appliance...*

#### **Safety**

- The blender blades are very sharp, therefore handle with care when using and cleaning.
- Do not overfill the blender. Refer to the operating chart for quantities and operating times.
- Do not use continuously for more than one minute at a time and allow to cool for 5 minutes before further use.
- Allow hot liquids to cool before blending.

**WARNING: Do not add hot liquids to glass jug - Allow to cool first.**

#### **Operation**

When using the blender ensure the lid is in place before switching on and do not remove until the blades have stopped rotating.



To register for your 5 year guarantee ring the Helpline numbers below.

Please have the following information available.

Serial number \_\_\_\_\_ and model number: 48953 (see page 8 for guarantee details)



SMOOTH



For replacement parts, help with using your Morphy Richards products, problems and lots more, contact us by phone or through our website.



**UK Helpline: 0870 060 2609**  
**Replacement parts: 0870 167 6640**  
**Ireland 1800 409119**

**[www.morphyrichards.com](http://www.morphyrichards.com)**

## **CONTENTS**

<b>Important safety instructions</b>	<b>3</b>
<b>Electrical requirements</b>	<b>3</b>
<b>Features</b>	<b>4</b>
<b>Before use</b>	<b>5</b>
<b>Using the blender</b>	<b>5</b>
<b>Operating chart</b>	<b>6</b>
<b>Cleaning and Storage</b>	<b>6</b>
<b>Dedicated helpline</b>	<b>7</b>
<b>Your guarantee</b>	<b>8</b>

## IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following of basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

**IMPORTANT:** Damage to the appliance!

In addition we offer the following essential safety advice.

### Location

- Remove all packaging and retain for future reference.
- Ensure the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or in a bathroom.
- Do not place the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface such as a hot plate or radiant rings or near a naked flame.
- Do not let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.

### Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

### Personal safety

- Avoid touching moving parts. Keep hands, hair, clothing as well as spatulas and other utensils away from the blades during operation, to prevent

personal injury and / or damage to the appliance.

- **WARNING: To protect against risk of electric shock NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.**

### Other safety considerations

- Disconnect the appliance from the mains supply when not in use, before taking off attachments and before cleaning.
- **IMPORTANT: Allow hot liquids to cool before adding to blender, always ensure the lid is fitted correctly.**
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The power cord cannot be replaced. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for other than its intended use.
- Do not blend for longer than the time periods recommended in the operating chart.
- When using the blender ensure the lid is in place before switching on and do not remove the lid until the blade has stopped rotating.

### Product Specific Safety

- **WARNING: The blades are very sharp. Handle with care when using and cleaning.**
- Do not overfill the blender. This could cause damage to the motor.  
The 5 amp fuse will blow if the blender is overloaded. Replace the fuse and do not exceed the maximum recommended volumes.

Refer to the operating chart.

## ELECTRICAL REQUIREMENTS


Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require changing, a 5 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**

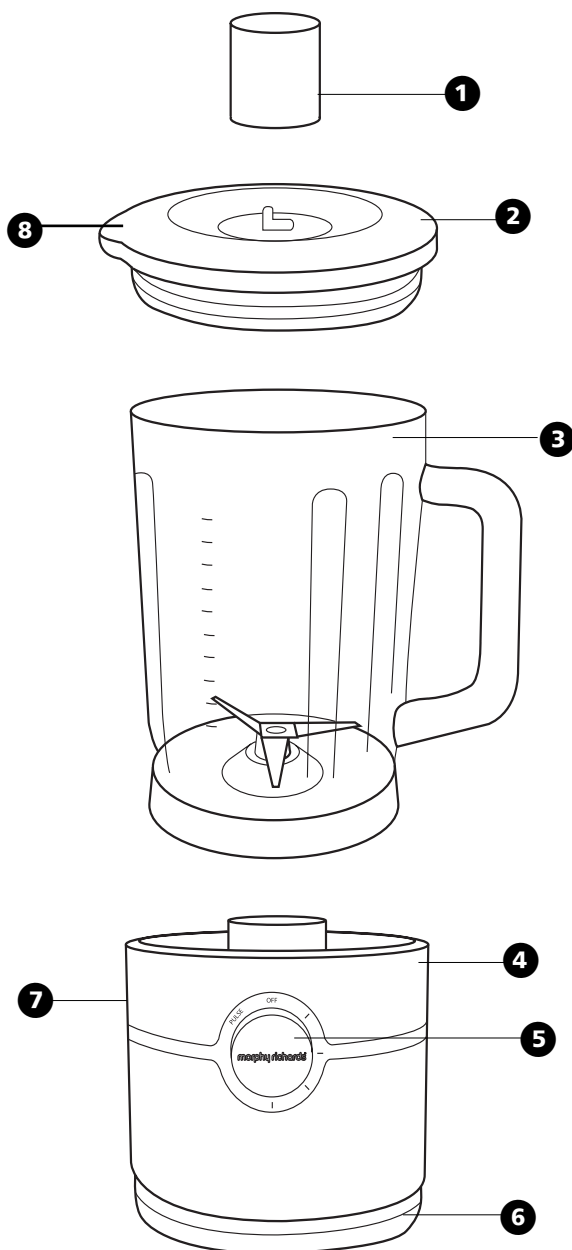

## Features

- 1 Measuring cap
- 2 Lid
- 3 Glass jug
- 4 Blender base unit
- 5 Control switch
- 6 Cable storage
- 7 Plug holder
- 8 Lifting lip (aids lid removal)

## BEFORE USE

Carefully unpack your blender, as the blades are very sharp.

Remove any stickers (except for serial label) and wash all the parts that are safe to immerse in water.

**WARNING: Never immerse the blender base unit in water or in any other liquid and always ensure the electrical connections are kept dry.**

This may be wiped with a clean, damp cloth. But only when unplugged from the electrical socket.

## USING THE BLENDER

Use your blender for soups, sauces, drinks, pates, mayonnaise, dressings etc.

Your blender can also be used for crushing ice for cocktails, desserts etc.

## OPERATING CONTROLS

The blender control switch has the following settings. Pulse, off, speed 1 to speed 4. **A**

The speed can be adjusted whilst the blender is in use.

Using the pulse setting allows greater control over the texture of the food produced. It is only intended to be used for short 'bursts' of blending.

## OPERATING THE BLENDER

- 1 Ensure the blender base unit is unplugged from the mains.
- 2 Place the blender jug onto the base unit. Ensure that the jug is securely in place **B**. You are able to place the jug in 6 different positions for ease of use.
- 3 Place the food in the blender.
- 4 Place the lid onto the blender. Then put the measuring cap into position **C**.
- 5 Place the measuring cap into position by pressing down and turning clockwise, remove by doing it in reverse.
- 6 Plug in the blender and turn the control switch to either pulse or speed 1 to speed 4 depending on the desired consistency. Always operate the blender with the lid in place.
- 7 Never operate the blender with more than 1 litre (1¾ pints) of liquid or when empty.

## Measuring cap




The measuring cap can be used to measure small quantities of liquid.

- 1 Pour the liquid through the hole in the lid.
- 2 Place the measuring cap back in the lid, twisting to lock/unlock. Then proceed with your blending.

## Crushing ice

- 1 Follow the procedure for blending points 1-6, replacing food with ice cubes to be crushed.
- 2 Plug in the blender and turn the control switch to pulse position and hold for several seconds **D**.

Note: The maximum capacity for ice crushing at any one time is 500ml.

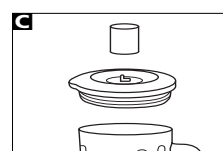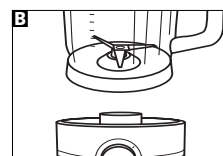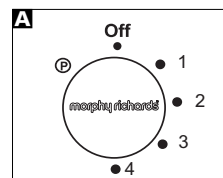

## Operating Chart

Blending/liquidising	Volume	Speed	Time	Hints
*Soups, purees, drinks, milkshakes, batters	1.0 L	1-4+ pulse	15 secs 1 min	Begin with low speed and increase to high if required.
<b>Crushing ice</b>				
Ice	500ml max	pulse	10-20 secs	

Do not process for longer than recommended time.

Do not exceed recommended maximum volumes.

\* Do not blend hot liquids, allow to cool first.

## HINTS AND TIPS

Use your blender for soups, sauces, drinks, pates, mayonnaise, dressing etc.

- Don't put dry ingredients into the blender before switching on. If necessary, cut them into pieces, remove the filler cap, then, with the machine running drop the pieces through one by one.

**Never run the blender with dry ingredients for longer than 15 seconds. Allow to cool for 5 minutes.**

- When making mayonnaise, put all the ingredients, except oil, into the blender. Then with the machine running, pour the oil slowly into the blender through the filler cap hole.
- Thick mixture, eg. pates and dips, may need scrapping out with a spatula. **Ensure the appliance is switched off first.** If the mixture is difficult to process add more liquid.
- When blending pour the liquids in first and then add the solid food. Begin blending at the lower speed and increase when needed.

**IMPORTANT:** To ensure the long life of your blender never run it for longer than 60 seconds and allow to cool for 5 minutes. Switch off as soon as you have reached the desired consistency.

- The machine will not work if the

blender jug is fitted incorrectly.

- Don't use the blender jug as a storage container. Keep it empty when not in use.
- Never blend more than 1 litre (1<sup>3</sup>/<sub>4</sub> pints)-less for frothy liquids such as milk shakes.

## CLEANING AND STORAGE

Before cleaning and maintenance, switch the appliance off and unplug it.

After use, fill the glass jug with warm water, 1 litre (1<sup>3</sup>/<sub>4</sub> pints) and run for 30 seconds on the pulse setting and repeat as necessary. Never use abrasives or cream cleaners.

Clean the blender base unit with a damp cloth or kitchen paper roll.

There is a facility to wrap your power cable around the base of the product, and fit the plug into the plug holder.

Reassemble the jug by carefully placing the glass jug on the base unit ensuring it fits correctly.

**WARNING : Never immerse the blender base unit in water.**

**WARNING: If any liquid is spilt in the top of the blender base unit, switch off and unplug from the socket and dry with a cloth.**

### **DEDICATED HELPLINE**

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance or rating plate
- Serial number

*UK Helpline* 0870 060 2609

*Replacement Parts* 0870 167 6640

*Ireland Helpline* 1800 409119

## YOUR FIVE YEAR GUARANTEE

Available on registration



This 5 year guarantee is only valid when registered directly with Morphy Richards. If you do not register your product it is guaranteed for 2 years. To validate your 5 years guarantee, telephone our consumer helpline. Once you have registered your product you will receive written confirmation from Morphy Richards, please retain this information. Please refer to 2 year guarantee for more information.

## YOUR TWO YEAR GUARANTEE



It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.      Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within the guarantee period from the original purchase date, you should contact the Helpline number quoting

Model number and Serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt. If for any reason this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the guarantee the appliance must have been used according to the instructions supplied.

## Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply

other than that stamped on the products.

- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**morphy richards**

**The After Sales Division  
Morphy Richards Ltd**

Mexborough, South Yorkshire,  
England, S64 8AJ

Helpline (office hours)  
UK 0870 060 2609  
Republic of Ireland 1800 409119

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.