

1. Package Contents:

Trio Racer F1 steering wheel
Trio Racer F1 Pedal
 Mounting clamp (C typed)
 Multi-language user's guide

2. System Requirements:

For PC

- IBM PC Pentium 166MHz compatibles or higher
- Microsoft Windows 7/VISTA/XP/ME/2000/98

For PlayStation

 
- PlayStation 3

For Wii / Gamecube

- Game Cube gamepad port

3. Setting-up your Trio Racer F1 series


Connect and tightly screw the "C-typed" mounting clamp to the edge of the table through the two hidden holes in front of the wheel's chassis.

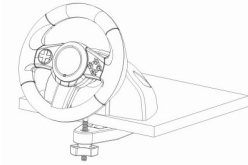

4. Installation


• Installation for PC system

 - Plug in the USB connector of the cable to the USB port on your computer. **Trio Racer F1** wheel will recognize that you have plugged it into the PC system automatically as LED light will be lit.
- Plug in the pedal's connector to the steering wheel.
- You can calibrate and test your game controller in the "**Game controller**" or "**Gaming Options**" screen and complete the installation.

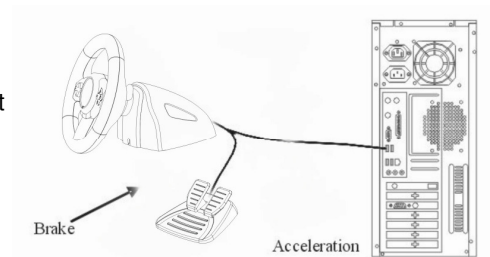


• Installation for PlayStation 3

 - Turn the Playstation 3 on and plug in **Trio Racer F1's USB cable** to the Playstation 3.
- Trio Racer F1** will recognize you have plugged it into Playstation 3 and the LED indicator will be lit automatically.
- When you finish the connection, you can play games now.
- The game controller's function is according to the game software you are using.

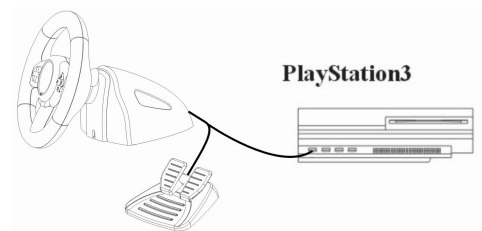

• Installation for Wii/Gamecube



 
- Turn the Wii/Gamecube on and plug in **Trio Racer F1's Gamecube cable** to the Wii or Gamecube.
- Trio Racer F1** will recognize you have plugged it into Wii or Gamecube and the LED indicator will be lit automatically.
- When you finish the connection, you can play games now.
- The game controller's function is according to the game software you are using.

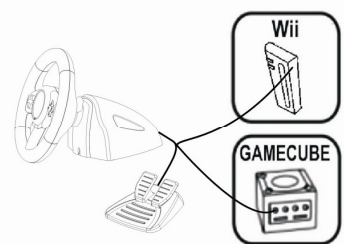

5. Operation and function

• Basic button function setting

   There are 11 functioning buttons built in to the **Trio Racer F1**, and each button has a different function depending on your game software.

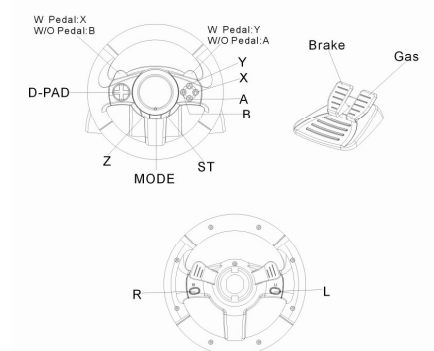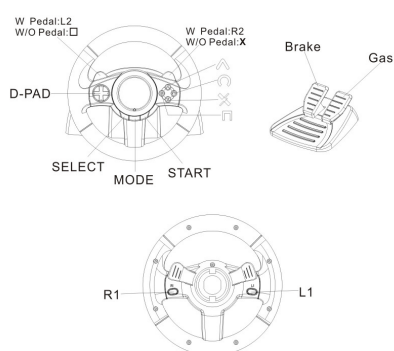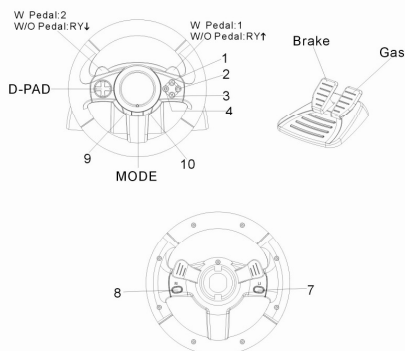

PC	PlayStation3	Wii/Gamecube
Eight ways D-Pad	Eight ways D-Pad	Eight ways D-Pad
Button 1, 2, 3, 4	X, ○, □, △	Y, X, A, B
Button 5, 6	L2, R2	X, Y
Button 7, 8	L1, R1	L, R
Button 9, 10	Select, Start	Z, ST
MODE Button	PS Button	MODE Button

Note: Under PlayStation 3 console, "MODE" Button will be the "PS button" function.

6. Button Mapping

To change the function of particular button, you can follow below tips.

Create a mapping

- Press the "Select" button and stay 3 seconds.
- Three colour LED blinks quickly.
- Press the control to be mapped
- The Red LED blinks quickly.
- Press the destination control
- The Red LED stops blinking and return to its initial state, and you can go on button mapping.

Example :

Stage	Direction	Then :
1	Press "Select" 3 seconds	Three colour LED blinks quickly
2	Press "L1"	Blue LED blinks quickly
3	Press " X "	Blue LED stops blinking
Result	Now "L1" is " X " & " X " is "X"	

Exiting program mode

Method 1 : Auto-exiting program after 6 second when unpressing any button.

Method 2 : Exiting program by pressing "Select" button.

Erase the mapping (PS3/ PC /Wii/ GC)

- Pressing "Mode" button staying 2 seconds,
- The red LED blinks quickly and then return to its initial state
- The mapping has been erased.

7. Care Of the Unit

The **Trio Racer F1** is a well-designed mechanical device. However, it still requires a degree of care in its use and storage. Follow these guidelines when using, connecting or storing the **Trio Racer F1**:

- Do not expose the unit to direct sunlight for long periods of time, as this will cause the plastic to fade and become brittle.
- Do not spill liquids on the unit. If you accidentally spill anything on the **Trio Racer F1**, use a dry cloth immediately to clean it.
- Do not use any detergents or cleaners on the **Trio Racer F1**.