



UK

USER GUIDE

USB Flash Drive

INSTALLING

Refer to your equipment instruction manual for installation, formatting and removal of Flash Drive

In general

- Plug the Flash Drive in the USB port of the computer, removable drive is shown in My computer
- NOTE: Formatting the key will irreversibly erase all the key's contents. Remember to do a full backup before taking this action.
- Wait for the completion of data transfer before removing the Flash Drive.
- Before removing: On the task bar, click on the "safely remove hardware" icon. A popup window will appear. Click on the popup then choose the device to eject.

Please note:

Available memory may vary slightly due to formatting and according to the operating system used.

1 megabyte = 1 million bytes / 1 gigabyte = 1 billion bytes.

Precautions

- Never remove the device or turn off power while writing data.
- Never write data when the battery is weak. Doing so could corrupt the key and cause loss of data.
- Do not use or store the device in an environment subject to strong static electricity or magnetic fields.
- Do not expose the device to direct sunlight, excessive humidity or corrosive environments.
- Do not expose the device to dirt, moisture, water or fluids of any kind.