

ALCATEL

Versatis P110 / Versatis P110 Duo / Trio
Versatis P160 / Versatis P160 Duo / Trio



USER'S GUIDE



ATLINKS Europe, 22 quai Gallieni 92150 Suresnes – France

Alcatel Logo and Alcatel name are trademarks of Alcatel and used under license by Atlinks.

Unpacking your phone

In the box you will find:

the cordless handset (two handsets with a Twin system, and three with a Triple system)
the base unit

two rechargeable battery cells for each handset

a battery compartment cover for each handset

a telephone line cable for the base unit

a mains power lead and adapter for the base unit

charger pods, each with an attached mains power lead and adapter, for multihandset system


Charging batteries for the first time

Before you start to use your telephone make sure that all batteries are fully charged for 15 hours.

Important note: This telephone is not designed for Emergency calls when the mains power fails

For Emergency calls you should have a basic phone that operates without mains power, connected to your line so that you can make calls during a power failure.

Phone Function Keys

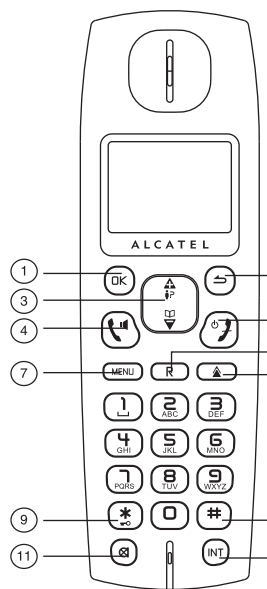

1 OK key

Press to select the function displayed on the handset screen directly above it.

2 Back/clear key

Press to delete a digit/a character in editing mode
Press to return to idle mode.
Press and hold to change the handset idle display between handset name and date/time.

3 Navigation key

Press UP to access the call log* and press DOWN to access the phonebook when in idle mode.
Press UP/DOWN to increase or decrease earpiece volume during a call.
Press UP/DOWN to increase or decrease handsfree volume (Versatis P160 only)
Scroll up/down a list.

4 Talk key

Handsfree (Versatis P160 only)

5 Hang-up/Exit key

Press and hold to switch the handset power on/off.
Press to end a call.
Press to return to idle mode in other menus.

6 Recall (Flash) key

Access to operator services*

7 Menu key

Press to access the main menu.

8 Redial key

Press to access the Redial list.

9 Star key

Press and hold to lock/unlock keypad.

Press and hold to toggle between the external and internal calls when both are set up.

10 Hash key

Press and hold to insert a pause during a call.

Press and hold to turn the ringer on/off.

11 Mute key

Press to mute / unmute the handset microphone.

12 Call transfer/Intercom key

Press to initiate an internal call.

Press to hold the line and page another handset during a call.

Press and hold to initiate a conference call.


*Subject to subscription and availability of the service from the fixed line operator.

Read First Before Use

Choosing a site for the base unit and charger pod

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a microfilter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

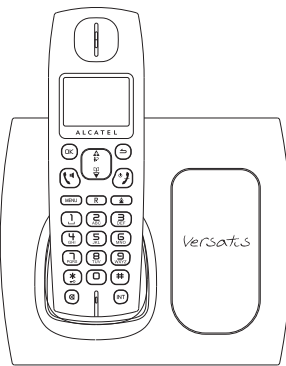

The base unit and charger pod(s) should be placed on a level surface, in a position where:

- the mains adapter plug will reach an easily accessible 230-V AC switched mains supply socket - never try to lengthen the mains power cable
- the base unit's telephone line cable will reach your telephone line socket or extension socket (the charger pod does not have a telephone line connection)
- it is not close to another telephone - this can cause radio interference
- it is not close to a sink, bath or shower, or anywhere else where it might get wet
- it is not close to other electrical equipment - fridges, washing machines, microwave ovens, fluorescent lights, televisions etc.
- it is away from hot, humid conditions and strong sunlight

Radio signals between handset and base unit

To use your handset and base unit together, you must be able to maintain a radio link between them. Be aware that any large metal objects, like a refrigerator, a mirror, filing cabinet, etc, between the handset and the base unit may block the radio signal. Other solid structures, like walls, may reduce the signal strength.

Mains power connection

IMPORTANT - The base unit and charger pod must be used with the mains adapters supplied with the unit.

Using any other adapter will result in non-compliance with EN60950,

and will invalidate any approval given to this apparatus.

Battery safety - CAUTION

ONLY use the rechargeable batteries supplied with the handset.

DO NOT use non-rechargeable batteries - they may explode and cause damage to your telephone.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN
INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE
INSTRUCTIONS.

Installation and Set-up

Fit the rechargeable batteries in each handset

- Install the AAA batteries (Brand name: CORUN, Capacity: Ni-MH 1.2V/ 550mAh, or BRAND name: SANIK, Capacity: Ni-MH 1.2V/550mAh) into handset in accordance with the polarity marked in the battery compartment.
- Close the battery compartment cover, sliding it into place and pressing firmly to make sure it is secure.

Connecting AC (electrical) power

- Plug the base adaptor cord into the power jack on rear panel of the base and the other end into a 100-240Vac 50-60Hz electrical outlet.
- Connect telephone line cord into the phone jack on rear panel of the base and the other end into a main socket.
- In case of twin or triple system, plug the charger power adaptor cord into the power jack on rear panel of charger and the other end into a 100-240Vac 50-60Hz electrical outlet.

Before you use the cordless handset for the first time, it's important to charge the batteries fully.

Leave the handset on the charging cradle for 15 hours.

CAUTION: Use only the power supply that came with this unit. Using other power supplies may damage the unit.

Base and charger power adaptor :

IA5060G, 100-240V / 6V DC / 500mA
DM-SC060050, 100-240V / 6V DC / 500mA

Batteries : SANIK / CORUN - Ni-MH, 1.2V, AAA, 550mAh

Your Telephone Operations

Switching on/off

- Press and hold the HANG-UP/EXIT key for more than 2 seconds to switch on/off the handset in idle mode.

Notes: When the handset is OFF, it cannot be used for making calls including emergency calls. There will be no ringing during an incoming call. To answer a call, you will need to switch it back on. It may take some time for the handset to re-establish a radio link with the base unit.

To lock/unlock the keypad

- Press and hold the STAR key for 1 second to lock/unlock the keypad in idle mode.

Note: Incoming calls can still be answered even if the keypad was locked.

Set time and date

Note: If you subscribe to the Caller Display service, the time and date will be set automatically when you receive a call, but you may still need to set the correct year.

- Press MENU key to enter menu selection.
- Press the Navigation key to select CLOCK&ALARM and then press OK key to select.
- Press OK key to select DATE/TIME. The last stored date is displayed. Enter the current date (YY-MM-DD), press OK, then enter the time (HH-MM).
- Press the Navigation key to select AM or PM (if the time is in 12 HOURS format) and then press OK key to confirm. A confirmation beep is played.

Change your handset's name

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select HANDSET NAME and then press OK key to select. The current handset name is displayed.
- Press BACK/CLEAR key to delete the characters one by one. Enter the new name (maximum 10 characters) and press OK key to confirm. A confirmation beep is played.

Change the display language

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select LANGUAGE and then press OK key to select.
- Press the Navigation key to your desired language and press OK key to confirm. A confirmation beep is played.

Note : Once the display language is set, the option menus on the handset will switch to display in the selected language immediately.

Make and answer calls

Make a call

Predialling

- Dial the number (maximum 24 digits) and then press TALK key.

Direct dialling

- Press TALK key to take the line and then dial the number (maximum 24 digits).

Call from redial list

- Press REDIAL key in idle mode.
Press the Navigation key to an entry in the redial list and then press TALK key.

Call from the call log

- Press CALL LOG (UP) key in idle mode.
Press the Navigation key to an entry in the call list and then press TALK key.

Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.

Call from the phonebook

- Press PHONEBOOK (DOWN) key in idle mode.
Press the Navigation key to an entry in the phonebook and then press TALK key.

Answer and end a call

- When the phone rings, press TALK key. You can also use handsfree mode thanks to a long press on TALK key (only on Versatis P160)
- To end a conversation, press HANG-UP/EXIT key.

IMPORTANT NOTE: You can simply place the handset back on its base station or charger pod to end the call.

Use handsfree (only for Versatis P160)

Press the HANDSFREE KEY at any moment to talk in handsfree mode.

To deactivate the handsfree mode, press again the HANDSFREE KEY.

Adjust the earpiece volume

During a call, press the Navigation key to select from VOLUME 1 to VOLUME 3.

Mute/unmute microphone

When the microphone is muted, the handset displays MUTE ON, and your caller cannot hear you.

- During a call, press the MUTE key to turn on/off the microphone.

Paging

The paging feature enables you to locate a missing handset if the handset is in range and contains charged batteries.

- Press HANDSET LOCATOR key located at the back of the base station. All the registered handsets start to ring.
- Once retrieved, press any key on the handset or the HANDSET LOCATOR key again to end the paging.

Call waiting

If you have subscribed to Call Waiting service, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or name of the second caller will also be displayed on your phone if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

Using your phonebook

Your phone can store up to 50 phonebook memories.

How to enter characters?

When you select a field in which you can enter text, you can enter the letters that are printed on the keys by pressing the relevant key once or several times. For example, press 2 once to insert the letter 'A', press 2 twice to insert the letter B, and so on... Spaces and other symbols can be entered using the 1 or 0 key.

Store a contact in the phonebook

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press OK key again to enter NEW ENTRY.
- Enter the name of the contact (maximum 12 characters). To edit, press BACK/CLEAR key to delete the last character entered. Press OK key to confirm the name entry.
- Enter the number of the contact (maximum 24 digits) and then press OK key to confirm. A confirmation beep is played.

Access phonebook

- Press PHONEBOOK (DOWN) key in idle mode to browse the phonebook entries. Alternatively, you can press the MENU key, to display PHONEBOOK and then press OK key to select.
- Press the Navigation key to select LIST and then press OK key to confirm. The phonebook entries will be listed in alphabetical order, and you can press Navigation key to scroll through the stored entries.
- Press OK key to view the details of the selected entry.

Note : Instead of pressing the Navigation key to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate.

Modify a phonebook entry

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press the Navigation key to select EDIT ENTRY and then press OK key to select.
- Press the Navigation key to select an entry to edit and then press OK key. The current name is displayed. Edit the name and then press OK key to confirm.
- Edit the number and then press OK key to confirm. A confirmation beep is played.

Delete a phonebook entry

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press the Navigation key to select DELETE and then press OK key to select.
- Press the Navigation key to select an entry to delete and then press OK key.
- Press OK key again to confirm. A confirmation beep is played.

Delete all entries from the phonebook list

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press the Navigation key to select DELETE ALL and then press OK key to select.
- Press OK key again to confirm. A confirmation beep is played.

Direct access memory

There are 2 direct access memories (Keys 1 & 2) in addition to the phonebook memory. A long press on the keys in idle mode will automatically dial the stored phone number.

Add/edit direct access memory

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press the Navigation key to select DIRECT MEM. and then press OK key to select.
- Press the Navigation key to select KEY 1 or KEY 2 and then press OK key. The stored name is displayed, or NO NUMBER if it is empty. If there is no number stored for the selected key or if you want to change the name or number currently stored, press MENU key to enter direct memory menu to add/edit the name or number.
- Press the Navigation key to select EDIT NUMBER and then press OK key to select. The display shows the currently stored name, or ENTER NAME if there is no number stored. Edit or enter the name you want and then press OK key. The display shows the currently stored number, or ENTER NUMBER if there is no number stored. Edit or enter the number you want and then press OK key to confirm. A confirmation beep is played.

Delete direct access memory

- Press MENU key to enter menu selection.
- Press the Navigation key to select PHONEBOOK and then press OK key to select.
- Press the Navigation key to select DIRECT MEM. and then press OK key to select.
- Press the Navigation key to select KEY 1 or KEY 2 and then press OK key. The stored name is displayed (or NO NUMBER if it is already empty).
- Press MENU key to enter direct memory menu.
- Press the Navigation key to select DELETE and then press OK key to select.
Press OK key again to confirm. A confirmation beep is played.

Using the redial list

The redial list stores the last 5 numbers dialed.

Access redial list

- Press REDIAL key in idle mode and press Navigation key to browse the redial list. The last number dialed will appear first in the redial list.
- Press OK key to view the details of the selected entry.

Save a redial number into the phonebook

- Press REDIAL key in idle mode to go to the redial list.
- Press the Navigation key to select an entry.
- Press MENU key to display SAVE NUMBER, then press OK key to display ENTER NAME. Enter the name of the contact (maximum 12 characters) and then press OK key to save the entry, and return the display to the redial list.

Using the call log

To receive Caller ID you may need to contact your telephone service provider, and they will inform you also of any charges for it.Caller ID lets you see the phone numbers of your callers on the handset display, before you answer and in your Call Log afterwards.The Call Log stores the last 10 external calls, whether or not you answered the call, so you can call them back later.

Only the most recent call is saved if there are repeat calls from the same number. When the Call Log is full, the next new call will replace the oldest entry.

If you've got a new call in the Call Log, the Caller Display icon will appear on the handset display.

If the received number is the same as one in your phonebook, the name from the phonebook will display as well as the number.

If a call is from someone who withheld their number, the display will show WITHHOLD ID.

If the call is from someone whose number is unavailable, or if you have not subscribed to Caller ID but have set the date and time, the display will show CALLING when it is received and UNAVAILABLE in the Call Log.

Access call log

Press CALL LOG(UP) key in idle mode and press Navigation key to browse the call list. The calls are displayed in chronological order with the most recent call at the top of the list.

- Press OK key to display more details of the call, including the date and time. Save call list entry into the phonebook
- Press CALL LOG(UP) key in idle mode to go to the call list.
- Press the Navigation key to select an entry and then press MENU key.
- Press the Navigation key to select SAVE NUMBER and then press OK key to select.
(Enter the name of the contact (maximum 12 characters) and then press OK key to confirm.

Delete a Call Log entry

- Press CALL LOG(UP) key in idle mode to go to the call list.
- Press the Navigation key to select an entry and then press MENU key.
- Press the Navigation key to select DELETE and then press OK key to select. (Press OK key again to confirm. A confirmation beep is played.)

Delete all entries in the Call Log

- Press CALL LOG (UP) key in idle mode to go to the call list.
- Press the MENU key.
- Press the Navigation key to select DELETE ALL and then press OK key to select.
(Press OK key again to confirm. A confirmation beep is played.

Using the intercom

Intercom, call transfer and conference are only possible with at least 2 handset registered to the same base station. It allows you to make free internal calls, transfer external calls from one handset to another, and set up a 3-way conference with two handsets and an external call. If you try to make a call while another handset is already on an external call, you'll hear a busy tone for a few seconds before the display returns to idle.

Intercom another handset

-  Press INT key in idle mode. Intercom is established immediately if there are only 2 registered handsets.

If there are more than 2 registered handsets, the handset numbers which are available for intercom, and a *, will be displayed. Press the specific handset number you wish to call, or press * to ring all handsets, to start intercom.

Transfer an external call to another handset

-  During the call, press INT key to put the external call on hold (the caller can no longer hear you).

Intercom is established immediately if there are only 2 registered handsets. If there are more than 2 registered handsets, the handset numbers which are available for intercom, and a **, will be displayed. Press the specific handset number you wish to call, or press ** to ring all handsets, to start intercom.

-  Press TALK key on the called handset to answer the internal call, where both internal callers can talk. Intercom is established.
-  Press HANG-UP/EXIT key on the first handset to transfer the external call to the called handset. The external call is transferred.

Note : If there is no answer from the called handset, press INT key to resume the external call.

Answer an external call during intercom

During intercom, a new call tone is emitted when there is an incoming external call.

-  Press TALK key to answer the external call and end the intercom. Connection with the external call is established.

Note : To put the internal call on hold and answer the incoming external call, press INT key.

Switch between an internal and external call

-  During the call, press * key to switch between an internal or external call.

Establish a three-party conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no additional network subscription is required.

-  During an external call, press INT key to put the external call on hold (the caller can no longer hear you).
- If there are more than 2 registered handsets, the handset numbers which are available for intercom will be displayed. Press the specific handset number you wish to call to start intercom.
-  Press TALK key on the called handset to answer the internal call, where both internal callers can talk. Intercom is established.
 -  Press and hold INT key for 2 seconds on the first handset to start the three-party conference. CONFERENCE will be displayed on the screen once the conference call is established.

Handset Tone

Set the ring volume

There are 5 ringer volume options (OFF, LEVEL 1, LEVEL 2, LEVEL 3 and LEVEL 4). The default level is LEVEL 2.

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select HANDSET TONE and then press OK key to select and show RING VOLUME. Press the OK key again to select.
- Press the Navigation key to your desired volume level and then press OK key to confirm. A confirmation beep is played.

Set the ring melody

There are 10 ring melodies available on your handset.

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select HANDSET TONE and then press OK key to select.
- Press the Navigation key to select RING TONES and then press OK to select.
- Press the Navigation key to your desired melody and then press OK key to confirm. A confirmation beep is played.

Activate/deactivate key tone

A single tone is emitted when a key is pressed. You can enable or disable the key tone. By default, the key tone is ON.

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select HANDSET TONE and then press OK key to select.
- Press the Navigation key to select KEY BEEP and then press OK to select.
- Press the Navigation key to select ON or OFF and then press OK key to confirm. A confirmation beep is played.

Activate/deactivate auto hang-up

This function enables you to end a call automatically by simply placing the handset on the base station. By default, the Auto Hang up feature is ON.

- Press MENU key to enter menu selection.
- Press the Navigation key to select PERSONAL SET and then press OK key to select.
- Press the Navigation key to select AUTO HANG-UP and then press OK key to select.
- Press the Navigation key to select ON or OFF and then press OK key to confirm. A confirmation beep is played.

Set date/time format

You can set your preferred date/time format for your phone. The default format is DD/MM and 24 HOURS.

Set time format

- Press MENU key to enter menu selection.
- Press the Navigation key to select CLOCK&ALARM and then press OK key to select.
- Press the Navigation key to select SET FORMAT and then press OK key to select.
- Press OK key to enter TIME FORMAT. The current setting is displayed.
- Press the Navigation key to select 12 HOURS or 24 HOURS and then press OK key to confirm. A confirmation beep is played.

Set date format

- Press MENU key to enter menu selection.
- Press the Navigation key to select CLOCK&ALARM and then press OK key to select.
- Press the Navigation key to select SET FORMAT and then press OK key to select.
- Press the Navigation key to select DATE FORMAT and then press OK key to select. The current setting is displayed.
- Press the Navigation key to select DD/MM or MM/DD and then press OK key to confirm. A confirmation beep is played.

Set alarm

The handset has an alarm clock feature, and when the alarm is set, the  is shown on the handset display. When the alarm time is reached, the display flashes --ALARM-- and the alarm melody is played for 1 minute or until any handset key is pressed. If the alarm is set for ON DAILY and the alarm will sound again on the next day. If the alarm was set for ON ONCE, the will be turned off.

- Press MENU key to enter menu selection.
- Press the Navigation key to select CLOCK&ALARM and then press OK key to select.
- Press the Navigation key to select ALARM and then press OK key to select.

- Press the Navigation key to select OFF, ON ONCE or ON DAILY and then press OK key to confirm. If you select ON ONCE or ON DAILY, enter the time (HH-MM) for the alarm and press the UP/DOWN key to select AM or PM if the time is in 12 HOURS format.
- Press OK key to confirm. A confirmation beep is played.

Set alarm tone

- Press MENU key to enter menu selection.
- Press the Navigation key to select CLOCK&ALARM and then press OK key to select.
- Press the Navigation key to select ALARM TONE and then press OK key to select.
- Press the Navigation key to select MELODY 1, MELODY 2 or MELODY 3 and then press OK key to confirm. A confirmation beep is played.

Advanced use of your telephone

Change Master PIN

The Master PIN is used for registration/unregistration of handsets. The default Master PIN number is 0000. The maximum length of the Master PIN is 8 digits. Note: If you forget your PIN code, you can reset it to its default 0000 using a handset Reset (page 15).

- Press MENU key to enter menu selection.
- Press the Navigation key to select ADVANCED SET and then press OK key to select.
- Press the Navigation key to select CHANGE PIN and then press OK key to select.

Enter the current Master PIN when prompted and then press OK key to confirm. As you enter the PIN it will be shown as asterisks (*) on the screen. (Enter the new PIN and then press OK key to confirm. A confirmation beep is played.)

Register your handset

IMPORTANT: When you purchase a telephone, all handsets are already registered to the base, so you do not need to register them. Handset registration is only necessary when you buy extra handsets or if a handset has become faulty. The procedure described below is for Versatis P110 or Versatis P160 . They may be different if you want to register another handset model, in which case you should refer to its user guide.

Additional handsets must be registered to the base unit before you can use them. Up to 4 handsets can be registered to one base station. The Master PIN is required before you can register or unregister handsets. By default, the Master PIN is 0000. On the base station, press and hold the HANDSET LOCATOR key for approximately 5 seconds.

- On the handset, press MENU key to enter menu selection.
- Press the Navigation key to select ADVANCED SET and then press OK key to select.
- Press the Navigation key to select REGISTRATION and then press OK key to select.

Note : If no action is taken on the handset within 10 seconds, the registration procedure will be aborted. If this happens, repeat the first step. WAITING is displayed on the screen. A confirmation beep is played to indicate successful registration, and the handset will return to idle mode, with its handset number displayed.

Note : If no base is found within a certain period, NO BASE will be displayed with an error tone to indicate failed registration and the handset returns to idle mode, and you will need to repeat the registration sequence.

Unregister your handset

- Press MENU key to enter menu selection.
 - Press the Navigation key to select ADVANCED SET and then press OK key to select.
 - Press the Navigation key to select UNREGISTER and then press OK key to select.
 - Enter the Master PIN when prompted and then press OK key to confirm. (the default master PIN is 0000)
 - Press the Navigation key to select the handset number to unregister and then press OK key to confirm. A confirmation beep is played to indicate successful unregistration.
- Note : If no action is taken on the handset within 15 seconds, the unregistration procedure will be aborted and the handset returns to idle mode. You must use another handset to unregister handsets from the base.

Change recall time

You may need the R button to send a Recall signal (also called Flash or Timed Break Recall) if you are connected to a PBX. You should normally leave the Recall Time at its default setting of Short (100ms), as this is the standard recall required in the telephone network, but it can be changed to Medium (270ms) or Long (600ms) if your telephone is connected to a PBX that requires a different recall time.

- Press MENU key to enter menu selection.
- Press the Navigation key to select ADVANCED SET and then press OK key to select.
- Press the Navigation key to select RECALL TIME and then press OK key to select.
- Press the Navigation key to select SHORT, MEDIUM or LONG and then press OK key to confirm. A confirmation beep is played.

Change the dial mode

You should normally leave the dialling mode at its default setting of TONE. However, you can change to PULSE if necessary. Note: If PULSE dialling is set, you can press the * key to switch to TONE dialling for the rest of that call.

- Press MENU key to enter menu selection
- Press the Navigation key to select ADVANCED SET and then press OK key to select.
- Press the Navigation key to select DIAL MODE and then press OK key to select.
- Press the Navigation key to select TONE or PULSE and then press OK key to confirm. A confirmation beep is played.

Reset unit

You can reset your phone to its default settings with this feature. Note: Upon reset, all your personal settings, call log and redial list entries will be deleted and the phone will return to its default settings. However, your phonebook will remain unchanged after reset.

- Press MENU key to enter menu selection.
- Press the Navigation key to select ADVANCED SET and then press OK key to select.
- Press the Navigation key to select RESET and then press OK key to select.
- Press OK key again to confirm. A confirmation beep is played and the unit is reset to its default settings.

Troubleshooting

ALWAYS check first that:

You have followed all the steps listed in the user manual to install and set up your telephone. All connectors are firmly inserted in their sockets. Mains power to the base unit is switched on at the socket. The handset's batteries are correctly and securely installed and are not run down.

Everyday use

"I cannot make or answer calls"

If the handset's display is blank, it may have been switched off. Press and hold the HANG-UP /EXIT key to switch it back on. Check that the base unit's mains power adapter is plugged in and power is switched on. The base unit needs mains power for normal operation of the phone – not just for charging the batteries. Make sure you are using the telephone line cable supplied with your telephone. Other telephone line cables might not work. Move the handset closer to the base unit. Check the battery level symbol on the display. If it is low, replace the handset on the base unit or charger pod to recharge the batteries. Switch off power at the mains socket, wait for a short time and then switch back on. This may solve the problem. If the handset display shows KEYS LOCKED, press and hold the * button to unlock it before you make a call. Only one handset (or the base unit) can be connected to the outside line at a time. If another handset is already using the line, you need to wait until it has finished its call.

"When I press on the keys,nothing happens"

Make sure the batteries are fitted in your handset. If the Battery Level symbol on the display shows 'low', put your handset back on the cradle to charge.

"When I key in a number, it appears on the display, but I cannot make an outside call"

"The phone does not ring"

"I hear 'beeps' from my handset while I'm on a call"

"When I try to make a call, I hear busy tone"

"The volume in the earpiece is low when I'm on a call"

Batteries

"The handset's battery cells are running low within an hour or two"

"I try to recharge the batteries but I still get a warning that they are low"

If the fault persists...

Try a different position for the base unit – somewhere higher if possible, or further from other electrical equipment. Try moving the handset closer to the base unit. Check that the base unit's mains power adapter is plugged in and power is switched on. Check that ring volume is not on OFF. You may be going out of range of the base unit. Move closer or your call may be cut off. Check the Battery Level symbol on the display. If it's low, recharge the batteries. If you're using a multi-handset system, check whether another handset is already on a call. Make sure you're holding the earpiece correctly over your ear. Adjust the volume using the UP/DOWN key.

CONFORMITY

This unit conforms to the following rules and regulations: 1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity. The CE mark proves the above.



ENVIRONMENT

 Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre.



R&TTE DECLARATION OF CONFORMITY (DOC)

Ww. ATLINKS EUROPE
22, Quai Gallieni
92150 SURESNES
FRANCE

Declare under our sole responsibility that the products Alcatel Versatis P110, Alcatel Versatis P110 Duo and Alcatel Versatis P110 Trio comply:

- With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents:
 - EN 60950-1:2006
 - EN 301486 V2.1.1 (2006)
 - EN 301488-01 V1.6.1:2008 / EN 301488-06 V1.3.1:2008
- With Commission regulation (EC) N° 278/2008 of April 6, 2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to eco-design requirements for no-load condition electric power consumption and average active efficiency of external power supplies
- With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to eco-design requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Paris, July 6th, 2010
Didier GOUJARD
CEO ATLINKS EUROPE



Model P110 / P160
P110 / P160 Duo / Trio G1
A/W No. : 10000098 Rev.0 (EN)
Made in China