

# GRUNDIG

made for you

## **BODY HAIR TRIMMER**

MT 5531

de

en

fr

it

pt

es


pl

cs

tr

el



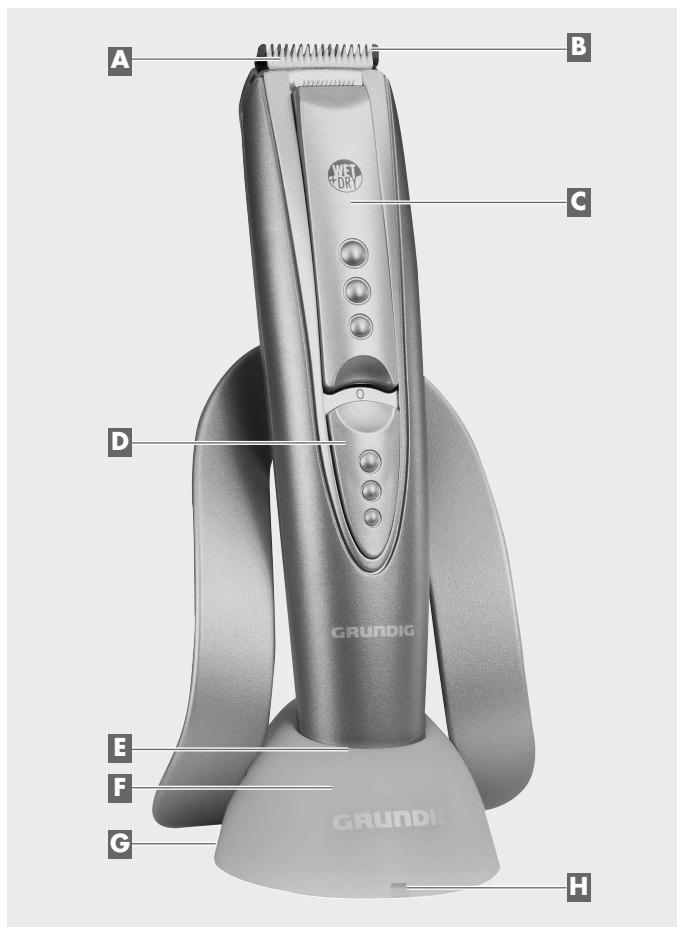



---

<b>DEUTSCH</b>	6 - 16
<b>ENGLISH</b>	17 - 25
<b>FRANÇAIS</b>	26 - 34
<b>ITALIANO</b>	35 - 43
<b>PORTUGUÊS</b>	44 - 52
<b>ESPAÑOL</b>	53 - 61
<b>POLSKI</b>	62 - 70
<b>CESKY</b>	71 - 79
<b>TÜRKÇE</b>	80 - 88
<b>ΕΛΛΗΝΙΚΑ</b>	89 - 97

# SAFETY

---

Please note the following instructions when using the appliance:

- The appliance is designed for domestic use only.
- This appliance should only be used for removing body hair. Any other use is expressly prohibited.
- Observe these instructions in order to prevent damage to the appliance or danger arising from improper use. Keep them in a safe place.
- Never use the appliance in the bath.



- Do not completely immerse the appliance in water.
- Only use the appliance on clean, dry skin. You should not apply any cream or lotion to the skin.
- Avoid contact with hair on your head and eye lashes, and also clothes, brushes, cables, laces, etc.
- Do not use the appliance if you suffer from acne, excema or any other skin irritations. Do not use the appliance on inflamed skin.
- Inflammation of the skin is often caused by invasive bacteria. Clean the cutting head before and after every use.
- The appliance should only be used by one person to avoid spreading any germs.
- When the appliance is being charged, on no account should it come into contact with water or any other liquid. Any proximity to water is a hazard.
- After charging, pull out the power supply unit.

- Caution! Always keep the power supply unit dry.
- Do not charge the appliance in the bathroom.
- Do not use the appliance if it is connected to the mains with the power supply unit.
- Make sure that the accessories are properly attached to prevent them falling into water.
- The appliance may only come into contact with moisture once it is disconnected from the charging unit and the power supply unit is no longer in the socket.
- Do not drop the appliance.
- Keep the appliance away from children.
- Do not open the appliance under any circumstances. No warranty claims are accepted for damage resulting from improper handling.

## Environmental note

This product has been made from high-quality parts and materials which can be re-used and recycled.

Therefore, do not throw the product away with normal household waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. This is indicated by this symbol on the product, in the operating manual and on the packaging.



Please find out about collection points operated by your local authority.

Help protect the environment by recycling used products.

# OVERVIEW

---

Fold out page 2 so that you have the illustrations in front of you.

## Controls

- A** Ceramic blade of the cutting head.
- B** Steel blade of the cutting head.
- C** Precision trimmer.
- D** Switch for turning on and off.
- E** Contacts for plugging into the charging unit.
- F** Charging unit.
- G** Socket for connecting the power supply unit cable (on the back of the charging unit).
- H** Charging display (LED) (at the bottom of the charging unit on the front).

## Accessories

- 1** Power supply unit.
- 2** Charging unit.
- 3** Precision trimmer.
- 4** Razor foils attachment.
- 5** Extendable plug-in comb for different trimming lengths.
- 6** Oil.
- 7** Cleaning brush.
- 8** Storage case.

## Special features

The appliance has a high-quality, maintenance-free ceramic/stainless steel cutting head. This allows thorough and gentle trimming in the following areas:

Leg and arm hair, underarms, neck hair and hair in intimate areas.

You can use the appliance on wet or dry hair.



## Charging the battery

The appliance runs with the built-in, rechargeable nickel cadmium battery. Use the power supply unit supplied and the charging unit for charging the appliance.

- 1 Put the contacts **E** of the appliance into the contact in the charging unit.
- 2 Plug the power supply unit into the **E** socket on the charging unit.
- 3 Plug the power supply unit into the wall socket.
  - The indicator **H** lights up red.

### Notes

- Charge up the battery completely (eight hours) before you first use it or if you have not used it for a long time.

- The charging time for a completely discharged battery is eight hours.
- The ambient temperature should be between 5 °C and 40 °C.
- When fully charged, the appliance works for around 20-25 minutes. It is not advisable to charge the battery after every use, especially if you do not use the appliance for the full 20-25 minutes. Only charge the battery when it is completely discharged. This increases its life. Do not charge it every day.

# OPERATION

---

## Switching on and off

- 1 Press the sliding switch **B** to turn the appliance on and off.

## Trimming hair

- 1 Use the ceramic/stainless steel cutting head without attachments for the closest possible trimming.

### Note

- The trimming width of the ceramic/stainless steel cutting head is 25 mm.
- 2 Activate the precision trimmer **C** for more precise cutting.
  - 3 Push the precision trimmer forwards until it latches and the cutting head is sticking out.



- 4 Push the trimmer back as far as it will go to deactivate it.

### Note

- The trimming width of the precision trimmer is 14 mm.

## Cutting with the comb

- 1 Attach the extendable comb until it catches in the recess.



- 2 Set the trimming length by pressing the button on the comb attachment and pushing the comb forwards. You can then see the trimming length in a small display:

Level 2	2 mm
Level 4	4 mm
Level 6	6 mm
Level 8	8 mm
Level 10	10 mm

- 3** Take off the comb by pushing the catch lever upwards.

## Trimming nose and ear hair

- 1** Take off the ceramic/stainless steel cutting head by pressing on the ceramic blade (white) and lift it off.



- 2** Attach the precision trimmer by pushing the attachment into the slots on the appliance and let it latch into place.



### Note

- Do not insert the blade head of the precision trimmer too deeply into your nostrils or ears.

## Removing hair completely

- 1 Take off the cutting head or precision trimmer.
- 2 Attach the razor foil attachment by pushing it into the slots on the appliance and let it latch into place.



- 3 Remove hair at the appropriate place just like using a shaver.

# CLEANING AND CARE

---

## Cleaning and care

- 1 Switch off the appliance.
- 2 Take off the comb.
- 3 Clean the housing, the cutting head and the comb attachment or any other attachments with a soft damp cloth or the supplied brush.

### Note

- You can also wash the cutting head and the appliance under running water. Never completely submerge the appliance in water.
- 4 Before using the appliance again, dry all parts completely using a towel.
  - 5 Do not use cleaning agents.
  - 6 Put the comb back on again.

### Notes

- Remove any clippings after each use.

- The cutting head of your appliance does not normally need to be oiled. If you want to maintain the original condition of the cutting head for as long as possible, it is worth oiling it at regular intervals (with the oil provided).

## Storage

If you do not want to use the appliance for a long period of time, please store it carefully.

- 1 Ensure that it is unplugged and is completely dry.
- 2 Store the parts in the original packaging in a cool, dry place.
- 3 Make sure the appliance is kept out of reach of children.

## Guarantee

The guarantee does not cover the cutting head or defects which do not significantly impair the value or function of the appliance. The guarantee is invalidated if the appliance is damaged, opened or improperly used.

## Technical data



This product fulfils the European directives 2004/108/EG and

2006/95/EG.

## Power supply

Battery: Nickel cadmium

Charging: Power supply unit 230 V, 50 Hz



Ni-Cd



Technical and design modifications reserved.

**Grundig Multimedia B.V.**

Atrium, Strawinskylaan 3105 • NL-1077 ZX Amsterdam • <http://www.grundig.com>

07/28