

B5742-5

User manual

Built-In Electric Oven

Thank you for choosing one of our high-quality products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently.

To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

Contents

Operating Instructions	3	Roasting	27
Safety instructions	3	Grill Sizes	29
Disposal	4	Grilling with the rotary spit	30
Description of the Appliance	5	Defrosting	30
General Overview	5	Drying	31
Control Panel	5	Making preserves	31
Oven Features	6	Cleaning and Care	32
Oven accessories	6	Outside of the appliance	32
Before Using for the first time	7	Oven interior	33
Setting and changing the time	7	Accessories	33
Initial cleaning	8	Fat Filter	33
Using the Oven	9	Pyrolytic cleaning	33
Switching the Oven On and Off	9	Shelf Support Rails	34
Rapid heat up	11	Oven lighting	35
Oven Functions	12	Oven door	36
Inserting the Oven Shelf, Baking Tray and Roasting Pan	13	Oven door glass	38
Inserting/Removing the Fat Filter	14	What to do if ...	41
Rotary Spit	14	Technical Data	42
Clock Functions	15	Oven Interior Dimensions	42
Other Functions	20	Installation Instructions	43
Uses, Tables and Tips	21	Safety information for the installer	43
Baking	21	Guarantee/Customer Service	45
		Service	47

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Operating Instructions



Safety instructions

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst using

- People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person.
- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discolouration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.

**Note on enamel coating**


Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Disposal

**Packaging material**

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

**Old appliance**

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance


General Overview

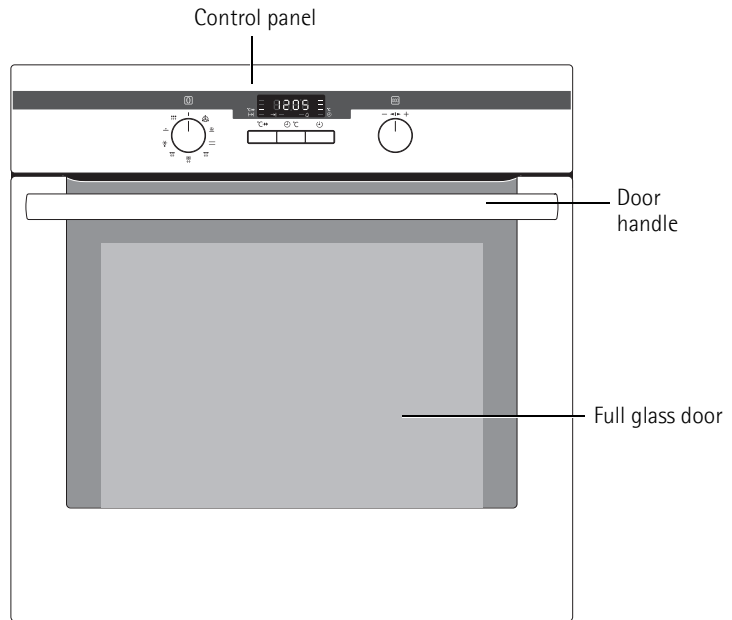

Control Panel

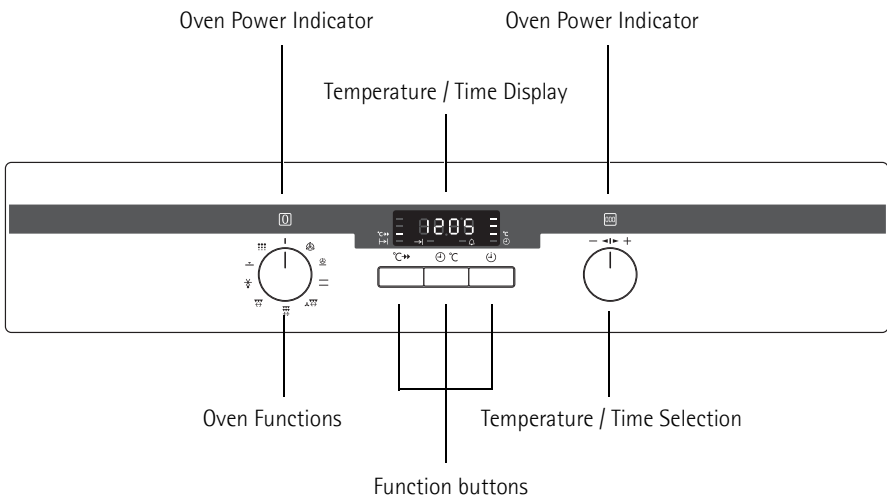

Oven Features

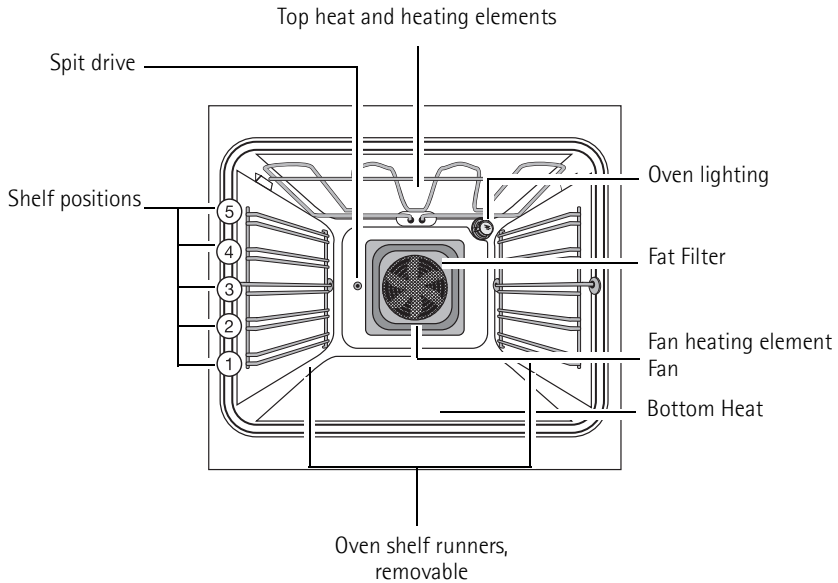

Inside of door

On the inside of the oven door you will find the numbers of the different oven shelves.


You will also find some brief information about the oven's functions, recommended shelves and temperatures for cooking the most popular dishes.



Oven accessories


Oven shelf

For cookware, cake tins, roasts and grilled foods.

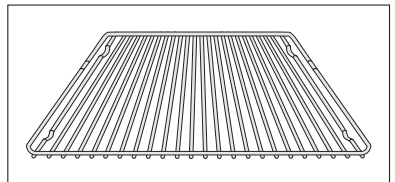


Baking tray


For cakes and biscuits.

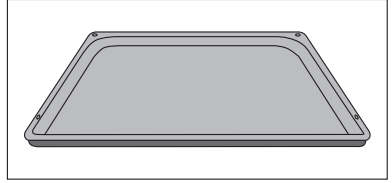**Roasting Pan**

For baking and roasting or as a pan for collecting fat.

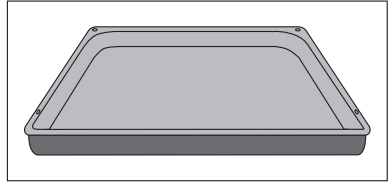**Turnspit with support**

For roasting larger joints of meat and poultry.

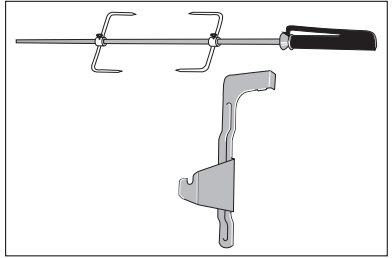

Before Using for the first time

Setting and changing the time



The oven only operates when the time has been set.

When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time of day ⌚ flashes automatically.

1. To change a time that has already been set, press the Selection ⏸ button repeatedly until the function indicator Time of day ⌚ flashes.






- Using the $+$ / $-$ control knob, set the current time.




After approx. 5 seconds, the flashing stops and the clock displays the time of day set.

The appliance is now ready to use.



The time can only be modified, if the child safety device is deactivated, none of the Minute Minder , Duration  or End  clock functions and no oven function is set.

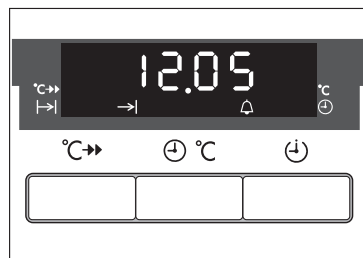

Initial cleaning

Clean the oven before using it for the first time.



Important: Do not use caustic or abrasive cleaning agents! These can damage the oven surfaces.



For the metal surfaces, use commercially available cleaning agents.


- Open the oven door.
The oven light is illuminated.
- Remove all oven accessories, and clean them with warm water and washing up liquid.
- Wash the oven in the same way, and wipe dry.
- Wipe the front of the appliance with a damp cloth.

Using the Oven




The oven is equipped with **retractable buttons** for "Oven functions" and "Temperature selection". To use, press the relevant button. The button then sticks out.

Switching the Oven On and Off

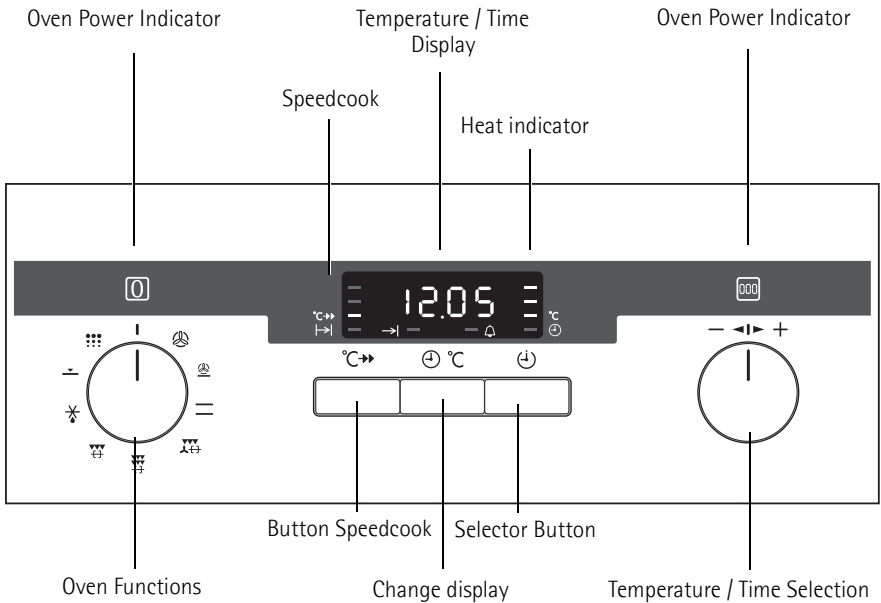

Switching the oven on

Turn the oven functions selector to the desired function. The power indicator light lights up. The temperature display shows the suggested temperature for the oven function selected. The oven starts to heat up. When the temperature set is reached, an audible signal sounds.

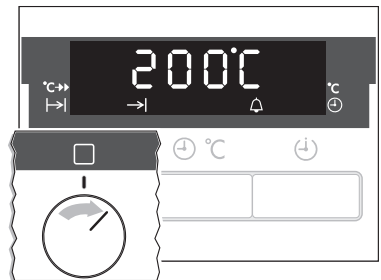

Changing the oven temperature

Turn the $+$ / $-$ knob to raise or lower the temperature.


The setting changes in 5 °C steps.



Checking the temperature


Press Rapid heat up $\text{[}^{\circ}\text{C}\rightarrow\text{]}$ and Selection $\text{[}\text{⏸}\text{]}$ buttons at the same time.

The current oven temperature appears in the temperature display.

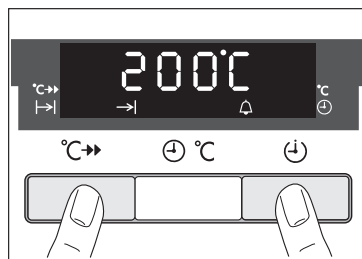

Switching the oven off

To turn the oven off, turn the oven functions selector to the OFF position.

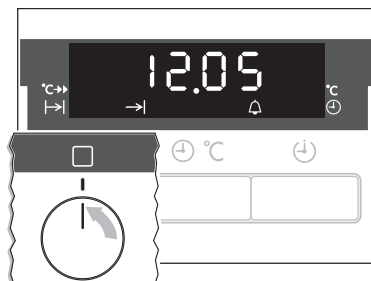

Cooling fan


The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.



Heat indicator


Indicates warming up

When the oven function has been **switched on** the bars that slowly light up one after the other indicate how far the oven has heated up.

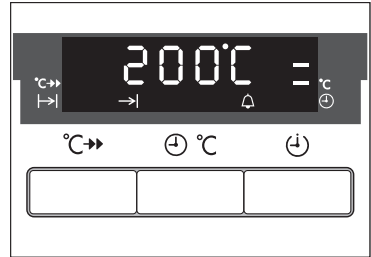


Fast heat indicator

When the fast heat function has been **switched on** °C→ the bars that flash one after the other indicate that fast heat is operating. In addition the bars next to the symbol °C→ light up.

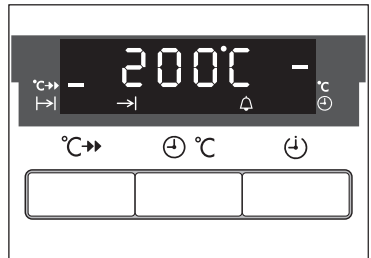

Residual heat indicator

When the oven has been **switched off**, the bars that are still lit indicate the remaining residual heat in the oven.

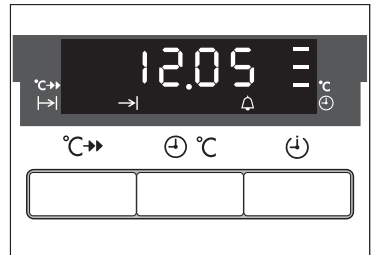


Rapid heat up

After an oven function is selected, using the additional function Rapid heat up °C→ the empty oven can be pre-heated in a relatively short time.







Important: Do not put the food to be cooked into the oven, **until Rapid heat up is completed** and the oven is operating using the desired function.

1. Set the desired oven function (e. g., Conventional). If necessary, change the suggested temperature.
2. Press the Rapid heat up button. The bars next to the symbol °C→ light up. When the bars flash one after another it shows that Rapid heat up is operating.

When the temperature set is reached, the bars of the heat indicator light up and the bars next to the symbol  go out. An audible signal sounds.










The oven now continues heating according to the pre-set oven function and temperature. You can now place the food in the oven.



The Rapid heat up function can be switched on with the oven functions True fan , Fan baking , Conventional  and Rotitherm + turnspit .

Oven Functions

The oven has the following functions:

Oven function	Application
 True fan	To bake on three oven levels maximum at the same time. Decrease the oven temperatures (20-40 °C) compared with Conventional.
 Fan baking	For baking on one oven level dishes that require more intensive browning and a crispy base . Set the oven temperatures 20-40 °C lower than when using Conventional.
 Conventional	For baking and roasting on one oven level .
 Rotitherm + turnspit	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning .
 Dual grill + turnspit	For grilling large poultry and roasts.
 Grill + turnspit	For grilling flat foodstuffs placed in the middle of the grill and for toasting .
 Defrost	For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods .
 Base heat	For baking cakes with crispy or crusty bases .
 Pyroluxe	For automatic pyrolytic cleaning of the oven. It burns off residues in the oven, which can then be removed with a cloth when the oven has cooled down. The oven is heated to approximately 500° C.

Inserting the Oven Shelf, Baking Tray and Roasting Pan




Shelf runner safety and anti-tip device

As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge.

Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.

Inserting the baking tray or roasting pan

Push the baking tray or roasting pan between the guide bars of the selected oven level.

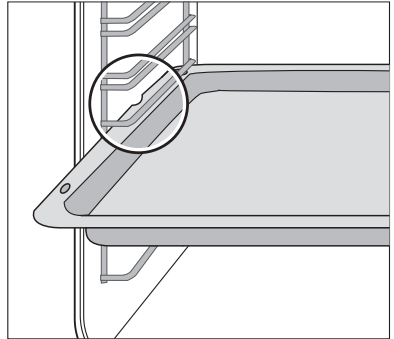


Inserting the oven shelf:

Insert the oven shelf so that the feet point downwards.

Push the oven shelf between the guide bars of the selected oven level.




The high rim around the oven shelf is an additional device to prevent cookware from slipping.

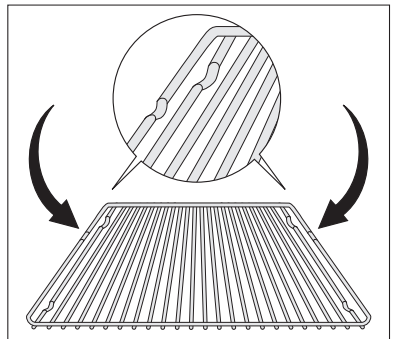

Inserting the oven shelf and roasting pan together

Lay the oven shelf on the roasting pan.

Push the roasting pan **between** the guide bars of the selected oven level.

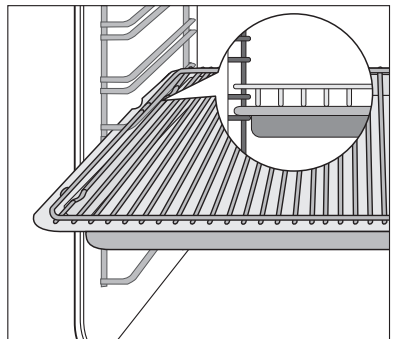

Inserting/Removing the Fat Filter


Only use the fat filter when roasting to protect the rear heating elements from fat splashes.

Inserting the fat filter

Hold the fat filter by the grip and insert the two mounts downwards into the opening on the rear wall of the oven (fan opening).

Taking out the fat filter

Hold the fat filter by the grip and unhook it.

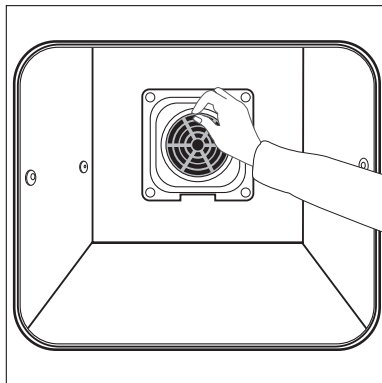

Rotary Spit


Attaching the food to be grilled

1. Place a fork on the rotary spit.
2. Then position the food to be grilled and a second fork.



Make sure the food is in the middle of the spit.

3. Tighten the forks using the screws.

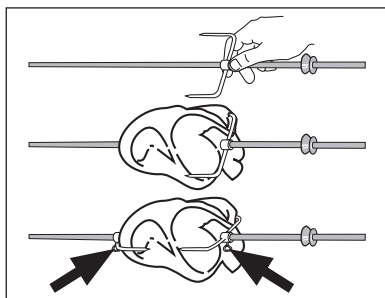


Inserting the rotary spit

1. Place the drip tray in the first shelf position from the bottom.
2. Insert the rotary spit support at the front on the right-hand side in shelf position five from the bottom.
3. Place the handle on the spit and press the clip down.



The clip must be kept pressed down to keep the handle secure on the rotary spit.


4. Push the tip of the spit into the power unit on the left-hand side of the back wall of the oven until it locks into place.
5. Place the groove in front of the handle on the notch provided on the rotary spit support.

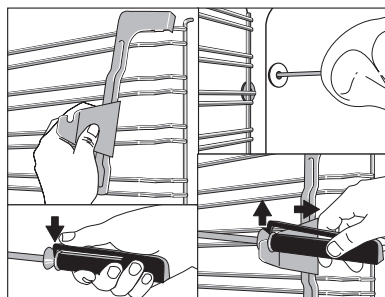

6. Remove the handle.
7. Set the oven function and temperature as shown in the rotary spit table.



Make sure that the rotary spit turns.

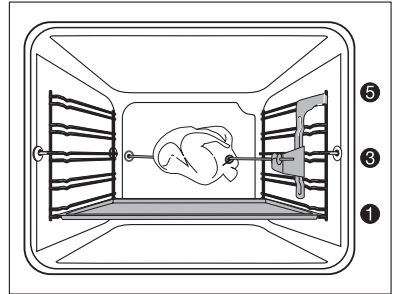

Removing the rotary spit



Warning: The rotary spit is very hot when the cooking process has ended. When taking it out, there is the risk of burns!


1. Switch off the oven.
2. Place the handle on the rotary spit.
3. Press the clip down.



The clip must be kept pressed down to keep the handle secure on the rotary spit.

4. Remove the rotary spit with the food.

Clock Functions

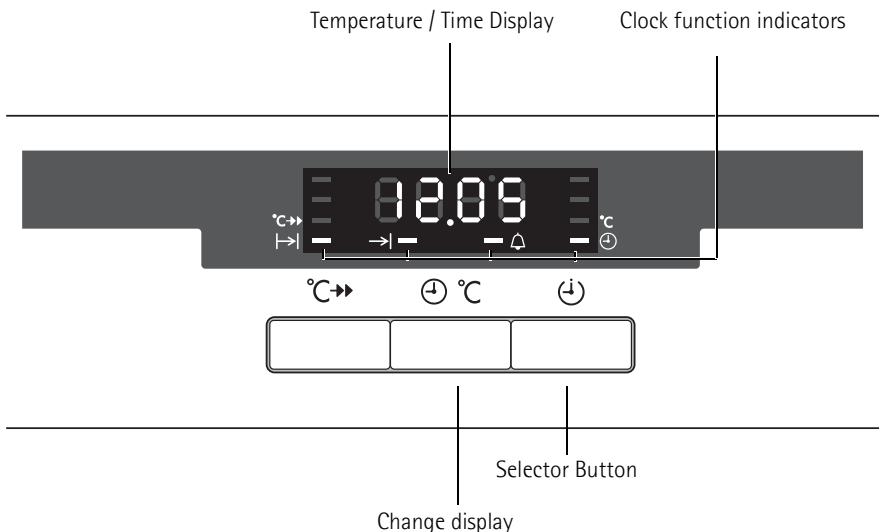

Duration |→

To set how long the oven is to be in use.

End →|

To set the switch-off time for an oven function.

Minute Minder 🔔

To set a countdown. A signal sounds after the time has elapsed.
This function does not affect the functioning of the oven.

Time of day ⌚

To set, change or check the time
(See also section "Before Using for the First Time").



How to use the clock functions

- After a clock function has been selected, the corresponding function indicator flashes for about 5 seconds. During this period, the desired times can be set or modified using the $+$ / $-$ dial.
- When the desired time has been set, the function indicator continues to flash for approx. 5 seconds. After that the function indicator is then lit. The set time begins to run in the background.
- When the clock functions Duration \rightarrow and End \rightarrow | have been completed, the oven functions dial must be turned back to "0".
- Using the Display ⏻ button, you can switch between the oven temperature and the time.




Checking the time set or remaining.

Press the Selection ⏻ button repeatedly, until the appropriate clock function flashes and the time set or remaining is displayed.


Minute Minder 🔔

1. Press the Selection ⏻ button repeatedly until the function indicator Minute Minder 🔔 flashes.

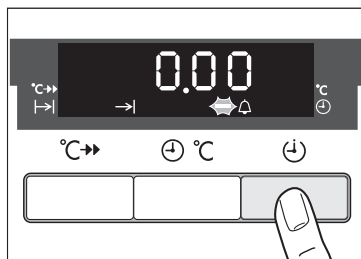

2. Using the $+$ / $-$ control knob set the desired countdown (max. 99.00 minutes).
The function indicator Minute Minder 🔔 lights up.

When 90% of the time set has elapsed, an audible signal sounds.

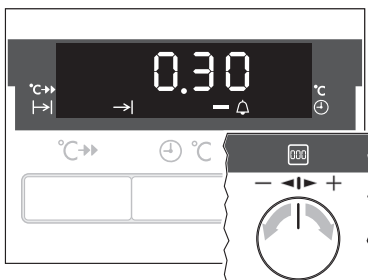


When the time has elapsed, "0.00" and the function indicator flash.


An audible signal sounds.


To stop the flashing and the audible signal:

Press any button.

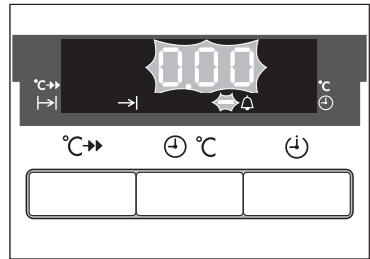


Duration |→


1. Select the oven function and temperature.
2. Press the Selection  button repeatedly until the function indicator Duration |→ **flashes**.

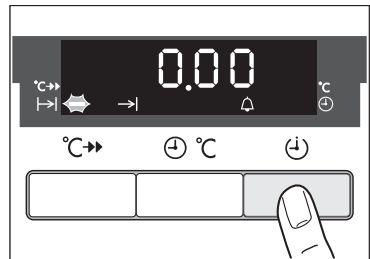

3. Using the $+$ / $-$ control knob set the desired cooking time.

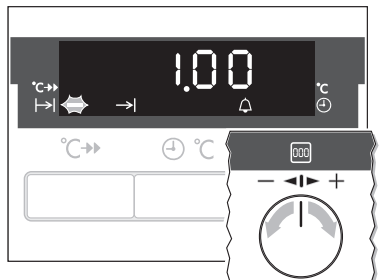


The function indicator Duration |→ lights up and the oven comes on immediately.

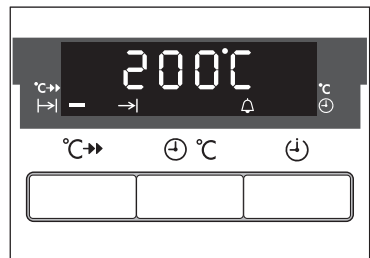



When the time has elapsed, "0.00" and the function indicator flash.
An audible signal sounds for 2 minutes. The oven switches itself off.

To stop the flashing and the audible signal:
Turn the oven functions dial to "0".

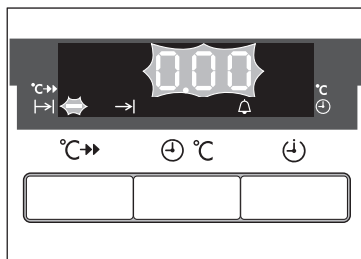


End →|

 
1. Select the oven function and temperature.
2. Press the Selection  button repeatedly until the End →| function indicator flashes.

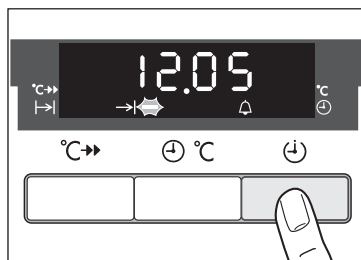

3. Using the $+$ / $-$ control knob set the desired switch-off time.

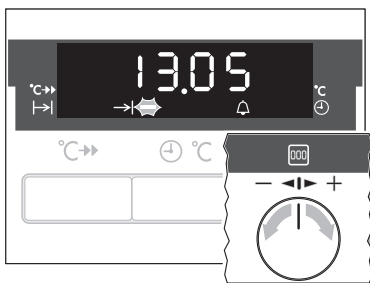


The function indicator End →| lights up and the oven comes on immediately.

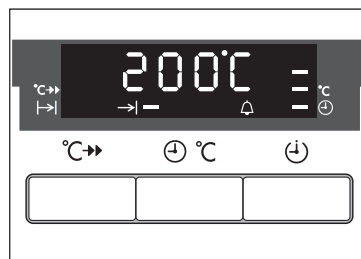

When the time has elapsed, "0.00" and the function indicator flash.

An audible signal sounds for 2 minutes. The oven switches itself off.

To stop the flashing and the audible signal:
Turn the oven functions dial to "0".

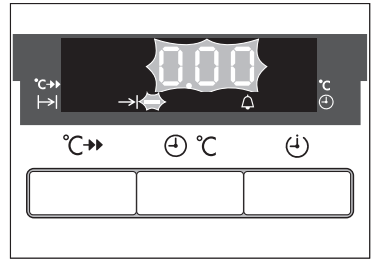


Duration |→ and End →| combined




Duration |→ and End →| can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.

1. Select the oven function and temperature.
2. Using the Duration |→ function, set the time that the dish needs to cook.
In this example, 1 hour.

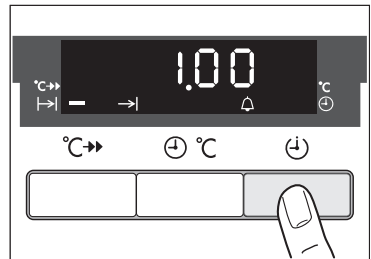

3. Using the End →| function, set the time at which the dish should be ready.
In this case, 14:05.

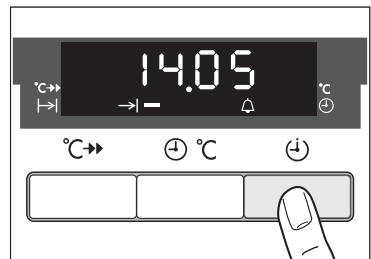

The Duration |→ and End →| function indicators light up and the temperature is shown in the display.


In this example, 200°C.

The oven switches on automatically at the time calculated.

In this case, at 13:05.

And switches itself off again when the cook time entered has elapsed.

In this case, at 14:05.

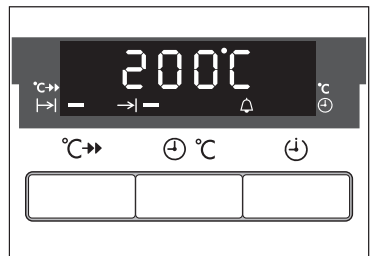


Other Functions


Switching off the display



You can save energy by switching off the clock display.


Switching off the clock display

1. Turn the $+$ / $-$ control knob to the right and hold it.
2. In addition press the Selection  button until the display goes out.

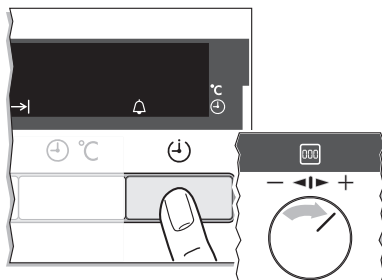

As soon as the appliance is switched on again, the display comes on automatically. When the appliance is next switched off, the clock display goes out again. To have the clock display on permanently again, you must set the clock again.

Switching on the clock display

1. Turn the $+$ / $-$ control knob to the right and hold it.
2. In addition press the Selection  button, until the display appears again.


Oven's child safety device


The oven is fitted with a child safety device. As soon as the child safety device is activated, the oven cannot be switched on.




For the child safety device to be activated, none of the oven functions must be currently selected.

Activating the child safety device

1. Turn the $+$ / $-$ dial to the left and hold it.
2. In addition press the Selection  button until "SAFE" appears "in the" display. The child safety device is now activated.

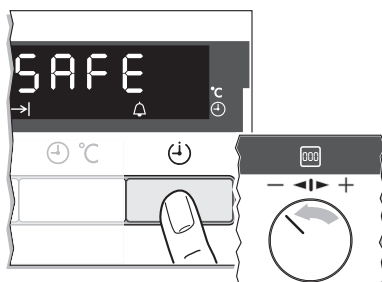

Deactivating the child safety device

1. Turn the $+$ / $-$ dial to the left and hold it.
2. In addition press the Selection  button until "SAFE" disappears "from" the display. The child safety device is now deactivated and the oven is again ready for use.

Oven automatic cut-out



If not switched off after a certain time, or if the temperature is not modified, the oven switches off automatically.

The last temperature set flashes in the temperature display.

The oven switches off when the oven temperature is:

30 - 120°C (80 - 250°F)	after	12.5 hours
120 - 200°C (250 - 390°F)	after	8.5 hours
200 - 250°C (390 - 480°F)	after	5.5 hours
250 - max°C (480 - max.°F)	after	3.0 hours

Switching on after an automatic cut-out

Switch the oven off completely.

It can then be switched on again.





The automatic cut-out is cancelled if the clock function Duration |→ or End →| is set.

Uses, Tables and Tips



Baking

Oven function: True fan  or Conventional 

Baking tins


- For Conventional  dark metal and non-stick tins are suitable.
- For True fan  bright metal tins are also suitable.

Oven levels

- Baking with Conventional  is possible on one oven level.
- With True fan  you can bake on up to 3 baking trays at the same time:


1 baking tray:

e.g. oven level 3

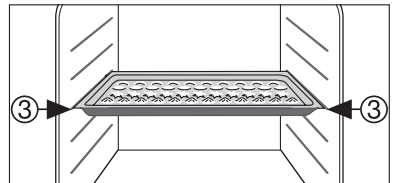


1 cake tin:

e.g. oven level 1

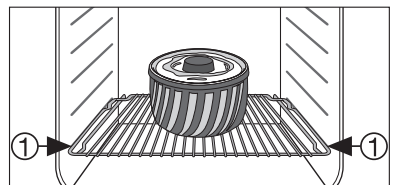


2 baking trays:

z. g., oven levels 1 and 3

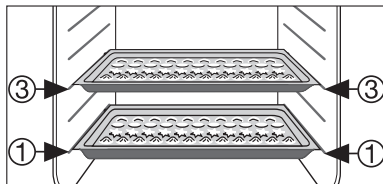



3 baking trays:

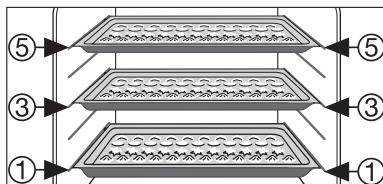oven levels 1, 3 and 5



General instructions

- Insert the tray with the bevel at the front.
- With Conventional  or True fan  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the baking tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, dough or mixture, the amount and the type of baking tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time may be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.
- Your new oven may bake or roast differently to your previous appliance. So adapt your normal settings (temperature, cooking times) and oven shelf levels to the recommendations in the following tables.










 
















 













With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to make use of the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Baking on one oven level



Type of baking		Oven function	Oven level	Temperature °C	Temperature °F	Time Hr: Mins.
Baking in tins						
Ring cake or brioche		True fan	1	150-160	300-320	0:50-1:10
Madeira cake/fruit cakes		True fan	1	140-160	280-320	1:10-1:30
Sponge cake		True fan	1	140	280	0:25-0:40
Sponge cake		Conventional	1	160	320	0:25-0:40
Flan base - short pastry		True fan	3	170-180 ¹⁾	340-360 ¹⁾	0:10-0:25
Flan base - sponge mixture		True fan	3	150-170	300-340	0:20-0:25
Apple pie		Conventional	1	170-190	340-380	0:50-1:00
Apple pie (2 tins Ø20cm, diagonally off set)		True fan	1	160	320	1:10-1:30
Apple pie (2 tins Ø20cm, diagonally off set)		Conventional	1	180	360	1:10-1:30
Savoury flan (e. g, quiche lorraine)		True fan	1	160-180	320-360	0:30-1:10
Cheesecake		Conventional	1	170-190	340-380	1:00-1:30
Cakes/pastries/breads on baking trays						
Plaited bread/bread crown		Conventional	3	170-190	340-380	0:30-0:40
Christmas stollen		Conventional	3	160-180 ¹⁾	320-360 ¹⁾	0:40-1:00
Bread (rye bread) -first of all -then		Conventional	1	230 ¹⁾ 160-180	480 ¹⁾ 320-360	0:25 0:30-1:00
Cream puffs/eclairs		Conventional	3	160-170 ¹⁾	320-340 ¹⁾	0:15-0:30
Swiss roll		Conventional	3	180-200 ¹⁾	360-400 ¹⁾	0:10-0:20
Cake with crumble topping (dry)		True fan	3	150-160	300-320	0:20-0:40
Buttered almond cake/ sugar cakes		Conventional	3	190-210 ¹⁾	380-420 ¹⁾	0:15-0:30
Fruit flans (made with yeast dough/sponge mixture) ²⁾		True fan	3	150	300	0:35-0:50

Type of baking	Oven function	Oven level	Temperature °C	Temperature °F	Time Hr: Mins.
Fruit flans (made with yeast dough/sponge mixture) ²⁾	 Conventional	3	170	340	0:35-0:50
Fruit flans made with short pastry	 True fan	3	160-170	320-340	0:40-1:20
Yeast cakes with delicate toppings (e. g, quark, cream, custard)	 Conventional	3	160-180 ¹⁾	320-360 ¹⁾	0:40-1:20
Pizza (with a lot of topping) ²⁾	 True fan	1	180-200 ¹⁾	360-400 ¹⁾	0:30-1:00
Pizza (thin crust)	 True fan	1	200-220 ¹⁾	400-420 ¹⁾	0:10-0:25
Unleavened bread	 True fan	1	200-220	400-420	0:08-0:15
Tarts (CH)	 True fan	1	180-200	360-400	0:35-0:50
Biscuits					
Short pastry biscuits	 True fan	3	150-160	300-320	0:06-0:20
Viennese whirls	 True fan	3	140	280	0:20-0:30
Viennese whirls	 Conventional	3	160 ¹⁾	320 ¹⁾	0:20-0:30
Biscuits made with sponge mixture	 True fan	3	150-160	300-320	0:15-0:20
Pastries made with egg white, meringues	 True fan	3	80-100	180-220	2:00-2:30
Macaroons	 True fan	3	100-120	220-220	0:30-0:60
Biscuits made with yeast dough	 True fan	3	150-160	300-320	0:20-0:40
Puff pastries	 True fan	3	170-180 ¹⁾	340-360 ¹⁾	0:20-0:30
Rolls	 True fan	3	160 ¹⁾	320 ¹⁾	0:20-0:35
Rolls	 Conventional	3	180 ¹⁾	360 ¹⁾	0:20-0:35
Small cakes (20per tray)	 True fan	3	140 ¹⁾	280 ¹⁾	0:20-0:30
Small cakes (20per tray)	 Conventional	3	170 ¹⁾	340 ¹⁾	0:20-0:30

1) Pre-heat the oven

2) Use the drip tray or roasting tray

Baking on more than one oven level

Type of baking	True fan 	True fan 	Tempera- ture in °C	Tempera- ture in °F	Time Hours: Mins.
	Shelf positions from bottom				
	2 levels	3 levels			
Cakes/pastries/breads on baking trays					
Cream puffs/Eclairs	1 / 4	---	160-180 ¹⁾	320-360 ¹⁾	0:35-0:60
Dry streusel cake	1 / 3	---	140-160	280-320	0:30-0:60
Biscuits/small cakes/pastries/rolls					
Short pastry biscuits	1 / 3	1 / 3 / 5	150-160	300-320	0:15-0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	280	0:20-0:60
Biscuits made with sponge mixture	1 / 3	---	160-170	320-340	0:25-0:40
Biscuits made with egg white, meringues	1 / 3	---	80-100	180-220	2:10-2:50
Macaroons	1 / 3	---	100-120	200-240	0:40-1:20
Biscuits made with yeast dough	1 / 3	---	160-170	320-340	0:30-0:60
Puff pastries	1 / 3	---	170-180 ¹⁾	340-360 ¹⁾	0:30-0:50
Rolls	1 / 4	---	160	320	0:30-0:55
Small cakes (20 per tray)	1 / 4	---	140 ¹⁾	280 ¹⁾	0:25-0:40

1) Pre-heat the oven

Tips on Baking

Baking results	Possible cause	Remedy
The cake is not browned enough underneath	Wrong oven level	Place cake lower
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher.
	Baking time too long	Set a shorter baking time




Baking results	Possible cause	Remedy
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
	Grease filter is inserted	Take out the grease filter
Cake does not cook in the baking time given	Temperature too low	Use a slightly higher oven setting
	Grease filter is inserted	Take out the grease filter





Fan baking table

Type of baking	Shelf position	Temperature °C	Temperature °F	Time Hr: Mins.
Pizza (thin crust)	1	180 - 200 ¹⁾	360 - 400 ¹⁾	20 - 30
Pizza (with a lot of topping)	1	180 - 200	360 - 400	20 - 30
Tarts	1	180 - 200	360 - 400	45 - 60
Spinach flan	1	160 - 180	320 - 360	45 - 60
Quiche Lorraine	1	170 - 190	340 - 380	40 - 50
Quark flan, round	1	140 - 160	280 - 320	60 - 90
Quark flan on tray	1	140 - 160	280 - 320	50 - 60
Apple cake, covered	1	150 - 170	300 - 340	50 - 70
Vegetable pie	1	160 - 180	320 - 360	50 - 60
Unleavened bread	1	250 - 270 ¹⁾	480 - 520 ¹⁾	10 - 20
Puff pastry flan	1	160 - 180 ¹⁾	320 - 360 ¹⁾	40 - 50
Flammekuchen (Pizza-like dish from Alsace)	1	250 - 270 ¹⁾	480 - 520 ¹⁾	12 - 20
Piroggen (Russian version of calzone)	1	180 - 200 ¹⁾	360 - 400 ¹⁾	15 - 25

1) Pre-heat the oven





Bakes and gratins table

Dish	Oven function	Shelf position	Temperature °C	Temperature °F	Time Hours mins.
Pasta bake	 Conventional	1	180-200	360-400	0:45-1:00
Lasagne	 Conventional	1	180-200	360-400	0:25-0:40
Vegetables au gratin ¹⁾	 Rotispy + turnspit	1	160-170	320-340	0:15-0:30

Dish	Oven function	Shelf position	Temperature °C	Temperature °F	Time Hours mins.
Baguettes topped with melted cheese ¹⁾	 Rotitherm + turnspit	1	160-170	320-340	0:15-0:30
Sweet bakes	 Conventional	1	180-200	360-400	0:40-0:60
Fish bakes	 Conventional	1	180-200	360-400	0:30-1:00
Stuffed vegetables	 Rotitherm + turnspit	1	160-170	320-340	0:30-1:00

1) Pre-heat the oven

Frozen ready meals table

Food to be cooked	Oven function	Shelf position	Temperature °C/°F	Time
Frozen pizza	 Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Chips ¹⁾ (300-600 g)	 Rotitherm + turnspit	3	200-220/400-430	as per manufacturer's instructions
Baguettes	 Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Fruit flans	 Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  **or Rotitherm + turnspit** 

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**
















Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven**.
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Temperature °F	Time Hours mins.
Beef						
Pot roast	1-1.5 kg	Conventional	1	200-250	400-480	2:00-2:30
Roast beef or fillet						per cm. of thickness
- rare	per cm. of thickness	Rotitherm + turnspit	1	190-200 ¹⁾	380-400 ¹⁾	0:05-0:06
- medium	per cm. of thickness	Rotitherm + turnspit	1	180-190	360-380	0:06-0:08
- well done	per cm. of thickness	Rotitherm + turnspit	1	170-180	340-360	0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg	Rotitherm + turnspit	1	160-180	320-360	1:30-2:00
Chop, spare rib	1-1.5 kg	Rotitherm + turnspit	1	170-180	340-360	1:00-1:30
Meat loaf	750 g-1 kg	Rotitherm + turnspit	1	160-170	320-340	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg	Rotitherm + turnspit	1	150-170	300-340	1:30-2:00
Veal						
Roast veal	1 kg	Rotitherm + turnspit	1	160-180	320-360	1:30-2:00
Knuckle of veal	1.5-2 kg	Rotitherm + turnspit	1	160-180	320-360	2:00-2:30

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Temperature °F	Time Hours mins.
Lamb						
Leg of lamb, roast lamb	1-1.5 kg	 Rotitherm + turnspit	1	150-170	300-340	1:15-2:00
Saddle of lamb	1-1.5 kg	 Rotitherm + turnspit	1	160-180	320-360	1:00-1:30
Game						
Saddle of hare, leg of hare	up to 1 kg	 Conventional	3	220-250 ¹⁾	420-480 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg	 Conventional	1	210-220	400-440	1:15-1:45
Haunch of venison	1.5-2 kg	 Conventional	1	200-210	400-420	1:30-2:15
Poultry						
Poultry portions	200-250 g each	 Rotitherm + turnspit	1	200-220	400-440	0:35-0:50
Half chicken	400-500 g each	 Rotitherm + turnspit	1	190-210	380-420	0:35-0:50
Chicken, poulard	1-1.5 kg	 Rotitherm + turnspit	1	190-210	380-420	0:45-1:15
Duck	1.5-2 kg	 Rotitherm + turnspit	1	180-200	360-400	1:15-1:45
Goose	3.5-5 kg	 Rotitherm + turnspit	1	160-180	320-360	2:30-3:30
Turkey	2.5-3.5 kg	 Rotitherm + turnspit	1	160-180	320-360	1:45-2:30
Turkey	4-6 kg	 Rotitherm + turnspit	1	140-160	280-320	2:30-4:00
Fish (steamed)						
Whole fish	1-1.5 kg	 Conventional	1	210-220	400-440	0:45-1:15

1) Pre-heat the oven

Grill Sizes

Oven function: Grill + turnspit , Dual grill + turnspit , Rotitherm + turnspit  with maximum temperature setting








Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- For grilling, place the **shelf** in the **recommended shelf position**.
- Always insert the **tray for collecting the fat** into the **first shelf position** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling with the rotary spit

Dish	Quantity kg		Function	Temperature °C/°F	Grilling time in hours:mins. (guideline)
1 chicken	approx. 1		Dual grill + turnspit	240/460	1:00-1:10
2 chickens	approx. 1 each		Dual grill + turnspit	240/460	1:15-1:20
1 duck	1,5-2		Dual grill + turnspit	240/460	1:20-1:40
1 rolled pork joint	1		Dual grill + turnspit	240/460	1:45-2:15
Pork joint (pre-cooked for ½ hr.)	1-1,3		Dual grill + turnspit	240/460	2:00-2:30

Defrosting

Oven function: Defrost  (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Drying

Oven function: True fan 

- Use oven shelves covered with greaseproof paper or baking parchment.
- You get a better result if you switch the oven off halfway through the drying time, open the door and leave the oven to cool down overnight.
- After this, finish drying the food to be dried.

Food to be dried	Temperature in °C	Temperature in °F	Oven level		Time in hours (Guideline)
			1 level	2 levels	
Vegetables					
Beans	60-70	140-160	3	1 / 4	6-8
Peppers (strips)	60-70	140-160	3	1 / 4	5-6
Vegetables for soup	60-70	140-160	3	1 / 4	5-6
Mushrooms	50-60	140-160	3	1 / 4	6-8
Herbs	40-50	140-160	3	1 / 4	2-3
Fruit					
Plums	60-70	140-160	3	1 / 4	8-10
Apricots	60-70	140-160	3	1 / 4	8-10
Apple slices	60-70	140-160	3	1 / 4	6-8
Pears	60-70	140-160	3	1 / 4	6-9

Making preserves

Oven function: Base heat 

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Temperature in °F	Cooking time until simmering in mins.	Continue to cook at 100 °C / 220 °F in mins.
Soft fruit				
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	320-340	35-45	---
Unripe gooseberries	160-170	320-340	35-45	10-15
Stone fruit				
Pears, quinces, plums	160-170	320-340	35-45	10-15
Vegetables				
Carrots ¹⁾	160-170	320-340	50-60	5-10
Mushrooms ¹⁾	160-170	320-340	40-60	10-15
Cucumbers	160-170	320-340	50-60	---
Mixed pickles	160-170	320-340	50-60	15
Kohlrabi, peas, asparagus	160-170	320-340	50-60	15-20
Beans	160-170	320-340	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: First switch off the appliance and let it cool down before carrying out any cleaning.

Warning: For safety reasons, do **not** clean the appliance with steam blasters or high-pressure cleaners.

Attention: Do not use any corrosive cleaning fluids, sharp objects or stain removers.

Do not clean the glass oven door with abrasive fluids or metal scrapers, which could scratch the surface. The glass could crack and shatter.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and a solution of hot water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.
- Please do not use scouring agents and abrasive sponges.

Oven interior



Warning: For the purpose of cleaning the oven must be switched off and have cooled down.



Clean the appliance after each use. In this way, residue is easier to clean off and does not have the chance to burn on. Residue that is not removed may cause changes to the surface colour when Pyroluxe is used.

1. The oven light switches on automatically when the oven door is opened.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



In the event of stubborn dirt, clean using Pyroluxe.



Important: If you are using an oven spray, be sure to follow the manufacturer's instructions.

Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Fat Filter

1. Clean the fat filter in hot water and washing up liquid or in the dishwasher.
2. Badly burned on soiling can be removed by boiling the filter in a little water to which 2-3 tablespoonsful of dishwasher cleaner has been added.

Pyrolytic cleaning



Warning: The oven gets extremely hot during this process. Young children must be kept away.




Important! Before carrying out pyrolytic cleaning, all removable parts including the side rails, must be removed from the oven.



If you use the **oven shelf runners** that are available as special accessories, these must be removed **before pyrolytic cleaning**.

If the side rails or oven shelf runners are still in place, 'C1' appears in the clock display. The pyrolytic cleaning process then cannot be started due to a safety cut-out that protects the side rails/oven shelf runners.

Pyrolytic cleaning

1. First remove the worst of the residue manually.
2. Select oven function Pyroluxe 
 - "3:15" appears in the display,
 - Cook time flashes for approx. 5 seconds.Pyrolytic cleaning then starts.



The Light does not work.

When a pre-set temperature is reached, the door is locked.

The bars of the heat indicator light up, until the door is unlocked again.

Changing the length of time for the pyrolytic cleaning

1. Proceed as described in the section "Pyrolytic cleaning".
2. As long as Duration \rightarrow is flashing, select the desired length for the process using $+$ or $-$:
 " / 2:15" or "3:15"
 Duration \rightarrow flashes for approx. 5 seconds.
 Pyrolytic cleaning then starts.



If Duration \rightarrow is no longer flashing, press the Selection \square button again and then perform the setting procedure.

Changing the switch-off time for the pyrolytic cleaning

The switch-off time can be delayed using the clock function End \rightarrow (within 2 minutes of the pyrolytic cleaning starting).

When the different processes for pyrolytic cleaning are set:



- P2 - 2:15 = Pyroluxe easy: For a light degree of soiling,
 P1 - 3:15 = Pyroluxe intensive: For a high degree of soiling.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2).

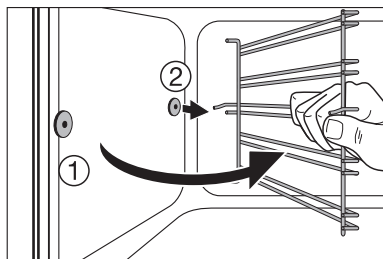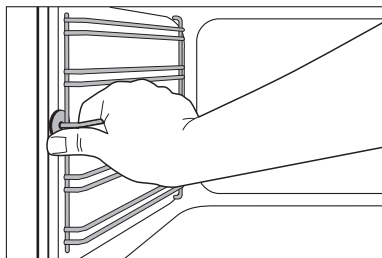


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

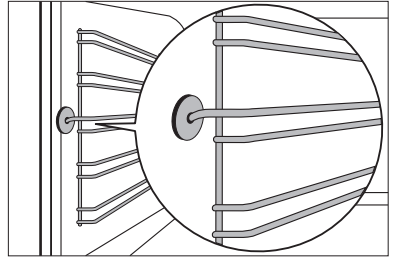

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

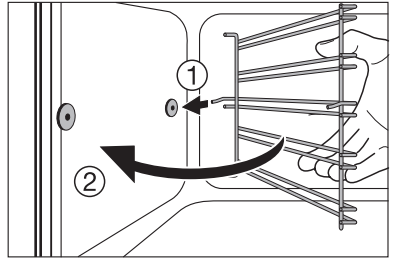

Oven lighting



Warning: There is a danger of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Remove the fuses in the fuse box or switch off the circuit breaker.



Place a cloth on the oven floor to protect the oven light and glass cover.

Replacing the oven light bulb/cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary:
Replace bulb with a 40 watt, 230 V, 300 °C heat-resistant oven light bulb.
3. Refit the glass cover.

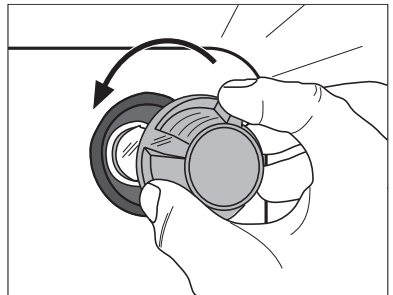


Oven door


For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges


1. Open the oven door as far as it will go.

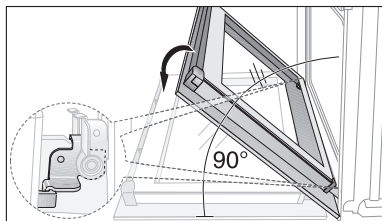

2. Undo the **clamping levers** (A) on both door hinges **fully**.

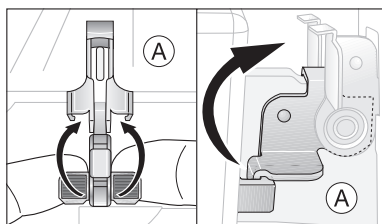


3. Close the oven door as far as the first position (approx. 45°).

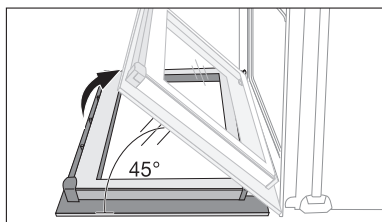

4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care:** It is heavy).




Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

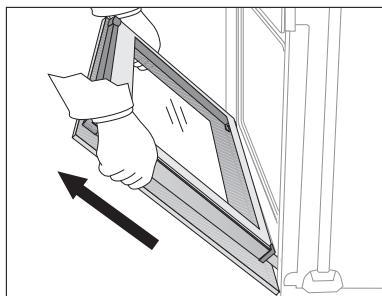


Hanging the oven door back on its hinges



1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°. Position the recesses on the bottom of the oven door on the hinges on the oven. Let the door slide down as far as it will go.

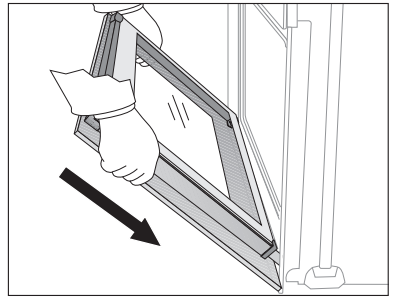

2. Open the oven door as far as it will go.

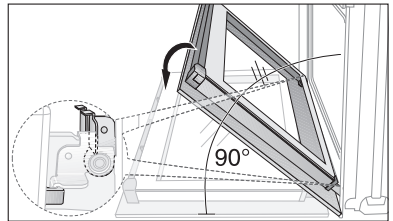

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

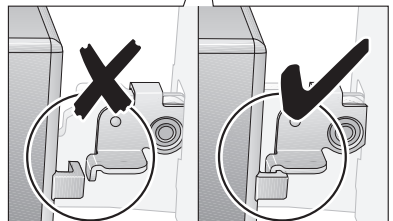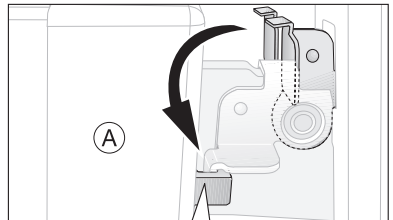

4. Close the oven door.

Oven door glass


The oven door is fitted with four panels of glass mounted one behind the other. The inner panels can be removed for cleaning.




Important Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing door glass panels


1. Open the oven door as far as it will go.

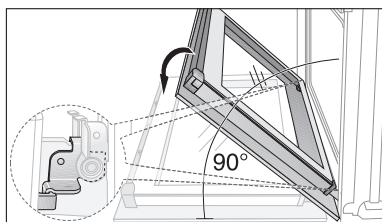


2. Undo the **clamping levers** (A) on both door hinges **fully**.

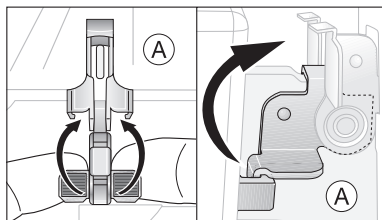


3. Close the oven door as far as the first position (approx. 45°).

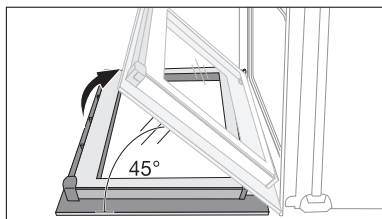

4. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

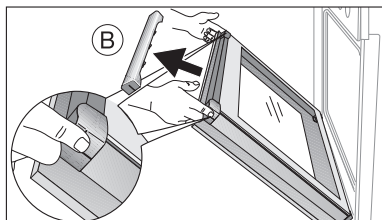

5. Take hold of the door glass panels on their upper edge one after the other and take them out of the guide by pulling them upwards.

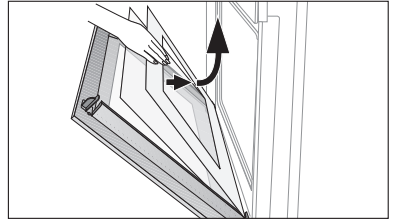

Cleaning the door glass panels


Clean the door glass panels thoroughly with a solution of water and washing up liquid. Then dry them carefully.

Putting the door glass panels back.


1. From above insert the door glass panels one after the other into the door profile at the bottom edge of the door at an angle and lower them.



The two smaller panels first, then the larger panel.


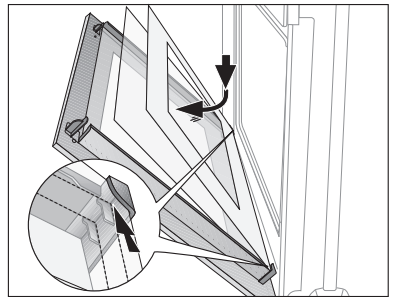


2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

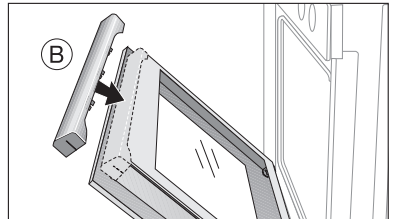






On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

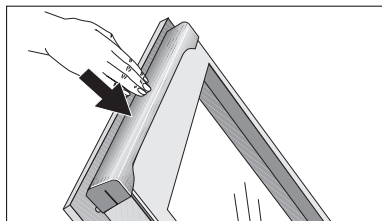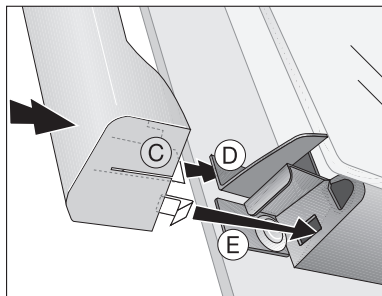

3. Open the oven door as far as it will go.

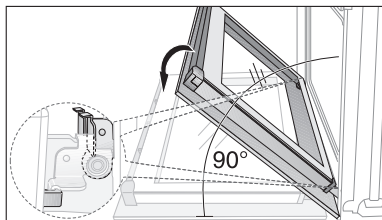

4. Fold up the clamping levers (A) on both door hinges back into their original positions.

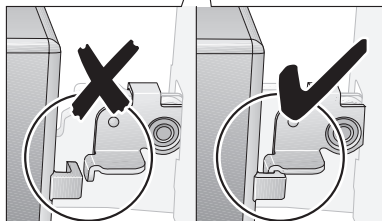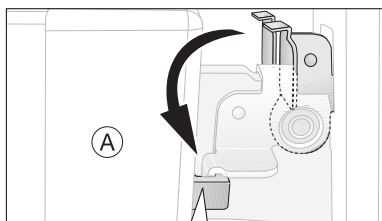

5. Close the oven door.

What to do if ...

Problem	Possible cause	Remedy
The oven is not heating up	The oven has not been switched on	Switch the oven on.
	The clock has not been set	Set the clock.
	The required settings have not been set.	Check the settings.
	The oven's automatic cut-out has been triggered.	See Automatic cut-out
	The fuse in the house's electrical wiring (fuse box) has been tripped.	Check the fuse. If the fuses trip repeatedly, please call a qualified electrician.
The oven lighting is not operating	The oven light is broken.	Change the oven light bulb.
Pyroluxe is not working ("C1" appears in the clock display)	Side rails/oven shelf runners have not been removed	Remove side rails/oven shelf runners
F2 appears in the clock display	Door not properly closed or door lock defective	Close door properly; Turn the appliance off and on again via the house fuse or the safety switch in the fuse box; If displayed again, please contact the Customer Care Department
A fault code that is not listed above appears in the clock display	Electronic fault	Switch the appliance off and on again via the house fuse or the safety switch in the fuse box. If it is displayed again, please contact the Customer Care Department
The rotary spit does not turn.	The wrong oven function has been set.	Select the oven function with rotary spin.
	The rotary spit is not inserted correctly.	Push the rotary spit in as far as the stop.

If you are unable to remedy the problem by following the above suggestions, please contact your local Service Force Centre.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been operated incorrectly, the engineer's visit will be chargeable, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Technical Data

Oven Interior Dimensions

Height x Width x Depth	31,0 cm x 40,5 cm x 41,0 cm
Capacity (usable capacity)	51 l

Regulations, Standards, Directives

This appliance meets the following standards:

- IEC 60 335-1 and IEC 60 335-2-6
relating to the safety of electric appliances for household use and similar purposes and
- IEC 60350
relating to the operating features of household electric cookers.

Voltage of mains supply	208V	240V
Oven mode: Hot Air Rated Power Measured Power Temperature rise	 2380 Watt 155 K	 3160 Watt 155 K
Oven mode: Top Bottom Rated Power Measured Power Temperature rise	 1670 Watt 180 K	 2200 Watt 180 K

Installation Instructions



Attention: The new appliance may only be installed and connected by a **registered expert**.

Please comply with this. If you do not, any damage resulting is not covered by the warranty.




Safety information for the installer



- The electrical installation is to be set up so that the appliance can be isolated from the mains with a minimum 3mm all-pole contact separation. Suitable separation devices include e.g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- Anti-shock protection must be provided by the installation.
- The built-in unit must meet the stability requirements of DIN 68930.

The use of thermal insulation bars is not permitted in cookers with Pyroluxe, if the recess has a back wall and a solid shelf.

However with a shelf shortened by at least 20 mm and ventilation in the plinth of the same diameter, it becomes possible to build-in.

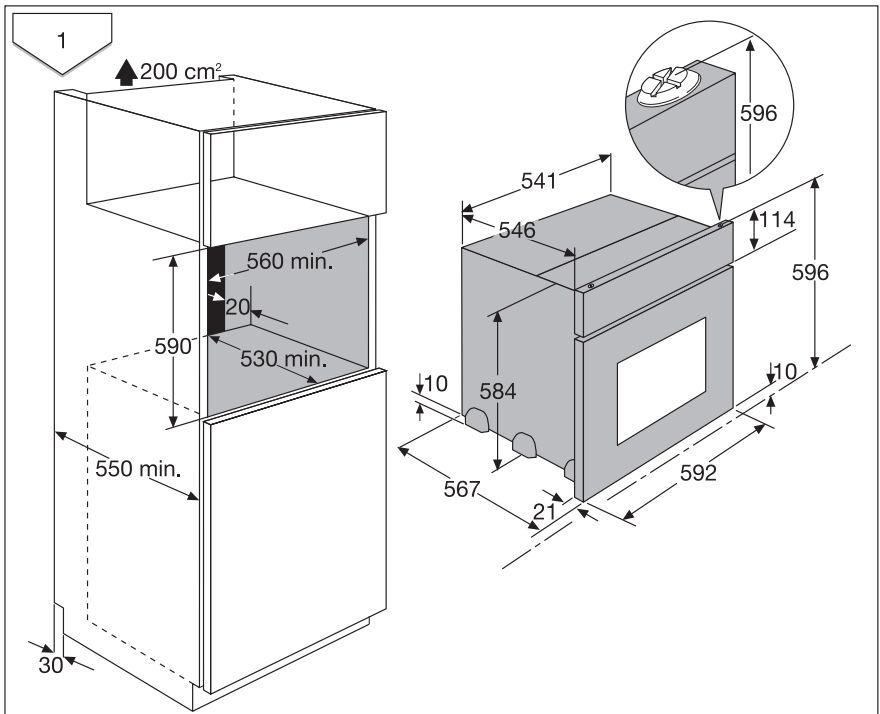

Connect the Armour Cable into the junction box, and connect the wires according to National and Local electrical codes.

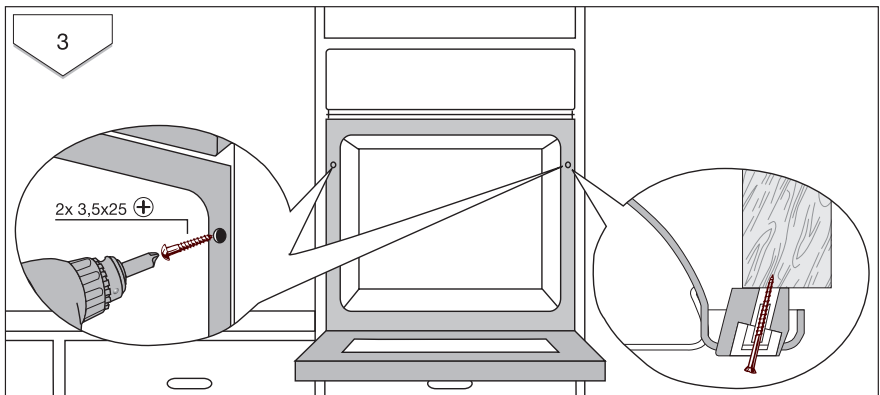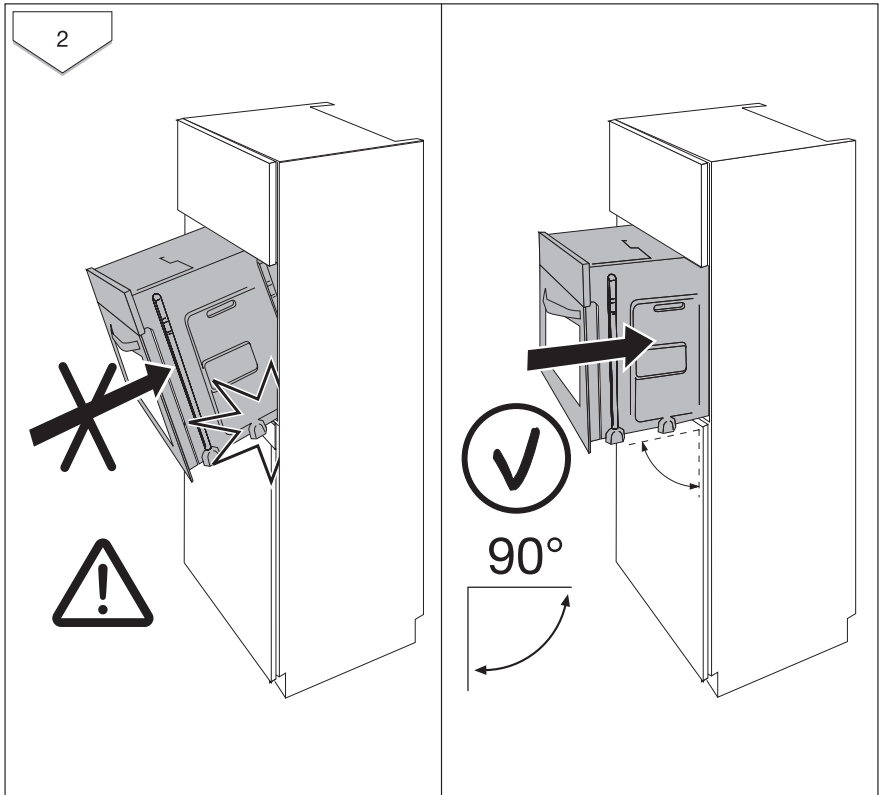

Guarantee/Customer Service

EURO-LINE APPLIANCES

LENGTH OF WARRANTY:**TWO YEAR FULL WARRANTY**

from original date of purchase, including parts and labour, to the first purchaser of this appliance

EURO-LINE WILL PAY FOR:

Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

EXCEPTIONS:**EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:**

1. To install or correct the installation of an appliance
2. To instruct the use of an appliance.
3. To replace house fuses, re-set circuit breakers or correct house wiring.
4. To correct house plumbing.
5. To clean drains, filters or garbage disposers.
6. To repair an appliance if it fails due to misuse or abuse.

EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:

1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages.

For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

For Service and Parts Contact:**EURO-PARTS, USA**

Tel: 1-800-561-4614

Fax: 1-519-528-5001

EURO-PARTS, CANADA

Tel: 1-800-678-8352

Fax: 1-519-528 5001

EURO-LINE APPLIANCES

1-800-421-6332

Tel. Direct: 1-905-829-3980

Fax: 1-905-829-3985

User Instructions & Installation Manual

Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.

- Model number (shown on the rating plate)

- Serial number (shown on the rating plate)

- Date of purchase.

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

If service is required, contact the Service Center:

EURO-PARTS, CANADA**Tel: 1 800 678 8352****Fax: 1-519-528-500****EURO-PARTS, USA****Tel: 1-800-561-4614****Fax: 1-519-528-5001****DISTRIBUTED BY:**

EURO-LINE APPLIANCES
2150 WINSTON PARK DRIVE, UNIT #20
OAKVILLE, ONTARIO
CANADA L6H 5V1
1-800-421-6332
Tel: 905-829-3980
Fax: 905-829-3985
www.euro-line-appliances.com

Service


In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

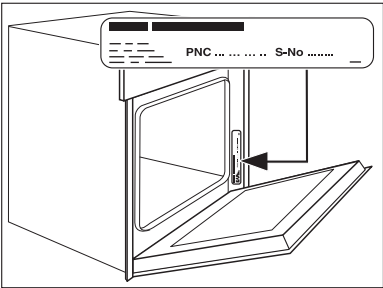

Model description:

PNC:

S No:

