
$\rightarrow$ 



# **REFRIGERATOR** INSTRUCTION MANUAL


# MODEL NO .: FR-2701

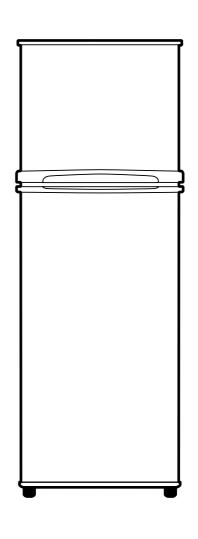

Thank you for selecting this refrigerator.

Before using the refrigerator, please read this manual carefully.

## **FEATURE CHART**

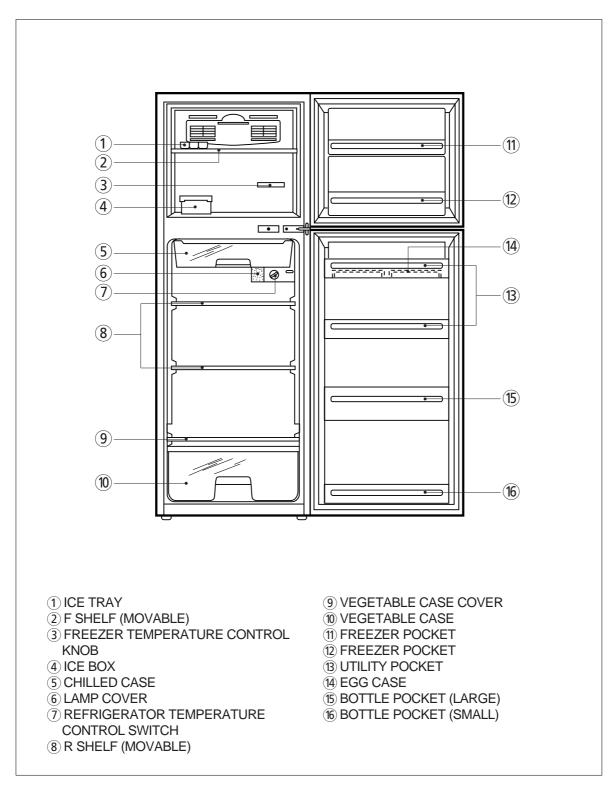

1

 $\rightarrow$ 

## Here are the features of your new refrigerator.

#### Take a moment to know all the features designed for the convenience of the user.

#### ■ Ice Tray

)

Fill 3/4 of the ice tray with water, as the volume expands when the water is frozen. Place the tray in the freezer compartment. To release ice cubes, twist the ice tray slightly. Ice cubes will be easier to remove if it is held for a short while under running water.

#### Movable refrigerator and freezer shelves

Storage shelves should be adjusted depending on the height of the food stored. To do this, pull the shelves slightly forward.

#### Defrost-drain Vessel

Since dust accumulated on the drain case decreases the evaporation efficiency, you should clean the drain case at regular intervals.

#### i **ÆLamp Cover**


- To remove the lamp cover
- 1. Push up the bottom end of the lamp cover gently, then pull out.
- 2. Reverse procedure to join together.

#### i ÆVegetable case

May be used for fruit and vegetable storage. Both the vegetable case and its cover shelf are removable for easy cleaning. Simply slide forward to remove.

#### i ÆUtility Pocket (Top)

The Egg Case in this pocket can be turned upside down for the use of small size goods.

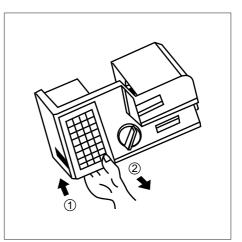

**CAUTION:** 1. Check your voltage before inserting the power supply cord into the socket.

- 2. Contact the earthing conductor to this unit with an attachment earthing screw.
- 3. Do not spill liquid on this unit.
- 4. Do not use flammable spray, such as painting, near this unit.
- 5. Do not place ignitable material, such as benzine, L.P. gas, alcohol etc., into this unit.
- 6. Take precautions against leakage of any gas equipment near this unit.
- 7. Keep children from hanging on the door of this unit.
- **8.** Do not reinsert the power supply cord within 5 minutes after releasing it from the socket. If not, there may be problems with the compressor.

i & For lock installed refrigerators only.



)


#### CAUTION

When you put or take out food from the refrigerator, be careful not to hit your head on the lock as there is a protrusion on the door of your refrigerator.


 $\rightarrow$ 

## **METHODS OF SAFE INSTALLATION**

### **1. SAFE INSTALLATION PLACE FOR YOUR REFRIGERATOR**

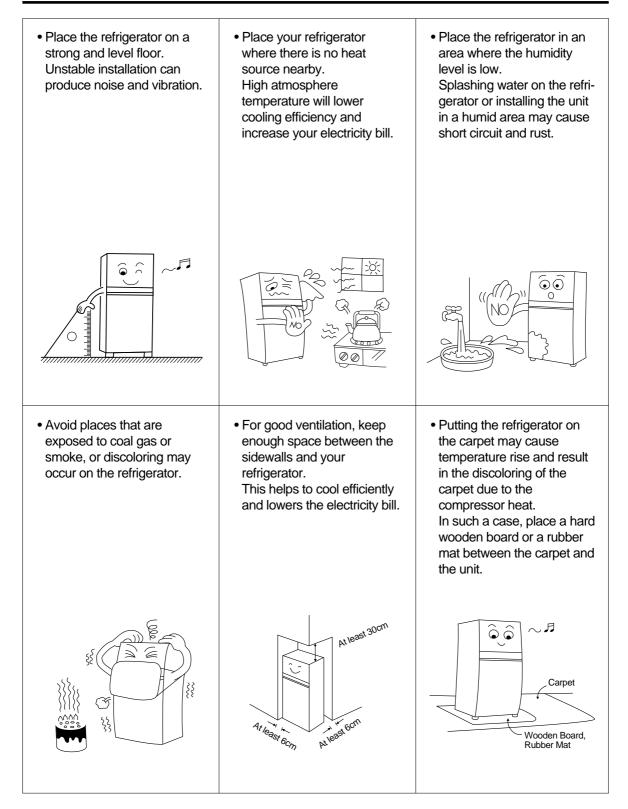

## 2. INSTALLATION STEPS

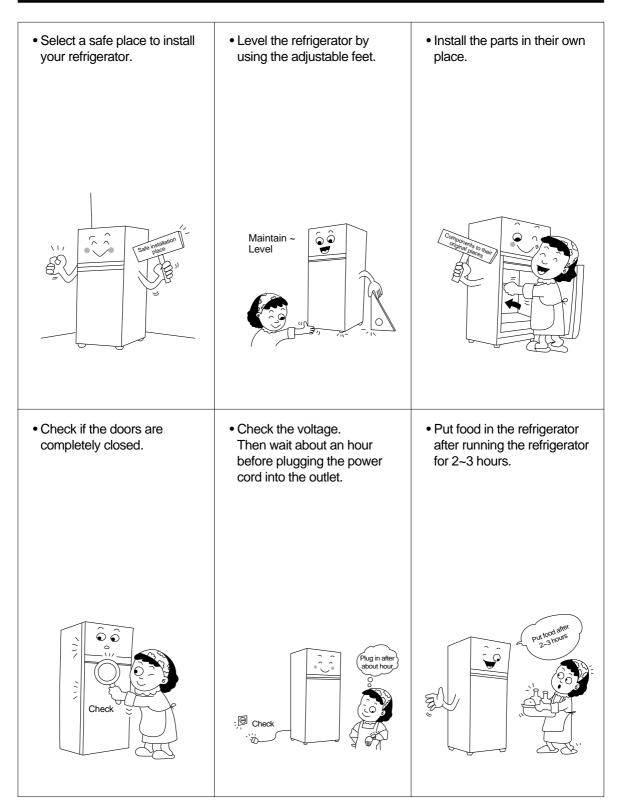


(

5


 $\rightarrow$ 

 $\rightarrow$ 

# 3. WHAT YOU NEED TO KNOW BEFORE MOVING OR RELOCATING THE REFRIGERATOR!

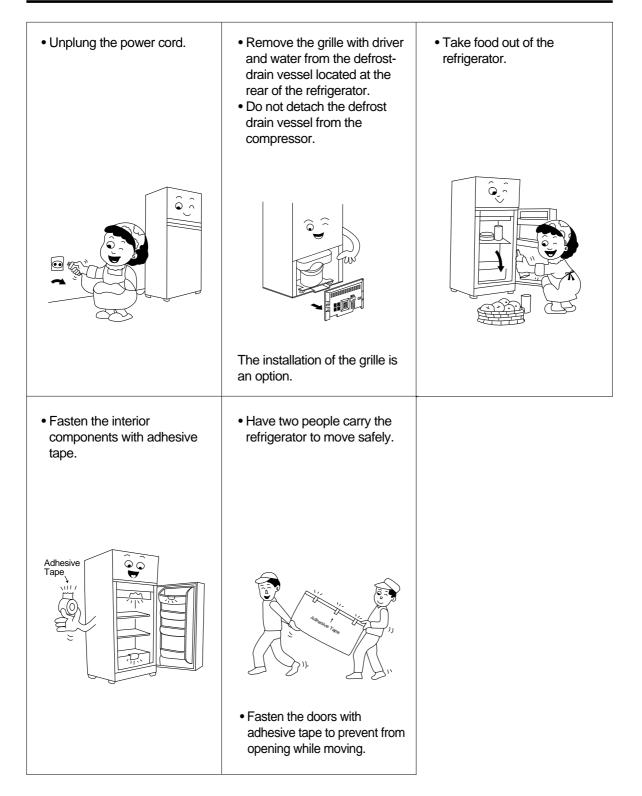

## 4. CLEANING YOUR REFRIGERATOR

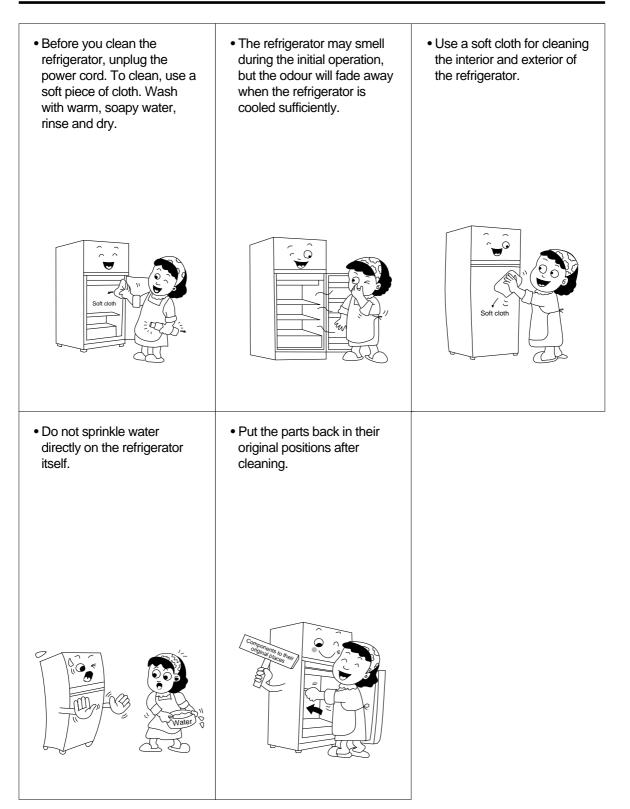

(


 $\rightarrow$ 

## How to Install

### Location

Install the refrigerator in a convenient location away from extreme heat and cold. Allow at least 6cm clearance between the refrigerator and side wall so that the door may open for a fully usable interior and the refrigerator may have good air circulation. The refrigerator is not designed for recessed installation.

- Select a strong and level floor.
- Keep 6cm of space between the refrigerator and the walls.

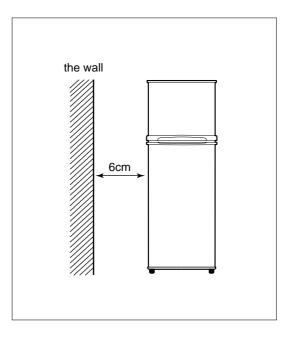

### Leveling

 $\rightarrow$ 

Level the refrigerator so that it rests solidly on the floor without rocking. There are two leveling feet at each front corner. Turn to the left to raise a corner, to the right to lower it. Use shims under the rear corners, if necessary.

- If you want the refrigerator door to close naturally, adjust the leveling feet so that the front of the refrigerator is raised by 5mm.
- If you want the refrigerator to remain motionless when open, adjust the leveling feet so that all four corners are leveled with each other.
  - **NOTE:** All packing materials used to ensure safety during transport should be removed. You must remove the transport safty packing and wipe off any possible adhesive tape residues with a petroleum-based cleaner or similar solvent.

## How to operate

### **1. TEMPERATURE CONTROL**

Temperature is controlled by thermostat automatically. The Temperature Control inside the refrigerator controls the degree of cooling for each compartment.

Freezer Temperature Control	Refrigerator Temperature Control
TEMP. CONTROL MIN MED MAX WINTER I I I IIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	WINTER MAX MED TEMP. CONTROL
The control has four settings form MIN to WINTER. The WINTER mode is available only if atmosphere temperature is below 10 °C.	The control has the four settings from MIN to WINTER. The WINTER mode is available only if atmosphere temperature is below 10 °C.

### Starting your new refrigerator

1. Clean the refrigerator thoroughly. Wipe the outside with a dry cloth, and the inside with a damp cloth.

- 2. Set the temperature control knob at normal position.
- 3. Connect the power supply cord.

### To control temperature

## Many factors may influence the internal temperature of the refrigerator and freezer compartments.

- The temperature and humidity of the surrounding environment.
- The opening frequency of the doors and the amount of warm food placed in the refrigerator.
- The combination of food and containers stored in the refrigerator. For these reasons, you may want to adjust the control to suit the season and your needs.

)

- Turn the temperature control in the refrigerator and freezer compartments toward WINTER for colder temperature and toward MIN for warmer temperature.
- Allow approximately 12 hours or overnight for the temperature to stabilize. Then check to see if further adjustments are necessary.

### To turn off the refrigerator

CAUTION

light bulb or cleaning the inner parts.

Disconnect the power supply cord. Remove icing case and food. Leave doors ajar for ventilation and dehumidification of both compartments.

### 2. DEFROSTING THE REFRIGERATOR

You will never have to defrost your refrigerator as it is designed to defrost itself completely and automatically.

To avoid the risk of electric shock or death, unplug the power cord before replacing a burned out

### 3. RADIANT HEAT


)

With the Refrigerating System in operation, it is likely that the cabinet will feel warm at the front edges and sides. This does not indicate trouble.

It is due to the hot-line used in this type of Refrigerating System which consists of piping hot gas from the (motor-driven) compressor along the front edges, the sides of the cabinet and the center partition to prevent dewing. This has nothing to do with the storage temperature inside.

(The thick line indicates the hot-line)

**NOTE:** During spells of hot, humid weather and in rainy season, moisture may develop on the cabinet, just as water condenses around a cold glass of water. It is not an abnormal condition ; wipe off the moisture with a dry cloth. This can also happen when the refrigerator is not installed in an appropriate place.

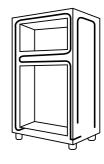

## WHAT TO DO...

#### When not operating for a long time

- Remove the power supply cord.
- Dry your refrigerator by opening the door for 2-3 days.

#### When you get ready to move

- Securely fasten movable interior parts (or remove and pack them separately)
- DO NOT lay down your refrigerator horizontally, or the compressor may be damaged.

#### Before you call for service, please check the following points first.

#### If the refrigerator is not operating :

- Is the power supply cord unplugged?
- Is the home fuse or circuit out of order?

#### If the refrigerator is warmer than usual :

- Has the door been opened frequently or for a long period?
- Are there any hot food or anything that has been stored without cooling?
- Is the clearance between the refrigerator and the wall given sufficiently?

#### If there are unusual sounds :

- Is the refrigerator placed on a levelled floor?
- Are there any foreign objects behind the refrigerator?
- Are dishes on refrigerator shelves vibrating?

# 

Improper use of the grounding plug can result in electric shock. If a grounding adapter is used, make sure the receptacle box is fully grounded.

?

)

### POWER CORD REPLACEMENT

If the power cord of the refrigerator is damaged, have it replaced by a repair shop appointed by the manufacturer's local sales branch or company.

## **REFRIGERATOR WARRANTY**

Daewoo Electronics Canada Inc. (also known as DECI) warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 years labour and 1 years parts, plus an additional 4 years part warranty on COMPRESSOR only, from the date of original purchase. This warranty applies only to product purchased from an authorized DECI dealer and used within the boundaries of Canada. This warranty does not apply to product that has been improperly installed, subjected to usage for which the product was not designed, misused or abused, damaged during transportation, or which has been altered or repaired in any way that affects the reliability or detracts from its performance.

## How to Obtain Warranty Service

Warranty service can only be provided by an authorized DECI Service centre. For the closest authorized Service centre to you, please contact your Dealer. In order to receive warranty service you must provide the authorized Service centre with a copy of proof of purchase, signifying the date of purchase and the name of the Dealer from whom you purchased the product.

## **Statutory Warranties**

)

The purchaser may have rights under existing provincial or federal law, and where any terms of this warranty are prohibited by such laws, they are deemed null and void, but the remainder of the warranty shall remain in effect.

If you require further assistance, you may contact us at:

Daewoo Electronics Canada Inc. 170 Alden Road, Markham, Ontario L3R 4C1 Tel: (905)415-7290