



**SAGEM**

**D30T-V-H**

## User Guide



**D30T-V-H**



**SAGEM**

## INTRODUCTION

Dear customer:

Thank you for purchasing a SAGEM DECT telephone; we appreciate your trust in us.

This product was manufactured with the utmost care, should you encounter any difficulties during its use, we recommend that you refer to this user guide. You can also find information on the following site:

<http://www.sagem.com/faq>

For your comfort and safety, we ask that you read the following paragraph carefully:

### Recommendations and safety instructions



Your DECT telephone must not be installed in a humid room (wash room, bathroom, laundry room, kitchen, etc.) unless it is 1.50 m away from a water point, or outside. Your telephone must be operated at temperatures ranging from 5°C to 45°C.



Only use the supplied power adapter, connect it to the base socket according to the installation instructions provided in this booklet and the indications on the identification label affixed to it (voltage, current, electric network frequency). As a safety measure, you can use the power adaptors to cut off the 230V current in case of danger. They must be located near to the device, and must be easily accessible.



This telephone was designed for use on the public switched telephone network (PSTN). In case of a problem you must first contact your reseller. Only use the supplied telephone cord.



For your personal safety, never place your handset on the base without the batteries, or without the battery cover, you could get an electric shock.



To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 550 mAh, never use non rechargeable batteries. Insert the batteries in the handset battery compartment respecting polarity.



At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet.



Your DECT telephone has an inside radio range of about 50 metres and up to 300 metres in open space. The immediate presence of metal parts (of a television for example), or of any electric appliance may result in range reduction.



Some sensitive medical equipment and safety equipment may be affected by the radio-frequency transmissions of your telephone. In all cases, we ask that you respect the safety recommendations. In areas where storms are frequent, we recommend that you protect your telephone line using a surge protection device.



**This equipment does not function in the case of an electric network shutdown: For the emergency calls, use a self-contained cord telephone.**

The CE marking certifies that the product meets the essential requirements of Directive 1999/5/CE of the European Parliament and of the Council pertaining to microwave radio equipment and telecommunication terminal equipment, for the safety and health of users, for electromagnetic interference. Furthermore, it efficiently uses the frequency spectrum attributed to ground and spatial communication to prevent damaging interference.

The declaration of compliance may be looked up on the [www.sagem.com](http://www.sagem.com) site, section "support" or can be obtained from the following address:

**SAGEM AUSTRALASIA PTY LTD**  
**ABN: 43 003 099 812**  
**Unit 1, 7-9 Orion Road**  
**Lane cove NSW 2066**  
**P.O. Box 4072**  
**Lane Cove 1595**  
**Australia**

## CONTENTS

Your telephone	5	Call log	30
Unpacking	5	Viewing the received and dialled call log	30
Your base	5	Calling the last number dialled (Redial)	30
Your handset	7	Calling a number listed in the dialled	
Connecting the base	8	and received call log	31
Handset set-up	9	Viewing the events log	31
Handset turning on and off	10	Accessories	32
Replacing the batteries	10	Alarm clock	32
Getting started	11	Setting the alarm clock	32
Making a call	11	Activating or deactivating	
Receiving a call	11	the alarm clock	32
During a call	11	Modifying the alarm clock time	32
Handsfree	11	Changing the alarm clock ring tone	32
Call transfer	12	Timer	33
During a call	12	Changing the programmed time	
Accessing the phonebook or call log	13	of the timer	33
Secret mode	13	Changing the timer ring tone	33
Ending a call	14	Displaying or hiding the programmed	
Communication between two handsets	14	time of the timer	34
Menu structure	15	Birthday alarms	34
Your phonebook	17	Adding a new birthday alarm	34
Viewing the phonebook	17	Viewing a birthday alarm	34
Creating an entry	17	Modifying or deleting a birthday alarm	34
Using a phonebook entry to place a call	18	Monitoring a room	35
Searching for a contact	18	Ring tones	36
Performing a quick search	18	Changing the ring tones	36
Performing a refined search	19	Activating or deactivating the beeps	36
Editing an entry	19	Activating/deactivating the silent mode	37
Deleting an entry	19	Settings	38
Sending a SMS from phonebook	20	Programming a key	38
SMS service	21	Modifying the date and time	38
Sending a text message	21	Using the auto hang up	
Writing a text message	21	and pick up features	38
Sending an SMS	22	Modifying the Voice box number	
Reading a message	23	(model D30T)	39
Managing read messages	24	Modifying the language	39
Modify the SMS mode	24	Locking/unlocking the keypad	40
Viewing the memory status	25	Programming an emergency number	40
Emptying an SMS folder	25	Defining the call time limit	41
SMS settings	26	Defining forbidden prefixes - Call barring	42
Modifying the SMS centre numbers	26	Modifying the base code	42
Choose the SMS transmission centre	26	Authorising listening in	43
Modifying the terminal number	26	Registering a new handset to a base	43
SMS boxes	27	Modifying the base preference	44
Sub-Addressing	27	Resetting the handset	44
Creating a personal box	28	Personal registering	45
Viewing a message from a personal box	28	Using a handset to put the base	
Modifying or removing a personal box	29	in registration mode	46
		Resetting the base	46
		De-registering a handset	47

## CONTENTS

Renaming the base	47
Modifying the network type	48
Modifying the flash duration (R key)	48
Setting a PABX prefix	49
Answering machine (Model D30V)	50
Enabling/disabling the answering machine	50
Modifying the OGM	51
<i>Recording a personal outgoing message</i>	51
<i>Using a pre-recorded anonymous OGM</i>	51
<i>Deleting all your personal OGMs</i>	51
Playing messages	52
<i>Playing messages using the base</i>	52
<i>Playing messages using the handset</i>	52
<i>Remote access to answering machine</i>	53
Deleting all the old messages	53
Recording a memo	53
TAM setting (Model D30V)	55
Activating and deactivating call screening	55
Modifying the remote access code	55
Setting the message duration	55
Privileged access	56
Record mode	56
Number of rings	57
Appendix	58
Care and Maintenance	58
Problems	58
Features	59
Environment	60
Packaging	60
Batteries	60
The product	60
Warranty	61

## YOUR TELEPHONE

### Unpacking

Place the box in front of you, open it and make sure it contains the following items:

- one base,
- one handset,
- one battery compartment cover,
- one equipped power adapter,
- one telephone line cord,
- three rechargeable batteries,
- this user guide.

In the case of purchasing a duo or trio pack, you will find in addition for each additional handset:

- a handset charger,
- an additional battery flap,
- three additional rechargeable batteries.

In the case of purchasing a single pack, you will find :

- a desk charger fitted with its power supply unit,
- one handset,
- one battery compartment cover,
- three rechargeable batteries,
- this user guide.

### Your base

It fits well into your family environment.

#### Model without answering machine (D30T):

Handset location



Power indicator light

*Fixed green indicator:* Powered

*Flashing green indicator:*

- handset on line,
- handset paging,
- handset registration.

Base button

*Pressed briefly:*

- handset paging.

*Held down:*


- handset registration.



## YOUR TELEPHONE



### Model with answering machine (D30V):

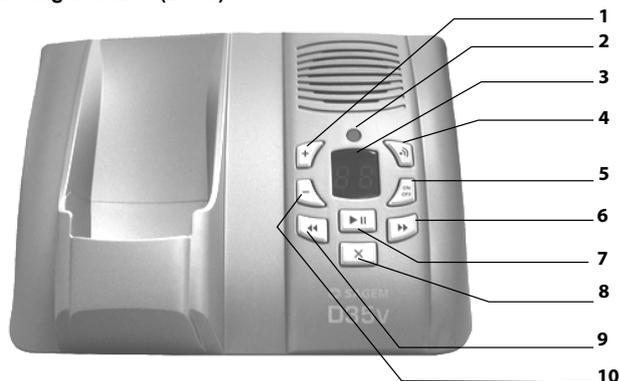


1. Increase the volume on the base loudspeaker
2. Mains light  
*Fixed light*
  - green: On - Answering machine off.
  - red: On - Answering machine activated, no message.*Flashing light*
  - slow red: Messages read.
  - quick red: Flashes at a rate corresponding to the number of unread messages.
3. Display  
*Answering machine off: nothing is displayed*  
*Simple answering machine: "oo" displayed*  
*Answering machine recorder:*
  - No new messages: the message read counter is displayed
  - New messages present: the unread message counter flashes
4. Paging / Pairing button:  
Press and hold: Pair handsets  
Short press: find handsets (Paging)
5. *ON Simple recorder → OFF: press and hold*  
*OFF → ON Recorder: short press*  
*ON Recorder → ON Simple: short press*  
*ON Simple → ON Recorder: short press*
6. Next message
7. Play messages / Pause during playback
8. Erase a message  
Erase a message: Press and hold in playback mode  
Erase all messages: Press and hold outside playback mode
9. Last message
10. Reduce the base loudspeaker volume




## YOUR TELEPHONE

### *Your handset*

With its user-friendly design, you will appreciate how easy it is to hold and its quality during conversations.

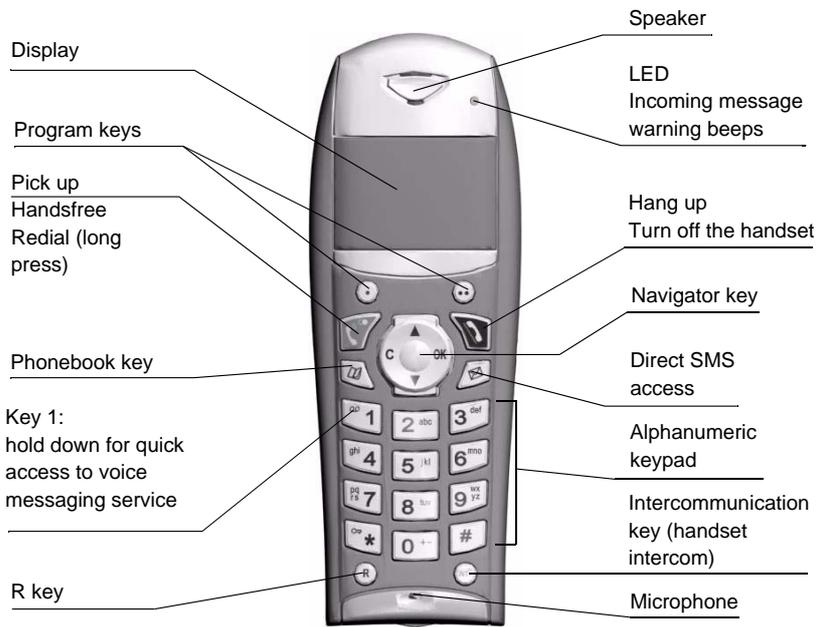


**The navigator key, a rapid selection tool.**

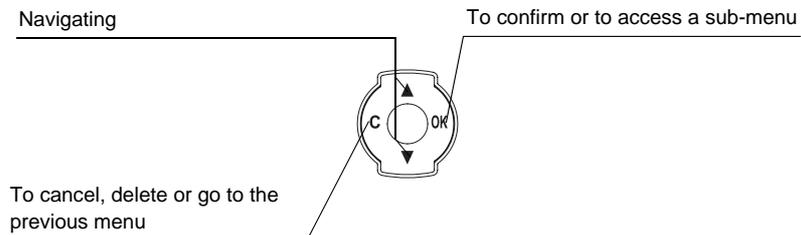

## YOUR TELEPHONE

The visual **display** of your handset

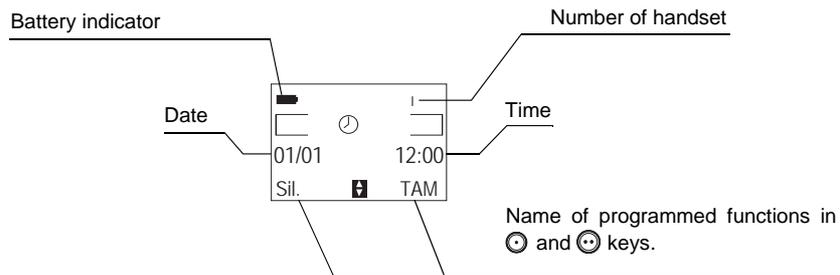

 *When the battery charge icon is at minimum, your screen will not be lit and the volume level of the hands-free function will be decreased until the battery is recharged.*

### **Connecting the base**


 *Before making any connections, please refer to the safety instructions presented at the beginning of this user guide.*

#### **Model without answering machine (D30T):**

On the bottom part of the base, click in the telephone jack in its socket (as shown on the drawing) and connect the other end of the lead to the wall telephone socket.

Connect the end of the mains power unit lead to the bottom of the base and the mains power unit to the mains socket. The mains on indicator located on the base comes on green.

Route the wires in the guides and put the base where it should be.

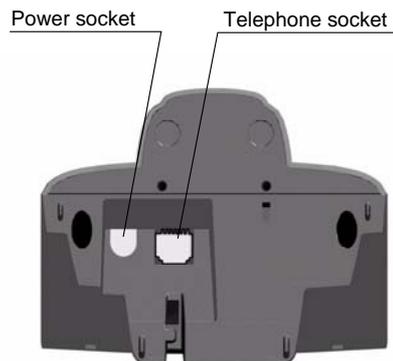


## YOUR TELEPHONE

### Model with answering machine (D30V):

Place the base where it should be located, click in the telephone jack in its socket (as shown on the drawing) and connect the other end of the lead to the wall telephone socket.

Connect the end of the mains power unit lead to the bottom of the base and the mains power unit to the mains socket. The mains on indicator located on the base comes on green.

Route the wires in the guides and put the base where it should be.

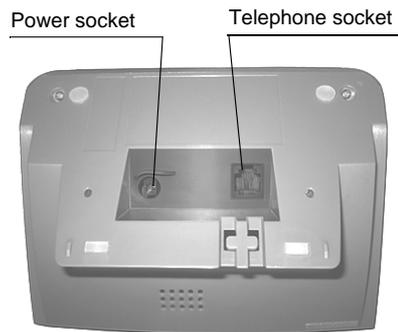

### Handset set-up

Insert the batteries one after the other in compliance with the battery polarity, as shown on the label in the handset. Place the cover back on the handset by pushing upwards until it is completely closed.

Remove the protective film on the screen, place the handset on the base to fully charge the batteries.

The charging icon appears on the screen, it indicates the charging status. Once the icon is full, your batteries are charged.



*Only use certified rechargeable batteries. For optimal battery charge, leave the handset on the base for at least 12 hours during initial use. During charging, the batteries may heat up, this is quite normal and without risk.*



## YOUR TELEPHONE



### ***Handset turning on and off***

To turn off the handset, hold down the red key . The "POWER OFF" message is displayed on the screen. Your handset is now switched off.

To turn on your handset, hold down the green key . The name **SAGEM** is displayed on the screen.

Information is displayed on the screen, including the battery charging indicator icon, the handset number (for example 1), the date, the time and the function keys.

### ***Replacing the batteries***

Hold down the red key  to turn off the handset. Turn it around so that the battery compartment is accessible.

Exert a pressure on the compartment battery and slip the compartment battery downwards.

Remove the old batteries, insert the new batteries one by one in compliance with the polarity of the batteries as shown on the label fixed in the handset.

Place the cover back on the handset by pushing upwards until it is completely closed.

At the end of their useful life, batteries must be disposed of according to the recycling instructions presented in this booklet.



*To avoid damaging your handset, only use certified rechargeable AAA batteries NiMH 1.2 V 550 mAh, never use non rechargeable batteries.*



## GETTING STARTED

### GETTING STARTED



Contact your service provider to find out which services are available (caller display service, SMS, etc.) and the charges involved.

#### Making a call

Enter the number of your contact using the keypad keys.

If you enter an invalid digit, press **C** on the navigator key  to erase the incorrect digit. Press the green key  on your handset to make the call.

You can also make a call by:



- Pressing the green key  to access the line.
- Dialling your contact's number.



During communication, you can increase or decrease the audio volume of your handset by pressing the  $\blacktriangle$  or  $\blacktriangledown$  key on the navigator.

#### Receiving a call

When you receive a call your telephone rings. If you have subscribed to a "Caller display" service, the caller's information appears on the screen (unless your caller has enabled the anonymous mode), otherwise the "UNKNOWN" screen is displayed.

Pick up by pressing the green key .

At the end of the conversation, press the red key .

#### During a call

During a call, numerous options are accessible by pressing **Menu** .

Select the desired option in the following list:

- **HANDSFREE**: to activate the handset speaker.
- **LOUDSPEAK.BASE**: to activate the base loudspeaker (model D30V).
- **CALL TRANSFER**: to transfer the call to another handset.
- **SECOND CALL**: to make a second call.
- **PHONEBOOK**: to access the phonebook.
- **CALLS**: to access the call log.
- **SECRET**: to mute the handset microphone.

#### Handsfree

While having a conversation with your contact, you can enable the handset loudspeaker. Press **Menu** .

Select **HANDSFREE** or **Base loudsp.** (model D30V). Press **Activ.** .

When pressing the green key  while engaged in a conversation you automatically activate the handsfree mode of the handset, by pressing it again you deactivate the handsfree mode.



When the battery charge icon is at minimum the hands-free function is turned off until the battery is recharged.

## GETTING STARTED

The message **HANDSFREE ACTIVATED** appears on the screen. Increase or decrease the audio volume using ▲ or ▼.

### Call transfer

*This function is only accessible when two handsets or more are registered to the same base. You can now transfer the call in progress to another hand set.*

During communication, press **Menu** ☺.

Select **CALL TRANSFER** using ▲ or ▼. Press **Valid.** ☺.

Select the handset you want to call using ▲ or ▼. Press **Call** ☺.

The handset called rings, once someone picks up transfer the call by pressing the red key .

To retake the call before it is picked up by the handset called, press **Menu** ☺.

Select **HANGING UP** using ▲ or ▼. Press **Valid.** ☺.

### During a call

*During a call, you can receive a second incoming call or place a call to a second contact. You can then switch from one contact to the other, or have a conference (depending on your service provider and subscription).*

### Receiving a second call whilst on line

During the call, a beep is transmitted to your telephone by your service provider to let you know that you have a second call waiting.

Press **ACCEPT** ☺ to take this new call.

Your other caller is then put on hold and you can talk with your second caller.

### Making a second call whilst on line.

During a call, you can put your contact on hold and call a second one by pressing **Menu** ☺.

Select **SECOND CALL** using ▲ or ▼. Press **Valid.** ☺.

Select your contact's telephone number in the phonebook by pressing  and press **Valid.** ☺ or dial the number using the keypad and press **Call** ☺.

The second call is then launched, with the first call still on hold.

### To alternate from one call to the other

Press **Menu** ☺.

Select **SWITCH** using ▲ or ▼. Press **Valid.** ☺.

The call in progress is put on hold, and you can then take the second call.

## GETTING STARTED

### To end one of the calls and continue the other one

Press **Menu** .

Select **HANGING UP** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

The call in progress is definitely terminated, and you can then take the second call.

### To set up a 3 way-call (the two parties and yourself)

Press **Menu** .

Select **3-PARTY CONF** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

You can then talk to both parties simultaneously.

To end the 3 way-call, press the red key .

*Dual incoming call management can also be done via the R key .*

- *Accepting a second incoming call:*

 + .

- *Making a second call during communication:  + recipient number.*

- *Alternating from one call to the*

*other:  + .*

- *Ending a call and switching to the call on*

*hold:  + .*

- *Setting up a 3 way-call:  + .*

### Accessing the phonebook or call log

*During a call, you can access your phonebook to look up a telephone number, a name contained in an entry or information on calls stored in your call log.*

During a call, press **Menu** .

Select **PHONEBOOK** or **CALLS** using  $\blacktriangle$  or  $\blacktriangledown$  and press **Valid.** .

Return to the communication menu using .

### Secret mode

*You can switch to secret mode at any time during your conversation. Your handset microphone will be switched off and the other person will not be able to hear you.*

#### To activate secret mode:

During a call, press **Menu** .

Select **SECRET** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Activ.** .

The **SECRET MODE** message will appear on the screen.

#### To deactivate secret mode:

Press **Exit** .

Your correspondent will be able to hear you again.



*You can also choose to deactivate the secret mode by the **C** key on the navigator panel.*



## GETTING STARTED



### Ending a call

At the end of the conversation, press the red key .

### Communication between two handsets



*To communicate between handsets, both handsets must be matched to a single base, and must be within range of the base.*

To call another handset, press the  key.

 
Select with the desired handset with the  or  keys. Press **Call** .

The handset rings. Pick up on the second handset using the green key .

To end the call, press the red key .




*You can also easily call another handset if you know its number. From the idle screen, enter the number of the handset. Then press the green key .*




## MENU STRUCTURE

You can navigate through the menus using the navigator key .

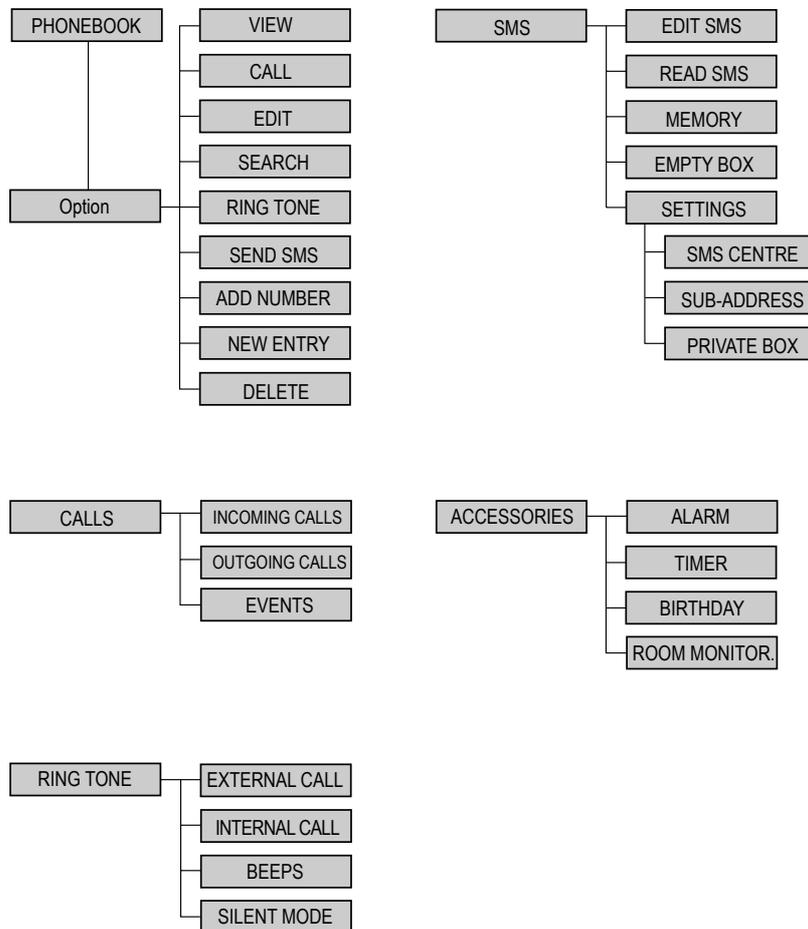

## MENU STRUCTURE

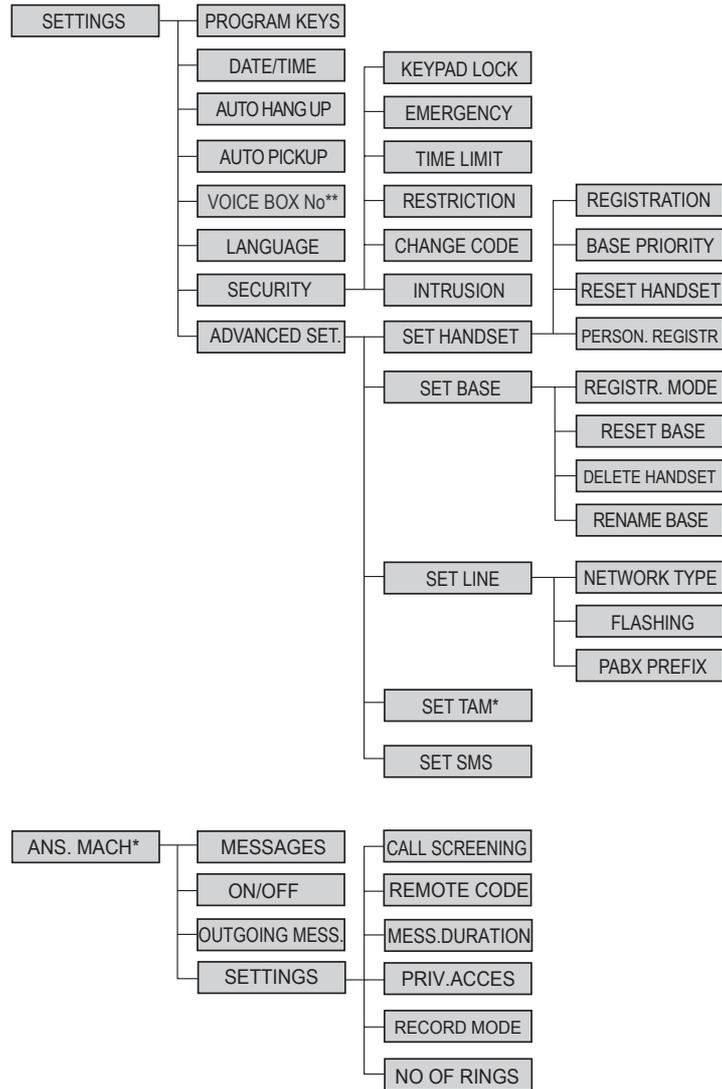

\* Model D30V  
 \*\* Model D30T

## YOUR PHONEBOOK

### YOUR PHONEBOOK

You can store 100 phonebook entries in your phonebook.

Each phonebook entry can contain the name of your contact which can be a maximum of 12 characters long (spaces included), your contact's telephone number up to 24 digits and an icon identifying the type of number (work, home, mobile...).

You can associate a unique ring tone to each entry and thus create your own call groups. (To use this service, the caller id service must be activate on your line.)

#### Viewing the phonebook

On the navigator key , press **▲** or **▼** until the **PHONEBOOK** screen is displayed, press **OK** to confirm (you can access the phonebook directly using the  key).

The list of phonebook entries organised in alphabetical order appears.

 *The first time you access your phonebook, only the **New** element appears in the list.*

Select the entry you want to view using **▲** or **▼**. Once you have selected it, press **OK** to confirm.

 *You can call the number that is associated to the entry directly by pressing the green key .*

Once the entry appears on the screen, press  to display all of the available actions that can be executed via the phonebook entry:

- **CALL**: to call the number associated to the entry.
- **EDIT**: to edit the entry (name, number, icon).
- **SEARCH**: to search for another entry.
- **RING TONE**: to assign a unique ring tone to your handset that will be used each time this number calls you (caller display service mandatory).
- **SEND SMS**: to send an SMS to a number associated to the entry.
- **ADD NUMBER**: to enter a new number for the same name.
- **NEW ENTRY**: to create a new entry in the phonebook.
- **DELETE**: to delete the entry from your phonebook.
- **VIEW**: to view the entry data.

Select the action you wish to perform using **▲** or **▼**. Press **Valid** .

To exit the phonebook, press the red key .

#### Creating an entry

Alphanumeric keypad key correspondence.

	1
	A, B, C, a, b, c, 2
	D, E, F, d, e, f, 3
	G, H, I, g, h, i, 4
	J, K, L, j, k, l, 5
	M, N, O, m, n, o, 6
	P, Q, R, S, p, q, r, s, 7
	T, U, V, t, u, v, 8

## YOUR PHONEBOOK

-  W, X, Y, Z, w, x, y, z, 9
-  special characters
-  space, +, @, -, \$, &, %, 0, /
-  #, " . : ; ! ? ' ( ) \_

To enter text press successively on the desired key until the letter is displayed on the screen.

On the navigator key , press **▲** or **▼** until the **PHONEBOOK** screen is displayed, press **OK** to confirm.

Select **New**. Press **Valid**. .

The name input screen appears. Using the keypad keys, enter the name of your contact by pressing successively on the corresponding keys. In case of a mistake, press **C** to erase one character at a time. Once you are done making your changes, press **Valid**. .

The number input screen appears. Now, enter the name of your contact using the keypad keys. In case of a mistake, press **C** to delete one character at a time.

Once you are done making your changes, press **Valid**. .

Select an icon for this number, using **▲** or **▼** to specify the type of number:

- |  |  |
|--|--|
|  : HOME |  : MOBILE |
|  : WORK |  : FAX    |

Once the icon is selected, press **Valid**. .

A new entry is created. It appears in the phonebook list. The name of this entry corresponds to the beginning of your contact's name which is preceded by a type icon.

### Using a phonebook entry to place a call

On the navigator key , press **▲** or **▼** until the **PHONEBOOK** screen is displayed, press **OK** to confirm.

The list of alphabetical phonebook entries appears.

Select your contact using **▲** or **▼**.

Press the green key  to make the call.

Your handset displays the number of your contact and dials this number automatically.

### Searching for a contact

When referring to your phonebook, you can search for a contact by:

- navigating through the list using **▲**, **▼**,
- using quick search,
- using refined search.

#### Performing a quick search

Access your phonebook list, press successively on the keypad key which corresponds to the first letter of the name you are searching for so as to make it appear at the top of the screen.

Once the first letter of the name is displayed, wait a moment.

## YOUR PHONEBOOK

The phonebook selects the first name in the list that starts with the selected letter.

Press **▲** or **▼** to select the specific entry that you wish to view or call, press **OK** to confirm.

### **Performing a refined search**

In the phonebook menu, press **Option** .

Select **SEARCH** using **▲** or **▼**. Press **Valid.** .

Using the keypad, enter the first three letters of the contact you are searching for.

The phonebook positions itself to the entry which comes closest to those two characters.

Press **▲** or **▼** to select the specific entry that you wish to view or call, press **OK** to confirm.

### **Editing an entry**

To edit a phonebook entry (change the name, the number and/or the number type icon), enter the phonebook, select the entry you want to edit and confirm using **OK** to display it on the screen.

Once the entry is displayed on the screen, press **Option** .

Select **EDIT** using **▲** or **▼**. Press **Valid.** .

You enter the name input screen. The cursor is at the end of the name.

- The information is accurate. Press **Valid.** .

- To correct the name, press **C** on the navigator key  to delete characters. Make your corrections using the keypad keys by pressing successively on the corresponding keys. Once you are finished, press **Valid.** .

You enter the number input screen. The cursor is at the end of the number.

- The information is accurate. Press **Valid.** .
- To correct the number, press **C** on the navigator key  to delete the numbers. Enter the new number and press **Valid.** .

Select the icon according to the type of number entered using **▲** or **▼**. Press **Valid.** .

To exit the menu, press the red key .

### **Deleting an entry**

To delete an entry, enter the phonebook, select the entry, press **Option** .

Select **DELETE** using **▲** or **▼**. Press **Valid.** .

A confirmation screen asks you if you wish to delete the entry.

- If you do not wish to delete the entry, press **No** .
- To delete the entry, press **Yes** . The entry is deleted from the phonebook.

To exit the menu, press the red key .



## YOUR PHONEBOOK



 
### Sending a SMS from phonebook

On the navigator key , press **▲** or **▼** until the **PHONEBOOK** screen is displayed, press **OK** to confirm.

Select the contact using **▲**, **▼** keys or keypad, enter the first three letters of the contact. Press **▲** or **▼** to select the specific entry then press **Option** .

Select **SEND SMS** using **▲** or **▼**. Press **Valid.** .

A text input screen appears. refer to paragraph **Sending a text message**, page 21.



## SMS SERVICE

### SMS SERVICE

You can use your DECT telephone to send, receive and track SMS messages. You can send SMS messages either another fixed SMS-capable telephone or a mobile telephone.

The SMS sending and receiving functions of your telephone are only functional if your service provider offers the corresponding service to its subscribers.



To send and receive SMS text messages, you need the telephone numbers of your Network's SMS Centre.

#### Sending a text message

On the navigator key , press ▲ or ▼ until the **SMS** screen is displayed, press **OK** to confirm ( can also be used to directly access the **SMS** menu).

#### Writing a text message

Once in the **SMS** menu, press ▲ or ▼ until the **EDIT SMS** appears. Press **Valid.** .

Use the ▲, ▼ keys to select either **Common box** or a personal box if one has been created. Press **Valid.** .

The SMS will be sent to the box selected.

If no personal box has been created, only the shared box is displayed on the screen.



To create a personal box, select **PERSO BOX MENU** and press **Valid.** . Follow the instructions displayed on the screen. For further details, refer to the paragraph **Creating a personal box**, page 28.

Enter the code of the box, if you have selected a personal box. Press **Valid.** .

A text input screen appears.

Using the keypad keys, enter the text message by pressing successively on the corresponding keys. The capital letters are accessible by long press on .

Alphanumeric keypad key correspondence depending on the activated mode (capital letters or small letters).

	' , 1, #, ,, ., :, ?, _,*
	a, b, c, 2
	d, e, f, 3
	g, h, i, 4
	j, k, l, 5
	m, n, o, 6
	p, q, r, s, 7
	t, u, v, 8
	w, x, y, z, 9
	special characters
	espace, 0, /, +, @, -, \$, &, %
	#

## SMS SERVICE

To enter text press successively on the desired key until the letter is displayed on the screen.

### Making a correction

If you enter the wrong letter, press **C** on the navigator key  to delete one character at a time.

You can also move through the text to delete characters or insert new ones.

Use  $\blacktriangle$  or  $\blacktriangledown$  to move through the text. Once you have reached the location where you want to insert or delete a character. Press **Select** .

Select **INSERT CHAR.** or **DELETE CHAR.** using  $\blacktriangle$  or  $\blacktriangledown$ , depending on the operation you want to carry out. Press **Valid.** .

### Capital letters/Small letters

When writing your message, you can enter capital letters or small letters.

During the SMS input, press **Select** . Select **CAPITAL LETTER** or **SMALL LETTER**. Press **Valid.** .

### Special characters

During the writing process, certain special characters are accessible by doing the following.

Press the  button, using  $\blacktriangle$  or  $\blacktriangledown$  and the keypad numbers, select the desired character, use  to confirm.

### List of special characters:

.	,	#	'	"	( )	^	:	:	-	@	¿	?		
!	+	-	*	/	<	=	>	E	\$	£	¥	&	%	
§	à	á	â	æ	À	Á	Æ	é	è	É	ì	ñ	Ñ	ò
ö	ø	Ó	ø	ú	ü	Ç	β	τ	Δ	θ	λ	Ξ	Π	
Σ	Φ	Ψ	Ω	Λ	{	}	\	[	~	]				

### Sending an SMS

Once you are done writing your text message, press **Select**  to select the type of delivery.

You can choose between the following options:

- **SEND**: to send a message.
- **STORE**: to save your text as a draft. It can be sent at a later time. The draft message is archived in the "Draft" box.
- **CANCEL**: to permanently delete the text message that you just entered.

### To transmit message

Select **SEND** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter or search for the receiver's number.

- Enter the number using the keypad. Press **Valid.** .
- or
- If the receiver is listed in the phonebook as one of your contacts, press  (refer to paragraph **Searching for a contact**, page 18). Press **Valid.** . Your contact's number appears. Press **Valid.** .

A confirmation screen appears. It indicates the type of transmission and the number to which your message will be sent.

## SMS SERVICE

- If the information is accurate. Press **Confirm** . A message appears on the screen indicating that the transmission of your SMS is in progress.
- To change the phone number, edit or modify your text message, press **Modify**. Press **Edit** .

At the end of the transmission, you can save a copy of your message. It will be stored in the **Sent** SMS folder.

- To save the message, press **Yes** .
- If you do not want to save the message, press **No** .

### In the event of a delivery failure

An information screen appears indicating that your service provider was unable to deliver your message.

Press **CONT.** .

Different options come up on the screen:

- **SAVE**: to save your text in draft form. Once it is saved, you will be able to resolve the potential problems and send your message at a later time without having to enter it again.
- **TRY AGAIN**: to attempt a new delivery.
- **DELETE SMS**: to permanently delete your SMS.
- **SEE RECEIVER**: to check the phone number or send the SMS again.
- **EDIT**: to change the delivery type and number or your text.

Choose an action using  or . Press **Valid.** .

### Reading a message

Your telephone has 4 different folders in which your SMS messages are stored.

- **NEW**: contains the unread messages.
- **INBOX**: contains the read messages that you have chosen to keep.
- **SENT**: contains the copies of sent messages that you saved.
- **DRAFT**: contains the messages that you wrote and that have not been sent out.

On the navigator key , press  or  until the **SMS** menu is displayed, press **OK** to confirm.

Select **READ SMS** using  or . Press **Valid.** .

Select a send box, press **Valid.** .

If no personal box has been created, only the shared box is displayed on the screen.



To create a personal box, select **PersoBox Menu** and press

**Valid.** . Follow the instructions displayed on the screen. For further details, refer to the paragraph **Creating a personal box**, page 28.

Enter the code of the box, if you have selected a personal box. Press **Valid.** .

A list of the different folders appears. The number of messages contained in each folder is displayed in brackets.

## SMS SERVICE

Using ▲ or ▼, select the folder containing the message you would like to view. Press **Valid.** ☺.

The list of messages contained in the folder is then displayed, starting with the most recent message to the oldest one.

*The first 4 numbers indicate:*

- *the arrival time (in 12:00 format) for the messages received during the current day,*
- *the arrival date (in 30/01format) for messages received previously or prior to the current day.*

*The following characters indicate the sender of the message if he/she is known.*

Select the message you would like to view using ▲ or ▼, press **OK** to confirm.

The written message is displayed on the screen.

According to the SMS mode selected, using ▲ and ▼ or ☺ and ☹ to scroll the text on the screen.

To return to the beginning of the message press ☺.

To return to the list of messages, move to the beginning of the message and press ☺.

### ***Managing read messages***

Once the message has been read, press **Select** ☺ and select:

- **REPLY:** to write an SMS in response to the message received (the receiver number of the new SMS will automatically be entered).

- **ARCHIVE:** to keep this message. It will be stored in the "Inbox" message folder.
- **TRANSMIT:** to forward this message to a new recipient. You will be able to modify the original message.
- **DELETE:** to permanently delete this SMS.
- **CALL:** to call the SMS sender number.
- **STORE NUMBER:** to save the SMS sender number in your phonebook.
- **SMS MODE:** Allows to display the message on one or two lines manually or automatic.

Select the desired option using ▲ or ▼. Press **Valid.** ☺.

### ***Modify the SMS mode***

*You can also read your message with different read modes. Three modes are available :*

- **AUTO SCROLL:** automatic scrolling,
- **MANUAL SCROLL:** manual scrolling,
- **2 LINES:** the text is displayed in 2 lines.

To activate one SMS mode, press **Select** ☺.

Select **SMS MODE** using ▲ or ▼. Press **Valid.** ☺.

Select the SMS mode using ▲ or ▼. Press **Valid.** ☺.

## SMS SERVICE

### Viewing the memory status

*You can store 30 different SMS messages. These can be indiscriminately distributed between the various folders. Once the number of stored SMS has reached 30, an information message will indicate that no new messages can be stored.*



*Once the maximum storage capacity is reached, you cannot receive new SMS. To receive new message, please delete some of the stored messages.*

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SMS** screen is displayed, confirm using **OK**.

Select **MEMORY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid** .

A screen informs you as to the number of messages contained in each folder (new, inbox, sent and draft). It also indicates the total number of messages stored and the amount of space available.

To exit the memory information screen, press **Return** .

### Emptying an SMS folder

*This function is used to delete all the messages contained in a folder. To delete the messages one by one refer to paragraph **Managing read messages**, page 24.*



*When you empty an SMS folder, all messages linked to a personal box will not be erased.*

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SMS** screen is displayed, confirm using **OK**.

Select **EMPTY BOX** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid** .

Select the folder you want to empty by pressing  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid**  to delete all messages in the selected folder.

A delete confirmation screen appears.

- Press **No**  if you do not want to empty the folder.
- Press **Yes**  to empty the folder.

To exit the menu, press the red key .

## SMS SETTINGS

### SMS SETTINGS

You can access the **SETTINGS** menu via the **SMS** menu or the **ADVANCED SET.** submenu in the **SETTINGS** menu.

#### Modifying the SMS centre numbers

This function is used to modify the SMS centre numbers (depending on the operator). You can enter up to 4 SMS centre numbers to receive and one to send.

By default, the send number is programmed in SMS 2 centre and the reception number in SMS 1 centre.

On the navigator key , press **▲** or **▼** until the **SMS** screen is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **SMS CENTRES** using **▲** or **▼**. Press **Valid.** .

Select the SMS centre you want to enter or modify the number using keys **▲** or **▼**. Press **Valid.** .

An information screen gives the number of the SMS centre.

- To change the number, press **Edit** . Enter the new number in the input screen and press **Valid.** .
- To keep the number, press **Confirm** .

Carry out this operation again for all other SMS centres.

Then define the SMS centre to be used for sending.

#### Choose the SMS transmission centre

Select **SEND CENTRE** using keys **▲** or **▼**. Press **Valid.** .


- To change the send SMS centre, press **Edit** . Select the required centre using keys **▲** and **▼** and press **Valid.** .
- To keep the current SMS centre, press **Confirm** .

To exit the menu, press the red key .

#### Modifying the terminal number

If you have several SMS-type devices connected to the same telephone line, you must assign a different number ranging from 0 to 9 to each device.

Remember to give your contacts the terminal number on which you would like to receive your messages.

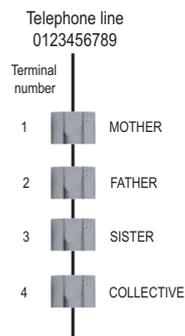

## SMS SETTINGS

For example, in the case of an SMS message addressed to the device **FATHER** your contact will send his SMS to:

**0123456789 2**

(Telephone number followed by the terminal number)

If your contact forgets to include the terminal number, the SMS message will be sent to terminal 0 by default. If no device is parameterised with the terminal number 0, the message will be sent to you in the form of a voice message.



If you do not assign a different number to each SMS-type device connected on the same line, you will not be able to receive SMS.



On the navigator key , press **▲** or **▼** until the **SMS** screen is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid** .

Select **SUB-ADDRESS** using **▲** or **▼**. Press **Valid** .

An information screen shows the current number of the telephone SMS terminal.

- To change the number, press **Edit** . Then select the number using **▲** or **▼** keys. Press **Valid** .
- To keep the terminal number, press **Confirm** .

To exit the menu, press the red key .

### SMS boxes

"Personal boxes" allow you to receive personal SMS. These SMS will arrive in the **New** folder, the box owner will be able to view them by entering the user code that he will have defined when creating his SMS box.

You can create up to 9 "personal boxes" which allow the different users to manage their private SMS (transmission, reception, archive).

Each box is protected by a code and identified by a number representing the corresponding sub-address.

### Sub-Addressing

You have 10 sub-addresses (9 personal and 1 collective) assigned to your telephone line (telephone number). You can assign each one of these sub-addresses:

- to a terminal (the SMS for this sub-address arrive in the DECT base collective box)
- or to a personal box (the SMS received for this sub-address arrive in the private pass-word protected SMS box)

The sub-address is a number that must be added at the end of your telephone number (11th digit) by those who wish to send you SMS.




If you use the same sub-address twice for the same telephone line, your units may not receive the SMS for this sub-address.



If you do not give a terminal number to each SMS capable device that is connected to the same telephone line, you cannot receive SMS.

## SMS SETTINGS

Example:

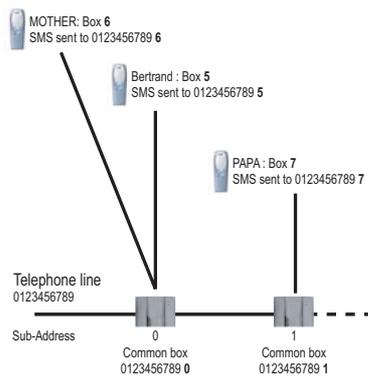

### Creating a personal box

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SMS** screen is displayed, press **OK** to confirm.

Select **SETTINGS** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **PRIVATE BOX** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **NEW** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter the box name. Press **Valid.** .



*If you enter a name that already exists, a message tells you that the name already exists. The box name can have no more than 6 characters.*

Enter the code associated to the box. Press **Valid.** .



*The user code must contain 4 digits.*

Enter the code associated to the box again. Press **Valid.** .

The telephone provides you with a terminal number associated to the box. Press **Confirm**  to keep this terminal number.

Press **Edit**  to change the terminal number. Select one of the terminal numbers available in the list. Press **Valid.** .

The name is added to the personal box list.

### Viewing a message from a personal box

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SMS** screen is displayed, press **OK** to confirm.

Select **READ SMS**. Press **Valid.** .

Select the personal box. Press **Valid.** .

Enter the personal box code. Press **Valid.** .

Select the folder **NEW** or **INBOX** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select the message using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

## SMS SETTINGS

The message is displayed on the screen. For details regarding the operations you can perform, refer to paragraph **Reading a message**, page 23.

### ***Modifying or removing a personal box***

On the navigator key , press **▲** or **▼** until the **SMS** screen is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **PRIVATE BOX** using **▲** or **▼**. Press **Valid.** .

Select **CANCEL** or **EDIT** using **▲** or **▼** keys. Press **Valid.** .

Select the name of the personal box you want to modify or delete using **▲** or **▼**. Press **Cancel**  or **Edit**  depending on the choice made previously.

*If an SMS is sent to a personal box not listed on your telephone (or if this box was removed), the SMS will not be delivered.*



*If you delete a personal box, you must confirm it at the end of the procedure by entering the basic code. All the messages it contains are erased.*

## CALL LOG

### CALL LOG

*This menu enables you to view the call or event lists of your telephone.*

*The dialled call log presents the calls you made.*

*The received call log presents the calls you received.*

*The event log groups together all the new events that took place in your absence:*

- *reception of an SMS,*
- *new messages on the answering machine (model D30V),*
- *calls received during your absence,*
- *operator message service (model D30T).*

### Viewing the received and dialled call log

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **CALLS** screen is displayed, press **OK** to confirm.

Choose **INCOMING CALLS** or **OUTGOING CALLS**, using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

The presentation screen for the last call received or dialled appears.

This screen presents the following information (depending on the service provider and subscription):

- the full name of your contact,
- the telephone number, date, time and duration of the call.

To view the previous calls, use  $\blacktriangle$  or  $\blacktriangledown$ . The calls are organised in chronological order, from the most recent call to the oldest call.

By pressing **Option** , a list of various executable actions appears:

- **VIEW:** To view the selected call again.
- **CALL:** To call the number.
- **DELETE:** To delete the call currently viewed.
- **STORE NUMBER:** To store the name and number in the phonebook.
- **SEND SMS:** To send an SMS to your contact.
- **DELETE ALL:** To delete all calls.

To return to the call view screen, press **Return** .

To exit the menu, press the red key .

### Calling the last number dialled (Redial)

*Your telephone has a shortcut key that can be used to automatically redial the last number dialled.*

From the idle screen, press and hold the green key  until the Call log screen appears. Release , the last dialled number appears. Press the green key  again. The number is dialled automatically.

*You can view the other dialled calls by pressing  $\blacktriangle$  or  $\blacktriangledown$  on the navigator key .*

## CALL LOG

### Calling a number listed in the dialled and received call log

On the navigator key , press **▲** or **▼** until the **CALLS** screen is displayed, press **OK** to confirm.

Select **OUTGOING CALLS** or **INCOMING CALLS**, using **▲** or **▼**. Press **Valid.** .

The presentation screen for the last call received or dialled appears.

Use **▲** or **▼** to locate the contact you wish to call. The calls are organised in chronological order, from the most recent call to the oldest call.

Once the call is displayed on the screen, press the green key .

The number is dialled automatically.

### Viewing the events log

If one or more new events occurred during your absence, the information screen "**NEW EVENTS !**" appears.

- If you do not wish to view the event log at this time, press the red key .
- To view the event log, press .



*Once the event log has been viewed, the information screen disappears. You can however view it again via the "CALLS" menu.*

A summary screen appears. It informs you as to the various events that took place during your absence:

- *the new SMS received,*
- *new messages on the answering machine (model D30V),*
- *the calls received during your absence,*
- *operator message service (model D30T).*

Choose the event using **▲** or **▼**. Press **Valid.** .

The event appears on the screen.

## ACCESSORIES

### ACCESSORIES

This menu offers you numerous additional functionalities:

- **Alarm clock:** to use your handset as an alarm clock.
- **Timer:** to remind you of an event (programmed to sound at the end of a few minutes or a few hours).
- **Birthday:** the handset will ring at the set date and time to remind you of the name of the person to whom you would like to wish happy birthday.
- **Monitoring a room:** use a handset to monitor a room.



If the alarm timeout expires (wake up, timer, anniversary and agenda) during a call, the handset will ring at the end of the call.

#### Alarm clock

The alarm function enables you to activate the handset ringer every day at a set time.

When the alarm is triggered the selected ring tone sounds for 60 seconds through the handset speaker and an alert screen is displayed. To turn off the alarm press any key on the handset.

#### Setting the alarm clock

On the navigator key , press **▲** or **▼** until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **ALARM** using **▲** or **▼**. Press **Valid** .

An information screen shows the alarm clock status.

- the time at which the handset will ring,
- if the alarm is on or off.

- To keep these settings, press **Valid** .
- To change the alarm time or status (on or off), press **Edit** .

A list showing the different settings appears.

#### Activating or deactivating the alarm clock

To activate or deactivate the alarm clock without changing the time.

Select **ACTIVATE** or **DEACTIVATE** in the list using **▲** or **▼**. Press **Valid** .

The alarm settings information screen appears showing the new status. Press **Valid** .

#### Modifying the alarm clock time

Select **SET TIME** in the list using **▲** or **▼**. Press **Valid** .

Enter the time at which you would like the alarm clock to sound. Press **Valid** .

The activation screen appears. Press **Yes**  to activate the alarm.

#### Changing the alarm clock ring tone

To modify the alarm clock ring tone, select **RING TONE** in the alarm clock menu using **▲** or **▼**. Press **Valid** .

The list of ring tones appears.

## ACCESSORIES

Select the desired ring tone using ▲ or ▼.

Press **Volume**  to access the volume setting screen.

Press ▲ or ▼ to increase or decrease the volume.

Once the volume is set, press **Valid.** .

Press **Return** .

An information screen shows the alarm clock settings, press **Valid.** .

To exit the menu, press the red key .

### Timer

*The timer function activates the handset ringer at a programmed time. You can view the programmed time on the screen.*



*Incoming calls are displayed directly without interrupting the timer. For access to timer adjustment you must stop it once it is started.*

*Once the specified time has elapsed, the handset rings for 60 seconds and the alarm screen is activated. Turn off the alarm by pressing **Stop** . The handset stops ringing.*

On the navigator key , press ▲ or ▼ until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **TIMER** using ▲ or ▼. Press **Valid.** .

- To launch the timer without changing the displayed delay, press **Start** .
- To change the programmed time, press **Edit** .

A list showing the different settings appears.

### *Changing the programmed time of the timer*

Select **SET DURATION** in the list. Press **Valid.** .

Enter the desired time. Press **Valid.** . Press **Return**  to display the timer activation screen.

The timer activation screen appears with the modification. Press **Start**  to launch the timer.

### *Changing the timer ring tone*

To modify the timer ring tone, select **RING TONE** using keys ▲ or ▼. Press **Valid.** .

The list of ring tones appears, the handset plays the ring tone.

Select the ring tone using keys ▲ or ▼. Press **Volume**  to access the volume setting screen.

Press ▲ or ▼ to increase or decrease the volume. Once the volume is set, press **Valid.** .

Press **Return** , the timer activation screen appears.

Launch the timer by pressing **Start** .

## ACCESSORIES

### ***Displaying or hiding the programmed time of the timer***

To display (or hide) the time on the screen during its countdown, select **VIEW** in the Timer menu using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

A screen appears indicating if you want to show the timer, press **Yes** .

Press **Return** , the timer activation screen appears.

To exit the menu, press the red key .

### **Birthday alarms**

You can programme birthday alarms (10 alarms) on your DECT telephone. Your telephone will ring for 60 seconds and an alarm screen will appear to remind you of such events. The alarm screen will remain displayed until one of the keypad keys is pressed.

#### ***Adding a new birthday alarm***

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **BIRTHDAY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **New** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter the name of the person concerned using the keypad keys. To delete a character, press the **C** key. Press **Valid.** .

Enter the birth date using the keypad keys. Press **Valid.** .

Enter the alarm activation time. Press **Valid.** .

#### ***Viewing a birthday alarm***

In the birthday alarm list screen, select the alarm you would like to view using  $\blacktriangle$  or  $\blacktriangledown$ , and press **OK** to confirm.

*The birthday alarm entry appears on the screen. This entry consists of:*

- *the name of the person concerned,*
- *the birth date,*
- *the time at which you would like to be notified by the alarm.*

#### ***Modifying or deleting a birthday alarm***

In the birthday alarm list screen, select the alarm you wish to edit using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Option** .

The following options are available:

- **VIEW:** to view the alarm data.
- **EDIT:** to change the alarm name or date.
- **DELETE:** to remove a birthday or organiser alarm.
- **RING TONE:** to set the ring tone that will sound when the alarm goes off.
- **NEW ENTRY:** to set up a new alarm.

To exit the menu, press the red key .

## ACCESSORIES

### Monitoring a room

*Two handsets must be registered on the same base to use this function. You can use your handset to monitor a room. This allows you, for example, to monitor a baby's room.*

*To do so, place one of the handsets in the room to be monitored. This unit will be in "sender" mode.*

*The other handset will remain with you, it is in "receiver" mode.*

#### On the receiver handset:

On the navigator key , press **▲** or **▼** until the **ACCESSORIES** screen is displayed, press **OK** to confirm.

Select **ROOM MONITOR**. using **▲** or **▼**. Press **Valid** .

Select the sender handset using **▲** or **▼**. Press **Call** .

The sender handset rings, pick up using the green key .

#### On the transmitter handset:

A screen invites you to activate the monitor mode (sender mode). Press **Yes** .

Both handsets are now in monitor mode.

- Place the sender handset in the room to be monitored.



*The handset in sender mode does not ring to notify you of incoming calls. It can therefore be placed in a room where someone is sleeping.*

- Keep the receiver handset with you.

*When in monitor mode, the receiver handset can be used to make calls.*

*To make a call: press **Call**  and dial the number.*



*To answer a call: press green key .*

*At the end of the call, the handset will automatically return in monitor mode.*

#### To stop monitoring:

- Press **Stop**  on the transmitter set. The receiver set will automatically return to the standby screen.
- Press **Stop**  on the receiver set and confirm by pressing **Yes**  and **Stop**  on the transmitter handset at the same time.

## RING TONES

### RING TONES

*This menu allows you to modify the ring tones and particularly:*

- to assign different ring tones for incoming calls outside or intercom (between handsets),
- to activate or deactivate tones being sounded when pressing the keypad or when validating the settings information of your handset.
- activate or deactivate silent mode.

#### Changing the ring tones

*This menu enables you to associate a unique ring tone to incoming calls or internal calls (intercom).*

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **RING TONE** screen is displayed, press **OK** to confirm.

Select **EXTERNAL CALL** or **INTERNAL CALL** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select the ring tone of your choice using the  $\blacktriangle$  or  $\blacktriangledown$  keys then press **Volume** .

Adjust the ringer volume using  $\blacktriangle$  or  $\blacktriangledown$ , press **Valid.** .

To exit the menu, press the red key .

### Activating or deactivating the beeps

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **RING TONE** screen is displayed, press **OK** to confirm.

Select **BEEPS** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select the beep type using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

**KEYTONE:** the handset beeps when a key is pressed.

**BATTERY LOW:** the handset beeps when the battery is too low.

**CHARGER:** the handset beeps when you hang up the handset.

An information screen displays the beep status for the selected item (Active or Inactive).

- To change the status, press **Edit** . The status is modified on the screen. Press **Valid.** .
- To keep the status, press **Valid.** .

To exit the menu, press the red key .

## RING TONES

### Activating/deactivating the silent mode

*When in silent mode, the telephone ringer and keypad beeps are inhibited.*

On the navigator key , press ▲ or ▼ until the **RING TONE** screen is displayed, press **OK** to confirm.

Select **SILENT MODE** using ▲ or ▼. Press **Valid.** .



*When you activate the silent mode, your handset is muted for all timer, organiser-type functions...*

Press **Yes**  to activate the silent mode.

To exit the menu, press the red key .

## SETTINGS

### SETTINGS

*This menu enables you to change or customise the handset and base parameters.*

#### Programming a key

*This function enables you to programme the  and  keys on your handset giving you direct access to certain functions right from the idle screen.*

On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **PROGRAM KEYS** using  or . Press **Valid.** .

A screen presents the function currently assigned the  key.

- To keep the function, press **Valid.** .
- To modify the function, press **Edit** .

Choose from the function list the function you want to assign to the key. Press  or  to select one of the following functions:

- |               |            |
|---------------|------------|
| • SILENCE     | • ALARM    |
| • TIMER       | • KEY LOCK |
| • NUMBER      | • REDIAL   |
| • ANSW. MACH. |            |

Press **Valid.** .



*With the number function, you associate a telephone number to a program key. You can thus quickly call your contact.*

Once the  key is programmed, a screen invites you to programme the key .

- To modify the function, press **Edit** .
- To keep the function, press **Valid.** .

To exit the menu, press the red key .

#### Modifying the date and time

On the navigator key , press  or  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **DATE/TIME** using  or . Press **Valid.** .

A screen displays the current date. Enter the date in DD/MM/YY format and press **Valid.** .

A screen displays the current time. Enter the time in HH/ MM format and press **Valid.** .

To exit the menu, press the red key .

#### Using the auto hang up and pick up features

*The auto hang up feature enables you to automatically hang up by simply putting the handset back on its base.*



*If the auto hang up feature is on, communication ends when the handset is put back on its base.*

*When active, the auto pick up feature enables you to automatically pick up as soon as you remove the handset from its base.*

## SETTINGS

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **AUTO HANG UP** (or **AUTO PICKUP**) using **▲** or **▼**. Press **Valid.** .

A screen displays the current status (on or off).

- To change the status, press **Edit** .
- To keep the status, press **Valid.** .

To exit the menu, press the red key .

### Modifying the Voice box number (model D30T)

*This function enables you to receive calls when absent on a voice messaging service of the switched network.*

*To indicate that a new message has been received the reception indicator on the handset is lit in red and the new event message is displayed on the screen.*



To check your voice messaging service, hold down key .

The number of your voice messaging service is set in the factory. To change this number, proceed as follows:

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **VOICE BOX No** using **▲** or **▼**. Press **Valid.** .

The programmed number is displayed on the screen,

- The number is correct, press **Valid.** .
- To modify the number, press **Edit** .

Delete the numbers using the navigator **C** key. Enter the number. Press **Valid.** .

To exit the menu, press the red key .

### Modifying the language

*This function enables you to change the screen display language.*

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **LANGUAGE** using **▲** or **▼**. Press **Valid.** .

An information screen presents the current language used.

- To keep the setting, press **Valid.** .
- To change the setting, press **Edit** .

Choose the desired language from the language list. Press **▲** or **▼** to select the language. Press **Valid.** .

The screen shows the new language used. Press **Valid.** .

To exit the menu, press the red key .

## SETTINGS

### SECURITY

This menu enables you to change or customise the security parameters of your telephone. You can:

- lock the keypad,
- programme an emergency number,
- modify the base code,
- define the call time limit,
- define forbidden prefixes,
- authorise or deny communication to a number of handsets.

### Locking/unlocking the keypad



To lock/unlock the keypad, press and hold the keypad key  for some time.

You can also lock your keypad via the **SECURITY** menu.

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using **▲** or **▼**. Press **Valid.** .

Select **KEYPAD LOCK** using **▲** or **▼**. Press **Valid.** .

To lock the keypad, press **Yes** .

A screen indicates that the keypad is locked.

### Programming an emergency number

This function allows you to define an emergency number which can be enabled or disabled.

Once it is activated, the emergency number will be automatically dialled when the green key  is pressed from the idle screen.

- Once activated, you can however call a different number with pre-dialling by dialling a number and pressing .



The following types of numbers should not be programmed: Fire, emergency and police rescue services...

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using **▲** or **▼**. Press **Valid.** .

Select **EMERGENCY** using **▲** or **▼**. Press **Valid.** .

An information screen displays the current stored emergency number and indicates whether it is enabled or disabled.

- To keep the setting, press **Valid.** .
- To modify the setting, press **Edit** .

A list of various executable actions appears:  
- **ACTIVATE**: to activate the emergency number.

## SETTINGS

- **DEACTIVATE:** to deactivate the emergency number.
- **CHANGE NO:** to modify the emergency number.

To modify the emergency number, select **CHANGE NO**. Press **Valid**. ☺.

Enter the new number using the keypad. You can pick a number from the phonebook.

Press , make your selection and **Valid**. ☺.

The active mode is set automatically.

An information screen presents the new emergency number.

To activate/deactivate the emergency number, select the corresponding option. Press **Valid**. ☺.

To exit the menu, press the red key .

The emergency number is automatically activated. The name of the handset displayed on the idle screen becomes **EMERGENCY**.

### Defining the call time limit

*You can set your telephone's operating time. Once the call time limit is used up, it is no longer possible to make calls.*

*To be able to call again, you will have to deactivate the call time limit or set a new limit.*



*If the time limit ends during a telephone conversation, communication will not be cut off. Once you have hung up, it will not be possible to make a new call. Calls between handsets (internal calls) are not affected by the call time limit.*

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using **▲** or **▼**. Press **Valid**. ☺.

Select **TIME LIMIT** using **▲** or **▼**. Press **Valid**. ☺.

An information screen displays the remaining time limit and its status.

- To keep the setting, press **Confirm** ☺.
- To modify the setting, press **Edit** ☺.

Enter the base code (default is 0000). Press **Valid**. ☺.

A list of various executable actions appears:

- **ACTIVATE:** To activate the emergency number.
- **DEACTIVATE:** To deactivate the emergency number.
- **EDIT TIME:** To modify the emergency number.

Select **EDIT TIME** using **▲** or **▼**. Press **Valid**. ☺.

Enter the new time limit using the keypad (maximum 999 minutes). Press **Valid**. ☺, the active mode is set automatically.

## SETTINGS

Once the modifications have been made, the information screen shows the new call time limit.

To exit the menu, press the red key .

### Defining forbidden prefixes - Call barring

*You can prohibit the use of certain prefixes on your telephone. When a prefix is forbidden, it becomes impossible to call numbers that begin by this prefix.*

*Depending on the programmed prefixes, certain numbers will no longer be accessible. For example, if you programmed 06 as a forbidden prefix, it will not be possible to call a number that begins by 06.*



On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **RESTRICTION** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter the base code. Press **Valid.** .

The prefix screen appears. Select an empty location (dashes) or a prefix to modify using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter the prefix using the keypad. Press **Valid.** .



*To eliminate a prefix, select it using keys  $\blacktriangle$  or  $\blacktriangledown$  and press **Valid.** .*

When all prefixes are programmed, press **Return** .

A restriction activation screen appears, press **Yes**  to activate restriction.

To exit the menu, press the red key .



*You can programme up to 5 forbidden prefixes.*

### Modifying the base code

*The base code (0000 being the default setting) is required to access certain security functions. It must be composed of 4 digits.*

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **CHANGE CODE** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Enter the old base code using the keypad (default is 0000). Press **Valid.** .

Enter the new base code using the keypad. Press **Valid.** .

Confirm by entering the new base code again. Press **Valid.** .

## SETTINGS

To exit the menu, press the red key .



*Carefully note down the base code number. You will need this code to change certain settings.*

### Authorising listening in

The intrusion function authorises or prevents a second handset registered on the same base from joining in a current conversation. If the intrusion mode is active, it is then possible to join a conversation in progress using another handset.

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **SECURITY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **INTRUSION** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

A screen displays the current status (on or off).

- To change the status, press **Edit** .
- To keep the status, press **Valid.** .

To exit the menu, press the red key .

## HANDSET SETTINGS

### Registering a new handset to a base

To register a new handset to a base you must:

- put the handset in registration mode,
- put the base in registration mode.

Once this is done, the registration (mutual recognition of the base and the new handset) will be done automatically (registration can take a few seconds).



*If the code of the base has been modified (different from 0000), the registration will not be possible with this procedure, refer to paragraph **Personal registering**, page 45.*

#### Take the handset to be registered:

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **SET HANDSET** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **REGISTRATION.** Press **Valid.** .

Press **Yes**  to put the handset in registration mode.

The handset enters the registration mode.

## SETTINGS

### On the base:

Put the base to which you want to register the handset in registration mode:

- For the D30T, press on the  button on the base for a few seconds.
- For the D30V, press on the  button on the base for a few seconds.

The new handset and the base are mutually searching for each other. The registration may take several seconds.

Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done.

*You can also set your base to the registration mode using a handset already registered by selecting the Registration function in the menu **SETTINGS/ADVANCED SET/SET BASE**.*

### Modifying the base preference

*This function enables you to specify which base will be used by your handset to make calls (if your handset is registered to several bases).*

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .

Select **BASE PRIORITY** using **▲** or **▼**. Press **Valid.** .

An information screen presents the current base preference for your handset.

- To keep the preference, press **Valid.** .
- To modify the preference, press **Edit.** .

A list provides the bases among which you can choose the preferred base to which you want your handset to be registered. With the automatic mode you are not required to specify the preference.

Select the base preference using **▲** or **▼**. Press **Valid.** .

To exit the menu, press the red key .

### Resetting the handset

*When you reset your handset, all the parameters are reset to their initial value (factory settings) with the exception of the phonebook, alarms (birthdays and organiser) and SMS parameters.*



*When resetting the handset, the security functions (forbidden prefixes and time limit duration) are not set back to their initial value.*

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .

Select **RESET HANDSET** using **▲** or **▼**. Press **Valid.** .

## SETTINGS

A confirmation screen will prompt you to confirm your request:

- To re-initialise your handset, press **Yes** .
- If you do not wish to re-initialise your handset, press **No** .

To exit the menu, press the red key .

### Personal registering

To register a handset in the following cases:

- the base's code is no longer 0000 (you have customised the code),
- you own several bases,
- you want to choose a name for your base (name displayed on the welcome screen),
- you want to choose the handset registration number.

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET HANDSET.** Press **Valid.** .

Select **PERSON. REGISTR** using **▲** or **▼**, Press **Valid.** .

Select the required base number. Press **Valid.** .

Delete the current base name using **C** key (if necessary).

Enter the new name, press **Valid.** .

Enter the base code. Press **Valid.** .

The handset enters the registration mode, "**HANDSET IN REGISTR. MODE**" is displayed on the screen.

Put the base to which you want to register the handset in registration mode.

Once the handset is registered, select the required handset number. Press **Valid.** .

#### On the base:

Put the base to which you want to register the handset in registration mode:

- For the D30T, press on the  button on the base for a few seconds.
- For the D30V, press on the  button on the base for a few seconds.

The green light blinks rapidly, the base is in registration mode.

The new handset and the base are mutually searching for each other. The registration may take several seconds.

Once the handset is registered, the handset automatically exits the registration mode and lets you know the registration is done.



*You can also set your base to the registration mode using a handset already registered by selecting the Registration function in the menu **SETTINGS/ADVANCED SET/SET BASE.***

## SETTINGS

### BASE SETTINGS

#### Using a handset to put the base in registration mode

This function enables you to put the base in registration mode so you can register a new handset. To do so, the handset to be registered must be in registration mode (refer to paragraph **Registering a new handset to a base**, page 43).

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .

Select **SET BASE** using **▲** or **▼**. Press **Valid.** .

Select **REGISTR. MODE** using **▲** or **▼**. Press **Valid.** .

A screen prompts you to confirm the setting of the base to the registration mode. Press **Yes**  to enter the registration mode. The indicator light on your base starts to quickly blink green.

Your base will remain in registration mode for about 1 minute.

You can also put the base in registration mode :

- For the D30T, press on the  button on the base for a few seconds.
- For the D30V, press on the  button on the base for a few seconds.



#### Resetting the base

When you reset your base, all the base parameters are reset to their initial values (factory settings), your SMS are not deleted.

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET BASE**. Press **Valid.** .

Select **RESET BASE** using **▲** or **▼**. Press **Valid.** .

A confirmation screen will prompt you to confirm your request:

- To reset the base, press **Yes** .
- If you do not wish to reset the base, press **No** .

Enter the base code. Press **Valid.** . The **RE-INIT. IN PROCESS** message is displayed on the screen.

To exit the menu, press the red key .

## SETTINGS



*When resetting the base, the base code becomes 0000 again.*

### De-registering a handset

*This function enables you to de-register a handset from your base. This may be necessary if you have lost a handset or if you already have 6 handsets registered to the same base.*

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET BASE.** Press **Valid.** .

Select **DELETE HANDSET** using **▲** or **▼**. Press **Valid.** .

Select the handset you wish to unregister in the list by pressing **▲** or **▼**. Press **Valid.** .

A screen prompts you to confirm the unregistration. Press **Yes**  to unregister the handset.

To exit the menu, press the red key .

### Renaming the base

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET BASE.** Press **Valid.** .

Select **RENAME BASE** using **▲** or **▼**. Press **Valid.** .

Select the base for which you want to modify the name using **▲** or **▼**. Press **Valid.** .

Enter the new name using the keypad. Press **Valid.** .

To exit the menu, press the red key .

## SETTINGS

### LINE SETTINGS



Before changing the settings of the telephone line, contact your operator to obtain the parameters for your line.

### Modifying the network type

Your DECT telephone can be installed on a public or private network (when using a PABX).

This function enables you to configure your telephone according to the type of network.

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** using **▲** or **▼**. Press **Valid.** .

Select **SET LINE** using **▲** or **▼**. Press **Valid.** .

Select **NETWORK TYPE** using **▲** or **▼**. Press **Valid.** .

A screen presents the current status (public or private).

- To keep the status, press **Valid.** .
- To change the status, press **Edit** .

The status is modified on the screen, press **Valid.** .

To exit the menu, press the red key .

### Modifying the flash duration (R key)

If you connect your telephone to a private automatic branch exchange or use it in a foreign country, you may need to modify the flash duration in order to use your telephone correctly with regard to the following functionalities: outgoing 2nd call, incoming 2nd call, 3 way calling.

Contact your service provider to obtain the correct flash duration and then modify it by doing the following.

On the navigator key , press **▲** or **▼** until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET.** Press **Valid.** .

Select **SET LINE.** Press **Valid.** .

Select **FLASHING** using **▲** or **▼**. Press **Valid.** .

An information screen presents the current flash duration.

- To keep the duration, press **Confirm** .
- To modify the duration, press **Edit** .

Select the new duration using **▲** or **▼**. Press **Valid.** .

The screen presents the new flash duration.

- To keep the duration, press **Confirm** .
- To modify the duration, press **Edit** .

To exit the menu, press the red key .

## SETTINGS

### Setting a PABX prefix

*If a private automatic branch exchange is used, you can programme the external call prefix.*

*With this function you can set the:*

- *PABX prefix number,*
- *dialled number length at which point the PABX will be automatically dialled (this length is called "digit before prefix"),*
- *prefix status (on or off).*

On the navigator key , press ▲ or ▼ until the **SETTINGS** screen is displayed, press **OK** to confirm.

Select **ADVANCED SET..** Press **Valid.** .

Select **SET LINE.** Press **Valid.** .

Select **PABX PREFIX** using ▲ or ▼. Press **Valid.** .

An information screen presents the PABX setting in progress. Press  or  key.

Press **Yes** , to modify this setting.

Select the desired option:

- **ACTIVATE/DEACTIVATE:** to select a status.
- **PREFIX:** to enter the number giving you access to the outside line.
- **EDIT LENGTH:** to specify the «digits before prefix».
- **EXIT PABX:** to exit the menu.

To modify the prefix, select **PREFIX** using ▲ or ▼, press **Valid.** .

Enter the prefix using the keypad, press **Valid.** .

To modify the digits before prefix, select **EDIT LENGTH** using ▲ or ▼, press **Valid.** .

Enter the digits before prefix using the keypad, press **Valid.** .

To exit the menu, press the red key .

## ANSWERING MACHINE

### ANSWERING MACHINE (MODEL D30V)

Your telephone's answering machine comes with two answering modes:

- Answer only: callers cannot leave you a message and an OGM informs them of your unavailability.
- Answer and record: an OGM invites your callers to leave messages.

The telephone answering machine models also offer the following functionalities:

- Anonymous mode with pre-recorded OGMs.
- Call screening.
- Remote message retrieval.
- VIP access

#### Enabling/disabling the answering machine

When your answering machine is off, the base indicator is green.

When it is on, the indicator turns red. An icon also appears on the handset display according to the answering machine mode used:

- Answer only 
- Answer and record 

On the navigator key , press ▲ or ▼ until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **ON/OFF** using ▲ or ▼. Press **Valid.** .

A screen displays the current status of the answering machine (answer only, answer and record or off).

- To keep the displayed status, press **Valid.** .
- To change the status, press **Edit** .
  - To activate the answer and record mode, select **ANS. & RECORD.**
  - To activate the answer only mode, select **ANSWER ONLY.**
  - To turn off the answering machine, select **DEACTIV..**

Press **Valid.** .

The OGM that will be used is played. At the end of the playback, confirm the new status of the answering machine by pressing

**Valid.** .

*If you have not recorded a personal OGM, the answering machine will automatically use the pre-recorded OGM.*



- You may deactivate your answering machine using the keys on the base. To do so, press the

button  for a few seconds.

- To activate your answering



machine, pressing the  button will switch the answering machine recorder on. Pressing it again will enable you to move from the answering machine recorder to the simple answering machine.

## ANSWERING MACHINE

### Modifying the OGM



*In order to modify an OGM, you must first turn on the answering machine. The OGM that will be modified will be that of the answering machine activated (answer only or answer and record).*

### Recording a personal outgoing message

On the navigator key , press **▲** or **▼** until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **OUTGOING MESS.** using **▲** or **▼**. Press **Valid.** .

Select **CHANGE** using **▲** or **▼**. Press **Valid.** .

Press **OK** to start recording your OGM.

At the sound of the beep transmitted through the handset, start talking in the handset microphone.

To stop recording press **End** .

Your outgoing message is automatically played back.

At the end of the playback, a confirmation screen asks you if you want to keep this new outgoing message. Press **Yes**  to keep your OGM or **No**  to record it again.

### Using a pre-recorded anonymous OGM



*If you select the anonymous mode, your personal outgoing message will be definitely replaced by the pre-recorded outgoing message. You will however be able to record a new personal outgoing message (see previous paragraph).*

On the navigator key , press **▲** or **▼** until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **OUTGOING MESS.** Press **Valid.** .

Select **ANONYMOUS** using **▲** or **▼**. Press **Valid.** .

Press **Yes**  to replace your personal outgoing message with the anonymous outgoing message.

*The anonymous outgoing message for the answering machine mode used (answer only/answer and record) is automatically played back.*

### Deleting all your personal OGMs



*If you delete all your personal outgoing messages, the answering machine will automatically be deactivated.*

On the navigator key , press **▲** or **▼** until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

## ANSWERING MACHINE

Select **OUTGOING MESS..** Press **Valid.** .

Select **DELETE ALL** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Press **Yes**  to delete all the personal outgoing messages.

### Playing messages

*When there are messages on your answering machine, the base indicator light blinks. The rhythm of the flash informs you as to the number of messages received (ex.: 4 short flashes correspond to 4 received messages).*

*The new messages are played back first. Afterwards, the messages that have already been taken are played back in chronological order (from the oldest messages to the most recent messages).*

The  icon on the handset screen notifies you that there are messages that have not been played.



If you saved one or more played messages, the  icon appears on the welcome screen.

### Playing messages using the base

Press the  button to start the playback.

Your messages are played back through the base loudspeaker.

During playback, you can use the base buttons to execute the following actions:

- Go to the next message : .
- Go back to the beginning of the message : .

- Return to the previous message :  twice.
- Pause playback : .
- Start playback after pause : .
- Delete the message being played back : long press on .

The answering machine will automatically stop at the end of the last message.

### Playing messages using the handset

On the navigator key , press  $\blacktriangle$  or  $\blacktriangledown$  until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **MESSAGES** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

Select **PLAY** using  $\blacktriangle$  or  $\blacktriangledown$ . Press **Valid.** .

The messages are played through the handset speaker.

*Depending on your service provider and your subscription, the name and number of your contact will be displayed on the screen (except for confidential calls).*

During playback, you can use the handset buttons to execute the following actions:

-  : delete the message being played.
-  : return to the previous message.
-  : momentarily stop the playback (pause).
-  : go to the next message.

## ANSWERING MACHINE

### **Remote access to answering machine**

You can access your answering machine remotely. This function enables you to retrieve your messages and access your answering machine from any other telephone located outside your home.

To remotely access your answering machine: Dial your telephone number and wait for the answering machine to come on. When your outgoing message is played, press # and enter your remote access code.



The remote access code is 0000 by default. However, it can only be used once it is customised, refer to paragraph **Modifying the remote access code**, page 55.

A beep will indicate access to the answer machine. Any unread messages will be automatically played back. At the end of playback, a new beep will sound to let you know that the answer machine is ready. You can carry out the following operations:

- 0** : delete the message being played
- 1** : go back to the beginning of the message
- 1 (x2)** : previous message
- 2** : pause/play
- 3** : next message
- 5** : message read
- 7** : Answer machine/recorder operating
- 8** : record
- 9** : answering machine off

### **Deleting all the old messages**



To delete the old messages one message at a time, refer to the previous paragraph and delete the unwanted messages during their playback.

On the navigator key , press ▲ or ▼ until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **MESSAGES** using ▲ or ▼. Press **Valid.** .

Select **DELETE OLD** using ▲ or ▼. Press **Valid.** .

To confirm the deletion of all the old messages, press **Yes** .

To exit the menu, press the red key .

### **Recording a memo**

This function enables you to leave a personal message on your answering machine. Until the time it is played, it will be considered like a new message by the answering machine.

On the navigator key , press ▲ or ▼ until the **ANS. MACH** screen is displayed. Press **OK** to confirm.

Select **MESSAGES** using ▲ or ▼. Press **Valid.** .



## ANSWERING MACHINE



Select **RECORD MEMO** using ▲ or ▼.  
Press **Valid.**

Press **OK** to start recording.

At the sound of the beep transmitted through the handset, start talking into the handset microphone.

To stop recording press **End** .

At the end of listen, you come back to the previous menu.

To validate the memo, press **Yes** .

To cancel the memo or restart the recording, press **No** .

*Once validated, your answering machine considers the memo as a new message until it is played.*

*The message NEW EVENTS is displayed and replace the idle screen.*



## ANSWERING MACHINE

### TAM SETTING (MODEL D30V)

This menu enables you to modify the advanced settings of your answering machine (depending on the model) You can access the **TAM setting** menu through the **Ans. Mach.** menu or through the **Adv. Settings** submenu of the **Settings** menu.

#### Activating and deactivating call screening

When activated, the call screening function enables you to listen to the message left by your caller as it is being recorded. You can pick up at any time.

On the navigator key , press **▲** or **▼** until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **CALL SCREENING** using **▲** or **▼**. Press **Valid.** .

A screen indicating the function status (on or off) appears.

- To keep the current status, press **Valid.** .
- To change the status, press **Edit** , then **Valid.** .

To exit the menu, press the red key .

### Modifying the remote access code

The remote access code enables you to listen to the messages left on your answering machine via another telephone.

On the navigator key , press **▲** or **▼** until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **REMOTE CODE**. Press **Valid.** .

Press **Yes**  to modify the remote access code.

Enter your Base code (default setting is 0000). Press **Valid.** .

Enter the new remote access code (4 digits mandatory). Press **Valid.** .

To exit the menu, press the red key .

### Setting the message duration

This duration corresponds to the recording time that the caller will have to leave you his message.

On the navigator key , press **▲** or **▼** until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

## TAM SETTING

Select **MESS. DURATION** using ▲ or ▼. Press **Valid.** .

A screen indicating the maximum authorised recording time for each message appears.

- To keep the current duration, press **Confirm** .
- To modify the current duration, press **Edit** .

During the duration modification, a list of the message durations appears on the screen.

Select the desired duration using ▲ or ▼. Press **Valid.** .

To exit the menu, press the red key .

### Privileged access

*This service enables you to switch off the handset ringer for all incoming calls when you do not want to be disturbed, except for privileged calls.*

*During the reception of a call, the answering machine will switch on after a certain number of (muted) rings that you will have set and the caller will be able to leave you a message.*

*You can programme your telephone in such a way that it will only ring when specific callers call. To achieve this, they will need to dial \* (star) key and a privileged code when they hear the outgoing message. Once the code has been entered, your telephone rings.*

On the navigator key , press ▲ or ▼ until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using ▲ or ▼. Press **Valid.** .

Select **PRIV. ACCESS** using ▲ or ▼. Press **Valid.** .

The following information is displayed on the screen:

- the privileged access code,
- the service status.

Press **Edit**  to modify the information displayed on the screen.

Enter the privileged access code.



*Give the privileged access code to your privileged callers. When calling you, they can dial \* (star) key and a privileged code when they hear the outgoing message.*

Press **Confirm** .

Press **Yes**  to activate the privileged access mode.

To exit the menu, press the red key .

### Record mode

*The record mode enables you to modify the recording time capacity of the answering machine.*

*Two quality levels are available:*

- *Superior quality: for a 15 minute high-quality capacity.*
- *Standard quality: for a 25 minute normal-quality capacity.*



*Modifying the message recording quality does not affect the quality of the outgoing message.*

## TAM SETTING

On the navigator key , press **▲** or **▼** until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **RECORD MODE** using **▲** or **▼**. Press **Valid.** .

Press **Edit**  to modify the recording quality level displayed on the screen. Press **Valid.** .

To exit the menu, press the red key .

### Number of rings

*This parameter enables you to set the number of times your telephone rings before the answering machine answers a call. The number of rings can be set between 2 and 7. You can also select the Time saver mode. The Time saver mode automatically determines the number of rings based on the number of messages left on the answering machine.*

*If there are no new messages on the answering machine, the number of rings will be 4, otherwise the number of rings will be 2.*

On the navigator key , press **▲** or **▼** until the **ANS. MACH** menu is displayed, press **OK** to confirm.

Select **SETTINGS** using **▲** or **▼**. Press **Valid.** .

Select **NO OF RINGS** using **▲** or **▼**. Press **Valid.** .

The programmed number of rings is displayed on the screen.

Press **Edit**  to modify the current number.

In the list, select the desired number of rings (between 2 and 7) using **▲** or **▼** or the Time saver mode, and press **Valid.** .

To exit the menu, press the red key .

## APPENDIX

### Care and Maintenance

Use a slightly damp cloth to wipe the base and handset, do not use a dry cloth as this may cause electrostatic charges.

### Problems

Refer to the table presented below in case of an operational malfunction:

Problems	Remedies
The base indicator light is not lit	<p>Make sure that :</p> <ul style="list-style-type: none"> <li>• the power adapter is properly connected to a power socket.</li> <li>• the power connector is properly plugged into the base.</li> <li>• your fuse and circuit-breaker are in working order and that the power socket is powered.</li> </ul>
The handset display is blank.	<p>Make sure the batteries are properly installed. Place the handset on the base and fully charge the batteries. To increase the life of your batteries, you can perform this operation about every two months. If these precautionary measures do not resolve this issue, replacement batteries are available through your reseller. As time goes by, you may notice a slight decrease in battery performance. Use your handset until the battery is fully discharged, and then charge it for at least 12 hours.</p>
The handset does not ring during an incoming call.	<p>Make sure that the telephone is properly connected and that you have a dial tone. Make sure your telephone is not set to silent mode (see paragraph Settings).</p>
No radio link between the handset and base. The network indicator icon flashes.	<p>Make sure the handset is registered by moving closer to the base, if it is registered correctly, the handset screen should display its own handset number. Otherwise, register the handset to the base. See "Registering a new handset to a base", page 43.</p>
You obtain a "busy" dial tone for each dialled number.	<p>Make sure no one else is using another handset (if the intrusion mode is deactivated). Make sure that the dial mode (tone or pulse dialling) is compatible with your telephone line or your automatic branch exchange. Make sure your time limit has not run out (if activated). Make sure you are not on call restriction (if activated)</p>
You cannot send or receive SMSs.	<p>Make sure you have subscribed to a caller display service. Find out if the SMS service is in fact activated on your line. Obtain the server numbers from your service provider and make sure they are identical to the numbers on your handset. Have you provided your contacts with the right terminal number?</p>

## FEATURES

Functions	Default settings	Functions	Default settings
<b>SMS</b>		Language	English
SMS sending centre	01983381	<b>Security</b>	
SMS reception centre	01983391	Keypad lock	Off
<b>ACCESSORIES</b>		Emergency	Off
Alarm clock	Off	Base code	0000
Timer	Off	Time limit	Off
Room monitor	Off	Restriction	Off
<b>RING TONE</b>		Intrusion	Off
Ringer (Ext/Int)	Flute / Mineral	<b>Advanced settings</b>	
Silent mode	Off	• <b>Line settings</b>	
Beeps	All active	Network type	Public
<b>SETTINGS</b>		Flashing	100 ms
Program keys	Silence / TAM	PABX prefix	Off
Date/Time	00:00 // 01/01/07	• <b>Base settings</b>	
Auto Hang up	On	Base name	BASE 1
Auto Pick up	Off		

<b>Telephone features</b>			
Number of channels	120	Autonomy	
Radio frequency band	1,88 - 1,90 GHz	standby time	150 hours
Duplex mode	TDMA	talk time	15 hours
Spacing between	1,728 MHz	Handset range	
Bit rate	1152 Kbit/s	open space	up to 300 m
Modulation	GFSK	inside building	up to 50 m
Vocoding	ADPCM	Base dimensions	167 x 113 x 65 mm
Transmitting power	250 mW	Base weight	136 g
Base operating voltage	230 V , 50/60 Hz	Handset dimensions	140 x 51 x 30 mm
Charging time	12 hours	Handset weight	143 g

All of this data is provided to you for information purposes only. Sagem Communication reserves the right to make any changes without notice.



## ENVIRONMENT



Preservation of the environment is an essential concern of Sagem Communication. The desire of Sagem Communication is to operate systems observing the environment and consequently it has decided to integrate environmental performances in the life cycle of its products, from manufacturing to commissioning, use and elimination.

### PACKAGING



 
The presence of the logo (green dot) means that a contribution is paid to an approved national organisation to improve packaging recovery and recycling infrastructures.

To facilitate recycling, please respect the sorting rules set up locally for this kind of waste.

### BATTERIES



If your product contains batteries, they must be disposed of at appropriate collection points.



### THE PRODUCT



The crossed-out waste bin stuck on the product or its accessories means that the product belongs to the family of electrical and electronic equipments.

In this respect, the European regulations ask you to dispose of it selectively:



- At sales points in the event of the purchase of similar equipment.
- At the collection points made available to you locally (drop-off centre, selective collection, etc.).

In this way you can participate in the re-use and upgrading of Electrical and Electronic Equipment Waste, which can have an effect on the environment and human health.





## WARRANTY



### Product Warranty

Sagem Guarantees your product for 12 months from date of purchase against any defect in materials or workmanship under conditions of normal use and service and subject to proof of the date of purchase being provided and subject to the conditions specified below.

The benefits conferred by this warranty are in addition to all other rights and remedies in respect of the product that the consumer has under the Trade Practices Act and similar State and Territory laws.

### Warranty Service Conditions

Subject to your statutory rights referred to above, Sagem expressly limits its liability with respect to its products to the person who purchases the Product from the Sagem authorised retailer. Subject to your statutory rights referred to above, Sagem expressly limits its liability with respect to its products to whichever is the lowest amount out of:

- A. The cost of having the goods repaired;
- B. The cost of replacing the goods; or
- C. The cost of obtaining equivalent goods.



Subject to your statutory rights referred to above, in the event of the goods requiring service under warranty, the owner is responsible for the cost of transportation to the authorised service organisation. Whilst in transit the goods are at the owner's risk. Subject to your statutory rights referred to above, should the goods be found to be in sound working order by the authorised service organisation the owner may be charged a service fee.



Subject to your statutory rights referred to above, the goods will not be eligible for service under this warranty if:

- A. Proof of date of purchase cannot be provided;
- B. The goods are not branded Sagem;
- C. The goods have been rented to another person;
- D. The defect was caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by Sagem; or
- E. The product has been damaged by lightning or a mains power surge.

### Do you really need service?

Before calling for service under this warranty have you:

- Checked that all cables are securely connected as detailed in the User Guide?
- Referred to the User Guide to ensure that the features are being used correctly?
- If you are trying to access a network service such as Call Waiting, confirmed with your network provider that you have access to this feature?





## WARRANTY



### IMPORTANT

Please retain this booklet with your sales receipt as proof of the date of purchase.

© COPYRIGHT 2007 Sagem Corporation Limited

 
*This work is copyright. All rights reserved. Other than for purposes and subject to conditions prescribed under the Copyright Act, no part of it may in any form or by any means, mechanical, photocopying, scanning, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without prior permission from Sagem Corporation Limited.*

ABN 43 003 099 812

SAGEM is a registered trademark of Sagem Communication (SAFRAN Group).

Copyright © Sagem Communication (SAFRAN Group)

All rights reserved






.....

.....

.....

.....

 .....



.....

.....

 
.....

.....

.....

.....

.....





User Manual  
Data subject to change without notice



\* 2 5 2 9 7 3 9 3 A \*

## Sagem Communication

Société anonyme au capital de 300 272 000 € - 480 108 158 RCS PARIS  
27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE  
[www.sagem.com](http://www.sagem.com)

