

ALCATEL

Versatis F200 Voice / F200 Voice Duo / F200 Voice Trio /
Versatis F250 Voice / F250 Voice Duo / F250 Voice Trio


In keeping with our environmental preservation and compliance commitment, we include mini-guides in our packaging. More complete instructions and online assistance are available on our website:

www.atlinks.com



1. GETTING TO KNOW YOUR PHONE


1.1. Handset Overview (Versatis F200 Voice Only)

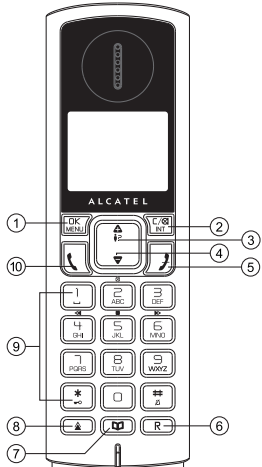

- OK/Menu**
In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/Phonebook/Redial List/Call List
- Voice**
In main menu mode: Press to go back to idle screen
In sub-menu mode: Press to go back to previous level
In sub-menu mode: Press and hold to go back to idle screen
In editing/predialing mode: Press to clear a character/digit
In editing/predialing mode: Press and hold to delete all the characters/digits
During a call: Press to mute/unmute the microphone
In idle mode: Press to intercom another handset
In ringing: Press to suppress handset ringer

- ▲**
In idle mode: Press to access the call list
In menu mode: Press to scroll up the menu items
In Phonebook list/Redial list/Call List: Press to scroll up the list
During a call: Press to increase the volume
In ringing: Press to increase the ringer volume
- ▼**
In idle mode: Press to access the redial list
In menu mode: Press to scroll down the menu items
In Phonebook list/Redial list/Call list: Press to scroll down the list
During a call: Press to decrease the volume
In ringing: Press to decrease the ringer volume
- End Call**
During a call: Press to end a call and go back to idle screen
In menu/editing mode: Press to go back to previous menu
In menu/editing mode: Press and hold to go back to idle screen
In idle mode: Press and hold to power off the handset
In idle mode: Press and hold to power on/off the handset
- R**
In idle/predialing mode: Press to insert a flash
During a call: Press to dial a flash
- Phonebook**
In idle mode: Press to access the phonebook list
- ▲**
In idle mode: Press to access the redial list
In menu mode: Press to scroll down the menu items
In Phonebook list/Redial list/Call list: Press to scroll down the list
During a call: Press to decrease the volume
In ringing: Press to decrease the ringer volume
- End Call**
During a call: Press to end a call and go back to idle screen
In menu/editing mode: Press to go back to previous menu
In menu/editing mode: Press and hold to go back to idle screen
In idle mode: Press and hold to power off the handset
In idle mode: Press and hold to power on/off the handset
- R**
In idle/predialing mode: Press to insert a flash
During a call: Press to dial a flash
- Phonebook**
In idle mode: Press to access the phonebook list
- ALPHANUMERIC KEYPAD, [OK], [*], [#]**
* key in idle mode: Press and hold to enable or disable the keypad lock
key in idle mode: Press and hold to turn on/off the ringer
key in call list mode: Press to review caller's number if applicable
0 key in predialing/number editing mode: Press and hold to insert a pause
1, 2, 3 key in idle/off hook mode, press and hold to dial the stored direct memory number.
- [OK]**
In idle/predialing mode : Press to make a call
In Redial list/Call List/Phonebook entry: Press to make a call to the selected entry in the list
During ringing: Press to answer a call

1.2. Handset Overview (Versatis F250 Voice only)

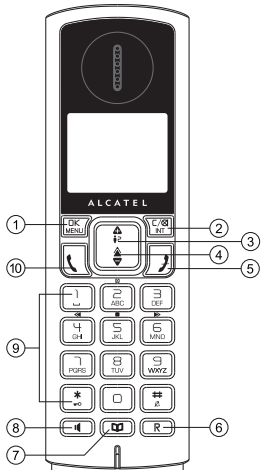


- OK/Menu**
In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/Phonebook/Redial List/Call List
- Voice**
In main menu mode: Press to go back to idle screen
In sub-menu mode: Press to go back to previous level
In sub-menu mode: Press and hold to go back to idle screen
In editing/predialing mode: Press to clear a character/digit
In editing/predialing mode: Press and hold to delete all the characters/digits
During a call: Press to mute/unmute the microphone
In idle mode: Press to intercom another handset
In ringing: Press to suppress handset ringer

- ▲**
In idle mode: Press to access the call list
In menu mode: Press to scroll up the menu items
In Phonebook list/Redial list/Call List: Press to scroll up the list
During a call: Press to increase the volume
In ringing: Press to increase the ringer volume
- ▼**
In idle mode: Press to access the redial list
In menu mode: Press to scroll down the menu items
In Phonebook list/Redial list/Call List: Press to scroll down the list
During a call: Press to decrease the volume
In ringing: Press to decrease the ringer volume
- End Call**
During a call: Press to end a call and go back to idle screen
In menu/editing mode: Press to go back to previous menu
In menu/editing mode: Press and hold to go back to idle screen
In idle mode: Press and hold to power off the handset
In idle mode: Press and hold to power on/off the handset
- R**
In idle/predialing mode: Press to insert a flash
During a call: Press to dial a flash
- Phonebook**
In idle mode: Press to access the phonebook list
- ▲**
During a call: Press to turn on/off the speakerphone
In Idle mode/Predialing mode/Redial list/Call List/Phonebook entry: Press to make a call with speakerphone
During ringing: Press to answer a call with speakerphone
- ALPHANUMERIC KEYPAD, [OK], [*], [#]**
* key in idle mode: Press and hold to enable or disable the keypad lock
* key during a call (in Pulse mode): Press to switch to tone mode
key in idle mode: Press and hold to turn on/off the ringer
key in call list mode: Press to review caller's number if applicable
0 key in predialing/number editing mode: Press and hold to insert a pause
1, 2, 3 key in idle/off hook mode, press and hold to dial the stored direct memory number.

- [OK]**
In idle/predialing mode : Press to make a call
In Redial list/Call List/Phonebook entry: Press to make a call to the selected entry in the list
During ringing: Press to answer a call

1.3. Base Station Overview

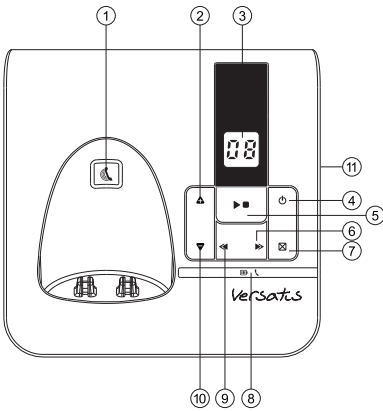

- ▲**
Press **▲** on the base station to page your handset. It will ring for approximately 60 seconds.
Press and hold **[OK]** on the base station for about five seconds, the base station is entered into registration mode and allows handset registration.
- ▲**
Increase (+) speaker volume during message playback.

3. 7-SEG LED DISPLAY


- 0F-> -- When answering machine is OFF
On-> XX When answering machine is ON where XX is number of messages in TAM memory
- 00 Steadily ON: No voice messages in TAM
XX Flash: There are XX new voice messages received where XX is from 01 to 59
ZZ Steadily ON: There are ZZ old voice messages kept in the TAM memory (no new voice messages)
XX/FF Flash XX alternatively with FF: There are XX new voice messages received where XX is from 01 to 59 and the TAM memory is full
- FF Flash FF: TAM memory is full and there are no new messages, only old messages are kept in TAM memory
Flash XX alternatively with -- -: Time is not set and there are XX new voice messages received where XX is from 01 to 59
Flash -- -: Time is not set and there are old voice messages kept in the TAM memory only (no new voice messages)
Steadily ON: Playing the current XX incoming old message
Flash: Playing the current XX incoming new message
Steadily ON: Playing the current outgoing message (OGM) where A1 is the Answer & Record OGM and A2 is the Answer Only OGM
Flash XX alternatively with An: XX new incoming message is now recording. An denotes that the incoming message recording is in progress
Flash: Remote access is in progress
Steadily ON: Indicate the current volume level where X is from 1 to 8 (non-cyclic)

- Power**
Press to turn on the answering machine
Press again to turn off the answering machine
- Message**
Press to play the message
Press again to stop the message playback

- Next**
Press to skip the current message and play the next message
- Stop**
Press once to delete the message during playback
Press and hold to delete all the messages
Note: New voice messages will not be deleted
- Charging**
Steadily on while the handset is charging or in use. (Applicable only when the LED I/O switch is slid to "I")
Flash when receiving an incoming call. (Applicable only when the LED I/O switch is slid to "I")
- Repeat**
Press to repeat playing the current message from the beginning
Press twice to skip backward to the previous message
- Volume**
Decrease (-) speaker volume during message playback
- LED I/O SWITCH (Bottom of the Base)**
Slide the switch to "O" position to turn off the base LED
Slide the switch to "I" position to turn on the base LED when the handset is charging on the base or in use

1.4. Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

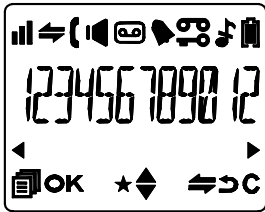

- Signal** Steadily on when the handset is in range of the base.
Flash when out of range of the base or not registered to the base.
- Intercom** Steadily on when an intercom is in progress.
Flash when there is an incoming internal call.
- Call in progress** Indicate a call is in progress.
- Versatis F250 Voice only** Indicate that handsfree is being used.
- Answering Machine (TAM)** Indicate when the telephone answering machine (TAM) is turned on.
Flash when new TAM messages are received.
Steadily on when an alarm is set.
Flash when the alarm time set before reaches.
- Keypad lock** Indicate that the keypad is locked.
- Voice Message Waiting (VMWI)** Indicate when there are received new Voice Message Waiting (VMWI) not yet read.
Disappear when all the voice messages have been read. (Network service dependent)
- Ringer** Indicate that the ringer is switched off.
- Battery** Indicate when the battery is fully charged.
Whole icon flashes when the battery performs initial charging.
Internal block icon flashes when the battery is in final charging stage.

- Battery** Indicate when the battery needs charging.
Flash when low battery power level is detected.
- Characters** Indicate when more characters are existed before the text currently displayed.
- Characters** Indicate when more characters are existed after the text currently displayed.
- Star** Indicate when new TAM message/new call.
Turn off when new TAM message/new call has been read.
- Scroll** Scroll up/down the menu items/Phonebook list/Redial list/Call List.

2. PRECAUTIONS

The signal quality will depend on the location and environment of the base and handset.

Position your **Versatis F200 Voice/Versatis F250 Voice** away from sources of excessive heat (radiators, direct sunlight, etc.) and protect it from vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols. To reduce the risk of interference and optimize reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, VCR or DVD players, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc.

This telephone requires an electrical power supply in order to function. To clean your **Versatis F200 Voice/Versatis F250 Voice**, use an antistatic cloth lightly moistened with water.

NB: Your **Versatis F200 Voice/Versatis F250 Voice** is a DECT™** standard appliance designed to receive and transmit telephone calls. It is designed for connection to the public telecommunications network.


3. INSTALLING YOUR PHONE

3.1. Installing and Charging the Batteries

- Slide down to open the battery compartment cover.
- Place the 2 supplied AAA rechargeable batteries as indicated. Pay extra attention to direction of polarity.
- Slide the battery compartment cover back.
- Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

Notes:


- Use only the supplied NiMH rechargeable batteries.
- If the handset will not be used for a long time, disconnect and remove the batteries to prevent possible leakage.

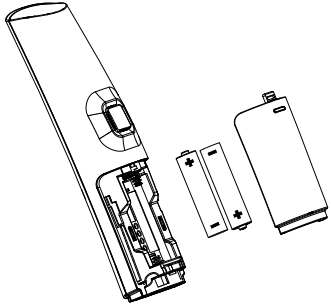

3.2. Connecting the Base Station

- Plug one end of the telephone line cord into the telephone jack on base bottom.
- Plug the small end of power adapter into a power jack on base bottom.
- Connect the power supply plug to the base jack horizontally, and route the power supply cord through the slot.**
- Plug the large end of power adapter into a wall power outlet.
- Plug the other end of the telephone line cord in to the telephone jack or micro-filter.

- Always use the cables provided in the box.

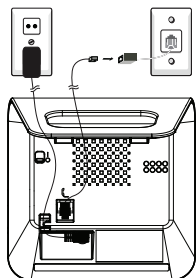

If you have broadband service, a micro-filter (not included) is required.

3.3. Connecting the Charger(s) (for Duo/Trio models)

Plug the power adapter into mains socket.

If you have a Broadband line

If you connect your telephone to a line with a broadband connection, you will need to insert a micro-filter between the telephone and the telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.

In a home with broadband, every telephone must have a micro-filter connected, not just the one at the telephone point that your modem is connected to. If you need more broadband micro-filters, contact your broadband supplier.

4. USING YOUR PHONE

4.1. Make a Call

4.1.1. Preparatory Dialing

Enter the phone number and press **[OK]** or **[OK]** (Versatis F250 Voice Only) to dial the number. Press **[Voice]** to clear the entry.

4.1.2. Direct Dialing

Press **[OK]** or **[OK]** (Versatis F250 Voice Only) to take the line and enter the phone number.

4.1.3. Dial from Direct Memory Keys

In idle or off hook mode, press and hold **[1]/[2]/[3]** to dial the direct memory number. You have to store number to the related key first. See section 7.4 for reference.

4.1.4. Call from the Redial List

Press **[▲]** (Versatis F200 Voice Only) or **▼/▲** (Versatis F250 Voice Only) to access the redial list and press **▼/▲** to select the desired redial number. Press **[OK]** or **[OK]** (Versatis F250 Voice Only) to dial out to the selected redial number.

4.2. Handset Speakerphone (Versatis F250 Voice Only)

During a call, you can press **[OK]** to alternate between handsfree and normal handset use.

5. PRIVATE PHONEBOOK

Your phone can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1. Add a New Phonebook Entry

- In idle:
- Press **[Phonebook]** to access the phonebook.
OR
Press **[OK]** and **▼/▲** to select **PHONEBOOK** main menu item and then press **[OK]** to access the phonebook.
 - Press **[OK]** to select **ADD**.
 - Press **[OK]** to enter the name.
 - Press **[OK]** to enter the number.
 - Press **[OK]** and **▼/▲** to select the desired ringtone for your phonebook entry.
 - Press **[OK]** to store the phonebook entry.

5.2. Call from the Phonebook

- In idle:
- Press **[Phonebook]** to access the phonebook.
OR
Press **[OK]** and **▼/▲** to select **PHONEBOOK** main menu item and then press **[OK]** to access the phonebook.
 - Press **[OK]** or **[OK]** (Versatis F250 Voice Only) to dial out to the selected phonebook entry.

6. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your telephone service provider. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, **"WITHHELD"** will display.

If the caller number is not provided, **"OUT OF AREA"** will display. In standby, if three unanswered calls are received, **"3 NEW CALLS"** will be displayed.

6.1. View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new

call. The unanswered call which has not been read is marked with a **★** at the centre of the bottom line of the display.

- Press **▲** to access the call list.
OR
Press **[OK]** and **▼/▲** to select **CALL LIST**.
- Press **▼/▲** to select the desired entry.
- Press **[*]** to view the caller's number if applicable.

6.2. Call from the Call List

- In idle:
- Press **▲** to access the call list.
OR
Press **[OK]** and **▼/▲** to select **CALL LIST**.
 - Press **[OK]** or **[OK]** (Versatis F250 Voice Only) to dial out to the selected phonebook entry.

7. PHONE SETTINGS

7.1. Set the Ringer Melody for Internal/External Calls

- Press **[OK]** and **▼/▲** to select **HS SETTINGS**.
- Press **[OK]** and **▼/▲** to select **RING SETUP**.
- Press **[OK]** and **▼/▲** to select **INT RING** or **EXT RING**.
- Press **[OK]** and **▼/▲** to select the desired ringer melody from the melody list.

Note: The respective ringer melody will be played while browsing the melody list.

- Press **[OK]** to confirm.

7.2. Set the Ringer Volume

- Press **[OK]** and **▼/▲** to select **HS SETTINGS**.
 - Press **[OK]** and **▼/▲** to select **RING SETUP**.
 - Press **[OK]** and **▼/▲** to select **RING VOLUME**.
 - Press **[OK]** and **▼/▲** to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).
- Note:** The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected, **♪** icon will display.
- Press **[OK]** to confirm.


 

 

 

 
7.3. Adjust Earpiece and Handsfree (Versatis F250 Voice Only) Volume




There are 5 levels (**VOLUME 1** to **VOLUME 5**) to choose from for each of earpiece and handsfree (Versatis F250 Voice Only) volume.

During a call:
Press **▼/▲** to select volume 1-5. The current setting is shown. When you end the call, the setting will remain at the last selected level.

7.4. Store Direct Memory Access Number

 You can store three direct access numbers into digit KEY 1, KEY 2 and KEY 3, which will be convenient for you to dial to these numbers directly.

1. Press  and  to select **HS SETTINGS**.
2. Press  and  to select **DIRECT MEM.**
3. Press  and  to select any one from **KEY 1, KEY 2** and **KEY 3**.
4. Press  and then enter the number you would like to store, or edit the number existed before.
5. Press  to confirm.

Note: Press and hold ,  or  to call the stored number.

 


8. ANSWERING MACHINE

Your phone includes a telephone answering machine that records unanswered calls when it is on. The message counter on the base will show the number of the messages when the answering machine is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 18 minutes. As well as recording incoming messages, you can record memos for other users of your phone. If the answering machine memory is full, the Handset will display **TAM FULL** and the handset name alternatively in standby, or display **TAM FULL** and the date/time information in standby.


 

 

 

 

8.1. Turn On/Off the Answering Machine

You can turn on or off the answering machine through the base or handset. When the answering machine is set to **ON**, calls will be answered after the set answer delay and the caller can then leave you a message. When the answering machine is set to **OFF**, calls will be answered after 10 rings and the answer only message will be played to your callers. They will not be able to leave you a message.


Through the Base:

1. Press  on the base station.
- If answering machine is set to **ON**,  displays on the handset LCD and the 7-seg LED on the base station will display the number of incoming messages.
- If answering machine is set to **OFF**,  will disappear from the handset LCD and the 7-seg LED on the base station will display - .


 

Through the Handset:

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM ON/OFF**.
3. Press  and  to select **ON** or **OFF**.
4. Press  to confirm.
- If answering machine is set to **ON**,  displays on the handset LCD and the 7-seg LED on the base station will display the number of incoming messages.
- If answering machine is set to **OFF**,  will disappear from the handset LCD and the 7-seg LED on the base station will display - .


 





8.2. Listen to the Messages in the Answering Machine

When new messages are recorded on the answering machine,  flashes on the handset display and the message counter on base flashes with the number of new messages in the answering machine until all the new messages are played. Old messages will be played after all new messages are played completely.

Listen new messages through the Base:

1. Press  on the base station.
2. The new messages are played from the loudspeaker on the base station in the sequence they are recorded.
3. Press  or  on the base station to increase or decrease the volume during message playback respectively.

Listen new messages through the Handset:

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **MSG PLAYBACK**.
3. Press  to start message playback and the screen displays the date and time information of the message received.
4. During message playback, press  to increase or decrease the message playback volume respectively.
5. Press  to select **STOP, FORWARD, PREVIOUS, DELETE** to perform the following functions during message playback.






STOP: Stop the current message playback and return to the **ANS. MACHINE** menu.

FORWARD: Skip to play the next message. The date and time information of the next message will display if there is next message.

PREVIOUS: Skip to repeat playing the current message from the beginning. The date and time information of the current message will display.

DELETE: Delete the current message and the next message will be played.

Note: Alternatively, you can use the following shortcut keys to control different operation during message playback.

- Press  to stop message playback.
- Press  to skip to repeat playing the current message from the beginning. Press  twice to skip backward to the previous message.
- Press  to skip to play next message.
- Press  to delete the current message playback.

6. Press  to confirm.


 

 


8.3. Delete All Messages in the Answering Machine

Delete all messages through the Base:

In idle:


 

 



1. Press and hold  on the base station.
2. All the old messages will be deleted.

Delete all messages through the Handset:

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **DELETE ALL**.
3. Press  to confirm.
4. Press  to delete all old messages.

8.4. Record Memo

You can record your memo message for another user.




 

 

 

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **MEMO**.
3. Press  to start memo recording and “**RECORDING**” is displayed.
4. Press  to stop memo recording and save the memo.
OR
4. Press  to stop memo recording without saving and return back to **ANS. MACHINE** menu.

8.5. Answering Machine Settings

You can use the **TAM SETTINGS** menu through the handset to change the settings of your answering machine.




 

 



8.5.1. Set the Answer Mode

By default, the answer machine is set in **ANS & REC** mode which allows callers to leave a message. This mode can be changed to **ANSWER ONLY** which does not allow callers to leave a message. In that case, your callers will be prompted to call back later.

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM SETTINGS**.
3. Press  and  to select **ANSWER MODE**.
4. Press  and  to select **ANS & REC** or **ANSWER ONLY**.
5. Press  to confirm.









8.5.2. Set the Outgoing Message Language





 
The answering machine announces the outgoing message when it answers a call. There is a pre-set OGM for each of **ANS & REC** mode or **ANSWER ONLY** mode. You are able to select your desired OGM language to playback.

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM SETTINGS**.
3. Press  and  to select **TAM LANGUAGE**.
4. Press  and  to select your desired OGM language.
5. Press  to confirm.

8.5.3. Record Your Own Outgoing Message (OGM)

You can record your own OGM for **ANS & REC** mode or **ANSWER ONLY** mode. When you record your own OGM, it will be used when the answering machine answers the call. If your personalized OGM is deleted, the pre-set OGM will be restored automatically.








 

 


1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM SETTINGS**.
3. Press  and  to select **OGM SETTINGS**.
4. Press  and  to select **ANS & REC** or **ANSWER ONLY**.

5. Press  and  to select **RECORD MESS**.
6. Press  to start recording your personalized OGM and “**RECORDING**” is displayed on the screen.
7. Press  to stop and save your personalized OGM. The newly saved OGM will playback automatically. Alternatively, press  to return to previous screen without saving the personalized OGM.

8.5.4. Playback and Delete the Outgoing Message (OGM)


You can playback your own personalized OGM or the pre-set OGM for **ANS & REC** mode or **ANSWER ONLY** mode and choose to delete your personalized OGM during playback and record a new one whenever you want. Please note that pre-set OGM cannot be deleted.

8.5.4.1. Playback the OGM

1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM SETTINGS**.
3. Press  and  to select **OGM SETTINGS**.
4. Press  and  to select **ANS & REC** or **ANSWER ONLY**.
5. Press  and  to select **PLAYBACK**.
6. Press  to playback your personalized OGM (if you have recorded a personalized OGM before) and “**PLAYING OGM**” is displayed on the screen.
7. Press  to stop the OGM playback and return to the previous menu.

Note: If a personalized OGM is not recorded before, the pre-set OGM will be played.






 

 

8.5.4.2. Delete the personalized OGM

1. Repeat Steps 1 to 6 in Section 8.5.4.1.
2. Press  to delete your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

Note: If pre-set OGM is playing, you are not allowed to delete the pre-set OGM and thus C will not display. Only **OK** will display.

 
8.5.5. Set the Answer Delay






You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to eight rings or **TIME SAVER**.



1. Press  and  to select **ANS. MACHINE**.
2. Press  and  to select **TAM SETTINGS**.
3. Press  and  to select **ANSWER DELAY** (Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS** or **TIME SAVER**).
4. Press  and  to select your desired answer delay.
5. Press  to confirm.

 9. REGISTRATION

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.

If for some reason, the handset is not registered to the base station ( flashes even when the handset is near the base station), register your handset according to the following procedure.

  1. Press and hold  on the base station for about five seconds, the base station is entered into registration mode.
2. Press  and  to select **REGISTRATION**.
3. Press  and you are requested to enter the 4-digit system PIN (default PIN is 0000).
4. Enter the 4-digit system PIN
5. Press  to confirm.

If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

10. TECHNICAL DETAILS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 5
Intercom Mode	Yes
Three-Way Conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical Connection/ Base Mains Adaptor/ Charger	Base main adaptor: Model No.: S004LV0600045 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/450 mA Charger adaptor: Model No.: S004LV0600030 Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/300 mA Only use the adaptors supplied with the telephone Single-phase AC, excluding IT installations defined by the EN60950 standard. Caution: The network voltage is classified as a hazard by the criteria of this standard.
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN60950 standard.
Batteries	AAA – 1.2 V – 400 mA Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating Temperature	From 5°C to 40°C


* Values may vary according to environment.

** Depending on initial battery charge.

11. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solutions
No dialing tone when pressing  key	a. The connection cord of the base station is not plugged in.	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket.
	b. The adapter cord is not plugged in correctly in the base station.	b. Check the base station plug and the 220V plug (remove and plug-in).
	c. The line is busy, as another handset is used.	c. Wait until the line is unoccupied.
	d. Wrong connection cord.	d. Use the original connection cord.
" OUT OF RANGE " is displayed.	a. Base station out of range. b. Base station not connected to mains.	a. Reduce the range. b. Connect base station to mains.
The call does not work.	Service not activated or wrong operator.	Check your Subscription with network.
No display.	Empty battery.	Recharge battery.

Problem	Cause	Solutions
Answering Machine		
The unit does not record new messages.	The answering machine is turned off.	Turn on the answering machine.
The caller cannot leave a message.	a. The answering machine is turned off. b. Message memory is full.	a. Turn on the answering machine. b. Erase unnecessary messages.
I cannot operate the answering machine remotely.	a. You are entering the wrong remote access code. b. You are pressing the dial keys too quickly. c. The answering machine is turned off. d. You are using a pulse telephone.	a. If you forget the remote access code, reset to the default settings. b. Press each key firmly. c. Turn on the answering machine. d. Try again using a touch tone phone.
While recording an outgoing message or listening to messages, the unit rings and recording stops.	A call is being received.	Answer the incoming call and try again to record your outgoing message later.

The store where you bought your telephone can also provide you with information and after-sales support.

12. SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC/50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.


! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.

It is recommended that you avoid using this device during electrical storms. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

ATLINKS hereby declares that the following models conform to the essential requirements and other applicable provisions of European directive 1999/5/EC.
Versatis F200 Voice/Versatis F200 Voice Duo/Trio
Versatis F250 Voice/Versatis F250 Voice Duo/Trio



13. ENVIRONMENT

 This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.
- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!



© ATLINKS 2011 - Reproduction prohibited.
The Manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.
ALCATEL and ATLINKS are registered trademarks.
The Alcatel logo and Alcatel name are trademarks of Alcatel and used under licence by ATLINKS.

F200 Voice/F200 Voice Duo/Trio
F250 Voice/F250 Voice Duo/Trio
A/W No.: 10000260 Rev.0 (EN)
Printed in China