### **DIGITAL CAMERA**

# **OLYMPUS**

# FE-310/X-840/C-530

# Instruction Manual

# **Quick Start Guide**

Get started using your camera right away.



**Button operations** 

Menu operations

**Printing pictures** 

**Using OLYMPUS Master** 

Getting to know your camera better

**Appendix** 


- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.

# Contents

# Quick Start Guide P. 3

Button operations	P. 10	Test out the functions of the camera buttons by following along with the illustrations.
Menu operations	P. 18	Learn about the menus that control the functions and settings for basic operation.
Printing pictures	P. 29	Learn how to print pictures you have taken.
Using OLYMPUS Master	P. 34	Learn how to transfer and save pictures to a computer.
Getting to know your camera better	P. 38	Find out more about camera operations and how to take better pictures.
Appendix	P. 46	Read about convenient functions and safety precautions to use your camera more effectively.

# **Gather these items (box contents)**

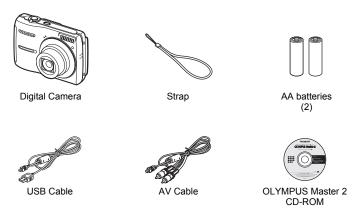

Items not shown: Instruction Manual (this manual) and the Warranty Card. Contents may vary depending on purchase location.


# Attach the strap



Pull the strap tight so that it does not come loose.

# Prepare the camera

 Insert the battery and the xD-Picture Card (optional) into the camera.

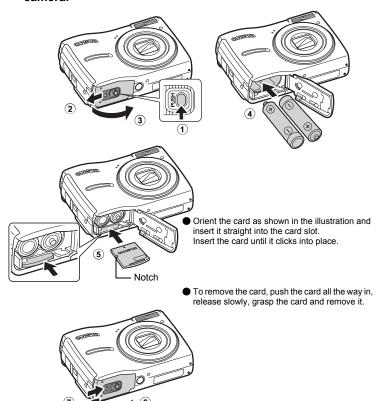


With this camera, you can take pictures without inserting the optional xD-Picture Card™ (hereinafter referred to as "the card"). If you take pictures without inserting the card, the pictures will be stored in the internal memory. For details on the card, please refer to "The card" (P. 47).

# Turn the camera on

 This explains how to turn on the camera in shooting mode.


### a. Set the mode dial to AUTO.



### Still picture shooting modes

AUTO	The camera automatically determines the optimum settings for shooting pictures.		
Р	The camera automatically sets the optimum aperture value and shutter speed.		
((< <sup>m</sup> )))	This function reduces blur incurred by a moving subject or camera shake when taking pictures.		
n	Suitable for taking pictures of people.		
<b>A</b>	Suitable for taking pictures of a landscape.		
SCENE	Select from 11 available scene modes, according to the shooting conditions.		
GUIDE	Use the shooting guide displayed on the screen to shoot pictures according to the situation.		
 
### b. Press the POWER button.




● To turn off the camera, press the **POWER** button once again.

# Hint


The directions of the arrow pad is indicated with  $\Delta \nabla \triangleleft \triangleright$  in the supplied instruction manual.




### The date and time screen

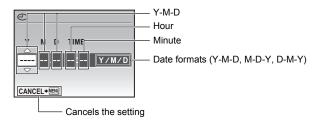

 
- a. Press the  $\triangle \mathbf{Z}/\square$  and  $\nabla \dot{\mathbf{S}}$  buttons to select [Y].
  - · The first two digits of the year are fixed.



 
b. Press the ▶**‡** button.



  c. Press the △½/ᆜ and ▽ॐ buttons to select [M].



 
- d. Press the ▶\$ button.
- e. Press the △⊉/ᆜ and ▽ॐ buttons to select [D].
- f. Press the ▶\$ button.
- g. Press the △望/ᆜ and ▽ॐ buttons to select the hours and minutes.
  - · The time is displayed in the 24-hour format.
- h. Press the **> ≴** button.
- i. Press the △½/ᆜ and ▽ॐ buttons to select [Y/M/D].







 - j. After all settings have been set, press [OK FUNC].
  - For a more accurate setting, press [NK] when the time signal hits 00 seconds.




The number of storable still pictures is displayed.

# Take a picture

### a. Hold the camera.




### b. Focus.

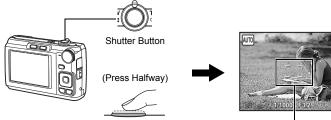

- The AF target mark lights up green when the focus and exposure are locked. The shutter speed and aperture value are also displayed.
- If the AF target mark blinks in red, the focus is not adjusted properly. Try locking the focus again.


AF target mark
Place this mark over your
subject.

# c. Shoot.

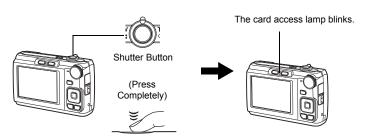


# **Review your pictures**

a. Press the **b** button.

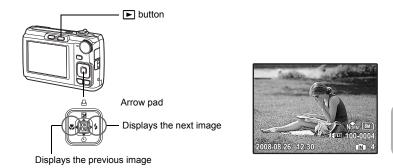


# **Erase pictures**

 
- b. Press the lÖl/₩ button.



 c. Press the △≱/L button, select [YES], and press .



# **Button operations**

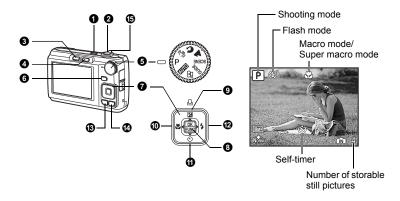

### POWER button

Turning the camera on and off

Power on: Camera turns on in shooting mode.

- · Lens extends
- · Monitor turns on

### 2 Shutter button

Shooting pictures/Recording movies

# Shooting still pictures

Set the mode dial to a setting other than  $\Omega$ , and lightly press the shutter button (halfway). The AF target mark lights up green when the focus and exposure are locked (focus lock). The shutter speed and aperture value are displayed (only when the mode dial is set to  $\Omega$ . P or  $\Omega$ . Now press the shutter button all the way (completely) to shoot a picture.



**lock)**Compose your picture with the focus locked, and then fully

Compose your picture with the focus locked, and then fully press the shutter button to shoot a picture.

Locking the focus and then composing the shot (Focus

• If the AF target mark blinks red, the focus is not adjusted properly. Try locking the focus again.

AF target mark

## Recording movies

Set the mode dial to  $\Omega$  and lightly press the shutter button to lock the focus. Then, press the shutter button completely to start recording. Press the shutter button again to stop recording.

# 3 button (Shooting) Selecting shooting mode/Turning the camera on

Shooting mode is selected.

This function is used to set the camera to turn on in shooting mode when 
is pressed with the camera off.

" Turning on the camera with the or ▶ button" (P. 27)

# **♦ button (Playback)** Selecting playback mode/Turning the camera on

The last picture taken is displayed.

- Press the arrow pad to view other pictures.
- Use the zoom lever to switch between close-up playback and index display.

This function is used to set the camera to turn on in playback mode when **\rightarrow** is pressed with the camera off.

" Turning on the camera with the or ▶ button" (P. 27)

### Playing back movies

Select the movie in the playback mode and press [in to play.

 


### Operations during movie playback



- ▷: Fast forwards playback when pressed and held.
- : Rewinds playback when pressed and held.
- Press ok to pause the playback.

### Operations during pause



- ─ ▷: Plays when pressed and held.
  - Plays the movie in reverse when pressed and held.
- To resume the movie, press OK FUNC.
- To cancel the playback of the movie in the middle of it or during pause, press **MENU**.



Set the mode dial to the desired shooting mode.

### AUTO Shooting pictures with automatic settings

The camera determines the optimum settings for shooting pictures, [CAMERA MENU] settings such as ISO sensitivity cannot be changed.

### P Set the optimum aperture value and shutter speed

The camera automatically sets the optimum aperture value and shutter speed for the brightness of the subject. [CAMERA MENU] settings such as ISO sensitivity can be changed.

### (M) Shooting pictures using digital image stabilization

This function reduces the blur incurred by a moving subject or camera shake when taking pictures.

### Shooting pictures according to the situation

Use PORTRAIT and LANDSCAPE to shoot pictures with the optimal settings.

### SCENE Shooting pictures by selecting a scene mode according to the situation

Select from 11 available scene modes, according to the shooting conditions. Press K to set.

🍇 NIGHT+PORTRAIT /🗞 SPORT / 💥 INDOOR /🕸 CANDLE /

 
🕰 SELF PORTRAIT 🕍 SUNSET / 👹 FIREWORKS / 😿 BEHIND GLASS /

TI CUISINE / DOCUMENTS / AUCTION



- The scene selection screen displays sample images and the shooting mode to best suit the situation.
- To switch to a different scene mode after a scene mode has been selected, press **MENU** to select [SCENE] from the top menu and display the scene selection screen.
- By switching to another scene, most settings will be changed to the default settings of each scene.

# GUIDE Follow the shooting guide



Follow the shooting guide displayed on the screen to set the target items.

- Press MENU to display the shooting guide again.
- To change the setting without using the shooting guide, set the shooting mode to another one.
- The content set using the shooting guide will change to the default setting by pressing MENU or changing the mode using the mode dial.

### Recording movies

Audio is recorded with the movie.

- During audio recording, only the digital zoom can be used. To record the movie with the
  optical zoom, set [] (movie) to [OFF].
- "♣ (movie) Recording movies with or without sound" (P. 22)



This icon lights during movie recording.


The remaining recording time is displayed. When the remaining recording time reaches 0, recording stops.

# 6 DISP./ button Cha

Changing the information on display/Display the menu guide

### DISP. Changing the information displays

Press **DISP.** to change the display in the following order.

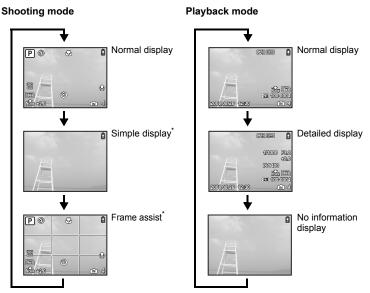

\* This is not displayed when the mode dial is set to P or GUIDE.

### Displaying the menu guide



With a menu item highlighted, press and hold down ② to display the menu guide which will provide more information on the function or setting.

### **7** Arrow pad $(\triangle \nabla \triangleleft \triangleright)$

Use the arrow pad to select scenes, items on the menus, and to play back pictures.

# 8 OK button (OK/FUNC)

Displays the Function Menu which contains the functions and settings used during shooting. This button is also used to confirm your selection.

### The functions you can set with the Function Menu

"ISO Changing the ISO sensitivity" (P. 21)

"IMAGE QUALITY Changing the image quality" (P. 20)

### Function Menu



The current camera settings are displayed.

 $\Delta \nabla$ : Select the function to be set.

⟨□⟩: Select a setting, and press (□)K
| PUNC.

# 

Changing picture brightness (Exposure compensation)/
Printing pictures

### Shooting mode: Changing picture brightness



Press  $\Delta \mathbf{Z}/\underline{\mathbf{L}}$  in shooting mode, use the arrow pad to select preferred brightness, and press  $\widehat{\mathbb{A}}$ .

Adjustable from -2.0 EV to +2.0 EV

Use **⟨** to change the display.

### Playback mode: Printing pictures

Display a picture to print out in playback mode, connect the camera to the printer, and then press  $\Delta \mathbf{Z}/\Box$  to print the picture.

"Direct printing (PictBridge)" (P. 29)

### 

Press in shooting mode to select the macro mode.

Press ok to set.

OFF	Macro off	Cancels macro mode.	
Macro mode		This mode lets you shoot from as close as 20 cm/7.9 in. (when the zoom is set for the zoom-out angle) and as close as 50 cm/13.8 in. (when the zoom is set for the zoom-in angle) to your subject.	
s	Super macro mode	This mode lets you shoot from as close as 5 cm/2.0 in. to your subject. The zoom position is fixed automatically and cannot be changed.	

· Zoom and flash cannot be used in super macro mode.

# **1** ∇ ⊗ button Self-timer shooting

Press  $\nabla \mathfrak{V}$  in shooting mode to select ON or OFF for the self-timer. Press  $\mathbb{R}^{\mathbb{R}}$  to set.

OFF	Cancel the self-timer.
ON	Set the self-timer.

- After setting the self-timer, press the shutter button completely. Then, the self-timer lamp lights for approximately 10 seconds, blinks for approximately 2 seconds, and the shutter is released.
- To cancel the self-timer, press ∇ઙ).
- · Self-timer shooting is automatically canceled after one shot.

### 

Press > in shooting mode to select the flash mode.

Press ok to set.

AUTO	Flash auto	The flash fires automatically in low light or backlight conditions.
<b>©</b>	Red-eye reduction flash	This emits pre-flashes for red-eye reduction.
4	Fill-in flash	The flash fires regardless of the available light.
3	Flash off	The flash does not fire.

# MENU button Displaying the top menu

Displays the top menu.





## |O| Increasing the brightness of the monitor (Backlight boost)

The monitor lights brighter when |O| is pressed in shooting mode. If there is no operation for 10 seconds, it dims back to the original brightness.

• When [BRIGHT] is selected in [III], the monitor brightness does not change.

# Erasing pictures

In playback mode, select the picture you want to erase, and press 4.

· Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

**©** "O¬ Protecting pictures" (P. 24)

### Zoom lever

### Zooming while shooting/Close-up playback

Zoom in:

side

Turn the zoom

 
lever to the T-

### Shooting mode: Zooming in on your subject

Optical zoom: 5×

Digital zoom: 4× (optical zoom × digital zoom: Max. 20×)

Zoom out: Turn the zoom lever to the Wside.




The zoom bar appears white when the current zoom position is within the optical zoom area. When the digital zoom activates, the zoom bar appears yellow and the image is further enlarged.

### Playback mode: Switching the picture display

### Single-frame playback


· Use the arrow pad to browse pictures.

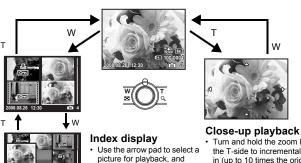

- press ok to play back the single-frame of the picture selected.

- Turn and hold the zoom lever to the T-side to incrementally zoom in (up to 10 times the original size), and to the W-side to zoom
- · Press the arrow pad during closeup playback to scroll the picture in the indicated direction.
- · When returning to the singleframe playback, press OK PUNC.


# Menu operations

 

### About the menus

Press **MENU** to display the top menu on the monitor.


• The contents displayed on the top menu differ according to the mode.

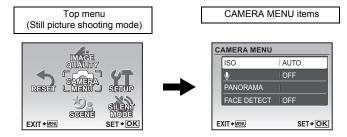

- Select [CAMERA MENU], [PLAYBACK MENU], [EDIT], [ERASE] or [SETUP] and press
   The screen for selecting the menu item is then displayed.
- When the mode dial is set to GUIDE and the settings are made by following the shooting guide, press MENU to display the shooting guide screen.

# Operation guide

During menu operations, the buttons and their respective functions are displayed at the bottom of the screen. Follow these guides to navigate the menus.

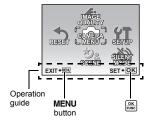

BACK+ MENU: Moves back one menu.

EXIT+ MENU: Exits the menu.


SET+ OK: Sets the selected item.

# Using the menus

 This explains how to use the menus with the [POWER SAVE] setting as an example.

- 1 Set the mode dial to a setting other than GUIDE.
- - [POWER SAVE] is on a menu in [SETUP].
- 3 Press △∇ to select [POWER SAVE], and press .
  - · Unavailable settings cannot be selected.







SET+OK

EXIT + MENU

The selected item is displayed in a different color.

 - **4** Press  $\triangle \nabla$  to select [OFF] or [ON], and press
  - The menu item is set and the previous menu is displayed.
     Press MENU repeatedly to exit the menu.
  - To cancel any changes and continue operating the menus, press MENU without pressing Rec.



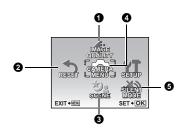

### **4** CAMERA MENU

- ISO

  § (still picture)
  (movie)
  PANORAMA\*
  FACE DETECT
- \* An Olympus xD-Picture Card is required.
- · Some functions are not available according to the selected mode.
- Functions available in shooting modes and scenes" (P. 45)
- "SETUP menus" (P. 26)
- The factory default settings are displayed in gray (

### **1** IMAGE QUALITY

### Changing the image quality

This function allows you to set [IMAGE SIZE] and [COMPRESSION].

### Still picture image quality and their applications

IMAGE SIZE	Application			
8M 3264 × 2448	Suitable for printing pictures over A3 (11 × 17 in.).			
5 <sub>M</sub> 2560 × 1920	• Suitable for printing pictures at A4 (8.5 × 11 in.).			
3M 2048 × 1536	<ul> <li>Suitable for printing pictures up to A4 (8 × 11 in.).</li> </ul>			
2M 1600 × 1200	<ul> <li>Suitable for printing pictures at A5 (5 × 7 in.).</li> </ul>			
1M 1280 × 960	Suitable for printing pictures at postcard size.			
VGA 640 × 480	<ul> <li>Suitable for viewing pictures on a TV or using pictures on emails and web sites.</li> </ul>			
16:9 1920 × 1080	Suitable for playing pictures at Wide screen TV.			
COMPRESSION				
FINE FINE	Shooting at high quality.			
NORMAL	Shooting at normal quality.			

### Movie image quality

IMAGE SIZE				
VGA	640 × 480			
QVGA	320 × 240			

"Number of storable still pictures and recording length of movies" (P. 41)

# RESET Changing the shooting functions back to default settings

NO /YES Restore shooting functions back to default settings.

### Functions restored to the factory default settings

Function	Factory default setting	Ref. Page
SCENE	ಶ್ವ NIGHT+PORTRAIT	P. 12
DISP.	Normal display	P. 13
<b>2</b>	0.0	P. 14
*	OFF	P. 15
<b>৩</b>	OFF	P. 15
\$	AUTO	P. 15
IMAGE SIZE (Still picture/ Movie)	8M / QvgA	P. 20
COMPRESSION	Norm	P. 20
ISO	AUTO	P. 21
∮ (still picture)	OFF	P. 21
∮ (movie)	ON	P. 22
FACE DETECT	OFF	P. 22

### 3 SCENE (Scene) Shooting pictures by selecting a scene according to the situation

The scene selection screen displays sample images and the shooting mode to best suit the situation. This can be set only when the mode dial is set to **SCENE**.

 By switching to another scene, most settings will be changed to the default settings of each scene.

 $\begin{tabular}{ll} \protect\end{tabular} \begin{tabular}{ll} \protect\end{tabular} \$ 

### CAMERA MENU

ISO ...... Changing the ISO sensitivity

AUTO	Sensitivity is automatically adjusted according to the conditions of the subject.
64/100/200/4 640	OO/ A low value lowers the sensitivity for daylight shooting of clear, sharp pictures. The higher the value, the better the camera's light sensitivity and ability to shoot with a fast shutter speed and in low light conditions. However, high sensitivity introduces noise into the resulting picture, which may give it a grainy appearance.

# (still picture) ......Recording sound with still pictures

OFF /ON

When activated [ON], the camera will record about 4 seconds of audio after the picture is taken.

When recording, aim the camera microphone at the source of the sound you want to record.



 
(movie) ...... Recording movies with or without sound

OFF /ON When [ON] (sound is recorded) is selected, the optical zoom

PANORAMA......Creating a panoramic picture

Panorama shooting lets you create a panoramic picture, using the OLYMPUS Master software on the provided CD-ROM. An Olympus xD-Picture Card is required for panorama shooting.

Connects pictures from left to right



>: The next picture is connected at the right edge.

be used.

The next picture is connected at the left edge.

Connects pictures from bottom to top



cannot be used during movie recording. Only the digital zoom can

- Δ: The next picture is connected at the top.
- ∇: The next picture is connected at the bottom.

Use the arrow pad to specify at which edge you want to connect the pictures; and then compose your shots so that the edges of the pictures overlap. The part of the previous picture where it will be joined to the next picture does not remain in the frame. You have to remember what the part in the frame looked like and take the next picture so it overlaps.



- Press ok to exit.
- Panorama shooting is possible for up to 10 pictures. The warning mark (<a>[過]</a>) is displayed after 10 pictures have been taken.

FACE DETECT...... Focusing on a face

OFF /ON


The camera searches for a face within the frame and focuses on it.

A face may not be detected depending on the subject.

OFF /ON
This function allows you to mute operational sounds during shooting and playback (e.g., warning beeps, shutter sounds, etc.).

# Playback mode menu



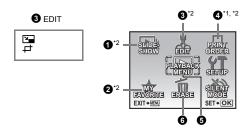





- \*1 A card is required.
- \*2 This is not selected when the movie is selected.

#SETUP menus" (P. 26)

"SILENT MODE Muting operational sounds" (P. 22)

The factory default settings are displayed in gray (

### SLIDESHOW

Playing back pictures automatically

Press of to start the slideshow.

- · Only the first frame of each movie is displayed.
- To cancel the slideshow, press or **MENU**.

### **MY FAVORITE**

### Viewing and registering pictures in My Favorite

Registers and plays back your favorite still pictures as new ones in the internal memory. Up to 9 pictures can be registered.

Registered pictures will not be erased even if the internal memory is formatted.

"Erasing pictures registered in MY FAVORITE" (P. 23)

# Note

· Registered pictures cannot be edited, printed, copied to a card, transferred to a computer, or viewed on a computer.

VIEW FAVORITE......Viewing registered pictures

- · Select [VIEW FAVORITE] to display pictures registered in MY FAVORITE. Use the arrow pad to browse pictures.
- Press MENU to select [ADD FAVORITE] or [SLIDESHOW].



ADD FAVORITE	Adds pictures to My Favorite.  • Select a picture with ⟨□⟩, and press .
SLIDESHOW	Plays back registered pictures automatically.  • Press ox to exit the slideshow.
EXIT	Reverts to normal playback mode.

### Erasing pictures registered in MY FAVORITE

YES/ NO

- Use the arrow pad to select the picture to be erased, and press 檢. Select [YES], and press .
- Even if pictures registered in MY FAVORITE are erased. original pictures in the internal memory or the card may not be erased.

SET......Registering favorite pictures



Select a picture with ⟨□⟩, and press (□)

EDIT

Changing the size of pictures

VGA 640 × 480/ QvGA 320 × 240

This changes the image size of a picture and saves it as a new file.

Crop a picture, and save the cropped picture as a new picture.



- Use < □> to select a picture to be cropped and press OK RUNC.
- Use the arrow pad and zoom lever to adjust the position and size of the area-selection box, and press [SK].

### PRINT ORDER

Making print reservations (DPOF)

This function allows you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

Frint settings (DPOF)" (P. 31)

# **6** PLAYBACK MENU

 
OFF /ON



Protected pictures cannot be erased using [ERASE], [SEL. IMAGE] or [ALL ERASE], but they are all erased by formatting.

Select the picture with △▷, and protect it by selecting [ON] with △♡. You can protect several frames in succession.
 When a picture is protected, ☑m will be displayed on the monitor.





Pictures taken with the camera held vertically are displayed horizontally. This function lets you turn such pictures so that they are displayed vertically. New picture orientations are saved even when the power is turned off.



Select a picture with  $\triangleleft \triangleright$ , and select [ $(-1 + 90^\circ)/(-1 - 90^\circ)$ ] with  $\triangle \nabla$  to rotate pictures. You can rotate several frames in succession

YES /NO

Sound is recorded for about 4 seconds.

- Use the arrow pad <|> to select a picture, select [YES] with ∆∇ to begin recording, then press || (NES) ||
  - The [BUSY] bar will be temporarily displayed.



### **6** ERASE

### Erasing selected pictures/Erasing all pictures

Protected pictures cannot be erased. Cancel protection before erasing protected pictures. Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

- When erasing pictures in the internal memory, do not insert the card into the camera.
- When erasing pictures from the card, insert the card into the camera in advance.
- You can confirm on the monitor whether the internal memory or card is being used.

  ""Using the internal memory or card" (P, 47)

bes obling the internal memory of card (1.41)

### SEL. IMAGE ...... Erasing by selecting the single-frame




- Use the arrow pad to select the picture, and press (MR) to mark
   ✓ on your selection.
- To cancel the selection, press OK again.
- When the selection is completed, press IOI//
- Select [YES], and press [FUNC].

ALL ERASE.....Erasing all the pictures in the internal memory or on the card

• Select [YES], and press FUNC.

### **SETUP** menus

### Shooting mode

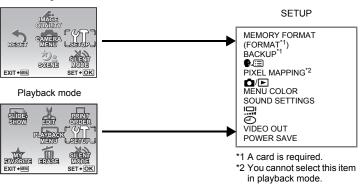

• The factory default settings are displayed in gray ( ).

### MEMORY FORMAT (FORMAT) ......Formatting the internal memory or card

All existing data, including protected pictures, are erased when the internal memory or card is formatted (images registered to "My Favorite" are not erased). Make sure that you save or transfer important data to a computer before formatting.

- Make sure there is no card inserted in the camera when formatting the internal memory.
- Be sure that the card is inserted in the camera when formatting the card.
- Before using non-Olympus cards or cards which have been formatted on a computer, you
  must format them with this camera.

# BACKUP.....Copying pictures in the internal memory to the card

Insert the optional card into the camera. Copying data does not erase the picture in the internal memory.

 It takes some time to back up data. Check that the battery is not empty before starting the copy.

P.	Ѿ	Selecting a display language
----	---	------------------------------

You can select a language for on-screen display. Available languages vary depending on the area where you purchased this camera.

### PIXEL MAPPING ...... Adjusting the image processing function The pixel mapping feature allows the camera to check and adjust the CCD and image processing functions. It is not necessary to operate this function frequently. Approximately once a year is recommended. Wait at least one minute after taking or viewing pictures to allow the pixel mapping function to perform properly. If you turn the camera off during pixel mapping, start again. Select [PIXEL MAPPING]. When [START] is displayed, press [OK]. Turning on the camera with the n or button YES Pressing turns on the camera and starts the camera in the shooting mode. Pressing F turns on the camera and starts the camera in the playback mode. NO The power is not turned on. To turn on the camera, press POWER. MENU COLOR ...... Setting the menu screen color and background NORMAL /COLOR1 /COLOR2 /COLOR3 /MY FAVORITE Select [MY FAVORITE] and press to set a still picture registered in "My Favorite" as the background. "SET Registering favorite pictures" (P. 24) SOUND SETTINGS ...... Setting the sound output from the camera You can set the following with [SOUND SETTINGS]. Setting the volume of the button operation sound. (BEEP) Selecting the volume of the shutter button. (SHUTTER SOUND) Adjusting the volume of the camera warning sound. (=)))) Adjusting the volume during playback. ( VOLUME) **RFFP** OFF (No sound) / LOW / HIGH SHUTTER SOUND OFF (No sound) / LOW / HIGH LOW / HIGH **■**))) OFF (No sound) / **I** VOLUME OFF (No sound) / 1 / 2 / 3 / 4 / 5

 
		- (		- /		-	
• You	u can set all the sound	s mute	d at onc	e by	setting	[SILE	ENT MODE].
REF.	"SILENT MODE Mutin	ig oper	ational	sound	s" (P.	22)	

BRIGHT/ NORMAL Adjusting the monitor brightness



) ....... Setting the date and time

The date and time is saved with each image and is used in the file name. If the date and time are not set, the [4] screen is displayed each time the camera is turned on.



- The first two digits of [Y] are fixed.
- · The time is displayed in the 24hour format.
- · To set the time precisely, with the cursor on either "Minute" or "Y/M/ D", press ok as the time signal strikes 00 seconds.

# VIDEO OUT ......Playing back pictures on a TV

The factory default settings differ according to the region where /PAL NTSC the camera is sold.

To play back camera images on a TV, set the video output according to your TV's video signal type.


• TV video signal types differ by country/region. Check the video signal type before connecting the camera to the TV.

NTSC: North America, Taiwan, Korea, Japan

PAL: European countries, China

### Playing back pictures on a TV

Turn off the camera and the TV before connecting.

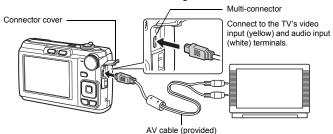

### Settings on the camera

Turn the camera on and press ► to select the playback mode.

 The last picture taken is displayed on the TV. Use the arrow pad to select the picture you want to display.

### Settings on the TV

- Turn the TV on and set it to video input mode.
- · For details of switching to video input, refer to your TV's instruction manual.
- · Images and the information displayed on the screen may be cropped depending on the TV's settings.

POWER SAVE......Setting the camera to the power save mode

OFF /ON When no operation has been performed for approximately 10 seconds while in shooting mode, the monitor automatically shuts off. Pressing the zoom lever or other buttons restores the camera from power save mode.

# **Printing pictures**

# **Direct printing (PictBridge)**

By connecting the camera to a PictBridge-compatible printer, you can print out pictures directly.


EASY PRINT......Prints the picture displayed in the monitor by using the standard settings of your printer.

CUSTOM PRINT......Prints with the various print settings available on your printer.

- PictBridge is a standard for connecting digital cameras and printers of different makers and printing out pictures directly. To find out if your printer is compatible with PictBridge, refer to the printer's instruction manual.
- For printer's standard settings, available printing modes, the setting items such as paper sizes, and printer's specifications such as available types of paper, how to install the papers and ink cassettes, etc., refer to the printer's instruction manual.

### **EASY PRINT**

- 1 In playback mode, display the picture you want to print out on the monitor
- 2 Turn the printer on and plug the USB cable provided with the camera into the multi-connector of the camera and the printer's USB port.

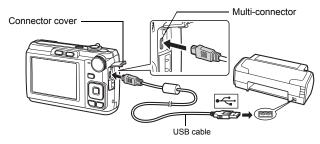

- · The [EASY PRINT START] screen is displayed.
- **3** Press △**½**/□.
  - · Printing starts.
  - When printing is finished, the picture selection screen is displayed.
     To print another picture, press <▷ to select a picture, and press <▷ ☑/□.</li>
- 4 Disconnect the USB cable.



### Other print modes and print settings (CUSTOM PRINT)

- Follow Steps 1 and 2 on P. 29 to display the screen for Step 3 above, and then press [OK PUNC].
- 2 Select [CUSTOM PRINT], and press [OK].



Follow the operation guide to adjust print settings. Selecting a print mode



PRINT	Prints the selected picture.	
ALL PRINT	Prints all the pictures stored in the internal memory or the card.	
MULTI PRINT	Prints one picture in multiple layout format.	
ALL INDEX	Prints an index of all the pictures stored in the internal memory or the card.	
PRINT ORDER	Prints the pictures according to the print reservation data on the card.  Print settings (DPOF)" (P. 31)	

### Setting the print paper



SIZE	Choose from the available paper sizes on your printer.
BORDERLESS	Select with or without borders. In [MULTI PRINT] mode, you cannot print with a border.
PICS/SHEET	Select the number of pictures to be laid out on a sheet of paper. Available in [MULTI PRINT] mode only.

• If the [PRINTPAPER] screen is not displayed, [SIZE], [BORDERLESS] and [PICS/SHEET] are set to the default.

# Selecting the picture to print

Press  $\triangleleft \triangleright$  to select the picture you want to print. You can also use the zoom button and select a picture from the index display.



PRINT	Prints one copy of the selected picture. When [SINGLE PRINT] or [MORE] has been selected, a single copy or more copies are printed.
SINGLE PRINT	Makes a print reservation for the displayed picture.
MORE	Sets the number of prints and data to be printed for the displayed picture.

### Setting the number of prints and data to be printed



 
Д×	Sets the number of prints. You can select up to 10 prints.
DATE (①)	If you select [WITH], pictures are printed with the date.
FILE NAME ( )	If you select [WITH], pictures are printed with the file name.
<b></b>	Use the arrow pad and zoom lever, adjust the location and size of the trimming frame, then press ker to print the cropped picture.

# 4 Select [PRINT], and press [OK FUNC].

- · Printing starts.
- When [OPTION SET] is selected in [ALL PRINT] mode, [PRINT INFO] screen is displayed.
- When printing is finished, the [PRINT MODE SELECT] screen is displayed.



### To cancel printing



Screen during data transfer

# 5 In the [PRINT MODE SELECT] screen, press MENU.

· A message is displayed.



# 6 Disconnect the USB cable.

### **Print settings (DPOF)**

Print reservation allows you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

With print reservations, you can print out pictures easily either at home using a personal DPOF-compatible printer or at a photo store that supports DPOF. DPOF is a standard format used to record automatic print information from digital cameras.

- Only the images stored on the card can be reserved to print. Insert a card with recorded pictures into the camera before making print reservations.
- DPOF reservations set by another device cannot be changed by this camera. Make changes
  using the original device. If a card contains DPOF reservations set by another device,
  entering reservations using this camera may overwrite the previous reservations.
- You can make DPOF print reservations for up to 999 images per card.
- Not all functions may be available on all printers, or at all photo stores.

### Making a print reservation

- Press MENU in the playback mode and select [PRINT ORDER].
- Select [4] or [4], and press [6].
  - Makes a print reservation for the selected picture. Makes print reservations for all the pictures stored on the card.
  - When [44] is selected, go to step 5.



Operation guide

### When [D] is selected

- Press < ▷ to select the frames for print reservations, and then press  $\Delta \nabla$  to set the number of prints.
  - You cannot make print reservations for pictures with \( \text{\text{\text{\text{\text{\text{\text{\text{\text{\text{pictures}}}}}} \).
  - Repeat Step 3 to make print reservations for other pictures.

### Cropping a picture

- · Use zoom lever to display the trimming frame.
- · Use the arrow pad and zoom lever to adjust the position and the size of area-selection box then press KRUNC.
- 4 When you finish making print reservations, press [OK]
- Select the date and time setting, and press [OK] The pictures are printed without the date and time. **DATE** The selected pictures are printed with the shooting date. **TIME** The selected pictures are printed with the shooting time.
- Select [SET], and press [FUNC].





### Resetting print reservation data

You can reset all the print reservation data or just for selected pictures.

Select top menu ► [PRINT ORDER], and press [OK]

### To reset the print reservation data for all the pictures

- Select [4] or [4], and press [N).
- Select [RESET], and press FUNC.



### To reset the print reservation data for a selected picture

- 2 Select [4], and press ok Func.
- 3 Select [KEEP], and press [OK FINE).
- **4** Press  $\triangleleft \triangleright$  to select the picture with the print reservations you want to cancel, and press  $\nabla$  to decrease the number of prints to 0.
  - Repeat Step 4 to cancel print reservations for other pictures.
- ${\bf 5}$  When you are finished canceling print reservations, press  $\frac{\text{OK}}{\text{RMC}}$  .
- 6 Select the date and time setting, and press [OK]
  - The setting is applied to the remaining pictures with print reservations.
- 7 Select [SET], and press [OK].

# **Using OLYMPUS Master**

Using the USB cable provided with your camera, you can connect the camera and computer and download (transfer) the images to your computer using the OLYMPUS Master software, also provided with the camera.

Prepare the following items before starting.







USB cable



A computer that satisfies the operating environment (P. 34) requirements

### What is OLYMPUS Master?

OLYMPUS Master is a software application for managing your digital images on your computer.

### Install the OLYMPUS Master software

Before installing the OLYMPUS Master software, please confirm that your computer is compatible with the following system requirements.

For newer operating systems, please refer to the Olympus web site as shown on the back cover of this manual.

### Operating environment

	- per aming entre and a				
	Windows	Macintosh			
os	Windows 2000 Professional/XP Home Edition/XP Professional/Vista	Mac OS X v10.3 or later			
CPU	Pentium III 500 MHz or later	Power PC G3 500 MHz or later Intel Core Solo/Duo 1.5 GHz or later			
RAM	256 MB or more	256 MB or more			
Hard disk capacity	500 MB or more	500 MB or more			
Monitor	1,024 × 768 pixels or more 65,536 colors or more (16.77 million colors or more recommended)	1,024 × 768 pixels or more 32,000 colors or more (16.77 million colors or more recommended)			
Other	USB port or IEEE 1394 port Internet Explorer 6 or later QuickTime 7 or later recommended DirectX 9 or later recommended	USB port or IEEE 1394 port (FireWire) Safari 1.0 or later (1.3 or later recommended) QuickTime 6 or later			

# Note

- · Use a computer with a pre-installed operating system. Operations are not guaranteed on home-built computers or computers with an updated operating system.
- · Operations are not guaranteed when using an added USB or IEEE 1394 (FireWire) port.
- · To install the software, you must log on as a user with administrators' privileges.
- If you are using Macintosh, be sure to remove the media (drag & drop onto the trash icon) before performing the following operations. Failure to do so could result in unstable computer operation and the need to reboot.
  - Disconnect the cable connecting the camera to the computer
  - · Turn off the camera
  - · Open the camera's battery/card compartment cover

For how to install the OLYMPUS Master software, refer to the installation guide included in the CD-ROM.

# Connecting the camera to a computer

- Make sure the camera is turned off.
  - The monitor is off
  - The lens is retracted.

 


- 2 Connect the multi-connector on the camera to the USB port on the computer using the provided USB cable.
  - · Refer to your computer's instruction manual to locate the position of the USB port.
  - · The camera turns on automatically.
  - · The monitor turns on and the selection screen for the USB connection is displayed.



Multi-connector

3 Select [PC], and press [OK FUNC].



# 4 The camera is recognized by the computer.

Windows

When you connect the camera to your computer for the first time, the computer attempts to recognize the camera. Click "OK" to exit the message that is displayed. The camera is recognized as a "Removable Disk".

Macintosh

The iPhoto program is the default application for managing digital images. When you connect your digital camera for the first time, the iPhoto application starts automatically, so close this application and start OLYMPUS Master.

### Note

- The camera functions are disabled while the camera is connected to a computer.
- Connecting the camera to a computer via a USB hub may cause unstable operation. In this
  case, do not use a hub, but connect the camera directly to the computer.
- Images cannot be transferred to your computer with OLYMPUS Master if [PC] is selected in Step 3, 

   is pressed and [MTP] is selected.

### Start up the OLYMPUS Master software

### Windows

1 Double-click the "OLYMPUS Master 2" icon 👔 on the desktop.

### Macintosh

- 1 Double-click the "OLYMPUS Master 2" icon in the "OLYMPUS Master 2" folder.
  - · The browse window is displayed.
  - When OLYMPUS Master is started up for the first time after installation, the OLYMPUS Master initial setting screen and user registration screen are displayed before the browse window.

Follow the on-screen instructions.

## Displaying camera images on a computer

### Downloading and saving images

- 1 Click "Transfer Images" on the browse window, and then click "From Camera" ...
  - The window for selecting the pictures you want to transfer from the camera is displayed. All the images in the camera are displayed.
- 2 Select "New Album" and enter an album name.
- 3 Select the image files and click "Transfer Images".
  - A window indicating that the download is complete is displayed.
- 4 Click "Browse images now".
  - The downloaded images are displayed in the browse window.



# Make sure that the card access lamp has stopped blinking.

2 Make the following preparations for disconnecting the USB cable.

#### Windows

- Click the "Unplug or Eject Hardware" icon in the system tray.
- Click the message that is displayed.
- When a message is displayed saying that the hardware can be ejected safely, click "OK".

#### Macintosh

- The trash icon changes to the eject icon when the "Untitled" or "NO\_NAME" icon on the desktop is dragged.
  Drag and drop it on the eject icon.
- 3 Disconnect the USB cable from the camera.





### Note

 Windows: When you click "Unplug or Eject Hardware", a warning message may be displayed. Make sure that image data is not being downloaded from the camera and that all applications are closed. Click the "Unplug or Eject Hardware" icon again and disconnect the cable

For detailed operations of OLYMPUS Master, refer to the quick start guide displayed upon startup or the help of the OLYMPUS Master.

# To download and save images to a computer without using OLYMPUS Master

This camera is compatible with USB mass storage. You can connect the camera to your computer using the USB cable provided with the camera to download and save images without using OLYMPUS Master. The following environment is required to use the USB cable to connect the camera to your computer.

Windows: Windows 2000 Professional/XP Home Edition/XP Professional/Vista Macintosh: Mac OS X v10.3 or later

### Note

- If your computer is running Windows Vista, you can select [PC] in Step 3 on P. 35, press D, and select [MTP] to use Windows Photo Gallery.
- Data transfer is not guaranteed in the following environments, even if your computer is equipped with a USB port.
  - Computers with a USB port added by means of an extension card, etc.
  - · Computers without a factory-installed OS and home-built computers

### Getting to know your camera better

### Shooting tips and information

#### Tips before you start taking pictures

#### The camera does not turn on even when a battery is loaded

#### The battery is inserted incorrectly

· Remove the batteries and insert them correctly.

#### There is not enough power left in the battery

· Insert new batteries. Or, charge it when using the rechargeable battery.

#### The battery is temporarily unable to function because of the cold

 Battery performance declines in low temperatures, and the charge may not be sufficient to turn on the camera. Remove the battery and warm it by putting it in your pocket for a while.

#### The card cannot be used

Sometimes when the contact area of the card is dirty, the camera cannot recognize the card, and the [CARD SETUP] screen will be displayed. In this case, select [CLEAN CARD] and after pressing [85], take out the card, and wipe the contact area with a soft, dry cloth.

#### No picture is taken when the shutter button is pressed

#### The camera is in sleep mode

• To save battery power, the camera automatically goes into sleep mode and the monitor turns off if there is no operation for 3 minutes when the camera is turned on. No picture is taken even if the shutter button is fully pressed in this mode. Operate the zoom lever or other buttons to restore the camera from sleep mode before taking a picture. If the camera is left for another 12 minutes, it automatically turns off. Press POWER to turn the camera on.

#### The mode dial is in the position of GUIDE

 No pictures can be taken when the shooting guide is being displayed. Take pictures after selecting the settings by following the shooting guide, or turn the mode dial and set it to a shooting mode other than GUIDE.

#### The flash is charging

• Wait until the **£** (flash charge) mark stops blinking before taking the picture.

#### The date and time have not been set

#### The camera has been used in the same condition from the time of purchase

- No date and time have been set in the camera at the time of purchase. Set the date and time before using the camera.
- "Set the date and time" (P. 6), " Setting the date and time" (P. 28)

#### The battery has been removed from the camera

 The date and time settings will be returned to the factory default settings if the camera is left without the battery for approximately 1 day. If the battery is in the camera for a short period of time, the date and time setting will be reset earlier than this. Before taking important pictures, check that the date and time settings are correct.

#### Shooting tips

#### Focusing on the subject

There are several ways to focus, depending on the subject.

#### When the subject is not in the center of the frame

- Place the subject in the center of the frame, lock the focus on the subject, and then recompose your picture.
- "Shutter button Shooting pictures/Recording movies" (P. 10)

#### The subject is moving quickly

 Focus the camera on a point roughly the same distance away as the subject you want to shoot (by pressing the shutter button halfway); and then recompose your picture and wait for the subject to enter the frame.

### Subjects that are difficult to focus on

· Under certain types of conditions, it is difficult to focus using auto focus.



Subject with low contrast



Subject with an extremely bright area in the center of the frame



Subject without vertical lines



Subjects at different distances



Fast-moving subject



The subject is not in the center of the frame

In these cases, focus (focus lock) on an object with high contrast at the same distance as the intended subject, recompose your shot and then take the picture. If the subject has no vertical lines, hold the camera vertically and focus the camera using the focus lock function by pressing the shutter button halfway, and then return the camera to the horizontal position while keeping the button pressed halfway and take the picture.

### Taking pictures without blurring

Hold the camera correctly and press the shutter button gently to shoot the picture. In addition, blurring is reduced when taking pictures in the ( ) mode.

"((P. 12)) Shooting pictures using digital image stabilization" (P. 12)

The factors that can cause the picture to blur are as follows:

- · When you zoom at a high magnification to shoot the picture
- · When the shutter speed is set low to shoot a dark subject
- When the flash cannot be used or a low shutter speed set SCENE mode is selected.

#### Taking blur-free pictures without the flash

The flash fires automatically when insufficient light is available and may cause your image to be blurry.

When taking pictures in low lights without the flash, set the flash mode to [3] (flash off), then increase the ISO sensitivity.

" button Flash shooting" (P. 15)

#### Increase the [ISO] setting

"ISO Changing the ISO sensitivity" (P. 21)

#### The picture is too grainy

There are several factors that can cause the picture to appear grainy.

#### Using the digital zoom to take close-up pictures

· With the digital zoom, part of the image is cropped and enlarged. The greater the magnification, the grainier the picture appears.

"Zoom lever Zooming while shooting/Close-up playback" (P. 16)

#### Increasing the ISO sensitivity

- · When you increase the [ISO] setting, "noise", which appears as spots of unwanted color or unevenness in the color, can be introduced and give the picture a grainy appearance. This camera is equipped with a function to allow shooting at high sensitivity while suppressing noise; however, increasing the ISO sensitivity can result in some noise, depending on the shooting conditions.
- "ISO Changing the ISO sensitivity" (P. 21)

#### Taking pictures with the SCENE mode set to 🔩 👪 놀 or 翻

- · When taking pictures of dark subjects using the above scene modes, the picture may appear grainy.
- "SCENE Shooting pictures by selecting a scene mode according to the situation" (P. 12)

#### Taking pictures of a white beach or snow scene

- · Often, bright subjects (such as snow) turn out darker than their natural colors. Adjusting △☑ toward [+] makes the subject closer to their real shades. Conversely, when you are shooting dark subjects, it can be effective to adjust toward [-]. Sometimes, using the flash may not produce the brightness (exposure) that was intended.
- 『△☑/凸 button Changing picture brightness (Exposure compensation)/ Printing pictures" (P. 14)

### Taking pictures of a subject against backlight

- Set the flash to [4] (fill-in) to activate fill-in-flash. You can shoot a subject against backlight without the face of the subject appearing dark. [ \$\frac{1}{2}\$] is effective not only for shooting against backlight, but also for shooting under fluorescent and other artificial lighting.
- □ "D button Flash shooting" (P. 15)
- 『△屋/山 button Changing picture brightness (Exposure compensation)/ Printing pictures" (P. 14)
  - When [FACE DETECT] is set to [ON], faces in pictures appears bright, since adequate exposure for the detected face can be obtained even under backlight conditions.
- "FACE DETECT Focusing on a face" (P. 22)

#### Additional shooting tips and information

#### Increasing the number of pictures that can be taken

There are two ways to record the pictures you take with this camera.

#### Recording pictures to the internal memory

Pictures are recorded to the internal memory, and when the number of storable still
pictures reaches 0, you connect the camera to a computer to download the pictures; and
then erase the pictures from the internal memory.

#### Using a card (xD-Picture Card) (optional)

- Pictures are recorded to the card when inserted in the camera. When the card is full, you
  download the pictures to a computer and then either erase the pictures from the card or
  use a new card.
- Pictures are not recorded to the internal memory when a card is inserted in the camera.
   Pictures in the internal memory can be copied to the card using the BACKUP] function.
- "BACKUP Copying pictures in the internal memory to the card" (P. 26) "The card" (P. 47)

#### Number of storable still pictures and recording length of movies Still pictures

IMAGE SIZE			Number of storable still pictures						
		COMPRES-	Internal	memory	Using a 1GB card				
		SION	With sound	Without sound	With sound	Without sound			
	3264 × 2448	FiNE	4	4	221	223			
8м	3204 × 2448	Norm	7	8	429	438			
[E-3	2560 × 1920	Fine	6	6	353	359			
5м	2560 × 1920	Norm	12	12	673	695			
	2048 × 1536	Fine	10	10	566	576			
3м		2046 * 1556	Norm	20	21	1,102	1,142		
	1000 1000	4000 4000	FINE	16	17	913	940		
2м	1600 × 1200	Norm	32	34	1,728	1,881			
[A.3	1200 × 060	Fine	25	26	1,390	1,453			
1m	1280 × 960	Norm	47	53	2,558	2,907			
IVO A	640 × 480	Fine	84	107	4,568	5,814			
VGA		Norm	148	197	7,995	10,660			
40.0	1000 1000	FiNE	15	16	841	876			
16:9	1920 × 1080	Norm	30	32	1,640	1,728			

#### Movies

IMAGE SIZE		Continuous recording length					
		Internal	memory	Using a 1 GB card			
IIVIAGE GIZE		With sound	Without sound	With sound	Without sound		
VGA	640 × 480	21 sec.	22 sec.	17 min. 48 sec.	18 min. 11 sec.		
QvgA	320 × 240	58 sec.	1 min. 1 sec.	29 min.	29 min.		

#### Using a new card

 If you use a non-Olympus card or a card used for another application, such as a computer, use the [FORMAT] function to format the card.

"MEMORY FORMAT (FORMAT) Formatting the internal memory or card" (P. 26)

#### The card access lamp is blinking

- An image or movie is being recorded or downloaded (when connected to a computer).
- Do not do any of the following while the card access lamp is blinking. Doing so may
  prevent the image data from being saved and render the internal memory or card
  unusable.
  - · Open the battery/card compartment cover
  - · Remove the battery and card

#### Extending the useful life of the battery

- Performing any of the following operations when not actually taking pictures can deplete the battery power.
  - · Repeatedly pressing the shutter button halfway
  - · Repeatedly using the zoom
- To save battery power, set [POWER SAVE] to [ON], or turn off the camera whenever it is not in use.

"POWER SAVE Setting the camera to the power save mode" (P. 28)

## Functions that cannot be selected from menus/Functions that cannot be selected even by pressing the function buttons

- Some items may not be selectable from the menus when using the arrow pad.
   (The menu items displayed in gray cannot be selected.)
  - Items that cannot be set with the current shooting mode
    - Items that cannot be set because of an item that has already been set: [5] and [4],
- Some functions cannot be used when there is no card in the camera.
   [PANORAMA]. [PRINT ORDER]. [FORMAT]. [BACKUP]
- When the mode dial is set to **GUIDE**, functions cannot be changed.

### To return the settings of functions to default settings

- To return the changed shooting settings to default settings while shooting, set [RESET] to [YES].
- "RESET Changing the shooting functions back to default settings" (P. 21)
  - All shooting settings except for P mode, [IMAGE QUALITY] and the selected scene mode return to default settings when the camera is turned off.

### Playback help and troubleshooting tips

### Bright specks appear in the picture

 Light reflecting from dust and other particles in the air at night may appear as bright specks in pictures taken using the flash.

#### Playback tips

#### Playing back pictures in the internal memory

 When a card has been inserted in the camera, the pictures in the internal memory cannot be played back. Pull out the card before operating the camera.

#### Viewing picture information

- Play back a picture, and press DISP./
   Press DISP./
   repeatedly to change the amount of information displayed.
- "DISP./ button Changing the information on display/Display the menu guide" (P. 13)

#### Quickly displaying a desired picture

Turn the zoom lever to the W-side to display the pictures as thumbnails (index display).
 "Zoom lever Zooming while shooting/Close-up playback" (P. 16)

#### Erasing sound recorded to still pictures

Once sound is added to a picture, it is not possible to erase the sound. In this case, make
a re-recording with silence.

"♣ Adding sound to still pictures" (P. 25)

#### Viewing pictures on a computer

#### Viewing the entire picture on a computer screen

The size of the picture displayed on a computer screen changes depending on the computer settings. When the monitor setting is 1,024 × 768 and you are using Internet Explorer to view a picture with an image size of 2,048 × 1,536 at 100%; the entire picture cannot be viewed without scrolling. There are several ways you can view the entire picture on the computer screen.

#### View the picture using image browsing software

Install the OLYMPUS Master 2 software from the provided CD-ROM.

#### Change the monitor setting

 The icons on the computer desktop may be rearranged. For details of changing the settings on your computer, refer to the computer's instruction manual.

### When you get an error message on the camera...

Monitor indication	Possible cause	Corrective action			
	There is a problem with the card.	This card cannot be used. Insert a new card.			
WRITE PROTECT	Writing to the card is prohibited.	The recorded image has been protected (read-only) on a computer. Download the image to a computer and cancel the read-only setting.			
MEMORY FULL	The internal memory has no available memory and cannot store any new data.	Insert a card or erase unwanted data. Before erasing, backup the data of important pictures using the card or download such pictures to a computer.			

Monitor indication	Possible cause	Corrective action
CARD FULL	The card has no available memory and cannot store any new data.	Replace the card or erase unwanted data. Before erasing, download important pictures to a computer.
NO PICTURE	There are no pictures in the internal memory or on the card.	The internal memory or the card contains no pictures. Record pictures.
PICTURE ERROR	There is a problem with the selected picture and it cannot be played back on this camera.	Use image processing software to view the picture on a computer. If that cannot be done, the image file is damaged.
THE IMAGE CANNOT BE EDITED	Pictures taken by other cameras, or previously edited or corrected pictures cannot be edited or fixed.	Use image processing software to edit the pictures.
CARD-COVER OPEN	The battery/card compartment cover is open.	Close the battery/card compartment cover.
BATTERY EMPTY	The battery is empty.	Insert a new battery. Or, charge it when using the rechargeable battery.
CLEAN CARD FORMAT SET+ORK	The card is not being recognized by the camera. Or, the card is not formatted.	Select [CLEAN CARD], and press Remove the card and wipe the contact area with a soft, dry cloth. Select [FORMAT] ► [YES] and press All data on the card is erased.
MEMORY SETUP  POWER OFF  MEMORY FORMAT  SET•OK	There is an error in the internal memory.	Select [MEMORY FORMAT] ► [YES] and press . All data in the internal memory is erased.
© <sub>%</sub>	The camera is not connected to the computer or the printer correctly.	Disconnect the camera and connect it again correctly.
NO PAPER	There is no paper in the printer.	Load some paper into the printer.
NO INK	The printer has run out of ink.	Replace the ink cartridge in the printer.
8 <b>√</b> JAMMED	The paper is jammed.	Remove the jammed paper.
SETTINGS CHANGED	The printer's paper tray has been removed or the printer has been operated while changing settings on the camera.	Do not operate the printer while changing settings on the camera.
PRINT ERROR	There is a problem with the printer and/or camera.	Turn off the camera and printer. Check the printer and remedy any problems before turning the power on again.
CANNOT PRINT	Pictures recorded on other cameras may not be printed on this camera.	Use a computer to print.

## Functions available in shooting modes and scenes

Some functions cannot be set in certain shooting modes. For more details, refer to the table below.

### Functions available in shooting modes

Shooting mode	mode SCENE												
Function	AUTO	P	<b>(</b> (***)))	•	<u></u>	ాకి	***************************************	中区	**	*	8,	<u>ኦ</u>	Ref. Page
<b>⊠</b>	<	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	P. 14
₩	<	✓	✓	_	✓	_	✓	✓	_	_	_	_*1	P. 15
s.D	✓	✓	✓	_	✓	_	✓	✓	_	_	_	-	P. 15
<b>৩</b>	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	P. 15
4	✓	✓	✓	✓	_*2	✓	✓	_*2	✓	_*2	_*2	_*2	P. 15
Zoom	<	✓	✓	✓	✓	✓	✓	✓	_	✓	✓	✓	P. 16
IMAGE QUALITY	<	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	_*3	P. 20
ISO	1	✓	_	_	_	_	_	_	_	_	_	_	P. 21
(still picture)	1	✓	✓	✓	_	✓	✓	✓	✓	✓	✓	_	P. 21
	_	_	_	_	✓	_	_	_	_	_	_	_	P. 22
PANORAMA	_	✓	✓	✓	-	✓	✓	✓	✓	✓	✓	-	P. 22
FACE DETECT	_	✓	✓	✓	-	✓	✓	✓	✓	✓	-	✓	P. 22

<sup>\*1</sup> Shooting mode is fixed at [\$\mathbb{E}].

<sup>\*2 [</sup> **\$**] is fixed at [**§**].

<sup>\*3 [</sup>IMAGE QUALITY] is fixed at [VGA].

### Camera care

#### Cleaning the camera

#### Exterior:

 Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

#### Monitor:

· Wipe gently with a soft cloth.

#### Lens:

Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

#### Battery/Charger:

· Wipe gently with a soft, dry cloth.

### A Note

- Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
- · Mold may form on the lens surface if the lens is left dirty.

#### Storage

- When storing the camera for extended periods, remove the battery and card, and keep in a cool, dry place that is well ventilated.
- · Periodically, insert the battery and test the camera functions.

### Note

 Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

### The batterv

In addition to the batteries provided with the camera, the following types of battery can be used.
 Choose the power source best suited to the situation.

#### AA alkaline batteries/Oxyride batteries

The number of pictures that you can take may vary considerably depending on the battery manufacturer and shooting conditions.

#### AA NiMH batteries (rechargeable batteries)

Olympus NiMH batteries are rechargeable and economical. For details, refer to the instruction manual for your charger.

- Lithium battery packs (CR-V3) and AA manganese (zinc-carbon) batteries cannot be used.
- Power consumption by the camera varies depending on which functions are used.
- Power is consumed continuously during the conditions described below causing batteries to become exhausted quickly.
  - The zoom is used repeatedly.
  - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
  - The monitor is left on for an extended period of time.
  - The camera is connected to a computer or printer.
- The battery life varies widely depending on the type of battery, manufacturer, shooting conditions, etc. Because of this, there may be cases where the camera turns itself off without displaying the battery level warning, or displays the battery level warning sooner than usual.

### Useful use of the accessories

#### The card

Pictures can be recorded on the optional card.

The internal memory and card are the camera's media for recording pictures, similar to film in a film camera. Pictures recorded to the internal memory or card can be easily erased on the camera or processed using a

 
Unlike portable storage media, the internal memory cannot be removed or exchanged.

The number of recordable pictures can be increased by using a card with a larger capacity.

Index area You can use this space to write the contents of the card.

Contact area

The part where the data transferred from the camera enters the card. Do not touch this area directly.



#### Compatible cards

xD-Picture Card (16MB - 2GB) (Type H/M, Standard)

#### Using the internal memory or card

You can confirm on the monitor whether the internal memory or card is being used during shooting and playback operations.

Shooting mode

Playback mode



When using the internal memory When using a card



### Note

 Do not open the battery/card compartment cover while the card access lamp is blinking, as the lamp is indicating that it is reading or writing data. Doing so may damage the data in the internal memory or the card and render the internal memory or card unusable.

### SAFETY PRECAUTIONS



# CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.



DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



WARNING

If the product is used without observing the information given under this symbol, injury or death may result.



CAUTION

If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result.

#### WARNING!

TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

#### **General Precautions**

**Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.

**Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — For precautions on products with weatherproof designs, read the weatherproofing sections.

**Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.

**Power Source** — Connect this product only to the power source described on the product label. **Foreign Objects** — To avoid personal injury, never insert a metal object into the product. **Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

#### Handling the Camera



- Do not use the camera near flammable or explosive gases.
- Do not use the flash and LED on people (infants, small children, etc.) at close range.
  - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- Keep young children and infants away from the camera.
  - · Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
    - · Becoming entangled in the camera strap, causing strangulation.
    - · Accidentally swallowing the battery, cards or other small parts.
    - · Accidentally firing the flash into their own eyes or those of another child.
    - · Accidentally being injured by the moving parts of the camera.
- Do not look at the sun or strong lights with the camera.
- Do not use or store the camera in dusty or humid places.
- Do not cover the flash with a hand while firing.



- Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.
  - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- Never hold or operate the camera with wet hands.
- Do not leave the camera in places where it may be subject to extremely high temperatures.
  - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- Handle the camera with care to avoid getting a low-temperature burn.
  - · When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
    - · When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
    - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- Be careful with the strap.
  - Be careful with the strap when you carry the camera. It could easily catch on stray objects and cause serious damage.

### **Battery Handling Precautions**

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.



### DANGER

- · Use only the Olympus brand NiMH batteries and fitting charger.
- · Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.

- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.




#### WARNING

- · Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Never mix batteries (old and new batteries, charged and uncharged batteries, batteries of different manufacture or capacity, etc.).
- Do not charge alkaline or lithium batteries if they are not rechargeable.
- Insert the battery carefully as described in the operating instructions.
- Do not use batteries if their body is not covered by the insulating sheet or if the sheet is torn, as
  this may cause fluid leaks, fire, or injury.



#### CAUTION

- Do not remove batteries immediately after using the camera. Batteries may become hot during prolonged use.
- Always unload the battery from the camera before storing the camera for a long period.

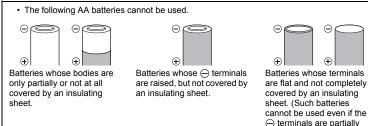

 If NiMH batteries are not charged within the specified time, stop charging them and do not use them.

covered.)

- · Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during
  operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- · Never subject batteries to strong shocks or continuous vibration.
- Olympus NiMH batteries (included in some areas) are intended for use only with Olympus digital cameras. Never use these batteries with any other device.
- Always charge NiMH batteries (included in some areas) before using them for the first time, or if
  they have not been used for a long period.
- Always charge sets of batteries (included in some areas) (2 or 4) together.
- Do not use alkaline batteries unless it is absolutely necessary. In some cases, alkaline batteries
  may have a shorter service life than NiMH battery packs. Alkaline battery performance is limited,
  especially at low temperatures. The use of NiMH batteries is recommended.
- CR-V3 lithium battery packs and AA manganese (Zinc-Carbon) batteries cannot be used with this camera.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare batteries as warm as possible. Batteries which run down at low temperatures may be restored after they are warmed at room temperature.

- · Recommended temperature ranges for NiMH batteries:
- Using, charging, or storing the batteries outside these ranges could shorten battery life or affect battery performance. Always unload the batteries from the camera before storing the camera for a long period.
- · Before using NiMH or NiCd batteries, always read the provided instructions.
- The number of pictures you can take may vary depending on the shooting conditions or batteries.
- Before going on a long trip, and especially before traveling abroad, purchase an ample supply of extra batteries. The recommended batteries may be difficult to obtain while traveling.

### **Caution for Usage Environment**

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
  - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
  - · In sandy or dusty environments.
  - · Near flammable items or explosives.
  - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
  - · In places prone to strong vibrations.
- · Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist
  the camera.
- · Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the CCD, or may possibly cause fires.
- · Do not push or pull severely on the lens.
- Before storing the camera for a long period, remove the battery. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter release button to make sure that it is operating normally.
- Always observe the operating environment restrictions described in the camera's manual.

#### **LCD Monitor**

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the LCD monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the LCD monitor may take a long time to turn on or its color
  may change temporarily. When using the camera in extremely cold places, it is a good idea to
  occasionally place it in a warm place. An LCD monitor exhibiting poor performance due to low
  temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots of light may appear constantly on the LCD monitor. Due to its characteristics or the angle at which you are viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction

#### **Legal and Other Notices**

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

#### **Disclaimer of Warranty**

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.
- · Olympus reserves all rights to this manual.

#### Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

#### **Copyright Notice**

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

#### **FCC Notice**

- · Radio and Television Interference
- Changes or modifications not expressly approved by the manufacturer may void the user's
  authority to operate this equipment. This equipment has been tested and found to comply with the
  limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed
  to provide reasonable protection against harmful interference in a residential installation.
- This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications
- However, there is no guarantee that interference will not occur in a particular installation. If this
  equipment does cause harmful interference to radio or television reception, which can be
  determined by turning the equipment off and on, the user is encouraged to try to correct the
  interference by one or more of the following measures:
  - Adjust or relocate the receiving antenna.
  - Increase the distance between the camera and receiver.
  - Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
  - Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUSsupplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate it.

#### For customers in North and South America

#### For customers in USA

Declaration of Conformity

Model Number : FE-310/X-840/C-530

Trade Name : OLYMPUS

Responsible Party : OLYMPUS IMAGING AMERICA INC.

Address : 3500 Corporate Parkway, P.O. Box 610, Center Valley,

PA 18034-0610, U.S.A.

Telephone Number : 484-896-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference.
- (2)This device must accept any interference received, including interference that may cause undesired operation.

#### For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

#### **OLYMPUS WORLDWIDE LIMITED WARRANTY - IMAGING PRODUCTS**

Olympus warrants that the enclosed Olympus® imaging product(s) and related Olympus® accessories (individually a "Product" and collectively the "Products") will be free from defects in materials and workmanship under normal use and service for a period of one (1) year from the date of purchase.

If any Product proves to be defective within the one-year warranty period, the customer must return the defective Product to any of Olympus Service Centers, following the procedure set forth below (See "WHAT TO DO WHEN SERVICE IS NEEDED").

Olympus, at its sole discretion, will repair, replace, or adjust the defective Product, provided that Olympus investigation and factory inspection disclose that (a) such defect developed under normal and proper use and (b) the Product is covered under this limited warranty.

Repair, replacement, or adjustment of defective Products shall be Olympus's sole obligation and the customer's sole remedy hereunder.

The customer is liable and shall pay for shipment of the Products to the Olympus Service Center. Olympus shall not be obligated to perform preventive maintenance, installation, deinstallation, or maintenance.

Olympus reserves the right to (i) use reconditioned, refurbished, and/or serviceable used parts (that meet Olympus's quality assurance standards) for warranty or any other repairs and (ii) make any internal or external design and/or feature changes on or to its products without any liability to incorporate such changes on or to the Products.

#### WHAT IS NOT COVERED BY THIS LIMITED WARRANTY

Excluded from this limited warranty and not warranted by Olympus in any fashion, either express, implied, or by statute, are:

- (a) products and accessories not manufactured by Olympus and/or not bearing the "OLYMPUS" brand label (the warranty coverage for products and accessories of other manufacturers, which may be distributed by Olympus, is the responsibility of the manufacturers of such products and accessories in accordance with the terms and duration of such manufacturers' warranties);
- (b) any Product which has been disassembled, repaired, tampered with, altered, changed, or modified by persons other than Olympus's own authorized service personnel unless repair by others is made with the written consent of Olympus;
- (c) defects or damage to the Products resulting from wear, tear, misuse, abuse, negligence, sand, liquids, impact, improper storage, nonperformance of scheduled operator and maintenance items, battery leakage, use of non-"OLYMPUS" brand accessories, consumables, or supplies, or use of the Products in combination with non-compatible devices;

- (d) software programs;
- (e) supplies and consumables (including but not limited to lamps, ink, paper, film, prints, negatives, cables and batteries); and/or
- (f) Products which do not contain a validly placed and recorded Olympus serial number, unless they are a model on which Olympus does not place and record serial numbers.

EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE, OLYMPUS MAKES NO AND DISCLAIMS ALL OTHER REPRESENTATIONS, GUARANTIES, CONDITIONS, AND WARRANTIES CONCERNING THE PRODUCTS, WHETHER DIRECT OR INDIRECT, EXPRESS OR IMPLIED, OR ARISING UNDER ANY STATUTE, ORDINANCE, COMMERCIAL USAGE OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OR REPRESENTATION AS TO THE SUITABILITY, DURABILITY, DESIGN, OPERATION, OR CONDITON OF THE PRODUCTS (OR ANY PART THEREOF) OR THE MERCHANTABILITY OF THE PRODUCTS OR THEIR FITNESS FOR A PARTICULAR PURPOSE, OR RELATING TO THE INFRINGEMENT OF ANY PATENT, COPYRIGHT, OR OTHER PROPRIETARY RIGHT USED OR INCLUDED THEREIN

IF ANY IMPLIED WARRANTIES APPLY AS A MATTER OF LAW, THEY ARE LIMITED IN DURATION TO THE LENGTH OF THIS LIMITED WARRANTY.

SOME STATES MAY NOT RECOGNIZE A DISCLAIMER OR LIMITATION OF WARRANTIES AND/OR LIMITATION OF LIABILITY SO THE ABOVE DISCLAIMERS AND EXCLUSIONS MAY NOT APPLY.

THE CUSTOMER MAY ALSO HAVE DIFFERENT AND/OR ADDITIONAL RIGHTS AND REMEDIES THAT VARY FROM STATE TO STATE.

THE CUSTOMER ACKNOWLEDGES AND AGREES THAT OLYMPUS SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES THAT THE CUSTOMER MAY INCUR FROM DELAYED SHIPMENT, PRODUCT FAILURE, PRODUCT DESIGN, SELECTION, OR PRODUCTION, IMAGE OR DATA LOSS OR IMPAIRMENT OR FROM ANY OTHER CAUSE, WHETHER LIABILITY IS ASSERTED IN CONTRACT, TORT (INCLUDING NEGLIGENCE AND STRICT PRODUCT LIABILITY) OR OTHERWISE. IN NO EVENT SHALL OLYMPUS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY KIND (INCLUDING WITHOUT LIMITATION LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR DAMAGE.

Representations and warranties made by any person, including but not limited to dealers, representatives, salespersons, or agents of Olympus, which are inconsistent or in conflict with or in addition to the terms of this limited warranty, shall not be binding upon Olympus unless reduced to writing and approved by an expressly authorized officer of Olympus.

This limited warranty is the complete and exclusive statement of warranty which Olympus agrees to provide with respect to the Products and it shall supersede all prior and contemporaneous oral or written agreements, understandings, proposals, and communications pertaining to the subject matter hereof.

This limited warranty is exclusively for the benefit of the original customer and cannot be transferred or assigned.

#### WHAT TO DO WHEN SERVICE IS NEEDED

The customer must transfer any image or other data saved on a Product to another image or data storage medium and/or remove any film from the Product prior to sending the Product to Olympus for service.

IN NO EVENT SHALL OLYMPUS BE RESPONSIBLE FOR SAVING, KEEPING OR MAINTAINING ANY IMAGE OR DATA SAVED ON A PRODUCT RECEIVED BY IT FOR SERVICE, OR ON ANY FILM CONTAINED WITHIN A PRODUCT RECEIVED BY IT FOR SERVICE, NOR SHALL OLYMPUS BE RESPONSIBLE FOR ANY DAMAGES IN THE EVENT ANY IMAGE OR DATA IS LOST OR IMPAIRED WHILE SERVICE IS BEING PERFORMED (INCLUDING, WITHOUT LIMITATION, DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES, LOSS OF PROFITS OR LOSS OF USE), WHETHER OR NOT OLYMPUS SHALL BE OR SHOULD BE AWARE OF THE POSSIBILITY OF SUCH POTENTIAL LOSS OR IMPAIRMENT.

Package the Product carefully using ample padding material to prevent damage in transit and either deliver it to the Authorized Olympus Dealer that sold you the Product or ship it postage prepaid and insured to any of our Olympus Service Centers.

When returning Products for service, your package should include the following:

- 1. Sales receipt showing date and place of purchase.
- Copy of this limited warranty bearing the Product serial number corresponding to the serial number on the Product (unless it is a model on which Olympus does not place and record serial numbers).
- 3. A detailed description of the problem.
- 4. Sample prints, negatives, digital prints (or files on disk) if available and related to the problem. When service is completed, the Product will be returned to you postage prepaid.

#### WHERE TO SEND PRODUCT FOR SERVICE

See "WORLDWIDE WARRANTY" for the nearest service center.

#### INTERNATIONAL WARRANTY SERVICE

International warranty service is available under this warranty.

#### **Trademarks**

- IBM is a registered trademark of International Business Machines Corporation.
- · Microsoft and Windows are registered trademarks of Microsoft Corporation.
- · Macintosh is a trademark of Apple Inc.
- xD-Picture Card<sup>™</sup> is a trademark.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

### **SPECIFICATIONS**

### Camera

Product type : Digital camera (for shooting and displaying)

Recording system

Still pictures : Digital recording, JPEG (in accordance with Design rule for

Camera File system (DCF))

Applicable standards : Exif 2.2. Digital Print Order Format (DPOF), PRINT Image

Matching III, PictBridge

Sound with still pictures : Wave format Movies AVI Motion JPEG

Memory : Internal memory

xD-Picture Card (16 MB - 2 GB) (Type H/M, Standard)

Number of effective pixels : 8,000,000 pixels

: 1/2.5" CCD (primary color filter), Image pickup device

8,400,000 pixels (gross)

: Olympus lens 6.2 to 31.0 mm, f3.2 to 4.8 Lens

(equivalent to 37 to 185 mm on a 35 mm camera)

Photometric system : Center-weighted metering

: 4 to 1/2000 sec. Shutter speed

: 0.4 m (1.3 ft.) to ∞ (W), 0.7 m (2.3 ft.) to ∞ (T) (normal) Shooting range

0.2 m (0.7 ft.) to ∞ (W), 0.5 m (1.6 ft.) to ∞ (T) (macro mode)

 $0.05 \text{ m} (0.2 \text{ ft.}) \text{ to } \infty \text{ (super macro mode)}$ : 2.5" TFT color LCD display, 154,000 dots

Outer connector : USB connector, A/V OUT jack (multi-connector)

Automatic calendar system 2000 up to 2099

Operating environment

Monitor

Weight

Temperature : 0°C to 40°C (32°F to 104°F) (operation)/

-20°C to 60°C (-4°F to 140°F) (storage)

30% to 90% (operation)/10% to 90% (storage) Humidity Power supply

: AA batteries 2 each (Oxyride batteries/Alkaline battery/NiMH

battery)


Dimensions : 93.0 mm (W) × 61.7 mm (H) × 30.5 mm (D)


> $(3.7 \times 2.4 \times 1.2 \text{ in.})$ (excluding protrusions)

: 140 g (4.9 oz) without battery and card


Design and specifications subject to change without notice.

#### Camera

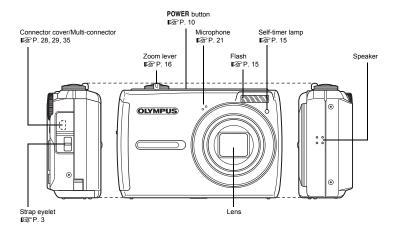

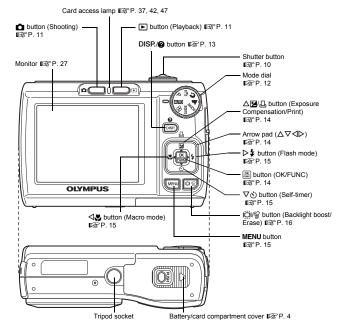


### Shooting Mode

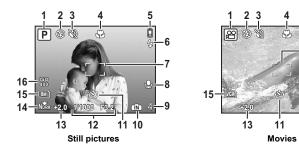

	14	La dia aliana	Def Desir
	Item	Indications	Ref. Page
1	Shooting mode	ֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈֈ	P. 12
2	Flash mode	<b>◎</b> , <b>‡</b> , <b>③</b>	P. 15
3	Silent mode	<b>3</b>	P. 22
4	Macro mode Super macro mode		P. 15
5	Battery check	🗓 = full power, 🗓 = charge the battery	P. 44
6	Flash standby Camera movement warning/flash charge	4 (Lit) 4 (Blinks)	P. 38
7	AF target mark		P. 8
8	Sound record	•	P. 21
9	Number of storable still pictures	4	P. 10
	Remaining recording time	00:34	P. 13
10	Current memory	(Recording pictures to the internal memory), No icon (Recording pictures to the card)	P. 47
11	Self-timer	<b>৩</b>	P. 15
12	Shutter speed/Aperture value	1/1000 F3.2, etc.	P. 8
13	Exposure compensation	-2.0 - +2.0	P. 14
14	Compression	NORM (NORMAL), FINE (FINE)	P. 20
15	Image size	8M), 5M), 16:9), VGA), etc.	P. 20
16	ISO	ISO100, ISO400, etc.	P. 21

10

### Playback Mode

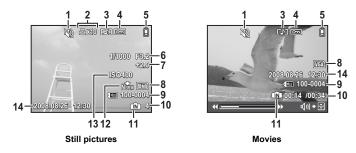

	Item	Indications	Ref. Page
1	Silent mode	89	P. 22
2	Print reservation/Number of prints	凸×10	P. 31
3	Sound record		P. 21, 22
4	Protect	O-F	P. 24
5	Battery check	📵 = full power, 🗓 = charge the battery	P. 44
6	Shutter speed/Aperture value	1/1000 F3.2, etc.	P. 8
7	Exposure compensation	-2.0 - +2.0	P. 14
8	Image size	8M, 5M, 16:9, VGA, etc.	P. 20
9	File number	<b>1</b> 00-0004	_
10	Number of frames Playing time/Total recording time	4 00:14/00:34	– P. 11
11	Current memory	(Playing back the picture in the internal memory), No icon (Playing back the picture in the card)	P. 47
12	Compression	Norm (NORMAL), Fine (FINE)	P. 20
13	ISO	ISO100, ISO400, etc.	P. 21
14	Date and time	2008.08.26 12:30	P. 28

## Index

Names of Parts	57	Function menu	14
A		G	
ALL ERASE	25	GUIDE (Shooting guide)	12
ALL INDEX			
ALL PRINT		I	
All-frame reservation 凸		IMAGE QUALITY	20
		IMAGE SIZE	
Aperture value		Index display	
AUCTION >		INDOOR 💥	
AUTO (AUTO)		Information displays	
AUTO (ISO)		Internal memory	
Auto flash AUTO	15		
Auto focus	39	ISO	21
AV cable 3,	28	M	
В		Macro mode 👺	
BACKUP	26	MEMORY FORMAT	26
Battery		Menu	18
Battery check		MENU COLOR	27
		Menu guide	
BEEP		Monitor	
BEHIND GLASS 🌠	12	Monitor brightness adjustment I□I	00
C			27
CAMERA MENU	21	MULTI PRINT	30
CANDLE 👪		MY FAVORITE	
Card		MIT 1744 OTATE	
Close-up playback Q		N	
COMPRESSION		NIGHT+PORTRAIT ₺a	12
		NiMH batteries	
Continuous recording length		NTSC	
Cropping pictures		Number of storable still pictures	
CUISINE ¶		Number of storable still pictures	71
CUSTOM PRINT	30	0	
D.		OLYMPUS Master	34
D		Operation guide	
Date and time		Optical zoom	
Digital zoom		Optical 20011 13,	10
Direct printing		P	
DOCUMENTS	12	PAL	28
DPOF	31	PANORAMA	
_		PC	
E			
EASY PRINT		PictBridge	
EDIT	24	Picture rotation 🗇	
ERASE 9,	25	PIXEL MAPPING	
Error messages	43	Playback mode  9, 11, 13, 17,	
Exposure compensation 🔀		Playback mode menu 🕒	
· · · · · · · · · · · · · · · · · · ·		Playback on a TV	28
F		Playing time/Total recording time	11
FACE DETECT	22	POWER SAVE	28
FILE NAME		Press completely 8,	
File name		Press halfway 8,	
Fill-in flash \$	15	PRINT ORDER ☐	
FIREWORKS	12	Print settings 🖟	
Flash		Printing pictures	
Flash charge		P (Program auto)	
Flash mode \$		Protect On	24
Flash off ③			
Focus			
Focus lock	10		

R Recording movies with or without sound ●
S SCENE (Scene)
<b>T</b> Top menu
<b>U</b> USB cable3, 29, 34, 35, 37
V           VIDEO OUT
<b>W</b> Warning sound <b>■</b> ))27
<b>X</b> xD-Picture Card
<b>Z</b> Zoom16



http://www.olvmpusamerica.com/

#### OLYMPUS IMAGING AMERICA INC. =

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

#### Technical Support (USA)

24/7 online automated help: http://www.olympusamerica.com/support Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET

http://olympusamerica.com/contactus

Olympus software updates can be obtained at: http://www.olympusamerica.com/digital To find the nearest Service Centers, please visit: http://www.olympusamerica.com/digital, and click on the Worldwide Warranty icon at the bottom of the page.

#### Service Centers

Chile:

Colombia:

Uruquay:

U.S.A.: Brazil: Olympus Optical do Brasil Ltda. Rua do Rócio 430 - 2 andar - Vila Olímpia

California Olympus Imaging America Inc. 10805 Holder Street Suite 170

Cypress, CA 90630-5145 Tel: (888) 553-4448

New York Olympus Imaging America Inc.

400 Rabro Drive

Hauppauge, NY 11788-4258

Tel: (888) 553-4448

Canada: Olympus Canada Inc.

Consumer Products Group

151 Telson Road

Markham, Ontario Canada L3R 1E7

Tel. (888)553-4448

Mexico: Olympus Imaging de Mexico S.A. de C.V.

WTC Mexico.

Montecito No 38 - Lobby - Office 3 Col. Napoles, Mexico D.F. 03810 Tel. (01800)800-2128

E-mail: oimx@olympus.com

Argentina: Jesus Labrador

Paraguay 755 PB, C1057AAI - Buenos Aires Panama: Tel: (011) 4313-3174 Fax: (011) 4312-5239

E-Mail: olympus@jesuslabrador.com.ar

Jesus Labrador

Bartolome Mitrte 860 C1036AAP - Buenos Aires

Tel: (011) 4331-1227 Fax: (011) 4331-1247

E-mail: service@basr.com.ar

Edif, El Paical, Oficina No3, P.A. Urb. Herbruger, Transistmica

CEP 04552-906 - São Paulo - Brasil

E-mail: obl-cameras@olympus.com

Camino El Conquistador del Monte 5024

Tel: 56-2-6781200 Fax: 56-2-6781202

E-mail: olympus@reifschneider.cl, serviciotecnico@reifschneider.cl

Tel: +55 11 3046-6427 Fax: +55 11 3046-6412

REIFSCHNEIDER S.A.

Huechuraba, Santiago

CV Tronica LTDA

CV Tronica LTDA

Tel: (0571)284-4365

Tel: (0571)637-3540

CV Tronica LTDA

FOTOSER

Calle 68 No 12-57, Bogota Tel: (0571)235-7260/348-1573

E-mail: servicio@cvtronica.com

Cra 9 No 23-49 Local 215 C.C Intercentro, Bogota

Av. Cra 15 No 105A-22 Piso 2 Local 5, Bogota

Eax: (0571) 348-1574

(Detras del S/M Riba Smith). Tel/Fax: (507) 261-0436 E-mail: rearanda@rocketmail.com

Fotocamara S.R.L.

Rondeau 1470 Montevideo Tel: (02) 900-2004 Fax: (02) 900-8430 E-mail: FOTOCAM@ADINET.COM.UY

Venezuela: Micron C.A.

4ta, transversal Urb, Horizonte,

Edificio América, Mezanine, Caracas 1070-A Tel: (0212) 238-3526 Fax: (0212) 239-8598 E-mail: serviciotecnico@micron.com.ve