 



TEFAL®

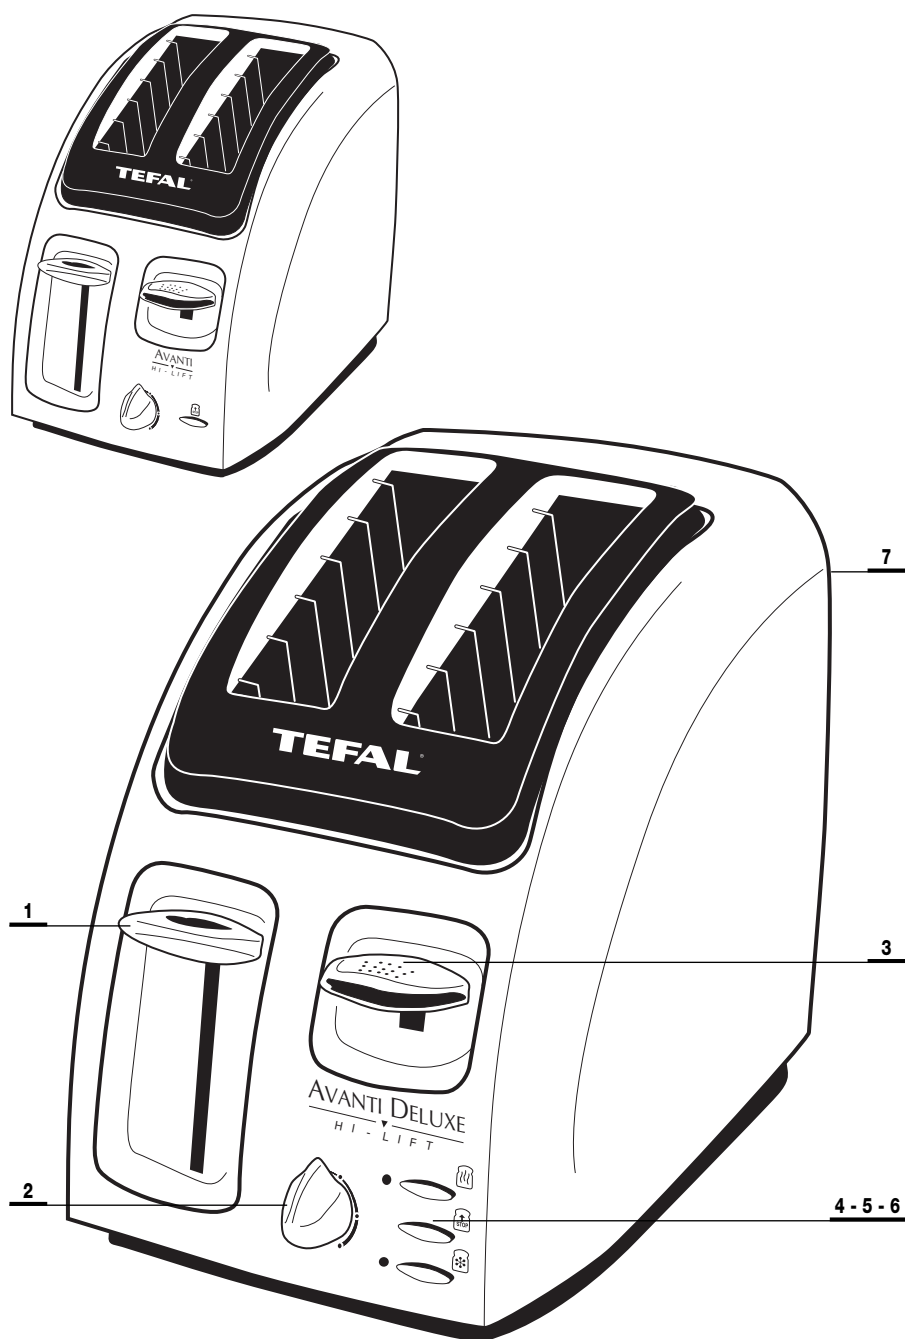

AVANTI



 ENGLISH

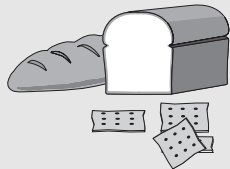

Features of the toaster

- | | |
|--|--|
| 1 Loading command | 5 Stop / Cancel button |
| 2 Browning control, 6 positions | 6 Frozen button (on selected model only) |
| 3 Hi-lift command | 7 Carrying handle (behind the appliance) |
| 4 Reheat button (on selected model only) | |

Before using for the first time

- Unpack the appliance and remove any labels.
- The packaging box may be recycled, but it may be useful for returning the appliance to an authorised Service Dealer if necessary.
- Read the manual and carefully follow the instructions.
- If the appliance is to be used in a country other than that of purchase, it should be checked by an approved Service Centre (See After Sales Service section). Standards may vary according to the country.
- Check that the crumb door, situated under the toaster, is correctly clipped onto the appliance. Connect to the mains.
- Unwind the supply cord completely. You can shorten the length of the cord by loosely wrapping it once around the pegs at the bottom of the toaster.
- **WARNING ! Never use the toaster with the cover on. Remove cover before use.**

First time use

- Before using for the first time, set the «browning control» button to minimum without inserting any bread.
- Load the toaster. Using it for the first time without bread will remove any unpleasant odours from the new appliance.

Instruction for use - Fig. 1 and 2

- Your toaster is ideal for standard sized and country sized sliced white or wheat, fresh or frozen bread. It is also suitable for bagels, English muffins, rolls and other pastries (without filling) up to a thickness of 1.4 inches (3.5 cm).
- The loading lever is situated on the left side of the toaster, at the top. - Fig. 1
- The «browning control» with 6 settings is situated on the front of the appliance.
- The toaster includes a HI-LIFT feature to facilitate the removal of the bread. Once toasting is completed (top right lever), press the Hi-Lift button to raise the toasts higher. Do not use the Hi-Lift button during toasting. - Fig. 2

Using the toaster

- Check that the crumb tray is locked underneath the toaster.
- Unwind the supply cord completely.

Setting the browning control

- Select the browning control to the appropriate setting depending on the type and thickness of the bread :
1-2 *very slightly toasted, 3 slightly toasted, 4-5 well toasted, 6 very toasted*
- For fresh bread, very fresh teacakes, English muffins and frozen bread, use a higher setting as they take slightly longer to toast. For some types of brown bread E.g. Wholemeal bread, use a slightly higher setting.
- When the toaster is hot, the bread toasts more quickly and may need adjusting to a lower setting.
- When toasting more than one slice of bread, they must be of the same size, type and thickness otherwise, they will brown unevenly.

Remember, this will need to be altered to suit your own taste and according to :

- The freshness and texture of the bread - For bread older than one or two days, use a lower number setting as it will toast more quickly.



1



2



Inserting the slices of bread - Fig. 3

- Place the slices of bread in the slots. Make sure the slices do not overlap each other. The loading command must be in the up position.

Making toast

- To load the toaster, press down the loading command until it locks in position, toasting begins. The metal grills will automatically adjust to the thickness of the slices.
- On electronic models, the loading lever can only be locked in the lower position when the appliance is plugged in.**
- After extended use, crumbs or dust may block the locking system. To correct this, simply press down the loading command several times successively to lock it and please refer to maintenance and cleaning tips.

Stopping the toasting process

- Once toasted, the operating control is automatically unlocked, the slices of bread come up and the toaster stops working.

Interrupting toasting process

- The toaster has a «STOP / CANCEL» ▲ button. So that you can interrupt the toasting process at any time by pressing the «STOP / CANCEL» button. The bread will automatically pop up. (For example, if you realise that the settings are not properly adjusted or if you think the bread is sufficiently toasted).
- If the bread jams in the slots and the elements do not switch off, remove the plug from the wall outlet and wait for the appliance to cool down. Then carefully remove the bread from the toaster slot, taking care not to touch the heating elements.
- When toasting currant buns or teacakes, remove any loose currants from the bread before placing them in the toaster. Loose currants may fall into the appliance and damage the toaster.**



«Deluxe» model • Specific function - Fig. 4

Reheat


- To reheat toast (fixed, short time) lower the bread into the toaster and press the «reheat» button.
- The toaster will heat up independently from the setting of the browning control (1 and 6).
- At the end of the cycle, the bread will pop up automatically and the toaster switches off.

Frozen

- To toast bread straight from the freezer, select the browning level desired on the dial from 1 to 6. Lower the bread into the toaster, and press the «frozen» button.
- The appropriate toasting time will be automatically selected.
- At the end of the cycle, the bread will pop up and the toaster switches off.

Stop / Cancel

- To stop the toaster at any time or cancel the other functions, press the «STOP / CANCEL» ▲ button.
- The bread pops up, the toaster switches off.

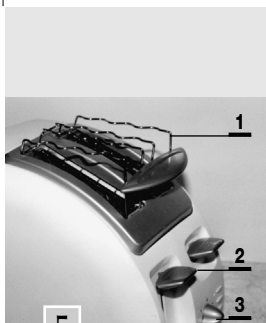

Bread roll toaster accessories (depending on the model) - Fig. 5

Description :

1 Bread roll holder (sold separately)

2 Loading command


3 Browning control 6 positions

Instructions for use :

- Unwind the power cord to its fullest extent and connect.
- Insert the bread roll holder (fore-back clips).
- Set toasting time (button 3) to desired position (1 to 3 max.).
- Lay the buns, bread rolls or croissants directly on the bread holder.
- Press down the loading command located to the left of the appliance.
- The bread rolls (croissants, etc.) will be ready when the lever has risen.
- After use, allow the toaster to cool and disconnect the appliance.


Warning :

- Never place bread rolls or croissants directly on the upper aperture of the appliance.
- Never use the appliance to warm up or defrost frozen food trays.
- Never warm up bread rolls, croissants, etc., and toast bread at the same time.

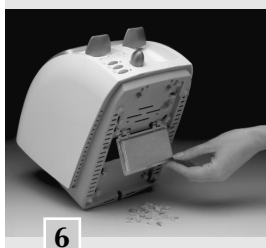

Maintenance and cleaning - Fig. 6, 7 and 8

- To clean the toaster, unclip, open the crumb door and wipe it clean. Also turn the appliance upside down and shake out any pieces of bread that may be stuck between the grills. (We recommend that you clean the crumb door regularly). - Fig. 6
- Never insert any hard object into the bread slot as this could damage the heating elements.
- To clean the exterior and the cord, wipe it down with a damp cloth. Let it dry before using it again.
- Do not use scouring powders, abrasive pads, wire or steel wool, oven cleaners or bleach.
- Never wrap the cord around the outside of the appliance during or after use. A cord storage is located under the appliance. - Fig. 7
- To move the toaster, a carrying handle is located behind the appliance. - Fig. 8

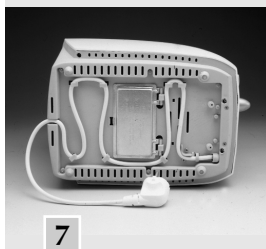

SAFETY INSTRUCTIONS

To prevent any accidents :

- This toaster complies with the safety rules and conditions in effect, and with the following directives
- Electromagnetic Compatibility Directive 89/336/CEE modified by Directives 92/31/CEE and 93/68/CEE.
- Low Voltage Directive 73/23/CEE modified by Directive 93/68CEE.
- Given the many standards in effect, if this toaster is used in a country other than the country where it was purchased, have it verified by an approved service centre*.
- Check that the electricity supply voltage corresponds to the voltage indicated on the device (ac current only).
- Check that the electricity installation is sufficient to supply the power required by this appliance.
- Always plug the toaster into an earthed socket
- Do not let the cord hang and keep out of reach of children. Do not leave the cord in contact with the warm parts of the appliance.
- Do not disconnect the appliance by pulling on the cord.
- Use extension cords which are in good condition, with an earthed connection, and with a minimum rating of 10A.
- In order to avoid electric shock, do not immerse the cord, the plug or the toaster in water or any other liquid.
- Do not use metal utensils in the toasting mechanism, which could cause short circuits or electric shock.

When using electrical appliances, basic safety precautions should always be followed including the following :

- Read all instructions and keep this «User's Guide».
- Do not let the toaster operate unattended, particularly when toasting for the first time or when changing settings.
- Keep out of reach of children.
- The toaster must always be upright when plugged in and unplugged.
- Do not move the toaster when it is in operation.
- Use a stable work top, away from any contact with water
- Keep this toaster away from sources of heat (gas, electric burner, heated oven).
- Always unplug the toaster and let it cool before any cleaning.
- After every cleaning, check that the crumb door is correctly clipped onto the appliance.
- Do not try and toast very thick slices of bread which could block the toasting mechanism.
- If the bread jams in the slots after toasting and the elements do not switch off, disconnect the plug quickly from the wall socket and wait for the appliance to cool down before attempting to remove the bread.
- Do not put paper, cardboard or plastic in, on or under the toaster.
- Do not place bread, buns, croissants or other pastries directly on top of the toaster because a bread-warmer accessory is available on some models only.
- Never use the toaster for toasting bread and re-heating pastries/croissants at the same time.
- Never place a plate, paper, aluminium foil on the roll warmer. Do not use it for cooking or de-frosting frozen food.
- Do not use this appliance if :
 - The toaster or cord is faulty
 - It has fallen or shows visible damage or operating problems
 In any of these cases, the appliance must be sent to the nearest approved aftersales service centre* in order to avoid any risks.
- Do not use outdoors. This appliance is for household use only
- Do not use this appliance as a source of heat.
- Bread can burn. Therefore, do not use this appliance near any flammable materials such as curtains, under shelving or wall cupboards, etc.
- Do not cover this appliance while in use.
- If flames were to arise from parts of the toaster, never attempt to extinguish them with water. Unplug the appliance and smother the flames with a damp cloth.
- Do not store inflammable products near or under the place where the toaster is stored.
- Do not use accessories which have not been recommended by the manufacturer or accessories from any other brand of toaster.
- This product has been designed for domestic use only. Any professional use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- For your personal safety, do not dismantle the toaster yourself. Use the services of an approved service centre*.

*(see enclosed list)

6 **Save these instructions**