

# TVP-224HR

VoIP Gateway Router  
4 Port (2FXS +2FXO)

## User's Guide



Copyright ©2005. All Rights Reserved. TRENDware International, Inc.

## **FCC Notice**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed in accordance with the instruction manual, may cause harmful interference to radio communication. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.



## **CE Declaration of conformity**

This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class A for ITE and EN 50082-1. This meets the essential protection requirements of the European Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.



## **Trademarks**

All brand, company and product names are trademarks or registered trademarks of their respective companies.

## **Copyright Statement**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photo copying, recording, or otherwise without the prior writing of the publisher.

May. 2005

## How to Use This Manual

This manual was designed for the non-technical users of the VoIP Gateway (TVP-224HR). It contains information about the functions of the TVP-224HR and instructions for its installation, basic configuration and operation. Read this section carefully for important information about the manual's organization.

## Important Safety Instructions

Before you plug the TVP-224HR into an electrical outlet, carefully read all the installation instructions in Chapter 2.

For your own safety and the safety of your equipment, always take the following precautions:

- Follow instructions and warnings in the documentation.
- Never push any object through the fan vent or other openings in the equipment. Such action may produce a short circuit, causing fire, electric shock, or equipment damage.
- Keep the TVP-224HR away from all chemicals and sources of liquids.

## **Warning**

- Connection of the RJ45 connector from a TVP-224HR to TNV circuits can cause permanent damage to the TVP-224HR.
- Incorrectly connecting telephony devices to the RJ11 port on the Telephony Interface Module can cause permanent damage to the module.

## Documentation Abbreviations

Throughout this guide, the user will come across a number of abbreviations that are common throughout the industry. The user should be familiar with the following abbreviations:

<b>ATPM</b>	Address Translation and Parsing Manager
<b>CLI</b>	Command Line Interface
<b>DSP</b>	Digital Signal Processor
<b>DTMF</b>	Dual Tone Multi-Frequency
<b>FXO</b>	Foreign Exchange Office
<b>FXS</b>	Foreign Exchange Station
<b>H.323</b>	ITU specification for multimedia transmission over IP networks
<b>ICMP</b>	Internet Control Message Protocol
<b>IMTC</b>	International Multimedia Telecommunications Consortium
<b>IP</b>	Internet Protocol
<b>TVP-221H</b>	4-port VoIP Gateway
<b>TVP-224HR</b>	4-port VoIP Gateway Router
<b>KTS</b>	Key Telephone System
<b>LAN</b>	Local Area Network
<b>NVS</b>	Non-Volatile Storage
<b>LED</b>	Light Emitting Diode
<b>PBX</b>	Private Branch Exchange
<b>PSTN</b>	Public Switched Telephone Network
<b>RTP</b>	Real-Time Transport
<b>TCID</b>	Telephony Channel Identifier
<b>TFTP</b>	Trivial File Transfer Protocol
<b>TIM</b>	Telephony Interface Modules
<b>TNV</b>	Telephone Network Voltage
<b>UDP</b>	User Datagram Protocol
<b>UTP</b>	Unshielded Twisted Pair
<b>VAD</b>	Voice Activity Detection
<b>WAN</b>	Wide Area Network

## Notation Conventions

Throughout this guide, different type styles and characters are used. These serve a variety of purposes as described below:

Convention	Description
<b>boldface</b>	Commands and keywords are in <b>boldface</b> .
<i>italic</i>	Arguments for which you supply values are in italics.
courier	Messages that the TVP-224HR CLI displays are in plain courier font.
[ ]	Elements in square brackets are optional.
{ x   y   z }	Alternative but required elements are grouped in braces ( { } ) and separated by vertical bars (   ).
[ x   y   z ]	Optional alternative keywords are grouped in brackets ( [ ] ) and separated by vertical bars (   ).
string	A non-quoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
key	A key on the VT-100 terminal of terminal emulator. For example <Enter> denotes the Enter key

# Table of Contents

<b>How to Use This Manual .....</b>	<b>3</b>
<b>Important Safety Instructions.....</b>	<b>3</b>
<b>Documentation Abbreviations .....</b>	<b>4</b>
<b>Notation Conventions.....</b>	<b>5</b>
<b>CHAPTER 1 .....</b>	<b>12</b>
<b>OVERVIEW .....</b>	<b>12</b>
<b>1.1 Features.....</b>	<b>12</b>
Internet Access Features.....	13
Advanced Internet Functions .....	13
LAN Features.....	13
Configuration & Management .....	13
Security Features.....	13
<b>1.2 Networking Protocols.....</b>	<b>14</b>
<b>1.3 Package Contents .....</b>	<b>14</b>
<b>1.4 Front Panel .....</b>	<b>14</b>
LED Indicators .....	15
Reset Button.....	15
<b>1.5 Rear Panel.....</b>	<b>15</b>
WAN / LAN / Console Ports .....	16
Console.....	16
<b>CHAPTER 2 .....</b>	<b>17</b>
<b>INSTALLING THE TVP-224HR.....</b>	<b>17</b>
<b>2.1 Network Requirements.....</b>	<b>17</b>
<b>2.2 Installing the TVP-224HR.....</b>	<b>17</b>
<b>2.3 Connecting to the telephony devices.....</b>	<b>17</b>
<b>2.4 Connecting to the LAN Network .....</b>	<b>17</b>
<b>2.5 Assigning an IP address to the TVP-224HR.....</b>	<b>18</b>
<b>2.6 Hardware Installation Procedures.....</b>	<b>18</b>

<b>CHAPTER 3 .....</b>	<b>20</b>
<b>ROUTER SETUP.....</b>	<b>20</b>
<b>Overview .....</b>	<b>20</b>
<b>Configuration Program .....</b>	<b>21</b>
Preparation .....	21
Home Screen .....	22
<b>LAN Configuration .....</b>	<b>24</b>
DHCP .....	25
<b>CHAPTER 4 PC CONFIGURATION .....</b>	<b>26</b>
<b>Overview .....</b>	<b>26</b>
<b>Windows Clients.....</b>	<b>26</b>
TCP/IP Settings - Overview .....	26
Checking TCP/IP Settings - Windows 9x/ME:.....	27
Checking TCP/IP Settings - Windows NT4.0.....	29
Checking TCP/IP Settings - Windows 2000:.....	32
Checking TCP/IP Settings - Windows XP .....	34
Internet Access .....	36
<b>Macintosh Clients.....</b>	<b>37</b>
<b>Linux Clients.....</b>	<b>37</b>
<b>Other Unix Systems.....</b>	<b>37</b>
<b>CHAPTER 5 OPERATION AND STATUS.....</b>	<b>38</b>
<b>Operation .....</b>	<b>38</b>
<b>System Status Screen .....</b>	<b>38</b>
<b>CHAPTER 6 INTERNET FEATURES.....</b>	<b>41</b>
<b>Overview .....</b>	<b>41</b>
<b>Internet Access Configuration .....</b>	<b>41</b>
<b>Fixed / Dynamic IP Address.....</b>	<b>41</b>
<b>PPPoE Configuration.....</b>	<b>43</b>
Special Applications.....	44
DMZ.....	45
<b>Dynamic DNS (Domain Name Server).....</b>	<b>45</b>
Dynamic DNS Screen .....	46

<b>Virtual Servers / Port Forwarding .....</b>	<b>47</b>
IP Address seen by Internet Users.....	47
Virtual Servers Screen.....	48
Connecting to the Virtual Servers .....	48
<b>Voice QoS.....</b>	<b>49</b>
Voice QoS Screen .....	49
<b>CHAPTER 7 ADMINISTRATION .....</b>	<b>51</b>
<b>Overview .....</b>	<b>51</b>
<b>Administration Password Setup / Login .....</b>	<b>51</b>
<b>Remote Administration .....</b>	<b>52</b>
<b>Upgrade Firmware.....</b>	<b>54</b>
<b>Access Control.....</b>	<b>55</b>
Access Control Screen .....	56
Common Port Assignment .....	57
<b>CHAPTER 8 .....</b>	<b>61</b>
<b>TVP-224HR TELEPHONY CONCEPTS .....</b>	<b>61</b>
<b>8.1 How the TVP-224HR Operates.....</b>	<b>61</b>
<b>8.2 ATPM.....</b>	<b>61</b>
<b>8.3 Destination .....</b>	<b>61</b>
<b>8.4 Hunt Group.....</b>	<b>62</b>
<b>8.5 Dial Plan.....</b>	<b>62</b>
Address Table.....	62
Hunt Group Table .....	63
Destination Table .....	63
<b>8.6 DTMF Relay .....</b>	<b>63</b>
<b>8.7 Voice Codecs .....</b>	<b>64</b>
<b>CHAPTER 9 .....</b>	<b>65</b>
<b>CONFIGURING VOIP FROM A WEB BROWSER .....</b>	<b>65</b>
<b>9.1 HTTP setting mode .....</b>	<b>65</b>
Main Menu Function Briefings.....	66
System Status .....	67

<b>9.2</b>	<b>H.323 Configuration .....</b>	<b>67</b>
	H.323 Status Page .....	67
	H.323 Parameters .....	68
	Gatekeeper.....	69
	Aliases.....	71
<b>9.3</b>	<b>Dial Plan Settings .....</b>	<b>73</b>
	Dial Plan Setup.....	73
	Telephone Number Table.....	73
	Hunt Group Table .....	74
	Destination ID Table .....	75
<b>9.4</b>	<b>Dial in PLAR / CID .....</b>	<b>76</b>
	Dial in PLAR Considerations and Limitations.....	77
<b>9.5</b>	<b>Store Dial Plan.....</b>	<b>77</b>
<b>9.6</b>	<b>Clear Dial Plan .....</b>	<b>77</b>
<b>9.7</b>	<b>Restore Dial Plan.....</b>	<b>78</b>
<b>9.8</b>	<b>Line Settings.....</b>	<b>78</b>
	Channel Status.....	78
	Codec Selection.....	78
	Common Parameters .....	78
	Total Time.....	79
	First Digit Wait Time .....	79
	Inter Digit Wait Time.....	79
	Termination Digit.....	79
<b>9.9</b>	<b>Channel Parameters.....</b>	<b>79</b>
<b>9.10</b>	<b>Administration.....</b>	<b>79</b>
	Password (See Chapter 7) .....	79
	Telnet Access .....	80
	Interface Speed.....	80
<b>9.11</b>	<b>Channel Status.....</b>	<b>80</b>
<b>9.12</b>	<b>Help.....</b>	<b>80</b>
<b>CHAPTER 10 .....</b>		<b>81</b>
<b>MAKING CALLS WITH TVP-224HR.....</b>		<b>81</b>
<b>10.1</b>	<b>Configuration Examples .....</b>	<b>81</b>
	Default Dial Plan.....	81
<b>10.2</b>	<b>Making a call with TVP-224HR FXS Port.....</b>	<b>82</b>
<b>10.3</b>	<b>Making a call with TVP-224HR FXO Port.....</b>	<b>83</b>
<b>10.4</b>	<b>Web Browser Sample Dial Plan .....</b>	<b>83</b>

<b>10.5 Making a call between Gateway A and Gateway B.....</b>	<b>90</b>
Case 1: Gateway Phone to Gateway Phone.....	90
Case 2: Gateway Phone to PSTN Phone.....	91
Case 3: PSTN Phone to Gateway Phone.....	92
<b>10.6 VoIP in a Dynamic IP environment.....</b>	<b>92</b>
<b>10.7 PPPoE, DHCP, and DDNS clients: .....</b>	<b>93</b>
Case 4: Gateway Prefix–Simplified Gateway Phone to Gateway Phone.....	93
<b>10.8 Dial in PLAR (Hotline) – TVP-224HR / TVP-224HR.....</b>	<b>100</b>
Case 5: PLAR (Hotline) FXO to FXS example.....	100
Case 6: PLAR (Hotline) FXS to FXO example.....	103
Case 7: PLAR (Hotline) FXO to FXO example.....	105
 <b>CHAPTER 11 .....</b>	 <b>107</b>
 <b>TELEPHONY CONNECTIONS.....</b>	 <b>107</b>
<b>11.1 Port Configuration .....</b>	<b>107</b>
Application 1: Special FXS Connections.....	108
Application 2: FXO Connections.....	108
 <b>CHAPTER 12 .....</b>	 <b>109</b>
 <b>TROUBLESHOOTING TIPS.....</b>	 <b>109</b>
<b>Overview .....</b>	<b>109</b>
<b>General Problems.....</b>	<b>109</b>
<b>Internet Access .....</b>	<b>109</b>
<b>Other Problems .....</b>	<b>110</b>
<b>Appendix A - Technical Specifications.....</b>	<b>111</b>
TVP-224HR Technical Specifications.....	111
Console Port.....	113
LAN Port.....	113
FXO Port Pin Assignments.....	114
FXS Port Pin Assignments.....	114
<b>Appendix B - Connecting through Console .....</b>	<b>115</b>
<b>Appendix C - Connecting through Telnet.....</b>	<b>116</b>
<b>Appendix D - CLI Commands .....</b>	<b>118</b>
Normal Mode Commands.....	118
Download Mode Commands.....	119
<b>Appendix E - Factory Default Settings.....</b>	<b>120</b>

**Appendix F - Worksheets ..... 122**  
    IP Parameters ..... 122  
    ATPM Destination Table ..... 122  
    Remote Destinations ..... 123  
    ATPM Hunt Group Table ..... 124  
    ATPM Address Table ..... 125

**Index ..... 126**


# Chapter 1

## Overview

*This chapter gives an overview of the 4 ports desktop version VoIP Gateway Router (TVP-224HR) and a detailed description of its front panel and rear panel.*

Congratulations on the purchase of your new TVP-224HR. The TVP-224HR is a multi-function device providing the following services:

**Shared Broadband Internet Access** for all LAN users.

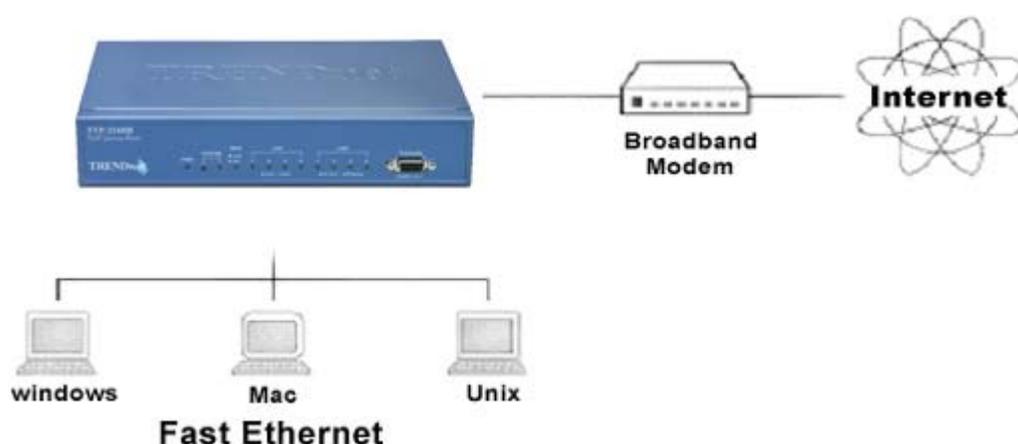

*Figure 1: TVP-224HR*

### 1.1 Features

The TVP-224HR is a cost-effective and highly reliable analog Voice over IP (VoIP) Gateway Router that offers toll quality voice and real-time fax data over IP networks. With its embedded architecture, the gateway is ideal for VoIP applications associated with Remote Office and Branch Office (ROBO) environments. With its built-in user-friendly interface, the gateway may be installed easily and conveniently to yield immediate cost savings. One VoIP Gateway supports up to four voice or Fax communications simultaneously.

Implemented with an efficient Real-Time Operating System (RTOS) and flash memory, the TVP-224HR provides upgradeable capabilities, so it may be programmed with updated firmware locally or via the network at any time. It comes equipped with remote management capabilities, configurable signaling to work with PBX, KTS, and/or telephone. The TVP-224HR utilizes advanced VoIP related technology. It includes various voice codecs and fax algorithms, echo cancellation, Voice Activity Detection (VAD), Comfort Noise Generation (CNG), and lost packet recovery algorithms.

## Internet Access Features

- **Shared Internet Access.** All users on the LAN or WLAN can access the Internet through the TVP-224HR, using only a single external IP Address. The local (invalid) IP Addresses are hidden from external sources. This process is called NAT (Network Address Translation).
- **DSL & Cable Modem Support.** The TVP-224HR has a 100BaseT Ethernet port for connecting a DSL or Cable Modem. All popular DSL and Cable Modems are supported. SingTel RAS and Big Pond (Australia) login support is also included.
- **PPPoE.** The Internet (WAN port) connection supports PPPoE (PPP over Ethernet).
- **Fixed or Dynamic IP Address.** On the Internet (WAN port) connection, the TVP-224HR supports both Dynamic IP Address (IP Address is allocated on connection) and Fixed IP Address.

## Advanced Internet Functions

- **Special Internet Applications.** Applications which use non-standard connections or port numbers are normally blocked by the Firewall. The ability to define and allow such applications is provided, to enable such applications to be used normally.
- **Virtual Servers.** This feature allows Internet users to access Internet servers on your LAN. The required setup is quick and easy.
- **DMZ.** One (1) PC on your local LAN can be configured to allow unrestricted 2-way communication with Servers or individual users on the Internet. This provides the ability to run programs which are incompatible with Firewalls.
- **QoS.** This feature “guarantees” better service to selected traffic on a network. The goal in configuring QoS is to give priority and attention to certain devices or services so that they can use the maximum available throughput and speed available on a certain network when it is needed.

## LAN Features

- **DHCP Server Support.** Dynamic Host Configuration Protocol provides a dynamic IP address to PCs and other devices upon request. The TVP-224HR can act as a **DHCP Server** for devices on your local LAN and WLAN.

## Configuration & Management

- **Easy Setup.** Use your WEB browser from anywhere on the LAN or WLAN for configuration.
- **Remote Management.** The TVP-224HR can be managed from any PC on your LAN. And, if the Internet connection exists, it can also (optionally) be configured via the Internet using a web browser or telnet.

## Security Features

- **Password - protected Configuration.** password protection is provided to prevent unauthorized users from modifying the configuration data and settings.
- **NAT Protection.** An intrinsic side effect of NAT (Network Address Translation) technology is that by allowing all LAN users to share a single IP address, the location and even the existence of each PC is hidden. From the external viewpoint, there is no network, only a single device - the TVP-224HR.

## 1.2 Networking Protocols

The TVP-224HR supports several industry-standard networking protocols required for voice communication. The following table describes these protocols.

Networking Protocol	Description
Internet Protocol (IP)	IP is a messaging protocol that addresses and sends packets across the network. To enable IP protocol, the TVP-224HR must have a Real IP address, subnet, and gateway assigned to it.
Voice over IP Protocol (VoIP)	VoIP enables the TVP-224HR to transfer voice communications over an IP network. The TVP-224HR employs ITU-T H.323 protocol for setting up calls with one another.
Trivial File Transfer Protocol (TFTP)	TFTP allows you to transfer files over the network. The TVP-224HR implements a TFTP client allowing you to download new revision firmware from a TFTP server. The TFTP client requires a TFTP server in your network.
Real-Time Transport (RTP)	RTP is a standard for transporting real-time data over IP network. The TVP-224HR uses RTP protocol to send digitized and compressed voice packets.


## 1.3 Package Contents

The contents of your product should contain the following items:

- TVP-224HR VoIP Gateway Router 4 port n
- 100-240V Power Adapter
- 9-pin straight through RS-232 cable
- Printed Quick Installation Guide
- User's guide (CD)
- RJ45 Cable

## 1.4 Front Panel

The front panel of the TVP-224HR contains a push button and LED indicators. The following figure illustrates the front panel of the TVP-224HR.

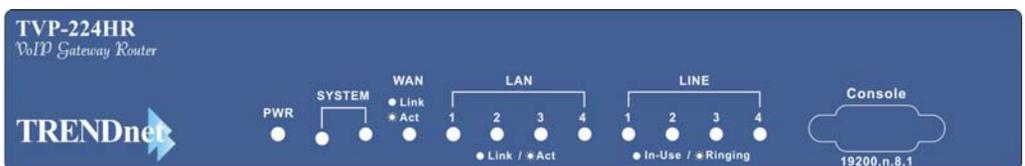

4-port TVP-224HR Front Panel

## LED Indicators

The LED indicators on the front panel display the current status of the TVP-224HR as described in the following table:

Indicator	Color	Activity	Indication
PWR	Green	On	Power is supplied to the gateway.
SYSTEM	Green	Blinking	The system is running. (Heartbeat LED)
LAN • Act • Link	Green Green	On On Off	Data is being transferred on the LAN. The gateway is connected to LAN at 100Mb/s. The gateway is connected to LAN at 10Mb/s.
WAN • Link • Act	Green Green	On On	The gateway is connected to WAN. Data is being transferred on the WAN.
LINE Channels 1-4	Green	Off On Blinking	The line is idle. The line is being used. The line is ringing.

## Reset Button


There is a recessed push button located next to the SYSTEM LED. This button allows you to reset the TVP-224HR or force the TVP-224HR to enter firmware upgrade mode.

To reset the gateway, push a small, stiff object into the hole until the SYSTEM LED stops blinking, then release the button.

Powering on the gateway while pressing down the button for 5 seconds forces the TVP-224HR to enter download mode

## 1.5 Rear Panel

The rear panel of the TVP-224HR has four analog telephony ports, two FXO and two FXS ports offering flexible telephony interface usage. The FXS telephony interface ports may be connected to Subscriber Equipment, such as Telephones, Fax Machines, Cordless Phones, and Modems. FXO ports can be connected to PBX and local phone company Central Office (CO) lines. In addition to analog telephony interface ports, there is a power jack for power adapter connection on the rear panel.

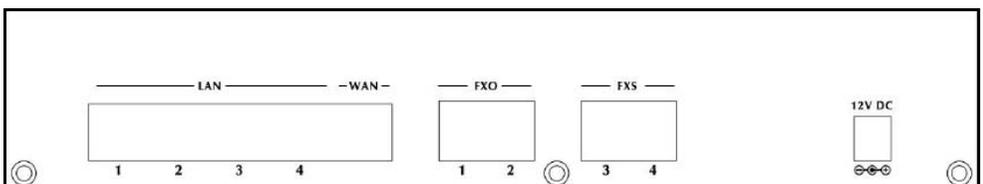

### *4-port TVP-224HR Rear Panel*

#### **WAN / LAN / Console Ports**

The TVP-224HR is equipped with 1 WAN and 4 LAN Ethernet interfaces with 10/100 Mbps auto-negotiation, auto MDIX capability. The Ethernet ports are located on the rear panel.

#### **Console**

There is a 9-pin RS-232 interface port on the front panel. Their functions are described below:

<b>Port</b>	<b>Label</b>	<b>Function</b>
1x RJ45	WAN	Connecting to Cable / ADSL Modem for Internet connection.
4x RJ45	LAN	Connecting the TVP-224HR to 10/100 Mbps Ethernet network
9-pin RS-232	User Console	Connecting the TVP-224HR to a VT-100 terminal or terminal emulator for configuring the TVP-224HR

# 2

## Chapter 2

# Installing the TVP-224HR

*This chapter gives information on how to install the TVP-224HR.*

## 2.1 Network Requirements

For the TVP-224HR to successfully operate in your network, your network must meet the following requirements:

1. A working 10/100 Base-T Ethernet. The TVP-224HR connects to the Internet via an Ethernet LAN.
2. IP network that supports gateway, and subnet mask. You'll need a static IP address to assign the TVP-224HR or a DDNS account for your Dynamic IP.

## 2.2 Installing the TVP-224HR

Due to the TVP-224HR being used in a desktop configuration, ensure that the TVP-224HR is placed in a clean, well-ventilated, and vibration-free environment.

When the TVP-224HR is used, be certain that the unit is placed on a sturdy, flat surface, near a grounded power outlet. At least three inches of clearance must be provided on both sides of the TVP-224HR for good ventilation.

## 2.3 Connecting to the telephony devices

The 4 port TVP-224HR supports 2 FXO and 2 FXS. Each RJ11 port is for connecting to telephony devices.

The FXO port is designed for connecting to PBXs or local telephone company central office switches (CO).

The FXS port is designed for connecting to analog telephone sets, G3 fax machines.

**Warning:** *connection of incorrect telephony devices to the ports on the TIM can cause permanent damage to the TIM and/or the TVP-224HR.*

## 2.4 Connecting to the LAN Network

The 4x RJ45 LAN network ports on the rear panel supports 10/100 Mbps half-duplex connections to Ethernet. You can use either Category 3 or 5 straight-through UTP cable for 10 Mbps connections, but use Category 5 for 100 Mbps connections. Insert one end of the Ethernet cable into one of the 4 RJ45 ports on the rear panel of the TVP-224HR and other end of the cable to a network device / PC.

## 2.5 Assigning an IP address to the TVP-224HR

The IP address is the unique logical address identifying each IP node, such as the TVP-224HR, on an IP network. An IP address is a 32-bit number expressed as four decimal numbers from 0 to 255 separated by periods. The TVP-224HR can be configured with a fixed IP address, subnet mask and default gateway. The TVP-224HR can also be setup as a DHCP. Additionally, the TVP-224HR can also be configured to use PPPoE. With PPPoE, you will have a Dynamic IP but combined with Dynamic DNS, the TVP-224HR will automatically notify DynDNS of your changing IP Address and DynDNS will in turn, map it to your registered Domain Name. Consult your network manager to obtain a unique and static IP address for the TVP-224HR, the IP subnet mask and default gateway of your network, and fill out the work sheet in Appendix D before configuring the gateway. Procedures for assigning IP address, default gateway and subnet mask is available in Chapter 4.

## 2.6 Hardware Installation Procedures

### 1. Choose an Installation Site

- Select a suitable place on the network to install the TVP-224HR. Ensure the TVP-224HR and the DSL/Cable modem are powered OFF.

### 2. Connect LAN Cables

- Use standard LAN cables to connect PCs to the Switching Hub ports on the TVP-224HR. Both 10BaseT and 100BaseT connections can be used simultaneously.
- If required, you can connect any LAN port to another Hub. Any LAN port on the TVP-224HR will automatically function as an "Uplink" port when required. Just connect any LAN port to a normal port on the other hub, using a standard LAN cable.
- If desired, connect a PC (server) to the DMZ port. To use multiple servers, use a standard LAN cable to connect the DMZ port to a normal port on another hub, and connect your servers to the hub. PCs connected to the DMZ port are isolated from your LAN.

### 3. Connect WAN Cable

- Connect the Broadband modem to the WAN port on the TVP-224HR. Use the cable supplied with your Broadband modem. If no cable was supplied, use a standard LAN cable.

### 4. Power Up

- Power on the Broadband modem.
- Connect one end of the power cord that came with the TVP-224HR to the power jack on the rear panel.
- Connect the other end of the power cord to an AC power outlet.
- The TVP-224HR will execute memory and application code testing automatically.
- Use only the power adapter provided. Using a different one may cause hardware damage

## 5. Check the LEDs

- The *Power* LED should be ON.
- The *Systems* LED should be blinking.
- For each LAN (PC) connection, the LAN *Link/Act* LED should be ON (provided the PC is also ON.)
- The *WAN* LED should be ON.
- For each telephony device connection, the *Line* LED should be ON (provided the device is plugged in and receiver is off hook.)

## Chapter 3

# Router Setup

*This Chapter provides Setup details of the TVP-224HR.*

### Overview

This chapter describes the setup procedure for:

- Internet Access
- LAN configuration

PCs on your local LAN may also require configuration. For details, see *Chapter 4 - PC Configuration*.

Other configuration may also be required, depending on which features and functions of the TVP-224HR you wish to use. Use the table below to locate detailed instructions for the required functions.

To Do this:	Refer to:
Configure PCs on your LAN.	Chapter 4: PC Configuration
Check TVP-224HR operation and Status.	Chapter 5: Operation and Status
Use any of the following Internet features: Internet Access Configuration Dynamic DNS (Domain Name Server) Special Applications Virtual Servers Port Forwarding DMZ QoS	Chapter 6: Internet Features
Change any of the following Administration-related settings: Admin Login Access Control Remote Administration Upgrade Firmware	Chapter 7: Administration



**Where use of a certain feature requires that PCs or other LAN devices be configured, this is also explained in the relevant chapter.**

## Configuration Program

The TVP-224HR contains an HTTP server. This enables you to connect to it, and configure it, using your Web Browser. **Your Browser must support JavaScript.** The configuration program has been tested on the following browsers:

- Netscape V4.08 or later
- Internet Explorer V4 or later

### Preparation

Before attempting to configure the TVP-224HR, please ensure that:

- Your PC can establish a physical connection to the TVP-224HR. The PC and the TVP-224HR must be directly connected (using the Hub ports on the TVP-224HR) or on the same LAN segment.
- The TVP-224HR must be installed and powered ON.
- If the TVP-224HR 's default IP Address (192.168.0.1) is already used by another device, the other device must be turned OFF until the TVP-224HR is allocated a new IP Address during configuration.

### Using your Web Browser

To establish a connection from your PC to the TVP-224HR:

1. After installing the TVP-224HR in your LAN, start your PC. If your PC is already running, restart it.
2. Start your WEB browser.
3. In the *Address* box, enter "HTTP://" and the IP Address of the TVP-224HR, as in this example, which uses the TVP-224HR 's default IP Address:

`HTTP://192.168.0.1`

#### If you can't connect

If the TVP-224HR does not respond, check the following:

The TVP-224HR is properly installed, LAN connection is OK, and it is powered ON. You can test the connection by using the "Ping" command:

- Open the MS-DOS window or command prompt window.
- Enter the command:

```
ping 192.168.0.1
```

If no response is received, either the connection is not working, or your PC's IP address is not compatible with the TVP-224HR 's IP Address. (See next item.)

If your PC is using a fixed IP Address, its IP Address must be within the range 192.168.0.2 to 192.168.0.254 to be compatible with the TVP-224HR 's default IP Address of 192.168.0.1. Also, the *Network Mask* must be set to 255.255.255.0. See *Chapter 4 - PC Configuration* for details on checking your PC's TCP/IP settings.

Ensure that your PC and the TVP-224HR are on the same network segment. (If you don't have a router, this must be the case.)

4. You will be prompted for a username and password, as shown below.



*Figure 2: Password Dialog*

- Enter Username and Password. Default User Name and Password are “admin” and “123” respectively.
- These are the default values. Both the name and password can (and should) be changed, using the ***Administration Password page***. Once you have changed either the name or the password, you must use the current values.

## Home Screen

After Logging on to the TVP-224HR, you will see the *Home* screen which is the System Status page. When you connect in future, you will see this screen when you connect. An example screen is shown below.

**TVP-224HR VoIP Gateway Router**

**System Status**

**WAN Interface Parameters**

- MAC address: 00-50-2d-00-f5-09
- Dynamic DNS: Disabled
- Access Mode: Fixed IP
  - IP address: 60.248.111.217
  - Subnet mask: 255.255.255.0
  - Default gateway: 60.248.111.254
  - Pri. DNS server: 168.95.1.1
  - Sec. DNS server: 0.0.0.0

**LAN Interface Parameters**

- MAC Address: 00-50-2d-00-f5-08
- IP address: 192.168.0.1
- Subnet mask: 255.255.255.0
- DHCP server: Enabled
  - No. of DHCP clients: 30
  - Starting client addr: 192.168.0.10

**Firmware Version**

- TVP-224HR Version: 2.01.005 09New(0418)
- Boot Load Version: 1.01
- DSP Image Version: 8.1.2.1.
- TSG Version:: R8.0 Gateway (Build 4)

*Figure 3: Home Screen*

## Navigation & Data Input

- Use the menu bar on the top of the screen, and the "Back" button on your Browser, for navigation.
- Changing to another screen without clicking "Save" does NOT save any changes you may have made. You must "Save" before changing screens or your data will be ignored.

# LAN Configuration

From the main menu, navigate to *Router Configuration*. Click on the *LAN* sub menu. The *LAN* screen will appear as below.

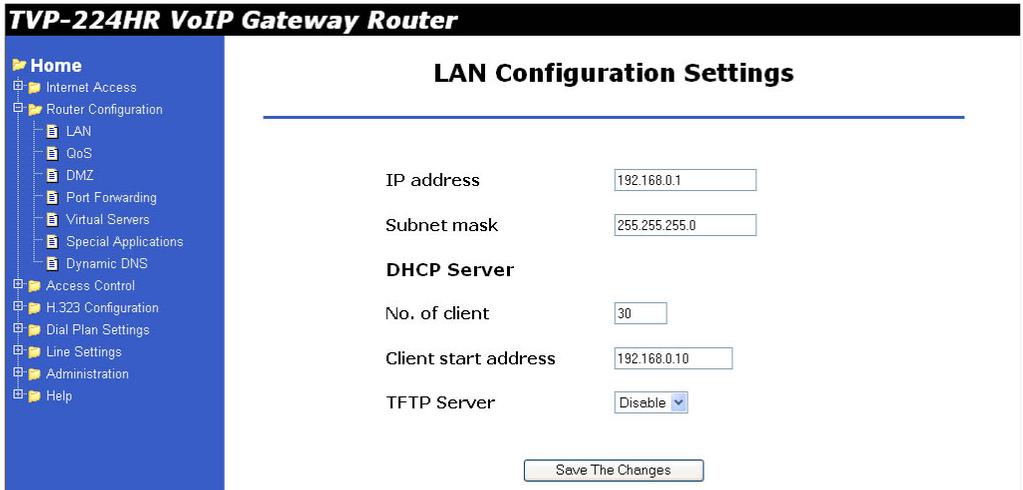


Figure 4: LAN Screen

## Data - LAN Screen

TCP/IP	
<b>IP Address</b>	IP address for the TVP-224HR, as seen from the local LAN. Use the default value unless the address is already in use or your LAN is using a different IP address range. In the latter case, enter an unused IP Address from within the range used by your LAN.
<b>Subnet Mask</b>	The default value 255.255.255.0 is standard for small (class "C") networks. For other networks, use the Subnet Mask for the LAN segment to which the TVP-224HR is attached (the same value as the PCs on that LAN segment).
<b>DHCP Server</b>	<p>DHCP Server is by default, always on. The TVP-224HR will allocate IP Addresses to PCs (DHCP clients) on your LAN when they start up.</p> <p>If you are already using a DHCP Server, this setting must be Disabled, and the existing DHCP server must be re-configured to treat the TVP-224HR as the default Gateway. See the following section for further details.</p> <p>The <b>Start IP Address</b> and <b>Finish IP Address</b> fields set the values used by the DHCP server when allocating IP Addresses to DHCP clients. This range also determines the number of DHCP clients supported.</p> <p>See the following section for further details on using DHCP.</p>
Buttons	
<b>Save the changes</b>	Save the data on screen.

## DHCP

### What does DHCP do?

A DHCP (Dynamic Host Configuration Protocol) **Server** allocates a valid IP address to a DHCP **Client** (PC or device) upon request.

- The client request is made when the client device starts up (boots).
- The DHCP Server provides the *Gateway* and *DNS* addresses to the client, as well as allocating an IP Address.
- The TVP-224HR can act as a **DHCP server**.
- Windows 95/98/ME and other non-Server versions of Windows will act as a DHCP **client**. This is the default Windows setting for the TCP/IP network protocol. However, Windows uses the term *Obtain an IP Address automatically* instead of "DHCP Client".
- You must NOT have two (2) or more DHCP Servers on the same LAN segment. (If your LAN does not have other Routers, this means there must only be one (1) DHCP Server on your LAN.)

### Using the TVP-224HR 's DHCP Server

This is the default setting. The DHCP Server settings are on the **LAN** screen. On this screen, you can:

- Enable or Disable the TVP-224HR 's *DHCP Server* function. Disable the DHCP by entering "0" in the number of clients field
- Set the range of IP Addresses allocated to PCs by the DHCP Server function.



**You can assign Fixed IP Addresses to some devices while using DHCP, provided that the Fixed IP Addresses are NOT within the range used by the DHCP Server.**

### Using another DHCP Server

You can only use one (1) DHCP Server per LAN segment. If you wish to use another DHCP Server, rather than the TVP-224HR 's, the following procedure is required.

1. Disable the DHCP Server feature in the TVP-224HR. Disable the DHCP by entering "0" in the number of clients field.
2. Configure the DHCP Server to provide the TVP-224HR 's IP Address as the *Default Gateway*.

### To Configure your PCs to use DHCP

This is the default setting for TCP/IP under Windows 95/98/ME.

See *Chapter 4 - Client Configuration* for the procedure to check these settings.

## Chapter 4

# 4

# PC Configuration

*This Chapter details the PC Configuration required on the local ("Internal") LAN.*

## Overview

For each PC, the following may need to be configured:

- TCP/IP network settings
- Internet Access configuration

## Windows Clients

This section describes how to configure Windows clients for Internet access via the TVP-224HR.

The first step is to check the PC's TCP/IP settings.

The TVP-224HR uses the TCP/IP network protocol for all functions, so it is essential that the TCP/IP protocol be installed and configured on each PC.

## TCP/IP Settings - Overview

**If using the default TVP-224HR settings, and the default Windows TCP/IP settings, no changes need to be made.**

- By default, the TVP-224HR will act as a DHCP Server, automatically providing a suitable IP Address (and related information) to each PC when the PC boots.
- For all non-Server versions of Windows, the default TCP/IP setting is to act as a DHCP client.

**If using a Fixed (specified) IP address, the following changes are required:**


- The *Gateway* must be set to the IP address of the TVP-224HR
- The *DNS* should be set to the address provided by your ISP.



**Do to NAT resolution issues, it is not recommended to use the TVP-224HR under another Router.**


## Checking TCP/IP Settings - Windows 9x/ME:

1. Select *Control Panel - Network*. You should see a screen like the following:

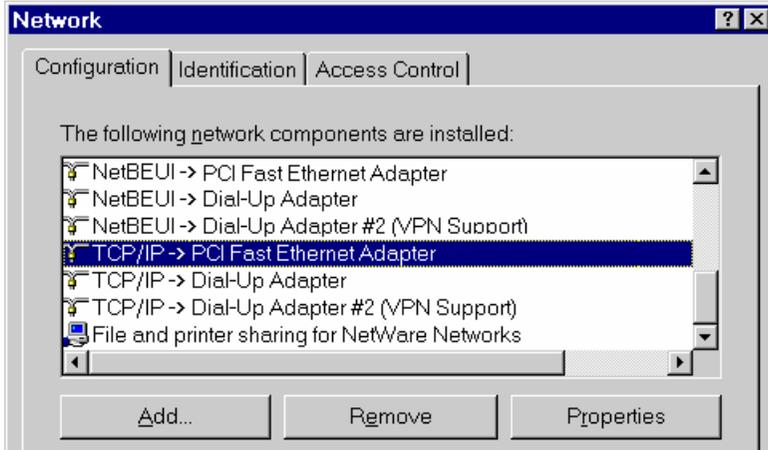

*Figure 5: Network Configuration*

2. Select the *TCP/IP* protocol for your network card.
3. Click on the *Properties* button. You should then see a screen like the following.

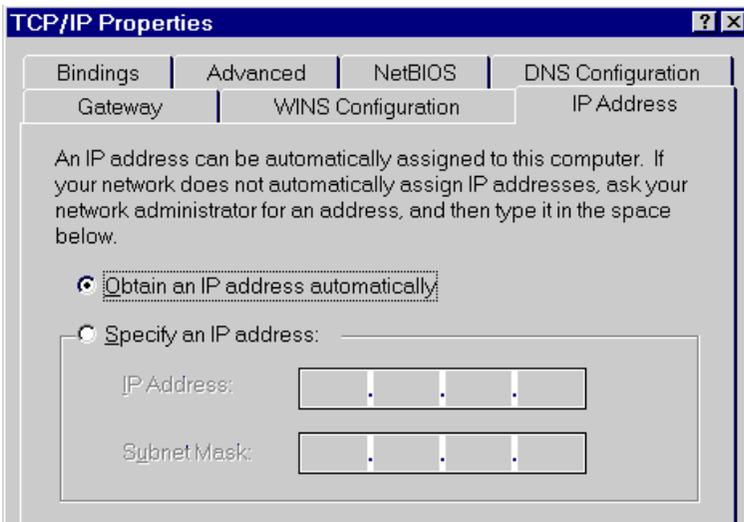

*Figure 6: IP Address (Win 95)*

Ensure your TCP/IP settings are correct, as follows:

### Using DHCP


To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the TVP-224HR will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the TVP-224HR.

### Using "Specify an IP Address"


If your PC is already configured, check with your network administrator before making the following changes:

- On the *Gateway* tab, enter the TVP-224HR 's IP address in the *New Gateway* field and click *Add*, as shown below. Your LAN administrator can advise you of the IP Address they assigned to the TVP-224HR.

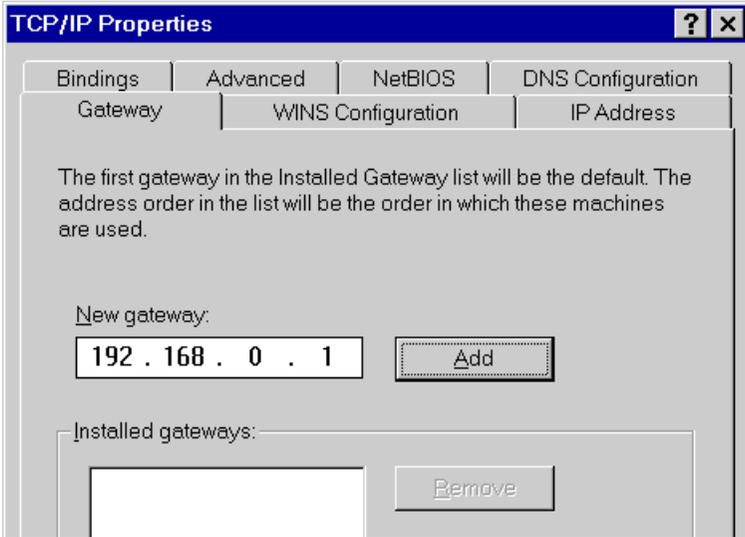

**Figure 7: Gateway Tab (Win 95/98)**


- On the *DNS Configuration* tab, ensure *Enable DNS* is selected. If the *DNS Server Search Order* list is empty, enter the DNS address provided by your ISP in the fields beside the *Add* button, then click *Add*.

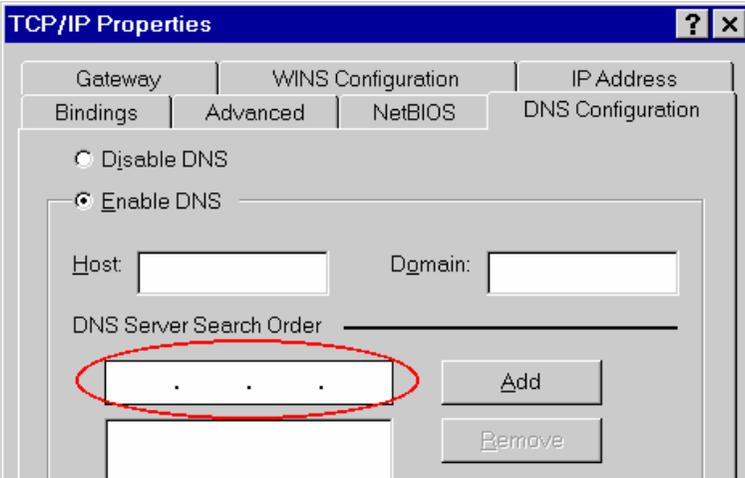

**Figure 8: DNS Tab (Win 95/98)**


## Checking TCP/IP Settings - Windows NT4.0

1. Select *Control Panel - Network*, and, on the *Protocols* tab, select the TCP/IP protocol, as shown below.

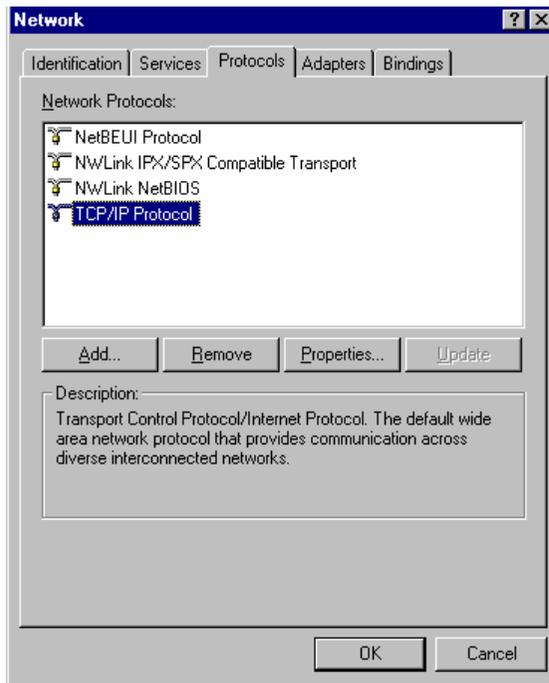

**Figure 9: Windows NT4.0 - TCP/IP**

2. Click the *Properties* button to see a screen like the one below.

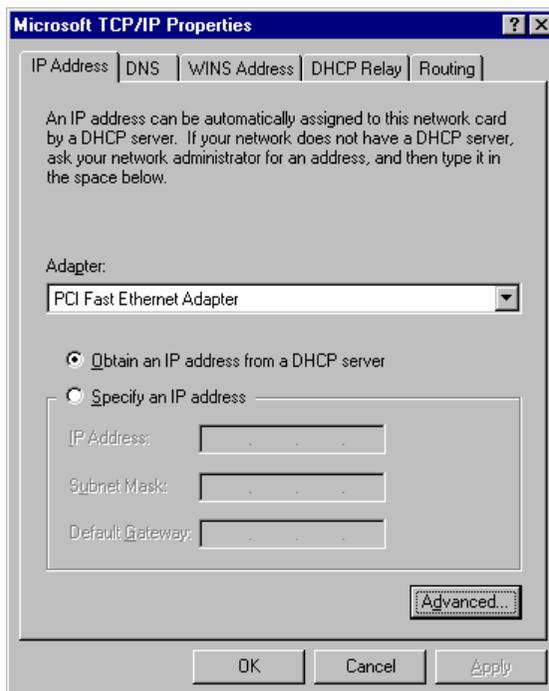

**Figure 10: Windows NT4.0 - IP Address**

3. Select the network card for your LAN.
4. Select the appropriate radio button - *Obtain an IP address from a DHCP Server* or *Specify an IP Address*, as explained below.

### Obtain an IP address from a DHCP Server


This is the default Windows setting. **Using this is recommended.** By default, the TVP-224HR will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the TVP-224HR.

### Specify an IP Address


If your PC is already configured, check with your network administrator before making the following changes.

1. The *Default Gateway* must be set to the IP address of the TVP-224HR. To set this:
  - Click the *Advanced* button on the screen above.
  - On the following screen, click the *Add* button in the *Gateways* panel, and enter the TVP-224HR's IP address, as shown in **Figure 11** below.
  - If necessary, use the *Up* button to make the TVP-224HR the first entry in the *Gateways* list.

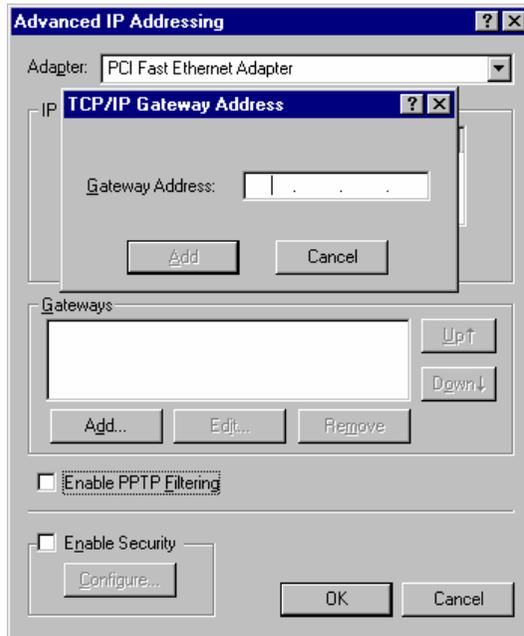

**Figure 11 - Windows NT4.0 - Add Gateway**


2. The DNS should be set to the address provided by your ISP, as follows:
  - Click the DNS tab.
  - On the DNS screen, shown below, click the *Add* button (under *DNS Service Search Order*), and enter the DNS provided by your ISP.

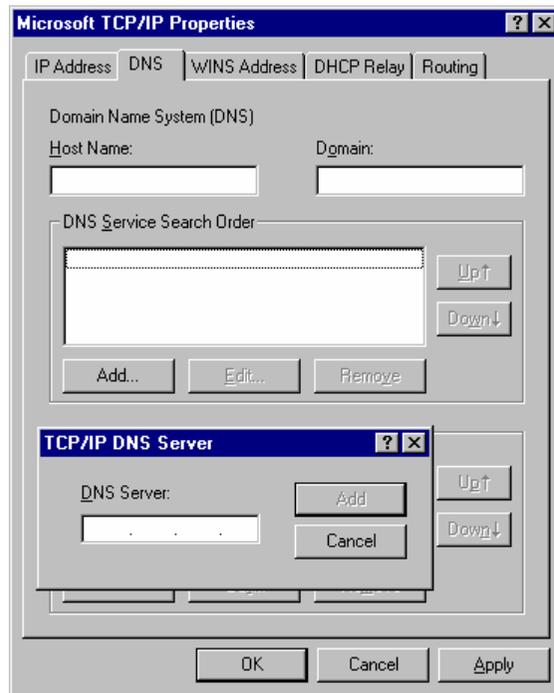

*Figure 12: Windows NT4.0 – DNS*


## Checking TCP/IP Settings - Windows 2000:

1. Select *Control Panel - Network and Dial-up Connection*.
2. Right - click the *Local Area Connection* icon and select *Properties*. You should see a screen like the following:

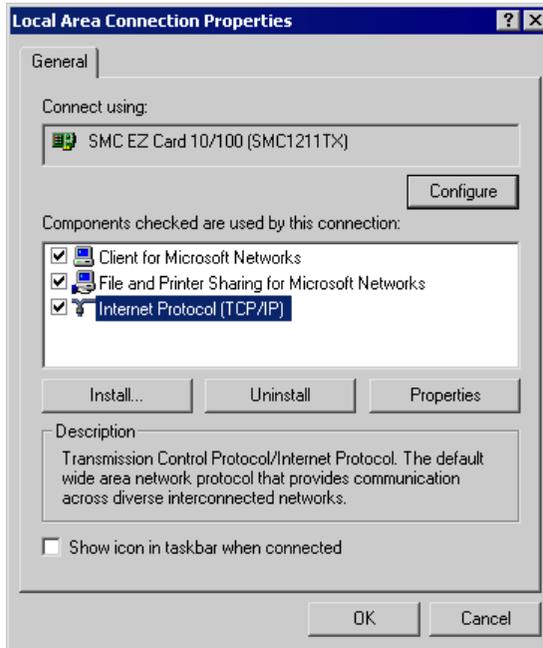

**Figure 13: Network Configuration (Win 2000)**

3. Select the *TCP/IP* protocol for your network card.
4. Click on the *Properties* button. You should then see a screen like the following.

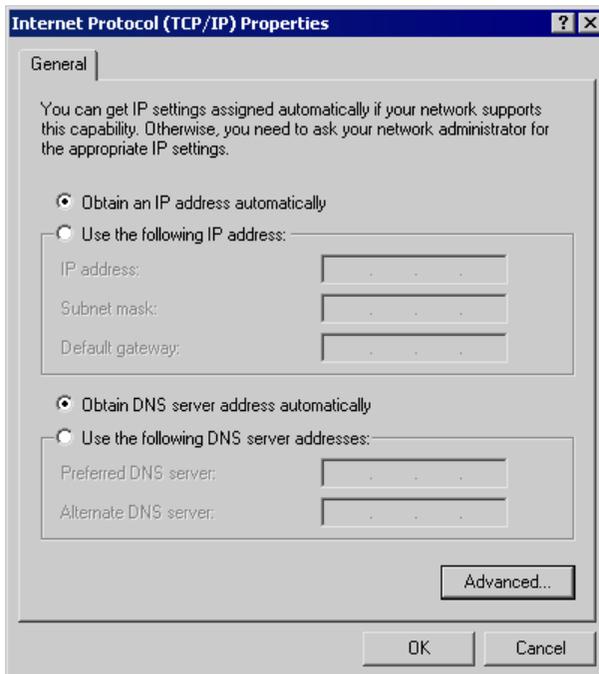

**Figure 14: TCP/IP Properties (Win 2000)**

5. Ensure your TCP/IP settings are correct, as described below.

### Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the TVP-224HR will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the TVP-224HR.


### Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.

- Enter the TVP-224HR 's IP address in the *Default gateway* field and click *OK*. (Your LAN administrator can advise you of the IP Address they assigned to the TVP-224HR.)
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click *OK*.


## Checking TCP/IP Settings - Windows XP

1. Select *Control Panel - Network Connection*.
2. Right click the *Local Area Connection* and choose *Properties*. You should see a screen like the following:

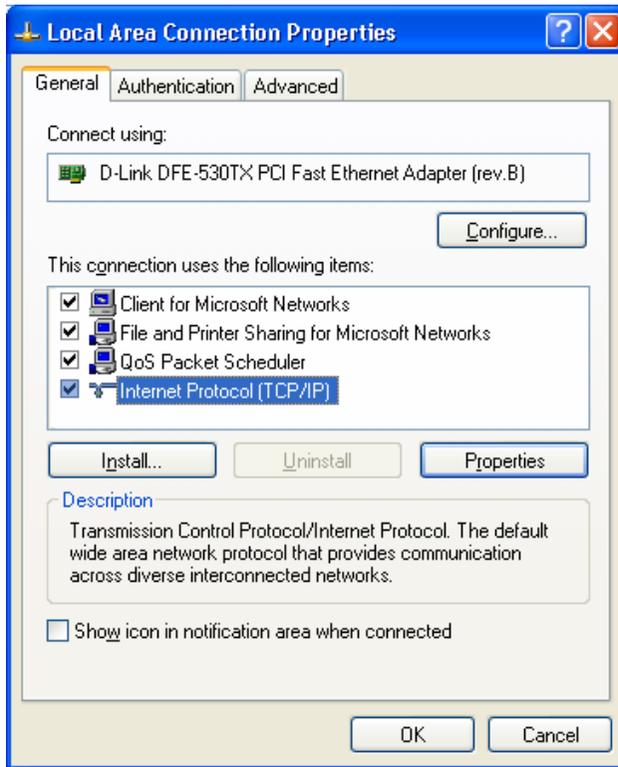

**Figure 15: Network Configuration (Windows XP)**

3. Select the *TCP/IP* protocol for your network card.
4. Click on the *Properties* button. You should then see a screen like the following.

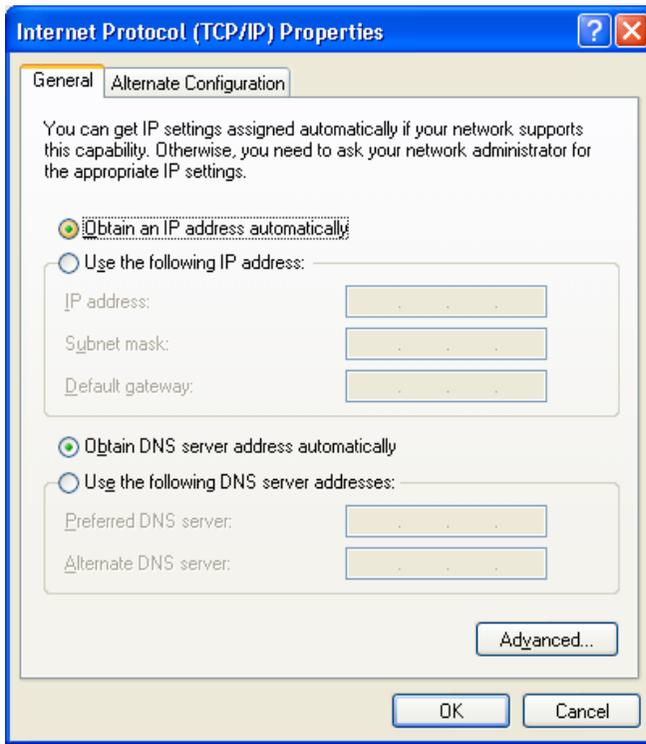

**Figure 16: TCP/IP Properties (Windows XP)**

5. Ensure your TCP/IP settings are correct.

### Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the TVP-224HR will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the TVP-224HR.

### Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.

- In the *Default gateway* field, enter the TVP-224HR 's IP address and click *OK*. Your LAN administrator can advise you of the IP Address they assigned to the TVP-224HR.
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click *OK*.

## Internet Access

To configure your PCs to use the TVP-224HR for Internet access:

1. Ensure that the DSL modem, Cable modem, or other permanent connection is functional.
2. Use the following procedure to configure your Browser to access the Internet via the LAN, rather than by a Dial-up connection.

### For Windows 9x/ME/2000

1. Select *Start Menu - Settings - Control Panel - Internet Options*.
2. Select the *Connection* tab, and click the *Setup* button.
3. Select "I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)" and click *Next*.
4. Select "I connect through a local area network (LAN)" and click *Next*.
5. Ensure all of the boxes on the following Local area network Internet Configuration screen are **unchecked**.
6. Check the "No" option when prompted "Do you want to set up an Internet mail account now?".
7. Click *Finish* to close the Internet Connection Wizard.  
Setup is now completed.

### For Windows XP

1. Select *Start Menu - Control Panel - Network and Internet Connections*.
2. Select *Set up or change your Internet Connection*.
3. Select the *Connection* tab, and click the *Setup* button.
4. Cancel the pop-up "Location Information" screen.
5. Click *Next* on the "New Connection Wizard" screen.
6. Select "Connect to the Internet" and click *Next*.
7. Select "Set up my connection manually" and click *Next*.
8. Check "Connect using a broadband connection that is always on" and click *Next*.
9. Click *Finish* to close the New Connection Wizard.  
Setup is now completed.

### Accessing AOL

To access AOL (America On Line) through the TVP-224HR, the *AOL for Windows* software must be configured to use TCP/IP network access, rather than a dial-up connection. The configuration process is as follows:

- Start the *AOL for Windows* communication software. Ensure that it is Version 2.5, 3.0 or later. This procedure will not work with earlier versions.
- Click the *Setup* button.
- Select *Create Location*, and change the location name from "New Locality" to "TVP-224HR".
- Click *Edit Location*. Select *TCP/IP* for the *Network* field. (Leave the *Phone Number* blank.)
- Click *Save*, then *OK*.  
Configuration is now complete.
- Before clicking "Sign On", always ensure that you are using the "TVP-224HR" location.

## Macintosh Clients

From your Macintosh, you can access the Internet via the TVP-224HR. The procedure is as follows.

1. Open the TCP/IP Control Panel.
2. Select *Ethernet* from the *Connect via* pop-up menu.
3. Select *Using DHCP Server* from the *Configure* pop-up menu. The DHCP Client ID field can be left blank.
4. Close the TCP/IP panel, saving your settings.

### Note:

If using manually assigned IP addresses instead of DHCP, the required changes are:

- Set the *Router Address* field to the TVP-224HR 's IP Address.
- Ensure your DNS settings are correct.

## Linux Clients

To access the Internet via the TVP-224HR, it is only necessary to set the TVP-224HR as the "Gateway".

**Ensure you are logged in as "root" before attempting any changes.**

### Fixed IP Address

By default, most Unix installations use a fixed IP Address. If you wish to continue using a fixed IP Address, make the following changes to your configuration.

- Set your "Default Gateway" to the IP Address of the TVP-224HR.
- Ensure your DNS (Name server) settings are correct.

### To act as a DHCP Client (recommended)

The procedure below may vary according to your version of Linux and X -windows shell.

1. Start your X Windows client.
2. Select *Control Panel - Network*
3. Select the "Interface" entry for your Network card. Normally, this will be called "eth0".
4. Click the *Edit* button, set the "protocol" to "DHCP", and save this data.
5. To apply your changes
  - Use the "Deactivate" and "Activate" buttons, if available.
  - OR, restart your system.

## Other Unix Systems

To access the Internet via the TVP-224HR:

- Ensure the "Gateway" field for your network card is set to the IP Address of the TVP-224HR.
- Ensure your DNS (Name Server) settings are correct.

## Operation and Status

*This Chapter details the operation of the TVP-224HR, the system status screen as well as the channel status screen*

### Operation

Once both the TVP-224HR and the PCs are configured, operation is automatic.

However, there are some situations where additional Internet configuration may be required:

- Applications which use non-standard connections or port numbers may be blocked by the TVP-224HR's intrinsic firewall nature. You can define such applications as **Special Applications** to allow them to function normally. Refer to *Chapter 6 - Internet Features* for further details.
- Some non-standard applications may require use of the **DMZ** feature. Refer to *Chapter 6 - Internet Features* for further details.

### System Status Screen

Use the **Home** link on the main menu to view this screen.

### System Status

---

- **WAN Interface Parameters**
  - MAC address: 00-50-2d-00-f5-09
  - Dynamic DNS: Disabled
  - Access Mode: Fixed IP
    - IP address: 60.248.111.217
    - Subnet mask: 255.255.255.0
    - Default gateway: 60.248.111.254
    - Pri. DNS server: 168.95.1.1
    - Sec. DNS server: 0.0.0.0
- **LAN Interface Parameters**
  - MAC Address: 00-50-2d-00-f5-08
  - IP address: 192.168.0.1
  - Subnet mask: 255.255.255.0
  - DHCP server: Enabled
    - No. of DHCP clients: 30
    - Starting client addr: 192.168.0.10
- **Firmware Version**
  - TVP-224HR Version: 2.01.005 09New(0418)
  - Boot Load Version: 1.01
  - DSP Image Version: 8.1.2.1.
  - TSG Version:: R8.0 Gateway (Build 4)

**Figure 17: System Status Screen**

**Data – System Status Screen**

<b>Wan Interface Parameters</b>	
<b>MAC Address</b>	The hardware address of this device, as seen by remote devices on the Internet. (This is different to the hardware address seen by devices on the local LAN.)
<b>Dynamic DNS</b>	Enabled / Disabled
<b>Access Mode</b>	This indicates the current connection method. Fixed IP, DHCP or PPPoE
<b>IP Address</b>	This IP Address is allocated by the ISP (Internet Service Provider).
<b>Subnet Mask</b>	The subnet Mask (Network Mask) for the IP Address above
<b>Default Gateway</b>	The IP Address of the remote Gateway or Router associated with the IP Address above
<b>Primary DNS Server</b>	The IP Address of the Domain Name Server which is currently used.
<b>Secondary DNS Server</b>	The IP Address of a backup Domain Name Server which could be used if the Primary DNS Server fails.
<b>LAN Interface Parameters</b>	
<b>MAC Address</b>	The hardware address seen by devices on the local LAN. (This is different than hardware address of this device, as seen by remote devices on the Internet)
<b>IP Address</b>	The IP Address of the TVP-224HR.
<b>Subnet Mask</b>	The subnet Mask (Network Mask) for the IP Address above.
<b>DHCP Server</b>	This shows the status of the DHCP Server function - either "Enabled" or "Disabled". For additional information about the PCs on your LAN, and the IP addresses allocated to them, use the <i>PC Database</i> option on the <i>Other</i> menu.
<b>No. of DHCP clients</b>	This shows the possible number of Clients as chosen
<b>Starting client addr</b>	The starting IP address to be assigned by the DHCP Server
<b>Firmware Version</b>	
<b>TVP-224HR Version</b>	This displays the firmware version of the TVP-224HR.
<b>Boot Version</b>	The current boot version.

## H.323 Settings Result:

---

- h323 display\_name = Customer
- h323 h245\_term\_type = 60
- h323 rtp\_port\_base = 30000
- h323 out\_fast\_start = off
- h323 in\_fast\_start = off
- h323 h245\_tunneling = off
- h323 cisco\_t38 = on
- h323 callSignalPort = 1720
- h323 nat\_call = on
- h323 call\_name =
- h323 local\_alert = off
- h323 default\_dtmf = H323 V2 Signal
- No Alternate IP Defined!
- h323 gk\_mode = off
- h323 h245\_timeout = 30000
- h323 term\_id =
- h323 gk\_fail =

# Chapter 6

# 6

## Internet Features

*This Chapter explains when and how to use the TVP-224HR's "Internet" Features.*


### Overview

The following advanced features are provided.

- Internet Access Configuration
- DMZ
- Packet filter
- Dynamic DNS
- Special Applications
- Virtual Servers
- Port Forwarding
- Voice QoS

### Internet Access Configuration

The Internet Access menu, has three submenus providing for three different types of internet connection. Fixed IP, DHCP and PPPoE. The first is Fixed IP as shown below.

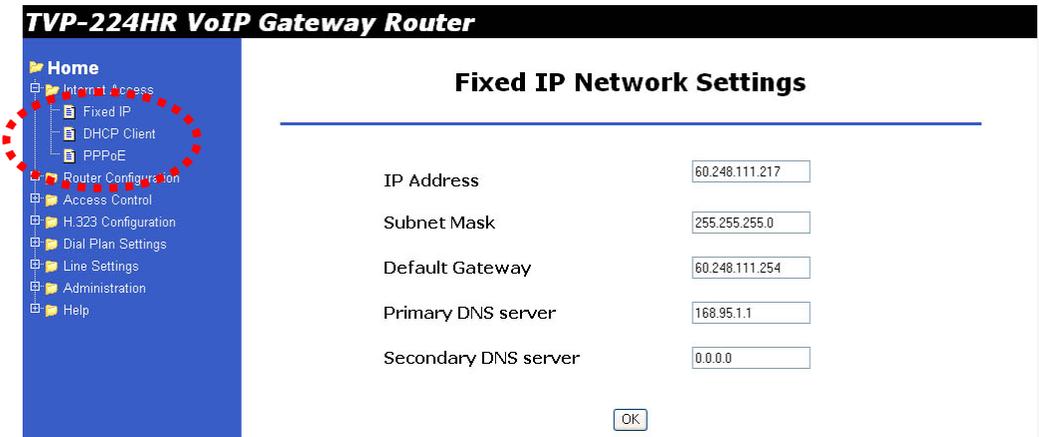

*Figure 18: Internet Access Fixed IP Configuration Menu*

### Fixed / Dynamic IP Address

If your access method is "Fixed IP" (no login), a screen like the following example will be displayed when the "Fixed IP" button is clicked.

## TVP-224HR VoIP Gateway Router

The screenshot shows the configuration interface for a TVP-224HR VoIP Gateway Router. On the left is a blue sidebar menu with the following items: Home, Internet Access (expanded), Fixed IP (selected), DHCP Client, PPPoE, Router Configuration, Access Control, H.323 Configuration, Dial Plan Settings, Line Settings, Administration, and Help. The main area is titled "Fixed IP Network Settings" and contains five input fields: IP Address (60.248.111.217), Subnet Mask (255.255.255.0), Default Gateway (60.248.111.254), Primary DNS server (168.95.1.1), and Secondary DNS server (0.0.0.0). An "OK" button is located at the bottom right of the form.

*Figure 19: Connection Details - Fixed/Dynamic IP Address*

### Data - Fixed/Dynamic IP address Screen

Internet	
<b>IP Address</b>	The IP Address of this device, as seen by Internet users. This address is allocated by your ISP (Internet Service Provider).
<b>Subnet Mask</b>	The Network Mask associated with the IP Address above.
<b>Default Gateway</b>	The IP Address of the remote Gateway or Router associated with the IP Address above.
<b>DNS IP Address</b>	The IP Address of the Domain Name Server which is currently used.
<b>Secondary DNS Server</b>	The IP Address of the Backup Domain Name Server if the primary should fail
Buttons	
<b>OK</b>	Click on Ok once your information has been filled in. You will also have to reboot the device in order for the changes to take effect.

## PPPoE Configuration

If using PPPoE (PPP over Ethernet), a screen like the following example will be displayed when the "PPPoE" button is clicked.

**TVP-224HR VoIP Gateway Router**

- Home
- Internet Access
  - Fixed IP
  - VoIP Client
  - PPPoE
- Router Configuration
- Access Control
- H.323 Configuration
- Dial Plan Settings
- Line Settings
- Administration
- Help

### WAN PPPoE Configuration

Enable PPPoE

Service name

User Name

Password

Idle timeout in seconds

IPCP fixed IP address

Authentication protocol

Transmit bandwidth  kbps

MTU Size  bytes

*Figure 20: PPPoE Configuration Screen*

### Data - PPPoE Screen

Connection	
<b>Enable PPPoE</b>	Yes / No
<b>User Name</b>	User Name as assigned by your ISP
<b>Password</b>	Password as assigned by your ISP
<b>Idle timeout in seconds</b>	An Internet connection is automatically made when required, and disconnected when idle for the time period specified by the "Auto-disconnect Idle Time-out".
<b>IPCP fixed IP address</b>	Default Value: 0.0.0 (Value should only be changed if advised to do so by Technical Support.)
<b>Authentication Protocol</b>	Default Value: pap(Value should only be changed if advised to do so by Technical Support.)
<b>Transmit Bandwidth</b>	Default Value: 0(Value should only be changed if advised to do so by Technical Support.)
<b>MTU Size</b>	<p>MTU (Maximum Transmission Unit) value should only be changed if advised to do so by Technical Support. Enter a value between 1 and 1500.</p> <p>This device will still auto-negotiate with the remote server, to set the MTU size. The smaller of the 2 values (auto-negotiated, or entered here) will be used.</p> <p>For direct connections (not PPPoE or PPTP), the MTU used is always 1500.</p>
Buttons	
<b>OK</b>	After entering data, click on OK to save settings. You will also have to reboot the device to make the settings take effect

## Special Applications

If you use Internet applications which use non-standard connections or port numbers, you may find that they do not function correctly because they are blocked by the TVP-224HR 's firewall. In this case, you can define the application as a "Special Application".

### Special Applications Screen

This screen can be reached by clicking the *Special Applications* submenu located under the *Router Configuration* main menu.

You can then define your Special Applications. You will need detailed information about the application; this is normally available from the supplier of the application. You can also reference the Common Port Setting page.

Also, note that the terms "Incoming" and "Outgoing" on this screen refer to traffic from the client (PC) viewpoint

**TVP-224HR VoIP Gateway Router**

**Special APP Setup**

Index	Active	In Protocol	In Port no.		Out Protocol	Out Port no.		Description
			From	To		From	To	
1	<input type="checkbox"/>	TCP			TCP			
2	<input type="checkbox"/>	TCP			TCP			
3	<input type="checkbox"/>	TCP			TCP			
4	<input type="checkbox"/>	TCP			TCP			
5	<input type="checkbox"/>	TCP			TCP			
6	<input type="checkbox"/>	TCP			TCP			
7	<input type="checkbox"/>	TCP			TCP			
8	<input type="checkbox"/>	TCP			TCP			
9	<input type="checkbox"/>	TCP			TCP			
10	<input type="checkbox"/>	TCP			TCP			

OK

Figure 21: Special Applications Screen

## Data - Special Applications Screen

**Checkbox**  
**Description**  
**Incoming**  
**Ports No**

Use this to Enable or Disable this Special Application as required.

Enter a descriptive name to identify this Special Application.

**Type** - Select the protocol (TCP or UDP) used when you receive data from the special application or service. (Note: Some applications use different protocols for outgoing and incoming data).

**From** - Enter the beginning of the range of port numbers used by the application server, for data you receive. If the application uses a single port number, enter it in both the "From" and "to" fields.

**To** - Enter the end of the range of port numbers used by the application server, for data you receive.

**Outgoing Ports**

**Type** - Select the protocol (TCP or UDP) used when you send data to the remote system or service.

**From** - Enter the beginning of the range of port numbers used by the application server, for data you send to it. If the application uses a single port number, enter it in both the "From" and "To" fields.

**To** - Enter the end of the range of port numbers used by the application server, for data you send to it. If the application uses a single port number, enter it in both the "From" and "To" fields.

**Using a Special Application**

- Configure the *Special Applications* screen as required.
- On your PC, use the application normally. Remember that only one (1) PC can use each Special application at any time. Also, when 1 PC is finished using a particular Special Application, there may need to be a "Time-out" before another PC can use the same Special Application. The "Time-out" period may be up to 3 minutes.



**If an application still cannot function correctly, try using the "DMZ" feature.**

**DMZ**

This feature, if enabled, allows one (1) device / PC on your LAN to be exposed to all users on the Internet.

This allows unrestricted 2-way communication between the "DMZ PC" and other Internet users or Servers.

- This allows almost any application to be used on the "DMZ PC".
- The "DMZ PC" will receive all "Unknown" connections and data.
- If the DMZ feature is enabled, you must select the PC to be used as the "DMZ PC".



**The "DMZ PC" is effectively outside the Firewall, making it more vulnerable to attacks. For this reason, you should only enable the DMZ feature when required.**

**Dynamic DNS (Domain Name Server)**

This free service is very useful when combined with the *Virtual Server* feature. It allows Internet users to connect to your Virtual Servers using a URL, rather than an IP Address. This also solves the problem of having a dynamic IP address. With a dynamic IP address, your IP address may change whenever you connect, which makes it difficult to connect to you.


**The Service works as follows:**

1. You must register for the service at [www.dyndns.org](http://www.dyndns.org) using the dyndns.org domain.
2. After registration, follow the Service Provider's procedure to request a Domain Name, and have it allocated to you.

3. Enter your DDNS data on the TVP-224HR's DDNS screen (shown below).
4. The TVP-224HR will then automatically ensure that your current IP Address is recorded and updated at the DDNS server.  
If the DDNS Service provides software to perform this "IP address update"; you should disable the "Update" function, or not use the software at all.
5. From the Internet, users will be able to connect to your Virtual Servers (or DMZ PC) using your Domain name, as shown on this screen.

## Dynamic DNS Screen

Select *Internet* on the main menu, then *Dynamic DNS*, to see a screen like the following:

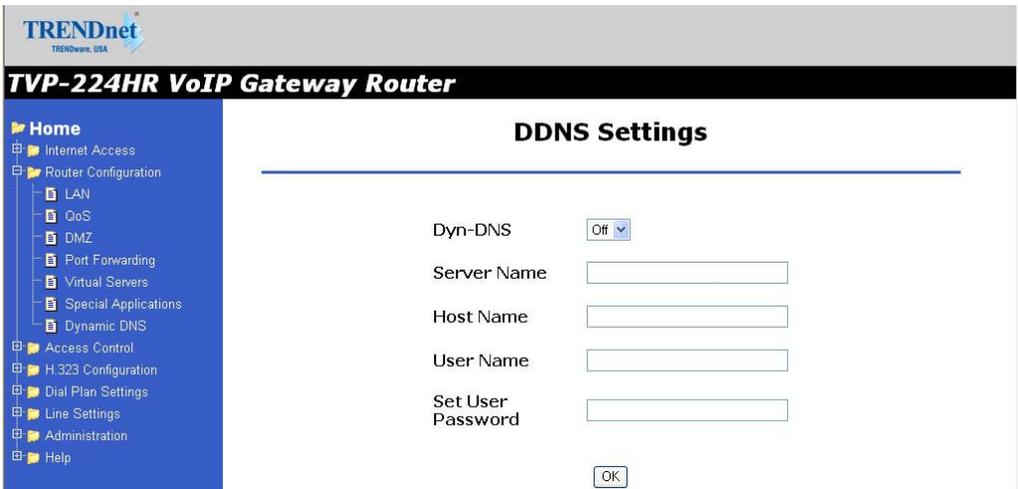

*Figure 22: DDNS Screen*

## Data - Dynamic DNS Screen

DDNS Service	
<b>DDNS Service</b>	<p>You must register for the service at <a href="http://dyndns.org">dyndns.org</a>. Apply for a Domain Name, and ensure it is allocated to you. Details of your DDNS account (Name, password, Domain name) must then be entered and saved on this screen. This device will then automatically ensure that your current IP Address is recorded by the DDNS Service Provider. (You do NOT need to use the "Client" program provided by some DDNS Service providers.) From the Internet, users will now be able to connect to your Virtual Servers (or DMZ PC) using your Domain name.</p>
DDNS Data	
<b>Dyn DNS</b>	On/Off
<b>User Name</b>	Enter your Username for the DDNS Service.
<b>Password/Key</b>	Enter your current password for the DDNS Service.
<b>Domain Name (Hostname)</b>	Enter the domain (hostname) name registered at <a href="http://www.dyndns.org">www.dyndns.org</a> . For instance, if you registered <a href="http://johnsmith.dyndns.org">johnsmith.dyndns.org</a> , please enter


	<b>johnsmith</b>
<b>DDNS Status</b>	This message is returned by the DDNS Server Normally, this message should be something like "Update successful" or "IP address updated". If the message indicates some problem, you need to connect to the DDNS Service provider and correct this problem.

## Virtual Servers / Port Forwarding

This feature allows you to make Servers on your LAN accessible to Internet users. Normally, Internet users would not be able to access a server on your LAN because:

- Your Server does not have a valid external IP Address.
- Attempts to connect to devices on your LAN are blocked by the firewall in this device.

The "Virtual Server" feature solves these problems and allows Internet users to connect to your servers, as illustrated below.

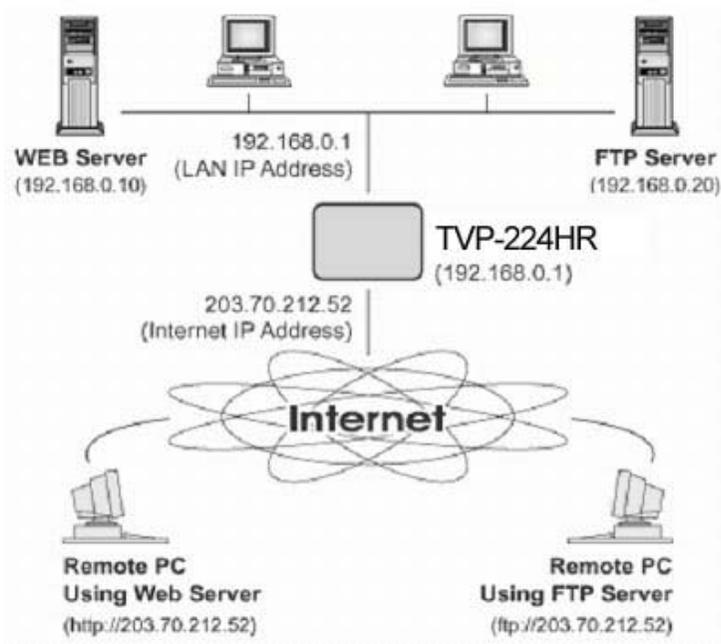

*Figure 23: Virtual Servers*

### IP Address seen by Internet Users

Note that, in this illustration, both Internet users are connecting to the same IP Address, but using different protocols.


**To Internet users, all virtual Servers on your LAN have the same IP Address. This IP Address is allocated by your ISP.**

This address should be static, rather than dynamic, to make it easier for Internet users to connect to your Servers.

However, you can use the *DDNS (Dynamic DNS)* feature to allow users to connect to your Virtual Servers using a URL, instead of an IP Address.

## Virtual Servers Screen

The *Virtual Servers* screen is reached by the *Virtual Servers* link under the *Router Configuration* menu. An example screen is shown below.

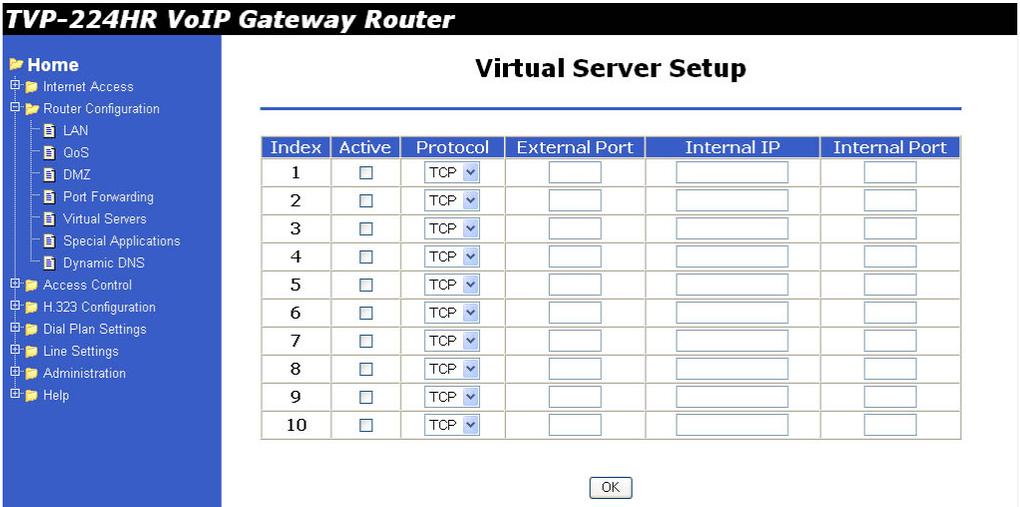

*Figure 24: Virtual Servers Screen*

## Data - Virtual Servers Screen

Virtual Server Data	
<b>Checkbox</b>	Use this to Enable or Disable this Special Application as required.
<b>Protocol</b>	Type - Select the protocol (TCP or UDP) used when you receive data from the special application or service. (Note: Some applications use different protocols for outgoing and incoming data).
<b>External Port</b>	Enter the port number used by the virtual server
<b>Internal IP</b>	Enter the IP Address of the virtual server. The PC must be running the appropriate Server software.
<b>Internal Port</b>	Enter the port number used by the virtual server

## Connecting to the Virtual Servers

Once configured, anyone on the Internet can connect to your Virtual Servers. They must use the Internet IP Address (the IP Address allocated to you by your ISP).

e.g.

`http://203.70.212.52`

`ftp://203.70.212.52`

It is more convenient if you are using a Fixed IP Address from your ISP, rather than Dynamic. However, you can use the *Dynamic DNS* feature, described in the following section, to allow users to connect to your Virtual Servers using a URL, rather than an IP Address.

## Voice QoS

QoS is a popular feature that “guarantees” better service to selected traffic on a network. The goal in configuring QoS is to give priority and attention to certain devices or services so that they can use the maximum available throughput and speed available on a certain network when it is needed.

### Voice QoS Screen

The *Voice QoS* screen is reached by the *Voice QoS* link under the *Router Configuration* menu. An example screen is shown below

TVP-224HR VoIP Gateway Router

- Home
- Internet Access
- Router Configuration
  - LAN
  - QoS
  - DMZ
  - Port Forwarding
  - Virtual Servers
  - Special Applications
  - Dynamic DNS
- Access Control
- H.323 Configuration
- Dial Plan Settings
- Line Settings
- Administration
- Help

### Voice QoS Settings

---

Enable Voice QoS

Assured Bandwidth for Voice:  kbits/sec

Maximum Uplink Bandwidth Allowed (kbits/sec):  ▼

IP TOS  (2 Hex digit byte value)

### Data – Voice QoS Screen

Voice QoS Data	
<b>On / Off</b>	Use this to Enable or Disable Voice QoS functionality as required.
<b>Assured Bandwidth for Voice</b>	<p>Enter the amount of bandwidth you would like to reserve for VoIP packets. To determine how much bandwidth you will require, multiply the number of potential simultaneous connections (channels / ports) by the current codec you are implementing.</p> <p style="margin-left: 20px;">G.711 PCM 64kbps + Packet Header information = 80±5 Kbps</p> <p style="margin-left: 20px;">G.723.1A (5.3, 6.3kbps) + Packet Header information = 10kbps ±2 kbps</p> <p style="margin-left: 20px;">G.729AB (8kbps) = 12 ±4 kbps</p> <p>Default codec is G.729AB. Therefore, if all FXO and FXS ports are being used, (4 Ports) multiplied by the default compression codec G.729AB at 16kbps would yield roughly 72kbps.</p>

<b>Maximum Uplink Bandwidth allowed (kbits/sec)</b>	<p>In the Field you will first have to find your ISP's speed in your contract or on the ISP's webpage.</p> <p>The values for speed are usually given in kilo Bits per second [kb/s] as are the values to be entered into TVP-224HR.</p> <p>If you are given you Maximum Uplink Bandwidth in KB/s, To convert to kilo Bytes simply multiply the kilo Bytes by a value of 8</p> <p>Example:  Maximum Downstream: <math>96\text{KB/s} \times 8 = 768\text{kb/s}</math>  Maximum Upstream: <math>16\text{KB/S} \times 8 = 128\text{kb/s}</math></p>
<b>IP ToS</b>	
<b>Buttons</b>	
<b>OK</b>	Click on this to save data entered.

## Administration

*This Chapter explains Password setup, remote Administration via Telnet or Web Browser firmware Upgrade using TFT as well as Access Control using Packet filters*

### Overview


Normally, it is not necessary to use these screens, or change any settings. These screens and settings are provided to deal with non-standard situations, or to provide additional options for advanced users.

The screens available are:

- Administrative Password** This administrative screen allows you to change your password . It is recommended that you change the default password immediately.
- Remote Admin** This feature allows you to manage the TVP-221HR via the Internet using your Web Browser or Telnet.
- Upgrade Firmware** The firmware (software) in the TVP-221HR can be upgraded using your Web Browser.
- Access Control**

### Administration Password Setup / Login

The Administration Password Page allows you to change your password on the TVP-224HR

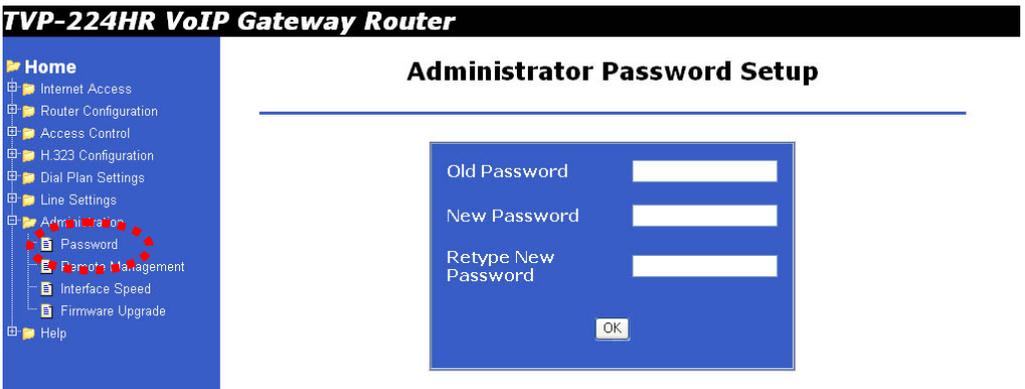

*Figure 25: Administration Password Setup Screen*

## Data – Administration Password Setup

Admin Login	
<b>Old Password</b>	Enter the old password
<b>New password</b>	Enter the new password here. If no password is required, leave this blank. If a password is set, the password will be required in order to change the configuration.
<b>Retype New password</b>	Enter the new password here again. This entry must match the value above.
Buttons	
<b>OK</b>	Click on OK to confirm new password

**Note**

Changes to the password from the Web UI and Telnet are effective immediately unless trying to use the new password set in Web UI and Telnet from Console port. In this case, you would have to reboot the GW before the password would take effect.




**Figure 26: Password Dialog**

Enter the default "User Name" and the "Password" you set on the *Administration Password Setup* screen above.

## Remote Administration

Remote Administration allows you to connect to this interface via the Internet, using your Web browser or Telnet. By default, both services are activated.

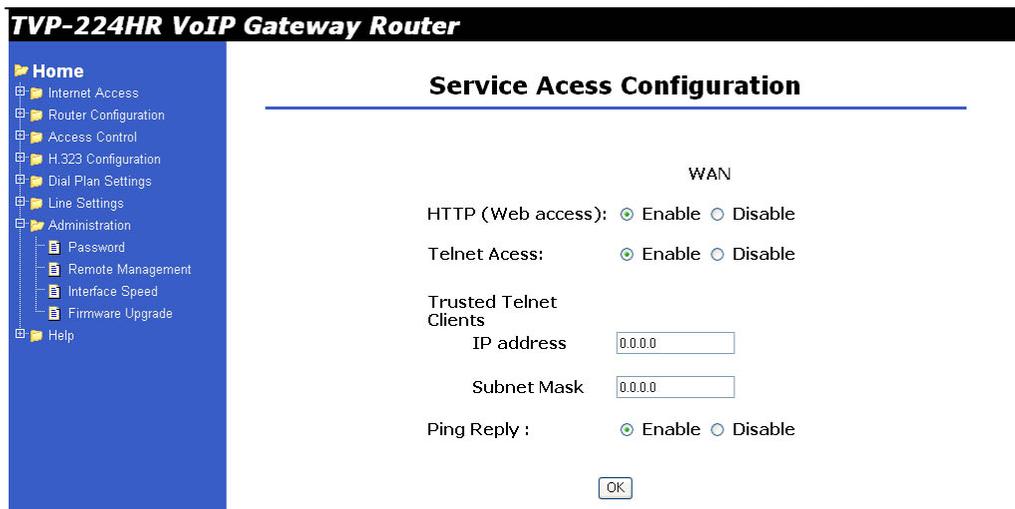

*Figure 27: Remote Administration Screen*

## Data - Remote Administration Screen

Information	
<b>Information</b>	<p>To establish a connection from the Internet:</p> <ol style="list-style-type: none"> <li>6. Enable Remote Administration and configure this screen.</li> <li>7. From a remote location, start your Browser.</li> <li>8. In the "Address" or "Location" field, enter "HTTPS://" (NOT "HTTP//"), the <b>Internet</b> IP address of this device (NOT the LAN IP address), and the port number, as follows: <p style="text-align: center;">HTTPS://ip_address:port_number</p> <p>Where:  ip address is the Internet IP address of this device.  port number is the port number assigned on this screen.</p> </li> <li>9. You should then be prompted for the password for this device. (You must assign a password!)</li> </ol>
Settings	
<b>HTTP</b>	<p>Check this to allow web administration/management via the Internet. (To connect, see above).  If Disabled, this device will ignore management connection attempts from the Internet.</p>
<b>Telnet</b>	<p>Check this to allow Telnet administration/management via the Internet. (To connect, see above).  If Disabled, this device will ignore management connection attempts from the Internet.</p>
<b>IP Address</b>	<p>To manage this device via the Internet, you need to know the IP Address of this device, as seen from the Internet. This IP Address is allocated by your ISP. However, if you are using a Dynamic IP Address, this value can change each time you connect to your ISP. There are 2 solutions to this problem:  Have your ISP allocate you a Fixed IP address.  Use the DDNS feature (Internet menu) so you can connect using a</p>

	Domain Name, rather than an IP address.
<b>Trusted Telnet Clients</b>	This allows you to restrict remote access by IP address. To enable, enter the IP address of the trusted client.
<b>Ping Reply</b>	If enabled, this service allows the TVP-224HR to reply when pinged.

**To connect from a remote PC via the Internet**

1. Ensure your Internet connection is established, and start your Web Browser.
2. In the "Address" bar, enter "HTTPS://" followed by the Internet IP Address of the TVP-224HR. If the port number is not 80, the port number is also required. (After the IP Address, enter ":" followed by the port number.)  
e.g.


HTTPS://123.123.123.123:8080

This example assumes the WAN IP Address is 123.123.123.123, and the port number is 8080.

**Upgrade Firmware**

Use this screen to upgrade your TVP-224HR's firmware.

- You must download the required firmware file, and store it on a TFTP Server.
- During the upgrade process, all existing Internet connections will be terminated.
- The upgrade process must NOT be interrupted!.

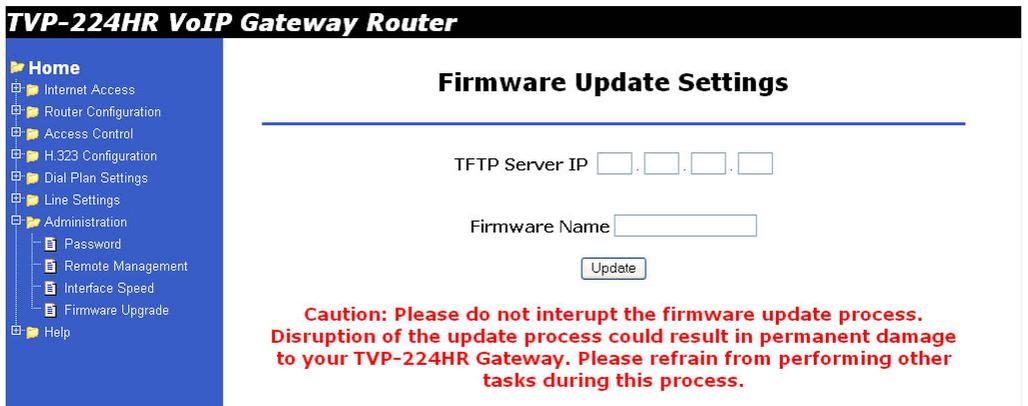

*Figure 28: Upgrade Firmware Screen*

**Data – Upgrade Firmware Screen**

Upgrade Firmware	
<b>Upgrade File</b>	Click the "Browse" button and browse to the location on your TFTP Server where you stored the firmware upgrade file. Select this file.
<b>TFTP Server IP</b>	Enter the IP address of the TFTP Server.

<b>Update</b>	Click this button to start the Firmware upgrade. Note than any users accessing the Internet via the TVP-224HR will lose their connection. When the upgrade is finished, the TVP-224HR will restart, and this management connection will be unavailable during the restart.
<b>Cancel</b>	Cancel does NOT stop the Upgrade process if it has started. It only clears the input for the "Upgrade File" field.

### To perform the Firmware Upgrade:

1. Click the "Browse" button and navigate to the location of the upgrade file.
2. Select the upgrade file. It's name will appear in the *Upgrade File* field.
3. Click the "Update" button to commence the firmware upgrade.



**Note!**

**The TVP-224HR is unavailable during the upgrade process, and must restart when the upgrade is completed. Any connections to or through the TVP-224HR will be lost.**

## Access Control

This feature is accessed by the navigating to the *Access Control* menu.

The Access Control feature allows administrators to restrict the level of Internet Access available to PCs on your LAN. With the default settings, everyone has unrestricted Internet access.

### To use this feature:

1. Set the desired restrictions on the "Default" group. All PCs are in the "Default" group unless explicitly moved to another group.
2. Set the desired restrictions on the other groups ("Group 1", "Group 2", "Group 3" and "Group 4") as needed.
3. Assign PC to the groups as required.



**Note!**

**Restrictions are imposed by blocking "Services", or types of connections. Common Services have not been re pre-defined. Please see common port assignment for reference to common services.**

## Access Control Screen

To view this screen, select the *Access Control/Groups* link from the main menu.

**TVP-224HR VoIP Gateway Router**

**Workgroup Setting Menu**

The Access Control feature allows administrators to restrict specific service or Internet Access by individual PCs. These restrictions apply only to traffic on the WAN port; local (LAN) traffic is not affected.

Select a Workgroup number

Description

Operation  Address type

Address

*Figure 29: Access Control Screen*

## Data - Access Control Screen

Group	
<b>Workgroup Number</b>	Select the desired Group. Groups are named "Default", "Group 1", "Group 2", "Group 3" and "Group 4", and cannot be re-named.
<b>Description</b>	Enter the reference name / description of the workgroup.
<b>Address Type IP or MAC Address</b>	Use the Add/Delete/list scroll with the IP or MAC address field to create a group. If the current group is "Default", then members can not be added or deleted. This group contains PCs not allocated to any other group. To remove PCs from the Default Group, scroll to delete and enter the IP or MAC address you wish to delete To assign PCs to the Default Group, delete them from the Group they are currently in
Buttons	
<b>OK</b>	Click on OK to confirm new data

After creating a group, you can start populating the group with packet filter restrictions. Below, please see the Packet Filter Screen.

**TVP-224HR VoIP Gateway Router**

- Home
- Internet Access
- Router Configuration
- Access Control
  - Workgroup
  - Packet Filter Table
- H.323 Configuration
- Dial Plan Settings
- Line Settings
- Administration
- Help

**Packet Filter Setting Menu**

This feature allows you to define packet filters; You may define what kind and which range of packets should be blocked (discarded).

Select a Workgroup number

Operation  Protocol type

Blocked Port Range

From  To

**Packet Filter**

<b>Workgroup Number</b>	Select the group you wish to apply the filter too
<b>Add/Delete/List</b>	Pick the operation you would like to perform to the IP or MAC address
<b>TCP/UDP/Both</b>	Choose the protocol you would like to filter
<b>Block Range Port</b>	Enter the port you would like to block. See below for common port assignments

**Common Port Assignment**

These are common services / applications and the ports they use for network access.

Services	Notes	Port Numbers
HTTP		80
FTP		21
TELNET		23
POP3		110
SMTP		25
mIRC		None
NTP		123
PPTP		1723
Applications	Notes	Port Numbers
AOL		5190 - 5193
AOL Instant Messenger (AIM)		5190
AOL ICQ		5190, dynamic > 1024
<a href="#">ICQ Firewall Settings</a>		
BAYVPN		500
CarbonCopy32		1023 - 1680
CITRIX		1494
Cu-SeeMe	Cornell 1.1	7648
Direct Connect		375 - 425
FW1VPN		259

ICQ	For file transfer: <b>ICQ</b> -> <b>Preference &gt; Connections &gt; Firewall</b> . Set timeout to 80 seconds.	None for chat
IPTV	Cisco IPTV 2.0.0	None
Laplink		1547
Lotus Notes		1352
MSN Messenger (Including Voice)	<a href="#">See this Microsoft Link for detailed info, including Windows 2000 Problems</a>	6901& 6891-6900
<a href="#">NetMeeting</a>	NetMeeting 2.1 and 2.11	1720
<a href="#">How to Establish NetMeeting Connections Through a Firewall</a>		1503
PC Anywhere	Host must be on the LAN side and set.	22
		5631 - 5632
RealPlayer	RealPlayer G2	None
Remote Anything		3996 - 4000
Shiva VPN	Set the mobile option to be your public IP address.	2233
Virtual Network Computing		5500
		5800
		5900
VDOLive		None
Vonage VoIP Phone Service		5060 - 5070
		10000 - 25000
<b>Games</b>	<b>Notes</b>	<b>Ports</b>
Age of Empires II		23978
Aliens vs. Predator		80
		2300 - 2400
		8000 - 8999
Asheron's Call	May need to open MSN DX ports.	9000 - 9013
Baldur's Gate		15000
Black and White		2611 - 2612
		6500
		6667
		27900
Civilization 3	<a href="#">Consult this page (You'll have to click through an ad.)</a>	80
		6500
	Civilization Conquests users should also consult the manual, starting p. 47.	6667

		13139
		27900
		28900
		29900
		29901
Dark Reign 2		26214
Delta Force		3100
		3568
		3999
Dune 2000		1140 - 1234
		4000
Dungeon Siege		19271
Elite Force		26000
		27500
		27910
		27960
Everquest		1024 - 6000
		7000
F-22 Lightning 3		4533 - 4660
Fighter Ace II		50000 - 50100
Fighter Ace II (DX)		2300 - 2400
		47624
		50000 - 50100
Half Life		27015
Heretic II		28910
Hexen II	Each computer must use a different port number. Add 1 for each player starting with 26900.	26900 (+1 for each player)
KALI	Each computer must use a different port number. Add 1 for each player starting with 2213.	2213 (+1 for each player)
		6666
MSN Game Zone		6667
		28800 - 29000
MSN Game Zone (DX)		2300 - 2400
		47624
Myth		3453
Need for Speed		9442
Need for Speed 3		1030
Outlaws		5310

Quake III	Each computer uses a different port number. Add 1 for each player starting with 27660.	27660 (+1 for each player)
Rainbow Six		2346
Rogue Spear		2346
StarCraft		6112
Tiberian Sun		1140 - 1234
		4000
Ultima		5001 - 5010 Game
		7775 - 7777 Login
		8888, 9999 Patch
		8800 - 8900 Messenger
		7875 Monitor
Unreal Tournament	Need to modify the [UWeb.WebServer] section of the server.ini file: Set ListenPort to 8080; Set ServerName to the Public IP of your router.	7777 (game)
		7778 (server)
		7779 - 7783 (UdpLink)
		27900 (server query)
		8080 (UT Server Admin)
XBox	<a href="#">There are known problems with XBox Live Network, see Cannot Log On XBox with Router</a>	88
		3074
		(XBox incorrectly says this is unnecessary in all cases.)



**PCs not assigned to any group will be in the "Default" group.  
PCs deleted from any other Group will be added to the "Default" group.**

## Chapter 8

# TVP-224HR Telephony

## Concepts

*The TVP-224HR enables the transmission of voice and fax traffic over any IP network by digitizing voice and fax signals, encapsulating the information within IP packets, and then sending the packets across the IP network*

### 8.1 How the TVP-224HR Operates

1. The TIM inside the TVP-224HR digitizes analog voice signals at 8 Kbps.
2. TVP-224HR system software handles the:
  - Capture of telephone number presented as DTMF tones.
  - Mapping the telephone number to the IP address of remote VoIP Gateway.
  - Setting up calls with remote TVP-224HRs utilizing H.323 call control protocol.
  - Digitizing, compressing and encapsulating the voice into IP packets and transmission of the IP packets onto the Ethernet LAN.
3. The TVP-224HR router forwards the IP packets across the WAN, where they will be received by another VoIP Gateway at the remote.
4. The process is reversed at the remote VoIP Gateway.

### 8.2 ATPM

To allow you to easily dial a telephone or fax on the network, the TVP-224HR maps a series of dialed digits to the IP address of the remote TVP-224HR whose phone or fax you are calling. This mapping information is contained in a database inside each TVP-224HR called the dial plan.

Based on the dial plan, the Address Translation and Parsing Manager (ATPM) inside the TVP-224HR maps telephony numbers to IP addresses of remote VoIP Gateways. The ATPM collects telephone number dialed by users, decides whether the dial string is part of the dial plan and, if it is, maps it to a remote TVP-224HR / TVP-224HR. When the call is set up to the destination, a sub-string of the original dial string will be sent along to the remote VoIP Gateway.

### 8.3 Destination

The destination is where a call is terminated. Typically, for inbound calls from the IP network, the TVP-224HR terminates the call at one of the telephony ports. The

destination for the call is the telephony port where the call terminated. For calls initiated from telephony ports, the TVP-224HR forwards the call to a remote TVP-224HR/TVP-224HR via IP network, and the remote TVP-221H/TVP-224HR terminates the call. The destination of the call is the remote TVP-224HR/TVP-224HR.

## 8.4 Hunt Group

Instead of directly mapping a phone number to a destination, the ATPM first maps the phone number to a group of destinations known as a Hunt Group. A hunt group is a group of destinations that are equivalent. For example, the customer support group of a company might have 20 people who can handle support calls. Access to customer support is through a single phone number but the next available support person is actually connected upon each incoming call. These 20 phones would be configured as a hunt group. A hunt group consists of a phone number and a list of destinations (members of the group). When an incoming phone number matches the phone number of the hunt group, the TVP-224HR attempts to terminate the call at each of the destinations in the hunt group, one at a time until a call is successfully completed.

Every destination that can be reached by dialing a phone number is a member of at least one hunt group. When an address is presented to ATPM for lookup, the output is a hunt group ID number. As a second step, the hunt group ID is presented to ATPM to get the list of members. To effectively bypass the hunt group feature, simply assign a unique hunt group number to a single destination. In effect, the Hunt Group will just have this one member.

## 8.5 Dial Plan

The dial plan is a database inside the TVP-224HR that allows the ATPM to map telephone numbers dialed to IP addresses of remote VoIP Gateways. The dial plan consists of three tables; destination table, hunt group table and the address table. Users need to setup these tables in order for the TVP-224HR to process calls to remote VoIP Gateways.

### Address Table

The address table maps a phone number to a hunt group. The table contains entries that specify the following information:

- Telephone number
- The hunt group the phone number maps to.
- The minimum number of digits to collect before the ATPM starts address lookup.
- The maximum number of digits the ATPM collects before it considers the dial string is complete.
- Number of digits forwarded to the destination.

- Address table sample:

Address Entry	Hunt Grp_Id	Min. Digits	Max. Digits	Prefix strip	Prefix Address
201	3	3	3	3	None
301	4	3	3	3	None
8	1	3	3	0	None
0	1	1	1	0	None
20	11	5	5	2	None

## Hunt Group Table

The hunt group table maps a hunt group to a list of destinations. Hunt group sample

Hunt Group ID	Hunt Type	# of Dest ID(s)	Dest. ID(s)
1	2	1	1
3	2	1	3
4	2	1	4
11	2	1	11

## Destination Table

The destination table maps a destination to a telephony port or the IP address of a remote TVP-224HR.

Destination table sample

Dest ID	Mode	Destination
1	Local	Port = 0
3	Local	Port = 2
4	Local	Port = 3
11	H.323	Dest = 192.168.0.55/1720 TCP

## 8.6 DTMF Relay

Voice from PSTN is compressed by the TVP-224HR before it is sent across the IP network and then decompressed by the destination VoIP gateway. The voice codecs supported by the TVP-224HR are designed for ideally compressing and decompressing human voice. If the compression / decompression process is performed on DTMF tone which needs to be conveyed across IP network, distortion might be too significant to be cognizable on the receiving end. To overcome the shortcoming that the voice codecs may have encoding DTMF tone, the TVP-224HR encodes DTMF tone into special packets. The packets are then sent to the destination VoIP Gateway via a separate IP connection. The destination VoIP Gateway decodes the packets, generates the DTMF tone, and then sends the

tone to the PSTN. This method in which the TVP-224HR handles DTMF tone is so called DTMF relay.

The TVP-224HR handles DTMF relay per H.323 specifications. Certain third party VoIP devices may handle DTMF relay per IMTC standard. For the TVP-224HR to interoperate with those VoIP devices, users need to specify which remote VoIP devices uses IMTC conforming DTMF relay technique. Refer to CLI command Error! Reference source not found. on Chapter 8 for detailed information on how to select DTMF relay mode.

## 8.7 Voice Codecs

Voice codecs supported by the TVP-224HR include G.711, G.723.1 5.3kbps, G.723.1 6.3kbps and G.729 AB. When setting up a call, two VoIP Gateways automatically negotiate with each other until an agreement on codec is determined.

## Chapter 9

# Configuring VoIP from a Web Browser

*This chapter explains procedures for configuring the TVP-224HR from a web browser.*

### 9.1 HTTP setting mode


This section describes the processes for setting up the VoIP Gateway once it has been installed. Java enabled browsers including Microsoft Explorer version 4 or higher, or Navigator version 4.5 or higher can be used in this section to view and change parameters.

In the *Address* box, enter the following:

1. <http://192.168.0.1> (This is the default IP in the gateway from factory)
2. Press enter to confirm and you should find the screen below.



3. The User name is **admin** (all lower case). Password is **123**. Both **admin** and **123** are default strings from factory. For security reasons, please change and memorize the new password after this first setup.
4. Click "OK". The main screen will appear as below.

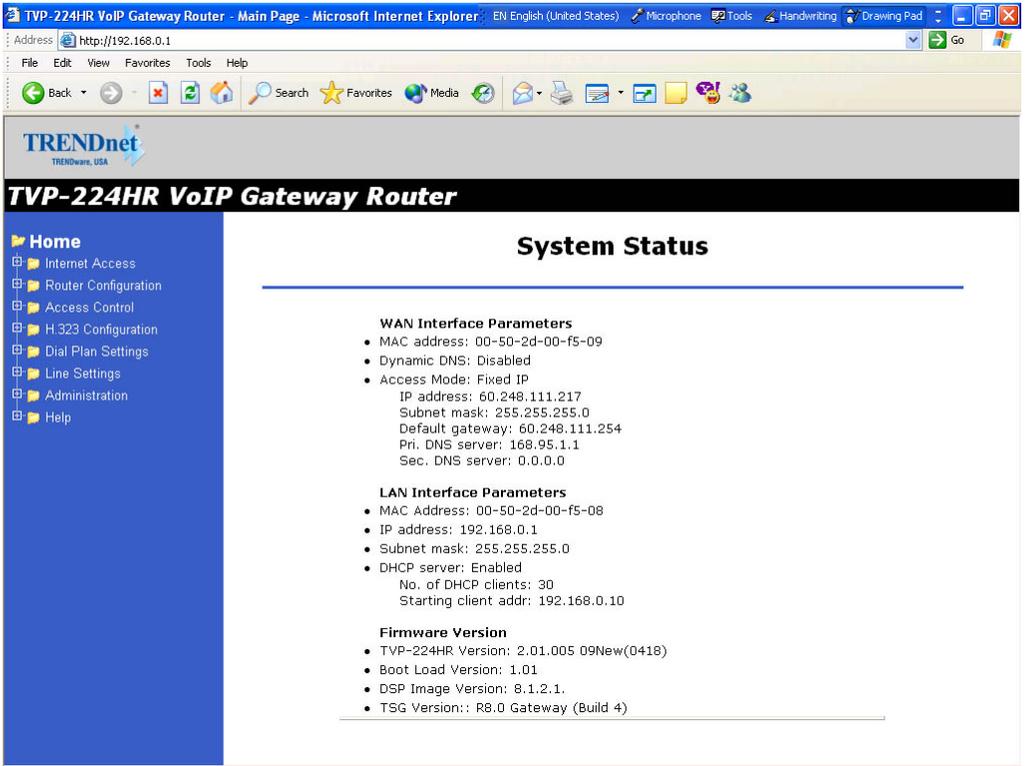

## Main Menu Function Briefings

<b>Home</b>	View System Status
<b>H.323 Configuration</b>	Set H.323 Parameters
<b>Dial Plan Settings</b>	Links to dial plan setting / entry / store / clear / restore pages. You should complete the dial Plan work sheets before working in this menu.
<b>Line Settings</b>	Set Line Settings including Channel Status, Codec Selection, Common Parameters, Channel Parameters and Telephony Ports
<b>Administration</b>	Set Password, Telnet Access, Interface Speed
<b>Status</b>	View current System Status
<b>Help</b>	Definitions of Graphical User Interface Terms and Parameters for Dial Plan Setup, H.323 Configurations, DDNS
<b>Manual</b>	Link to Trendware FTP Website, online

## System Status

### Select *Home*

In order to view the System Status page, please **navigate** to *Home*.

The System Status page will display the following parameters:

#### Firmware Version

- TVP-224HR VoIP Gateway Version:
- Boot Loader Version:
- RTOS Version:
- H.323 Stack Version:
- DSP image Version:
- TSG Version:

#### LAN Interface Parameters

- IP precedence:
- Ethernet MAC address:
- IP address:
- Subnet mask:
- Default gateway:

## 9.2 H.323 Configuration

### H.323 Status Page

This page lists all current settings for H.323 Parameters.

**TRENDnet**  
TRENDnet USA

**TVP-224HR VoIP Gateway Router**

Home

- Internet Access
- Router Configuration
- Access Control
- H.323 Configuration
  - H.323 Status Page
  - H.323 Parameters
  - H.323 Gatekeeper
  - H.323 Aliases
- Dial Plan Settings
- Line Settings
- Administration
- Help

**H.323 Settings Result:**

- h323 display\_name = Customer
- h323 h245\_term\_type = 60
- h323 rtp\_port\_base = 30000
- h323 out\_fast\_start = off
- h323 in\_fast\_start = off
- h323 h245\_tunneling = off
- h323 cisco\_t38 = on
- h323 callSignalPort = 1720
- h323 nat\_call = on
- h323 call\_name =
- h323 local\_alert = off
- h323 default\_dtmf = H323 V2 Signal
- No Alternate IP Defined!
- h323 gk\_mode = off
- h323 h245\_timeout = 30000
- h323 term\_id =
- h323 gk\_fail =

## H.323 Parameters

For the most part end users will not be using these functions / features and / or should use the default settings. For more information please see the Advanced User Manuals or consult with your Systems Integrator

**TRENDnet**  
TRENDnet USA

**TVP-224HR VoIP Gateway Router**

Home

- Internet Access
- Router Configuration
- Access Control
- H.323 Configuration
  - H.323 Status Page
  - H.323 Parameters
  - H.323 Gatekeeper
  - H.323 Aliases
- Dial Plan Settings
- Line Settings
- Administration
- Help

**H.323 General Parameter Settings**


- **Display Name:**  
  
 (All blanks between words entered will be replaced by under-scores)
- **Terminal Type (0~255):**
- **RTP Port Base (must be an even number):**
- **Outgoing Fast Start Mode:**

1. **Display Name:** The default string is "Customer".  
This field is to set the display name information that is carried in the H.323 setup messages. Up to 48 characters can be entered.
2. **Terminal Type:** The default value is 60.  
This field is to set the H.245 terminal type, which is used as part of the master/slave determination process of H.245. Typically, setting a value of less than 50 will force slave operation, and a value of greater than 200 will force the master operation. For more details, please refer to H.323-related standard documents.
3. **RTP Port Base:** The default value is 30000.  
This field is to select the starting port number for assignment of RTP and RTCP ports. According to the H.323 specification, RTP port number should be even in value, and the RTCP port number should be one greater than the RTP port. Typically, numbers from 0 to 1023 are reserved on most systems.

4. **Outgoing Fast Start:** The default setting is off.  
This field is to enable or disable the Fast start mode on the outgoing side of the link.
5. **Incoming Fast Start:** The default setting is off.  
This field is to enable or disable the Fast start mode on the incoming side of the link. You'll have to reboot the system to make your changes active!  
Frame Rate = 2 frames/packet
6. **Auto-Answer:** Enables quick H.225 to H.245 transition without waiting for receiver picking up the phone, default is on
7. **NAT Call Mode:** Enables calls from remote sites which use NAT routers with private IP networks behind, default is on
8. **Default DTMF Mode:** H323 V2 Signal or IMTC. The default is H323 V2 Signal
9. **DNS IP Address**
10. **Alternate DTMF IP Address**
11. **DTMF Duration:** default is 300

## Gatekeeper

This page is home to many specific H.323 Gateway / Gatekeeper functions / features. For the most part end users will not be using these functions / features and / or should use the default settings. For more information please see the Advanced User Manuals or consult with your Systems Integrator. The primary function of the gatekeeper component is to provide address translation services. This function converts external (telephone number) addresses and alias (name) addresses to network addresses, allowing users to maintain the same telephone numbers or alias addresses regardless of changes to their network addresses.

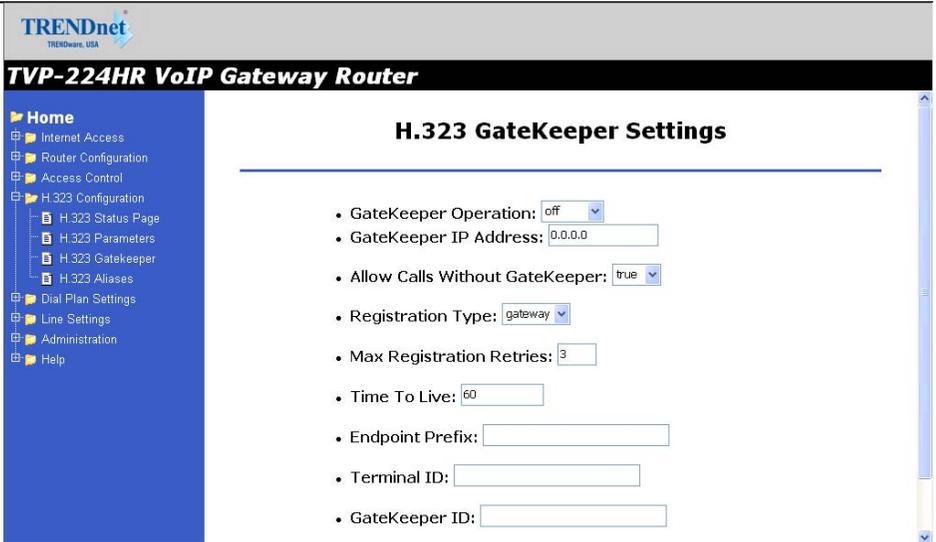

1. **Gate Keeper Mode:** The default setting is off. This field is to select the co-operation mode with some other gatekeeper(s). Three options are available:
  - i. Off: Disables gatekeeper co-operation,
  - ii. Auto: Enables auto-discovery of the gatekeeper
  - iii. Manual: Enables gatekeeper co-operation in manual operation (the gatekeeper address must be properly assigned).

**The following fields must be filled in when Gate Keeper Mode is set to either auto or manual.**


2. **Gate Keeper Address:** Specify the gatekeeper address when configured to manual mode. When auto mode is desired, this field should be set to auto
3. **Allow Calls Without Gate Keeper:** This field is to inform the H.323 stack to allow calls when the endpoint is not registered with a gatekeeper.
4. **Registration Type:** This field is to set the endpoint registration type. This specifies how the endpoint will register itself with the gatekeeper.
5. **Max Registration Retries:** This field is to control how many registration attempts will be made before the endpoint considers itself to have failed registration.
6. **Time To Live:**
7. **Endpoint Prefix:** This command is used to set the H.323 prefix that the TVP-224HR uses when registering to an H.323 gatekeeper.
8. **Terminal ID:** To specify GW's ID.

9. **GateKeeper ID:** To specify Gate Keeper's ID.

You'll have to **reboot** the system to make your changes take effect!

## Aliases

For the most part end users will not be using these functions / features and / or should use the default settings. For more information please see the Advanced User Manuals or consult with your Systems Integrator

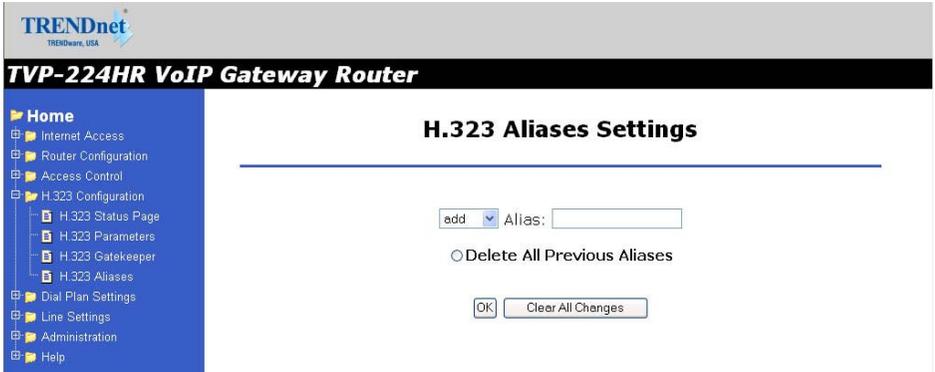


**Alias:** This field is to create or delete aliases that are registered with the gatekeeper.

The primary function of the gatekeeper component is to provide address translation services. This function converts external (telephone number) addresses and alias (name) addresses to network addresses, allowing users to maintain the same telephone numbers or alias addresses regardless of changes to their network addresses.



## 9.3 Dial Plan Settings

### Dial Plan Setup

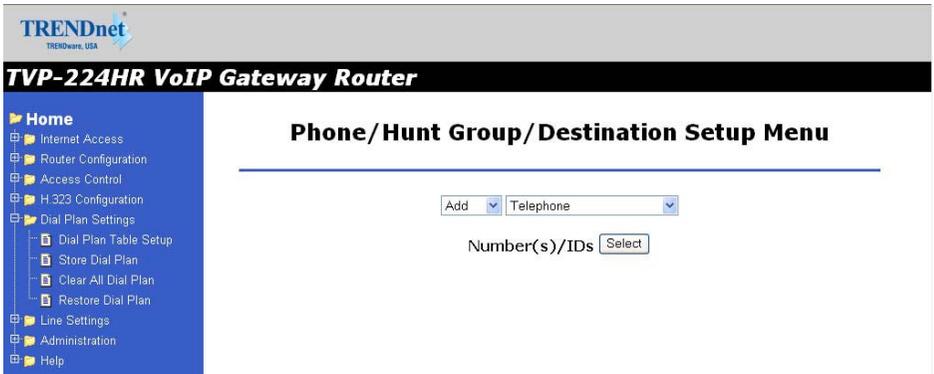

Using the function scroll bar on the right, you are able to Add, Delete, Find or List data to/from one of 3 tables (While it may appear that there are 5 tables, Remote Destination IP, Remote\_Host\_Name, and Local\_Destination\_Channel are all part of the Destination Table).

The following are the three tables:

1. **Telephone Table**
2. **Hunt Group Table**
3. **Destination Table**
  - a. Remote Destination  
(IP takes precedence over Hostname)
  - b. Destination - Remote\_Host\_Name  
(IP takes precedence over Hostname)
  - c. Destination - Local\_Destination\_Channel

### Telephone Number Table

1. From Navigation Bar, **Select** Dial Plan Settings / Dial Plan Table Setup.
2. The default values are **Add** and **Telephone**. Click on **Select**. The following window will appear.

**TRENDnet**  
TRENDSWARE USA

**TVP-224HR VoIP Gateway Router**

**Home**

- Internet Access
- Router Configuration
- Access Control
- H.323 Configuration
- Dial Plan Settings
  - Dial Plan Table Setup
  - Store Dial Plan
  - Clear All Dial Plan
  - Restore Dial Plan
- Line Settings
- Administration
- Help

**Add Telephone Numbers**

- Telephone Number 0:
- Hunt Group ID:
- Min. Digits:
- Max. Digits:
- Strip Length:
- Append Prefix:

[More Entries for The Same Hunt Group](#)

From this window, we can Add / Delete / Find or List desired telephone numbers and map them to a hunt group.

Parameter	Description
Telephone Number	Telephone number to match. This is only part of the total dialed string.
Hunt Group ID	For each hunt group ID, you need to assign it a unique identifier between 0 and 99.
Min. Digits	Minimum number of digits to be collected before the ATPM starts matching the dialed string with entries in the address table.
Max. Digits	Maximum number of digits to be collected before the ATPM starts matching the dialed string with entries in the address table.
Strip Length	The number of digits to be stripped at the beginning of the collected dial string before forwarding the string to the destination.
Append Prefix	(Optional) Digit(s) to be added to the beginning of the collected dialed string before forwarding it to the destination.

## Hunt Group Table

- From Navigation Bar, **Select** Dial Plan Settings / Dial Plan Table Setup.
- The default values are **Add** and **Telephone**. Change Telephone to Hunt Group and Click on **Select**
- A screen will appear showing the following page:

The screenshot shows the 'Add Hunt Group IDs' configuration page. On the left is a navigation menu with 'Dial Plan Settings' expanded to 'Dial Plan Table Setup'. The main content area has the title 'Add Hunt Group IDs' and contains the following fields and buttons:

- Hunt Group ID:
- Destination ID 0:
- More Destinations for The Same Hunt Group:
- Complete
- Clear All Changes

From this window, we can Add / Delete / Find or List the desired hunt group ID and map it to a destination ID.


## Destination ID Table

1. From Navigation Bar, **Select** Dial Plan Settings / Dial Plan Table Setup.
2. The default values are **Add** and **Telephone**. Change Telephone to Hunt Group and Click on **Select**
3. A screen will appear showing the following page:

The screenshot shows the 'Add Remote Destination ID' configuration page. On the left is a navigation menu with 'Dial Plan Settings' expanded to 'Dial Plan Table Setup'. The main content area has the title 'Add Remote Destination ID' and contains the following fields and buttons:

- Destination ID:
- IP Address:  or Host Name:
- Note: If both IP Address and Host Name are defined, only IP Address will be recognized.**
- Company/Location:
- Complete
- Clear All Changes

The Destination ID is either a Remote Destination IP (or Hostname but not both) or a Local Destination Channel. Please note that if a Remote Destination IP and a Hostname is specified, the Remote Destination IP takes precedence.

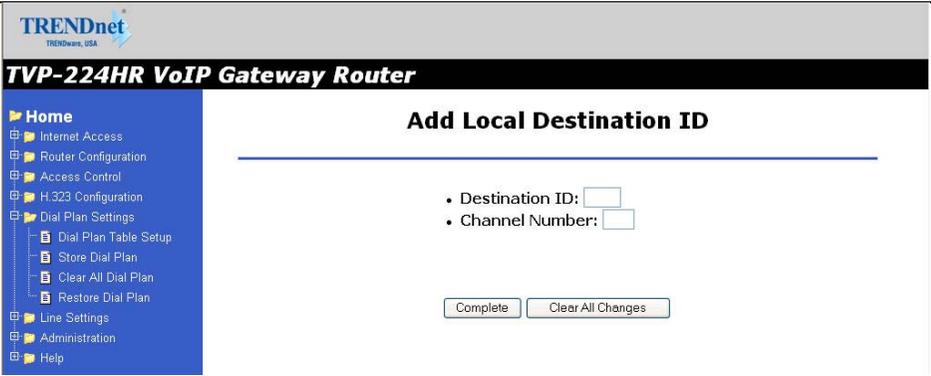


Each telephony port of the TVP-224HR must be assigned a unique destination ID. Fill out the worksheet for local destinations by designating each port a unique destination ID,

## 9.4 Dial in PLAR / CID

### Data – Dial in PLAR / CID Screen

DDNS Service	
<b>PLAR Address</b>	Enter PLAR Address which could be any destination telephone number already entered into the dial plan. This programs the gateway to automatically connect you to that number. This port will not be able to dial any other numbers when PLAR is used.
<b>CID – Number and Name</b>	This is a separate feature to PLAR. If you would like to have the Caller's Identification including Number and Name forwarded to the recipient, please provide the information in the provided fields.
Buttons	
<b>OK</b>	On/Off

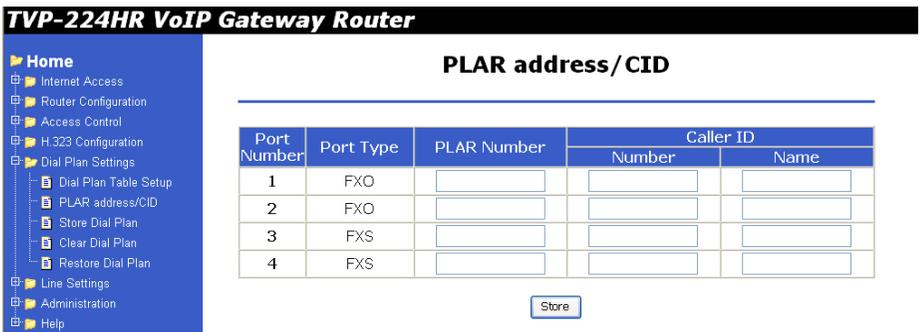

Private-line automatic ringdown (PLAR) circuits have statically configured endpoints and do not require the user dialing to connect calls. The PLAR feature provides an easy method to create a switched Voice over IP (VoIP) call without digit dialing. PLAR connections are often referred to as a "bat-phone" or "hotline" type of application. This is when a phone goes off-hook

---

and a remote phone rings without digits being dialed. This is a useful tool for customer requirements such as:

- The provision of an Off-Premises eXtension (OPX) from a private branch exchange (PBX). Connection PLAR allows remote users on Foreign Exchange Station (FXS) ports to look to a central PBX like physical extensions.
- The provision of dial-tone from a remote PBX. Many customers want to offer toll-bypass VoIP services without having the routers provide dial-tone or change their existing dialplan. This allows stations at remote sites to look like they are physically connected stations to a PBX.

### Dial in PLAR Considerations and Limitations

- Dial in PLAR is a switched VoIP call. The call is setup on an as-needed basis. With connection PLAR, no bandwidth is consumed while the phone is on hook. When a phone connected to a POTS dial peer is taken off-hook, the call is automatically connected and the remote phone begins to ring.
- Dial in PLAR can work between any type or combination of Foreign Exchange Office (FXO), and/or FXS) telephony port / device.
- Dial in PLAR does not collect digits from the connected Telephony device. Once a dial plan has been entered into the ATPM, PLAR can be enabled without need to alter the dial plan. Note: All other Dial plans set for this starting port will become ineffective.

## 9.5 Store Dial Plan

**Store Dial Plan** - will store the Dial Plan from DRAM / Working Memory to Flash / Non-Volatile Storage

Always be sure to **Store**, the Dial Plan from working memory / DRAM to Flash Memory / Non-Volatile Storage. Storing to Non-Volatile Storage ensures that you have saved the dial plan which can then be restored on request.

**Note:** The Dial Plan in the Non-Volatile Storage is not the working Dial Plan. If the Gateway is turned off for what ever reason, the Dial Plan from Non-Volatile Storage is copied into the Flash / Working memory and processes phone calls accordingly

## 9.6 Clear Dial Plan

**Clear Dial Plan** - Will clear the Dial Plan from DRAM / Working memory.

---

DRAM – Everytime you make an entry into the Address Table, Hunt Group Table or Destination ID table, you have to **Click** on *Complete*. This only saves the plan to the working memory / DRAM. If there was a power outage or the TVP-224HR was unplugged or a system crash for what ever reason, the Dial Plan in working memory / DRAM will be lost.

## 9.7 Restore Dial Plan

**Restore Dial Plan** - Will retrieve the Dial Plan from Flash Memory / Non-Volatile Storage but erase the dial plan currently in DRAM / Working memory.

**Note:** To ensure your new settings are actually accepted, please check the configuration page carefully after you submit the new settings. If the new settings are not present, it probably conflicts with the old settings. or there is not enough space to store your settings.

## 9.8 Line Settings

### Channel Status

View all settings made to each Channel (port). Simply **Select** the Channel (0-3) and **Click** on *View*

### Codec Selection

**Select** the codec of your preference.

- G.711 PCM 64kbps (A-law and  $\mu$ -law)
- G.723.1A ACELP/M-MLQ (5.3, 6.3kbps)
- G.729AB CS-ACELP (8kbps)

### Common Parameters

Common Parameters is found under Common Settings and allots the amount of time given to each step of the dial process.

The screenshot shows the web interface of the TVP-224HR VoIP Gateway Router. On the left is a blue navigation menu with the following items: Home, Internet Access, Router Configuration, Access Control, H.323 Configuration, Dial Plan Settings, Line Settings (expanded), Channel Status, Codec Selection, Common Parameters, Channel Parameters, Telephony Ports, Administration, and Help. The main content area is titled "Common Settings" and contains the following configuration fields:

- Total Dial Time:  ms
- First Digit Wait Time:  ms
- Inter Digit Wait Time:  ms
- Termination Digit:

Below the fields are two buttons: "Save The Changes" and "Clear All Changes". Underneath, it states "Current Common Parameter Settings Are:" followed by "System Info: Total dial time = 30000ms, First digit wait = 10000ms, Interdigit wait = 5000ms, Dial term digit = None".

## Total Time

The total amount of time you have to enter a telephone number (Default 30000ms)

## First Digit Wait Time

The amount of time you have to enter your first digit (Default 10000ms)

## Inter Digit Wait Time

The amount of time you have between each digit entered (Default 5000ms)

## Termination Digit

A special number which tells the gateway that you have finished entering your telephone number and that the number should be processed. (Default - none)

## 9.9 Channel Parameters

Allows you to set parameters associated with each port, such as transmission / receive gains and comfort noise level

## 9.10 Administration

### Password (See Chapter 7)

1. **Enter** Old Password
2. **Enter** New Password

3. **Retype** New Password

### Telnet Access

1. **Select** *On* or *Off*
2. **Click** on OK
3. **Reboot**

### Interface Speed

1. **Select** AUTO, 10 MB Full-Duplex or 100 MB Full-Duplex
2. **Click** on *OK*
3. **Reboot**

## 9.11 Channel Status

System status on all Channels in Table format

## 9.12 Help

Here you will find helpful definitions to common parameters in the TVP-224HR User Interface. In addition, from the main page in the help menu, you can link to the Trendware **FTP** website and download the most current User Guide and support materials <ftp.trendware.com/TVP-224HR/>

## Chapter 10

# Making Calls with TVP-224HR

*This chapters shows how to make phone calls from telephony devices connected to the TVP-224HR directly through or indirectly.*

## 10.1 Configuration Examples

### Default Dial Plan


Before any configuration set up, your TVP-224HR should have the following basic default information.

#### Network

IP : 192.168.0.1  
 Mask: : 255.255.255.0  
 Gateway : 0.0.0.0

#### Dial Plan

No.	Hunt Group	Dest. ID	Dest.
201	1	1	0 (local port #1)
202	2	2	1 (local port #2)
203	3	3	2
204	4	4	3

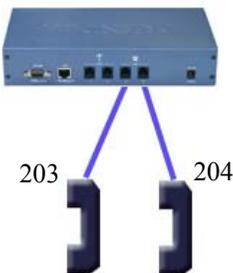


1. If your TVP's two FXS ports are connected to two telephones, say port 2 and port 3 respectively, just pick up phone 203 and dial '204', phone 204 should ring.
2. ☎️ ↗️ 204 ⇒ TVP ⇒ local port #3 ⇒ ☎️)))

**Hint**

You may also check the LED indicators on the TVP-224HR. When it rings, the related LED should flash. After you pick up the handset, it should remain on and off when the phone is on hook.

Now let's test your TVP-224HR that is equipped with 2 FXO interfaces. Assume you have one extension line with your PBX system, say, 201 as the extension number, we connect this line to the gateway's port 0 (FXO port), then connect a telephone phone set to port 3 (for example) of the gateway.

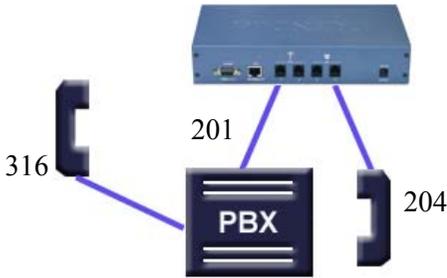

Pick up your extension handset, for example, 316 and dial '201'. After one ring, you should hear a dial tone. Now dial '203'. The telephone connected to the TVP's FXS port should ring.

**Hint**

If you do not hear the dial tone, please check the line impedance of your PBX. For a TVP-224HR with FXO port, please contact your PBX Supplier or System Integrator for further information

1. Now let's make a call to your PBX extension. Pick up the handset connected to the FXS port and dial '201', you should hear a dial tone (This means that TVP-224HR picks up the line connected to your PBX). Then dial '316', your extension handset should ring right away.

**Hint**

This guide only uses the default values. Once you are familiar with the dial plan set up, you may design your own dial plan.

## 10.2 Making a call with TVP-224HR FXS Port

TVP-224HR has two FXS ports. An FXS port can connect to an analogue phone directly, and a FXO port can connect to a PBX system or CO line.



Connection: Analogue telephone set connects to FXS port


**Operation:**

1. Pick up this analogue telephone set. You should be able to hear the dial tone provided by the TVP-224HR.
2. The corresponding green LED will light up when the telephone set is picked up. For Example: If the telephone set is connected to the second port of FXS. When you pick up the telephone set, the second green LED will light up.
3. We can dial the desired destination phone number at the telephone set. If the desired destination phone number is legal, the TVP-224HR will play two quick address ack tones, Du Du, to destination. If the desired destination phone number is illegal, the TVP-224HR will play three out of service tones, please check the dial plan and your desired destination phone number.

## 10.3 Making a call with TVP-224HR FXO Port

**Connection: Analogue PBX connects to FXO port****Operation:**

1. Pick up this analogue telephone set, you can hear the PBX dial tone provided by the PBX system. In some cases, you have to dial a specific number to get the connection between telephone set and PBX.

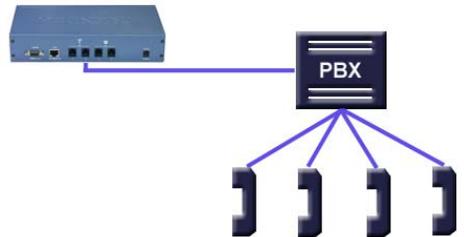

2. Dial the extension number for the gateway as provided by the PBX for the TVP-224HR FXO port.
3. When the TVP-224HR is connected, the corresponding green LED will be illuminated. For Example: If the telephone set is connected to the second FXO port, the second LED will be green.
4. We can dial the desired destination phone number on the telephone set. If the desired destination phone number is legal, the TVP-224HR will play two quick sounds, “Du Du”, to destination. If the desired destination phone number is illegal, the TVP-224HR will play three out of service tones, please check the dial plan and your desired destination phone number.


## 10.4 Web Browser Sample Dial Plan

This section describes how to use a web browser to build a dial plan in the VoIP Gateway. We suggest the following:

Draw an application diagram to illustrate / clarify application including:

1. Local gateway: IP setup
2. Local gateway: local telephone number setup
3. Local gateway: remote gateway IP & remote telephone number setup

**Note:** The Diagram below of Gateway A & B could be any combination of either the TVP-224HR (connected to switch by WAN port) or the TVP-221H (Connected by LAN port). The switch that joins these two gateways serves the purpose of initial lab configuration. Under this configuration, both GW must be in the same IP segment. Once the dial plans have been entered and tested, the switch would be replaced by the public internet and the gateways would then have to be updated with the field application Internet Access Settings (eg. Public IP Address, Subnet Mask and Gateway IP Address). In addition, all remote destinations in the dial plan must be updated with the actual application / field IP Addresses.

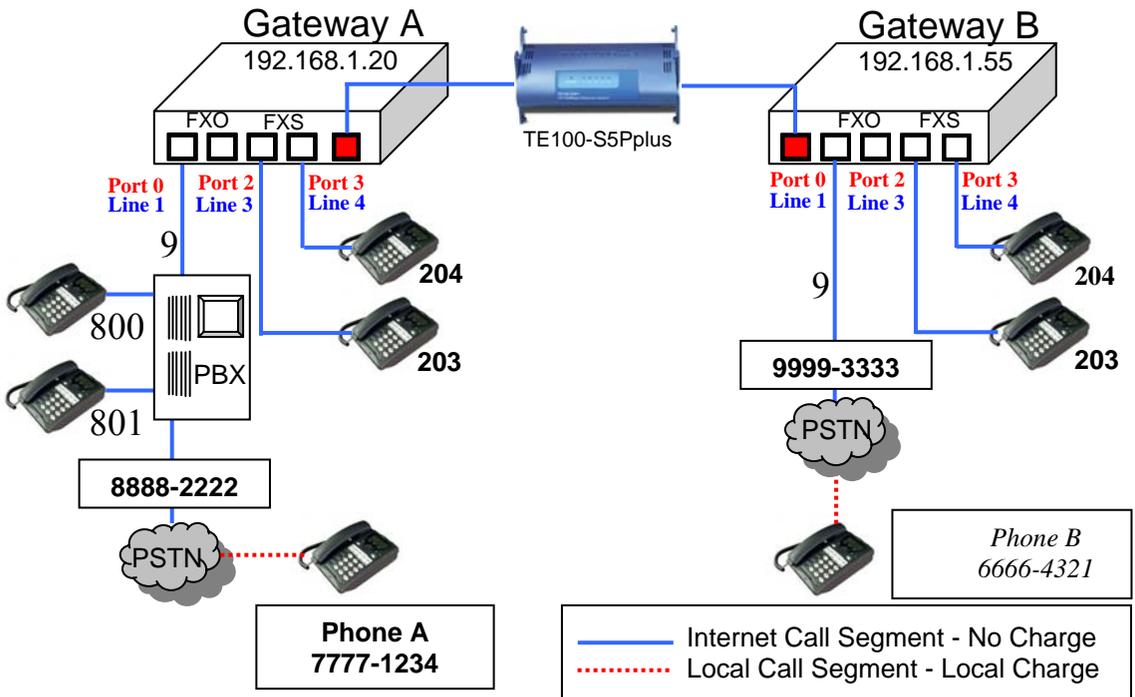

This diagram serves the purpose of illustrating the possible analog phone / PBX / PSTN integration / applications of the Gateway. However, disconnect cadence provided by your phone company for your PSTN line and disconnect cadence provided by your PBX may require additional matching with the gateway. This will require the assistance of your PBX supplier and /or Systems Integrator. Please also see User's Guide for additional information.

**Scenario description: Two gateways connected by a switch.**

There are two gateways connected by a switch. They are generically labeled "Gateway" but could be any combination of either the TVP-224HR (connected to switch by WAN port) or TVP-221H (Connected by LAN port). Theoretically, GW A is

---

in Taiwan (Local Area Code have 2 digits) and GW B is in the US (Local Area Codes have 3 digits).

**Gateway A, 4 ports, is configured as follows:**

1. Gateway A IP: 192.168.1.20, mask IP: 255.255.255.0, gateway IP 0.0.0.0 (virtual IP)
2. FXS Port 2 has a telephone set connected, its phone number is "203"
3. FXS Port 3 has a telephone set connected, its phone number is "204"
4. FXO Port 0 is connected to PBX. There are two telephone sets connected to the PBX. Their extension numbers are "800" and "801".
5. FXO Port 0 is registered as number "9" and it is connected to PBX
6. PBX has an external line to PSTN. Dialing "9" connects you PBX, where "9" is dialed to connect to PSTN.
7. The PSTN number to reach the PBX is "8888-2222".
8. Telephone A's number is "7777-1234" and belongs to the local PSTN

**Gateway B, 4 ports, is configured as follows:**

1. Gateway B IP: 192.168.1.55, mask IP: 255.255.255.0, gateway IP 0.0.0.0 (virtual IP)
2. FXS Port 2 has an analog telephone set connected, its phone number is "203"
3. FXS Port 3 has an analog telephone set connected, its phone number is "204"
4. FXO Port 0 is registered as number "9". Dialing "9" connects you to the outside line.
5. FXO Port 0 is connected to PSTN line "9999-3333".
6. Telephone B's number is "6666-4321" and belongs to the local PSTN.

**Gateway A - IP setup:**

1. Navigate to Internet Access / Fixed IP Menu
2. Type in IP Address: 192.168.1.20, Subnet Mask: 255.255.255.0 and Default IP Gateway Address: 0.0.0.0 in the related fields.
3. Click on "Save"
4. Click on "Reboot"

**Gateway B – IP Setup:**

5. Navigate to Internet Access / Fixed IP Menu.
6. Type in IP Address: 192.168.1.55, Subnet Mask: 255.255.255.0 and Default IP Gateway Address: 0.0.0.0 in the related fields.
7. Click on "Save"
8. Click on "Reboot"

**Gateway A: Dial Plan Setup**

FXS Ports to Analog Phones - Gateway A has two phones on the FXS ports. Telephone number 203 on Port 2 and 204 on Port 3. These numbers are part of the default dial plan and do not have to be entered. We can skip the local Dial Plan setup including Telephone Address, hunt group and destination for phones 203 and 204.

**How to Enter the Dial Plan**

The Dial plan consists of three tables that include the Telephone Table, Hunt Group (eg. Customer Service may have multiple phones that the GW must search through for an open line), and Destination Table (Both Local and Remote). The dial plan has to be entered into all Gateways so that the local gateway knows how to process calls, sending them to its local ports or to remote gateways for further processing.

The following screen shots show an example for entering a dial plan for a single number. This example should give you the necessary insight as to how to enter the rest of the Dial Plan. If you still have difficulty understanding the dial plan and entering data, please reference the User Manual for more examples.

1. From the Navigation Menu on the left side, **Select** *Dial Plan Table Setup*
2. From the window, please **Select** <Add> <Telephone>
3. The following window will appear. Please **Enter** Data as shown
4. **Click** on *Ok*

**TVP-224HR VoIP Gateway Router**

**Home**

- Internet Access
- Router Configuration
- Access Control
- H.323 Configuration
- Dial Plan Settings
  - Dial Plan Table Setup
  - PLAR address/CID
  - Store Dial Plan
  - Clear Dial Plan
  - Restore Dial Plan
- Line Settings
- Administration
- Help

### Add Telephone Numbers

---

- Telephone Number 0:
- Hunt Group ID:
- Min. Digits:
- Max. Digits:
- Strip Length:
- Append Prefix:

More Entries for The Same Hunt Group

1. From the Navigation Menu on the left side, **Select** *Dial Plan Table Setup*
2. From the window, please **Select** <Add> <HuntGroup>
3. The following window will appear. Please **Enter** Data as shown
4. **Click** on *Ok*

**TVP-224HR VoIP Gateway Router**

**Home**

- Internet Access
- Router Configuration
- Access Control
- H.323 Configuration
- Dial Plan Settings
  - Dial Plan Table Setup
  - PLAR address/CID
  - Store Dial Plan
  - Clear Dial Plan
  - Restore Dial Plan
- Line Settings
- Administration
- Help


### Add Hunt Group IDs

---


- Hunt Group ID:
- Destination ID 0:

More Destinations for The Same Hunt Group

5. From the Navigation Menu on the left side, **Select** *Dial Plan Table Setup*
6. From the window, please **Select** <Add> <Local\_Destination\_Channel>
7. The following window will appear. Please **Enter** Data as shown
8. **Click** on *Ok*

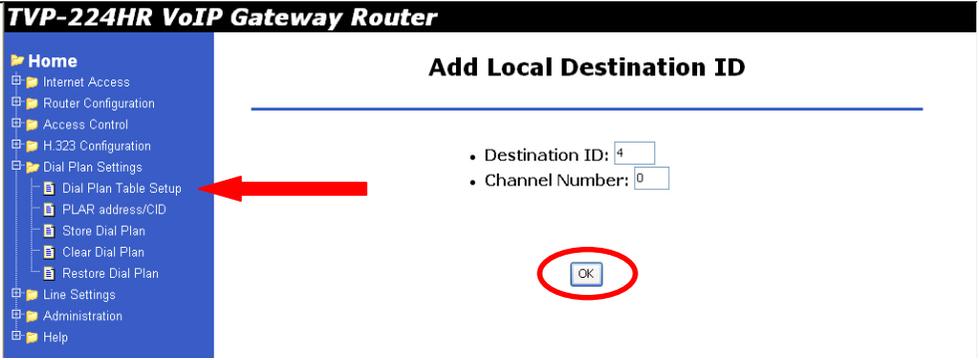

1. Continue entering the Gateway A Dial Plan as laid out in the tables below (Telephone Table, Hunt Group Table and Destination Table) following the above procedures.
2. After you have entered the Dial Plan, make sure you **Store Dial Plan** to flash memory. From the Navigation Bar on the left side, **Click** on *Store Dial Plan*
3. The following screen will appear on the right side. **Click** on **YES**

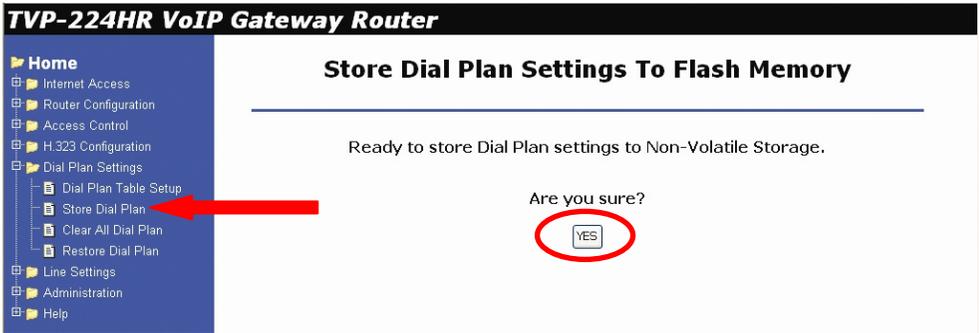

**Gateway B: Dial Plan Setup**

1. Enter Gateway B Dial Plan into Gateway B as shown in the tables below (Telephone Table, Hunt Group Table and Destination Table) following the above procedures.
2. After entering all the information listed in the tables below, **DO NOT** navigate away from Dial Plan Settings. Click **Store Dial Plan**, and click **YES** to save your dial plan to Flash Memory.

**Gateway A and Gateway B Dial Plan Tables**

**Gateway A - Telephone Number Table**

Phone #	Hunt Group ID	Min. Digits	Max. Digits	Prefix strip	Prefix Address	Function	Comment
203	2	3	3	3	None	Dialing "203" calls phone on FXS Port 2	
204	3	3	3	3	None	Dialing "204" calls phone on FXS Port	

						3	
800	4	3	3	0	None	Dialing "800" calls PBX on FXO Port 0, which then dials "800".	This is an example only. Please substitute your ext# on PBX if applicable
801	5	3	3	0	None	Dialing "801" calls PBX on FXO Port 0, which then dials "801".	This is an example only. Please substitute your ext# on PBX if applicable
9	6	1	1	0	None	Dialing "9" from local phone on FXS Port connects you FXO Port 0 PBX, where "9" is dialed for outside line.	For PBX on FXO use only
01	7	10	12	2	"9"	After receiving "01" + 8 to 10 digits (2 Digit Taiwan Area Code) from GW B, "01" is stripped, prefix address "9" is dialed to PBX on FXO Port 0 for outside line and then, remaining 8 to 10 digits are dialed.	For PBX on FXO use only
22	22	5	5	2	None	"22" is stripped and remaining 3 digits are sent to GW B.	Remote Zone # used to make calls to remote GW B FXS (Internal Ext)
02	22	10	13	0	None	"02" + 8 to 11 digits (3 Digit US Area Code) are sent to GW B.	Remote Zone # used to make calls to remote GW B FXO (External - PBX to PSTN)

Gateway A - Hunt Group Table

Hunt Group ID	Hunt Type	# of Dest ID(s)	Dest. ID(s)
2	2	1	2
3	2	1	3
4	2	1	4
5	2	1	4
6	2	1	4
7	2	1	4

22	2	1	22
----	---	---	----

Gateway A - Destination Table

Dest ID	Mode	Destination
2	Local	Port = 2
3	Local	Port = 3
4	Local	Port = 0
22	Remote	Dest = 192.168.1.55/1720 TCP



The above destination table has both local destinations and remote destinations. When the gateways are taken out of this initial testing environment, and implemented in the field, the internet access settings will have to be updated. In addition, the above remote destination IP will have to be updated to the field IP address.

Gateway B - Telephone Number Table

Phone #	Hunt Group ID	Min. Digits	Max. Digits	Prefix strip	Prefix Address	Function	Comment
203	2	3	3	3	None	Dialing "203" calls phone on Port 2	
204	3	3	3	3	None	Dialing "204" calls phone on Port 2	
9	4	1	1	1	None	Dialing "9" from local phone on FXS Port gets you a dial tone on FXO Port 0 for outside line.	Assumes that Telephone line is attached to Port 0 / Line 1
02	5	10	13	2	None	"02" is stripped, and the remaining 8 to 11 digits (3 Digit US Area Code) are dialed out on Port 0 to PSTN.	Assumes that Telephone line is attached to Port 0 / Line 1
11	11	5	5	2	None	"11" is stripped and remaining 3 digits are sent to GW A.	Remote Zone # used to make calls to remote GW A FXS (Internal Ext)
01	11	10	12	0	None	"01" + 8 to 10 digits (2 Digit Taiwan Area Code) are sent to GW B.	Remote Zone # used to make calls to remote GW A FXO (External - to PSTN)

Gateway B - Hunt Group Table

Hunt Group ID	Hunt Type	# of Dest ID(s)	Dest. ID(s)
2	2	1	2
3	2	1	3
4	2	1	4
5	2	1	4
11	2	1	11

Gateway B - Destination table

Dest ID	Mode	Destination
2	Local	Port = 2
3	Local	Port = 3
4	Local	Port = 0
11	H.323	Dest = 192.168.1.20/1720 TCP



The above destination table has both local destinations and remote destinations. When the gateways are taken out of this initial testing environment, and implemented in the field, the internet access settings will have to be updated. Likewise, the above remote destination IP will have to be updated to the field Destination IP address.

## 10.5 Making a call between Gateway A and Gateway B

### Case 1: Gateway Phone to Gateway Phone

Gateway B phone 203 calls Gateway A phone 203		
Caller Operation at GW B	Equipment Operation	Receiver Operation at GW A
Pick up phone 203 (204)	1. GW dial tone is heard.	

	2. GW B Line 3 LED "ON"	
Dial 11203 (11204, 11800, 11801)	1. Du Du is heard 2. VoIP call processing	
Ring back tone is heard	1. GW A Line 3 LED "ON"	Phone 203 rings
		Pick up phone 203
VoIP Conversation		VoIP Conversation

The above process is the same for Gateway B phone 203 and 204 calls to Gateway A phone 201, 800 and 801.

### Case 2: Gateway Phone to PSTN Phone

Gateway B phone 203 calls to PSTN phone A number 7777-1234		
Caller Operation at GW B	Equipment Operation	Receiver Operation at GW A
Pick up phone 203 (204) on GW B	1. GW dial tone is heard. 2. GW B Line 3 LED "ON"	
Dial 01-7777-1234	1. Du Du is heard 2. VoIP call processing	
Ring back tone is heard	1. GW A Line 1 LED "ON" 2. GW A is connected to PSTN	
Ring back tone is heard	1. PSTN call processing	Phone 7777-1234 is ringing
		Receiver on 7777-1234 picks up
VoIP Conversation		VoIP Conversation

The above dialing process is the same for phones 203, 204 to any GW A local PSTN phone number.

**Case 3: PSTN Phone to Gateway Phone**

Phone A, number 7777-1234 calling Gateway B phone 203		
Caller Operation at Phone A	Equipment Operation	Receiver Operation at GW B phone 203
Pick up phone A	1. PSTN dial tone is heard.	
Dial 8888-2222	1. Call being processed 2. PBX plays voice greeting	
Dial 22203 (22204)	1. Du Du tone is heard 2. VoIP call processing	
Ring back tone is heard		
	1. GW A Line 1 LED "ON"	Phone 203 is ringing
	1. GW B Line 3 LED "ON"	Receiver Picks up phone 203
VoIP Conversation		VoIP Conversation

*The above dialing process is the same for any calls made from GW A local PSTN to remote phone numbers 203 & 204.*



Case 1-3 Sample Dial Plans show the possible analog phone / PBX / PSTN integration / applications of the Gateway. Disconnect cadence provided by your phone company for your PSTN line and disconnect cadence provided by your PBX may require additional matching with the gateway. This will require the assistance of your PBX supplier and / or Systems Integrator. Please also see User's Guide for additional information.

## 10.6 VoIP in a Dynamic IP environment

### Internet Access

The previous section dealt with the TVP-222H in and its configuration in a static IP environment. The following section will address the issue of Dynamic IP and the TVP-224HR deployment in such an environment. This section we will shows you how to connect two TVP-224HR in a dynamic IP address environment and configure PPPoE, DHCP, and DDNS clients.

## 10.7 PPPoE, DHCP, and DDNS clients:

In addition to fixed IP, the TVP-224HR can be configured to use PPPoE or DHCP clients. With PPPoE and DHCP, you will under most circumstances be assigned a Dynamic IP. In order for other people and devices to locate you, they will need to be pointed to your dynamic IP. Therefore, it is necessary that you register with a DDNS (**Note:** [www.dyndns.org](http://www.dyndns.org) is currently the only service supported). Once you have registered an account, and have configured the DDNS client in the TVP-224HR, the TVP-224HR will automatically notify DynDNS of your changing IP Address. DynDNS will in turn, map your Dynamic IP to your registered Domain Name. See Chapter 6, DDNS section for more information.

The first time you connect to the TVP-224HR for configuration, you will need to connect to it under the same LAN segment to set the DHCP or PPPoE client. To configure the TVP-224HR, insert one end of an Ethernet cable into one of the 4 RJ45 LAN ports on the rear panel of the TVP-224HR and the other end directly to your PC Terminal. By default, the TVP-224HR's DHCP server is enabled. Make sure your computer is DHCP client enabled (See Chapter 4, PC Configuration). If you choose to assign a Fixed IP to your PC, make sure that you do not assign a IP that that is already allocated to the DHCP server for DHCP clients. The TVP-224HR supports auto MDIX so Cat 5 cable will be sufficient.

### Case 4: Gateway Prefix–Simplified Gateway Phone to Gateway Phone

After these dial plans are added, users on Site A are able to dial “22 + extension number” to connect to users on site B for free VoIP telephony. Users on Site B are able to call phones on Site A for free VoIP telephony by dialing “11 + extension number”. (Note: There is a Max digit (5) limitation on the dial plan which allows the TVP-224HR to differentiate with potential PSTN numbers that may start with 11 or 22 but because they exceed 5 digits, they would be handled differently).

The benefits of this dial plan are:

1. Simplified setup
2. VoIP (Free calls to remote site extension)
3. Simplified dialing ensures easy, direct access to remote extensions.
4. Simplified dialing makes remote offices and branches feel like local extensions.

Two TVP-224HR Gateways (Both Gateways are set up with default settings)

1. TVP-224HR A, located site A
2. TVP-224HR B, located on site B.


Register DDNS name for both Dynamic IPs (See Chapter 6)

- [tvp1.dyndns.org](http://tvp1.dyndns.org) is applied for TVP-224HR on site A
- [tvp2.dyndns.org](http://tvp2.dyndns.org) is applied for TVP-224HR on site B

Clients used on this topology :

- TVP-224HR on site A has **PPPoE**, and **DDNS** clients enabled
- TVP-224HR on site B has **DHCP**, and **DDNS** clients enabled.

Network topology illustrated as follows

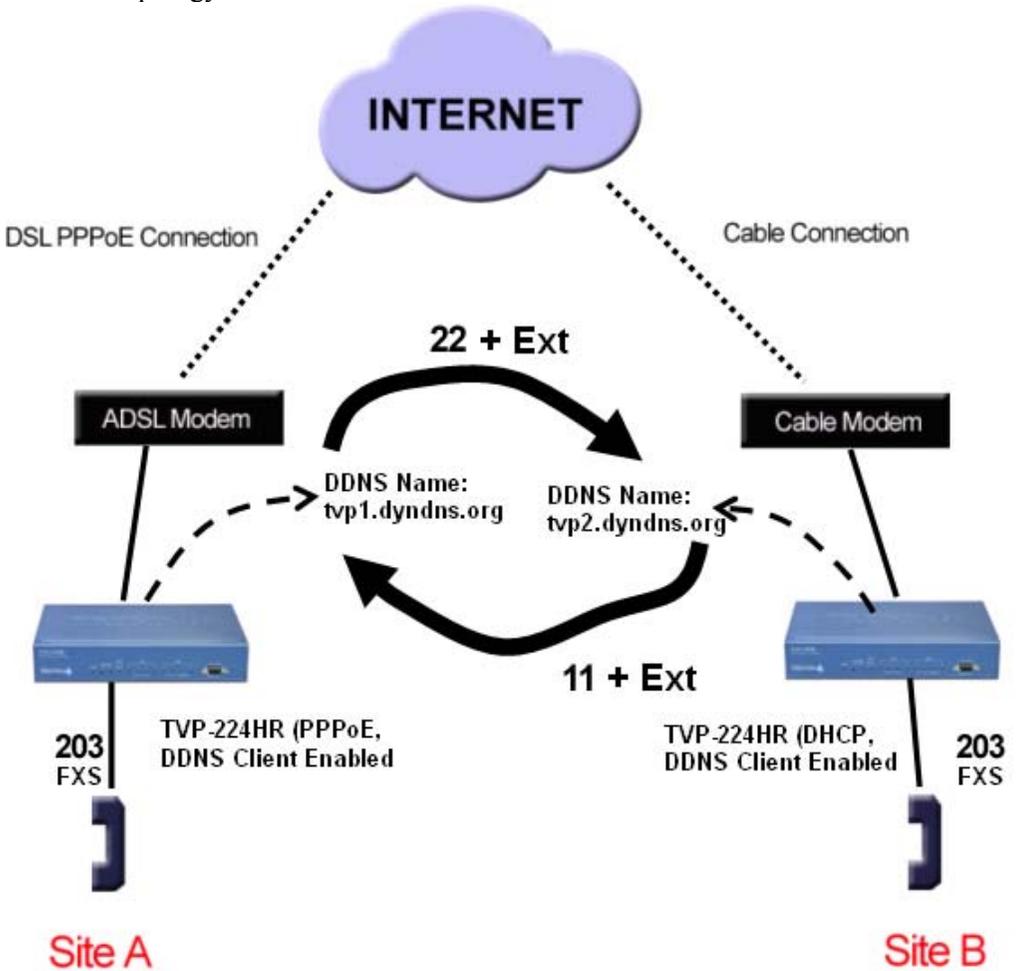

## TVP-221HTVP-224HR configuration (ADSL PPPoE connection) on site A

Web Configuration	Telnet / Console										
<div style="background-color: blue; color: white; padding: 2px;"><b>Local (from a PC in same Segment )</b></div> <p>From the Logon to the Web Configuration by Open opening your browser</p> <ol style="list-style-type: none"> <li>1. Enter 192.168.0.1</li> <li>2. You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.</li> </ol> <p><b>Web Configuration of Internet Access</b></p> <p>Internet Access / PPPoE</p> <ol style="list-style-type: none"> <li>1. Select "Yes" to enable PPPoE function</li> <li>2. Enter username and password provided by your ISP</li> <li>3. Click on "Save"</li> </ol> <p>Router Configuration / Dynamic DNS</p> <ol style="list-style-type: none"> <li>4. Select "On"</li> <li>5. Enter Server Name, Host Name, User Name, Password</li> <li>6. Click on "Save"</li> </ol>	<div style="background-color: blue; color: white; padding: 2px;"><b>Console</b></div> <p><b>Connect RS-232 to TVP-224HR and PC</b></p> <p><b>Open Hyper Terminal</b></p> <p><b>Input parameters:</b></p> <table style="width: 100%; border: none;"> <tr> <td style="padding: 2px;">Baud rate</td> <td style="padding: 2px; text-align: right;">19,200</td> </tr> <tr> <td style="padding: 2px;">Number of data bit</td> <td style="padding: 2px; text-align: right;">8</td> </tr> <tr> <td style="padding: 2px;">Parity check</td> <td style="padding: 2px; text-align: right;">None</td> </tr> <tr> <td style="padding: 2px;">Number of stop bit</td> <td style="padding: 2px; text-align: right;">1</td> </tr> <tr> <td style="padding: 2px;">Flow control</td> <td style="padding: 2px; text-align: right;">None</td> </tr> </table> <p><b>Enter "123"</b></p> <div style="background-color: blue; color: white; padding: 2px;"><b>Local Telnet (from a PC in same Segment )</b></div> <p><b>From Windows command prompt</b></p> <p><b>Enter "telnet 192.168.0.1"</b></p> <p><b>Enter Username "admin"</b></p> <p><b>Enter "123"</b></p> <p><b>net set pppoe on</b></p> <p><b>net set pppoe user [name] [password]</b></p> <p><b>net set ddns on</b></p> <p><b>net set ddns add [server_name] [host_name] [user_name] [password]</b></p> <p>(eg. dyndns.org tvp1 username1 password1)</p> <p><b>net store</b></p>	Baud rate	19,200	Number of data bit	8	Parity check	None	Number of stop bit	1	Flow control	None
Baud rate	19,200										
Number of data bit	8										
Parity check	None										
Number of stop bit	1										
Flow control	None										

Once Internet Access is setup, you could choose to reboot the TVP-224HR, and then use a PC in the same segment and with a web browser, access the TVP-224HR:

If using the Router's DHCP Server, make sure the routers DHCP Server is on and that the configuring PC is DHCP Client enabled.

If you would like your PC to have a Fixed IP, Make sure that the IP does not conflict with the range of IP's allocated by the TVP-224HR's DHCP Server.

If you are trying to access the TVP-224HR from a PC in the same segment as the TVP-224HR (LAN), Open your browser and enter

1. Enter 192.168.0.1

If you would like to access the TVP-221H from the WAN side, from a remote PC with Internet Access:

2. Enter tvp2.dyndns.org

You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.

You could then continue as below:

### Web Configuration of Dial Plan

Dial Plan Settings / Dial plan Table Setup

7. Select "Add" and "Telephone"
8. Enter following fields
  - a. Telephone Number: 22
  - b. Hunt Group ID: 22
  - c. Min. Digits: 2
  - d. Max. Digits: 5
  - e. Strip Length: 2
  - f. Append Prefix: none
9. Click on "OK"

Dial Plan Settings / Dial plan Table Setup

10. Select "Add" and "HuntGroup"

From the local connection, you could continue on setting up the dial plan. However you could choose to reboot,

**Enter "net reset"**

Connect your PC directly to your TVP-224HR making sure they are in the same LAN segment. From the windows command prompt:

**Enter "telnet 192.168.0.1"**

Or from a remote computer

**Enter "telnet tvp1.dyndns.org"**  
**Enter Username "admin"**  
**Enter "123"**

You would then continue as below:

**atpm req**  
**atpm add 22 2 5 22 2**

**atpm hadd 22 2 22**



Default Username and Password are "admin" and "123" respectively.

### Web Configuration of Internet Access

Internet Access / DHCP Client

3. Select "Yes"
4. Click on "Save"

Router Configuration / Dynamic DNS

5. Select "Enable"
6. Enter Server Name, Host Name, User Name, Password
7. Click on "Save"

Once Internet Access is setup, you could choose to reboot the TVP-224HR, and then use a PC in the same segment and with a web browser, access the TVP-224HR:

If using the Router's DHCP Server, make sure the routers DHCP Server is on and that the configuring PC is DHCP Client enabled.

If you would like your PC to have a Fixed IP, Make sure that the IP does not conflict with the range of IP's allocated by the TVP-224HR's DHCP Server.

If you are trying to access the TVP-224HR from a PC in the same segment as the TVP-224HR (LAN), Open your browser and enter

- a. Enter 192.168.0.1

If you would like to access the TVP-221H from the WAN side, from a remote PC with Internet Access:

- b. Enter tvp1.dyndns.org

You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.

You could then continue as below:

### Telnet (from a PC in same Segment )

**From Windows command prompt**  
Enter "telnet 192.168.0.1"

**Enter Username "admin"**  
**Enter "123"**

**From Windows command prompt**  
**Enter "telnet 192.168.0.1"**  
**Enter Username "admin"**  
**Enter "123"**

**net set dhcp on.**

**net set ddns on**  
**net set ddns add dyndns tvp2**  
**username2 password2**  
**net store**

From the local connection, you could continue on setting up the dial plan. However you could choose to reboot,

**Enter "net reset"**

Connect a PC directly to your TVP-224HR making sure they are in the same LAN segment. From the windows command prompt:

**Enter "telnet 192.168.0.1"**

Or from a remote computer

**Enter "telnet tvp2.dyndns.org"**  
**Enter Username "admin"**  
**Enter "123"**

You would then continue as below:

### Web Configuration of Dial Plan

## Dial Plan Settings / Dialplan Table Setup

8. Select "Add" and "Telephone"
9. Enter following fields
  - a. Telephone Number: 11
  - b. Hunt Group ID: 11
  - c. Min. Digits: 2
  - d. Max. Digits: 5
  - e. Strip Length: 2
  - f. Append Prefix: none
10. Click on "OK"

**atpm req****atpm aadd 11 2 5 11 2**

## Dial Plan Settings / Dialplan Table Setup

11. Select "Add" and "HuntGroup"
12. Enter following fields
  - a. Hunt Group ID: 11
  - b. Destination ID: 11
13. Click on "OK"

**atpm hadd 11 2 11**

## Dial Plan Settings / Dialplan Table Setup

14. Select "Add" and "DestinationID"
15. Enter the following fields
  - c. Destination ID: 11
  - d. Hostname (or IP address)  
tvp1.dyndns.org
  - e. Click on "OK"

**atpm dadd 11 dns tvp1.dyndns.org**

## Dial Plan Settings / Store Dial Plan

16. Click on "Store"

**atpm done****atpm store**

Changes to network settings require rebooting to take effect. Changes to the Dial Plan do not and will take effect as soon as they are stored.

**Caution:** If you do not store the dial plan, it will be lost when you reboot.

**Note:** After changing the default IP address, you will be required to use the new IP Address (hostname), in this example tvp2.dyndns.org, to gain access to the TVP-224HR via web browser user interface or Telnet.


## 10.8 Dial in PLAR (Hotline) – TVP-224HR / TVP-224HR

Trendware VoIP Gateways are capable of automatically calling or forwarding an incoming call from the Internet or PSTN line onward to another remote destination.

The following three examples illustrate these topographies:

1. FXS to FXO PLAR
2. FXO to FXS PLAR
3. FXO to FXO PLAR

### Case 5: PLAR (Hotline) FXO to FXS example

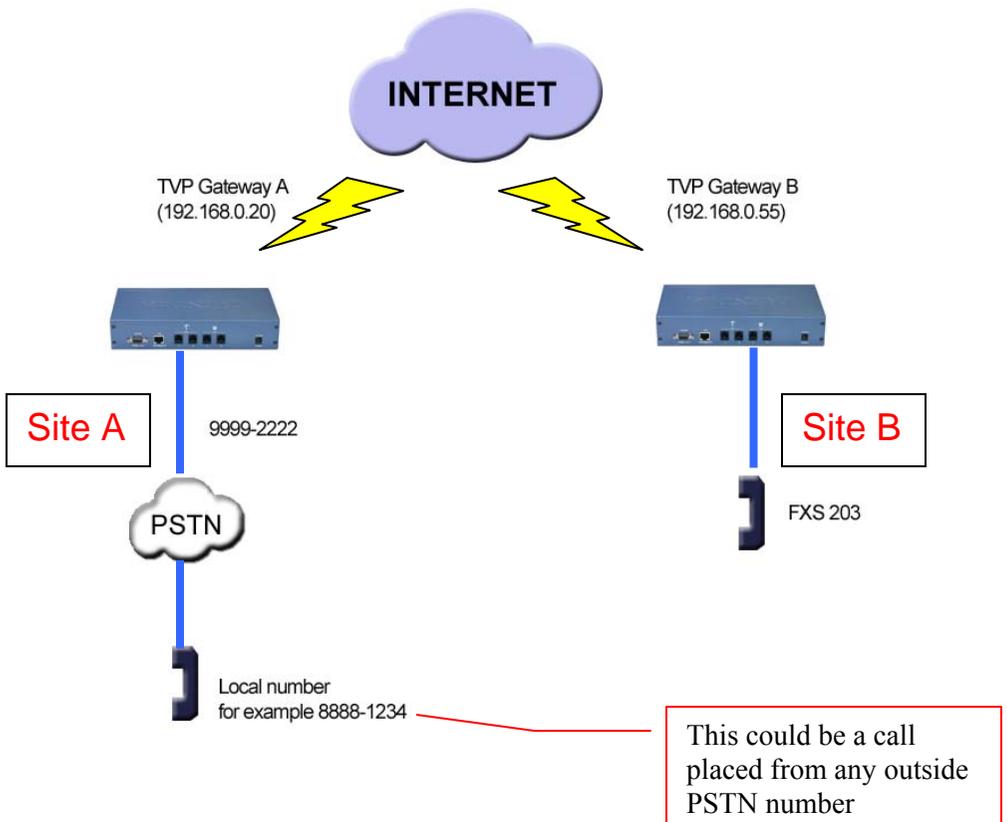

**Case Scenario:**

Outside PSTN caller near Site A wants calls automatically forwarded to extension 203 on Site B.

**Definition** - PLAR – Private Line Auto Ring – Bat phone / Hotline which allows you to pick up phone and automatically be connected to pre-determined remote destination.


**Solution:** Set up hotline (PLAR) on TVP Gateway on Site A to TVP Gateway on Site B. This uses existing default local dial plan with the addition of a remote destination zone number.

**Usage:** PSTN Caller near Site A picks up phone 8888-1234 and dials PSTN number 9999-2222 which is connected to Site A TVP Gateway FXO port 201. TVP Gateway A will automatically forward the call via internet to TVP Gateway B FXS phone 203.

## Site A TVP Gateway configuration - FXO to FXS PLAR

Web Configuration	Telnet / Console
<p><b>Login in to Site A TVP Gateway</b> Logon to the Web Configuration by opening your browser</p> <ol style="list-style-type: none"> <li>1. Enter Wan IP xxx.xxx.xxx Or if you are on the LAN, 192.168.0.20</li> <li>2. You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.</li> </ol> <p><b>Web Configuration of Dial Plan</b> Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>3. Select "Add" and "Telephone"</li> <li>4. Enter following fields               <ol style="list-style-type: none"> <li>a. Telephone Number: 22</li> <li>b. Hunt Group ID: 22</li> <li>c. Min. Digits: 5</li> <li>d. Max. Digits: 5</li> <li>e. Strip Length: 2</li> <li>f. Append Prefix: none</li> </ol> </li> <li>5. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>6. Select "Add" and "HuntGroup"</li> <li>7. Enter following fields               <ol style="list-style-type: none"> <li>a. Hunt Group ID: 22</li> <li>b. Destination ID 0: 22</li> </ol> </li> <li>8. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>9. Select "Add" and "DestinationID"</li> <li>10. Enter the following fields               <ol style="list-style-type: none"> <li>a. Destination ID: 22</li> <li>b. Hostname (or IP address) 192.168.0.55</li> <li>c. Click on OK</li> </ol> </li> </ol> <p>Dial Plan Settings / Dial in PLAR/CID</p> <ol style="list-style-type: none"> <li>11. Enter 22203 into the PLAR Address Field</li> <li>12. Click on OK</li> </ol> <p>Dial Plan Settings / Store Dial Plan</p> <ol style="list-style-type: none"> <li>13. Click on Yes</li> </ol>	<p><b>From Console</b> <b>Enter Username "admin"</b> <b>Enter Password "123"</b></p> <p><b>or</b></p> <p><b>Windows command prompt</b> <b>Enter "telnet xxx.xxx.xxx.xxx"</b> <b>Enter Username "admin"</b> <b>Enter Password "123"</b></p> <p><b>atpm req</b> <b>atpm add 22 5 5 22 2</b></p> <div style="border: 1px solid red; padding: 5px; margin: 10px 0;"> <p>Lines 3-10 creates a zone number (a number that tells the ATPM to forward to a remote destination) address entry in TVP GW A for TVP GW B</p> </div> <p><b>atpm hadd 22 2 22</b></p> <p><b>atpm dadd 22 h323 192.168.0.55</b> <b>atpm done</b> <b>atpm store</b></p> <p><b>set tcid 0 dial_in plar 22203</b> <b>config activate</b> <b>config store</b></p>

Lines 11-13 Setup the hotline (PLAR) from TVP Gateway A to TVP Gateway B

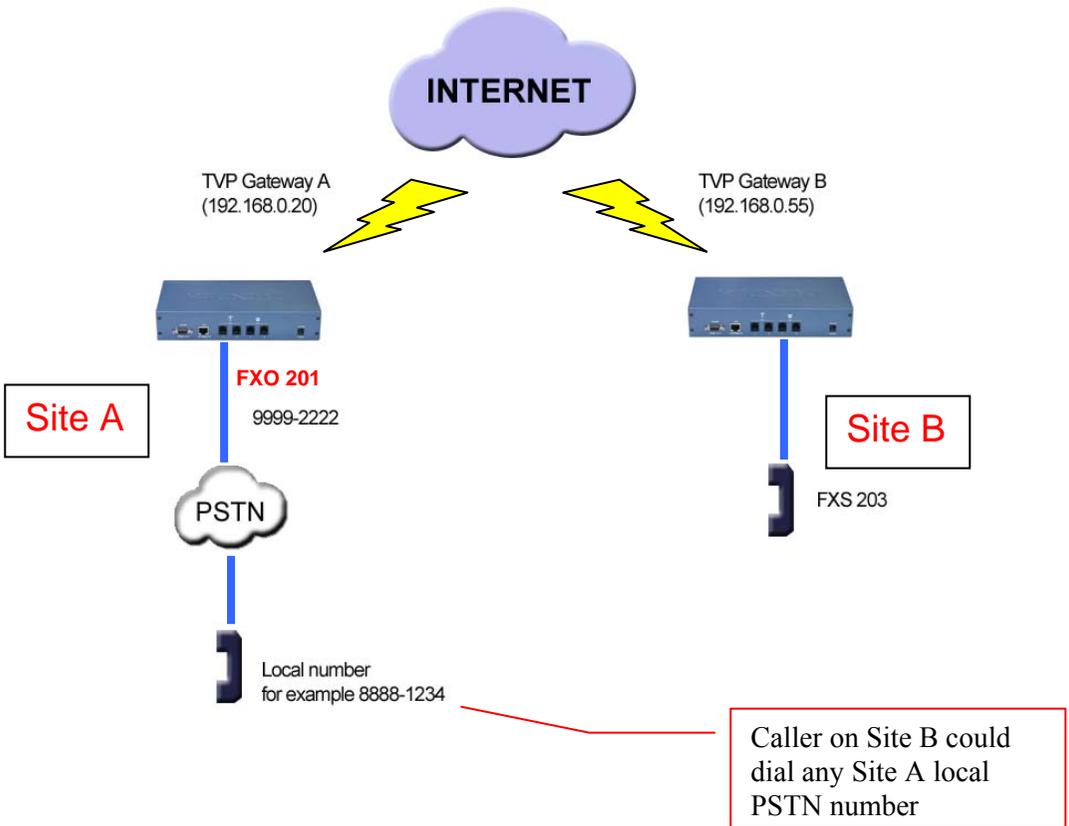**Case 6: PLAR (Hotline) FXS to FXO example****Case Scenario:**

Caller on Site B FXS 203 wants to be able to pick up phone and immediately have dial tone to Site A local PSTN.

**Solution:** Set up hotline (PLAR) on TVP Gateway on Site B to TVP Gateway on Site A. This uses existing default local dial plan with the addition of a remote destination zone number.


**Definition - PLAR – Private Line Auto Ring – Bat phone / Hotline** which allows you to pick up phone and automatically be connected to pre-determined remote destination.

**Usage:** Caller on Site B picks up FXS 203 phone and TVP Gateway B automatically connects to TVP Gateway A FXO 201 which is connected to PSTN line 9999-2222. Caller will hear PSTN dial tone on Site A and can then call any number on local PSTN.

## Site B TVP Gateway Configuration - FXS to FXO PLAR

Web Configuration	Telnet / Console
<p><b>Login to Site A TVP Gateway</b></p> <ol style="list-style-type: none"> <li>1. Logon to the Web Configuration by opening your browser</li> <li>2. Enter 192.168.0.55</li> <li>3. You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.</li> </ol> <p><b>Web Configuration of Dial Plan</b></p> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>4. Select "Add" and "Telephone"</li> <li>5. Enter following fields                             <ol style="list-style-type: none"> <li>a. Telephone Number :11</li> <li>b. Hunt Group ID: 11</li> <li>c. Min. Digits: 5</li> <li>d. Max. Digits: 5</li> <li>e. Strip Length: 2</li> <li>f. Append Prefix: none</li> </ol> </li> <li>6. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>7. Select "Add" and "HuntGroup"</li> <li>8. Enter following fields                             <ol style="list-style-type: none"> <li>a. Hunt Group ID: 11</li> <li>b. Destination ID: 11</li> </ol> </li> <li>9. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>10. Select "Add" and "DestinationID"</li> <li>11. Enter the following fields                             <ol style="list-style-type: none"> <li>a. Destination ID: 11</li> <li>b. Hostname (or IP address) 192.168.0.20</li> <li>c. Click on OK</li> </ol> </li> </ol> <p>Dial Plan Settings / Dial in PLAR/CID</p> <ol style="list-style-type: none"> <li>12. Enter 11201 in the PLAR Address Field</li> <li>13. Click on OK</li> </ol> <p>Dial Plan Settings / Store Dial Plan</p> <ol style="list-style-type: none"> <li>14. Click on Yes</li> </ol>	<p><b>From Console</b></p> <p><b>Enter Username "admin"</b> <b>Enter Password "123"</b></p> <p><b>or from</b></p> <p><b>Windows command prompt</b> <b>Enter "telnet 192.168.0.55"</b> <b>Enter Username "admin"</b> <b>Enter Password "123"</b></p> <p><b>atpm req</b> <b>atpm add 11 5 5 11 2</b></p> <div style="border: 1px solid red; padding: 5px; margin: 5px 0;"> <p>Lines 4-13 creates a zone number (a number that tells GW B to forward to a remote destination) for TVP GW A.</p> </div> <p><b>atpm hadd 11 2 11</b></p> <p><b>atpm dadd 11 h323</b> 192.168.0.20 <b>atpm done</b> <b>atpm store</b></p> <p><b>set tcid 0 dial_in plar 11201</b> <b>config activate</b> <b>config store</b></p>

Lines 12-14 setup the hotline (PLAR) from TVP Gateway B to TVP Gateway A

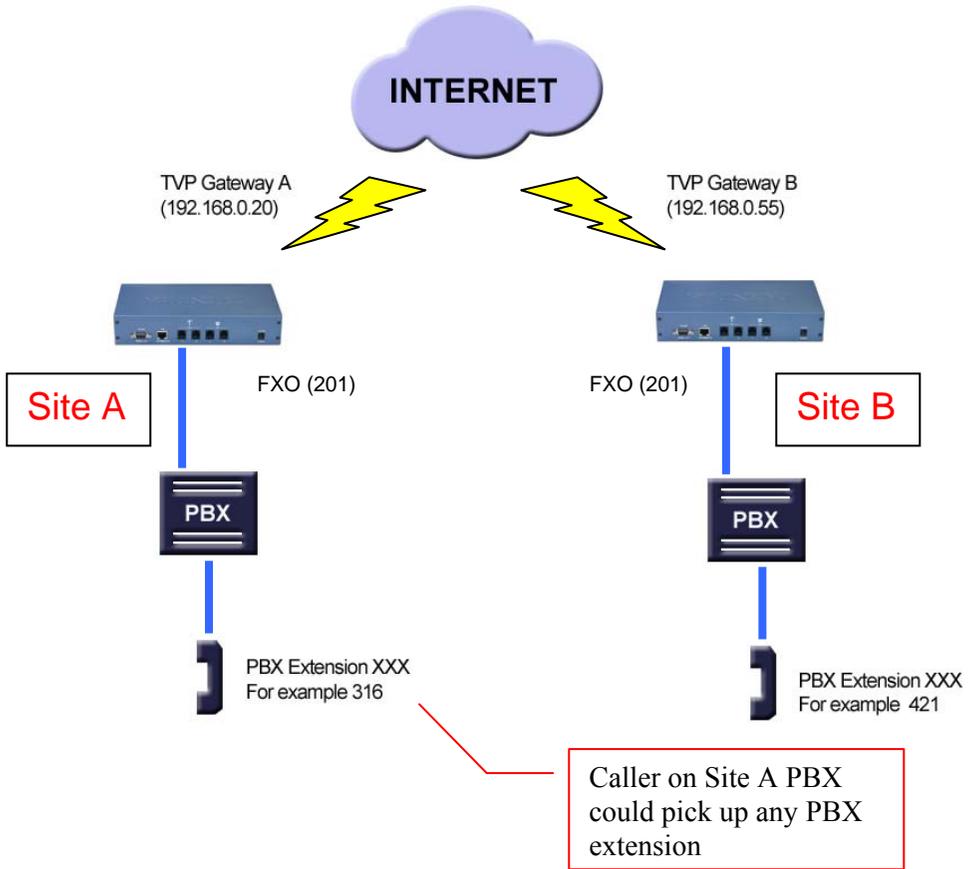**Case 7: PLAR (Hotline) FXO to FXO example****Case Scenario:**

Site A PBX Extension Caller 316 wants to be able to pick up phone, dial a number and immediately have dial tone on Site B PBX, and then be able to call any Site B PBX extension.

**Solution:** Set up hotline (PLAR) on TVP Gateway on Site A

**Usage:** Caller on Site A picks up any PBX extension and dials extension 201. TVP Gateway A automatically establishes a connection with TVP Gateway B Port 0, FXO 201 to get the dial tone from PBX on site B. After getting dial tone, the caller can call any Site B PBX extension.

## Site A TVP Gateway Configuration - FXO to FXO PLAR

Web Configuration	Telnet / Console
<p><b>Login to Site A TVP Gateway</b></p> <ol style="list-style-type: none"> <li>1. Logon to the Web Configuration by opening your browser Enter 192.168.0.20</li> <li>2. You will be prompted for Username and Password. Default Username and Password are "admin" and "123" respectively.</li> </ol> <p><b>Web Configuration of Dial Plan</b></p> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>3. Select "Add" and "Telephone"</li> <li>4. Enter following fields               <ol style="list-style-type: none"> <li>a. Telephone Number: 22</li> <li>b. Hunt Group ID: 22</li> <li>c. Min. Digits: 5</li> <li>d. Max. Digits: 5</li> <li>e. Strip Length: 2</li> <li>f. Append Prefix: none</li> </ol> </li> <li>5. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>6. Select "Add" and "HuntGroup"</li> <li>7. Enter following fields               <ol style="list-style-type: none"> <li>a. Hunt Group ID: 22</li> <li>b. Destination ID 0: 22</li> </ol> </li> <li>8. Click on OK</li> </ol> <p>Dial Plan Settings / Dial Plan Table Setup</p> <ol style="list-style-type: none"> <li>9. Select "Add" and "DestinationID"</li> <li>10. Enter the following fields               <ol style="list-style-type: none"> <li>a. Destination ID: 22</li> <li>b. Hostname (or IP address) 192.168.0.55</li> <li>c. Click on OK</li> </ol> </li> </ol> <p>Dial Plan Settings / Dial in PLAR/CID</p> <ol style="list-style-type: none"> <li>11. Enter 22201 in the PLAR Address Field</li> <li>12. Click on OK</li> </ol> <p>Dial Plan Settings / Store Dial Plan</p> <ol style="list-style-type: none"> <li>13. Click on Yes</li> </ol>	<p><b>From Console</b></p> <p><b>Enter Username "admin"</b></p> <p><b>Enter Password "123"</b></p> <p><b>or from</b></p> <p><b>Windows command prompt</b></p> <p><b>Enter "telnet 192.168.0.20"</b></p> <p><b>Enter Username "admin"</b></p> <p><b>Enter Password "123"</b></p> <p><b>atpm req</b></p> <p><b>atpm aadd 22 5 5 22 2</b></p> <div style="border: 1px solid red; padding: 5px; margin: 10px 0;"> <p>Lines 3-12 create an address entry for TVP Gateway B</p> </div> <p><b>atpm hadd 22 2 22</b></p> <p><b>atpm dadd 20 h323 192.168.0.55</b></p> <p><b>atpm done</b></p> <p><b>atpm store</b></p> <p><b>set tcid 0 dial_in plar 22201</b></p> <p><b>config activate</b></p> <p><b>config store</b></p> <div style="border: 1px solid red; padding: 5px; margin: 10px 0;"> <p>Lines 11-13 setup the hotline (PLAR) from TVP Gateway A to TVP Gateway B</p> </div>

---

## Chapter 11

# 11

# Telephony Connections

*This section discusses the special connection consideration for various environments and situations where you can use the VoIP Gateway.*

## 11.1 Port Configuration

VoIP Gateway supports FXS and FXO ports.

### **FXS (Foreign Exchange Station)**

FXS provides power and ringing signals to its interfacing equipment. It is *not* intended for connection to the Public Switched Telephone Network. It is a station loop start operation that provides a connection to:

1. A standard, single-line analog telephone system
2. The line circuit of a key telephone system
3. A loop start trunk circuit of a Private Branch Exchange (PBX) that normally connects to incoming Central Office circuits

### **FXO (Foreign Exchange Office)**


FXO recognizes signals and draws current to indicate an active state. It is a trunk loop start operation that emulates a single-line telephone to:

1. Central Office lines
2. PBX station

There are three basic environments that the TVP-224HR can be applied to. They are described in the following sections.

### Application 1: Special FXS Connections

The following diagram illustrates two different types of connections. The SITE A FXS Connection shows the normal connection between a gateway and telephone set (POTS) or FAX machine. The other type of FXS connection is shown on SITE B, on the right hand side. The Connection between the gateway and PBX has a special CO trunk interface card. The telephone sets connected to PBX can be either POTS or digital telephone depending upon the PBX capability.

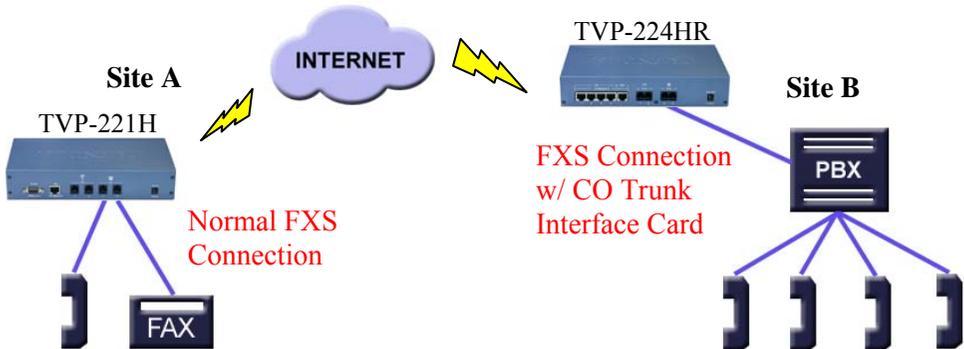


### Application 2: FXO Connections

Application 2 has three possible connections. One Site A, the FXS connection to analog devices is normal and is identical to connections mentioned in Application 1. On Site B, the connection between PSTN and PBX is also a normal connection. The last connection is between PBX and the gateway which uses the internal analogue lines of the PBX. In this case, the FXO port has to be used.

**Note:** If a digital PBX is used, an analog terminal adapter is needed to provide an analog interface to the FXO port. Please consult with your PBX supplier.

In this application, the caller on Site A, can make a call using a device connected to a FXS port on the Site A gateway. The call will be routed to the Site B Gateway, through a FXO port and passed on to the PBX system. The PBX system will then forward the call to the dedicated terminal / extension.

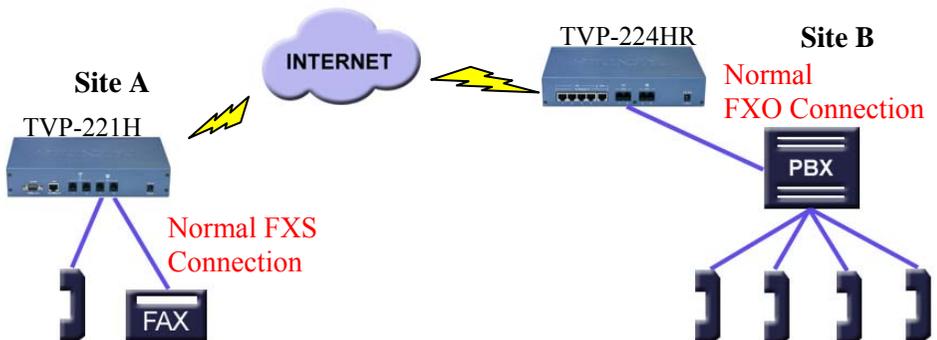

# Chapter 12

## Troubleshooting Tips

*This section provides solutions for problems you may possibly encounter while installing and connecting your VoIP Gateway.*

### Overview

This chapter covers some common problems that may be encountered while using the TVP-224HR and some possible solutions to them. If you follow the suggested steps and the TVP-224HR still does not function properly, contact your dealer for further advice.

### General Problems

**Problem 1:** **Can't connect to the TVP-224HR to configure it.**

**Solution 1:** Check the following:

1. The TVP-224HR is properly installed, LAN connections are OK, and it is powered ON.
2. Ensure that your PC and the TVP-224HR are on the same network segment.
3. If your PC is set to "Obtain an IP Address automatically" (DHCP client), restart it.
4. If your PC uses a Fixed (Static) IP address, ensure that it is using an IP Address within the range 192.168.0.2 to 192.168.0.254 and thus compatible with the TVP-224HR 's default IP Address of 192.168.0.1. Also, the Network Mask should be set to 255.255.255.0 to match the TVP-224HR. In Windows, you can check these settings by using *Control Panel-Network* to check the *Properties* for the TCP/IP protocol.

### Internet Access

**Problem 1:** **When I enter a URL or IP address I get a time out error.**

**Solution 1:** A number of things could be causing this. Try the following troubleshooting steps.

1. Check if other PCs work. If they do, ensure that your PCs IP settings are correct. If using a Fixed (Static) IP Address, check the Network Mask, Default gateway and DNS as well as the IP Address.
2. If the PCs are configured correctly, but still not working, check the TVP-224HR. Ensure that it is connected and ON. Connect to it and check its settings. (If you can't connect to it, check the LAN and power connections.)
3. If the TVP-224HR is configured correctly, check your Internet connection (DSL/Cable modem etc) to see that it is working correctly.

**Problem 2:** **Some applications do not run properly when using the TVP-224HR.**

- Solution 2:** The TVP-224HR processes the data passing through it, so it is not transparent.
1. Use the *Special Applications* feature to allow the use of Internet applications which do not function correctly.
  2. If this does solve the problem you can use the *DMZ* function. This should work with almost every application, but:
  3. It is a security risk, since the firewall is disabled.

**Note:** Only one (1) PC can use this feature.

## Other Problems

### **Power (PWR) LED is not illuminated**

1. Check the power adapter connection.
2. If the power adapter or power cord is connected to the gateway, check that the cord is securely plugged into the power socket on the rear of the console.
3. Check that the other end of the power adapter or power cord is securely plugged into the power outlet.
4. If both ends of the power cord are properly connected and there is still no power, the gateway might have a faulty power outlet, power adapter or cord.
5. Change to another power outlet or obtain another power adapter or cord.

### **LNK LED is not illuminated**

1. Check that the TVP-224HR was connected correctly:
  - a. Powered on
  - b. Correctly connected
2. Make sure connectors at both ends are securely seated.
3. Check the TVP-224HR IP setting is correct

### **Line port LED is not illuminated when I pick up the phone.**

1. Check the RJ11 telephone line to make sure it is correctly connected to both telephone set and line port

### **There is no dial tone when I pick up the phone.**

1. Check the Line port LED to make sure it is illuminated
2. Check the RJ11 telephone line to make sure it is connected correctly to both phone set and line port

### **There is an out-of-service tone when dialing the destination phone number.**

1. Check the dial plan setting (address table, hunt group table and destination table) at the destination phone number

### **There is no connection tone when dialing the destination phone number**

2. Check the IP network (Ethernet cable, Ethernet port and GW IP setting) is connected correctly
3. Check the destination TVP-224HR and phone is available

## **Final Steps**

If the procedures in this section have not solved the problem, reset the gateway several times by turning the power on and off. If the problem still exists, contact customer support.

## Appendix A - Technical Specifications

### TVP-224HR Technical Specifications

Telephony Interface	
<b>Physical interface</b>	Desktop with 4 Analog Ports <ul style="list-style-type: none"> <li>• Loop start 2 x FXO (RJ-11)</li> <li>• Loop start 2 x FXS (RJ-11)</li> </ul>
<b>Programmable line interfaces</b>	Complex line impedance
<b>Protocols</b>	H.323v3 (Normal/fast-start mode) Supports gateway-gateway direct routing and gateway-gatekeeper assisted routing mode
<b>Voice coders support</b>	ITU-T G.711 u-law, G.723.1, and G.729A/B, auto-switching (Frame-rate/packet: 1 - 8)
<b>Fax</b>	Supports T.30 G3 fax on PSTN Interface; ITU-T T.30 fax spoofing ; ITU-T T.38
<b>Simultaneous connections</b>	4 channels voice/fax
<b>Media processing</b>	Gain control; G.168 echo cancellation (16 ms); Voice activity detection (VAD); Comfort noise generation (CNG); Call progress detection; DTMF detection/filtering/regeneration (H.323v3/IMTCv1)
Data Network Interface	
<b>Physical interface</b>	WAN: 1 (10Base-T/100Base-TX, Auto-Negotiation) LAN: 4 (10Base-T/100Base-TX, Auto-Negotiation)
<b>Protocols</b>	TCP/IP, DHCP, HTTP, DNS
<b>Advanced Function</b>	QoS, Virtual Server, Port Forwarding Special application, DMZ, DDNS

System	
<b>Call Control</b>	Built-in three-tier dialing plan and destination hunting Supports gatekeeper authorization and accounting Supports gatekeeper call routing control and gateway mapping Call accounting information on gateway (via RS-232) or gatekeeper
<b>Management</b>	RS-232 (DCE mode) Built-in HTTP Web-based remote management Telnet remote management
<b>System upgrade</b>	Flash memory and built-in TFTP allowing firmware and feature upgrade via network
<b>Chassis</b>	Metallic 9.5" Desktop
<b>Dimensions (L X W X H)</b>	241 x 135 x 45 mm (9.5 x 4.3 x 1.8 in.)
<b>Weight</b>	1.9 kg (4.2 lb)

<b>LED Indicators</b>	System: 2 PWR, CPU WAN: 1, LNK/ACT LAN: 4, LNK/ACT Voice: 4 In-Use/Ringing
<b>Interoperability†</b>	Microsoft NetMeeting*; Cisco AS5300, 3600; RADVISION gatekeeper; Cisco gatekeeper
<b>Input Voltage, AC</b>	90–260 VAC, auto ranging, 50–60 Hz
<b>Power Requirement</b>	12V DC, 2.0A
<b>Operating environment</b>	Operating temperature: 0° ~ 50° C (32° ~ 122° F) Humidity: 90% (non-condensing)
<b>Certification</b>	CE, FCC, UL

<b>FXO Ports</b>	
<b>Signaling</b>	Loop start/DTMF
<b>Number of channels</b>	2
<b>Interface connectors</b>	2 RJ-11 2-pin modular jacks
<b>Line impedance</b>	600 Ω; 900 Ω; Complex line impedance
<b>Insertion loss</b>	2 dB nominal
<b>Frequency response</b>	300 Hz ~ 3400 Hz +/- 2 dB w.r.t. 1004 Hz
<b>Return loss</b>	≥ 18 dB
<b>Input level adjustment</b>	-6 dB to +6 dB
<b>Output attenuation</b>	0 dB to 13 dB
<b>Longitudinal balance</b>	≥ 45 dB
<b>Disconnect detection</b>	Loop current Customizable tone detection
<b>FXS Ports</b>	
<b>Signaling</b>	Loop start/DTMF
<b>Number of channels</b>	2
<b>Interface connectors</b>	2 RJ-11 2-pin modular jacks
<b>Line impedance</b>	600 Ω; 900 Ω; Complex line impedance
<b>Insertion loss</b>	2 dB nominal
<b>Frequency response</b>	300 Hz ~ 3400 Hz +/- 2 dB w.r.t. 1004 Hz
<b>Return loss</b>	≥ 18 dB
<b>Input level adjustment</b>	-6 dB to +6 dB
<b>Output attenuation</b>	0 dB to 13 dB
<b>Longitudinal balance</b>	≥ 45 dB
<b>Loop current</b>	25 mA nominal
<b>Ring voltage</b>	40 Vrms nominal
<b>Ring tone</b>	16.67 Hz, 20 Hz (default), 25 Hz or 50 Hz
<b>Disconnect detection</b>	Loop current

### Console Port


The console port uses a DB-9 RS-232 connector. The supplied straight through RS-232 cable connects the console port of the TVP-224HR to a console PC or terminal. Pin assignment for the port is described in the following table.

DB-9 pin	Signal
1	Not connected
2	TxD
3	RxD
4	Not connected
5	Ground
6	Not connected
7	Not connected
8	Not connected
9	Not connected

### LAN Port

The 10/100 LAN port use standard RJ-45 connector and Ethernet pin assignment. The following diagram and table show the pin assignment on the port connector. When connecting the LAN port to switches or repeaters, you must use a straight-through cable.


RJ45 pin	Signal
1	RxD+
2	RxD-
3	TxD+
4	Not connected
5	Not connected
6	TxD-
7	Not connected
8	Not connected

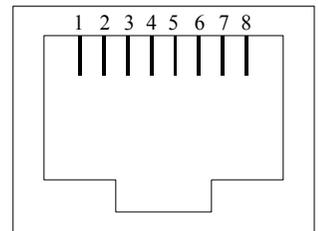

**FXO Port Pin Assignments**


The FXO Telephony Interface Module has 2 RJ11C/W modular jacks. The following diagram and table show the assignments of the pin for the RJ11 port.

RJ-11 pin	Signal
1	Not connected
2	Tip
3	Ring
4	Not connected

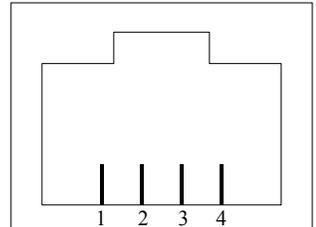**FXS Port Pin Assignments**

The FXS Telephony Interface Module has 2 RJ11C/W modular jacks. The following diagram and table show the assignments of the pin for the RJ11 port.

RJ-11 pin	Signal
1	Not connected
2	Tip
3	Ring
4	Not connected

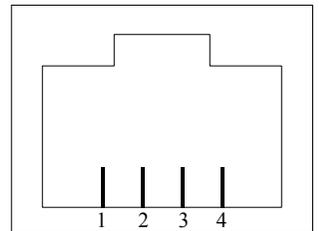

## Appendix B - Connecting through Console

The console port uses a DB-9 RS-232 connector. The supplied straight through RS-232 cable connects the console port of the TVP-224HR to a console PC or terminal.

Task	Prompt	Type
Connect RS-323 Cable to TVP-224HR RS-232 console port a your computer that you will use as a configuring terminal		
Open HyperTerminal and enter the following Input Parameters when prompted:	Baud rate Number of data bit Parity check Number of stop bit Flow control	19,200 8 None 1 None
When the empty HyperTerminal Screen appears type "123"		123
<p>In the event that you forget your administration password, you can gain console access to the TVP-224HR using the super password. The super password is the last six digits of your MAC address located on the bottom of your TVP-224HR (00-50-2d-xx-xx-xx). At the Console prompt enter the super password without hyphens. The password is all lower case. After gaining access, at the console prompt type in</p> <pre> net set manager password &lt;new_password&gt; &lt;new_password&gt; net store net reset </pre> <p>If entry of new password is successful, the console will list "OK". You will now be able to gain Web Access from a PC in the same local segment using the TVP-224HR LAN IP Address. If Web and / or Telnet Access are enabled, you will also be able to remote access the TVP-224HR by entering http:// followed by the TVP-224HR WAN IP or domain name.</p>		
<p>At the prompt Console&gt; <b>Enter</b> <code>ping 168.95.1.1</code> The following dialogue indicates that Internet Access is successful.</p>	Console>	ping 168.95.1.1

<pre>ping 168.95.1.1 1 out of 1 pings succeeded. Console&gt;</pre> <p>If the ping times out, you do not have Internet Access. Please refer to the trouble shooting section of the User Manual or consult your ISP to make sure your Internet Access Data is correct and accurately entered into the TVP-224HR.</p>		
<p>The following commands enable / disable web and telnet access respectively.</p> <pre>Net set http &lt;on/off&gt; Net set telnet &lt;on/off&gt;</pre>	Console>	on / off
<p>To reset to Factory Default settings, please perform the following commands to:</p> <p>Erase all 'port', 'codec' &amp; 'h323' configuration</p> <pre>config erase</pre> <p>Then access dial plan edit mode by entering</p> <pre>atpm req</pre> <p>Purge the dial plan from the database</p> <pre>atpm purge all</pre> <p>Store the changes</p> <pre>atpm store</pre> <p>Reset the network configuration to default</p> <pre>net set fac_default</pre> <p>Key in "yes" to re-boot.</p>		

## Appendix C - Connecting through Telnet

To use Telnet, Internet Access must have been previously setup so that the gateway is visible on the internet (See User Guide for More Information). Alternatively, you can use Telnet to locally access the TVP-224HR, if you are under a router or switch and the TVP-224HR and your computer are in the same network segment.

To access the TVP-224HR Gateway from a remote location using Telnet, perform the following tasks:

Task	Prompt	Type
Open the windows command prompt and enter the <b>telnet</b> command followed by the IP address of the TVP-224HR Gateway you want to access.	None	<b>telnet</b> <b>xxx.xxx.xxx</b>
When the TVP-224HR Gateway prompts you to <b>Login</b> , enter the user name "admin"	Login:	admin
When the TVP-224HR Gateway prompts you for <b>Password</b> , enter the password. "Console>" will appear. The default password is "123" but it is recommended that the password be changed for security considerations.	Password:	123

<p>The password can be changed from the Web Browser Administration / Password submenu page.</p>		
<p>Type in "ping xxx.xxx.xxx", where xxx.xxx.xxx is your ISP provided DNS Server IP or any known Public Internet Address. The following dialogue confirms Internet Access</p> <pre> <b>Console&gt;ping 168.95.1.1</b> <b>ping &lt;168.95.1.1&gt;: 56 data bytes</b> <b>168.95.1.1 is alive</b> </pre> <p>If the ping times out, you do not have Internet Access or the Public IP Address you pinged is incorrect. Try another IP Address. If you confirm that you do not have Internet Access, please refer to the trouble shooting section of the User Manual or consult your ISP to make sure your Internet Access Data is correct and accurately entered into the TVP-224HR.</p>	<p>Console&gt;</p>	<p>ping xxx.xxx.xxx</p>

## Appendix D - CLI Commands

### Normal Mode Commands

Command	Description
atpm aadd	Add an entry to the address table
atpm adel	Delete an entry from the address table
atpm afind	Find and display an entry in the address table
atpm alist	Display all entries in the address table
atpm dadd	Add an entry to the destination table
atpm ddel	Delete an entry from the destination table
atpm dfind	Find and display an entry in the destination table
atpm dlist	Display all entries in the address table
atpm hadd	Add an entry to the hunt group table
atpm hdel	Delete an entry from the hunt group table
atpm hfind	Find and display an entry in the hunt group table
atpm hlist	Display all entries in the hunt group table
atpm done	End the atpm table update session
atpm erase	Erase all atpm tables from NVS
atpm purge	Purge entries from atpm table(s)
atpm req	Start atpm table update session
atpm restore	Restore atpm tables from NVS
atpm store	Store atpm tables into NVS
atpm slist	Display atpm system parameters
atpm sys	Set atpm system parameters
config activate	Move the configuration from temporary area to active area.
config erase	Erase the configuration from NVS
config store	Store the active configuration data into NVS
clrscr	Clear screen
download	Switch to download mode
help	Display help screen
net reset	Reset the system
net set wan gateway	Set default gateway's IP address

net set http	Turn on/off HTTP server
net set wan ip	Set IP address
net set ip_preced	Set IP precedence bits
net set wan mask	Set IP subnet mask
net set wan speed	Select Ethernet link speed
net set user_pw	Set password
net show	Display IP parameters
net show hwstat	Display hardware status
ping	Send ICMP echo request to another host
show h323	Display H.323 parameter settings
show version	Show software versions
set h323	Set H.323 parameters
tel show tel_id	Display line impedance setting.
tel show port	Display hook state for a telephony port
tel show ring_freq	Show ringer's frequency
tel set tel_id	Set line impedance for GW line interface
tel set ring_freq	Set ringer's frequency

### Download Mode Commands

Command	Description
Help	Display help screen
Quit	Switch to normal operation mode
net set wan gateway	Set default gateway 's IP address
net set wan ip	Set IP address
net set wan mask	Set IP subnet mask
start	Start downloading file

## Appendix E - Factory Default Settings

The following table lists the settings of certain parameters before the TVP-224HR is shipped.

Parameter	Default Setting
<b>Network</b>	
PPPoE	disabled
DYN DNS	disabled
DHCP Server	enabled
Configured IP address	192.168.0.1
Configured IP subnet mask	255.255.255.0
Default gateway IP address	0.0.0.0
Current active IP address	192.168.0.1
Current active subnet mask	255.255.255.0
IP precedence	0 0 0 0
Ethernet MAC address	00-50-2d-xx-xx-xx
Ethernet link speed	10/100 auto-negotiation
User ID for HTTP browser and Telnet client login	admin
Password for HTTP browser and Telnet access login	123
HTTP server	enabled
Telnet server	enabled
<b>Serial port (Fixed)</b>	
Baud rate	19,200
Number of data bit	8
Parity check	None
Number of stop bit	1
Flow control	None
<b>H.323</b>	
h323 display_name	customer
h323 h245_term_type	60
h323 rtp_port_base	30,000
h323 out_fast_start	Off

h323 in_fast_start	Off
h323 h245_tunneling	Off
h323 cisco_t38	Off
h323 callSignalPort	1720
h323 call_name	None
h323 local_alert	Off
h323 default_dtmf	H323 V2 Signal
h323 gk_mode	Off
h323 h245_timeout	30000
h323 term_id	None
	1
<b>Voice codec</b>	
Preferred voice codec	G.723 6.3kbps
<b>Telephony</b>	
PCM codec receiver gain for FXO ports	-1 dB

## Appendix F - Worksheets

### IP Parameters

Consult your network manager to obtain a static IP address for the TVP-224HR, and the information about the IP subnet mask and the default gateway for your network. Fill out the following work sheet before configuring the TVP-224HR.

IP address \_\_\_\_\_

IP subnet mask \_\_\_\_\_

Default gateway \_\_\_\_\_

### ATPM Destination Table

#### Local Destinations

Each telephony port of the TVP-224HR must be assigned a unique destination ID. Fill out the worksheet for local destinations by designating each port a unique destination ID, then use the CLI command **atpm dadd dest id port port#** for each entry in the worksheet to add it to the destination table. The *dest\_id* in the command corresponds to the Destination ID in the worksheet, while the *port#* corresponds to the Port#. You may alternatively use the web browser to add local destinations to the destination table.

Port#	Mode	Destination ID
0	port	
1	port	
2	port	
3	port	







## Index

### A

Address Table.....	62
Administration.....	78
Aliases.....	70
Append Prefix.....	73
ATPM.....	4, 61, 115
Auto-Answer.....	69

### C

Case 1.....	89
Case 2.....	89
Case 3.....	90
Case 4.....	91
Case 5.....	97
Case 6.....	99
Case 7.....	101
Channel Parameters.....	78
Channel Status.....	77, 79
Clear Dial Plan.....	76
CLI.....	4, 111
clients.....	90
CNG.....	12
Codec Selection.....	77
Codecs.....	64
Common Parameters.....	77
Concepts.....	61
Console.....	109

### D

Dial plan.....	62
DDNS.....	90
Default Dial Plan.....	80
Default DTMF Mode.....	69
desktop.....	17
destination.....	61
Destination ID Table.....	74
Destination Table.....	63, 88
DHCP.....	90
Dial Plan.....	72, 82, 87
Dial Plan Setup.....	72, 85
Display Name.....	68
Download Mode.....	112
DSP.....	4
DTMF.....	4, 61
DTMF Duration.....	69
DTMF relay.....	63, 107

### E

Endpoint Prefix.....	70
----------------------	----

### F

Factory Default Settings.....	113
Firmware Version.....	67
First Digit Wait Time.....	78
Foreign Exchange Office.....	
<i>See</i> FXO	
Foreign Exchange Station.....	
<i>See</i> FXS	
Front Panel.....	14, 16
FXO.....	4, 17, 103
FXO Port Pin Assignments.....	110
FXO to FXS PLAR.....	100, 102
FXS.....	4, 17, 103, 104
FXS Port Pin Assignments.....	110
FXS to FXO PLAR.....	98

### G

Gate Keeper.....	69, 70
Gate Keeper Address.....	70
GateKeeper ID.....	70
Gateway.....	12

### H

H.323.....	4, 61
H.323 Configuration.....	67
H.323 Parameters.....	68
Help.....	79
Hotline.....	97, 99, 101
HTTP setting mode.....	65
hunt group.....	62
Hunt Group ID.....	73
Hunt Group Table.....	63, 73, 88

### I

ICMP.....	4
IMTC.....	4
Incoming Fast Start.....	68
Installing.....	17
Inter Digit Wait Time.....	78
Interface Speed.....	79
Internet Telephony Gateway.....	12
IP Parameters.....	115

### K

KTS.....	12
KTS.....	4

### L

LAN Port.....	109
LED.....	4, 15

---

.....	77
<b>M</b>	
Max Registration Retries.....	70
Max. Digits.....	73
Min. Digits.....	73
<b>N</b>	
NAT Call Mode.....	69
Network Requirements.....	17
NVS.....	4
<b>O</b>	
Outgoing Fast Start .....	68
<b>P</b>	
Password .....	65, 78
PBX.....	4,12
PLAR .....	97, 99, 101
PPPoE.....	90
PSTN.....	4
<b>R</b>	
real-time .....	12
Rear Panel .....	16
Registration Type.....	70
Restore Dial Plan.....	77
RTOS .....	12
RTP .....	4,14
RTP Port Base.....	68
<b>S</b>	
Scenario.....	83
Store Dial Plan .....	75, 76
Strip Length.....	73
System Status .....	67
<b>T</b>	
TCID .....	4
Technical Specifications .....	107
Telnet Access .....	79
Terminal ID.....	70
Terminal Type.....	68
Termination Digit.....	78
TFTP .....	4
TIM .....	4, 61
Time To Live.....	70
TNV .....	4
Total Time.....	78
Troubleshooting .....	105
<b>U</b>	
UDP.....	4
User name.....	65
UTP .....	4

**V**

VAD.....	4, 12, 14
VoIP .....	12, 14

**W**

WAN .....	4
Worksheet .....	115

# Limited Warranty

TRENDware warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

## TVP-224HR– 5 Years Warranty

If a product does not operate as warranted above during the applicable warranty period, TRENDware shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product. All products that are replaced will become the property of TRENDware. Replacement products may be new or reconditioned.

TRENDware shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDware pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDware office within the applicable warranty period for a Return Material Authorization (RMA) number, accompanied by a copy of the dated proof of the purchase. Products returned to TRENDware must be pre-authorized by TRENDware with RMA number marked on the outside of the package, and sent prepaid, insured and packaged appropriately for safe shipment.

**WARRANTIES EXCLUSIVE:** IF THE TRENDWARE PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDWARE'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDWARE NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDWARE'S PRODUCTS.

TRENDWARE SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

**LIMITATION OF LIABILITY:** TO THE FULL EXTENT ALLOWED BY LAW TRENDWARE ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR

---

INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDWARE'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

**Governing Law:** This Limited Warranty shall be governed by the laws of the state of California.

AC/DC Power Adapter, Cooling Fan, and Power Supply carry  
1 Year Warranty



### Product Warranty Registration

Please take a moment to register your product online.  
Go to TRENDware's website at <http://www.TRENDNET.com>

### TRENDnet Technical Support

US/Canada Support Center	European Support Center
<p><b>Contact</b>  <b>Telephone:</b> 1(310) 626-6252  <b>Fax:</b> 1(310) 626-6267  <b>Email:</b> <a href="mailto:support@trendnet.com">support@trendnet.com</a></p> <p><b>Tech Support Hours</b>            7:30am - 6:00pm Pacific Standard Time            Monday - Friday</p>	<p><b>Contact</b>  <b>Telephone</b>            Deutsch : +49 (0) 6331 / 268-460            Français : +49 (0) 6331 / 268-461            Español : +49 (0) 6331 / 268-462            English : +49 (0) 6331 / 268-463            Italiano : +49 (0) 6331 / 268-464            Dutch : +49 (0) 6331 / 268-465  <b>Fax:</b> +49 (0) 6331 / 268-466</p> <p><b>Tech Support Hours</b>            8:00am - 6:00pm Middle European Time            Monday - Friday</p>

**TRENDware International, Inc.**  
 3135 Kashiwa Street. Torrance, CA 90505  
<http://www.TRENDNET.com>

Copyright ©2005. All Rights Reserved. TRENDware International, Inc.