

TELECOM

Facsimile machines



User's manual





SAGEM

Overview


Phonefax 2710/2720/2725

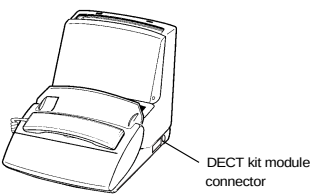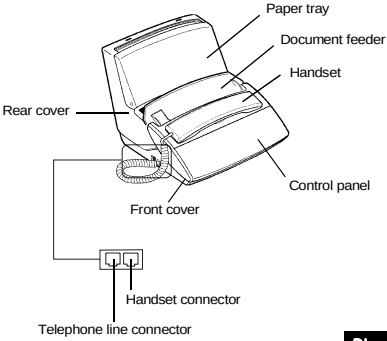



Phonefax 2630/2650/2655

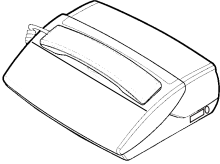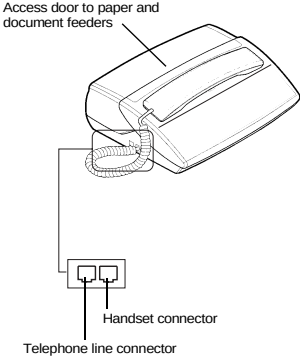


Phonefax 2612/2620/2625

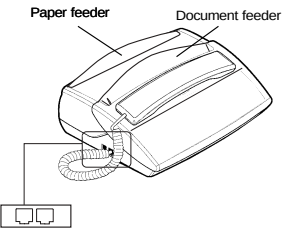


Fax 2616

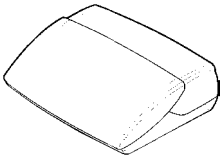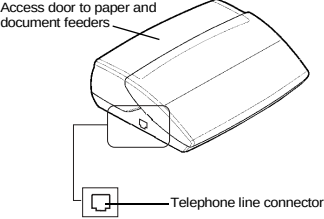

Fax 2606

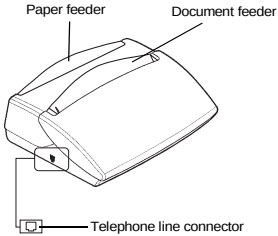

Operation panel

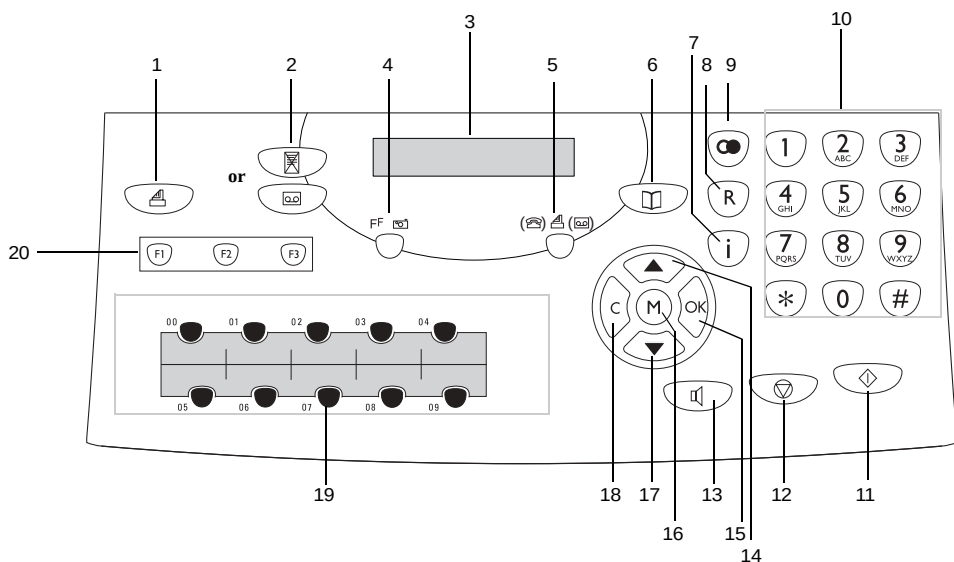

1 key: to print documents received in the memory

2 key: to play back messages received on the answering machine

- blinking: presence of messages not played back
- steady: presence of played back messages

or to delete from memory the document currently printed (models without TAD)

3 LCD display screen composed of a 16-characters line

4 key: choice of fax transmission resolution or local copy (NORMAL, FINE or PHOTO)

5 key: choice of reception mode (TEL, FAX, TAD):

- TEL (T): telephone in service (for models with handset)
- FAX (F): automatic fax reception
- TAD (A): TAD in service (for TAD-models)

6 (DIRECTORY) key: access to directory

7 key: printing of the menus guide

8 key: insertion of a dialling break (/), or flash feature (PABX)

9 (REDIAL) key: automatic call-back of one of the last 10 called numbers

10 Alphanumeric keypad

11 (START) key: fax transmission, or local copy

12 (STOP) key: stop of the operation in progress, or activation of the secret mode

13 (LOUDSPEAKER) key: use of line without unhooking, hands-free mode (depending on model) or amplified listening

14 key: move up in menus or to the left in an entry field - Volume up

15 key: confirmation of the displayed selection

16 (MENU) key: access to the various functions

17 key: move down in menus or to the right in an entry field - Volume down

18 key: return to previous displayed message or clearing of the last character entered in an entry field

19 Direct access keys to the first 10 directory memories

20 keys: preprogrammed keys to access the following functions:

: list of callers

: night mode

: access to the print menu

DESCRIPTION OF THE VARIOUS FAX MODELS

			THE VARIOUS FUNCTIONS		
			Handset	TAD Hands-free	Provided with a cordless phone set
 Phonefax	2725		X	X	X
	2720	Fixed paper tray (100 pages)	X	X	
	2710	Document feeder (15 pages)	X		
 Phonefax	2655		X	X	X
	2650	Removeable paper feeder (30 pages)	X	X	
	2630	Document feeder (15 pages)	X		
 Phonefax	2625		X	X	X
	2620	Sheet by sheet paper feeder (1 page)	X	X	
	2612	Document feeder (1 page)	X		
 Fax	2616	Removeable paper feeder (30 pages) Document feeder (15 pages)			
	2606	Sheet by sheet paper feeder (1 page) Document feeder (1 page)			

QUICK REFERENCE GUIDE, MENU GUIDE

DIRECTORY (MENU 1)

Press	Function called	Function description	See page
M 11 OK	ADD NAME	Add a record into the directory	11
M 12 OK	MODIFY	Modify a record in the directory	12
M 13 OK	CANCEL	Delete a record from the directory	13
M 14 OK	PRINT	Print the directory	13

SETTINGS (MENU 2)

Press	Function called	Function description	See page
M 21 OK	DATE/TIME	Enter the date and time	15
M 22 OK	NUMBER/NAME	Enter your fax number and name	15
M 23 OK	MELODIES/BEEPS	Choose the ring melody and key beeps	15
M 231 OK	MELODY	Choose the ring melody	
M 232 OK	BEEPS	Choose the key beeps	
M 233 OK	ALARM	Switch alarm On/Off	
M 24 OK	NETWORK	Set network parameters	16
M 241 OK	NETWORK TYPE	Select network type	
M 242 OK	PREFIX	Set the prefix	
M 25 OK	NIGHT MODE	Control the night mode	16
M 26 OK	NB OF RINGS	Set the number of rings	17
M 27 OK	CORDLESS	Cordless phone (depending on model)	17
M 271 OK	HANDSET REGIS	Register handset (depending on model)	
M 272 OK	HANDSET ERASE	De-register handset (depending on model)	
M 273 OK	HANDSET CODE	Radio encryption code (depending on model)	
M 28 OK	SECURITY	Protected access (depending on model)	17
M 281 OK	MEM ACCESS	Lock fax and voice messages (depending on model)	
M 282 OK	REMOTE CODE	Remote interrogation code (depending on model)	
M 29 OK	LANGUAGE	Choice of the language: English, French, German, Spanish or Italian	18

FAX (MENU 3)

Press	Function called	Function description	See page
M 31 OK	FCT TRANSM	Delayed transmission and broadcasting	21
M 32 OK	POLLING ACTV	Perform an active polling	24
M 33 OK	POLLING PASS	Perform a passive polling	23
M 34 OK	SEND REPORT	Print choice of the transmission report	21
M 35 OK	TX FROM MEM	Transmission from the memory or document feeder	21
M 36 OK	RX IN MEM	Reception of documents into the memory or on paper	22

TAD (MENU 4) (TAD MODELS)

Press	Function called	Function description	See page
M 41 OK	OGM RECORD	Record the outgoing greeting message	25
M 42 OK	OGM PLAYING	Play back the outgoing greeting message	25
M 43 OK	MEMO	Record a message (memo)	26
M 44 OK	DELETE MSG	Delete the voice messages	26
M 45 OK	TYPE	Select the type of TAD	25
M 46 OK	FILTERING	Select the call filtering feature	28
M 47 OK	PRIVIL ACCES	Select the privileged access mode	28
M 48 OK	PRIVIL CODE	Select the privileged access code	28

PRINTING & LOCAL COPY (MENU 5)

Press	Function called	Function description	See page
M 51 OK	GUIDE	Print the menus	33
M 52 OK	LOGS	Print the Tx and Rx logs	33
M 53 OK	DIRECTORY	Print the directory	33
M 54 OK	SETTINGS	Print the setting list	33
M 55 OK	SEND REPORT	Print the last comm. report	33
M 56 OK	LOCAL COPY	Choose the number of copies (depending on model)	33
M 57 OK	RIBBON GAUGE	Display the ribbon gauge status	34

DOCUMENT CONTROL (MENU 6)

Press	Function called	Function description	See page
M 61 OK	PERFORM	Perform a pending command	35
M 62 OK	MODIFY	Modify a pending command	35
M 63 OK	CANCEL	Cancel a pending command	35
M 64 OK	PRINTING DOC	Print a pending document	35
M 65 OK	PRINT LIST	Print the command list	36

ADVANCED FUNCTIONS (MENU 7)

Press	Function called	Function description	See page
M 72 OK	RELAY	New broadcast of vocal and fax messages (depending on model)	37
M 721 OK	ON	Activating the new broadcast (depending on model)	
M 722 OK	OFF	Deactivating the new broadcast (depending on model)	
M 723 OK	SETUP	Setting the new broadcast parameters (depending on model)	
M 79 OK	TECHNICAL	Modification of the technical parameters	38

CONTENTS

INTRODUCTION	1
Unpacking.....	1
Connections	1
Switching on.....	3
Loading the paper	3
Choosing the operating mode (TEL-FAX-TAD).....	5
The menus.....	7
TELEPHONING	9
Calling	9
Answering a call.....	10
Functions available during a call.....	10
DIRECTORY (MENU 1).....	11
Creating a record.....	11
Making a call from the directory.....	12
Editing a record.....	12
Deleting a record.....	13
Printing the directory.....	13
SETTINGS (MENU 2).....	15
Date/Time	15
Number/Name.....	15
Ringing melody and key beeps.....	15
Network	16
Night mode.....	16
Number of rings for the automatic mode	17
Cordless phone	17
Protection of your machine (depending on model).....	17
Choice of the language	18
FAX (MENU 3).....	19
Inserting the document into the feeder	19
Sending a fax	20
Receiving a fax	22
During transmission.....	23
Advanced functions.....	23
TAD (MENU 4).....	25
Models with tad (internal).....	25
Models with vocal tad (external).....	31
PRINTING & LOCAL COPY (MENU 5).....	33
Printing	33
Local copy	33
Ribbon gauge display	34

DOCUMENT CONTROL (MENU 6)	35
Executing a pending command.....	35
Consulting or modifying the queue.....	35
Deleting a command from the queue.....	35
Print a document waiting for transmission.....	35
Printing out the list of pending operations.....	36
ADVANCED FUNCTIONS (MENU 7)	37
Relaying received documents (depending on model).....	37
Technical parameters	38
Remote control from an extension set	38
OPTIONS	39
Display.....	39
APPENDIX	41
Replacement of consumables.....	41
Troubleshooting.....	44
Codes of the transmission report	45

This unit has been designed in accordance with European standards I-CTR37 and CTR21, it is designed for connection to the Public Switched Telephone Network (PSTN). In case of any problems, first contact your Supplier.

The **CE** mark attests that the products complies with the essential requirements of Directive R&TTE 1999/5/EC, for user safety, in accordance with Directives 73/23/EC for electromagnetic interference, in accordance with Directive 89/336/EC.

And that it makes efficient use of the radio spectrum allocated to terrestrial communications.

The manufacturer declares that the products are manufactured in accordance with ANNEX II of Directive R&TTE 1999/5/EC.



Before powering on your unit, make sure the mains outlet it is connected to meets the requirements printed on the warning label on your unit (Voltage, Current, Frequency of power network), or on the separate power supply (depending on the model). If your unit works with a separate Power Supply, use only the one delivered with your unit; never use another power supply.

The unit's mains plug is the only way to disconnect the unit from the power network. Therefore you must respect the following:

- Your unit must be connected to a mains outlet located nearby.
- The mains outlet must remain easily accessible.

Your unit is delivered with a power cord including a plug which, depending on the model, may be:

- without earth (the  symbol on the warning label)
- with earth (no symbol  on the warning label).

It is imperative that a power plug with an earth be connected to a wall outlet with an earth.

In Europe, this unit includes the  stamp, following the 73/23/CEE, 89/336/CEE and 93/68/CEE directives.

INTRODUCTION

UNPACKING

Check for the following items when unpacking your machine:


- Main unit,
- Power cord,
- Handset (depending on model),
- Telephone line cord,
- Paper holder^(*),
- DECT kit (cordless phone, charger and base station)^(**).

An ink ribbon and its gauge card are pre-installed in the machine. You will have to replace them when they are worn (please refer to § **Replacement of consumables** on page 41).

CONNECTIONS

Caution - Please refer to the **Safety Instructions** at the beginning of this User's manual.

CONNECTION OF THE POWER CORD

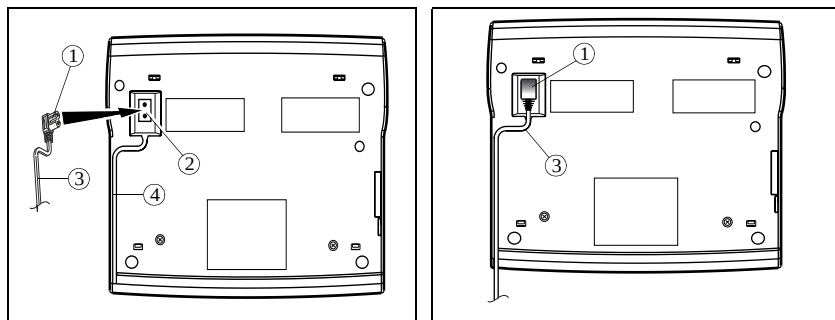

- ☞ Turn your machine upside down.
- ☞ Insert the plug (1) of the **power cord** into the connector (2) of the main unit.
- ☞ Run the power cord (3) into the groove (4).
- ☞ Replace your machine the right way round.

^(*) Models with a fixed paper tray (100 sheets).

^(**) Depending on model.



Telephoning



1
Directory



2
Settings



3
Fax



4
TAD



5
Printing



6
Doc control




7
Advanced functions

Options

Appendix


CONNECTION OF THE HANDSET (MODELS WITH HANDSET)

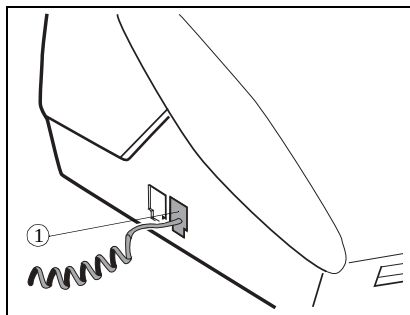

 Connect the telephone handset cord to the appropriate connector (1) on the main unit.


CONNECTION OF THE TELEPHONE LINE

For models with handset

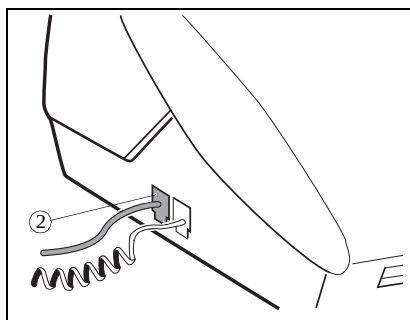

 Connect the telephone line cord plug to the appropriate connector (2) on the main unit, and connect the other end to the wall telephone socket.

For the models without handset

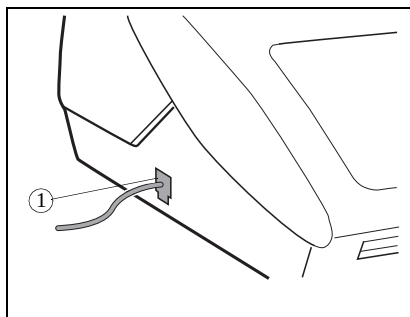

 Connect the telephone line cord plug to the appropriate connector (1) on the main unit, and connect the other end to the wall telephone socket.

SWITCHING ON

- ✎ Connect the power plug to the mains wall socket.
The unit displays **SELECT LANGUAGE**.
- ✎ Press **OK** to display the list of available languages.
- ✎ Choose the language using the ▲ or ▼ key and press **OK** to confirm.
- ✎ The unit displays **CHECK DATE** (with the selected language).
- ✎ Press **OK** and enter the date and time, using the alphanumeric keypad.
- ✎ Press **OK** to confirm.
Then, you can select another language, using the MENU 29 (please refer to § **Choice of the language** on page 18).

LOADING THE PAPER


Paper feeders or trays may contain a varying number of pages (refer to the **Description Table of the various models** given at the beginning of the present User's Manual).

You may use any standard plain paper (A4 format photocopying paper, approx. 80 g/m²). However, for optimal print quality results, we suggest you to use the type of paper recommended by the manufacturer (please refer to the last page of this User's manual).


- ❑ To avoid malfunctions and get optimal print quality, you should observe the following basic instructions:
 - use perfectly new paper without folds or rolled edges,
 - do not reload the paper tray while printing is in progress,
 - **always remove all the pages left in the tray before reloading paper.**

The method for installing the paper is different according to the model.

FOR MODELS WITH A FIXED PAPER TRAY (100 PAGES)

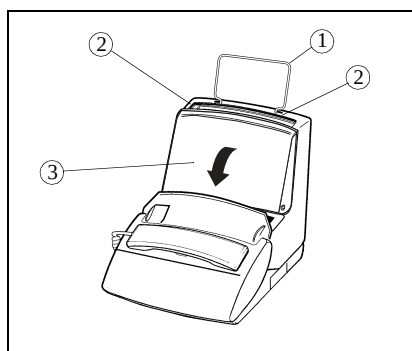

- ✎ Snap the paper holder (1) in the two slots (2) provided at the top of the sheet feeder.
- ✎ Open the feeder cover (3)

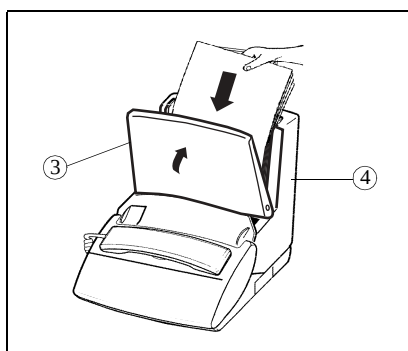

- ✎ Prepare a stack of plain paper (100 sheets maximum)
- ✎ Place the paper stack into the feeder (4).
- ✎ Close the feeder cover (3).



Telephoning



1
Directory



2
Settings



3
Fax



4
TAD



5
Printing



6
Doc control




7
Advanced functions


Options

Appendix


MODELS WITH A REMOVEABLE PAPER TRAY (30 PAGES)

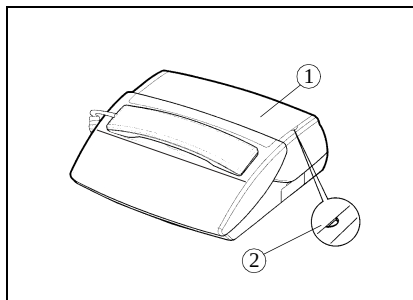

☞ To open the cover (1), use notch (2) on the side.

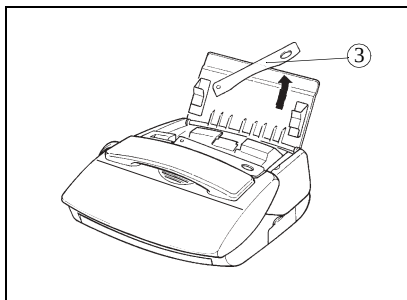

☞ Lift the paper support bracket (3).

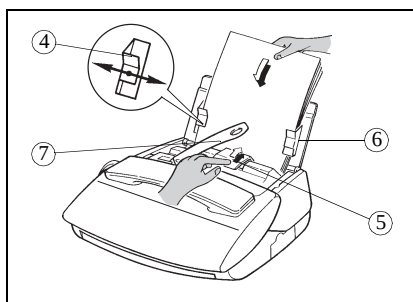

☞ Prepare a stack of paper (30 sheets max.).


☞ Insert it between the paper guides (4 and 6).

☞ Press the clip (5) to insert the paper in the fax machine's paper store.

☞ Adjust the left paper guide (4) to the width of the paper.

Caution - Lift the support bracket (7) to facilitate printout stacking.

FOR MODELS WITH SHEET BY SHEET PAPER FEEDER (1 PAGE)

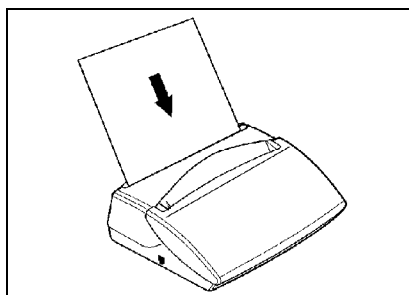

☞ Insert the paper sheets one after the other into the paper feeder.

CHOOSING THE OPERATING MODE (TEL-FAX-TAD)

FOR MODELS WITH TAD

Your machine has three distinct operating modes, which are described below automatically switches to the fax reception mode:

- automatic mode with TAD: your machine answers all calls and records incoming messages,
 - automatic mode without TAD: your machine sorts incoming calls before presenting them to you,
 - manual mode: your fax machine never answers any calls automatically.
- ☐ In each of these three modes, you may pick up the handset at any time:
- **when receiving a fax call**, you can switch your fax machine to the fax reception mode by pressing the key,
 - **when receiving a voice call**, talk with the caller.

Press one or several times on the ()-key to select the desired reception mode and press OK to confirm.

AUTOMATIC MODE WITH TAD (TEL-FAX-TAD)

Your unit works like a **telephone answering device** combined with a **fax machine**. Select that mode when you go out or if you do not want to lose any fax or voice calls.

When your machine rings, it answers after the programmed number of rings and plays the greeting message you have recorded on your TAD:

- **if the call is a fax call**, it automatically switches to the fax reception mode,
- **if the call is a voice call**, the caller will be able to leave a message.

- ☐ You can set the number of rings before your machine automatically answers (please refer to § **Number of rings for the automatic mode** on page 17).

AUTOMATIC MODE WITHOUT TAD (TEL-FAX)

Your machine **automatically sorts the calls** before presenting them to you. Select that mode if you receive many faxes and you do not want to be disturbed by their reception.

When it receives a call, your machine automatically answers without ringing^(*), the caller can hear beeps inviting him/her to wait, then:

- **if the call is a fax call**, it switches to the fax reception mode,
- **if the call is a voice call**, it rings (warning ring) for 30 seconds^(**) and the caller can hear a ringing tone. You can then pick up and talk. Otherwise, the caller will be able to leave a message on your TAD, which will answer after 30 seconds and play the greeting message.

MANUAL MODE (TEL)

Your machine mainly works like a **telephone set**: select that mode if you usually do not receive any faxes.

In that mode, your machine never answers automatically (except after 9 rings if remote interrogation is enabled. In that case, it will play the greeting message).

FOR MODELS WITHOUT TAD

Your machine has three distinct operating modes, which are described below:

- mode with fax: your machine automatically switches to the fax reception mode, you can connect an external answering machine to receive your voice messages,
- automatic mode: your machine sorts incoming calls before presenting them to you,
- manual mode: your fax machine never answers any calls automatically.

Press the ()-key once or several times to select the operating mode required.

^(*) All other telephone sets in your installation, if any, will ring normally.

^(**) All other telephone sets in your installation, if any, will not ring.



Telephoning

1
Directory2
Settings3
Fax4
TAD5
Printing6
Doc control7
Advanced functions

Options

Fax mode (FAX)

Select this mode if you expect substantial fax traffic.

The unit is not connected to an external TAD

Upon receiving an incoming call, the unit will ring and answer the call after a pre-set number of rings:

- **if the call is a fax**, the unit automatically switches to fax receive mode.
- **if the call is a voice call**, the latter will be lost unless you pick up the receiver before the programmed number of rings (i.e. before the unit automatically answers in fax receive mode).

The unit is connected to an external TAD

Please refer to § **Models with vocal tad (external)** on page 31.

Upon receiving an incoming call, the unit will ring:

- **if the call is a fax**, the unit will automatically receive the fax.
- **if the call is a voice call**, the answering machine will automatically record the message left by the caller.

Automatic mode (TEL-FAX)

The unit will **switch incoming calls automatically**. Select this mode if you expect substantial fax traffic and do not wish to be inconvenienced by incoming faxes.

Upon receiving an incoming call, the unit automatically and silently answers the call (*), plays a serie of beeps prompting the caller to wait, then:

- **if the call is a fax**, the unit automatically switches to fax receive mode,
- **if the call is a voice call**, the unit will ring for 30 seconds(**). If you fail to pick up the receiver, the unit will then automatically switch to fax receive mode.

The caller can therefore send you a fax.

Manual mode (TEL)

The unit will function like a **standard phone terminal**. Select this mode if you expect little fax traffic.

The unit is not connected to an external TAD

Upon receiving an incoming call, the unit will ring but will not automatically answer the call. To take the call manually, pick up the handset:

- **if the call is a voice call**, simply converse with the caller,
- **if the call is a fax**, press  then hang up and your unit will automatically switch to fax receive mode.

The unit is connected to an external TAD

Please refer to § **Models with vocal tad (external)** on page 31.

Upon receiving an incoming call, the unit will ring:

- **if the call is a voice call**, your answering machine will answer the call automatically and record any message left by the caller,
- **if the call is a fax**, the unit will automatically switch to fax receive mode.

FOR THE MODELS WITHOUT HANDSET

Automatic mode

Your unit receives faxes automatically with no action on your part (automatic FAX mode).

Manual mode

Upon receiving an incoming call, the unit will ring but you can not answer to an incoming call.

(*) The unit will not play the ringing tone generated by the telephone network. However, if there are any other phone terminals on the line, these will ring as normal.

(**) If there are any other phone terminals on the line, these will not ring.

- ❑ If you've got a cordless phone kit, your machine has three distinct operating modes (with fax, automatic and manual). Please refer to § **For models without TAD** on page 5.

You have to use the cordless phone to answer a call (you can't use the -key of your machine to answer a call).

THE MENUS

ACCESSING THE MENUS

As described in the next sections, your machine features many functions accessible through the menus, which allow you to set and modify them: recording a directory of numbers, memorising received or sent faxes, setting the number of rings, etc.

As can be seen in the menu guide, all functions are numbered in a main menu (e.g. 1. Directory), from which you can access the various settings for the selected function (e.g. 1.1 Add, 1.2 Modify, 1.3 Cancel or 1.4 Print a directory record).

Main menu: access to functions

- 👉 Press the **M** key.

Sub-menus: access to function settings

- 👉 Press the **▲** key to select the previous menu line.

- 👉 Press the **▼** key to select the next menu line.

- 👉 Press the **OK** key to confirm and go on to the next menu.

- 👉 Press the **C** key to return to the previous menu.

- 👉 Press the **◇** (**START**) key to confirm and exit from the main menu.

- 👉 Press the **◊** (**STOP**) key to exit from the current menu.

Moving inside a data entry field

- 👉 Press the **C** key to delete the last character.

- 👉 Hold the **C** key down to delete all the characters entered.


- 👉 Press the **▲** key to move the cursor to the left within a data entry field

- 👉 Press the **▼** key to move the cursor to the right within a data entry field

- 👉 Press the **◊** key to cancel entry and return to the initial value.

- 👉 Press the **OK** key to confirm entry and go on to the next menu item.

- 👉 Press the **◇** (**START**) key to confirm entry and exit from the current menu.

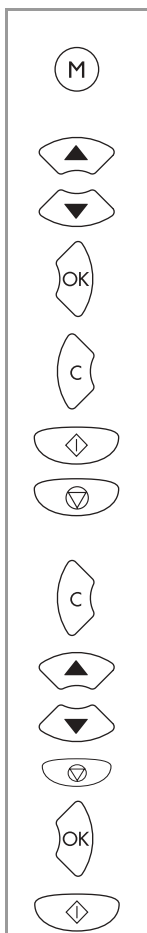

Telephoning

1
Directory2
Settings3
Fax4
TAD5
Printing6
Doc control7
Advanced functions

Options

PRINTING THE MENU GUIDE

To print the menus and thus get an overview of menus, proceed as follows:

-  Insert paper.
-  Press the **M**, **5**, **1** and **OK** keys (or press the **i** key).

The menus are classified in their order of function number. (See the section entitled **QUICK REFERENCE GUIDE, MENU GUIDE**). The functions are classified in their order of appearance in this manual. Tabs are provided for quick access to the required information.

TELEPHONING

Although it features advanced functions, your machine is also a telephone set providing a whole range of user-friendly functions.



Telephoning

CALLING

CALLING USING THE HANDSET

-  Pick up the handset.
-  Dial your party's number.

You can also dial the number before picking up the handset. In that case, you can correct any dialling error by means of the **C** key.

- ☐ You can use the **▲** and **▼** keys to adjust the volume (2 levels available).

CALLING USING THE KEY

Loudspeaker listening

-  Dial your party's number. This is displayed on the screen.
-  Pick up the handset, the machine dials automatically.
-  When your party answers, press the  key to activate loudspeaker listening.
-  You can use the **▲** and **▼** keys to adjust the volume.
-  Press the  key again to de-activate loudspeaker listening.

Hands-free mode (TAD-Models)

-  Dial your party's number.
-  Press the  key; the machine dials automatically.
-  You can use the **▲** and **▼** keys to adjust the volume..
- ☐ At any time, you can pick up the handset and continue the call (in which case the speaker and microphone are automatically disabled).

CALLING USING THE DIRECTORY

Your machine can store phone numbers in a directory. To know the applicable procedure, please refer to the section entitled **DIRECTORY (MENU 1)**.

REDIALLING ONE OF THE LAST TEN NUMBERS CALLED

-  Press the **●** (**REDIAL**) key.
-  Select the required number using the **▲** and **▼** keys .
-  To call the number displayed press the  key or pick up your handset.
- ☐ At any time, you can delete the **REDIAL** number by pressing the **C**, **●** (**REDIAL**) and **OK** keys.



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Appendix

ANSWERING A CALL

When someone calls you, your phone rings. Pick up your handset (or press the  key for the TAD and Hands-free models) and speak. To end the call, hang up the handset (or press the  key).

FUNCTIONS AVAILABLE DURING A CALL

KNOWING THE DURATION OF THE CALL

Ten seconds after dialling, a counter displays the approximate duration of the call.

ACTIVATING LOUDSPEAKER LISTENING

During the call, press the  key. This will activate the loudspeaker, enabling another person to listen to the conversation.

SWITCHING FROM HANDSET TO HANDS-FREE MODE (TAD-MODELS)

-  Hold down the  key.
-  Hang up the handset.
-  Release the  key. Conversation then goes on in the hands-free mode.

ACTIVATING THE MUTE

During a call, if you want your party not to hear you for a while, press the  key. Press that key again to resume your conversation.

RECORDING A CALL (DEPENDING ON MODEL)

During a handset call, you can record the conversation.

-  Press the **M** and  keys: recording starts.
-  To stop recording, press .
-  To listen to the recording, press .
-  To delete the recording, press **M**, **4**, **4** and **OK**.

REROUTING A CALL

To reroute a call to another set (connected to the same telephone line):

-  Press the **M** and  key.
-  Hang up the handset.
-  Go to the other set, pick up and continue the call.
- ☐ You should hang up the handset within 4 seconds. You have about 25 seconds to pick up the other handset.

SWITCH TO FAX RECEPTION MODE

If you pick up a secondary handset or take the line from a cordless phone and you cannot hear anyone speaking, you can switch your machine remotely to fax reception mode by typing # then 7.

DIRECTORY (MENU 1)

The directory is a file in which you can store phone and fax numbers, especially those of the parties you call most frequently. So, instead of dialling a phone or fax number each time you want to communicate with one of your parties, you just have to select their names from the directory. Using the data you have stored, your machine will do it all automatically for you.

- ☐ The records stored in the directory are classified in alphabetical order.

CREATING A RECORD

To fill in the directory, enter each party's phone number and name in a record. To create a new record and add it to the directory:

PRESS THE **M, 1, 1, OK** KEYS

- ☐ You can cancel the process at any time by pressing .

YOUR PARTY'S NAME

- Enter your contact's name or a handle using the alphanumeric keypad. By pressing a key once or several times, the corresponding letters are scrolled. To enter "LONDON" for instance, perform the following sequence:

3 times	3 times		2 times	1 time	3 times		2 times
L	O		N	D	O		N

- ☐ You can move in the data entry field using the or key:
 - you can delete the last character entered by briefly pressing the **C** key,
 - you can delete all the characters entered by holding the **C** key down,
 - you can insert a space by pressing twice the **0** key.

- Press the **OK** key to confirm.

YOUR PARTY'S NUMBER

- Then, enter your party's phone and/or fax number.
- Press the **OK** key to confirm.
- ☐ If your fax machine is in the premises of a company, it may be connected to a private automatic branch exchange (PABX). Some of these telephone exchanges require the insertion of a dialling prefix (e.g. 0). All numbers should be stored in the directory without that prefix. You can program the prefix automatically for all numbers (please refer to § **Prefix** on page 16). Some telephone exchanges also require the insertion of a post-dial delay. If such is the case, press the **R** key in order to insert the post-dial delay (the character / is inserted in the number displayed).

NUMBER ASSIGNED

Each new sheet created is assigned a two-digit number by which you can directly access the corresponding sheet.

- ☐ The last ten records are associated to the ten one-touch dialling keys (00-09).
- Validate the number assigned automatically or enter a number of your choice and press **OK** to confirm.



Telephoning

1
Directory2
Settings3
Fax4
TAD5
Printing6
Doc control7
Advanced functions

Options

Appendix

MAKING A CALL FROM THE DIRECTORY

Once you have stored all your parties' numbers and names in the directory, you can select one of them (to phone or send a fax) using either his name or abbreviated number as explained below.

SELECTION BY NAME

 Press the  key then use keys  and  to scroll through the records in alphabetical order.

 Then you can:

- pick up the handset or press  to call him,

or

- place a document in the document feeder and press  to fax the document.

SELECTION BY ABBREVIATED NUMBER

Your fax machine has automatically associated a 2-digit abbreviated number to each newly created record: 00 for the 1st record, 04 for the 5th record, and so on.

 Press twice the  key then dial your party's abbreviated number.

Then you can:

- pick up the handset or press  to call him,

or

- place a document in the document feeder and press  to fax the document.

-  If you do not remember which abbreviated number corresponds to a record, you can print out the directory for a copy of all the information it contains (please refer to § **Printing the directory** on page 13).

SELECTION BY ONE-TOUCH DIALLING KEY

 Press one of the one-touch dialling keys (numbered 00 to 09).

Then you can:

- pick up the handset or press  to call him,

or

- place a document in the document feeder and press  to fax the document.

EDITING A RECORD

 PRESS **M, 1, 2, OK**

 To select a record:

- Use keys  and  to scroll through the records in alphabetical order (or dial your party's abbreviated number).
- Press the **OK** key.

 To correct the data in the record (name, phone/fax number, etc.), use the ,  and **C** keys: edit the relevant data using the alphanumeric keypad and press **OK** to confirm and go on to the next data.

DELETING A RECORD

 PRESS **M, 1, 3, OK**

 Select the record you want to delete by using the ▲ or ▼ keys (or dial its abbreviated number) and press **OK** twice to confirm.
The record will be deleted.

PRINTING THE DIRECTORY

 PRESS **M, 1, 4, OK**

The directory is printed automatically. This document contains all the information you have entered (name, phone/fax number, as well as the abbreviated numbers automatically associated to each record).

Introduction



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced
functions

Options

Appendix

SETTINGS (MENU 2)

The different settings enable you to customise calls and the operating mode of your machine (choosing a ringing melody, storing faxes, etc.), but also set technical and security parameters (choosing a type of network, locking, using an access code, etc.).

DATE/TIME

PRESS **M, 2, 1, OK**

Enter the date and time using the numeric keypad and press **OK** to confirm.

Example: 7 May 2002, 9.15: press **0,7,0,5,0,2,0,9,1,5** and **OK**.

NUMBER/NAME

The data you enter in these fields will automatically be inserted in the headers of the faxes you will send, so that they will be printed on the faxes received by your contacts.

- ☐ To do so, the TX HEADER setting should be enabled (please refer to § **Technical parameters** on page 38).

PRESS **M, 2, 2, OK**

Enter your fax number and press **OK** to confirm and go on to the next field.

Enter your name (please refer to § **Your party's name** on page 11) and press **OK** to confirm.

RINGING MELODY AND KEY BEEPS

You can choose between 4 melodies or **WITHOUT MELODY** and adjust the volume of the selected melody. You can also program beeps that you will hear each time you press a key.

- ☐ If you choose **WITHOUT MELODY**, only the message **INCOMING CALL**, which is displayed on the screen when you receive a call, will tell you someone is calling you.

RINGING MELODY

PRESS **M, 2, 3, 1, OK**

Select the required melody using the ▲ or ▼ key and press **OK** to confirm.

To adjust the volume, press the ▲ or ▼ key and press **OK** to confirm.

KEY BEEPS

PRESS **M, 2, 3, 2, OK**

Select **WITH** or **WITHOUT** and press **OK** to confirm.

ALARM

PRESS **M, 2, 3, 3, OK**

Select the required option using the ▲ or ▼ key and press **OK** to confirm.

- **START**: alarm switch-on.
Enter the time at which you want the alarm to ring out, and press the **OK** key to confirm: to the right of the time, the screen displays a symbol indicating the alarm is in service.
- **STOP**: alarm switch-off.

- ☐ The alarm rings for 30 seconds. Press any key on the keypad to stop it earlier.



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Appendix

NETWORK

TYPE OF NETWORK

The telephone line to which your machine is connected may be linked either to the **public network** or to a **private network** (e.g. in a company with a PABX).

 PRESS **M, 2, 4, 1, OK**

-  Select the type of network, **PABX** (private) or **PSTN** (public), to which you are connected and press **OK** to confirm.

PREFIX

If your machine is connected to the private automatic branch exchange (PABX) of a company, you have to enter a prefix (generally 0) for outgoing calls before the number you want to call, provided that:

- the intercom numbers (for which no prefix is required) are short numbers not exceeding the minimum length from which the prefix should automatically be inserted (to be defined),
- the external numbers (for which a prefix is always required) are long numbers exceeding or equalling the minimum length from which the prefix should automatically be inserted (to be defined, for instance 10 digits in the UK).

 **IMPORTANT NOTE:** Do not change anything in the numbers you have stored in the directory. Indeed, enabling or disabling the prefix will respectively switch your machine to PABX operation (WITH prefix) or PSTN operation (WITHOUT prefix).

To set the local prefix

 PRESS **M, 2, 4, 2, OK**

-  Select the **WITH** option using the **▲** or **▼** key and press **OK** to confirm.
-  Enter the number used by your PABX to access the public telephone network (e.g. 0) followed by the / sign (or pause, access by pressing the **R** key), and press **OK** to confirm.
-  If necessary, enter the phone number length from which the prefix should automatically be added (e.g. 10 digits in the UK) and press **OK** to confirm.

NIGHT MODE

This mode enables you to switch off the ringing of your machine for a given period of time (during the night for instance), while still receiving your calls. The machine then switches to automatic reception/TAD mode and will answer after 5 rings. It will automatically receive all voice or fax messages. At the end of the NIGHT mode, the screen displays the number of messages or fax received and the  and  keys blink, and your machine automatically switches to the current reception mode. To activate the night mode:

 PRESS **M, 2, 5, OK**

OR  PRESS **F2**

-  Select **START** using the **▲** or **▼** key and press **OK** to confirm.
-  Select the night mode start time and press **OK** to confirm.
-  Select the night mode stop time and press **OK** to confirm.

To deactivate the night mode,

 PRESS **M, 2, 5, OK**

OR  PRESS **F2**

-  Select **STOP** using the **▲** or **▼** key and press **OK** to confirm.

NUMBER OF RINGS FOR THE AUTOMATIC MODE

This function enables you to set the number of rings before the automatic activation of your telephone answering device.

 PRESS **M, 2, 6, OK**

 Change the number of rings and press **OK** to confirm.



Telephoning

CORDLESS PHONE

The machine can be used together with **one** or **more** cordless phone sets, which require the installation of the cordless phone kit supplied with your machine or available from your supplier. Please refer to the instructions coming with the kit for more information. When fitted with that kit, your machine gives you access to the functions described below.

REGISTERING A CORDLESS PHONE

For each cordless phone you want to register on your machine:

 PRESS **M, 2, 7, 1, OK**

 On the cordless phone, press **OK** and **6**. A number specific to each handset appears on its display screen.

DE-REGISTERING A CORDLESS PHONE

 PRESS **M, 2, 7, 2, OK**

The main unit's screen displays the numbers for the registered handset.

 Enter the number corresponding to the handset you want to de-register and press **OK**. Your machine emits a series of beeps telling you that de-registration is in progress.

BASE STATION REGISTRATION CODE

 PRESS **M, 2, 7, 3, OK**

This function enables you to define a 4-digit registration code intended to protect your base station, e.g. from the registration of handset that do not belong to you but are in the same reception zone as your machine.

PROTECTION OF YOUR MACHINE (DEPENDENT ON MODEL)

PROTECTION OF VOICE OR FAX MESSAGES

You can protect all your messages by a code, which you will have to enter prior to consulting them. To do so, you have to set a message access lock and choose an interrogation code other than 0000.

Message access lock

 PRESS **M, 2, 8, 1, OK**

 Select the required option using the **▲** or **▼** key:

- **WITHOUT:** no interrogation code for local access to the messages,
- **WITH:** local access to the messages is possible only after entering the interrogation code.

 Press **OK** to confirm.



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Appendix

Access to locked messages

If you have chosen **WITH** message access lock, the message access procedure is as follows:

- ➡ Press the  or , depending on the type of messages (fax or voice messages).
- ➡ Enter the remote interrogation code.

REMOTE INTERROGATION CODE

This function is used to define the remote interrogation code for any voice or fax messages received.

➡ PRESS **M, 2, 8, 2, OK**

- ➡ Enter your code.
- ➡ Press **OK** to confirm.

CHOICE OF THE LANGUAGE

You can choose the language displayed on the screen:


➡ PRESS **M, 2, 9, OK**

- ➡ Select the language (**ENGLISH, FRANÇAIS, DEUTSCH, ESPAÑOL, ITALIANO**) using the  or  key and press **OK** to confirm.
- ➡ Press **OK** and choose the corresponding network (for the Display Caller Service) and press **OK** to confirm.


FAX (MENU 3)

INSERTING THE DOCUMENT INTO THE FEEDER

MODELS WITH A FIXED PAPER TRAY

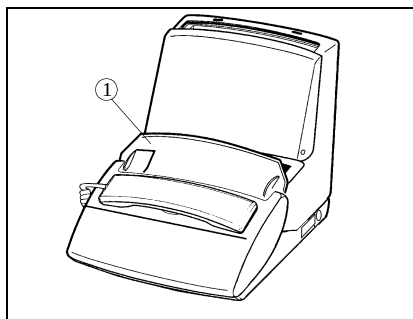

☞ The document feeder (1) receives up to 15 pages.

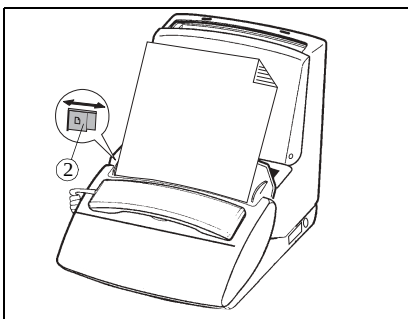


☞ Insert the document, printed face down, into the document feeder. If necessary, adjust the left paper guide (2) to the width of the document.

☞ The machine displays **READY**.

☐ Your machine has an automatic document feeder. The last sheet in the stack will be sent out first.


MODELS WITH A REMOVEABLE PAPER TRAY

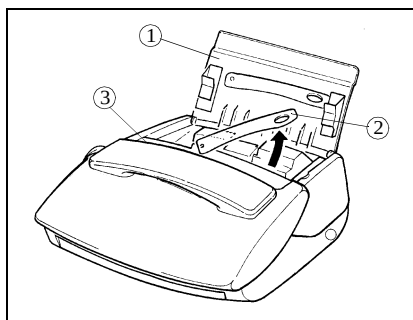

☞ Lift the fax access door (1).

☞ Lift the document support bracket (2).

☞ The document feeder (3) receives up to 15 pages.

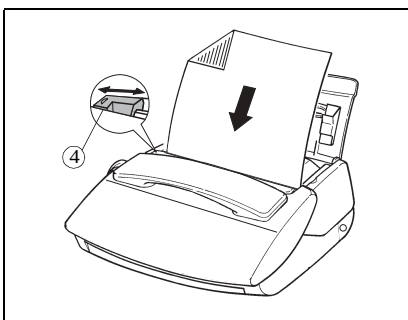

☞ Insert the document, printed face down, into the document feeder. If necessary, adjust the left paper guide (4) to the width of the document.

☞ The machine displays **READY**.

☐ Your machine has an automatic document feeder. The last sheet in the stack will be sent out first.



Telephoning



1
Directory



2
Settings



3
Fax



4
TAD



5
Printing



6
Doc control




7
Advanced functions


Options

Appendix

MODELS WITH A SHEET BY SHEET PAPER FEEDER

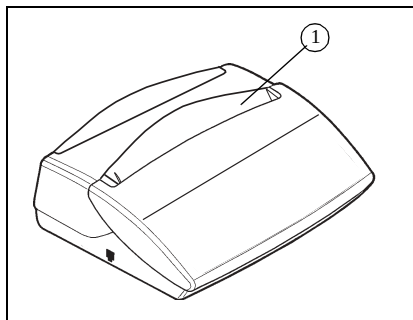

The document feeder (1) receives up to 1 page.

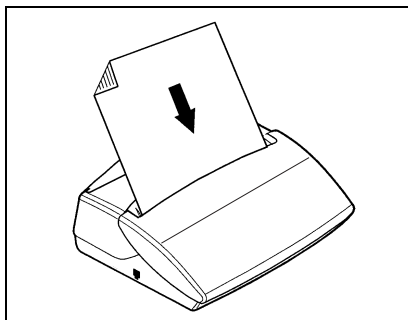

Insert the document, printed face down, into the document feeder.

The machine displays **READY**.

Caution - To remove a sheet from the feeder or from the paper tray, press .

SENDING A FAX

DOCUMENT RESOLUTION

Your machine has three resolution modes. You will select one of these modes according to the type and print quality of the document you want to fax.

- **standard** mode: for a good quality document without minute details.
- **FF (FINE)** mode: for a document with small characters or drawings.
- **(PHOTO)** mode: when the document is a photograph.

Press the **FF** key once or several times to change the resolution mode. The mode selected is displayed on the screen.

SENDING A FAX

Immediate transmission

Insert the document into the feeder, printed face down, first page last in the stack of sheets (for models whose feeder can accommodate several pages).

Dial the addressee's fax number and press to confirm.

Transmission from the directory

When all your parties' names and numbers are stored in the directory you can select one of them (to phone them or send them a fax), please refer to § **Making a call from the directory** on page 12, for further information.

Broadcast transmission

To send the same document to several addressees, proceed as follows:

Place the document into the feeder, dial the fax number of the first addressee, or select it from the directory. Press the **OK** key to confirm.

Dial the fax number of the next addressee or select it from the directory. Press the **OK** key to confirm.

Repeat this procedure for all the addressees you wish to include in this broadcast (maximum 6), making sure you validate the last addressee by pressing the key to start an immediate transmission.

Delayed transmission

To program delayed transmission for a document, proceed as follows:

 Insert the document into the feeder.

 PRESS **M, 3, 1, OK**

 Dial the addressee's fax number.

 Press **OK** if you want to enter another addressee.

or

 Press twice **OK** and enter the time at which you want your fax to be sent and press **OK** to confirm.

 Choose the required type of transmission (from the machine's **MEMORY** or from the document **PAPER FEEDER**) and press **OK** to confirm. (please refer to § **Transmission from the machine's memory or the document feeder** on page 21, for further information).

 Enter the number of pages of the document and press **OK** to confirm.

CHOOSING THE TYPE OF TRANSMISSION REPORT

You can program your machine so that a transmission report is printed each time you send a fax. There are three types of report available:

 PRESS **M, 3, 4, OK**

 Select the required option using the **▲** or **▼** key:

- **WITH:** a transmission report is printed if there has been no transmission problem or if it is definitively aborted (i.e. after 6 unsuccessful attempts). So, there is only one report for each transmission request.
- **WITHOUT:** no report is printed following a fax transmission (consult the transmission log to keep track of all communications).
- **IF ERROR:** a transmission report is printed after each unsuccessful transmission attempt.

 Press **OK** to confirm.

TRANSMISSION FROM THE MACHINE'S MEMORY OR THE DOCUMENT FEEDER

You can choose between two modes of transmission:

- from the machine's **memory**: the document to be faxed is stored in your machine's memory before it is sent. This mode enables you to pick up original copies more quickly and to send a fax to several addresses.
- from the **document feeder**: the document is faxed right after placing it in the feeder and dialling. This mode enables you to send voluminous documents whose size may exceed the memory capacity.

 PRESS **M, 3, 5, OK**

 Select the required option using the **▲** or **▼** key.

- **MEMORY:**
The document is first stored in the memory of your fax machine, then it is transmitted.
- **ADF:**
Document scanning and transmission are performed at the same time. If the addressee's fax machine does not answer, the documents remains in the feeder.

 Press **OK** to confirm.



Telephoning



1
Directory



2
Settings



3
Fax



4
TAD



5
Printing



6
Doc control



7
Advanced functions

Options

Appendix

RECEIVING A FAX

Your machine has a reception memory enabling it to receive your faxes even when out of paper. Depending on the settings made, your machine can print out your faxes as soon as these are received or store them in its memory.

When at least one fax is present in the memory, the  key of your machine blinks. The key is off if there is no fax in the memory or if you have printed all the faxes received.

PRINTING FAXES RECEIVED IN THE MEMORY

-  To print out stored faxes, put paper in the paper tray, and press the  key. If the machine runs out of paper, add some so that printing restarts automatically after the last printed page.
- ☐ You can protect the access to your faxes by means of a code (please refer to § **Protection of voice or fax messages** on page 17, for more information).

RECEPTION FROM THE MEMORY (FAX ANSWERING MACHINE) OR DIRECT PRINTING

When activated, this function enables you to store all messages received in the memory, until you choose to print them out. When the function is de-activated, all documents are printed as soon as they are received.

 PRESS **M, 3, 6, OK**

-  Select the required option using the  or  key:
 - **WITH:** the documents you receive are stored in the memory,
 - **WITHOUT:** the documents you receive are printed at once (if there is paper in the feeder),
-  Press **OK** to confirm.

REMOTE INTERROGATION OF THE FAX ANSWERING MACHINE (TAD-MODELS)

If you are away and have a fax machine where you are (set to the tone dialling mode), you can retrieve and print the faxes received on your own fax machine.

- ☐ As delivered, the remote interrogation option is not available: to interrogate your fax answering machine remotely, you should first enter an interrogation code, which is shared with the TAD (so that you can also listen to your voice messages). Please refer to § **Remote interrogation code** on page 18, for more information and set your machine to the "automatic reception with TAD" mode.
-  On a remote fax machine featuring a telephone set, dial your own number.
-  Press the ***** key during the greeting message, then enter the 4 digits of your interrogation code: the machine first delivers the voice messages (if there are any).
-  As you hear the beeps, press the **8** then **0** keys.
-  Switch on the fax machine by pressing the  key as soon as you hear the fax tone: (if no fax has been memorised, your fax machine will deliver a series of beeps) your own fax machine will then forward all the faxes stored in its memory.

Caution - When you interrogate your fax answering machine remotely, the forwarded documents are automatically erased from its memory.

RECEPTION MEMORY SATURATION

When there are too many documents or voice messages in the memory, the machine is saturated and will not be able to take in any extra message: the **MEMORY FULL** message appears on the screen. Print the stored faxes and/or erase all voice messages to get some spare memory.

DURING TRANSMISSION

STOPPING A TRANSMISSION

-  Press the  key.
-  Press the  key again to confirm you want to stop the current transmission.

PHONE CALLS

To call your party

You can call your party just after sending or receiving a fax. To do so, while the document is being transmitted (send or receive mode), you should:

-  Press the  key while your fax machine displays **TRANSMIS** or **RECEPTION**. Your fax machine then displays **PHONE**:
 - once the fax has been transmitted, your party's phone rings, if its machine is compatible,
 - if he answers, your machine starts ringing: pick up the handset and speak.

Your party calls you

 
When your party calls you, your phone rings and you can pick up the handset and speak.

ADVANCED FUNCTIONS

POLLING A DOCUMENT

Polling a document consists in leaving it in your machine's memory or document feeder, thus making it available to one person (**single polling**), or several persons (**multi polling**), who can then perform "active polling" on it. This requires that your machine be set to the automatic or fax mode.

-  Insert the document into the feeder.
-  PRESS **M, 3, 3, OK**
-  Select one of these two options using the  or  key:
 - **SINGLE POLLING**: the document will be deleted from the memory as soon as it has been retrieved.
 - **MULTI POLLING**: the document can be retrieved by several persons.
-  Press **OK** to confirm.
-  If you have selected **SINGLE POLLING**, you can then select one of the two following options with keys  or  and press **OK** to confirm:
 - **MEMORY**: the document is stored in your machine's memory. This solution frees your machine.
 - **PAPER FEEDER**.
-  Enter the number of pages of the document and press **OK** to confirm.
- ☐ A message on the screen tells you if there is any document for polling. A single polling document will automatically be deleted from the memory as soon as retrieved, unlike multi polling, which you can cancel through menu 63 (please refer to § **Deleting a command from the queue** on page 35).



Options

Appendix

RETRIEVING A DOCUMENT

When a document has been polled on a remote fax, you can perform an "active polling" on it (i.e. print it out on your own fax machine), only if there is no document in your feeder.

 **PRESS M, 3, 2, OK**

 Dial the number of the fax machine containing the polled fax and press the **OK** key.

 Press the  key for immediate active polling.

or

 Press twice **OK** for delayed active polling:

- Enter the time required for active polling, and press the  key to confirm.

TAD (MENU 4)

MODELS WITH TAD (INTERNAL)

Your machine features a telephone answering device (TAD) whose simple and extensive functions provide a wide range of possibilities: leaving a message to persons calling you in your absence, letting them leave you a message, interrogating your machine remotely as done for fax machines, etc.

Your TAD features two options:

- **ANSWERING MACHINE:** callers cannot leave you a message after the greeting message, which only gives them some information.
- **ANSWERING-RECORDING MACHINE:** callers can leave you a message after the greeting message.

GREETING MESSAGES

The machine has 2 distinct greeting messages, corresponding to the two functions of the TAD (answering machine or answering-recording machine).

Answering-recording machine

Recording the greeting message

 **PRESS M, 4, 1, 1, OK**

-  Pick up your handset and record your greeting message (20 seconds max.).
The time in seconds is counted down as you record your message.

-  Hang up your handset to stop the recording. Your message is then played back, after which you can put your TAD into service.

Playing back the greeting message

 **PRESS M, 4, 2, 1, OK**

-  Your machine plays back the greeting message you have recorded.

Answering machine

Recording the greeting message

 **PRESS M, 4, 1, 2, OK**

-  Pick up your handset and record your greeting message (90 seconds max.).
The time in seconds is counted down as you record your message.

-  Hang up your handset to stop the recording. Your message is then played back, after which you can put your TAD into service.

Playing back the greeting message

 **PRESS M, 4, 2, 2, OK**

-  Your machine plays back the greeting message you have recorded.

SWITCHING ON

Selecting the type of TAD

 **PRESS M, 4, 5, OK**

-  Select the required type of TAD (**RECORD UNIT** or **ANSWER ONLY**) using the ▲ or ▼ key and press **OK** to confirm.



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Switching the TAD on / off

Switching on

-  Press the (  )-key. When you are in mode **TEL-FAX-TAD**, your answering machine is on.
-  Press **OK** to confirm.

Switching off

-  Press the (  )-key. When you are in mode **TEL** or **TEL-FAX**, your answering machine is off.
-  Press **OK** to confirm.

MESSAGES

When you have received at least one message, the screen displays the total number of messages (except if there is a pending command) and the  key on your machine blinks. This key is off if there are no pending messages, and is steady on when all received messages have already been listened to.

Listening to messages

-  Press the  key. For each message being listened to, the screen displays the sequence number together with the date and time of reception.
- While listening to the messages, you can press the following keys:
-  or  to adjust the audio volume,
 - **C** twice to return to the beginning of the message,
 - **OK** to skip to the next message,
 -  for a pause. Press the same key again to resume listening,
 - you can also use the remote interrogation controls (please refer to § **Remote interrogation** on page 27).

Local message

You can record a local message on your TAD, which will be like a message left by a remote caller. This function is very useful when you have to go out of your office or home and you want to leave a message for anyone coming in after you.

Recording the local message

 PRESS **M** AND , OR

 PRESS **M, 4, 3, OK**

-  Pick up the handset and record your message.
-  Hang up the handset to stop the recording.

Playing back the local message

-  Press the  key.

Deleting messages

Deleting all messages

 PRESS **C** AND , OR

 PRESS **M, 4, 4, OK**

- ☐ All messages must have been played back to be erased this way.

Deleting a selected message

Individually, while listening to it, you can delete a message that has not been totally listened to.

-  Press the **C** key, then **OK** during the message you want to delete.

Saturation of the TAD's memory

When too many faxes have been received and too many messages have been recorded, your machine is saturated and cannot take in any other message: the message **MEMORY FULL** is displayed. Print out the faxes and/or delete the voice messages to get some spare memory.

REMOTE INTERROGATION

You can interrogate your TAD remotely and thus listen to the messages you have received, only if the telephone set you are calling from supports the tone dialling mode.

- ☐ As delivered, this option is not available: to interrogate your TAD remotely, you should first enter a remote interrogation code, which is shared with the fax answering machine (so that you can also print out the faxes received). Please refer to § **Remote interrogation code** on page 18, for more information.
-  On a remote telephone set, dial your own number.
-  Press the * key during the greeting message, then enter the 4 digits of your interrogation code: the machine delivers all the voice messages you have received.
-  After the last message or if there is no message, the machine emits a series of beeps.


List of available remote operations:

While listening:

- Pause or resume message listening by pressing **5**.
- Go to the next message by pressing **6**.
- Listen to the same message again by pressing **4**.
- Go back to the previous message again by pressing **4** twice.

After listening:

- Delete received messages by pressing **1** then **5**.
- Record your greeting message by pressing **8** then **3** and stop the recording by pressing any key.
- Listen to your greeting message by pressing **3**.
- Switch on your TAD by pressing **7**.
- Switch off your TAD by pressing **9**.
- Resume message listening by pressing **5**.

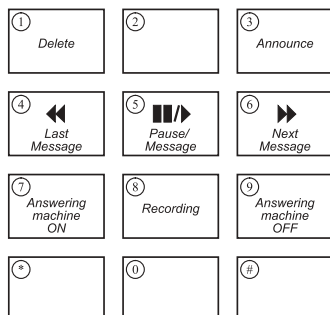

Telephoning



Directory



Settings



Fax



TAD



Printing



Doc control



Advanced functions

Options

Appendix

ADVANCED FUNCTIONS

Call screening

This function enables you to listen to the caller leaving you a message on your TAD, before deciding on whether to pick up or not.

 PRESS **M, 4, 6, OK**

 Select the required option using the ▲ or ▼ key:

- **WITH:** you can hear the messages as they are recorded on your TAD, and:
 - adjust the **SPEAKER** volume using the ▲ and ▼ keys,
 - pick up to answer the call.
- **WITHOUT:** messages are recorded in silence, only a message on the screen tells you you are receiving a call and a message is being recorded:
 - you can pick up to answer the call.

 Press **OK** to confirm.

☐ The call screening feature is not available if you have activated the privileged access mode (see below).

Privileged access

This function enables you to choose a code, which you will give to those persons who may call you at a given moment (e.g. your collaborators during a meeting or your close relatives from a certain time).

Parameterisation of the privileged access code

 PRESS **M, 4, 8, OK**

 Enter a privileged access code other than **0000** and different from the remote interrogation code.

 Press **OK** to confirm.

Putting the privileged access mode into service

 PRESS **M, 4, 7, OK**

 Choose **WITH** using the ▲ and ▼ keys.

 Press **OK** to confirm.

Privileged calls

Only those privileged callers having your access code will be able to call you.

To do so, they should proceed as follows:

 Dial your number.

 Wait until your unit answers.

 Press the * key during the greeting message, then enter the 4 digits of your privileged access code: your machine only starts ringing then.

☐ If you do not answer, the caller will have the possibility to leave a message on your TAD.

DETACHABLE QUICK REFERENCE CARD

Quick reference card for operating
your TAD featuring
the remote interrogation function

Your TAD code: *

--	--	--	--

① Delete	②	③ Announce
④ Last Message	⑤ Pause/ Message	⑥ Next Message
⑦ Answering machine ON	⑧ Recording	⑨ Answering machine OFF
* 	0 	#

- Go to the next message by pressing ⑥.
- Listen to the same message again by pressing ④.
- Go back to the previous message by pressing ④ twice.
- Delete the received messages by pressing ① then ⑤.
- Record your greeting message by pressing ⑧ then ③ and stop the recording by pressing any key.
- Listen to your greeting message by pressing ③.
- Switch on your TAD by pressing ⑦.
- Switch off your TAD by pressing ⑨.
- Resume message listening by pressing ⑤.

From a fax machine:

- After listening to the message: 8, 0 then  to retrieve the faxes stored in your machine's memory.



Introduction



Telephoning



Directory 1



Settings 2



Fax 3



TAD 4



Printing 5



Doc control 6



Advanced functions 7

Options

Appendix

MODELS WITH VOCAL TAD (EXTERNAL)

CONNECTION

You can connect a telephone answering machine to your machine using the same telephone. This makes your phonefax:

- a fax,
- a telephone,
- a personal telephone answering machine.

 Connect the telephone line cord of your external answering machine (TAM) to the piggy back connector of the telephone jack.

PUTTING INTO SERVICE

Make sure your TAD is permanently on (connected to the mains or in automatic mode).

USE

Please refer to § **Choosing the operating mode (TEL-FAX-TAD)** on page 5.

Caution - To ensure correct call sorting, the number of rings programmed in your unit must be greater than the number of rings after which the external answering machine picks up.



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Appendix

PRINTING & LOCAL COPY (MENU 5)

The **Printing (MENU 5)** can be accessed directly using the **F3** key.

PRINTING

FUNCTION GUIDE

Prints the list of the numbered functions.

PRESS **M, 5, 1, OK**

LOGS

Prints the transmission and reception logs, which list the last 30 communications.

PRESS **M, 5, 2, OK**

DIRECTORY

Prints the directory.

PRESS **M, 5, 3, OK**

SETTINGS

Prints the list of your machine's settings.

PRESS **M, 5, 4, OK**

LATEST TRANSMISSION REPORT

PRESS **M, 5, 5, OK**

LOCAL COPY

FOR MODELS WITH DOCUMENT FEEDER ACCOMMODATING 15 PAGES

Photocopy

The machine can be used as a photocopier.

- Insert the document to be copied in the document feeder, as you would for a transmission.
- Choose the resolution mode by pressing the **FF** key (by default, your copier uses the **FINE** mode during local copying)..
- Press the key.



Multicopy (models with fixed paper tray)

PRESS **M, 5, 6, OK**

- Type in the number of copies you want to print on the numeric keypad (1 to 99).
- Press the **OK** key: the document is stored and then printed.
- ☐ The multicopy function cannot be used to print out a received fax; it applies only to a printed document of which you want one or more duplicates.

FOR MODELS WITH DOCUMENT FEEDER ACCOMMODATING 1 PAGE

The machine can be used as a photocopier.

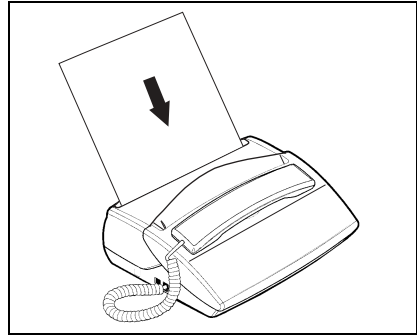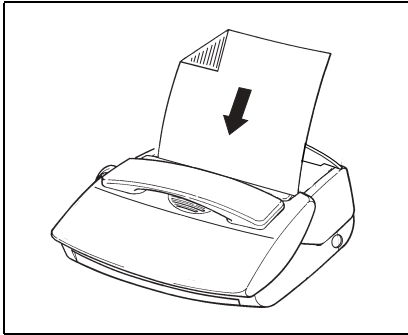

- ✎ Insert the first page to be copied into the document feeder, as you would for a transmission.
- ✎ Select the resolution mode by pressing on the key **FF**  (by default, your copier uses the FINE mode during local copying).
- ✎ Press on , the machine memorises your document. Once the memorisation is completed, the machine beeps and the screen displays **INSERT DOCUMENT** for a few seconds.
- ✎ Insert the following page, then proceed similarly for the other pages of your document.
- ✎ Press on , once all the pages have been memorised: the screen displays **OUT OF PAPER**.
- ✎ Insert a sheet of paper into the print feeder. The machine prints automatically your document.

RIBBON GAUGE DISPLAY

✎ PRESS **M, 5, 7, OK**

The ribbon gauge shows the available quantity of ribbon in percent.

DOCUMENT CONTROL (MENU 6)

A set of menus enables you to control all the pending commands (delayed transmission, passive polling, active polling), and enables you to run, modify, cancel or delete them.

EXECUTING A PENDING COMMAND

This function is used to immediately execute a pending command:

 PRESS **M, 6, 1, OK**

The status of the pending documents is shown:

- **POL** : ACTIVE POLLING
- **TX** : DELAYED TRANSMISSION

 Select the required command using the **▲** or **▼** key.

 Press the **OK** key to execute it.

CONSULTING OR MODIFYING THE QUEUE

 PRESS **M, 6, 2, OK**

 Select the command you want to consult or modify using the **▲** or **▼** key.

 Press the **OK** key and modify the parameters for the displayed transmission request.

 Press the **OK** key to confirm your changes.

DELETING A COMMAND FROM THE QUEUE

 PRESS **M, 6, 3, OK**

 Select the command you want to delete using the **▲** or **▼** key.

 Press the **OK** key to delete the request from the queue.

 Press the **OK** key to confirm deletion.

PRINT A DOCUMENT WAITING FOR TRANSMISSION

This function enables you to know the content of a document waiting for transmission.

 PRESS **M, 6, 4, OK**

 Select the pending document using the **▲** or **▼** key.

 Press the **OK** key to print out the selected document.



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6

Doc control



7

Advanced functions

Options

Appendix

PRINTING OUT THE LIST OF PENDING OPERATIONS

This list shows, for each pending document: the sequence number of the pending operation, the addressee's name, the scheduled transmission time, the type of pending operation, the number of pages in the document and its size (percentage of memory taken up by the document).

To print out the list,

 **PRESS M, 6, 5, OK**

ADVANCED FUNCTIONS (MENU 7)

RELAYING RECEIVED DOCUMENTS (DEPENDING ON MODEL)

ACTIVATING/DE-ACTIVATING THE RELAY FUNCTION

You can automatically relay all received messages (faxes or voice messages) to another telephone set or fax machine.

 PRESS **M, 7, 2, OK**

Choose one of the following three options using the **▲** or **▼** key, and press **OK** to confirm:

ON

- Enter the destination **phone/fax number**. Press **OK** to confirm.
- Choose the **type of messages** to be forwarded (**VOCAL**, **FAX** or **VOC/FAX RELAY**) and press **OK** to confirm.
- If you have chosen **VOCAL** or **VOC/FAX**, enter the **remote interrogation code** of your answering machine (if not already done), and press **OK** to confirm.
- Choose **SECURED RELAY** or **FREE RELAY** and press **OK** to confirm.
- If you have chosen **FAX** and **SECURED RELAY**, enter the **remote interrogation code** of your answering machine (if not already done), and press **OK** to confirm.

OFF: all your messages will be kept in your fax machine.

SETUP: if you have already activated the relay function once, this menu enables you to change a number of parameters (addressee's phone/fax number, type of messages to be relayed, remote interrogation code, secured relay or free relay, etc.).

Once you have made the changes, validate menu 721>**ON** again by pressing the **OK** key in order to re-activate the relay function taking the changes into account.

RETRIEVING RELAYED DOCUMENTS

When receiving your relayed documents on the destination phone/fax, you should apply the following procedure:

-  Pick up the handset.
-  Enter the remote interrogation code as you hear the beeps.
-  Then, follow the same procedure as for remote interrogation to listen to the voice messages and/or receive the fax messages.



Telephoning



Directory



Settings



Fax



TAD



Printing



Doc control



Advanced functions

Options

TECHNICAL PARAMETERS

The technical parameters are arranged into a list in which you move using the ▲ and ▼ keys. To access technical parameters:

 PRESS **M, 7, 9, OK**

02 TX HEADER:	you can insert your name, your fax number, the date and time on the header of the fax received by the addressee.
03 TX LOCK UP:	lock up the fax transmission speed.
04 ANTI ECHO:	inhibit the satellite echo in case of fax problems in long-haul calls.
10 RX HEADER:	print the sender's name and fax number as well as the date and time on the header of the fax you receive.
11 RX LOCK UP:	lock up the fax reception speed.
20 REDUCE MODE:	choose the printing reduction mode (received faxes, local copies): automatic or fixed.
21 REDUCE RATE:	set the printing reduction rate.
22 NB OF PAGES:	give the number of pages printed (received faxes and local copies) since machine switch-on.
40 RECALL LENGTH:	choose the in-line interrupt time (long or short) of the R key "Flash" signal.
50 SORTED PRINT:	print documents in reverse order of reception (or scanning for a local copy) depending on model.

REMOTE CONTROL FROM AN EXTENSION SET

You can control your machine remotely from an extension tone dialling telephone set in your installation.

- ☐ If the extension set is configured in pulse dialling mode, type * to switch it to tone dialling mode.

SWITCHING OFF THE TAD

If you take the line from an extension set and your machine did so before you and is playing your TAD's greeting message, press # then **0** to switch off the TAD.

SWITCHING TO FAX RECEPTION MODE

If you take the line from an extension set and you cannot hear anyone speaking, you can switch your machine remotely to fax reception mode by typing # then **7**.

DISPLAY



Telephoning

	Machine display	Handset display
Number	INCOMING CALL NUMBER/NAME	NUMBER ONLY
Number withheld	INCOMING CALL alternating with WITHHELD	-----
Number unavailable	INCOMING CALL alternating with UNAVAILABLE	
Operator	INCOMING CALL alternating with UNAVAILABLE	
International	INCOMING CALL alternating with UNAVAILABLE	
Payphone	INCOMING CALL alternating with NUMBER	NUMBER
Ringback	INCOMING CALL alternating with NUMBER/NAME	NUMBER ONLY


1
Directory
2
Settings

 **3**
Fax

TAD

- 
- 5
Printing

Doc control

Advanced functions

Options

Appendix

When displaying call details the display alternates between the name (or number) and the date and time of the call. It will also show a **T** to indicate a telephone call, a **F** for a fax call or a **A** if the caller has let you a message.

To review the list from the cordless handset

- Press **i** then . The display shows details of the last call.
- Use the  and  keys to scroll through the list.
- To call a number from the stored list press the  key.

APPENDIX

REPLACEMENT OF CONSUMABLES


Consumables (ink ribbon and ribbon gauge card) are already installed in your machine, but you will eventually have to change them. To do so, please refer to the instructions given in the following paragraphs.

INK RIBBON


The ink ribbon enables the unit to print on normal paper.

Caution - Only use the ink ribbon matching the manufacturer's specifications. To use other types of ink ribbon could damage the unit and invalidate the guaranty. Documents printed by your unit can be read from the used portion of the worn ink ribbon. If these documents are considered as confidential, you may want to remove the ink ribbon whenever you leave the unit.


 Pick up the handset (models with handset) and put it on the side.

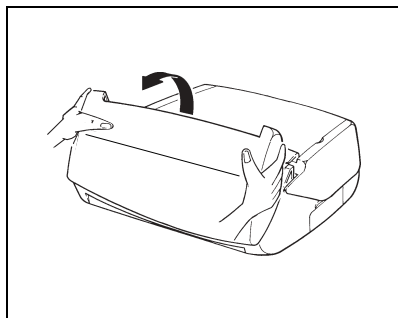


OR

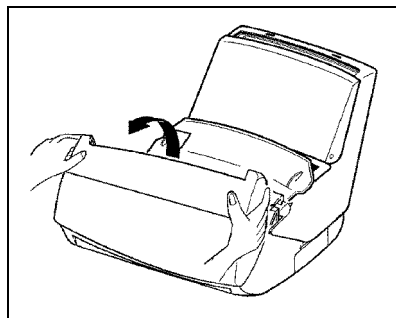

 Open the front cover: lift it towards you until it remains open.

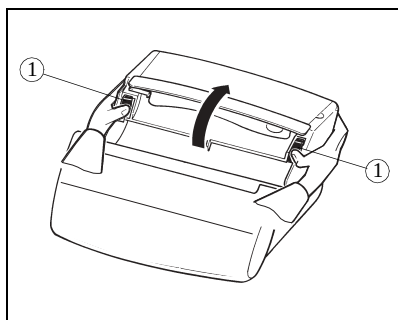

OR

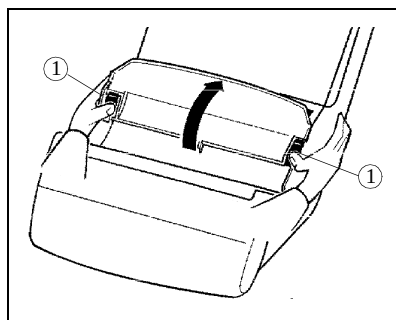

 Open the rear cover: unlock the latches (1) before pushing the cover towards the rear.



Telephoning



1

Directory



2

Settings



3

Fax



4

TAD



5

Printing



6


Doc control




7

Advanced functions


Options

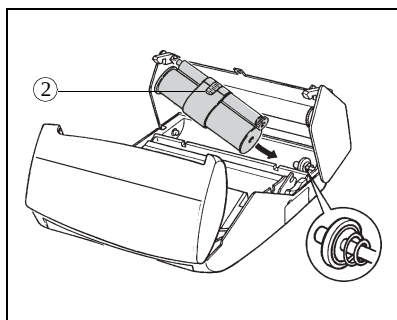


OR

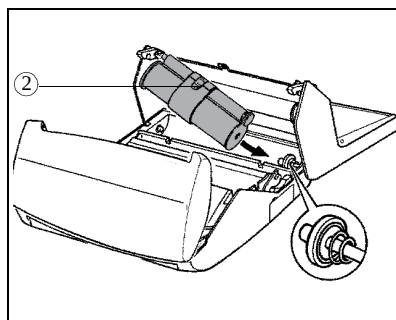


- ✎ Remove the worn ink ribbon from its housing.
- ✎ Position the ink ribbon above its housing under the rear cover.
- ✎ Insert the ink ribbon into its housing without removing the adhesive strip (2):
 - Position the right-hand (white) end of the main roller onto the retractable axis.
 - Position the left-hand (green) end of the main roller onto the left axis.

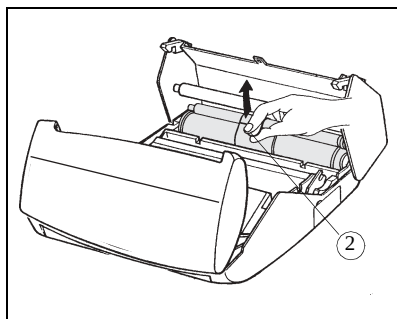


OR

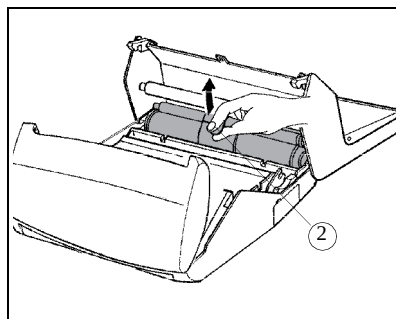

- ✎ Pull off the adhesive strip (2) from the ink ribbon.

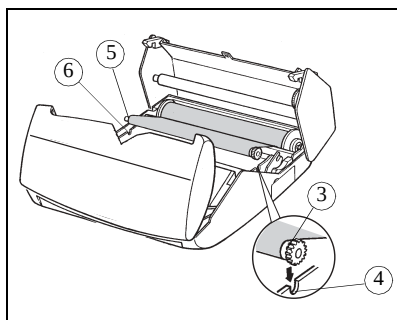


OR

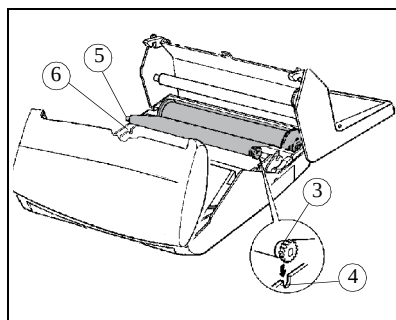


- ✎ Insert the small roller into its housing:
- ✎ Check that the gear axis (3) is correctly positioned in its slot (4) as is the other axis (5) in its corresponding slot (6).
- ✎ Close the rear cover.

RIBBON GAUGE


The gauge card enables screen display, after printout, of the percentage of remaining ink ribbon.

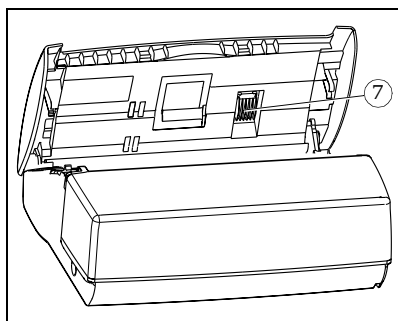


- ☞ The front cover being open, locate the gauge card housing (7).

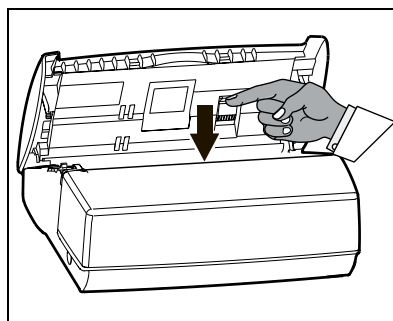


- ☞ Push downward on the gauge card housing to unlock it: it opens automatically, letting you access the worn gauge card.

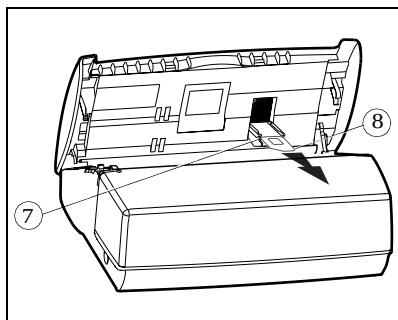


- ☞ Remove the worn gauge card (8) from its housing.

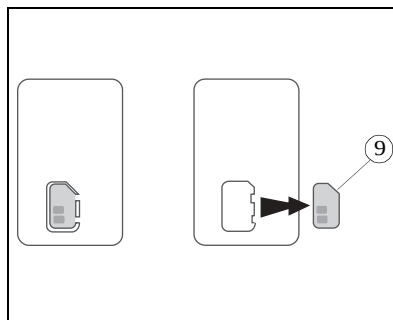


- ☞ Remove the new (pre-cut) gauge (9) from the ribbon gauge card (8).

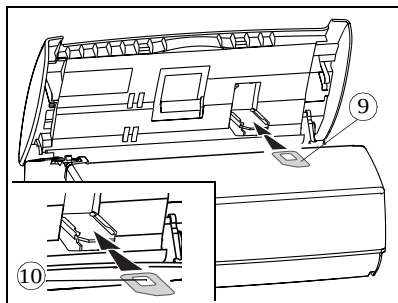

- ☞ Insert the new gauge card (9) into its housing. Make sure the chip (10) of the gauge card (9) is **upwards, bevelled corner to the top left side**.

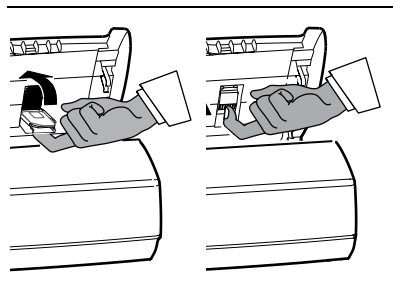

 - ☞ Close the flap of the gauge card housing by rotating it. Once into place, push it upward to block it. Close the cover and replace the handset.



Caution - The gauge card displays on the screen, after each printing, the percentage of remaining ink ribbon. If the gauge is not installed or not properly installed, the unit displays: **MISSING GAUGE**.

❑ If you forgot to change the gauge at the same time as the ribbon, the unit displays: **GAUGE EMP**.

TROUBLESHOOTING

Failures	Remedies
The screen remains blank.	Check that the power cord is correctly connected on both its sides.
The machine does not answer the call.	- Check the reception mode. - Check the number of rings (please refer to § Number of rings for the automatic mode on page 17). - Configure the machine on "private network" (please refer to § Network on page 16).
The printed photocopy is blank.	The document was placed upside down in the document feeder.
The telephone exchange does not recognise the number you have called.	- Check that the telephone line cord is correctly connected to the device. - Check the telephone line and the phone outlet.
The machine does not ring.	Restore ringing (please refer to § Ringng melody and key beeps on page 15).
The telephone does not work.	- Check that the power cord is correctly connected on both its sides. - There may be a power failure. - Check the telephone line and the phone outlet.
One or several vertical black strips appear on the documents copied or received by your party.	Open the front cover and clean the scanning device (analysis) located in front of the white roller with a soft lint-free rag soaked with alcohol. After cleaning, close the front cover and make a copy to check that the black strips have disappeared.
The gauge card housing has unclipped.	You may easily put it back into place: approach the gauge card housing, striations downwards, and position both axes towards the slots of the housing lower part, then push until clipping (please refer to § Replacement of consumables on page 41).
The screen displays: OUT OF PAPER PRINTER COVER REMOVE PAGE OVERHEATING GAUGE EMPTY	- Put paper into the paper feeder. - Close the rear cover. - Open the rear cover to access the paper path and remove the sheet of paper. Make sure the rear cover is properly closed afterwards. - The last printed documents show a lot of black smears, the printer temperature is too high. Wait a few minutes for it to cool. - You probably forgot to replace the gauge when you replaced the printer ribbon.

Failures	Remedies
MISSING GAUGE	- Remove the gauge housing cover and make sure the gauge is present and correctly positioned. - The ink ribbon is completely used: install a new printer ribbon with its new gauge. - Open the front cover and check the document path. - Print the received faxes (and/or listen to the vocal messages received).
CHANGE RIBBON	
REMOVE DOCUMENT	
MEMORY FULL	
• Other cases	• Call your after-sales service.

CODES OF THE TRANSMISSION REPORT

The result of each communication is given by the logs (transmission/reception) and the communication report. In case of failure, the result is a code, whose meaning is as follows:

FAILURE CODES

Code 01 - Your party does not answer

Please call later.

Code 02 - The called number is suspect, since no fax answers

Check the number of your party.

Code 03 - STOP

You pushed on STOP during the communication.

Code 04 - Invalid abbreviated number

Check the number.

Code 05 - Document feeder failure during the communication

Document jam or failure of the document feeder.

Code 07 - Failure in the operation of the remote terminal or line

Restart the communication.

Code 08 - The document you sent may not have been correctly received

Send it again and check with your party.

Code 0A - Active polling

You tried an active polling while the remote terminal had no document to be polled.

Code 0B - Difference between the number of pages forecast at transmission and the number of pages sent

Check the number of pages.

Code 13 - Full memory

Fax reception has become impossible.

Code 17 - Protected access

Your machine is in protected access; a party tried to call you while he/she did not have your password.

Code 23 - Unknown mailbox No

The number of the mailbox you entered is unknown by your party's machine.



GUARANTEE (UK Terms and Conditions)

In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM directly, the following shall apply :

- A** SAGEM undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship.

During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM After Sales Department, the phone number of which can be found on the delivery slip. Unless the customer has concluded with SAGEM a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises.

The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this Document and to the extent permitted by law, SAGEM makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded.

This guarantee does not affect the Customer's statutory rights.

B Exclusions From Guarantee

SAGEM shall have no liability under the guarantee in respect of :

- damage, defects breakdown or malfunction due to :
 - failure to properly follow the installation process and instructions for use; or
 - an external cause to the equipment (including but not limited to, lightening, fire, shock or water damage of any nature); or
 - modifications made without the written approval of SAGEM SA; or
 - a failure or neglect to maintain the equipment or inappropriate maintenance; or
 - unsuitable operating conditions, particularly of temperature and humidity; or
 - repair or maintenance of the equipment by persons not authorised by SAGEM; or
- wear and tear from normal daily use of the equipment and its accessories
- damage due to insufficient or bad packaging of equipment when returned to SAGEM
- supply of new versions of software
- work on any equipment or software modified or added without the prior written consent of SAGEM
- malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment
- communication problems related to an unsuitable environment, including :
 - problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
 - transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)
 - the local network fault (wiring, servers, workstations) or the failure of the transmission network
- the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer.

- C** In the cases set forth in § B) as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM. The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

TO ORDER RIBBON

Your fax machine uses **TTR 900** serial ribbon (Warning: the following ribbons are not compatible: **TTR 812, 815** and **816**).

Please use the following reference to order new ribbons:

TTR900 RIBBON, Reference: 23 690 211-5

Attention - The free sample ink ribbon delivered with your unit is good for about 25 pages.

USER'S MANUAL 23 690 427-6



DATA SUBJECT TO CHANGE WITHOUT NOTICE

SAGEM SA

27, rue Leblanc - 75512 PARIS CEDEX 15 - FRANCE

<http://www.sagem.com>