

*Phon fax* | **35<sup>DS</sup>**  
*Phon fax* | **39<sup>TDS</sup>**





User manual



**SAGEM**


# Description of the machine

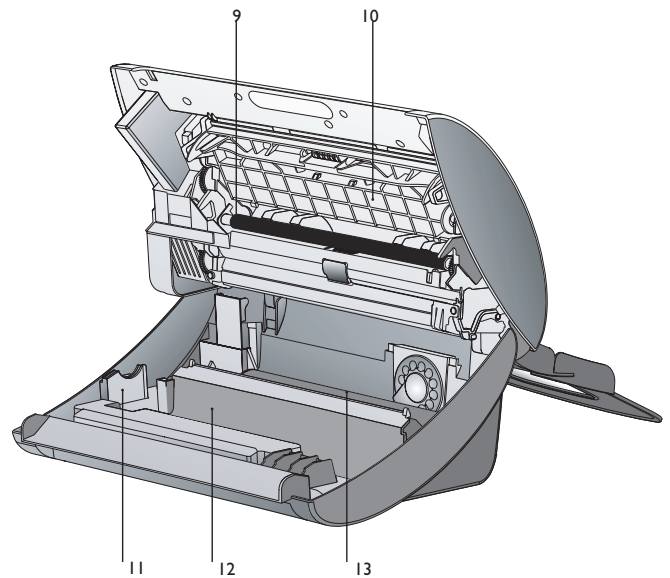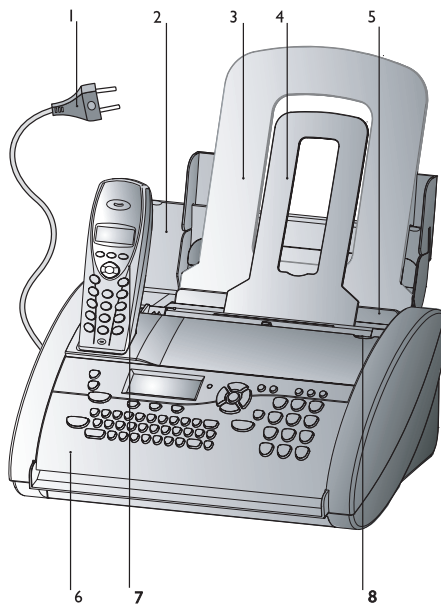

- 1** Power supply cable with power plug
- 2** Document feeder and paper tray cover
- 3** Paper tray
- 4** Document holder
- 5** Paper feed flap
- 6** Operation panel
- 7** Cordless handset
- 8** Document guide

- 9** Printer roller
- 10** Scanner lid
- 11** Holder for Plug'n'Print card
- 12** Front ink film compartment
- 13** Rear ink film compartment

## Display symbols

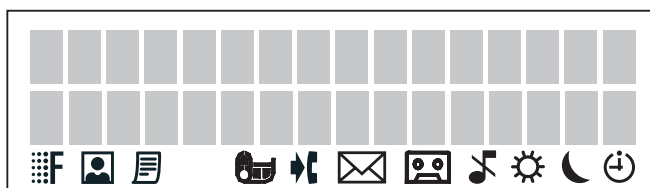

/ indicates whether you are sending or copying with a higher picture quality or with grey tones. If neither of the two symbols is visible, the standard resolution is selected.

appears when faxes are stored in memory.

indicates ink film consumption.

appears when you receive another call whilst using the device or you receive a call in your absence (not available in all countries).

appears only if there are new SMS messages in the memory (not available in all countries).

indicates that the answering machine is switched on (for devices with built-in answering machine).

indicates silent mode selected. Faxes as well as phone calls are received completely silent.

/ / three symbols on the display indicate the current settings.

# Key assignment on the fax machine

**(for devices with built-in answering machine)**

**ON/OFF** to activate / deactivate answering machine

**REC** press briefly: to record an internal memo; press and hold (two seconds): to record a new outgoing message

**PLAY** to play back messages. The key flashes when new messages and memos have been recorded. After playback the key stays lit until messages have been deleted

**RES** to select a higher resolution when copying or sending (for text and graphics—**FINE**, for photographs—**PHOTO**)

**i** press twice briefly: to print operating instructions for the most important functions (with references to additional help pages); press and hold (for two seconds): to start the automatic installation of your fax machine / printout of Easy Install

**☺** to select different operation modes. Press briefly: choose between **☀** and **☾**; press and hold (two seconds): operating mode **☺** on/off


**☎** press twice briefly: to forward a call from the fax machine to all cordless handsets; press once briefly and digit a key: to forward a call from the fax machine to a particular cordless telephone

**A-Z** press briefly: to call up a name entry; press and hold (two seconds): to store a telephone number

**☎** press briefly: to repeat the last five numbers you have dialled; press and hold (two seconds): to browse the list of callers

**R** press briefly: for special functions, e. g. for the use with a private branch exchange and for using various functions provided by your service provider (call waiting, toggling calls, etc.); press and hold (two seconds): to insert a dialling pause between two figures

**DIAL/☎\*** for dialling without lifting the handset / for hands-free operation\*

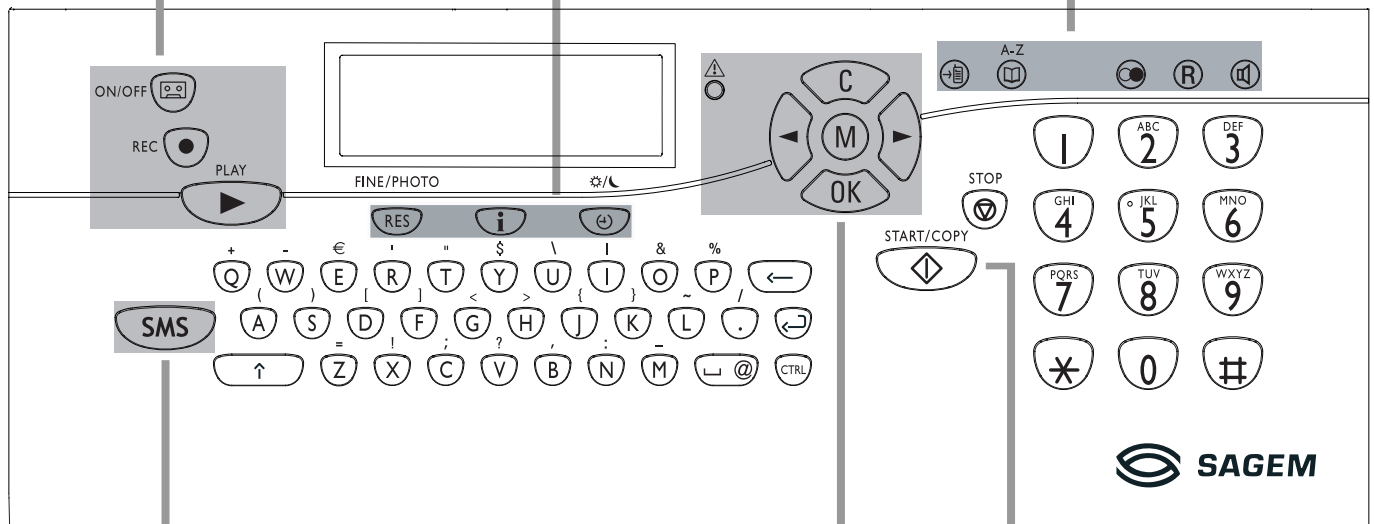

**SMS** flashes if there are new SMS messages in the memory. For reading, printing and sending SMS messages

**⚠** if the red lamp flashes, please read the message on the display

**C** to delete

**M** to call up functions

**OK** to confirm entries

**◀/▶** to select options / to adjust the volume / to move the cursor on the display

**STOP** to stop procedures / to eject documents

**START/COPY** to start the fax transmission / copy a document

\* for devices with built-in answering machine

## Key assignment for cordless handset

**R** press briefly: to call the last number dialled, long press: call up recently received calls with calling party identification

**☰** for calling up the phonebook on the cordless handset. (You will find the phonebook of the fax machine under **BASE**)


**C** for cancelling a function / deleting

**▲/▼** for selecting a function / searching in the redial list

**OK** confirm entries

**☎** to end a call

**☎** press briefly: to take your cordless handset off-hook, long press (two seconds): to call up the last numbers dialled

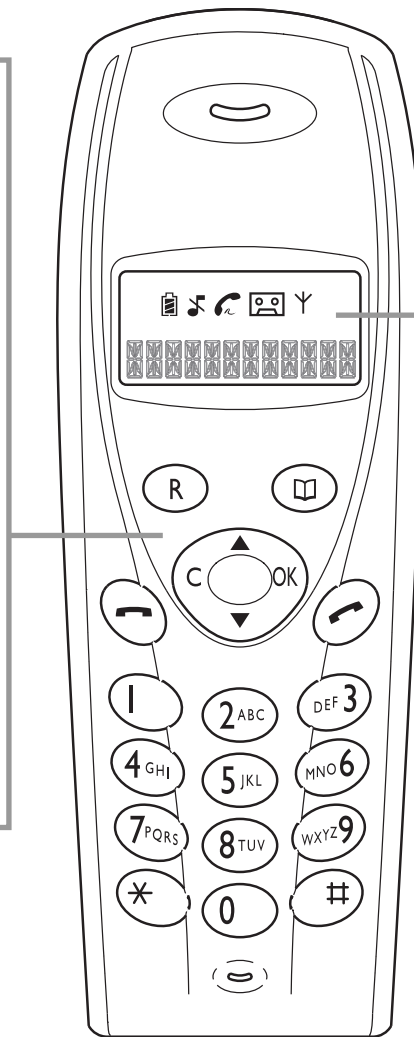

### Display symbols

**🔋** if the **🔋** symbol lights up the battery is charged. If the **🔋** symbol appears on the display the battery is almost flat

**🔇** silent ringing

**☎** lights up when you make a call and flashes when you receive a call

**✉** \* new messages on your integrated answering machine are indicated by the symbol **✉**

**Υ** lights when the cordless handset is registered to the base station of your fax machine and is in range of the base station. If the **Υ** symbol flashes the cordless handset is not registered to the base station. The **Υ** symbol appears whenever the cordless handset is out of range of the base station, or the base station has been disconnected from the power supply

## Menufunctions on the cordless handset

Your cordless handset is equipped with the following Menufunctions. You can call up these functions with the **▲/▼** and **OK** buttons:

### 1 Phonebook

- 11** New entry
- 12** Edit entries
- 13** Delete entry  
(See **Telephone**)

### 2 Journal

- 21** Delete journal
- 22** Duration of last call

### 3 Ring tone

- 31** Setting the type of ring tone
- 32** Setting the volume of the ring tone
- 33** You can switch to silent mode with the timer function (see **Fax switch**).
- 34** Switches the key tones on or off

### 4 Settings

- 41** If function 41 is enabled you can end a telephone call by replacing the handset on the fax machine. If function 41 is disabled you have to press the **☎** button to end a call.

### 5 Base

- 51** Use function 51 to register an additional cordless handset on the fax machine (see **Cordless handset**).
- 52** If you use one handset for more than one fax machine you can set which fax machine has highest priority.

### 6 Answering machine

From your cordless handset, you can listen to or delete messages on the answering machine on your fax machine (see **Answering machine**).

\* for devices with built-in answering machine



# Contents

## Installation ..... 7

Packaging.....	7
Connection.....	7
Ink film .....	8
Loading paper.....	9
Removing paper .....	11
Additional devices.....	11
Easy Install.....	12
ISDN connection.....	12
Private branch exchange .....	12

## Basic settings ..... 13

Help function.....	13
Time and date.....	13
Your number.....	13
Your name.....	13
Correction .....	13
Display language.....	13
Ring tone type.....	13
Ringer volume .....	14
Speaker volume .....	14

## Fax switch ..... 15

Timer ☎.....	15
Set ☀☾ mode.....	15
Special settings.....	15
External answering machine .....	16

## Telephone..... 17

Making a call .....	17
Redial ☎.....	17
Telephone book 📖 A-Z on the fax machine..	17
Telephone book 📖 on the cordless handset.	18
Group.....	18
Hands-free operation 📞.....	18
Easylink.....	19

## Fax & Copy..... 21

Feeding documents in .....	21
Sending faxes .....	21
Fax reception .....	21
Broadcast.....	22
Image quality.....	22
Contrast .....	22
Transmission and error reports .....	23
Transmission speed.....	23
Size compression.....	23
Fax journal .....	23
Polled reception.....	23
Send later .....	24
Copy .....	24

## SMS W ..... 25

SMS settings.....	25
Disable SMS printing.....	25
Reading SMS messages.....	25
Sending SMS messages.....	26
Printing SMS messages .....	26
Deleting SMS messages.....	26
Other SMS functions.....	26
Disable SMS reception.....	27

## Answering machine 📞 \* ..... 28

Switching on and off .....	28
Recording a message.....	28
Duration of recording.....	28
Listening to messages.....	28
Play back volume.....	28
Deleting messages.....	28
Forwarding messages.....	29
Recording a conversation.....	29
VIP code.....	29
Memo.....	29
Remote control on the fax machine.....	30
Remote control on the cordless handset.....	31

## Cordless handset ..... 32

Registering and deregistering a cordless handset of the original type .....	32
Internal phone calls .....	33
Forwarding .....	33
Search function.....	33
Muting.....	33
Switching on and off .....	33

## Hints and Tips ..... 34

Delivery service.....	34
Paper jam.....	34
Document jam.....	34
Service code .....	35
Care .....	35
Troubleshooting.....	36

## Appendix ..... 38

Functions.....	38
Technical data .....	39
Guarantee.....	40
Index .....	45


\* for devices with built-in answering machine

## Safety instructions

Please read all warning notices and instructions and follow them precisely.

The fax machine must stand securely on a smooth, flat, horizontal surface (no soft surface such as carpets etc.). Ensure a minimum clearance of 10 cm between the fax machine and other machines and objects. Any fall can cause severe damage to the fax machine and/or injury to people, especially small children.

Because the document exit is at the front of the machine, this area should be kept unobstructed.

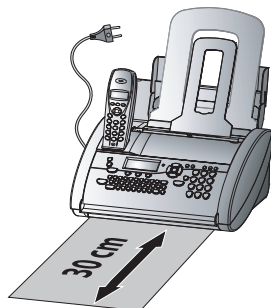

Avoid exposure to direct sunlight (the cartridge is heat-sensitive) and close proximity to heaters, radios and TV sets, air conditioning vents, dust, water and chemicals is not advised.

Make sure that air circulates freely around the fax machine. Do not operate the fax machine in closed boxes, cupboards, cabinets etc. Never cover the fax machine (tablecloths, paper, folders etc.). Do not place the fax machine on beds, tablecloths, cushions, sofas, carpets or other soft underlays due to the danger of overheating and subsequent fire.

Never connect the telephone in damp rooms unless the wall sockets are specially designed for humid conditions. Never touch the power plug, connection to the mains or telephone socket with wet hands.

Never touch uninsulated telephone or power cables with damaged insulation, unless the telephone cable is disconnected from the telephone line and/or the power cable is disconnected from the power line.

If you want to use another cordless phone, ensure that the fax machine and the base station of the other cordless phone are at least 15 cm apart otherwise you may get acoustic interference in your handset.

Ensure safe cable laying (danger of stumbling, damage to the cable or the fax machine).

Disconnect the fax machine from the mains and telephone line before cleaning the surface of the machine.

Never use liquid or gaseous cleaning agents (sprays, scouring agents, polishes etc.).

Do not allow any liquid to enter the fax machine, otherwise there is a risk of electric shock or other injury to people and severe damage to the fax machine. If any liquid does enter the fax machine, immediately remove the power plug and have the fax machine professionally inspected.

If the display breaks, a mildly corrosive liquid may leak out. Avoid contact with skin and eyes.

In case of any damage caused to the housing of your fax machine in particular to power cables please remove the mains plug and call your service repair centre. The housing of your fax machine may only be opened by authorised service personnel.

Your fax machine has been tested in conformity with standards EN 60950 and IEC 60950 respectively, and may only be operated with telephone systems and power equipment which meet these standards.

Never expose your fax machine to rain or any other form of moisture, in order to prevent the risk of electric shock or fire.

In a thunderstorm, disconnect the fax machine from both the mains and the telephone line. If you are unable to disconnect the fax machine, do not use it and do not telephone due to the danger of lightning strike and/or damage to the device.

Neither telephone nor fax will operate during power failure.

Your fax machine was built for exclusive use in the country of purchase. It complies with the local network specifications.

For safety reasons, the cordless handset should never be placed on the cradles without its rechargeable batteries or battery cover.

Explanation of the safety instructions on the cordless handset:

⚠ General warning

⚡ Do not touch contacts


ℹ Further information in the operating instructions

## Installation

### Packaging

The following items are included in the packaging:


- 1 User manual
- 2 Installation guide
- 3 Document tray
- 4 Paper tray
- 5 Fax machine (with loaded ink film)
- 6 Cordless handset
- 7 Mains cable with plug
- 8 Telephone cable with plug
- 9 Rechargeable batteries for the cordless handset

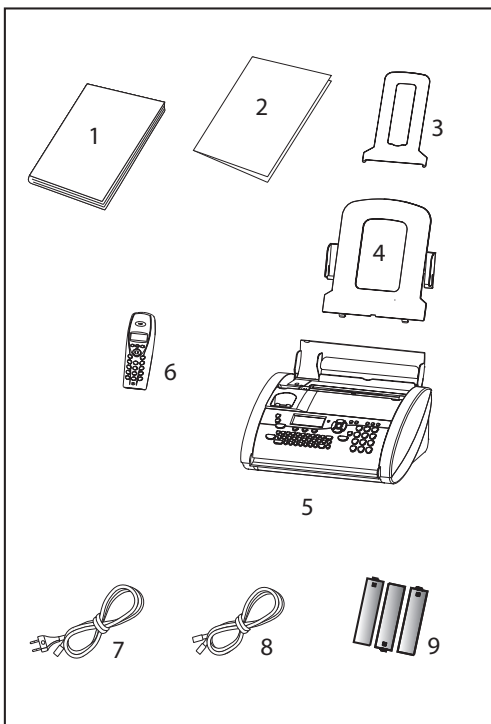

### Connection

#### Telephone socket


Connect the telephone cable to the fax machine by inserting it in the socket identified with **LINE**. Next connect the telephone plug to the line socket on the wall.

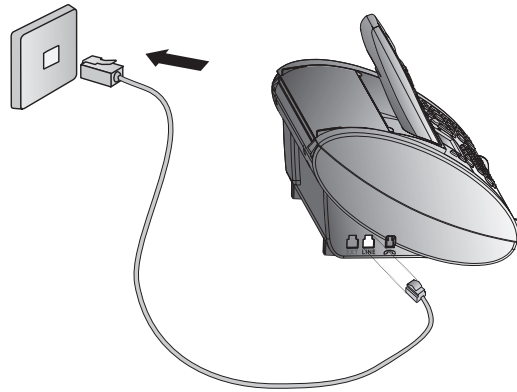

#### Cordless handset

Your cordless handset is fitted with three rechargeable batteries at the factory. If you need to replace the batteries you should replace them with rechargeable batteries of the type AAA.

- 1 Remove the battery compartment cover at the back of the handset by pressing in the small round opening with a tool. Push the cover back. Insert the three batteries as indicated in the battery compartment.

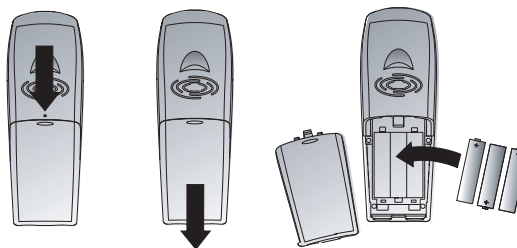

- 2 Close the battery compartment.


⚠ The rechargeable batteries must be disposed of in accordance with the relevant regulations.

Under no circumstances should you use non-rechargeable batteries.

The manufacturer accepts no liability for failure to comply with these instructions.

# Installation


- 3 Place the handset on the cradle of your fax machine (see diagram).

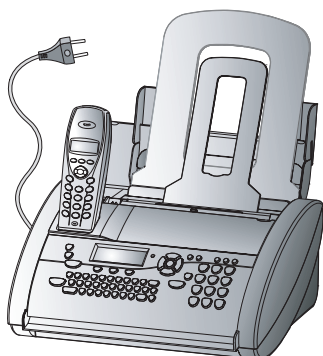

⚠ Before you use the handset for the first time the batteries need to charge for at least 12 hours.


The handset should never be placed on the cradle without its batteries. This could permanently damage the handset.

## Power supply

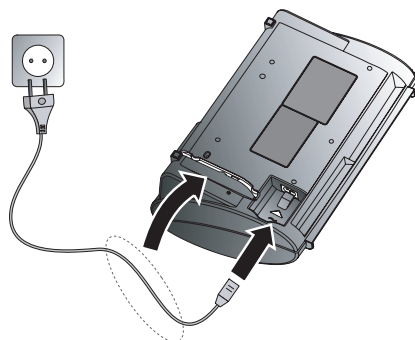

## Ink film

You cannot receive or copy documents unless an ink film is loaded in the fax machine. The machine is therefore supplied complete with a free ink film for a few trial pages.


The symbols  indicate how much ink film has already been used.

The consumption and print setting are stored on the supplied Plug'n'Print card. A new card therefore must be inserted with each new ink film. The settings were made at the factory for the initial free ink film. Therefore only this ink film will work without a Plug'n'Print card. If the Plug'n'Print card is missing or if it is not replaced the message **CHANGE CARD** appears on the display.

If the ink film is finished or if there is no ink film in the fax machine, the red display lamp flashes, and the following message appears: **REFILL INKFILM.**

- 1 Before loading a new ink film you must remove the paper from the paper feed mechanism! If necessary, also remove the cordless handset. To insert the ink film follow the instructions on your ink film packaging!


- 2 Open the fax machine by lifting the operating panel in the middle until it clicks in place.

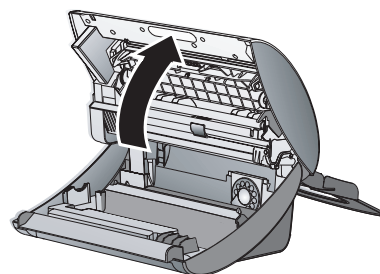


⚠ For use with SAGEM ink films only!

## Removing the ink film


- 1 Lift the rear ink film roll holding both sides with your index fingers upwards, in order to remove it out of its seat and place it next to the front ink film roll.

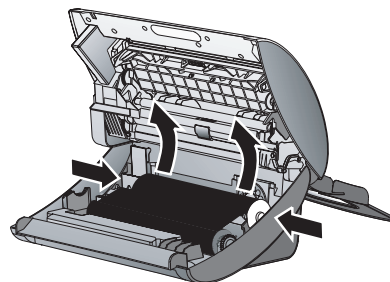

- 2 Remove both ink film rolls. They cannot be reused.

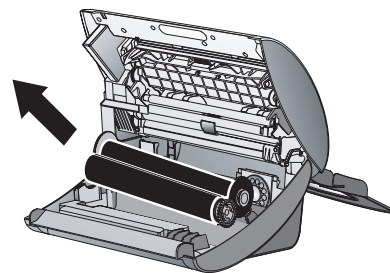


- 3 Remove the old Plug'n'Print card from the slot to the left of the ink film compartment (only the initial free ink film does not have a Plug'n'Print card).

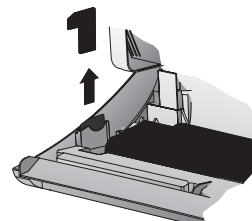


## Loading the ink film


- 1 Carefully remove the rubber rings from the new ink film. Take care not to damage the ink film.

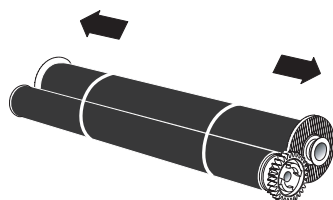


- 2 Lay the large roll in the grooves provided in the rear ink film compartment. The blue toothed wheel must be on the right-hand side.

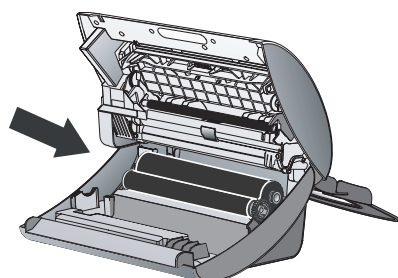


- 3 Now take the small roll and lay it in the front ink film compartment. Make sure that the blue toothed wheel is on the right and the pin on the left is inserted in the depressions.

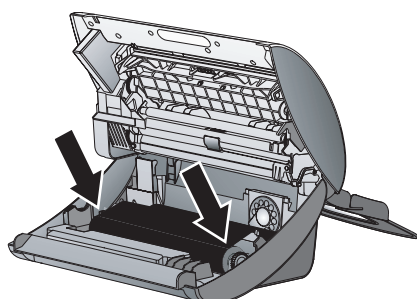


- 4 Turn small roll forward to tension the ink film. Make sure that the ink film is not creased.

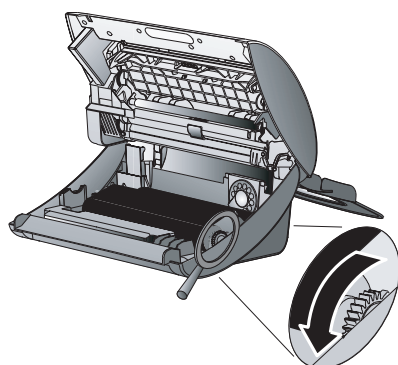

- 5 Break out the new Plug'n'Print card and insert it in the slot to the left of the ink film compartments.

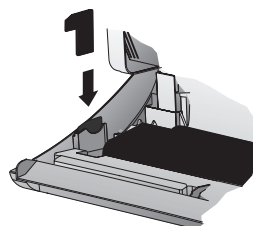


- 6 Close the machine by swinging the operation panel forward, until it snaps shut.

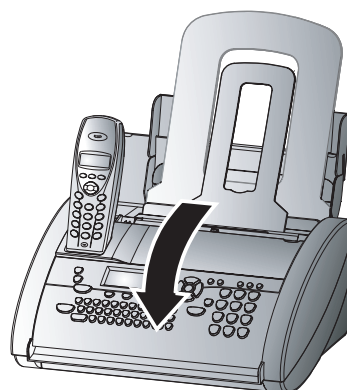

## Loading paper


Before you can copy documents, paper must be loaded in your fax machine. Please use only the following paper format: standard **A4** 210 × 297 mm. The fax machine works with normal paper used for writing and copying and has been optimised for smooth 80 g/m<sup>2</sup> paper. The smoother the paper surface the better the print quality.

- 1 Open the cover (1) by lifting the recesses (handles) (2).

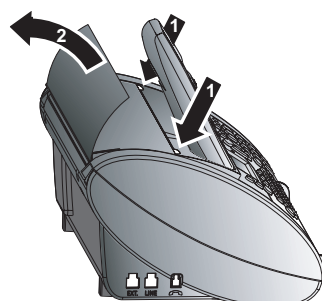


# Installation


- 2a** If you want to use the paper feeder for only a short while, flip up the paper support. In this case, you can insert up to 15 sheets of paper.

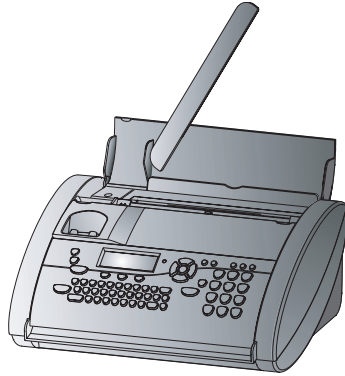


- 2b** If you will be using the paper feeder constantly, flip the paper refill flap forwards and insert the paper holder in the appropriate holes behind the paper feeder. In this case, you can insert up to 50 sheets of paper.

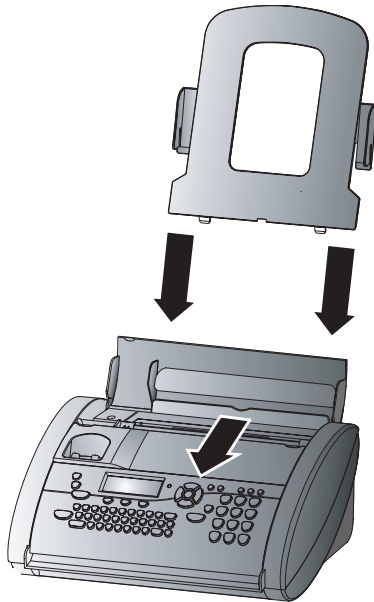


- 3** The slits in the paper holder must be placed on the cover.

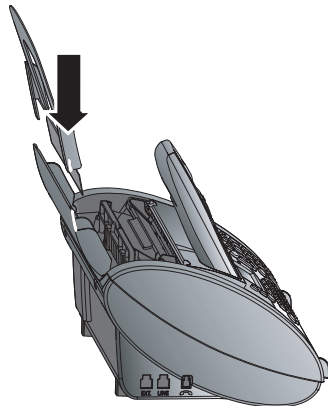


- 4** Insert the document holder in the appropriate opening on the paper refill flap.

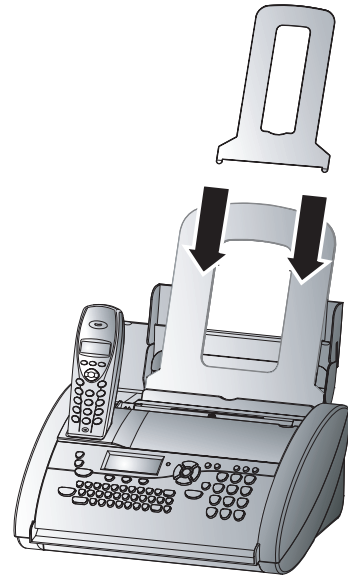

- 5** To prevent several sheets being drawn into the machine at once, first fan out the paper to separate the sheets and then straighten the stack on a flat surface before inserting it into the paper feed.

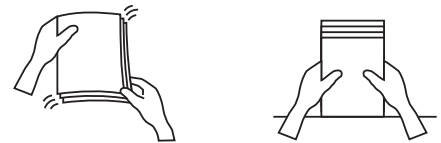


- 6** Pull the paper feed flap fully forward until it stops. Insert several sheets of A4 paper (80 g/m<sup>2</sup>) up to the end-stop in the paper feed mechanism (max. 50 sheets).

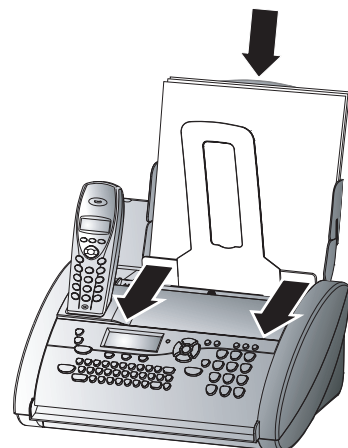




- 7 Close the paper feed flap.

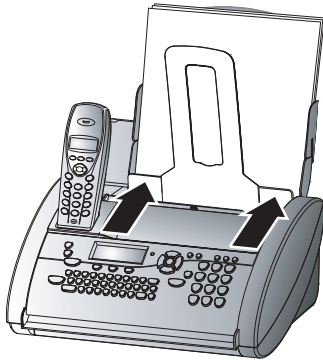

Never load paper while the fax machine is printing!

## Removing paper

To remove the paper, open the paper feed flap and carefully pull out the paper. Close the flap again.

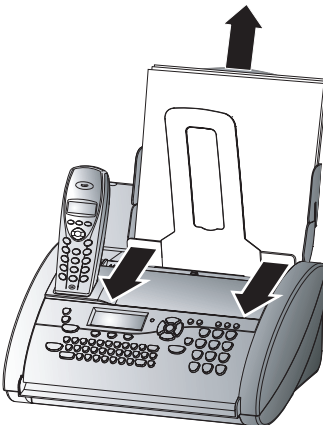

In the event of a paper jam see **Hints and Tips** / Paper jam.

## Additional devices

You can operate other equipment on a single telephone line in addition to your fax machine, and cordless handset, such as other telephones, cordless phones, answering machines, charge counters and modems.


If you operate another SMS-compatible cordless phone on the same line there is no guarantee that a particular SMS will be received on your fax machine or on the other cordless handset. However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the additional cordless phone. If you cannot do this, disable SMS reception on the fax machine (see **SMS** / Disable SMS reception).

If you intend using special auxiliary devices with your fax machine, please contact your dealer.

If you wish to receive faxes via modem, you must set your fax machine to **MANUAL RECEPTION**.

### EXT socket


You can connect additional devices to the same telephone socket by using the socket labeled **EXT** on your machine.

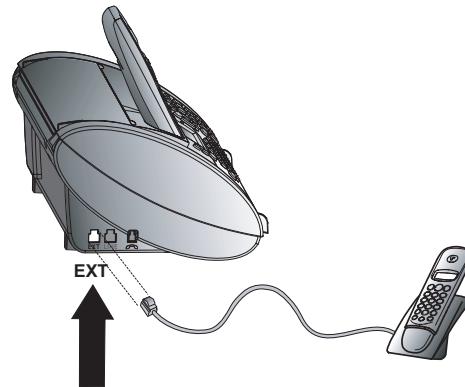

⚠ Connecting additional devices to the same socket ensures you the optimal functioning of your fax switch (e.g. call transfer). Your fax machine can control the additional devices.

### Separate sockets

You can connect additional devices to separate sockets on the same line even if they are in different rooms.

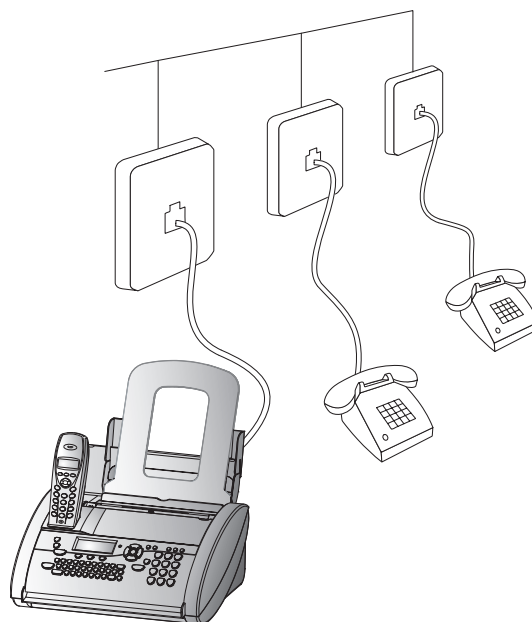



⚠ If you connect additional devices to separate sockets (e. g. in separate rooms) your fax switch cannot control them (which means that your machine behaves like any ordinary machine). For this reason e. g. call transfer is not possible. Therefore we recommend you to connect your additional devices to the same socket.

## Easy Install

Easy Install ensures that your fax machine will set itself up perfectly according to your own personal circumstances.

- 1 Press **①** for at least two seconds. Your fax machine will print one page. Pull out the page firmly and follow the instructions.
- 2 Your fax machine will then guide you on the machines display through the first settings such as your fax number and your name.
- 3 Afterwards you need to enter the current time and date. Use the dial pad to enter the correct time and date. Confirm with **OK**.

## ISDN connection

Your fax machine is not an ISDN fax (group 4), but an analogue fax machine (group 3). Therefore it cannot be used directly on an ISDN connection. You will need an (analogue) adapter or an ISDN connection for analogue devices. For further information please refer to your ISDN instructions.

For devices with SMS function: Analog terminals must be SMS-compatible.

## Private branch exchange

Private branch exchange systems are very common in large companies. ISDN connections are private branch exchanges and are used very often in private households. To get a connection from a private branch exchange to the public network you have to dial a key to obtain the outside line.

- 1 Select function 15 on your fax machine by pressing **M** and then entering the digits **①⑤**. Press **OK**.

- 2 You can switch on the PABX operation using **◀/▶**.

PABX: YES

PABX: NO

- 3 Then press **OK**.

- 4 Now enter the key that has to be pressed to obtain an outside line.

This outside line access code must be obtained from the manufacturer. This is either **①** or **R** (in some systems also described as FLASH) or a number key.

- 5 Press **OK**.

- 6 Use **◀/▶** to select **CHECK: YES** and press **OK**.

Your machine will then check that the outside line can be obtained. If the check is successful, the following message appears briefly: **CHECK OK**.

If the check fails, the following message appears briefly: **CHECK NOT OK**.

You will be asked to repeat the entry. Change the outside line access code. If you have entered the correct code but the display continues to read **CHECK NOT OK** then delete the code by pressing **C**.

In case your PABX requires **R** to obtain an outside line but it is still not possible to get through to the line, your system may not meet the most recent regulations. Therefore some technical settings have to be changed on your fax machine. Please refer to your Fax Call Centre (you will find the telephone number on the back cover).

# Basic settings

If you want to keep a note of the factory settings on your machine for later, we recommend printing out a function list before you change any of the settings: Press once **M** and twice **OK**.

If you press a wrong key, press the **STOP** key as often as necessary to return to the original position. If you have entered a wrong digit or character, you can correct it with **◀/▶** and **C**.

If you want to delete your individual settings, you can do so in function 45 Service code (see **Hints and Tips** / Service code).

## Help function

Press **ⓘ** twice. You will receive a printout explaining how to use the most important functions. It also specifies how to obtain further HELP pages concerning other features of your fax machine.

## Time and date

- 1 Select function 12 by pressing **M**, **①②** and **OK** on your fax machine.
- 2 Enter the correct time using the number keys (e. g. **⑦⑨ ①⑤** for 9:15 a. m.). Your fax machine will now ask you for the correct date (e. g. **①⑤ ⑦⑤ ⑦④** for May 15th, 2004).
- 3 Press **OK**.

## Your number

- 1 Select function 13 by pressing **M**, **①③** and **OK** on your fax machine.
- 2 Enter your telephone or fax number. (e. g. **#④④▶⑥①⑤①...** for +44 6151...—use **#** or **\*** to enter the “+”, that is often used in international fax numbers in front of the country code, and **▶** to enter a space. You can enter a maximum of 20 characters).
- 3 Press **OK**.

## Your name

- 1 Select function 14 by pressing **M**, **①④** and **OK** on your fax machine.
- 2 Enter your name using the alphabetic keypad.

⚠ When entering a name, you can use **↑** to type capital letters (press and hold the **↑** key and type the desired key).

“Your name” and “your telephone number” are transmitted at the top of each page together with the date, time and page number, if you store this data with function 13 and 14.

## Correction

If you have entered a wrong letter or number in function 13 or 14 you can correct the mistake during the entering as well as later. If you want to make your corrections later you have to select the functions for entering numbers or names once again.

Use **◀/▶** to place the cursor under the character you want to delete. Press **C** to delete the character. A long press on **C** (two seconds) will delete the whole line. Press **OK**.

## Display language

### For the fax machine

- 1 Select function 11 by pressing **M**, **①①** and **OK** on your fax machine.
- 2 Select the desired language with **◀/▶**.
- 3 Press **OK**.

### For the cordless handset

The cordless handset automatically takes over the setting you have made on the fax machine.

## Ring tone type

### For the fax machine

You can choose from ten different types of tones.

- 1 Select function 35 by pressing **M**, **③⑤** and **OK** on the fax machine.
- 2 Select the desired ring tone with **⑦** to **⑨**.
- 3 Press **OK**.

## For the cordless handset

You can change the ringing tones not only on your fax machine but also on your cordless handset:

- 1 Select function 31 by pressing ▲/▼, ③① on the cordless handset.
- 2 Now use ▲/▼ to select one of the ringing tones.
- 3 Confirm with **OK**.

## Ringer volume

### For the fax machine

You can adjust the volume of the ring tone if the fax machine is in stand-by mode or if it is just ringing. Please note that different volumes can be set for the modus ☀ and ☾ (see chapter **Fax switch**).

- 1 By pressing ◀/▶ on your fax machine the display shows the current setting for about three seconds.
- 2 Change the volume by pressing ◀/▶ until the desired volume is achieved.

### For the cordless handset

- 1 Select function 32 by pressing ▲/▼, ③② on the cordless handset.
- 2 You can now use ▲/▼ to set the volume you want.
- 3 Confirm with **OK**.

## Speaker volume

### For the fax machine

You can adjust the volume of the loudspeaker at any time by pressing **DIAL** (for devices without built-in answering machine) or 🔊 (for devices with built-in answering machine).



- 1 Press **DIAL**/🔊.
- 2 Change the volume by pressing ◀/▶ until the desired volume is achieved.
- 3 Finish your entry by pressing **STOP**.



 
### For the cordless handset

During a telephone call press ▲/▼ and select the volume you want. Press **OK**.




# Fax switch



The built-in fax switch enables you to phone and fax from the same telephone connection and use additional devices. The fax switch separates fax and voice messages. For example, it can receive fax messages silently, i. e. without ringing to avoid causing a disturbance.



   The operating modes  and  for day and night operation each allow you to decide on different modes during the day and at night, how often the machine should ring prior to receipt of faxes or before the answering machine is turned on.


 
You may change-over the operating mode between  and  of your fax machine automatically, using the timer function .

## Timer

The built-in timer  distinguishes between day  and night . With the default values the fax machine will ring during the day when it receives fax calls and telephone calls. At night (10:00 p. m. to 6:00 a. m.), faxes will be received without ringing and telephone calls will be announced with a quieter ring.


 
 

 
 
 
If the  symbol is displayed the timer is activated. To switch the timer on or off hold down the  button for two seconds.

You can change the times when the fax machine should switch between day  and night .

- 1 Select function 33 by pressing **M**, **③③** and **OK** on your fax machine.
- 2 Enter the time at which you want your fax machine to switch automatically to  (e. g. **①⑧ ①①** for 8:00 a. m.) and confirm with **OK**.
- 3 Enter the time at which you want your fax machine to switch automatically to  (e. g. **②③ ③①** for 11:30 p. m.) and confirm with **OK**.

## Set mode

Display	Possible settings
TAM RINGS:	0, 1, 2, 3, 4, 5, 6, 7, 5/2
FAX RINGS:	0, 1, 2, 3, 4, 5, MANUAL RECEPTION
RINGER VOL.:	LOW, MED, HIGH
LISTEN IN:	ON, OFF

- 1 Select function 31 (day) by pressing **M**, **③①** and **OK** on your fax machine.
- 2 Select number of rings with   before your answering device will be activated. **TAM RINGS: 5/2**
- 3 Confirm with **OK**.
- 4 Enter the number of rings after which the fax machine goes on-line and separates faxes from telephone calls. If the call is a fax call the fax machine switches to reception. Telephone calls will continue to ring. **FAX RINGS: 5**
- 5 Confirm with **OK**.
- 6 Using  , determine the ringer volume when receiving a call. Confirm with **OK**. **RINGER VOL.: HIGH**
- 7 Select with   if the caller should be heard while leaving a message. **LISTEN IN: ON, OFF**
- 8 Confirm with **OK**.
- 9 To activate mode  select **M**, **③②** (Night) **OK** and repeat steps 2 to 8.

## Special settings

### Silent fax reception

To receive faxes without any ring signals, set the amount of ring signals in **FAX RINGS** to **0**.

### Completely silent operation

You should use this option only with devices with integral answering machines. If, for example, you do not wish to be disturbed by calls or faxes arriving at night, you may set the number of ringing signals (**TAM RINGS:** and **FAX RINGS:**) to **0**. Faxes are then received silently and calls are immediately answered by the answering machine, provided you have switched the answering machine on.

For machines without a built-in answer machine the fax switch is disabled in this setting, i. e. your device immediately switches over to fax reception and will not ring, when calls are received (the caller hears a whistling tone).

⚠ For this reason calls cannot be recorded by any external answering machine which may be connected.

## Manual fax reception

If you select **MANUAL RECEPTION** faxes will not be automatically received by your fax machine unless you activate fax reception yourself. Lift the handset and press **START/COPY**. This may be sensible for example, if you wish to receive your faxes by modem at your computer.

## Economy operating mode (for devices with built-in answering machine)

If you select option **5/2** at **TAM RINGS:** your answering machine will answer the call after two ringing signals instead of after five, when you receive new messages. Using the remote access function you have the opportunity to check, whether your answering machine holds any messages without incurring telephone cost (if your answering machine turns itself on after only two ringing signals you will know, that new messages have been left). After listening to your new messages your answering machine will, at the next call, switch itself on again after five ringing signals.

## External answering machine

Connect your answering machine as described in **Installation** / Additional devices.

To provide for the optimum performance of an external answering machine, set this device to ring once or twice. To avoid the automatic acceptance of calls by the fax-switch, you must set **TOTAL RINGS:** and **FAX RINGS:** to a value at least two ringing signals higher than the setting of the external answering machine.

If you switch off the external answering machine, calls are accepted by the fax-switch (see chapter Set ☀☾ mode).

## Settings example:

Answering machine rings	2
<b>FAX RINGS:</b>	<b>4</b>
<b>TOTAL RINGS:</b>	<b>4</b>

## Tips:

The answering message of your answering machine should be shorter than ten seconds.

Please avoid music in your outgoing message.

If your fax machine is unable to recognise older fax machine models, which do not transmit those signals that are commonly used in today's technology, you should advise your callers in your answering message to press **\* 5** followed by **START/COPY** to commence the fax reception.

If the automatic fax reception is impossible, press **START/COPY** to manually begin receiving the fax.

If your answering machine provides an "economy function" (e.g. a function which changes the number of ringing signals as soon as a message was recorded), you should preferably switch this function off.

It is possible that the answering machine not only counts the messages received, but also the number of fax calls.

Please ensure that the code for starting the fax reception from other telephones (factory setting **\* 5**) is not the same as for remote access to recorded messages. Where necessary the code for function 34 may be changed (see **Hints and Tips** / Easylink).




If your answering machine accepts the call but your fax machine does not stop ringing, try to install your answering machine by serial connection, for example by connecting it to the same telephone socket or to the **EXT** socket of your fax machine (see chapter **Installation** / Additional devices).


If your answering machine cannot accept calls, your fax machine will automatically start to receive faxes after the number of ringing signals set in **TOTAL RINGS** has been received.


If your external answering machine records fax signals, but your fax machine cannot receive any faxes, check the connection of your external answering machine. Connect the external answering machine to the same telephone socket or to the **EXT** socket of your fax machine (see chapter **Installation** / Additional devices).

# Telephone

## Making a call

- 1 To make a call, press the  button on the cordless handset and key in the number.
- 2 To accept a call, again press the  button.
- 3 To end a call, press .

You can also dial numbers on the fax machine. Once you have done this, press the  button on your handset to establish the connection.


With devices with built-in answering machine you can make also telephone calls on the fax machine. To do this, press .


 
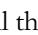

If you have entered an incorrect digit, you can cancel it with **C** before dialling commences.




Pressing **R** on your fax machine gives you access to many of the new services (call waiting, toggling, etc.)

## Redial

 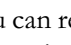
 

### On the fax machine

With  you can redial the last five numbers you have dialled previously.

- 1 Press .
- 2 Press  , until the desired number appears on the display. If you want to edit the number press **OK** and make the desired changes.
- 3 Press the  button on your cordless handset to establish the connection.

With ,   and **C** you can delete the numbers you do not need any more from the redial memory. Confirm with **OK**.



### On the cordless handset

- 1 Press **R**.
- 2 You can now use   to select the number you want from the redial list on your cordless handset.
- 3 Press the  button on your cordless handset to establish the connection.

## Telephone book A-Z on the fax machine





The memory in your fax machine can store about 50 names and numbers (devices without answering machine) or about 200 names and number (devices with answering machines). The precise number depends on the length of the entries.

### Storing numbers


 
 

 
 
- 1 Press  **A-Z** on the fax machine for two seconds.
- 2 Use the dial pad to enter a name. After pressing  the cursor moves one place to the right. Press **OK**.
- 3 Enter the telephone number and confirm with **OK**.

You can also store numbers during a telephone conversation.


 
 
 
 
### Using the telephone book

- 1 Press  **A-Z**. The first stored name or telephone number appears on the display. Press   until the desired number appears. If you want to edit the number, press **OK** and make the desired changes. Confirm with **OK**.
- 2 On your cordless handset, press  or, if you want to send a fax, press **START**.


 
### Correcting entries

Press  **A-Z** and select the entry you want to correct with   then press  **A-Z** for two seconds. Select a character with   and press **C** to delete it. Confirm with **OK**.

### Deleting entries

Press  **A-Z** and select the entry you want to delete with   and press **C**. Choose with   whether you really want to delete the entry. Confirm with **OK**.

### List of numbers

Choose function 44 to print a list of your stored telephone book numbers. Press **M**,   and **OK**.



## Telephone book on the cordless handset

You can also store telephone numbers in the phone book on your cordless handset.

### Storing numbers

- 1 On your cordless handset, press ▲/▼, ①①.
- 2 Use the digit keys to enter a name. If you have made a mistake, press **C**, then **OK**.
- 3 Enter the telephone number you want to store and press **OK**.

### Using the phonebook

- 1 Press . You will see a list of the stored entries on the cordless handset.
- 2 Select **BASE** to access the phonebook on the fax machine, and confirm with **OK**. You can now make your selection from the entries on the fax machine.
- 3 Press the  button to make the connection to the other party.

### Correcting entries

Call up function 12 on your cordless handset and use ▲/▼ to select the entry you want. Press **OK** to edit the entry. Delete the number or name using **C** and confirm the new entry with **OK**.

### Deleting entries

Call up function 13 on your cordless handset and use ▲/▼ to select the entry you want. Press **OK** to delete the entry.

## Group

You can organise several entries in your telephone book on the fax machine into groups, e. g., to send one fax to several persons.

### Creating groups

- 1 Select Function 46 by pressing **M**, ④⑥ and **OK** on your fax machine.
- 2 Select a group from 1 to 5 using ▲/▼ and then press **OK**.
- 3 Use ▲/▼ to select **ADD MEMBER?** and confirm with **OK**.

- 4 All numbers saved in the telephone book of your fax machine will be displayed. Select the entry you want to save using ▲/▼ and confirm with **OK**.
- 5 The saved entry will appear on the screen. Continue as described above until all desired numbers are saved to the group. When finished press **STOP** again.

### Searching groups


- 1 To browse all entries in a group, call up function 46 and select the desired group from 1 to 5 using ▲/▼. Press **OK**.
- 2 Select **VIEW MEMBERS?** using ▲/▼ and confirm with **OK**.
- 3 You can use ▲/▼ to look through all entries. You can exit the group by pressing **STOP**.

### Deleting entries or entire groups

- 1 Call up function 46 and select the desired group from 1 to 5 using ▲/▼. Press **OK**.
- 2 Using ▲/▼ select **DELETE MEMBER?** and confirm with **OK**.
- 3 Using ▲/▼ select an entry that you want to delete and press **C**. Select whether or not you actually want to delete the entry or the entire group using ▲/▼. Confirm with **OK**. To quit the function press **STOP**.

## Hands-free operation

(for devices with built-in answering machine)


You can make a call without using the cordless handset or let persons in the same room participate in the conversation. Press  on your fax machine after having dialled or during the call. Replace the handset. The microphone and the loudspeaker on the fax are now activated.


 
 

## Caller line identification



(not available in all countries)

Your fax machine as well as your cordless handset are capable of showing the caller's telephone number before you lift the handset. To have this feature at your disposal, you must subscribe to it via your telephone service provider. The use of this feature is subject to network selection.



If a call had been received during your absence or while you were on a phone call, the symbol  will appear on the display of your fax machine. The telephone numbers of the last ten received calls are stored.

- 1 Press  on your fax machine for two seconds.
- 2 Using   you can now step through the entries. The new entries are marked with an “\*”.
- 3 To call back the displayed number just press  on the cordless handset.

To delete an entry press **C**. Choose with   and confirm deletion by pressing **OK**.

If you set **FAX RINGS:** with **M**, **③①** or **③②** to **0**, then the telephone number cannot be displayed on your external telephones.


## Easylink

### Using additional telephones

Your fax machine is equipped with a cordless handset. You can also connect further telephones to the same telephone line (see **Installation** / Additional devices). However, the additional phone must be set to dual-tone multi-frequency method. If your telephone connection requires the pulse dialling method, then you would need to briefly reset your additional device to use it. For more information about this, please see the user manual for your device.

There are various codes that allow you to transfer calls or faxes between the cordless handset, fax machine and other phones. They are shown in the table below.

To change codes **\*⑤** and **\*⑥** below, call up function 34 on the fax machine.




 


 
 



 





 Only use this function when absolutely necessary!

If you need to change the predefined codes, select function 34 on the fax machine by pressing **M**, **③④** and **OK**. Enter two different codes and confirm each code with **OK**. Each code should begin with **\*** or **#**.

Please note that the three Easylink codes must be different. Otherwise on the display appears:

**CODE NOT OK**
   
# Telephone

Incoming call	Cordless handset	Fax machine	Other telephone
You want to accept a call.	Press  both for an external call and for a call that is forwarded by your fax machine or another cordless handset.	Devices without built-in answering machine: Not possible  Devices with built-in answering machine: Press  .	Depending on the type of telephone.  If you lift the handset and hear the recorded announcement on your answering machine you can interrupt it by pressing   .
You lift the handset and it's an incoming fax (you hear a beep or nothing at all).	Press   .	Devices without built-in answering machine: Not possible  Devices with built-in answering machine: Press <b>START</b> .	Press   and hang up.
You want to forward a call.	To the fax machine: Press   and   To an additional cordless handset that is also registered to the fax machine:  Press <b>OK</b> , the number of the cordless handset you want (for example  ) and  . You can now make an internal call. The external call is put on hold. Press the red disconnect button  to transfer the call.	To all cordless handsets registered to your fax machine: Press  twice.  To a particular cordless handset that is registered to your fax machine: Press  and the number of the handset you want (e.g.  ).  .	Not possible!

# Fax & Copy

Write clearly and legibly. Only use pens with dark ink (black or dark-blue, not yellow, orange or light green).

The following points are the most common causes of errors when sending faxes:


## ⚠ Don't send ...

- ... wet pages or pages with corrections made with correction fluid; dirty pages or pages with a glossy or laminated surface.
- ... pages written in faint pencil, crayon, chalk or artist's charcoal.
- ... pages from newspapers (printer's ink).
- ... stapled pages or pages held together with paperclips. Remove all staples and clips before sending.
- ... creased or torn pages.
- ... pages joined with sticky tape or glue, with adhesive stickers such as "post-it®" notes, or pages which are too thin or too thick.


Documents smaller than A5 risk getting stuck in the machine.

## Feeding documents in


- 1 To avoid more than one page being fed at the same time, first fan out the stack and then straighten it on a smooth surface.

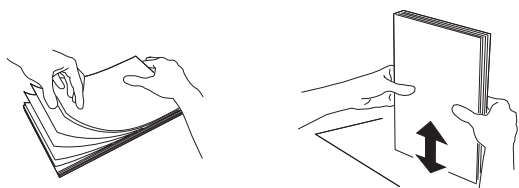

- 2 Insert your documents (max. 10 sheets) loosely with the printed side to the front into the document feed slot.

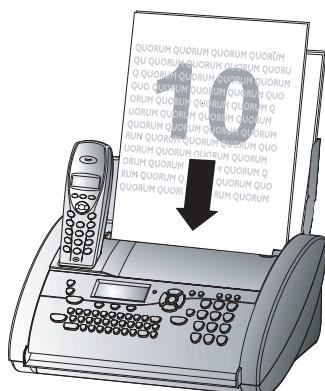

- 3 Move the document guide so that it rests on the document.

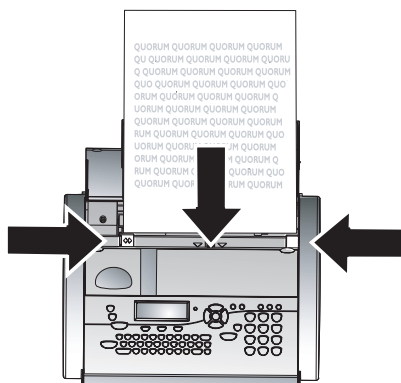

In the event of a document jam see **Hints and Tips** / Document jam.

## Sending faxes

- 1 Dial the number you require on the fax machine.
- 2 If you want to select a higher resolution, press **RES**.
- 3 Press **START/COPY**.

Transmission now begins. In case the connection is not successful your fax machine will redial later.

If you want to interrupt transmission, press **STOP**.

## Fax reception



If you do not change the fax switch settings, faxes will be received automatically.


If you accept a call on the cordless handset and hear that it is an incoming fax, press **\*5** and **OK** (see **Telephone** / Easylink). When you answer a call on the fax machine by pressing **DIAL/** and realise that it is a fax (you hear a beep or no sound), press **START/COPY** to receive the fax.

### On an additional phone

When you answer using an additional phone and it turns out to be a fax, you can start the fax reception by pressing **\*5** and then hang up. The fax machine will receive the fax.



## Fax reception without paper

If there is no more paper in the feeder or if the ink film is empty, an incoming fax will be stored in memory (storage capacity for devices without built-in answering machine approx. 50 pages, for devices with built-in answering machine approx. 200 pages of the Slerexe letter). If there are documents in memory the  symbol will appear on the display and the red indicator lamp  will flash. When paper and/or an ink film is inserted the fax machine will automatically print out all the stored documents.

When a fax message is completely printed out, it will be deleted from the memory. If the printing process was interrupted, all fax messages that have not been completely printed out will remain stored. If the memory is full, further pages can not be stored. The red indicator lamp  will flash and the display will show **MEMORY FULL**.

## Broadcast

This feature is very useful, and can be used when you want to send the same document to more than one party (Circular send).



- 1 Insert the document face to the front into the document feed slot. If you want to select a higher resolution, press **RES**.
- 2 Select **M**, **②⑤** and **OK**. The inserted document will be stored into the memory.
- 3 You now have the following options to enter numbers into the receiver list: Either enter the numbers using the number keypad or select a number/group from the telephone book by pressing  **A-Z** and .
- 4 When you have entered the desired numbers, press **OK**. The numbers are then entered in the receiver list. Repeat the procedure until you have entered data for max. 25 recipients.
- 5 To send the document press **START/COPY**.

The document will be sent successively to every party entered.

### Broadcasting to a group

Along with function 25 (see chapter **Telephone / Group**) you can also use Function 46 to send faxes to a group. However, the receiver list in Function 46 can no longer be changed!

- 1 Hold the document with the print side face up and insert it into the document feeder (max. 10 pages).

- 2 Press **M**, **④⑥** and **OK** on your fax machine. Select the desired group from 1 to 5 using . Press **OK**.
- 3 Use  to select **SEND FAX?** and press **START/COPY**. The document will be sent to all persons in the group.


If the fax can't be sent to one of the recipients, the fax machine will continue with the list and retry sending the fax again. After sending, a transmission report will be printed automatically.

## Image quality

If you want to improve the image quality you can choose between the options **FINE** (for small print or fine drawings) and **PHOTO** (for photographs and pictures). Press **RES** as often as needed until the pointer for the desired resolution lights up. After transmitting or, if there is no document in the feed slot, after 40 seconds the fax machine will automatically return to standard resolution. Document transmission takes longer in **FINE** mode and longer still in **PHOTO** mode.

## Contrast

With function 47 you can adjust the contrast quality (brightness) for documents you want to copy or send as a fax message, e. g. dark photos or forms with coloured background.

- 1 Press **M**, **④⑦** and **OK** on your fax machine.
- 2 With  you can choose between three different options:  
**CONTRAST: LOW**  
**CONTRAST: MEDIUM**  
**CONTRAST: HIGH**
- 3 Confirm your choice with **OK**.

## Transmission and error reports

Your fax machine can print a transmission report every time you have sent a document. This way you are given confirmation that your document has been received. If an error occurs during transmission you will be informed on the error report. The printing of a transmission report can be switched on and off while the error report is always printed.

- 1 Press **M**, **②⑧** and **OK** on your fax machine.
- 2 Select with **◀/▶** and confirm with **OK**.

## Transmission speed

Your fax machine automatically adjusts its transmission speed to the quality of the telephone line. Especially in case of overseas transmissions this process can take more time. If the poor line quality is already known it is useful to set the machine at a slower speed from the very beginning. This will save time and charges the automatic adjustment would require.

- 1 Press **M**, **②①** and **OK** on your fax machine.
- 2 Select a lower speed with **◀/▶**.
- 3 Confirm with **OK**.

## Size compression

To make sure that received faxes that are slightly longer than A4 size are printed on one page, these pages are slightly reduced vertically. If you do not wish to use this facility, you can switch off reduction using function 29:

- 1 Press **M**, **②⑨** and **OK** on your fax machine.
- 2 Select with **◀/▶** and confirm with **OK**.

## Fax journal

The fax journal is a list of the last ten received and transmitted faxes.

- 1 Press **M**, **②⑦** and **OK** on your fax machine.
- 2 Select with **◀/▶** if, and when the fax journal will be printed out (immediately or after ten transmissions).
- 3 Confirm your choice with **OK**.

## Polled reception

By means of this function documents which have been prepared for collection from another fax machine can be retrieved.

### Quick polling

- 1 Dial the desired number with the handset replaced.
- 2 Press and hold **START/COPY**.
- 3 In case you want to enter a sub address or a code as well (see Polling with code) enter the telephone number first and close with **R**.

Attach desired sub address or code, press and hold **START/COPY** (e. g. **①②③④⑤ R ①⑦ R** code or **①②③④⑤ RR** code).

### Polling with code


If your correspondent has entered a code to protect the document to be retrieved please follow this procedure:

- 1 Press **M**, **②②** and **OK** on your fax machine.
- 2 Enter the code and confirm with **OK**.
- 3 Enter the telephone number and press **START/COPY**. In case it does not work try to poll manually: Press **DIAL/☎**, dial the required number and press **START/COPY**.

### Polling send

You can allow a document to be polled from your fax machine.

- 1 Insert the document in the document feed slot.

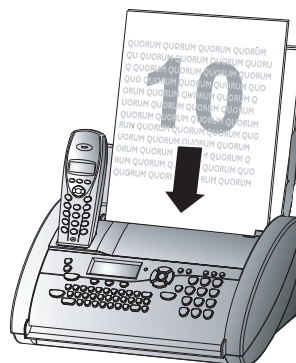

- 2 If you wish to protect the document from unauthorised access, enter a code with function 23.

Press **M**, **②③** and **OK** on your fax machine. Enter a code (maximum of 20 characters) and press **OK** to confirm. The document can now be polled by a person in possession of this code. You can still make telephone calls while this function is activated.

- 3 The operation is interrupted as soon as you remove the document.


Polling codes work in accordance with the ITU international standard. However, there are manufacturers who use other processes and whose machines are therefore not compatible.

If you want to send faxes to fax databases or if you want to poll from these, some databases have a sub-address which you can add to the telephone number. This will save you money in telephone charges. First enter the telephone number of the database and then press **R**. Then enter the required sub-address. If you are not sure whether your fax polling service supports sub-addresses, please contact your polling service operator.

## Send later

If you wish to make use of cheaper telephone rates, or if your fax correspondent is only available at particular times, you can program automatic transmission of a fax at a later time (within 24 hours).

- 1 Press **M**, **2****4** and **OK** on your fax machine. Enter the time when you wish the document to be sent.
- 2 Press **OK** and insert the document.

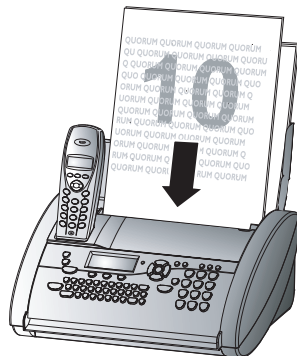


- 3 Dial the desired telephone number and then press **START/COPY**.
- 4 The fax machine is now ready to send the inserted document. You can still make telephone calls while this function is activated.
- 5 If you remove the inserted document the stand-by mode is cancelled.

## Copy

You can use your fax machine to make copies of an original. Resolution **FINE** is set by default. In addition, you can also select resolution **PHOTO** (see Image quality).

- 1 Place the documents face to the front in the document feeder. You can load up to 10 pages at once.

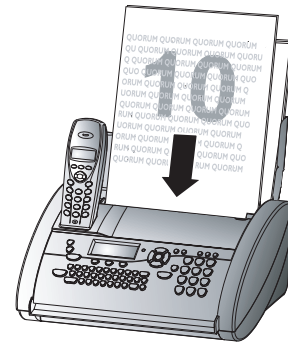

- 2 Select the desired resolution with **RES**.
  - a To make only one copy of the original, briefly press **START/COPY**. The copying process starts immediately.
  - b In order to make more than one copy press **START/COPY** (for at least two seconds):  
The display will show the actual number of copies. If you want to change this figure, enter the desired number with the number keys (max. 15). Press **START/COPY**.
- 3 Choose whether to reduce or enlarge the document in size when copying. Your machine provides the following options:
 

ZOOM ENLARGE: 200  
ZOOM ENLARGE: 150  
ZOOM NORMAL: 1:1  
ZOOM REDUCE: 75  
ZOOM REDUCE: 50
- 4 Select the desired option with **◀/▶** and confirm with **OK**.

The machine stores the first page of the document into memory and starts copying. Automatic sorting is therefore not an option!

To interrupt the copying process press **STOP**.


In case of a paper jam, if the ink film is empty or the memory is full, the copying process will be interrupted automatically.

In the event of a document jam see **Hints and Tips** / Document jam.

# SMS

(not available in all countries)

You can send and receive SMS (Short Message Service) messages with your fax machine. Your fax machine is already set up to make use of SMS services—depending on the country and network.

 You cannot send or receive SMS messages on your cordless handset.

- Before you can send and receive SMS messages the CLIP feature (Caller Line Identification Presentation) must be enabled for your telephone line.
- Make sure that this feature is activated on your line.
- To send an SMS the call number of an SMS provider must be entered in your fax (SMS centre).

Check the following with your service provider:

- What costs are billed for sending and possibly receiving an SMS message,
- Which mobile networks can you send SMS messages to and which mobile networks can you receive SMS messages from,
- Which functions are offered by your SMS service.

## SMS settings

Your fax machine is already set up to make use of SMS services. If you do have any problems, however, you should contact your telephone network provider.


You can change the predefined SMS provider and enter a second provider.

- 1 Press **M**, **6** **4** and **OK** on your fax machine.
- 2 The current provider will be displayed. Use **◀/▶** to select either **SMS CENTER 1** or **2**.
- 3 Confirm with **OK**.
- 4 Enter the **NO. FOR TRANSM.** Confirm with **OK**.
- 5 Enter the **NO. FOR RECEPT.** Confirm with **OK**.

The **NO. FOR TRANSM.** and the **NO. FOR RECEPT.** are needed in order to use SMS services. In some countries these numbers may be identical.


## Disable SMS printing

- 1 Press **M**, **6** **4** and then **OK** four times on your fax machine.
- 2 Use **◀/▶** to choose whether to have incoming messages automatically printed or not: **PRINT SMS: YES, NO**
- 3 Press **OK** to complete your action.

 If your fax machine is connected to a PABX system you may not be able to use SMS services. Contact the operator or manufacturer of the PABX system.

## Reading SMS messages

When you receive an SMS message you will hear a beep. The message will be stored and automatically printed out. You can disable automatic printout (see Disable SMS printing).

In this case, the **SMS** button will flash when a new SMS message is received and the display on your fax machine will show  and the number of new SMS messages:

- 1 Press the **SMS** button.
- 2 Press **◀/▶** to select **READ SMS**.
- 3 Press **OK**.
- 4 The number, date and time of the last message will be displayed. Unread messages are marked with an asterisk. Press **◀/▶** to select the SMS you want and press **OK**.
- 5 The SMS message will be displayed. Use **◀/▶** to move within the message. If you hold down **◀/▶** the cursor will move to the start or end of the SMS message.

With **OK** and **◀/▶** you can select any of a wide range of options (see Other SMS functions). Press **START/COPY** and **OK** to print the message.

- 6 Select **STOP** to return to the list of received SMS messages.

You can also read SMS messages by pressing **M**, **6** **2** and **OK** on your fax machine.

S  
M  
S



## Sending SMS messages

- 1 Press the **SMS** button.
- 2 Press **◀/▶** to select **SEND SMS**.
- 3 Press **OK**.
- 4 The display shows **TEXT:**. Enter your text message on the alphabetic keypad (maximum of 160 characters). If there are numbers in the message you should use the numerical keypad. You can select any of the last five SMS messages you have written and use it as a template. Press **⏮** until the message you want appears.

⚠ Press the **ⓘ** button to check how many characters you can still enter.

- 5 Press **START/COPY** to print the message and **OK**.
- 6 Enter the recipient's number. Confirm with **OK**.

You can use the phone book **☎ A-Z** or the redial function **⏮** to enter the number.

- 7 You can enter up to five recipients. When you have entered each telephone number press **OK**. Finally, press **SMS**.
- 8 Your SMS message will be sent.

Use **◀/▶** to move within the message or the number. If you hold down **◀/▶** the cursor will move to the start or end of the message or number.

To delete the character to the left of the cursor press **C**. To delete all the text hold down **C** (two seconds).

You can also send SMS messages by pressing **M**, **Ⓜ** and **OK** on your fax machine.

## Printing SMS messages

- 1 Press the **SMS** button.
- 2 Press **◀/▶** to select **PRINT SMS**.
- 3 Press **OK**.
- 4 Use **◀/▶** to select which SMS messages you want to print:  
**PRINT: ALL**  
**PRINT: INBOX**  
**PRINT: NEW**

- 5 Press **OK**. The messages will be printed out.

You can also print SMS messages by pressing **M**, **Ⓜ** and **OK** on your fax machine.

## Deleting SMS messages

To free up the memory so it can receive new messages you should delete any messages you have already read.

- 1 Press the **SMS** button.
- 2 Press **◀/▶** to select **READ SMS**.
- 3 Press **OK**.
- 4 The stored messages will be displayed. Use **◀/▶** to select the SMS message you want to delete.
- 5 Press **C**.
- 6 Use **◀/▶** to select one of the following:  
**DELETE: YES**  
**DELETE: NO**  
**DELETE: ALL**
- 7 Confirm with **OK**.

⚠ If the SMS memory is full (maximum of 30 messages) no new messages can be received. You should delete SMS messages you have already read.

## Other SMS functions

- 1 If you press **OK** while you are reading an SMS message you can use **◀/▶** to select one of the following options:

<b>PRINT SMS</b>	print out the SMS message
<b>BACK</b>	return to the SMS list
<b>FORWARD SMS</b>	send the SMS message to someone else
<b>REPLY SMS</b>	answer the SMS message
<b>DELETE</b>	delete the SMS message
<b>READ NEXT</b>	display the next SMS message
<b>READ PREVIOUS</b>	display the previous SMS message

- 2 Confirm with **OK**.

## Disable SMS reception

If you operate another SMS-compatible cordless phone on the same line there is no guarantee that a particular SMS will be received on your fax machine or on the other cordless handset. However, you can only receive SMS messages on one device at any one time. Try to disable SMS reception on the additional cordless phone. If you cannot do this, disable SMS reception on the fax machine.

- 1 Press **M**, **4** **5** and **OK** on your fax machine.
- 2 Enter **5** **1** **2** **0** **5** and press **OK**.
- 3 Use **◀/▶** to choose whether to enable or disable SMS reception.  
  
SURE: YES  
  
SURE: NO
- 4 Press **OK** to complete your action.

You can use the same procedure to enable SMS reception again.


You can still send SMS messages even if SMS reception is disabled.

## Answering machine


(for devices with built-in answering machine)

The recording capacity is 30 minutes.


Your answering machine is factory-programmed with a recorded outgoing message. If you want to record your own outgoing message, proceed as described under Recording a message.

 In case of a long term power failure recorded messages, etc. will be deleted!



### Switching on and off

Activate or deactivate your answering machine with **ON/OFF**. If you have switched on the answering machine you will see the  symbol on the display of your fax machine.


### Recording a message

- 1 Hold down **REC** for two seconds. Press **REC** again, until you hear a confirmation tone. Lift the handset and start to record your message.
- 2 A black bar indicates you how much memory is available for the outgoing message (max. 20 seconds).
- 3 Stop recording by pressing **REC** or **STOP**.
- 4 The new answering message is automatically replayed. By pressing  you can change the volume of the message.
- 5 To hear the message again, press **REC** for a while (two seconds) and then **PLAY**.

 

### Duration of recording

- 1 Select **M**, **5**  and **OK**.
- 2 Press  to choose between 30, 60, 120 seconds or the AUTO mode (unlimited recording time). Please note that AUTO mode is not available in all countries.
- 3 Confirm with **OK**.

### Listening to messages

- 1 If the **PLAY** button flashes on your fax machine, this means that messages have been recorded for you. New messages are indicated on your cordless handset by the  symbol. Press **PLAY** to listen to the first message. The date and time the message was received and the number of the caller will be displayed.
- 2 The next message will be replayed if you press **PLAY** while listening to any message.
- 3 You can switch between messages by entering the number of the message you want while the messages are being played. For example, enter **1** for the first message.
- 4 After listening to your messages **PLAY** will stay on until all messages have been erased.

### Play back volume

- 1 Press  on the fax machine while playing back messages. The current volume setting will be displayed.
- 2 Press  to obtain the desired volume.

### Deleting messages

#### Single messages


- 1 If you want to delete the message which is currently being played, press **C** on the fax machine.
- 2 You will be asked on the display if you really want to delete this message. Press **C** or **OK**.

#### All messages

- 1 Press **C** on the fax machine after having listened to all messages.
- 2 If you actually want to delete all messages, press **C** or **OK**. To interrupt the deleting process press **STOP**.

## Forwarding messages

Your fax machine can automatically forward all incoming messages to another telephone number. Enter the telephone number to which you wish recorded calls to be forwarded. You can select the number of messages to be forwarded each time. Your fax machine will wait until the selected number of messages has been received and then calls the desired number automatically. A message announcing the call forwarding is transmitted when the connection is made. Then the party to which the calls are being forwarded needs to enter the access code (see function 52). If you do not enter the right code within 40 seconds or if you enter the wrong code three times, the fax machine will hang up.

- 1 In case your answering machine is deactivated turn it on with **ON/OFF**. The symbol  appears on the display of the fax machine.
- 2 Select **M**, **55** and **OK** on your fax machine.
- 3 Choose with **◀/▶** **FORWARD CALL: ON** and confirm with **OK**.
- 4 Enter the telephone number your messages should be forwarded to and press **OK**.
- 5 Choose with **◀/▶** the number of messages you want to be forwarded each time.
- 6 To record a new forwarding message, press **OK**.\*
- 7 Press **REC**. Wait for the confirmation tone and start speaking. An example of an announcement might be: "Hello, there are messages for Mr. Smith; please enter the access code." Lift the handset and start to record your message. A black bar will indicate how much memory is available.
- 8 Press **STOP** when you have finished. The forwarding message will be played back.
- 9 The fax machine is now switched to stand-by mode.

### \* if a message has already been recorded

- a Press **OK**.
- b Select with **◀/▶**. If you wish to record a new forwarding message, select **REC. MESSAGE: YES**. If you want to use the existing message, select **REC. MESSAGE: NO**. Press **OK** to confirm.
- c Follow the process described above from paragraph 7.

## Recording a conversation

You can record a telephone conversation with your fax machine.

- 1 Press **REC** during a telephone conversation.
- 2 To stop recording, press **STOP**.
- 3 The recorded conversation can be played back and deleted like any recorded message.

You can not record a telephone conversation while hands-free operation is activated.

## VIP code

### Ringling despite answering machine

Persons you had given this code, can make the telephone ring after the answering machine has taken the call. This is useful if both ring counts in function 31 and 32 have been set to 0.

- 1 To enter the code select **M**, **53** and press **OK** on your fax machine. Enter a four digit code. Confirm with **OK**.
- 2 This code must be different to the access code (function 52).

## Memo

### External memo

You can record a message which the caller can hear without being able to leave a message in return. For this the answering machine must be switched on.

- 1 Select **M**, **54** and press **OK** on your fax machine. Choose the external memo mode by pressing **◀/▶**. Confirm with **OK** (if you already have recorded a memo you want to use again, just press **OK** once more).
- 2 Press **REC** and wait for the confirmation tone. Start to speak. Press **STOP** when you are finished. The message will be played back.

## Internal memo

You can record a personal message with this function. Messages can be heard on the fax machine itself or by remote control from a telephone. Briefly press **REC** twice and wait for the confirmation tone. Record the desired message. A black bar on the display indicates the remaining recording time. To end recording press **STOP**. Internal memos can be played back and deleted like any other message.

## Remote control on the fax machine

You can also control the answering machine functions on your fax from any telephone using tone dialling. Before you can use remote control you have to enter an access code in function 52 (this code will also be used for function 55 Forwarding).

### Preparing your fax machine for remote access

- 1 Select **M**, ⑤② and **OK**.
- 2 Enter a four digit code.
- 3 Press **OK**. The code is now stored.

### Remote access of the answering machine

- 1 If you want to listen to the messages recorded from another telephone, call your fax machine and wait for the answering machine to play the message.
- 2 Enter the four-digit code. The outgoing message will be interrupted and you will hear a confirmation tone. The new messages will be played back. If no new messages have been recorded, you will hear a second confirmation tone.

- 3 Then you can enter commands as usual or terminate the remote control by replacing the handset.


### Overview of commands

- ① The message you are just listening to will be repeated.
  - ② Your messages will be played back.
  - ③ Move to the next message.
  - ④ Record a new outgoing message. Press ④. If you press ④ again after two confirmation tones, you will hear a long confirmation tone. Record the new outgoing message and finish with ④.
  - ⑤ The current outgoing message will be re-played.
  - ⑥ The current message will be deleted. If you press ⑥ after having listened to all messages, all messages will be deleted.
- In both cases you will hear a confirmation tone after the first time you press the key. Press ⑥ again within five seconds to execute the deleting command.
- ⑦ Switch answering machine off.
  - ⑧ The current command will be interrupted.
  - ⑨ Switch answering machine on.

#### FUNCTIONS

- |                            |  |
|----------------------------|--|
| ① Repeat current message   | ⑥ Delete message<br>Current message:<br>Press ⑥, (confirmation tone)<br>Press ⑥, deleted |
| ② Play                     | All messages:<br>Press ⑥, (confirmation tone)<br>Press ⑥, deleted                        |
| ③ Skip forward             | ⑦ Answering machine off<br>Press ⑦, (answering machine off)                              |
| ④ Record outgoing messages | ⑧ STOP   |
| ⑤ Play outgoing message    | ⑨ Answering machine on<br>Press ⑨, (answering machine on)                                |

#### Remote Access

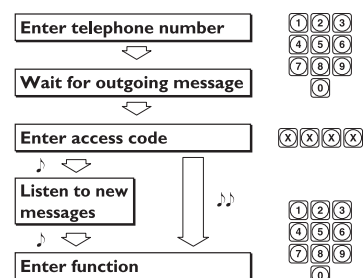

## Remote control on the cordless handset

You can control the answering machine functions of your fax machine from your cordless handset.

### Preparing the cordless handset for remote access

- I Press ▲/▼, until you get to option 6. Press **OK**.

The following functions are available for you to listen to your messages.

### Overview of commands

- ① The message you are just listening to will be repeated.
- ② Your messages will be played back.
- ③ Move to the next message.
- ⑥ The current message will be deleted. If you press ⑥ after having listened to all messages, all messages will be deleted.

In both cases you will hear a confirmation tone after the first time you press the key. Press ⑥ again within five seconds to execute the deleting command.

- ⑧ The current command will be interrupted.
- ⑨ Switch answering machine on.

### FUNCTIONS

① Repeat current message

② Play

③ Skip forward

⑥ Delete message

Current message:  
Press ⑥ ..  
Press ⑥ , deleted

All messages:  
Press ⑥ ..  
Press ⑥ , deleted

⑧ STOP

# Cordless handset

## Registering and deregistering a cordless handset of the original type

### Registering a handset

The cordless handset that is supplied with your fax machine is normally set up at the factory for your fax machine and does not have to be registered. You can register up to six cordless handsets to your fax machine. For optimum performance of all the functions you should only register cordless handsets of the original type. Cordless handsets of the original type can be ordered using the enclosed order form or contacting the call centre (see back of these user manual).

Please note that each additional cordless handset must be GAP-compatible. Check with your dealer.

- 1 On your fax machine, press **M**, **⑦①** and **OK**.
- 2 Use the numerical keypad to enter a four-digit pin code, or press **OK** to accept the default code **0000**.
- 3 On the cordless handset press **▲/▼**, **⑤①** and select **AUTO**. Confirm with **OK**. The cordless handset is now automatically registered on the fax machine and accepts the pin code from the fax machine.

After the registration process the display shows the number under which the cordless handset is registered on the fax machine (for example **1**).

### Deregistering a handset

If you would like to deregister an additional cordless handset from your fax machine, the procedure is as follows:

- 1 On your fax machine, press **M**, **⑦②** and **OK**.
- 2 On the numeric keypad, enter the cordless handset you want to deregister. Press **OK**.

Your fax machine will now release the connection to the additional cordless handset.

### Registering a cordless handset on more than one fax machine

You can register a cordless handset on up to four fax machines.

- 1 Register your cordless handset automatically on the first fax machine, as described above.
- 2 On the second fax machine, press **M**, **⑦①** and **OK**.
- 3 Use the numerical keypad to enter a four-digit pin code, or press **OK** to accept the default code **0000**. The pin code may be identical to the pin code on the first fax machine. Confirm with **OK**.
- 4 On the cordless handset press **▲/▼**, **⑤①** and select **CUSTOM**. Confirm with **OK**.
- 5 Use **▲/▼** to select a free storage location and confirm with **OK**.
- 6 Enter the same pin code that you set on the second fax machine and confirm with **OK**. The cordless handset is establishing a connection to the fax machine; this may take a few moments.
- 7 Use **▲/▼** to select the number you want to use to register the cordless handset on the second fax machine. This number appears on the display of the cordless handset when it is set to the second fax machine. Confirm with **OK**.
- 8 Repeat steps **2** to **7** to register your cordless handset to further fax machines (maximum of four fax machines).

### Priority

With function 52 you can define the fax machine via which you make phone calls if you have registered your cordless handset to more than one fax machine. If you select the **NONE** option, the cordless handset will automatically set itself to the fax machine in range.



- 1 On the cordless handset, press **▲/▼** and **⑤②**.
- 2 From the list of fax machines, select the one to which you want to assign priority, or select **NONE**.
- 3 Confirm with **OK**. Press **C** twice.



If the required language does not appear on the display of your cordless handset, check whether the cordless handset is registered to the fax machine. Use function 11 to set the display language on the fax machine (see **Basic settings** / Display language).



## Internal phone calls

If you have registered more than one cordless handset on your fax machine you can make internal calls between two handsets.

 

Press the number of the cordless handset you wish to call (for example ②) and the  button. Press the  button to end the call.

Press  and  to call all the handsets registered on your fax machine.

## Forwarding



You can forward phone calls from a cordless handset to the fax machine or to other cordless handsets registered on the fax machine.

### Forwarding to the fax machine



To forward an external phone call from a cordless handset to the fax machine, press  ① and  (in rapid succession).

### Forwarding to other cordless handsets

 You can forward both internal and external phone calls to another cordless handset.


- 1 Press **OK**, the number of the cordless handset you want (for example ②) and .
- 2 You can now make an internal call. The external call is put on hold.
- 3 Press the disconnect button  to transfer the call.

## Search function



This function helps you find cordless handsets you have mislaid. Press  twice on the fax machine. All the cordless handsets registered on the fax machine will then ring for about one minute. To cancel the search function press the **STOP** button on the fax machine or the  button on the cordless handset.

## Muting

If you are making a phone call and want to talk to someone in the room without the person on the other end hearing, you can mute the cordless handset. Press **C** during the phone call. This switches off the microphone on the cordless handset, and the person on the other end will no longer be able to hear you. The loudspeaker on the cordless handset remains on, however, so you can still hear the other person. The total call duration is shown on the display. Press **C** again to carry on the call.

You can also mute your cordless handset entirely. If you press **OK** during a call, both the microphone and the loudspeaker on the cordless handset will be switched off. The  symbol on the display will start to flash. Press **OK** again to carry on the call.

## Switching on and off

You can switch the cordless handset off to save power. To switch the handset off hold down the  button for at least three seconds. To switch the handset back on again hold down the  button for at least three seconds. If the handset is switched off you will be able to receive incoming calls only on the fax machine.


## Hints and Tips

### Delivery service


You can order ink films and cleaning accessories at your local dealer or directly.

### Paper jam


- 1 The display shows **PAPER JAM**.
- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

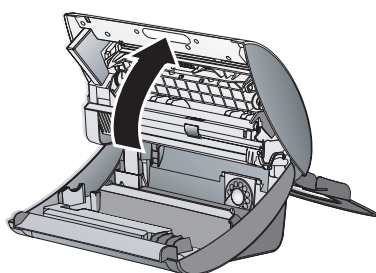


- 3 Carefully remove the paper.

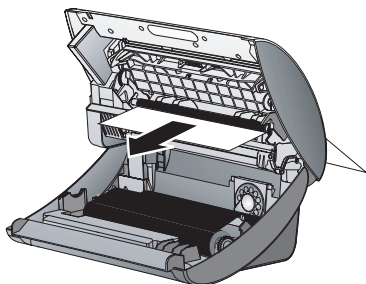

- 4 Turn small roll forward to tension the ink film. Make sure that the ink film is not creased.

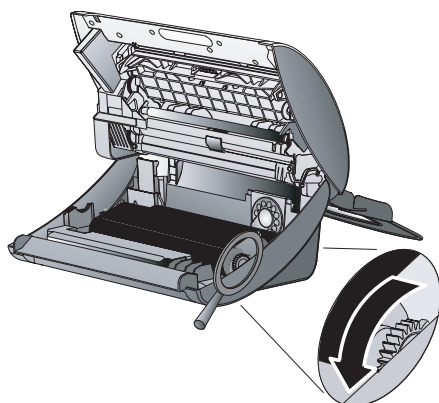


- 5 Close the panel so that it also clicks into place.

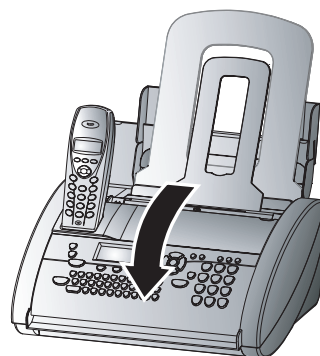


- 6 Insert paper (see **Installation** / Loading paper).

### Document jam


- 1 Open the paper feed flap and carefully pull out the paper. Close the flap again.

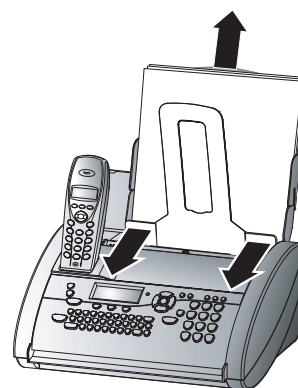


- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

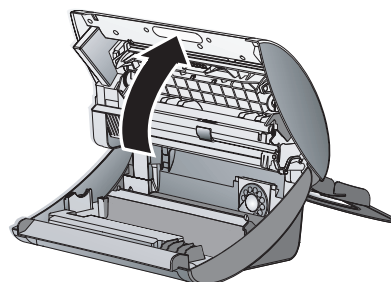


- 3 Open the scanner cover by pressing the two lugs in. The cover will open downwards.

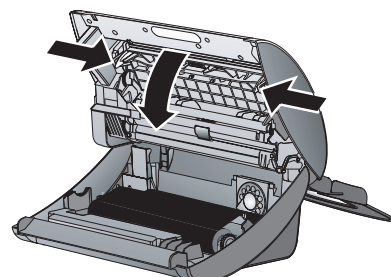


- 4 Carefully remove the document either from the front or the back.

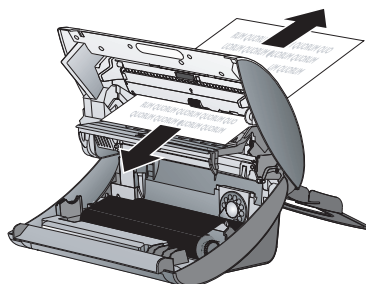

- 5 Close the scanner cover on the left and right, making sure it clicks into place.

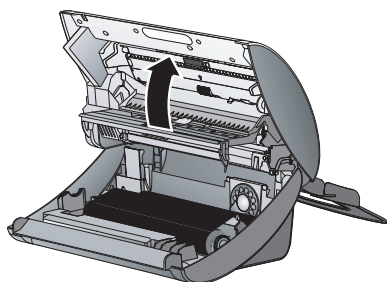

- 6 Close the panel so that it also clicks into place.

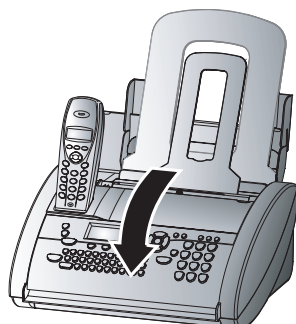

- 7 Insert paper (see **Installation** / Loading paper).

## Service code

Function 45 Service code is used to delete some or all of the settings you have changed on the fax machine since it was supplied from the factory. This function enables you to partially or fully reconfigure your device. It is especially helpful if you have modified settings but find that your fax machine does not respond as expected.

⚠ Only use this function when absolutely necessary!

If you are satisfied with your changes to the factory settings you should not use this function.

After deleting some or all of your custom settings please rerun Easy Install.

The following codes are at your disposal:

### Code No. 7117

This code erases all your modifications to the factory settings. The fax machine will therefore react in exactly the same way as on first installation.

### Code No. 7140

This code deletes all the settings and data you have entered on your fax machine with the exception of the following:

- received fax messages
- stored SMS messages
- stored telephone book numbers
- your name
- your telephone number

Example for using a service code:

- 1 Select function 45 by pressing **M**, **④** **⑤** and **OK** on the fax machine. Enter the service code (7117 or 7140). Press **OK**.
- 2 With **◀/▶** you can select whether you really want to delete your settings. Confirm with **OK**. Your fax machine will be reset to its original configuration.


## Care

Before opening the fax machine, make sure that you are electrically discharged by e.g. touching the metal housing of a grounded appliance, a water pipe or radiator.


Use a soft, fluff-free cloth. You can also use a special cloth for cleaning fax machines (see Delivery Service). Never use liquid or gaseous cleaning agents (sprays, scouring agents, polishes etc.). Do not allow any moisture to penetrate inside the device.

### Clean the scanner glass


- 1 Open the paper feed flap and carefully pull out the paper. Close the flap again.

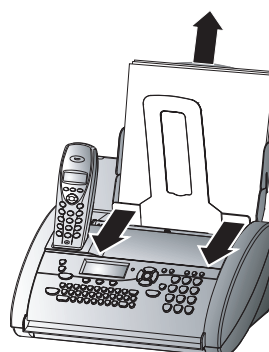


- 2 Open the operation panel by lifting in the middle. When you hear a soft click, the panel is engaged.

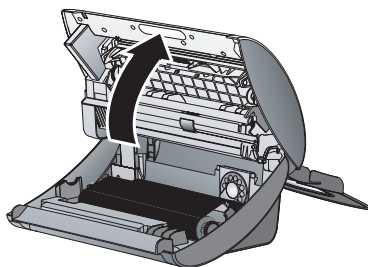


- 3 Open the scanner cover by pressing the two lugs in. The cover will open downwards.

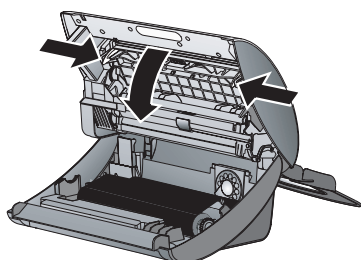


- 4 Use a soft cloth to gently wipe the scanner glass on the top (A) and the white strips on the bottom (B).

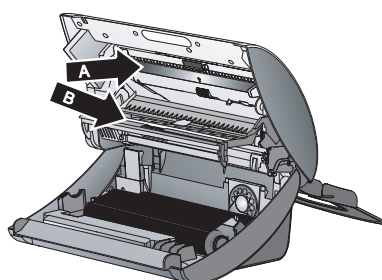

- 5 Close the scanner cover on the left and right, making sure it clicks into place.

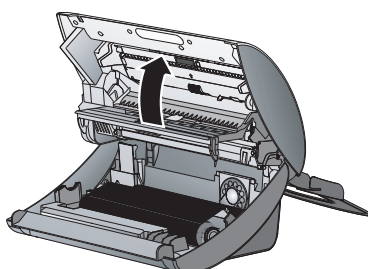

- 6 Close the panel so that it also clicks into place.

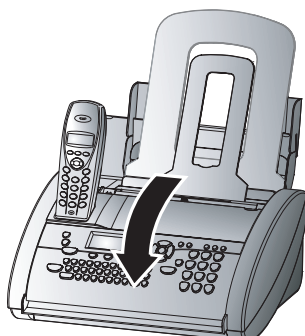


- 7 Insert paper (see **Installation** / Loading paper).

## Cleaning the document feed roller

... when a black stripe appears at the top of a copy.

... when two pages are printed out when copying or sending a single page or when the recipient receives two pages.

- 1 Open the machine and the scanner cover (see Care). Clean the feed roller (A) and the rubber opposing element on the underside (B) with a soft, lint-free cloth moistened with cleaning alcohol (96 percent). Turn the feed roller with a slight upward pressure. You must clean the entire roller.

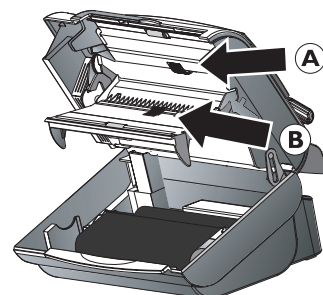


- 2 With a Fax-Cleaner: Place the fax cleaner page into the document feeder and wait until the page is pulled in. Press **STOP**. The page is ejected. Repeat this process at least once. The fax cleaner is available through our call centre (see Delivery service).

- 3 Close the scanner cover on the left and right, making sure it clicks into place. Close the panel so that it also clicks into place.

## Troubleshooting

If you cannot fix the problem based on the instructions below, you should proceed as follows:

- 1 Disconnect the mains.
- 2 Wait at least ten seconds and reconnect.
- 3 If the fault reoccurs, please contact your customer information centre. The number is on the back of this manual.

Problems when faxing or printing	
Faxes are of poor quality.	<p>Change the resolution setting to <b>FINE</b> or <b>PHOTO</b>.</p> <p>Check the document or set a higher contrast with function 47 (see chapter <b>Fax &amp; Copy</b> / Contrast).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective.</p> <p>Call service if necessary.</p>
Your fax or your recipient's fax machine produces black lines when printing.	<p>Clean the scanner with a cloth (see Care).</p> <p>Test the fax machine by making a copy. If your copy is faultless the correspondent's fax machine might be defective.</p> <p>Call service if necessary.</p>
Copy is blank.	<p>Load the document with the printed side up.</p> <p>Call service if necessary.</p>
Problems with the connection	
Your fax machine rings once, then there is a moment of silence and another ring signal after that.	This is entirely normal. After the first ring signal the fax machine takes over the call. When the fax machine has recognised that the incoming call is a telephone correspondence, the fax machine will continue to ring.
<b>NO CONNECTION</b> or <b>REDIAL FAILED</b>	Try later or draw your fax partner's attention to a possible installation fault.
<b>NO LOOP CURRENT</b>	Check the installation of your fax machine.
When you lift the cordless handset you do not hear the dial tone.	Connect your telephone cable to the socket on your fax machine identified with <b>LINE</b> .
<b>BUSY</b> or fax transmissions are constantly interrupted.	Try to send the fax manually: Press <b>DIAL/Ⓢ</b> and dial the fax number. If the recipient is using an automatic answering device, wait until you hear a tone after the pre-recorded message. Press <b>START/COPY</b> .
You cannot receive any faxes.	Set the number of ringing signals for the answering machine or the total number of ringing signals with function 31 or 32 to lower than five.
On lifting the cordless handset you hear a tone or silence.	You are receiving a fax. At the fax machine: Press <b>START/COPY</b> . At an additional telephone: press <b>Ⓢ</b> and <b>⑤</b> . Replace the handset.
<b>EXTERNAL PHONE</b> The red lamp  flashes.	This is not a fault. You are now using an additional telephone.
Problems with the cordless handset	
There is no dial tone on the cordless handset.	Place the cordless handset on the base station and wait at least 12 hours until the batteries are fully recharged.
You cannot hear a dial tone even though the cordless handset has been recharging on the base station for more than 12 hours.	<p>Get closer to the fax machine so you are within the maximum range.</p> <p>Please contact your dealer for new batteries of the type AAA.</p>

# Appendix

## Functions

To print a list of functions, press once **M** and twice **OK**.

### Setup

- 11 Set language..... 14  
(select the language of the display text)
- 12 Set time/date..... 14  
(setting time and date)
- 13 Your telephone number ..... 14  
(enter your telephone number)
- 14 Your name..... 14  
(enter your name)
- 15 Line type ..... 13  
(setting the private branch exchange)

### Fax

- 21 Transmission speed/overseas function .... 24  
(setting for half-speed transmission)
- 22 Polled reception..... 24  
(you can call up fax messages)
- 23 Polling send ..... 24  
(your fax message can be fetched)
- 24 Send later..... 25  
(faxes will be sent later)
- 25 Broadcast..... 23  
(same fax will be sent to more than one party)
- 27 Fax journal..... 24  
(log of the last ten fax documents received and sent)
- 28 Transmission report..... 23  
(automatic print out of transmission protocols)
- 29 Size compression..... 24  
(size compression of received fax messages)

### Fax switch

- 31 Day ..... 16  
(setting the DAY operating mode ⚙)
- 32 Night ..... 16  
(setting the NIGHT operating mode ☾)
- 33 Timer..... 16  
(setting the TIMER operating mode ⌚)
- 34 Easylink..... 20  
(codes for use with additional telephones)

- 35 Ringer types..... 14  
(selection between ten ringer types)

### Others

- 44 Dialling list ..... 18  
(print out of stored names and numbers)
- 45 Service code ..... 28, 36  
(disable SMS reception)  
(deleting personal settings)
- 46 Group..... 19, 23  
(saving different phone numbers as a group)
- 47 Set contrast..... 23  
(setting of contrast for copy / fax transmission)

### Answering machine

- 51 Recording time..... 29  
(setting for recording duration of calls)
- 52 Access code..... 31  
(setting the code for the remote control of the answering machine and for message forwarding)
- 53 VIP code..... 30  
(authorised callers can override the answering machine)
- 54 Memo mode..... 30  
(message for the caller without the possibility to leave a message)
- 55 Forwarding ..... 30  
(messages forwarded to another telephone number)

### SMS (with SMS functionality)

- 61 Send SMS..... 27  
(sending SMS messages)
- 62 View SMS ..... 26  
(reading SMS messages)
- 63 Print SMS ..... 27  
(printing SMS messages)
- 64 SMS-settings..... 26  
(setting the basic SMS functions)  
(disable SMS printing)

### DECT

- 71 Register ..... 33  
(registering a cordless handset)
- 72 Deregister ..... 33  
(deregistering a cordless handset)

## Technical data

Compatibility	ITU Group 3
Connection type	outside line (PSTN) extension (PABX)
Flash times	outside line (PSTN): 100 ms extension (PABX): 100 ms
Document size	single sheet: 148–217 mm
width:	several sheets 148–217 mm
length:	single sheet: 148–600 mm several sheets: 148–600 mm
thickness:	single sheet: 0,06–0,15 mm several sheets: 0,08–0,12 mm
Printing paper:	A4 210 × 297 mm, 80 g/m <sup>2</sup>
Largest scanning width	216 ± 1 mm
Resolution horizontal	8 points/mm (200 dpi)
Resolution vertical	standard 3.85 lines/mm FINE 7.7 lines/mm
PHOTO mode	16 grey tones 64 grey tones (devices with built-in answering machine)
Contrast control	automatic and manual
Copying	FINE/PHOTO
Data compression	MH, MR
Modulation	V29bis, V27ter, V21
Transmission speeds	9600/7200/4800/ 2400 bps (without built- in answering machine) 14k4 bps (with built-in answering machine)
SMS storage capacity	30 received messages
Noise level	on standby: < 30 dBA copying: < 53 dBA
Printing method	ink film printer
Document feed	up to 10 letters (80 g/m <sup>2</sup> )

Fax switch	DAY/NIGHT/TIMER
Dimensions	318 × 202 × 146 mm without paper tray
Weight	about 2 kg
Power consumption	stand by: about 2,4 W telephoning: about 4 W  sending a standard letter < 20 W  receiving a standard letter < 30 W
Power supply	220–240 V / 50–60 Hz
Speech recording time	up to 30 Minuten (with built-in answering machine)
Cordless handset	max. range: 300 m  max. talk time: 12 hours  max. standby time: 150 hours
Allowed operating environment	temperature: 5–40 °C, relative humidity: 15–85 % RH not condensing
Recommended operating environment in use	temperature: 17–28 °C, relative humidity: 20–80 % RH, not condensing
Recommended operating environment in unplugged status (ready for operation with loaded ink film and paper)	temperature: 0–45 °C, relative humidity: 15–85 % RH not condensing
Interference suppression	emission corresponding to EN 55022/VDE 0878 Part 1 Class B

---

SLEREXE-Letter





## Guarantee

### ATTENTION!

(UK Terms and Conditions)

SAGEM SA is the European Number 1 in fax and offers a complete range of fax terminals with Internet access and SMS function, multi-functional terminals and servers covering the needs of all its customers—from home-users to multinational organisations.

In order to apply the guarantee, you should contact your dealer. Proof of purchase will be required. Should malfunctioning arise, the dealer will advise you what to do.

If you bought your equipment from SAGEM Communication Austria GmbH directly, the following shall apply:

**A** SAGEM Communication Austria GmbH undertakes to remedy by repair, free of charge for labour and replacement parts, any defects in the equipment during a period of twelve (12) months from the date of original delivery of the Equipment, where those defects are a result of faulty workmanship.

During this twelve month guarantee period, the defective equipment will be repaired free of charge; the customer must however return the defective equipment at his/her own expense, to the address given by SAGEM Communication Austria GmbH After Sales Department, the phone number of which can be found on the delivery slip. Unless the customer has concluded with SAGEM Communication Austria GmbH a maintenance contract in respect of the equipment which specifically provides for repairs to be carried out at the customer's premises, the repairs will not be carried out on the equipment at the customer's premises.

The following sentence applies to purchases of equipment for the customer's trade, business or profession. Except as otherwise expressly provided in this Document and to the extent permitted by law, SAGEM Communication Austria GmbH makes no representations or warranties, express or implied, statutory or otherwise, and to such extent, all terms and conditions implied by law are hereby excluded.

This guarantee does not affect the Customer's statutory rights.

### B Exclusions From Guarantee

SAGEM Communication Austria GmbH shall have no liability under the guarantee in respect of:

- damage, defects breakdown or malfunction due to:
  - failure to properly follow the installation process and instructions for use; or
  - an external cause to the equipment (including but not limited to, lightening, fire, shock or water damage of any nature); or
  - modifications made without the written approval of SAGEM Communication Austria GmbH; or
  - a failure or neglect to maintain the equipment or inappropriate maintenance; or
  - unsuitable operating conditions, particularly of temperature and humidity; or
  - repair or maintenance of the equipment by persons not authorised by SAGEM Communication Austria GmbH; or
- wear and tear from normal daily use of the equipment and its accessories
- damage due to insufficient or bad packaging of equipment when returned to SAGEM Communication Austria GmbH
- supply of new versions of software
- work on any equipment or software modified or added without the prior written consent of SAGEM Communication Austria GmbH
- malfunctions not resulting from the Equipment or from software installed in user workstations for the purpose of use of the equipment,
- communication problems related to an unsuitable environment, including:
  - problems related to access and/or connection to the Internet such as interruptions by access networks or malfunction of the line used by the subscriber or his correspondent
  - transmission faults (for example poor geographical coverage by radio transmitters, interference or poor line quality)
  - the local network fault (wiring, servers, workstations) or the failure of the transmission network



- the normal servicing (as defined in the user guide supplied with the equipment) as well as malfunctioning due to servicing not being carried out, servicing costs are in any event always borne by the customer.

**C** In the cases set forth in § B as well as after expiry of the twelve month guarantee period, the customer must ask SAGEM Communication Austria GmbH for an estimate, and he/she must accept the estimate and agree to pay the charges mentioned in it before returning the equipment to SAGEM Communication Austria GmbH. The repair and delivery costs will be invoiced to the customer.

The foregoing shall apply unless otherwise agreed in writing with the customer and only for the UK. If any provision of this guarantee shall be held to be in whole or in part invalid or illegal due to an obligatory rule applicable to consumers pursuant to their national legislation, such invalidity or illegality shall not impair or affect the remaining provisions or parts of this guarantee.

Please note that only SAGEM ink films should be used. Your SAGEM guarantee does not cover damage to your fax machine that may be caused by the use of any other ink films.

# Appendix

# Appendix

# Appendix

## Index

### A

- Activate answering machine 28
- Additional devices 11
- Answering machine 28
  - Deleting messages 28
  - Display symbol cordless handset 4
  - Display symbol fax machine 2
  - Duration of recording 28
  - Economy operating mode 16
  - Forwarding messages 29
  - Hands-free operation 18
  - Listening to messages 28
  - Memo 29
  - Play back volume 28
  - Recording a conversation 29
  - Recording a message 28
  - Remote control on the cordless handset 31
  - Remote control on the fax machine 30
  - Switching on and off 28
  - VIP code 29
- Appendix 38
  - Functionlist 38
  - Guarantee 40
  - Technical data 39

### B

- Basic settings 13
  - Correction 13
  - Display language 14
  - Function list 13
  - Help function 13
  - Name 13
  - Number 13
  - Ringer volume 14
  - Ring signal type 14
  - Speaker volume 14
  - Time and date 13
- Broadcast 22

### C

- Calling line identification 18
- Care 35
- Clean the scanner glass 36
- Code
  - Polling 23
  - Service Codes 35
  - To forward messages 29
  - VIP 29
- Connection 7
  - Additional devices 11
  - Cordless handset 7
  - ISDN 12
  - Power supply 8
  - Private branch exchange 12
  - Problems with the connection 37
  - Telephone socket 7
- Contrast 22
- Copy 24
- Cordless handset 32
  - Connection 7
  - Deregistering a handset 32
  - Display language 14, 32
  - Display symbols 4
  - Easylink 19
  - Forwarding 33
  - Internal phone calls 33
  - Key assignment 4
  - Muting 33
  - Priority 32
  - Problems 37
  - Registering and reregistering a cordless handset of the original type 32
  - Registering a cordless handset on more than one fax machine 32
  - Registering a handset 32
  - Remote control 31
  - Ringer volume 14
  - Ring signal type 14
  - Search function 33
  - Speaker volume 14
  - Switching on and off 33
- Correct

- Telephone book entry on the cordless handset 18
- Telephone book entry on the fax machine 17
- Creating groups 18
- C key
  - For the cordless handset 4
  - For the fax machine 3

### D

- Day 15
  - Display symbol 2
  - Key assignment 3
- Deactivate answering machine 28
- Delete
  - Answering machine messages 28
  - Entry from a group 18
  - SMS messages 26
  - Telephone book entry on the cordless handset 18
  - Telephone book entry on the fax machine 17
- Delivery service 34
- Deregistering a handset 32
- Disable
  - SMS printing 25
  - SMS reception 27
- Display
  - Language for the cordless handset 14
  - Language for the fax machine 14
  - Symbols for the cordless handset 4
  - Symbols for the fax machine 2
- Display language
  - Cordless handset 32
- Document
  - Broadcast 22
  - Copy 24
  - Document jam 34
  - Feeding in 21
  - Polled reception 23
  - Send later 24
  - Technical data 39
- Duration of recording 28

### E

- Easylink 19
- Easy Install 12
- Economy operating mode 16
- Entry
  - Delete group entry 18
  - For the telephone book on the cordless handset 18
  - For the telephone book on the fax machine 17
- Error report 23
- External memo 29

### F

- Fax 21
  - Broadcast 22
  - Contrast 22
  - Copy 24
  - Fax journal 23
  - Fax reception 21
  - Feeding documents in 21
  - Function list 38
  - Image quality 22
  - Manual fax reception 16
  - Polled reception 23
  - Problems when faxing 37
  - Sending faxes 21
  - Send later 24
  - Silent fax reception 15
  - Size compression 23
  - Transmission and error reports 23
  - Transmission speed 23
- Fax switch 15
  - Function list 38
  - Set day/night mode 15
  - Special settings 15
  - Timer 15
- Feeding documents in 21
- Fine mode
  - Copy 24
  - Display symbol 2
  - Image quality 22
  - Technical data 39
- Flash times 39

Forwarding  
 Forwarding to other  
 cordless handsets 33  
 Forwarding to the  
 fax machine 33  
 Forwarding messages 29  
 Function list 38  
 Printout 13, 38

**G**  
 Group 18  
 Broadcasting to a  
 group 22  
 Guarantee 40

**H**  
 Hands-free 18  
 Key 3  
 Help  
 Easy Install 12  
 Function 13  
 Key 3  
 Hints and tips 34  
 Care 35  
 Delivery service 34  
 Document jam 34  
 Paper jam 34  
 Register and  
 deregister cordless  
 handsets 35  
 Service code 35  
 Troubleshooting 36

**I**  
 Image quality 22  
 Ink film  
 Display symbol 2  
 Load 9  
 Remove 8  
 Installation 7  
 Additional devices 11  
 Connection 7  
 Easy Install 12  
 Ink film 8  
 ISDN connection 12  
 Loading paper 9  
 Packaging 7  
 Private branch  
 exchange 12  
 Removing paper 11  
 Internal memo 30  
 ISDN connection 12

**J**  
 Jam  
 Document jam 34  
 Paper jam 34

**K**  
 Key assignment  
 For the cordless  
 handset 4  
 For the fax machine 3

**L**  
 Language 14  
 Listening to messages 28  
 List of numbers 17  
 Load  
 Ink film 9  
 Paper 9

**M**  
 Making a call 17  
 Manual fax reception 16  
 Memo 29  
 External memo 29  
 Internal memo 30  
 Memory  
 Deleting SMS mes-  
 sages 26  
 Display symbol 2  
 Fax reception with-  
 out paper 22  
 Menu functions on the  
 cordless handset 4  
 Menu key 3

**N**  
 Name  
 Correction 13  
 Enter your name 13  
 Night 15  
 Display symbol 2  
 Key assignment 3  
 Number  
 Correction 13  
 Enter your number 13  
 List of numbers 17

**O**  
 OK key  
 For the cordless  
 handset 4  
 For the fax machine 3  
 On/Off key 3

**P**  
 Packaging 7  
 Paper  
 Fax reception with-  
 out paper 22  
 Load 9  
 Paper jam 34  
 Remove 11  
 Technical data 39  
 Photo mode  
 Copy 24  
 Display symbol 2  
 Image quality 22  
 Technical data 39  
 Play back volume 28  
 Play key 3  
 Polling  
 Polled reception 23  
 Quick polling 23  
 Send 23  
 With code 23  
 Power supply 8  
 Technical data 39  
 Printout  
 Easy Install 12  
 Fax journal 23  
 Function list 13  
 Help page 13  
 List of numbers 17  
 Problems 37  
 SMS messages 26  
 Transmission and  
 error report 23  
 Private branch ex-  
 change 12  
 Problems 37

**Q**  
 Quick polling 23

**R**  
 Reading SMS messages 25  
 Receive faxes 21  
 On an extension  
 phone 21  
 Without paper 22  
 Recording  
 Conversation 29  
 Duration 28  
 Message 28  
 Rec key 3  
 Redial 17  
 Key for the cordless  
 handset 4  
 Key for the fax  
 machine 3  
 Red lamp 3

Registering and  
 reregistering a cordless  
 handset of the original  
 type 32  
 Registering a cordless  
 handset on more than  
 one fax machine 32  
 Registering a handset 32  
 Registering cordless  
 handsets 35  
 Remote control  
 On the cordless  
 handset 31  
 On the fax machine 30  
 Remove  
 Ink film 8  
 Paper 11  
 Resolution  
 Display symbols 2  
 Image quality 22  
 Technical data 39  
 Ringer Volume  
 For the cordless  
 handset 14  
 For the fax machine 14  
 Ring signal type  
 For the cordless  
 handset 14  
 For the fax machine 14  
 R key 3

**S**  
 Searching groups 18  
 Send  
 Fax 21  
 Later 24  
 SMS messages 26  
 Service code 35  
 Set day/night mode 15  
 Silent  
 Fax reception 15  
 Operation 15  
 Size compression 23  
 SMS 25  
 Deleting 26  
 Disable printing 25  
 Disable reception 27  
 Display symbol 2  
 Key 3  
 Other SMS func-  
 tions 26  
 Printing 26  
 Reading 25  
 Sending 26  
 Settings 25

- Speaker volume
  - For the cordless handset 14
  - For the fax machine 14
- Special fax switch settings 15
- Start key 3
- Stop key 3
- Store
  - Telephone book entry on the cordless handset 18
  - Telephone book entry on the fax machine 17
- Switching answering machine on and off 28

## T

- Technical data 39
- Telephone 17
  - Calling line identification 18
  - Easylink 19
  - Group 18
  - Hands-free operation 18
  - Making a call 17
  - Redial 17
  - Telephone book on the cordless handset 18
  - Telephone book on the fax machine 17
- Telephone book
  - Key for the cordless handset 4
  - Key for the fax machine 3
  - On the cordless handset 18
  - On the fax machine 17
- Telephone socket
  - Fax machine 7
- Timer 15
  - Display symbol 2
  - Key assignment 3
- Time and date 13
- Tips and hints 34
  - Care 35
  - Delivery service 34
  - Document jam 34
  - Paper jam 34
  - Service code 35
  - Troubleshooting 36
- Transmission
  - Report 23
  - Speed 23
- Troubleshooting 36

## U

 
- Use
  - Telephone book entry on the cordless handset 18
  - Telephone book on the fax machine 17

## V

- VIP code 29
- Volume
  - Of play back messages 28
  - Of the ring signal 14
  - Of the speaker 14

<http://www.sagem.com>

E-Mail: [dti.faxinfo@sagem.com](mailto:dti.faxinfo@sagem.com)



The CE mark confirms that the machine corresponds to the relevant guidelines of the European Union.

#### **DECLARATION OF CONFORMITY (DoC)**

Hereby, **SAGEM Communication Austria GmbH**, declares that this **SPFX XX** is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Should you require a copy of the original DoC, please visit our web site.

This product is intended for use on an analogue public switched network (PSTN) and for use in the country indicated on the label of the box. The usage in other countries could cause malfunction.

For further information please contact your national technical support centre. Initially contact your dealer if problems occur during operation.

This operation manual has been printed on chlorine-free, recycled paper, in line with the highest standards of environmental friendliness.

The used cardboard packaging as well as the cardboard protecting your facility at its sides made of waste paper can be recycled like waste paper; corresponding to your country's demands dispose the plastic foils either for recycling or with your rubbish.

This electronic facility contains recyclable material. At the end of use of this facility please inform yourself about the corresponding recycling demands of your country.

Technical changes and errors excepted.

Copyright © 2004 SAGEM Communication Austria GmbH