

# G-Note Series

Digital Note Recorder

## User manual



[www.geniusnet.com](http://www.geniusnet.com)

### **Federal Communications Commission (FCC) Radio Frequency Interference Statement**

This equipment has been tested and found to comply within the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Trademark Information**

Genius and G-Note are registered trademarks of KYE SYSTEM Corporation.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Pentium is a registered trademark of Intel Corporation.

Adobe and Acrobat are registered trademarks of Adobe Systems Inc.

All other trademarks are the property of their respective owners.

### **Copyright Notice**

© 2005 KYE SYSTEM Corp. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the prior written permission of the publisher.

**Note:** Specifications mentioned in this manual are subject to change without notice.

## Contents

<b>CONTENTS.....</b>	<b>2</b>
<b>1. INTRODUCTION.....</b>	<b>4</b>
1.1 POSSIBLE APPLICATIONS.....	4
1.2 SYSTEM REQUIREMENTS .....	4
1.3 PACKAGE CONTENTS .....	5
<b>2. PARTS OF THE G-NOTE.....</b>	<b>6</b>
2.1 INSTALLATION OF THE BATTERIES.....	8
2.2 INSTALLATION OF THE INK PEN BATTERY .....	9
2.3 ATTACHING A PAPER NOTEPAD .....	10
2.4 BUILT IN STORAGE DEVICE .....	11
<b>3. G-NOTE OPERATION INSTRUCTIONS.....</b>	<b>12</b>
3.1 FRONT PANEL BUTTONS.....	12
3.2 TURNING ON THE EQUIPMENT.....	12
3.3 STARTING A NEW PAGE.....	14
3.4 MODIFYING NOTES.....	14
3.5 DELETING PAGES.....	15
3.6 CONFIGURING YOUR G-NOTE.....	16
3.6.1 The Rotate menu.....	17
3.6.2 The Workbook menu.....	18
3.6.3 Setting the auto-suspend timer(3-60mins).....	22
3.6.4 The remaining disk space / battery capacity display.....	23
3.7 TURNING OFF THE G-NOTE .....	23
<b>4. THE DIGITAL ORGANIZER.....</b>	<b>24</b>
4.1 INSTALLING THE DIGITAL ORGANIZER SOFTWARE.....	24
4.2 DOWNLOADING DIGITAL PAGES FROM THE G-NOTE .....	25
4.3 IMPORTING DIGITAL PAGES .....	26
4.4 USING THE G-NOTE AS A PEN TABLET.....	27
4.5 THE DIGITAL ORGANIZER MAIN SCREEN .....	28
4.5.1 Show/Hide lines on the notepad.....	28
4.6 THE STANDARD TOOLBAR.....	29
4.7 THE ANNOTATE TOOLBAR .....	34
4.8 THE DIGITAL PAGE TOOLBAR.....	38
4.9 OTHERS.....	40
4.9.1 Insert background picture.....	40
<b>5. RECOMMEND SOFTWARE INFORMATION.....</b>	<b>41</b>

<b>APPENDIX.....</b>	<b>42</b>
REPLACING THE INK CARTRIDGE OF THE DIGITAL PEN .....	42
REPLACING THE BATTERY OF THE DIGITAL PEN .....	42
TAKING CARE OF YOUR G-NOTE.....	43
<b>TROUBLESHOOTING.....</b>	<b>44</b>
<b>GLOSSARY.....</b>	<b>46</b>
<b>TECHNICAL SPECIFICATIONS.....</b>	<b>47</b>

## 1. Introduction

The **G-Note Series** digital note recorder allows you to instantly capture notes or diagrams written in ink on normal paper, and then transfer a digital copy to a PC for viewing, editing, or sharing by email. G-Note supports both portrait and landscape mode, and its unique multi-color ink recognition concept greatly adds to the versatility and functionality of the device.

### 1.1 Possible applications

**G-Note can be deployed** in any situation where both a paper hardcopy and a digitized soft copy are required, such as taking meeting minutes and lecture notes, but also in the electronic capture of signatures, the processing of police and medical records, or to conduct polls and the completion of forms.

### 1.2 System requirements

Windows 2000, XP, or higher  
Pentium III – 500Mhz CPU or equivalent or higher  
Minimum 128MB RAM  
Minimum 32MB free hard disk space  
One free USB port  
CD-ROM drive

## 1.3 Package contents

### G-Note 5000 :

1. G-Note 5000 digital note recorder
2. 1 x A5 notepad
3. 1 x black digital ink pen(when connect to PC, can be pen of G-Note as Pen Tablet), 1 x red digital ink pen
4. 3 x black ink refills (stored in the battery compartment)
5. USB cable for G-Note 5000 (100cm)
6. 4 x 1.5 volt AAA-size batteries for G-Note 5000
7. 2 x 1.4V button cell battery for digital ink pens
8. Digital Organizer software, MyScript Notes FOR U software 30days trial version CD-ROM with electronic user manual
9. Mini screw driver
10. Warranty card
11. Quick installation guide


### G-Note 7100 :

1. G-Note 7100 digital note recorder
2. 1 x A4 notepad
3. 1 x black digital ink pen(when connect to PC, can be pen of G-Note as Pen Tablet), 1 x red digital ink pen
4. 2 x black ink refills and 1 x red ink refill
5. USB cable for G-Note 7100 (150cm)
6. 4 x 1.5 volt AAA-size batteries for G-Note 7100
7. 2 x 1.4V button cell battery for digital ink pens
8. Digital Organizer software, MyScript Notes FOR U software 30days trial version CD-ROM with electronic user manual
9. Mini screw driver
10. Warranty card
11. Quick installation guide
12. 1 x portfolio

\*Please contact your retailers if some of these items missing or damaged.

## 2. Parts of the G-Note

### G-Note 5000 :

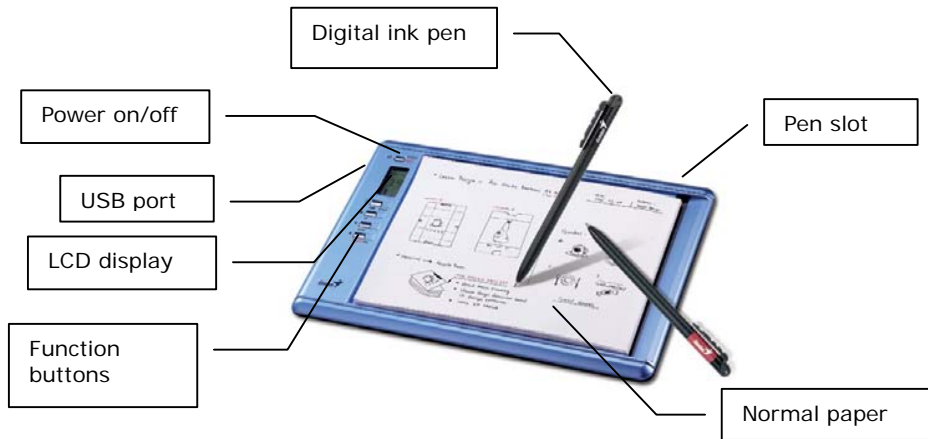

USB port



Battery compartment



Pen slot

### Writing area

The writing area is the area on the G-Note 5000 where the notepad is placed and everything you write or draw with the digital ink pen is captured by its built in digitizer. The writing area is 150 x 210mm (5.9" x 8.3").

### Thickness of the notepad

The G-Note 5000 supports standard A5 notepad with a maximum thickness of 15mm.

### G-Note 7100 :



USB port



Ink Refills



Battery compartment

### Writing area

The writing area is the area on the G-Note 7100 where the notepad is placed and everything you write or draw with the digital ink pen is captured by its built in digitizer. The writing area is 210 x 263mm (8.3" x 10.3").

### Thickness of the notepad

The G-Note 7100 supports standard A4 notepad with a maximum thickness of 5~7mm.


## 2.1 Installation of the batteries

1. Remove the small screw of the battery compartment cover with the included mini screwdriver.
2. Open the battery compartment of the G-Note by lifting its cover while pressing the release latch inward. Insert four batteries (1.5 volt, size AAA) into the battery compartment observing the pole directions as indicated on the inside of the cover. Close the battery compartment by snapping its cover into place.

G-Note 5000



G-Note 7100

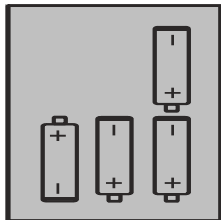

- ⚠ Always turn off the G-Note before inserting new batteries.
- ⚠ Removing batteries without turning off the equipment will cause file errors.
- ⚠ Incorrect battery installation may cause file errors.
- ⚠ **WARNING! When set the battery by wrong way, will leak out liquid through by the battery.**
- ⚠ Do not mix new and used batteries.
- ⚠ Remove the batteries from the G-Note if it is not expected to be used for long periods.(over 30 days)
- ⚠ When the batteries run out of power , remove them or insert new batteries.




Four AAA alkaline batteries can use approximate 100 hours continuously. Battery run time varies based on the usage pattern of an individual user. Different brand batteries also may influence battery life.



**Empfehlung: Wenn Sie Ihr G-Note in die Tragtasche stecken, brauchen Sie die Batterieabdeckung nicht zu verriegeln.**


## 2.2 Installation of the ink pen battery

Unscrew the top part of the digital ink pen and insert the included button cell battery with the negative (-) pole facing the pen tip. Screw both barrel parts together until tight.

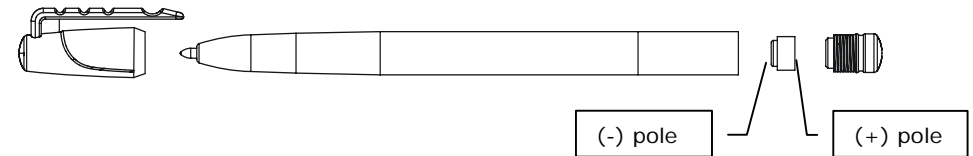

Incorrect battery installation will result in the malfunction of the digital ink pen.

**IMPORTANT : Remove cover before inserting pen battery.**

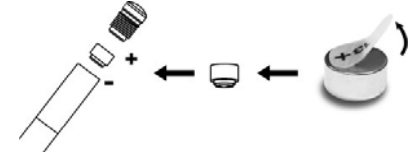

The battery of the digital ink pen will last for approximately 14 months.



Recommended button-cell batteries:

Brand:	GP	IEC/JIS	Eveready	Varta	Duracell
Type:	GPZA13	PR48	AC13E	V13	DA13X

Recommended ink refills :



- 1.PLATINUM ball point pen refill, **Model:BSG-25** .
- 2.Other ball point pen refill made by Ni-Cu : Dimension : 67.16(L) x2.3mm Ø .

## 2.3 Attaching a paper notepad

Attach a standard

G-Note 5000 : A5 (150 x 210mm) notepad

G-Note 7100 : A4/Letter (210 x 263mm) notepad


by sliding its carton backing down into G-Note pad stand.




Do not try to force too large notepad into the G-Note

**\* Working Area :**


**G-Note 5000 :**

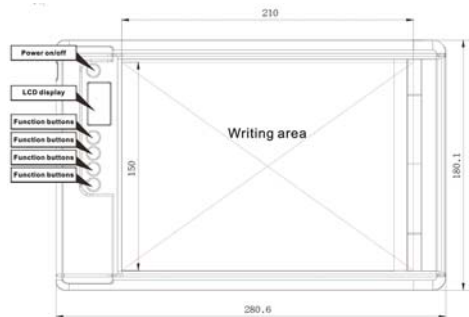

**G-Note 7100 :**

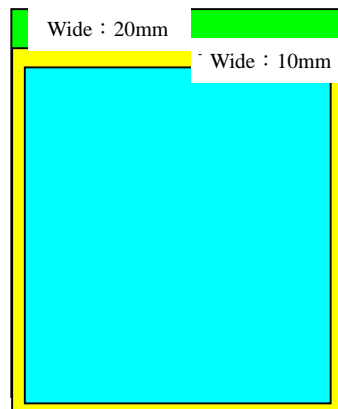

**Maximum Thickness :**

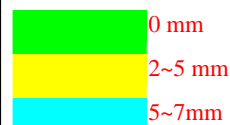






## 2.4 Built in storage device

The G-Note is equipped with a built-in 32MB flash memory to store your handwritten notes as a series of digital pages in a G-Note file (\*.dnt). Windows will recognize the flash memory as a *removable disk*.

### 3. G-Note operation instructions


After you have completed the installation of the batteries and the notepad you can start in writing or drawings with the digital ink pen. Your notes will instantly be captured and stored in the memory of the G-Note as a series of digital pages in a G-Note file for later retrieval on your PC. This section will explain the main functions of the G-Note.

 
#### 3.1 Front panel buttons

	Note taking mode		Configuration menu	
	<b>POWER</b>	Power on/off	<b>MENU</b>	Call up menu
	<b>NEW</b>	Start new page	<b>ENTER</b>	Confirm
	<b>UP</b>	Previous page	<b>UP</b>	Select value up
	<b>DOWN</b>	Next page	<b>DOWN</b>	Select option down
	<b>DELETE</b>	Erase page in memory	<b>ESC</b>	Cancel and return

#### 3.2 Turning on the equipment

##### Powering up the G-Note

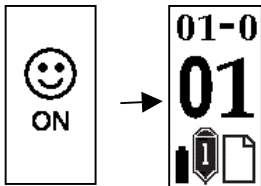

Press and hold the **Power**  button on the front panel for a few seconds until you see the power-on smiley appears on the LCD display. After a second the main screen of the G-Note will appear.

#### Testing the digital ink pen

Make sure that you have installed the button cell battery in the digital pen before proceeding with the following tests (see section 1.6 for battery installation instructions).



Hover the digital pen closely over the notepad. The pen icon on the LCD display will turn white to indicate that the pen is operational and within reading distance of the built-in digitizer of the G-Note.



The pen icon on the main screen will turn black as soon as you touch the pen tip down on the notepad. The G-Note will now record all pen strokes that you write on paper.




If the *Pen* icon does not appear while you are writing, verify if the button cell battery is properly installed and has not run out of power.



You may use the digital pen as a normal ballpoint pen to write on any piece of paper. However, do not use a normal ballpoint pen to write on the G-Note as notes will not be recorded.

#### The LCD display

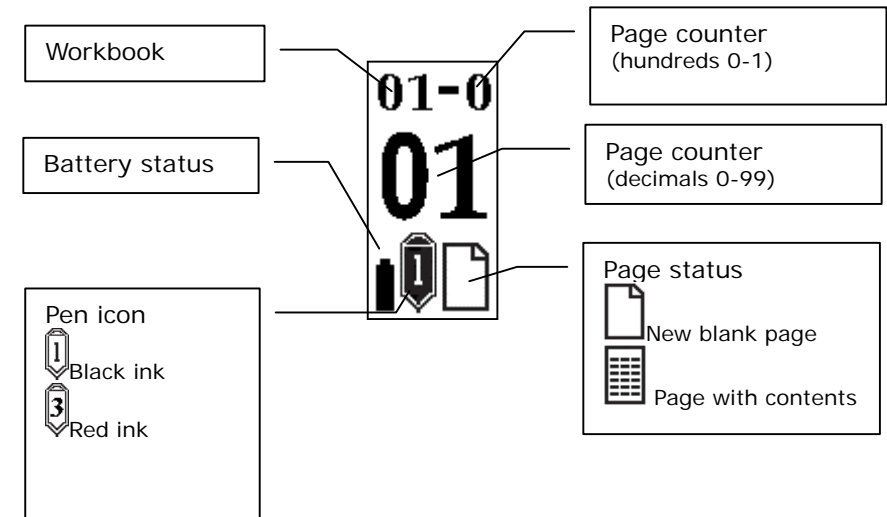



## Page counter

	The decimal two digits of the <b>page</b> counter are enlarged in the center of the screen, whereas the hundreds (0-1) are displayed behind the hyphen in the top row of the display.
	Although the G-Note 5000 theoretically has the ability to manage up to 99 workbooks of 199 digital pages each, in practice such ability is limited to the maximum storage capacity of the built-in flash memory. <b>The G-Note 5000 has a storage capacity of 32MB, which is about 150 digital pages, and G-Note 7100 is about 75 pages.</b>

### 3.3 Starting a new page

Press the **New** button every time you turn a paper sheet on the notepad to start a new page.

It is **strongly recommended** to number the sheets on your notepad and copy the workbook and page number on the LCD display each time you turn a sheet. This will help to synchronize the paper sheets with the workbooks and digital pages in the G-Note's memory.

To avoid the creation of superimposed digital pages, make sure that the page status indicator on the LCD screen displays an empty page before you start writing on a new page.

A densely written paper sheet will take up more memory space than a half empty one.

### 3.4 Modifying notes

 
△ Press the **Page Up** button to browse previous sheets and make corrections or additional notes.

You may turn back several sheets at a time to check earlier notes. However, if you want to make additions on a particular sheet, you must synchronize the page counter by repeatedly pressing the **Page Up** button until the page counter indicates the same number as the one you have marked on the sheet itself. Press the **Page Down** button to continue working on the sheet with your most recent notes.

▽ Press the **Page Down** button after browsing previous sheets on your notepad. This will return the digital page record to the sheet with your most recent notes.

### 3.5 Deleting pages

✕ Pressing the **Delete** button equals tearing off or crossing out a paper sheet of the notepad.



After pressing the Delete button a security warning will appear on the LCD screen.

YES Press to confirm the operation

✕ NO Press ✕ to cancel and return to note taking mode

Be very prudent not to push the Delete button accidentally, as the contents of an erased digital page in memory can not be recovered, and page number synchronization may become corrupt!


Although deleting pages using the **Delete** button will free up memory space, this method is mainly provided as an emergency option. It is recommended to use the Digital Organizer software that comes with the G-Note to delete pages from memory after download to a PC.







### 3.6 Configuring your G-Note



The G-Note is designed to be used in a wide variety of applications and environments. With its built-in menus you can easily configure the G-Note to your specific needs. The menus will allow you, for instance, to change the paper orientation from portrait to landscape, start a new workbook, or adjust battery power saving options.

#### Accessing the main menu

You can access the main menu anytime while taking notes by shortly pressing the **Power**  button on the front panel. The main menu will appear on the LCD display. By pressing the  $\triangle$  or the  $\nabla$  function buttons on the front panel you can select one of the following four menus:

 
 
 
	<b>Rotate:</b> This menu allows you to adjust the paper orientation from portrait to landscape or even use the G-Note upside down.
	<b>Workbook:</b> Start a new workbook (e.g. at the start of a new meeting), or after changing a notepad. <b>Format disk:</b> Use this option to format the flash memory and erase all of its content. <b>Version Information.</b> <b>Tablet Function Selection:</b> User can switch on or off Tablet function by this option.
	<b>Suspend:</b> You can significantly prolong battery life by adjusting the auto shut-down timer of the G-Note.
	<b>Status:</b> This option lets you check the status of the batteries or the amount of memory space left for recording notes.

#### 3.6.1 The Rotate menu

1.  Press  $\triangle$  to select the  rotate sub-menu.

2.  Press  [ENTER] to confirm.

3. Press  $\triangle$  to adjust the paper orientation with steps of 90° each:








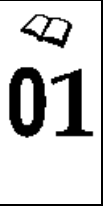
 


4.  Press  to confirm and return to the main menu


 Enter
  Esc Return to main menu
  Return to note taking mode

### 3.6.2 The Workbook menu








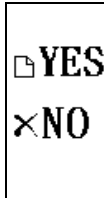


Includes : Workbook / Format Disk / Version Information / Tablet Function Selection



#### 3.6.2.1 The Workbook menu - Workbook menu

1.  Press  to select the  workbook sub-menu.
2.  Press  [ENTER] to confirm.
3.  Press  to increase the workbook number.
4.  Press  to confirm and return to the main menu.

  Enter    Esc Return to main menu    Return to note taking mode









### 3.6.2.2 The Workbook – Format Disk command

1.  Press  to select the  workbook sub-menu.
2.  Press  [ENTER] to confirm.
3.  Press  to select the Format Disk command.
4.  Press  to confirm the operation. After finish this function, G-Note would auto-turn off  
Press  to cancel and return to main menu

-  **The Workbook-Format command will erase all data in the flash memory of the G-Note!**
-  **Do not use the Format command of Windows to format the flash memory as this may cause incompatibility problems in the internal file system!**








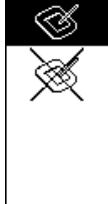



  Enter    Esc Return to main menu    Return to note taking mode

### 3.6.2.3 The Workbook – Version Information

1.  Press  to select the  workbook sub-menu.
2.  Press  [ENTER] to confirm.
3.  Press  to select the Version Information command.
4.  User can see the version information on LCD display. After 5 seconds, it will return to note taking mode.







 
 


  Enter    Esc Return to main menu    Return to note taking mode

 
### 3.6.2.4 The Workbook – Tablet Function Selection

1.  Press  to select the  workbook sub-menu.
2.  Press  [ENTER] to confirm.
3.  Press  to select the Tablet command.
4.  Press  to open tablet function (default) or select  to close tablet function, and then press  to confirm the operation.




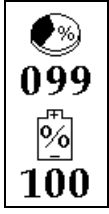





  Enter    Esc Return to main menu    Return to note taking mode

### 3.6.3 Setting the auto-suspend timer (3-60mins)

1.  Press  to select the  suspending sub-menu.
2.  Press  [ENTER] to confirm.  
 The default idle time is set at 15 minutes.
3. Press  or  to increase or decrease the idle time (from 3 ~ 60 minutes) after which the G-Note will automatically switch off.
4.  Press  to confirm and return to the main menu.





### 3.6.4 The remaining disk space / battery capacity display

1.  Press  to select the  status menu.
2.  Press  [ENTER] to confirm.  
 Remaining disk space in %  
 Remaining battery capacity in %
3.  Press  to return to the main menu.



### 3.7 Turning off the G-Note

1.  Press and hold the **Power**  button for about three seconds to manually switch off the G-Note.

## 4. The Digital Organizer


The Digital Organizer lets you view, edit, annotate, or e-mail your digital pages in Windows. You can download the digital pages from the G-Note's built in memory to your computer, and organize, rename, delete, or save them in most frequently used file formats like JPG, BMP, or PDF.

### 4.1 Installing the Digital Organizer software

1. Turn on your computer and start Windows
2. Insert the Digital Organizer CD into the CD-ROM driver. If your system has the "Auto run" function enabled, your screen will display the setup screen menu. If the setup screen did not appear after a while, double click *my computer* on the Windows desktop, and then the *Compact Disc* icon and the *Setup* icon in succession.



3. Confirm the location of the destination folder (recommended) and click [OK].

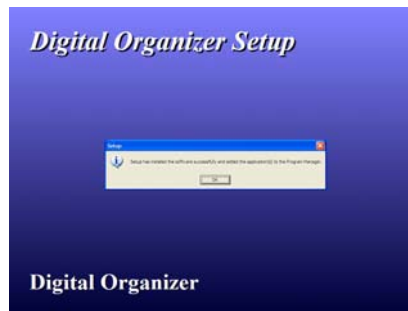


4. To proceed with the installation, click [OK], wait until the install-Latino is completed, and click [OK] again.

### 4.2 Downloading digital pages from the G-Note

 1. Take the G-Note USB cable that is included in the package, and plug the small connector of the cable into the USB connector on the G-Note 7100. Make sure your computer is turned on and plug the wide connector of the cable into an available USB port on your computer

2. The LCD display will show a USB connector diagram to confirm that you have successfully established a USB connection between the G-Note and your PC, and that the G-Note is in *pen tablet mode* (see section 4.4).



G-Note in pen tablet mode


- ⚠ The G-Note will not be able to capture notes while it is in *pen tablet mode*.
- ⚠ Do not use the 32MB flash memory of the G-Note as a storage disk as file errors may occur!
- 💡 The G-Note won't use battery power but will receive its power from the computer during the USB connection.

### 4.3 Importing digital pages

- 1 After you plug in the USB connector to your PC, "Note Notifier" screen will come automatically. Press [OK] to confirm.




- 2 Use the dialog to select [Copy File(s)] or [Moving File(s)].

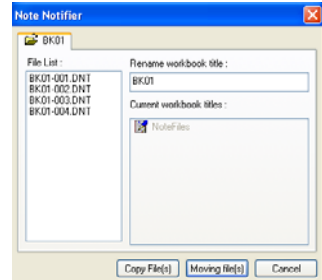

- 3 Then your screen will display another new screen to show the transferring status.



- 4 When the transfer finished, we can find a new folder named "NoteFiles" in My Document.

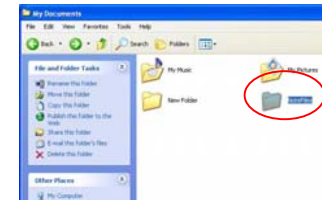


### 4.4 Using the G-Note as a pen tablet

As soon as you have established a USB connection with your PC, the G-Note will instantly double as a pen tablet. You can use the digital ink pen as input styluses in a much the same way as the stylus of a traditional pen tablet, a tablet PC, or hand-held computer.

 In pen tablet mode, you can hover the pen over the writing area to navigate the cursor across the screen, tap and double-tap on program icons to select and open them, and annotate your notes in the Digital Organizer program as well as in mainstream applications that allow free-hand pen input.






For a correct mapping of the screen you must turn the G-Note as the same direction as  USB connector showing on LCD display..




Avoid direct contact between the pen tip and the writing area surface. Cover the writing area with a sheet of paper, or just use an empty page of your notepad when using the G-Note in pen tablet mode. This will avoid scratches or ink traces on the D-Note's surface.


## 4.5 The Digital Organizer main screen

To start the program in Windows 2000 (or XP), double click on the G-Note icon  on the Windows desktop. Alternatively, click [Start] ► [Programs] ► [G-Note] ► [G-Note icon ]. The Digital Organizer's main window will appear on your screen:

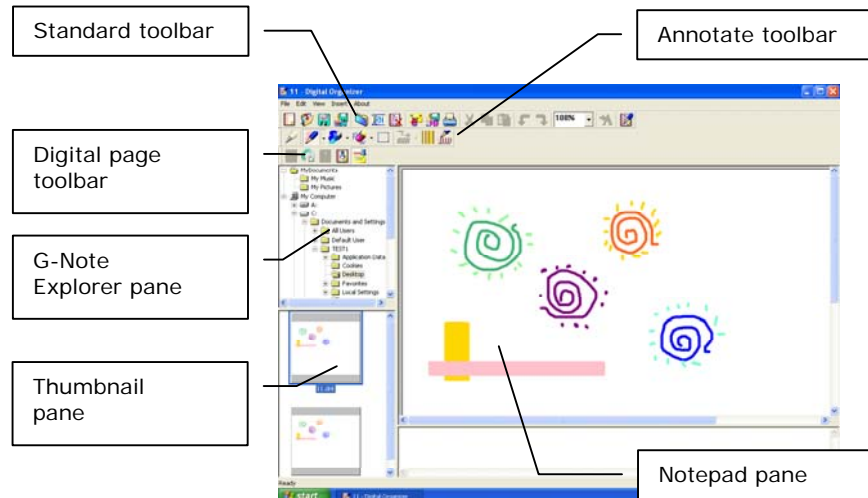

### 4.5.1 Show/Hide lines on the notepad

 Select **Show lines on the notepad** from the **View** menu to show or hide the lines on the Notepad pane.

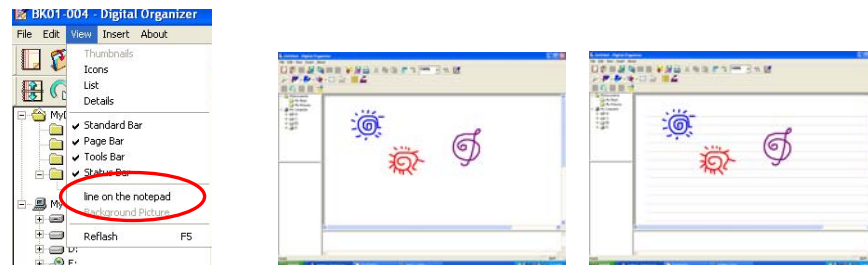


## 4.6 The standard toolbar



Located at the upper left of the screen, the *standard toolbar* contains icons for all usual desktop functions like opening, saving, printing files, cut, copy, or paste selections, etc. A detailed description of its icons below.




**New**

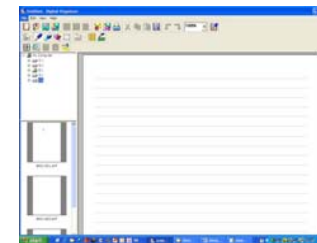

Create a new G-Note digital page from scratch.



**Open**

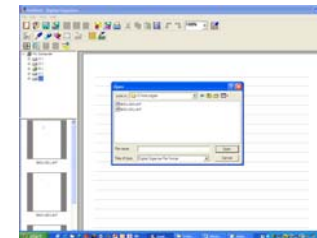

Open an existing G-Note file. Use the dialog to locate the file in the G-Note flash memory, or on your hard disk




**Save**

Save the currently selected digital page. The page will be saved as a G-Note digital page with a .DNT file name extension.



**Save as**

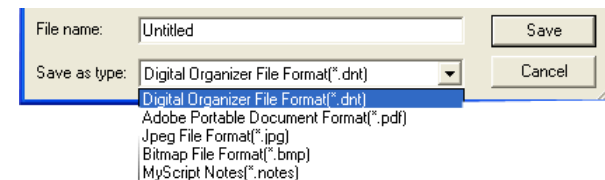


Save the currently selected digital page under another file name or in another file format (e.g. .dnt, .jpg, .bmp, .pdf, .notes, etc.)





## New Folder

### Organizing digital pages on your hard disk

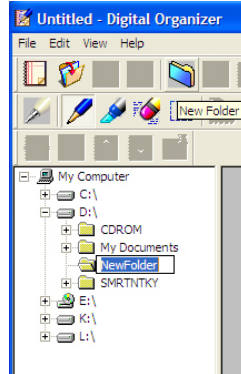

In G-Note Explorer, click on a folder where you want to create a subfolder, and click on the **New folder** icon. Key in an appropriate folder name, and press [Enter].

You can easily move a specific selection of digital pages by dragging the thumbnails from the *Thumbnail pane* to the new folder in the *G-Note Explorer pane*.

Select and hold down the *Shift*-key on the thumbnails to select consecutive pages, or the *Ctrl*-key to select non-consecutive pages, and drag the pages to the new folder you created in the *G-Note Explorer pane*.

## Freeing up space on the flash memory



You can free up space or even totally erase the flash memory of the G-Note by moving a selection or all digital pages to your hard disk: Select the G-Note's *Removable Disk* in the *G-Note explorer*, select the digital pages you want to erase (see section 4.8 under *Selection techniques*), and click on the *Delete* icon in the *Standard toolbar*.



Make sure to make back-ups of the digital pages in the flash memory of the G-Note by copying them to a folder on your hard disk before erasing them. Once erased digital pages cannot be recovered!

 


## Rename

Click on the **Rename** icon and key in the new name in the thumbnail's caption.



## Delete




[Cancel] to abort this action.




Digital pages that are deleted using this function can not be recovered!




## E-Mail

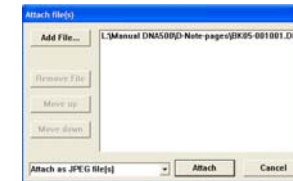


Use the **E-Mail** icon to attach your selection of digital pages in the *Thumbnail pane* as a series of JPG file attachments, or as a multi-page PDF file, in e-mail programs such as MS Outlook or Outlook Express.

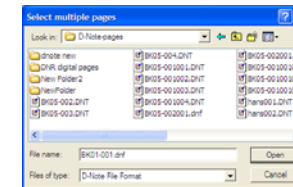


1. After clicking on the *E-Mail* icon your selection will appear in the *Attach file(s)* dialog box.

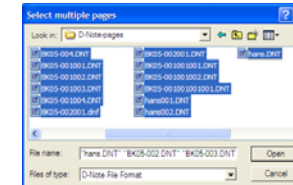


2. Hold down the *Shift*-key and move the cursor to the right to select consecutive pages.

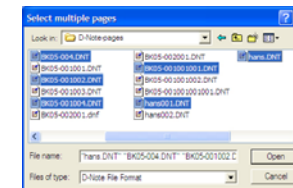


3. Or hold down the *Ctrl*-key and click on individual file names to select non-consecutive pages.

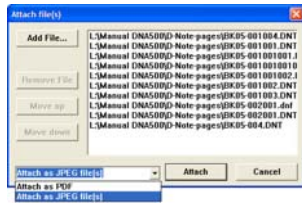

4. Click on the [Add File...] button in the dialog box, and browse to the digital page files on your hard disk that you would like to add to your selection. Click on the [Move up] or [Move down] buttons to change the order of the pages. In the drop down menu, select whether you want to attach the pages as JPG files or a PDF file.

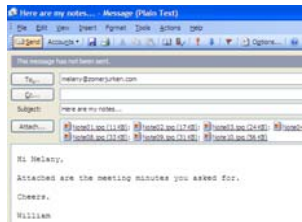


5. Click on the [Attach] button in the dialog box to finalize the operation. Your e-mail program will open and your pages will be attached as a series of JPG files, or...

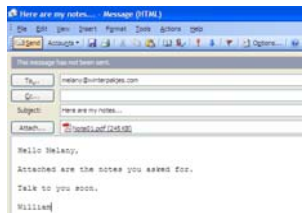

6. ...as a multi-page PDF file.



## Save as PDF

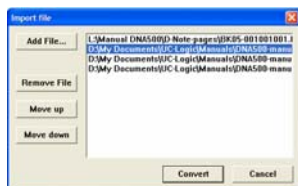

With the **Save as PDF** icon you can compile and save your digital pages as a multi-page PDF file. First, create a selection of digital pages in the *Thumbnail pane* by holding down the *Shift*-key to select consecutive pages, or the *Ctrl*-key to select non-consecutive pages.

Then click on the *Save as PDF* icon to open the dialog box and select the digital page(s) you wish to save as a multi-page PDF file.

To add files to your selection from other places on your hard disk click on the [Add File...] button in the dialog box, and browse to the files you want to add. Click on the [Move up] or [Move down] buttons to change the order of the pages in the PDF file, or [Remove file] to remove a digital page from your selection.

Click the [Convert] button to finalize the operation and save your selection in a folder of your choice on your hard disk.



## Print

Print the currently selected digital page



## Cut

Cut the selected strokes or objects in the *Notepad pane*



## Copy

Copy the selected strokes or objects in the *Notepad pane*



## Paste

Paste the selected strokes or objects in the *Notepad pane*



 
## Undo

Undo the last action




## Redo

Redo the last action



## Zoom

 

Click on the down arrow in the **Zoom** drop down menu and select the zoom factor.




## Handwriting Recognition

Genius free support MyScript Notes FOR U software 30days trial version with 13 Languages as available.  
If full version or more languages requested, please contact with your retailers or distributors.



## About

Click on the **About** icon to check for the latest software updates of the Digital Organizer program.

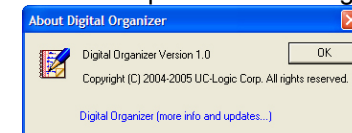


## 4.7 The annotate toolbar



The *Annotate toolbar* lets you annotate your digital pages with pens and highlighters in various colors and shapes. A built-in eraser function is provided to easily make corrections. You can use the pen tablet functionality of the G-Note (see section 4.4) to quickly and conveniently annotate your digital pages.




### D-Note pen properties

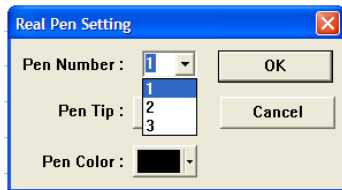


Use this dialog box to select the pen type, and the color and shape of the pen tip, and modify the recorded notes in the *Notepad pane*.

1. Start with selecting the objects you want to modify with the *Select tool* (see below). The selection will then appear in a selection box. You can now change pen tip colors and shapes, and click the [OK] button to confirm.

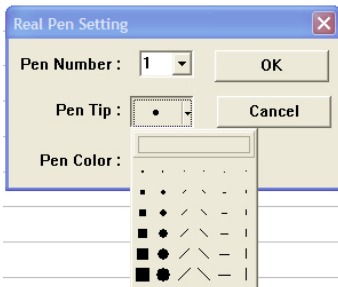

2. Select the pen-tip shape. Click the [OK] button to confirm.

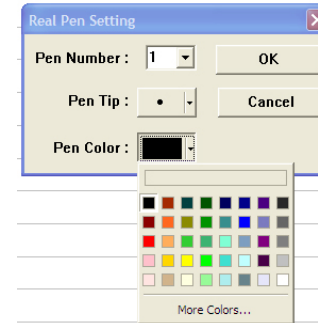


3. Select the pen color. Click on the [More Colors...] button to expand the color menu. Click the [OK] button to confirm.




### Pen

Select the **Pen** icon to annotate the *Notepad pane* with the pen tool. There are 4 different shapes (curve, line, ellipse, rectangle) to select.

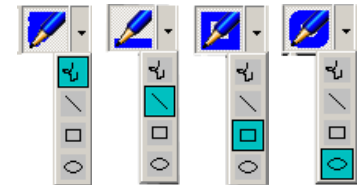

### Highlighter

Select the **Highlighter** icon to highlight parts of the *Notepad pane* with transparent highlighter ink. There are 4 different shapes (curve, line, ellipse, rectangle) to select.

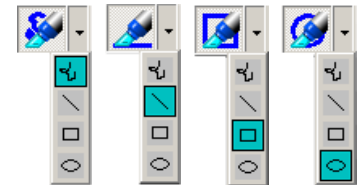


### Erase stroke

Select the **Erase stroke** icon to clear pen strokes or objects one by one by moving the eraser cursor over the stroke(s) you want to delete. There are 4 different areas to select.





## Select tool: Copying and moving objects

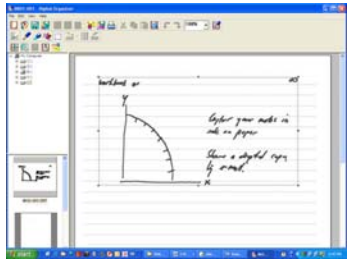

Drag the cursor over the area or objects in the *Notepad* pane that you want to select for cutting, copying, or pasting through the *Cut*, *Copy*, or *Paste* commands, or restyle through the *Annotate pen properties* command.




You can directly copy and paste your selection in Microsoft Office programs such as Word, Excel, and Outlook for further processing or sending by e-mail.



MS Outlook




MS Word

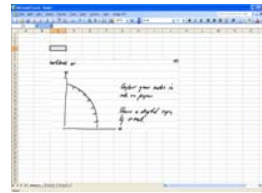

MS Excel




## Annotate pen properties

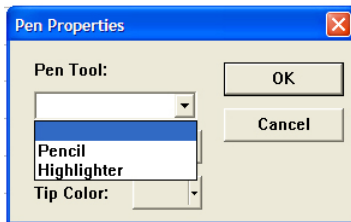


Use this Pen Properties dialog box to modify the annotations in the *Notepad* pane.


1. Start with selecting the objects you want to modify with the *Select tool* (see above). The selection will appear in a selection box. You can now change pen tip colors and shapes, and click the [OK] button to confirm.

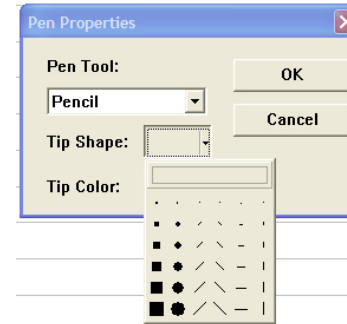

2. Select the pen tip shape. Click the [OK] button to confirm.

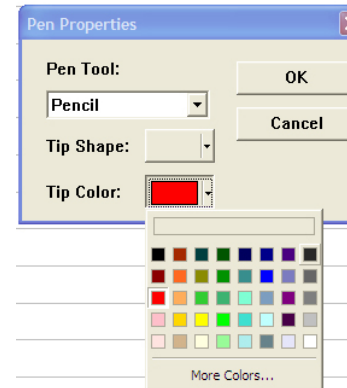

3. Select the pen color. Click on the [More Colors...] button to expand the color menu. Click the [OK] button to confirm.

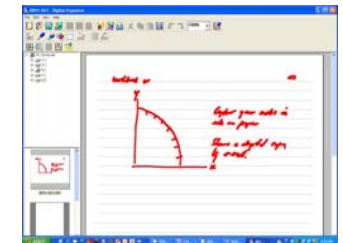

Result



## Pen tip shape


Click on the **Pen tip shape** icon to select the size and shape of the pen tip. Changing the pen tip shape allows you to create some stunning calligraphy.



Pen



Highlighter

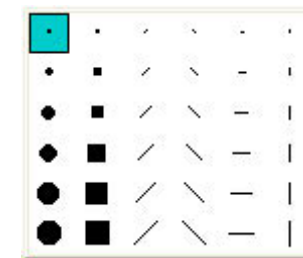



## Pen tip color



Click on the **Pen tip color** icon to open the color menu and select or change the colors of the pen or highlighter. Click on [More Color...] to expand the color menu.

## 4.8 The Digital page toolbar


The *Digital page toolbar* offers some powerful functions to manipulate and repair your digital pages.




### Untangle superimposed pages

A commonly mistake made by users is to forget pressing the *New page* button on the notepad front panel each and every time they turn a paper sheet on the notepad to start a new digital page in memory.

This will unavoidably result in superimposed digital pages in the G-Note's memory with notes and diagrams of a later recorded page being superimposed over an earlier one. Such superimposed pages will then appear as gibberish in the Digital Organizer window.

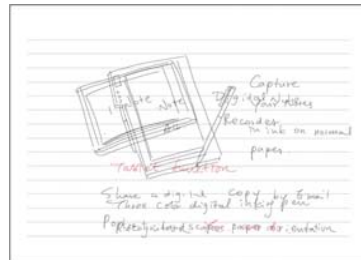


With the **Untangle** function you can track the recorded notes as a sequence of frames, and split the superimposed page at the point in time where you forgot to press the *New page* button. The result will be two separate and perfectly readable pages again:

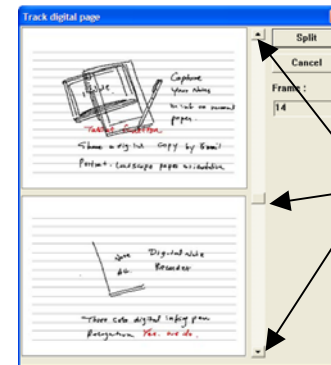

Frame slider and up and down arrows

Click on the **Untangle** icon to open a dialog box consisting of two pages:

The top page will present the earlier recorded page. The Digital Organizer software will automatically try to guess at what point in time you forgot to press the *New page* button. The bottom page will show the notes and diagrams of the superimposed page.

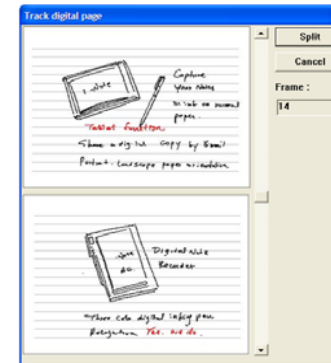

You can fine tune the untangling process by dragging the frame slider up or down the scroll bar, and release the left mouse button.

You can also click on the up or down arrows at the top or bottom of the scroll bar to step through the note recording frame by frame.

Click on the [Untangle] button to divide the superimposed pages into two new and repaired ones.



### Rotate page

Rotate the currently selected digital page clockwise or counter-clockwise.



### Page up

Move to the previous digital page in the *Thumbnail pane*.




### Page down

Move to the next digital page in the *Thumbnail pane*.





## Comments

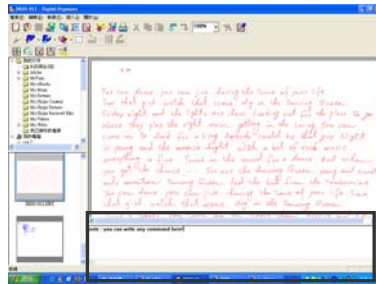


Key in the comments that you want to attach to the selected digital page.

## 4.9 Others
 
### 4.9.1 Insert background picture


1. Start with selecting the [Background Picture] under [Insert] on the view menu.



2. Use the dialog to select the background picture, position and color, then click [OK] button to confirm.



3. The picture is set as background on your digital notepad pane.

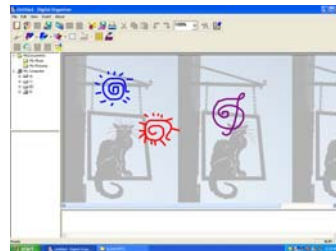

## 5. Recommend Software Information

### MyScript Notes FOR U – 30 days Trial Version

Genius free support MyScript Notes FOR U software that converts your handwritten notes from G-Note into digital text – support of 13 languages: English(UK), English(US), Japanese, French, Simplified Chinese, German, Spanish, Portuguese, Italian, Danish, Dutch, Finnish, and Swedish.

MyScript Notes FOR U is ready-to-use handwriting recognition software that converts handwritten words, drawing, diagrams and etc into electronic files, further of editing under Microsoft Word or Outlook express.

If full version or more languages requested, please contact with your retailers or distributors.

## Appendix

### Replacing the ink cartridge of the digital pen

Open the compartment of the G-Note by lifting its cover while pressing the release latch inward, and locate the ink cartridge and the notch to extract the cartridge from the pen.

1. Hold the digital pen upright and insert the cartridge tip into the center of the notch.
2. Gently push the pen inside the notch.
3. Gently pull out the ink cartridge from the pen.
4. Insert a new cartridge and press the tip firmly against a hard surface until it snaps into place.

**G-Note 5000**



**G-Note 7100**



### Replacing the battery of the digital pen

Even though the battery of the digital pen will last for approximately 14 months, the battery in the pen may be exhausted if you receive erratically missing, lengthened, shortened, or twisted digital ink strokes, or a significant decrease of the thickness of the strokes. If so, please replace the battery (refer to section 1.6 for instructions as to how to replace the pen's battery).

### Taking care of your G-Note


To assure proper functioning of the G-Note, please observe the following precautions:

- Remove the batteries from the G-Note if it is not expected to be used for long periods. This will eliminate the possibility of battery liquid leaking from the batteries and corroding internal components.
- Remove the button-cell battery from the digital ink pen if it is not expected to be used for long periods.
- Avoid placing magnetic media or hot or heavy items on the surface of the G-Note.
- Clean the pen and the housing of with a soft cloth lightly dampened with water or a neutral detergent.
- Never drop the digital pen or the note recorder. The G-NOTE may malfunction if subjected to strong shocks or vibration.
- Avoid cutting or scratching the surface of the G-NOTE.
- Never immerse the pen or digital not recorder in liquid.
- Avoid operating or storing the pen and the recorder in extremely hot or cold temperatures, or where the relative humidity is high.
- Never take the G-NOTE or pen apart as this will void warranty. Leave service of the device to qualified technicians
- Do not use or store the G-NOTE in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields.
- When not in use, please put back on the pen point cap to save energy mode. Otherwise, avoid to frequency influenced.









## Troubleshooting

### ? A superimposed digital page is created.

Make sure to press the *new* button on the front panel every time you turn a paper sheet on the notepad to start a new digital page, and make sure that the *Page* icon on the LCD display shows an empty page . Note: You can repair superimposed pages with the *Untangle* function (see section 4.8).

### ? The G-NOTE has recorded only part of all notes.

- The batteries in the G-NOTE may have run out of power during a note taking session. Please replace the batteries (see section 2.1 for instructions).
- The battery in the digital pen may have run out of power during a note taking session. Please check if the pen icon on the LCD display is either white  or black  (see also section 3.2) in note taking mode to assure the digital pen is working.
- Please check if the battery cover is properly closed in note taking mode.
- You may have used a notepad thicker than the maximum thickness. This will cause the digital pen tip to move outside of the reading height range of the G-NOTE. Please check if the pen icon on the LCD display is either white  or black  (see also section 3.2) in note taking mode to assure a proper reading height distance.
- After you have switched on the device, it may take a second or two for the page icon -  or  - to appear on the LCD display. Please give the G-NOTE the chance to properly start up.
- You may have set the auto-suspend timer to too short a period of idle time (see 3.6.3.). Please increase the auto suspends time.
- Do not use two pens at the same time, or place one pen on the notepad while writing with the other one.
- G-Note didn't connect to PC yet.

### ? Can't Open

- The batteries in the G-NOTE may have run out of power during a note taking session. Please replace the batteries (see section 2.1 for instructions).
- G-Note is working for store pages to Computer.

### ? The Page counter has not yet reached 199, but the memory is full.

Although the G-NOTE theoretically has the ability to manage up to 99 workbooks of 199 digital pages each, in practice such ability is limited to the maximum storage capacity of the built-in flash memory. The G-Note 5000 has a storage capacity of 32MB, which are about 150 digital pages. And G-Note 7100 can store about 75 pages. **Therefore, you can store pages into computer, and then format G-Note. So you can write new page now.**

## Glossary

**G-Note file** – A proprietary file format used to store digitized pen movements in the flash memory of a G-Note digital note recorder. The source file can generate captured objects as a series of digital pages. The file extension is \*.DNT

**Flash memory** - A solid-state, nonvolatile, rewritable memory that functions like a combination of RAM and hard disk. Flash memory is durable, operates at low voltages, and retains data when power is off.

**Pen tablet** - A pen tablet (or graphics tablet) is a computer peripheral device that allows for a relatively simple method of inputting freehand notes, graphics or art into a computer in real time.

## Technical specifications

### G-Note 5000 :

#### Digital notepad specifications

Technology	Electromagnetic digitizer
Dimensions	281(L) x 180(W) x 15(H) mm
Weight	358g (not including batteries)
Paper size	150 x 210mm DIN A5
Thickness notepad	Max. 15 mm
Storage medium	Built-in with 32MB flash memory
Power Source	Alkaline batteries AAA 1.5V x 4
Battery Life	About 100 hours (continuous use)
Work Current	3V / 20mA $\pm$ 5mA
Power Consumption	60mW $\pm$ 15mW
Power saving	Auto suspend after 15 min (default). idle time (configurable)
Interface	USB 1.1

#### Digital ink pen specifications

Dimensions	152(L) x 16mm $\varnothing$
Weight	12g including battery
Power source	One 1.4V button cell battery (PR48)
Battery Life	About 500 hours (continuous use)
Ink cartridge	67.16(L) x 2.3mm $\varnothing$

#### File formats

Proprietary	DNT ; dnt
Mainstream	pdf ; bmp ; jpg ; notes

## G-Note 7100 :

### *Digital notepad specifications*


Technology	Electromagnetic digitizer
Dimensions	332(L) x 249(W) x 16(H) mm
Weight	545g (not including batteries)
Paper size	A4 size – 210 x 297mm Letter size – 215.9 x 279.4 mm Working Area : 210 x 263mm
Thickness notepad	Max. 5~7 mm
Storage medium	Built-in with 32MB flash memory
Power Source	Alkaline batteries AAA 1.5V x 4
Battery Life	About 100 hours (continuous use)
Work Current	3V / 20mA $\pm$ 5mA
Power Consumption	60mW $\pm$ 15mW
Power saving	Auto suspend after 15 min (default). idle time (configurable)
Interface	USB 1.1

### *Digital ink pen specifications*

Dimensions	152(L) x 16mm $\varnothing$
Weight	12g including battery
Power source	One 1.4V button cell battery (PR48)
Battery Life	About 500 hours (continuous use)
Ink cartridge	67.16(L) x 2.3mm $\varnothing$

### *File formats*

Proprietary	DNT ; dnt
Mainstream	pdf ; bmp ; jpg ; notes

 Specifications changed without prior advice, please go through our website at [www.geniusnet.com](http://www.geniusnet.com) for upgrade.