



C3310 User Guide





ENGLISH

C3310 User Guide

Table of Contents



Introduction	8	Security code	24
Guidelines for safe and efficient use	9	Barring password	25
Your phone	14	General functions	26
Phone components	14	Making and answering calls	26
Your phone's features ..	15	Making a call	26
Display information	16	Making a call using the send key	26
Homescreen	18	Making an international call	26
Getting started	19	Ending a call	26
Installing the SIM card and the handset battery	19	Making a call from the address book	26
Charging the battery	21	Adjusting the volume	27
Disconnecting the adapter	22	Answering a call	27
Turning your phone on and off	23	Signal strength	27
Turning your phone ON ...	23	Entering text	27
Turning your phone OFF .	23	Address book	31
Access codes	23	Schedule	31
PIN code	24	Memo	32
PIN2 code	24	In-call menu	32
PUK code	24	During a call	32
PUK2 code	24	Multiparty or conference calls	34

Menu Tree 36

Selecting functions and options 38

Call history [Menu 1]..... 39

Missed calls 39

Received calls 39

Dialled calls 40

Delete recent calls 40

Call charges 40

Call duration 40

Call costs 41

Settings 41

GPRS information 42

Call duration 42

Data volumes 42

Address book [Menu 2] 43

Search 43

Add new 44

Caller groups 44

Speed dial 45

Settings 45

Copy all 46

Delete all 46

Information..... 46

Settings [Menu 3] 48

Alarm clock 48

Date & Time 48

Set date 48

Date format 48

Set time 49

Time format 49

Phone settings 49

Display settings 49

Language 50

Call settings 50

Call divert 50

Answer mode 51

Send my number 51

Call waiting (Network Service) .. 51

Minute minder 51

Auto redial 51

Security settings 52

PIN code request 52

Phone lock 52

Call barring 52

Fixed dial number (FDN)

(SIM dependent) 53

Change codes 54

Network settings 54

Automatic 54

Manual 54

Preferred 55

GPRS setting 55

Table of Contents



Reset settings	56	Templates	67
Camera [Menu 4]	57	Text message	67
Take photo	57	Picture message	
Take framed photo	58	templates	68
Take continuously	58	Signature	68
Photo album	58	Settings	68
All photos	58	Text message	68
My photos	58	Picture message	69
Framed photos	58	Voice mail centre	71
Add. book pictures	58	Info service	72
Settings	59	Service message	72
Memory status	59		
Clear album	59	Orange World [Menu 6]	73
Auto save	59		
Messages [Menu 5]	60	Profiles [Menu 7]	75
Write text message	60	Changing the profile	75
Write picture message ..	62	Customising profiles	
Inbox	63	- Personalise	75
Outbox	64	Customising profiles	
Drafts	65	- Rename	76
Listen to voice mail	66	Media album [Menu 8]	77
Info service	66	Games & Apps.	77
Read	66	Pictures	77
Topics	66	Sounds	77

Extras [Menu 9]	79
Calculator	79
Unit converter	79
World time	80
Voice recorder.....	80
Record	81
View list	81
Memory status	81
Orange Help	81
 Q&A	 82
Accessories	85
Technical Data.....	86



Introduction

Congratulations on your purchase of the advanced and compact C3310 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use



Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model C3310 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY3 for use at the ear is 0.975 W/kg (10g).

Product care and maintenance

Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.

Guidelines for safe and efficient use

- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Your phone

Phone components



Your phone's features

1. Earpiece

2, 11. Left soft key/Right soft key

performs the function indicated by the text on the screen immediately above it.

3. Orange World key

A shortcut key to access to Orange World WAP.

4. Send key

Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.

5. Side keys

- Controls the volume of key tone in standby mode with the opening the flip.
- Controls the earpiece volume during a phone call.

6. Alphanumeric keys

Enter numbers, letters and some special characters.

7. Microphone

Can be muted during a call for privacy.

8. LCD screen

Displays phone status icons, menu items, Web information, pictures and more in full colour.

9. Navigation keys

Use to access each menu quickly.

Your phone

10. Confirm key

Selects menu options and confirms actions.

12. Camera key

Press this key to use the camera feature. Directly goes to the camera mode.

13. End/Power key

Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.







14. Clear key















Deletes a character by each press. Hold the key down to clear all input all input. Also use this key to go back to the previous screen.

Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.

Icon	Description
	Indicates the receipt of a text message.
	Indicates the receipt of a voice message.
	Indicates the receipt of a MMS message.
	Indicates that the vibration ringer has been set.
	Indicates the receipt of an e-mail message.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.
	Indicates the Car profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.



Homescreen

Orange has added the Home screen to your phone so that you can quickly link to the features you use the most as well as see at a glance any missed calls or new messages.



Quick access

The Home screen lets you launch key features of your phone and great services from Orange in as little as two key presses. Whether you want to send a text message, take a photo or start exploring Orange World, you can now do it faster than ever.

All the options


Each time you select one of the icons in the left of your screen, you're presented with a list of options that give you even more choice. So, for example, when you want to browse Orange World, you can choose to go direct to Info, Fun, Tools or Your Page.



Installing the SIM card and the handset battery

1. Remove the battery cover.



Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.

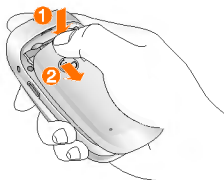

Note Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Remove the battery.


Hold the top edge of the battery and lift the battery from the battery compartment.

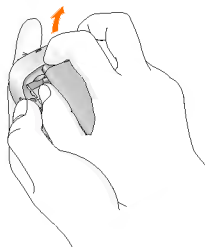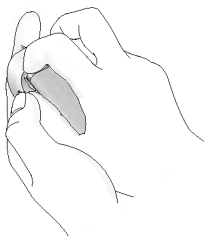

Getting started

3. Install the SIM card


Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

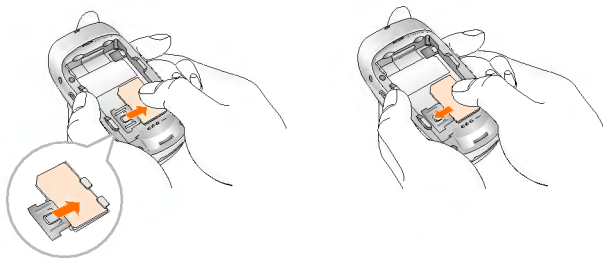

! Caution The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

4. Install the battery.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.

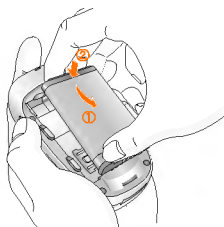



5. Replace the battery cover.

Lay the battery cover in place of the phone and slide it until the latch clicks.



Charging the battery

To connect the travel adapter to the phone, you must have installed the battery.

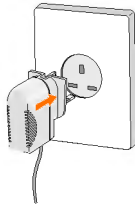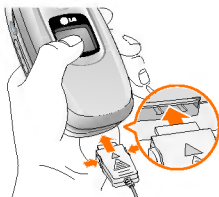

1. Ensure the battery is fully charged before using the phone.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.
4. The moving bars of battery icon will stop after charging is complete.

Getting started

- ! Caution**
 - Do not force the connector as this may damage the phone and/or the travel adapter.
 - Insert the battery pack charger vertically to wall power outlet.
 - If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.
 - Do not remove your battery or the SIM card while charging.
- ! Warning**
 - Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
 - Make sure that no sharp-edged items such as animal teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
 - Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the adapter


1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



- Note** • Ensure the battery is fully charged before first using the phone.
- Do not remove the battery or SIM card while charging.
 - In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

- Note** Like any other radio devices, avoid any unnecessary contact with the antenna while your phone is on.

Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 3-5-5]. See page 54.

Getting started

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password




The barring password is required when you use **Call barring** [Menu 3-5-3] function. You obtain the password from your network operator when you subscribe to this function. See page 52 for further details.





General functions

Making and answering calls



Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key.

Making a call using the send key

1. In standby mode, press the send key (), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press  .

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  .


Ending a call

When you have finished your call, press the end () key.

Making a call from the address book

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory, which is address book. You can dial a number by simply looking up the desired name in the address book.

Adjusting the volume


If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

! Note In standby mode with the sliding keypad down, pressing the side keys adjusts the key tone volume.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if saved in the phonebook) is displayed.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.

General functions

 
T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

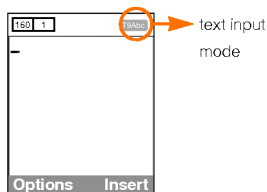

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys to . Press one key per letter.
 - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example: Press to type **Good**

Press [Down navigation key] to type **Home**

- If the desired word is missing from the word choice list, add it using the ABC mode.
 - You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the key.




To delete letters, press . Press and hold down to erase entire words.

! Note To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

General functions

► Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

! Note Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
1	., / ? ! - : ' " 1	., / ? ! - : ' " 1
2	A B C 2 Ä Å Á Â Ã Ä Å Æ Ç	a b c 2 ä å á â ã ä å æ ç
3	D E F 3 Ě Ě Ě Ě Ě	d e f 3 ě ě ě ě ě
4	G H I 4 Ĩ Ĩ Ĩ Ĩ Ĩ	g h i 4 ĩ ĩ ĩ ĩ ĩ
5	J K L 5	j k l 5
6	M N O 6 Ñ Ö Ø Ò Ó Ô Õ Ö	m n o 6 ñ ö ø ò ó ô õ ö
7	P Q R S 7 ß Š	p q r s 7 ß š
8	T U V 8 Ů Û Ú Û	t u v 8 ů ů ů ů ů
9	W X Y Z 9	w x y z 9
0	Space key	Space key

► Using the 123(Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Address book



You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Address book** menu.

Schedule

You can enter a schedule or memo in the scheduler by pressing the left soft key [Options].

- **Add new:** Select this to enter a new schedule or a memo. After a schedule note or memo is entered on a date, the date is shown in a different colour and “” (schedule), “” (memo) appears on the right bottom of the screen. This function reminds you of your schedule. And the phone will sound an alarm tone if you set the phone to do so.
- **View:** Shows the schedule note or memo for the chosen day. Press the left soft key [Options] to edit or delete the note you selected.
- **View all:** Shows all the notes that are entered in the phone. Use the up/down navigation keys to browse through the note lists.
- **Delete past:** Select this to delete the expired schedule notes that have already been notified. You are asked to confirm this action.

General functions

- ▶ **Delete all:** Select this to delete all the schedule notes and memos. You are asked to confirm this action.

Memo

You can add up to 20 memos. The submenu is same as "Schedule".

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.


Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 3-4-4] on page 51.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.


Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**. After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.



Menu Tree

The following illustration shows the available menu structure and indicates the:



1. Call history

- 1.1 Missed calls
- 1.2 Received calls
- 1.3 Dialed calls
- 1.4 Delete recent calls
- 1.5 Call charges
- 1.6 GPRS information



2. Address book

- 2.1 Search
- 2.2 Add new
- 2.3 Caller groups
- 2.4 Speed dial
- 2.5 Settings
- 2.6 Copy all
- 2.7 Delete all
- 2.8 Information



3. Settings

- 3.1 Alarm clock
- 3.2 Date & Time
- 3.3 Phone settings
- 3.4 Call settings
- 3.5 Security settings
- 3.6 Network settings
- 3.7 GPRS setting
- 3.8 Reset settings



4. Camera

- 4.1 Take photo
- 4.2 Take framed photo
- 4.3 Take continuously
- 4.4 Photo album
- 4.5 Settings



5. Messages

- 5.1 Write text message
- 5.2 Write picture message
- 5.3 Inbox
- 5.4 Outbox
- 5.5 Drafts
- 5.6 Listen to voice mail
- 5.7 Info service
- 5.8 Templates
- 5.9 Settings



6. Orange World

- 6.1 Orange World
- 6.2 You and Orange
- 6.3 Find
- 6.4 Info
- 6.5 Fun
- 6.6 Tool
- 6.7 Your page
- 6.8 My bookmarks
- 6.9 Settings
- 6.0 Services +



7. Profiles

- 7.1 Normal
- 7.2 Vibrate only
- 7.3 Silent
- 7.4 Loud
- 7.5 Headset



8. Media album

- 8.1 Games & Apps.
- 8.2 Pictures
- 8.3 Sounds
- 8.4 More games
- 8.5 More ringtones
- 8.6 More pictures





9. Extras


- 9.1 Calculator
- 9.2 Unit converter
- 9.3 World time
- 9.4 Voice recorder
- 9.5 Memory status
- 9.6 Orange Help



Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked [] and []. Each menu and sub-menu lets you view and alter the settings of a particular function

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

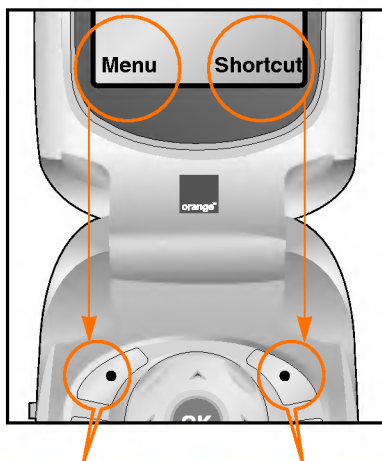


Press the left soft key to access the available menu.

Press the right soft key to save the menu as a favorite.



You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select **Call register** using navigation keys.

Missed calls [Menu 1-1]

This option lets you view the last 10 unanswered calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Received calls [Menu 1-2]

This option lets you view the last 10 incoming calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number
- Delete the call from the list

Call history [Menu 1]

Dialled calls [Menu 1-3]

This option lets you view the last 20 outgoing calls (called or attempted). Using the [Option] key, you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number
- Delete the call from the list

Note You can delete all the call records from the list using the **Delete recent calls** menu [Menu 1-4].

Delete recent calls [Menu 1-4]

Use this to delete the missed call list, received call list, or dialled call list. You can also delete all call lists at a time selecting **All calls**.

Call charges [Menu 1-5]

Whithin these submenus, you can view the duration the cost of your calls.

Call duration [Menu 1-5-1]

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the [OK] key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the PIN2 code.

- **Last call:** Length of the last call
- **All calls:** Total length of all calls made or received calls since the timer was last reset.
- **Received calls:** Length of the incoming calls
- **Dialled Calls:** Length of the outgoing calls

- **Reset all:** You can delete all records of call timer.

❗ Notice The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

Call costs [Menu 1-5-2]

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code.

❗ Note The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.

Settings [Menu 1-5-3]

• Set tariff

You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices.

To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.

❗ Note When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

• Set credit

This network service allows you to limit the cost of your calls by selected charging units. If you select **Read**, the number of remaining unit is shown. If you select **Change**, you can change your charge limit.

• Auto display

This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

Call history [Menu 1]

GPRS information [Menu 1-6]

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

(GPRS stands for General Packet Radio Service.)

Call duration [Menu 1-6-1]

You can check the duration of **Last call** and **All calls**. You can also reset the call timers.

Data volumes [Menu 1-6-2]

You can check the **Sent**, **Received** or **All** data volumes. You can also delete the record of data volumes.



You can save phone numbers and their corresponding names in the memory of your SIM card.

- Press the left soft key [Menu] in standby mode, then select **Address book**.

Search [Menu 2-1]

1. Select **Search**. You are asked to enter a name.
2. Enter the start of the name that you wish to find and press left soft key [Search].

Note You can also scroll through the address book from the beginning, by pressing the left soft key [Search] directly.

3. After finding the desired name, you can make a call to the number by pressing the [send] key. Or press the left key [Option] to use the following options.

- **Edit**: Edits the name, number, and the listing group.
- **Write text/ picture message**: Use this to write the messages.
- **Copy**: Use this to copy the address book entry from SIM to the phone memory or vice versa.
- **Main number**: You can select the one of mobile, home, office that you often use. The main number will be displayed first, if you set this menu.
- **Delete**: Deletes the entry.

Address book [Menu 2]

Add new [Menu 2-2]

You can add an entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 2-5-1]. The phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Scroll to highlight **Add new**, and press [Select]
 2. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu 2-5-1].
- **Adding new entries into SIM memory**
You can enter a name and number, and select the required group. (Depends on the SIM)
 - **Adding new entries into the phone memory**
You can enter a name, numbers, E-mail address and memo, and select the required group.

Caller groups [Menu 2-3]

There are 7 pre-defined groups, as well as one additional group labelled **Others**, where you can create lists.

1. Select **Caller groups**. Every group list will be displayed: **Family, Friend, Colleague, VIP, Group1, Group2, and Others**.
 2. Select the group name that you want to manage by pressing the left soft key [Option]. The following submenus will be displayed except for **Others**.
- **Member list**: Displays the member list in the group.
 - **Group ring tone**: Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.

- **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
- **Add member:** Add a member to the group.
- **Delete member:** Delete a member from the group.
- **Rename:** Assigns a new name to the group.

Speed dial [Menu 2-4]

You can assign any of the keys 2 to 9 with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Scroll to **Speed dial**, then press [Select].
2. To add a number to **Speed dials**, press the left soft key [Add]. Search the name through the address book.
3. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Option].

Settings [Menu 2-5]

Set memory

You can select the memory for the Address book feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

Search by

You can set the phone to search by **name** or **number**, when you search the Address book. If you select **Variable**, the phone will ask how to search when you search the Address book.

Address book [Menu 2]

View options

Scroll to highlight View **options**, then press Select.

- Name only : Set the address book list with displaying only name.
- With pictures: Set the address book list with the information of character and picture.
- Name & number: Set the address book list with the name and the number.

Copy all [Menu 2-6]


You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.


The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.
- **Delete original:** When copying, the original dial numbers will be erased.

Delete all [Menu 2-7]


You can delete all entries in SIM or phone memory. This function requires the security code. Press  to return to standby mode.

Information [Menu 2-8]

- ▶ **Service dial number (SIM dependent):** Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.
 1. Select the Service dial number option.
 2. The names of the available services will be shown.
 3. Use the up/down navigation keys to select a service.
Press  .
- ▶ **Memory status:** You can check the current memory status of the SIM card and phone memory.
- ▶ **Own number:** Use this to display your phone number in the SIM card.



Settings [Menu 3]

Press the Menu key () and select **Settings** using navigation keys.

Alarm clock [Menu 3-1]

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available.

On: Set the alarm time.

1. Enter the menu.
2. Select [On] by the left/right navigation key.
3. Enter the alarm time using the numeric keys.
4. Using the left/right navigation keys, select one of the alarm options: Once, Daily, Weekly, and Monthly.
5. Alarm melody section: select the desired alarm melody using the left/right navigation keys.

Off: Deactivates the alarm.

Date & Time [Menu 3-2]

This option lets you change the current time and date displayed.

The following options are available.

Set date [Menu 3-2-1]

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

Date format [Menu 3-2-2]

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

YYYY/MM/DD (year/month/day)

Set time [Menu 3-2-3]

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format [Menu 3-2-4]



24-hour

12-hour

Phone settings [Menu 3-3]

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

Display settings [Menu 3-3-1]

- ▶ **Wallpaper:** Use this to set up the display on the LCD screen in the standby mode.
- ▶ **Menu colour:** Your Phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the Select key.
- ▶ **Greeting note:** If you select **On**, you can edit the text which is displayed in standby mode.
- ▶ **Backlight:** Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.
- ▶ **LCD contrast:** You can set the brightness of LCD by pressing  ,  .
- ▶ **Information window:** You can preview the current status of the selected menu before opening the menu. The status is shown at the bottom of the screen.
- ▶ **Network name:** If you select **On**, you can see the name of network service provider which is displayed in standby mode.

Settings [Menu 3]

Language [Menu 3-3-2]

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

Call settings [Menu 3-4]

To change the settings for call diverting.

Call divert [Menu 3-4-1]

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

All voice calls: Diverts all voice calls unconditionally.

If busy: Diverts voice calls when the phone is in use.

If no reply: Diverts voice calls which you do not answer.

If out of reach: Diverts voice calls when the phone is switched off or out of coverage.

All data calls: Diverts to a number with a PC connection unconditionally.

All fax calls: Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

► **Activate:** Activates the corresponding service.

- **To voice mail centre:** Forwards to message centre. This function does not apply to All data calls and All fax calls menus.

- **To other number:** Input the number for call diverting.

- **To favourite number:** You can check recent five diverted numbers.

▶ **Cancel:** Cancels the selected call divert.

▶ **View status:** You can check the status of the service.

Cancel all: Cancels all call divert settings.

Answer mode [Menu 3-4-2]

Select the desired mode to answer a call.

▶ **Flip open:** When the phone rings, you can answer a call simply by opening the flip.

▶ **Press any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().

▶ **Send only:** You can answer a call only by pressing the send key.

Send my number [Menu 3-4-3]

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling.

Call waiting (Network Service) [Menu 3-4-4]

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

Minute minder [Menu 3-4-5]

When set to **On**, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Auto redial [Menu 3-4-6]

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Settings [Menu 3]

Security settings [Menu 3-5]

Various passwords are used to protect certain features of your phone. Refer to page 24-25 for the various passwords.

PIN code request [Menu 3-5-1]

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- **On:** You must enter the PIN each time the phone is switched on.
- **Off:** The phone connects directly to the network when you switch it on.

Phone lock [Menu 3-5-2]

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes – Security code** menu option [Menu 3-5-5-3]. Once the correct password has been entered, you can use the phone until you switch it off.

Call barring [Menu 3-5-3]

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- ▶ **All outgoing:** No call can be made.
- ▶ **Outgoing international:** International calls cannot be made.

▶ **International when roam:**

When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.

▶ **All incoming:** No call can be received.

▶ **Incoming when abroad:** Calls cannot be received when you are using your phone outside your home service area.

▶ **Cancel all:** All call barring settings are deactivated; calls can be made and received normally.

▶ **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.

❗ **Note** To use **Call barring**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.

Fixed dial number (FDN) (SIM dependent) [Menu 3-5-4]

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

The following options are available:

▶ **Activate:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.

▶ **Cancel:** Allows you to call any number.

▶ **Number list:** Use this to view the numbers saved as fixed dial numbers.

❗ **Note** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Settings [Menu 3]

Change codes [Menu 3-5-5]

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **PIN code**, **PIN2 code**, **Security Code**

Note PIN: Personal Identification Number

Network settings [Menu 3-6]

The **Network settings** feature enables you to indicate whether the network used when roaming(outside your home area) is selected automatically, manually or preferably.

Note You can select a network other than your home network only if it has a valid roaming agreement with your home network.

Automatic [Menu 3-6-1]

Use this to set the phone to automatically search for and select one of the cellular networks available in your area.

The phone will default back to **Automatic** if it is switched off.

Manual [Menu 3-6-2]

If you want to select the desired network manually from a list of network, you can activate this function. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone. The phone will let you select another network if the phone fails to access the selected network. If you switch off the phone, the phone will be reset to **Automatic**.

Preferred [Menu 3-6-3]

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

GPRS setting [Menu 3-7]

GPRS(General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology

- You need to subscribe to the GPRS service.
For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

If you select Power on and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select When needed, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.


! Note If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

Settings [Menu 3]

Reset settings [Menu 3-8]

You can reset your phone to its default configuration.
To do so, proceed, as follows.



1. Select the **Reset settings** menu option.
2. Enter the 4-digit security code.

 **Note** The security code is preset to 0000.



The C3310 has a built-in camera. It supports Zoom, Colour/Grey settings, and Multi burst functions.

Take photo [Menu 4-1]


Press the Menu key () and select **Camera** → **Take photo**.
Or, press the camera key () in standby mode.

1. Focus on the subject to capture, then press the [OK] key or the side key.
2. 'Saved' is displayed below the captured image. The captured image is then automatically saved.
3. Press the [OK] key to continue taking pictures. Or press the right soft key [Delete] to delete the image.

<Options before taking a picture>



1. **Zoom:** You can zoom in or out using up/down navigation keys.
2. **Color/ Grey/ Sepia Setting:** Select Colour, Grey or/and Sepia mode by using the left/right navigation keys..
3. **OK:** Press the [OK] key to capture an image.

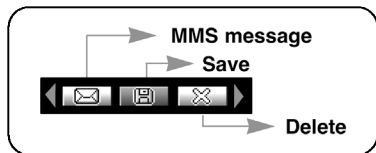Note If the memory is full, 'Memory full' is displayed and you cannot take any more picture. Create space by deleting old images.






Camera [Menu 4]

Take framed photo [Menu 4-2]

You can take a picture on the various of backgrounds. Furthermore, you can select a frame by pressing  , .

Reference In this mode,,you can 't change the settings of resolution.

Take continuously [Menu 4-3]

You can take the maximum of 9 pictures subsequently at the same time.After taking a picture,you can view it by pressing  ,  . You can also save it by pressing .

Reference If you set 640x480 in resolution,,you can take only 3 pictures.In case of 320x240,it is availabel to 6 pictures.

Photo album [Menu 4-4]

You can view and send a picture.In addition,you can set the window as a background.

All photos [Menu 4-4-1]

You can view the maximum of 9 pictures in order.

My photos [Menu 4-4-2]

You can view all pictures except of frame and phone book ones.

Framed photos [Menu 4-4-3]

You can view all frame pictures.

Add. book pictures [Menu 4-4-4]

You can view all phonebook pictures.

• Option

- **Multi view** : You can view the maximum of 9 thumbnails in a screen.
- **Write picture message** : You can send a picture through MMS.
- **Set as wallpaper** : You can set a picture as a wallpaper.
- **Slide show**: You can view the pictures in slide show.
- **Delete**: You can delete a picture.
- **Edit title**: You can edit the title of picture.
- **View information**: You can view information of picture such as title, size, date, time.
- **Protection**: If you activate this function on each picture , you can't send, edit or delete.

Settings [Menu 4-5]

Memory status [Menu 4-5-1]

You can check the capacity of total,used,and free memory.

Clear album [Menu 4-5-2]

You can delete all pictures which saved in a memory.

Auto save [Menu 4-5-3]

After taking a picture, the image is saved automatically without pop up message.

