FUJ!FILM

DIGITAL CAMERA FinePix S5700 FinePix S5800 FIDEPIX S700 FIDEPIX S800

Getting Ready

Using the Camera

Advanced Features Photography

Playback

Movie

Software

OWNER'S MANUAL

This manual will show you how to use vour FUJIFILM DIGITAL CAMERA FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 correctly. Please follow the instructions carefully.































Appendices

Troubleshooting

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

For customers in the U.S.A.

Tested To Comply With FCC Standards FOR HOME OR OFFICE USE

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC Rules, this product must be used with a Fujifilm-specified ferrite-core A/V cable, USB cable, and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (→p.176) and make sure you understand them before using the camera.

NOTICE

BEFORE OPENING THE CD-ROM PROVIDED BY FUJIFILM Corporation, PLEASE READ THIS END USER LICENSE AGREEMENT CAREFULLY, ONLY IF YOU AGREE WITH THIS AGREEMENT. SHOULD YOU USE THE SOFTWARE RECORDED ON THE CD-ROM. BY OPENING THE PACKAGE, YOU ACCEPT AND AGREE TO BE BOUND BY THIS AGREEMENT.

End User License Agreement

This End User License Agreement ("Agreement") is an agreement between FUJIFILM Corporation ("FUJIFILM") and you, which sets forth the terms and conditions of the license granted for you to use the software provided by FUJIFILM.

The CD-ROM contains third party software. In case a separate agreement is provided by a third party supplier for its software, the provisions of such separate agreement shall apply to the use of such third party software. prevailing over those of this Agreement.

1. Definitions.

- (a) "Media" means the CD-ROM titled "Software for FinePix CX"- which is provided to you together with this Agreement.
- (b) "Software" means the software which is recorded on Media.
- (c) "Documentation" means the operation manuals of Software and other related written materials which are provided to you together
- (d) "Product" means Media (including Software) and Documentation collectively.

2. Use of Software.

FUJIFILM grants to you a nontransferable, nonexclusive license:

- (a) to install one copy of Software onto one computer in binary machine
- (b) to use Software on the computer onto which Software is installed; and (c) to make one backup copy of Software.

Restrictions.

- 3.1 You shall not distribute, rent, lease or otherwise transfer all or any part of Software, Media or Documentation to any third party without FUJIFILM's prior written consent. You also shall not sublicense. assign or otherwise transfer all or any part of the rights granted to you by FUJIFILM under this Agreement without FUJIFILM's prior written consent.
- 3.2 Except as expressly granted by FUJIFILM hereunder, you shall not copy or reproduce all or any part of Software or Documentation.
- 3.3 You shall not modify, adapt or translate Software or Documentation. You also shall not alter or remove copyright and other proprietary notices that appear on or in Software or Documentation.
- 3.4 You shall not, or shall not have any third party, reverse-engineer. decompile, or disassemble Software.

4. Ownership.

All copyrights and other proprietary rights to Software and Documentation are owned and retained by FUJIFILM or the third party suppliers as indicated on or in Software or Documentation. Nothing contained herein shall be construed, expressly or implicitly, as transferring or granting any right, license, or title to you other than those explicitly granted under this Agreement.

5. Limited Warranty.

FUJIFILM warrants to you that Media is free from any defect in material and workmanship under normal use for ninety (90) days from the date of your receipt of Media. Should Media not meet the foregoing warranty, FUJIFILM shall replace such defective Media with other Media bearing no defect. FUJIFILM's entire liability and your sole and exclusive remedy with regard to any defect in Media shall be expressly limited to such FUJIFILM's replacement of Media as provided herein

6. DISCLAIMER OF WARRANTY.

EXCEPT AS PROVIDED IN SECTION 5 HEREIN, FUJIFILM PROVIDES PRODUCT "AS IS" AND WITHOUT WARRANTIES OF ANY KIND. EXPRESS OR IMPLIED. FUJIFILM SHALL MAKE NO WARRANTY, EXPRESS, IMPLIED OR STATUTORY, AS TO ANY OTHER MATTERS, INCLUDING, BUT NOT LIMITED TO NON-INFRINGEMENT OF ANY COPYRIGHT, PATENT, TRADE SECRET, OR ANY OTHER PROPRIETARY RIGHTS OF ANY THIRD PARTY, MERCHANTABILITY. OR FITNESS FOR ANY PARTICULAR PURPOSE.

7. LIMITATION OF LIABILITY.

IN NO EVENT SHALL FUJIFILM HAVE ANY LIABILITY FOR ANY GENERAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, OR OTHER DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS OR LOST SAVINGS) INCURRED FROM THE USE OF OR INABILITY TO USE PRODUCT EVEN IF FUJIFILM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. 8. No export.

You acknowledge that neither Software nor any part thereof, will be transferred, or exported to any country or used in any manner in violation of any export control laws and regulations to which Software is subject. 9. Termination.

In case you breach any of the terms and conditions hereof, FUJIFILM may immediately terminate this Agreement without any notice.

10 Term.

This Agreement is effective until the date when you cease to use Software, unless earlier terminated in accordance with Section 9 hereof.

11. Obligation upon termination.

Upon termination or expiration of this Agreement, you shall, at your own responsibility and expense, delete or destroy immediately all Software (including its copies), Media and Documentation.

12. Governing Law.

This Agreement shall be governed by and construed in accordance with laws of Japan.

EC Declaration of Conformity

We Name:

FUJIFILM Europe GmbH

Address:

Heesenstrasse 31 40549 Dusseldorf, Germany

declare that the product

Product Name: FUJIFILM DIGITAL CAMERA FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800

Manufacturer's Name: FUJIFILM Corporation

Manufacturer's Address: 7-3, AKASAKA 9-CHOME, MINATO-KU,

TOKYO 107-0052, JAPAN

conforms to the following Standards:

Safety: EN60950-1: 2001

EMC: EN55022: 2006 Classe B

EN55024: 1998 + A1: 2001 + A2: 2003 EN61000-3-2: 2000 + A2: 2003

following the provision of the EMC Directive (2004/108/EC) and Low Voltage Directive (2006/95/EC).

 ϵ

Dusseldorf, Germany

June 1, 2007

Place

Date

Signature/Managing Director



This product comes with batteries. When these are empty, you shouldn't throw them away but deliver them as domestic chemical refuse.

Disposal of Electric and Electronic Equipment in Private Households

Disposal of used Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product, or in the manual and in the warranty, and/or on its packaging indicates that this product shall not be treated as household waste.

Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

If your equipment contains easy removable batteries or accumulators please dispose these separately according to your local requirements.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you have purchased the product.

In Countries outside the EU:

If you wish to discard this product, please contact your local authorities and ask for the correct way of disposal.

Contents

Warning 2
IMPORTANT 3
EC Declaration of Conformity 4
Disposal of Electric and Electronic Equipment in
Private Households 5
Contents6
Preface
About this Manual11
Accessories Included 12
Camera Parts and Features
Example of screen Text Display
Getting Ready
Attaching the Strap and Lens Cap 17
Loading the Batteries
Checking the battery charge21
Loading the Memory Card22
Turning On and Off25
Setting the language, date, and time 26
Correcting the Date and Time
Selecting the Language
Haine the Oamen
Using the Camera
Taking Pictures (AUTO AUTO Mode)30
Taking pictures with the focus and
exposure locked 34
AF-assist illuminator
Using zoom function
Adjusting the shot composition 37
Viewing the Images39

Erasing the Images/Movies	44
Using the erase button $(\stackrel{\leftarrow}{\mathbb{m}}/\triangle)$	44
Erasing the images using	
Playback menu	44
Advanced Features — Photography	
Using the Photography Functions —	
Procedure of Setting	47
Setting the Shooting Mode	51
AUTO Auto	
Picture Stabilization	
Natural Light	52
◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆ ◆	
SP1, SP2 SCENE POSITION	53
P Program AE	
A Aperture Priority AE	
S Shutter Priority AE	
M Manual	62
Adjusting the Image Brightness	
(Exposure Compensation)	64
Macro (Close-up)	66
Setting the Flash (Intelligent Flash)	67
♡ Self-Timer	69
Setting self-timer	69
Taking pictures using self-timer	69
Taking pictures continuously	71
☆ Increasing LCD Monitor Brightness	74
Using F-MODE MENU (Photography)/	
SHOOTING MENU	75
Setting the F -MODE MENU	
(Photography)	75

Setting the SHOOTING MENU	
F-MODE MENU (Photography)79	
Changing the sensitivity setting	
(10 ISO)	
Changing the quality setting	
(QUALITY)80	
Changing the FinePix COLOR setting	
(FinePix COLOR) 81	
SHOOTING MENU82	
Selecting light metering method	
(PHOTOMETRY) 82	
Adjusting color balance	
(WB WHITE BALANCE)83	
Focusing the shot quickly	
(HIGH-SPEED SHOOTING) 84	
Specifying the focusing mode	
(I FOCUSING) 85	
Specifying the focusing area	
(AF AF MODE)	
Adjust the image outline (hard/soft)	
(S SHARPNESS)	
Adjust the amount of light emitted by the flash	
(## FLASH (Brightness Adjustment)) 89	
Photograph the same image with different	
exposure (BRACKETING) 90	
dvanced Features — Playback	
Playback Information	
Using <i>F</i> -MODE MENU (Playback)/PLAYBACK	
MENU 92	

Setting the F -MODE MENU	
(Playback)	92
Setting the PLAYBACK MENU	
F-MODE MENU (Playback)	
Setting automatic playback	
(SLIDE SHOW)	93
DPOF set frame	
(P PRINT ORDER (DPOF))	93
PLAYBACK MENU	
Rotating the images	0,
(2 IMAGE ROTATE)	97
Protecting the images	0,
(PROTECT)	98
Copying the images	
(MM COPY)	99
Adding voice memos to the images	
(VOICE MEMO)	102
Trimming the images	. 02
(E TRIMMING)	105
	100
Advanced Features — Movie	
Recording Movies	107
Using the Image Stabilization Function	
Changing movie size	
▶ Playing Back Movies	
Settings	
SET-UP	113
Using the SET-UP menu	113
SET-UP menu option	

Camera Connection	
Connecting to a TV	123
(sold separately) Connecting Camera Directly to Printer —	124
PictBridge Function	125
Software Installation	
Installation on a Windows PC	129
Installation on a Mac OS X	132
Connecting to a PC	135
Using FinePixViewer	138
Appendices	
System Expansion Option	140
Accessories Guide	141
Using Your Camera Correctly	143
Power Supply and Batteries	144
Discharging rechargeable batteries	146
Notes on the xD-Picture Card ™, the SD	
Memory Card and the Internal Memory	
Warning Displays	149
Troubleshooting	
Troubleshooting	153
Specifications	60
Explanation of Terms 10	
FUJIFILM Digital Camera Worldwide	
Network 10	69
Safety Notes 1	76

Usable Memory Cards

You can use the **xD-Picture Card** and the SD Memory Card and the SDHC Memory Card with the FinePix S5700 / FinePix S700 / FinePix S800. In this Owner's Manual, these cards are expressed as "Memory Card".

Preface

Test Shots Prior to Photography

For important photographs (such as weddings and overseas trips), always take a test shot and view the image to make sure that the camera is working normally.

 FUJIFILM Corporation cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of Memory Card containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

Liquid Crystal

If the LCD monitor is damaged, take particular care with the liquid crystal in the monitor. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin Wipe the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal gets into your eye
 Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed Flush your mouth thoroughly with water. Drink large quantities of water and induce vomiting. Then seek medical assistance.

■ Trademark Information

- and xD-Picture Card™ are trademarks of FUJIFILM Corporation.
- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- Macintosh, Power Macintosh, iMac, PowerBook, iBook and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Microsoft, Windows, the Windows logo, Windows Vista and the Windows Vista logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Windows is an abbreviated term referring to the Microsoft[®] Windows[®] Operating System.
- * The "Designed for Microsoft® Windows® XP" logo refers to the camera and the driver only.
- · SDHC logo is a trademark.
- Other company or product names are trademarks or registered trademarks of the respective companies.



■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

Explanation of Color Television System

NTSC: National Television System Committee, color television telecasting specifications adopted

mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries


and China.

Exif Print (Exif ver. 2.2)

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

 * See "Using Your Camera Correctly" (→p.143) for more information.

About this Manual

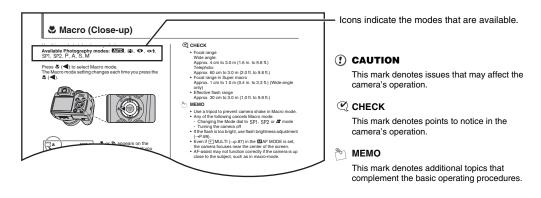


Usable Memory Cards

You can use the **xD-Picture Card**, the SD Memory Card and the SDHC Memory Card with the FinePix S5700 / FinePix S700 / FinePix S800. In this Owner's Manual, these cards are expressed as "Memory Card".

■ 4-direction (▲▼◀▶) button

Illustrations in the Owner's manual show the FinePix S5700 as an example.

 Up, down, left, and right are indicated by black triangles in the Owner's Manual. Up or down is shown as ▲ or ▼, and left or right is shown as ◀ or ►.



Accessories Included

• AA-size Alkaline Batteries (LR6) (4)



• Strap (1)



• Lens cap (1 set)



• A/V cable (1)



• USB cable (1)




• CD-ROM (1) Software for FinePix CX



• Owner's Manual (this manual) (1)


Camera Parts and Features

• Refer to the pages in parentheses for information on using the camera parts or features.

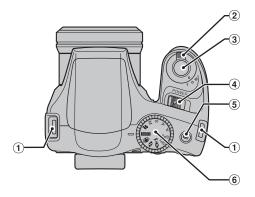


- 1) Strap mount (p.17)
- 2 Zoom lever (p.36)
- 3 Shutter button
- 4 Power switch (p.25)
- (5) Continuous shooting button (p.71)
- (6) Mode dial



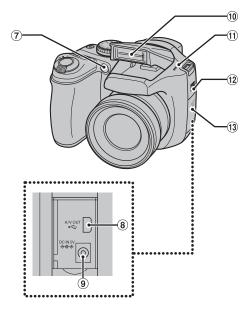

- 7 AF-assist illuminator (p.36)/Self-timer lamp (p.70)
- (8)


 USB socket/A/V OUT (Audio/Visual output) socket (p.123)
- 9 DC IN 5V (power input) socket (p.124)
- 10 Auto popup flash (p.67)
- 11 Microphone
- (12) Speaker
- (13) Terminal cover

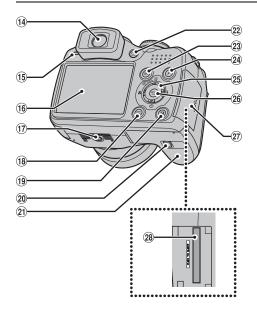

- (14) Viewfinder (EVF)
- 15 Indicator lamp (p.33)
- (16) LCD monitor
- (17) Tripod mount
- (18) DISP (Display)/BACK button (p.37, 39)
- 19 Exposure compensation button (p.64, 91)
- 20 Cover lock release button (p.19)
- 21 Battery cover (p.19)
- 22 EVF/LCD (monitor selector) button (p.30)
- 23 Playback mode button (p.39)
- ② **F** (Photo mode) button (p.75, 79) ② **A**▼**I** (4-direction) button
- 26 MENU/OK button
- 27 Slot cover (p.22)
- 28 Memory Card slot (p.22)

Example of screen Text Display


Photography mode

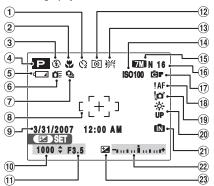

- (1) (2) Self-timer (p.69)
- ② **\$** Macro (close-up) (p.66)
- ③ ③ Flash (p.67)
- 4 Photography mode (p.51)
- ⑤ La Battery level indicator (p.21)
- ⑥ ☐ High-speed shooting (p.84)
- 7 Continuous shooting (p.71)
- 8 AF frame (p.31)
- 9 Date/Time (p.26)
- 10 Shutter speed (p.60)
- 11 Aperture (p.58)
- (2) [9] Photometry (p.82)
- ① ₩ White balance (p.83)

- (14) ISO 100 Sensitivity (p.79)
- 15 M N Quality mode (p.80)
- (6) Number of available frames (p.164, 165)
- 17 FinePix COLOR (p.81)
- (p.149)
- (9 to Camera shake warning (p.149)
- ② increasing monitor brightness (p.74)
- 21 Internal memory (p.24)
- ② Exposure compensation indicator (p.64)

 Playback mode




- 1 Playback mode (p.39)
- ② 🖺 DPOF (p.93)
- 3 Protection (p.98)
- 4 Uoice memo (p.102)
- 5 Frame number (p.117)
- ⑥
 Present (p.39)

FinePix S5700 / FinePix S700 / FinePix S800 / FinePix S800 has internal memory that can store images without Memory Card. appears on the screen when the internal memory is active.

Attaching the Strap and Lens Cap

Attaching the strap

1 Attach the strap to the strap mounts on the camera. Once you have attached both ends of the strap, check carefully to make sure that the strap is firmly secured.

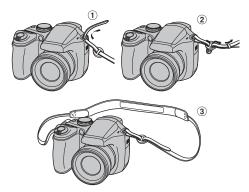

2 Attach the lens cap cord to the lens cap.



3 Pull the lens cap cord through the strap.



(!) CAUTION

- Attach the strap correctly to prevent dropping the camera.
- · Attach the lens cap cord to prevent losing the lens cap.



Attaching the lens cap

Attach the lens cap to the lens by pressing in on both sides of the cap.



Loading the Batteries

Batteries are required to operate the digital camera. At first, load the batteries in the camera.

Compatible batteries

AA-size alkaline batteries (4) or AA-size Ni-MH rechargeable batteries (4) (sold separately)



(!) CAUTION

- Never use the following types of batteries, as they could cause serious problems such as battery fluid leakage or overheating:
 - Batteries with split or peeling outer casings
 - Combinations of different types of batteries or new and used batteries together

Outer casing

- Do not use manganese, Ni-Cd or lithium batteries.
- Use the same brand and grade AA-size alkaline batteries as those supplied with the camera.

While pressing the cover lock release button, slide and open the battery cover.



CHECK

Check that the camera is turned off before opening the battery cover.

! CAUTION

- Do not open the battery cover while the camera is on.
 This could damage the Memory Card or ruin the image files on the Memory Card.
- · Do not apply force to the battery cover.



2 Load the batteries correctly as indicated by the polarity icons.



(!) CAUTION

Match the polarity icons (\bigoplus and \bigoplus) of the batteries to those on the inside of the battery cover.

 
3 Press on the battery cover to push the batteries down. Slide the cover closed.





Checking the battery charge

Turn the camera on and check the battery charge.





- (1) There is ample battery charge. (Not displayed)
- ② There is insufficient charge left in the batteries. The batteries will soon run out. Have a new set of batteries ready. (Lit red)
- 3 The batteries are depleted. The display will shortly go blank and the camera will stop working. Replace or recharge the batteries. (Blinking red)

Notes on batteries

- Soil, such as fingermarks on the poles of the batteries, can shorten time for which the batteries can be used.
- The time for which AA-size alkaline batteries (referred to hereafter simply as alkaline batteries) can be used varies depending on the brand. Some brands of alkaline batteries may stop providing power more quickly than those supplied with the camera. Note also that due to their nature, the time for which alkaline batteries can be used decreases in cold conditions (0°C to +10°C/+32°F to +50°F). For this reason, it is better to use AA-size Ni-MH batteries.
- Due to the nature of the battery, the battery level warning ((), () may appear early when the camera is used in cold locations. Try warming the batteries in your pocket or a similar location before use.
- Depending on the battery type and the level of charge in the batteries, the camera may run out of power without first displaying a battery level warning. This is particularly likely to happen when batteries that have run out of charge once are re-used.
- Depending on the camera mode, the transition from the transition
- Use Fujifilm Battery charger (sold separately) to charge AA-size Ni-MH batteries.
- See p.144-145 for information on the batteries.
- When first purchased or if left unused for a long period, the amount of time which AA-size Ni-MH batteries can be used may be short. See p.145 for more information.
- Battery power consumption varies greatly depending on use. When you change to Playback mode from Photography mode, a may not occur, however, may suddenly blink red and the camera may stop operation.

Loading the Memory Card

Although you can store pictures in the camera's internal memory, you can store many more images on the Memory Card (sold separately). You can use the **xD-Picture Card** and the SD Memory Card with the FinePix S5700 / FinePix S700 / FinePix S800. In this Owner's Manual, these cards are expressed as "Memory Card".

SD / SDHC Memory Cards

Use of the SD Memory Cards listed below is recommended. They are operation-checked at FUJIFILM Corporation.

Manufacturer: SanDisk



MEMO

- Compatible models will be updated in our website: http://www.fujifilm.com/products/digital/
- Depending on the SD Memory Card, recording of movies may be interrupted.
 Use of above mentioned SD Memory Cards are recommended.
- The camera is not compatible with multimedia cards.

1 Open the slot cover.



CHECK


Check that the camera is turned off before opening the slot cover.

(!) CAUTION

Do not open the slot cover while the camera is on. This could damage the Memory Card or ruin the image files on the Memory Card.


2 Insert a Memory Card.

(xD-Picture Card)

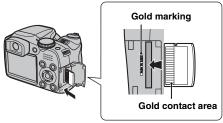

Align the gold marking with the gold contact area, then insert an **xD-Picture Card** completely.

(SD Memory Card)

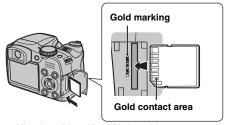

Align the gold marking with the gold contact area, then insert an SD Memory Card completely.

(!) CAUTION

Be sure to unlock the protection of the SD Memory Card before inserting it. If it is locked, recording/deleting images, as well as formatting are not available. To unlock the protection, slide the switch back, and the SD Memory Card will work normally.



! CAUTION

- A new SD Memory Card or a card previously used on a PC or any device other than the camera should be formatted (→p.120) on the camera before use.
- Do not use a miniSD adaptor or a microSD adaptor which have exposed contact areas on the back. Use of these adaptors may cause a malfunction or damage due to the improper contacts.



3 Close the slot cover.



How to replace the Memory Card



Push the Memory Card into the slot and then slowly remove your finger. The lock is released and the Memory Card is pushed out.





 
(!) CAUTION

- When storing Memory Cards, make sure that they are kept out of the reach of children. A Memory Card could be swallowed and cause suffocation. If a child swallows a Memory Card, seek medical attention or call emergency number right away.
- If the Memory Cards is oriented incorrectly, it will not go all the way into the slot. Do not apply force when inserting a Memory Card.
- Note that the Memory Cards may spring out if you release your finger quickly from the card immediately after the lock is released.
- Operation of this camera is only guaranteed when it is used with FUJIFILM xD-Picture Card and operationchecked SD Memory Card (→p.22).
- See p.148 for information on the xD-Picture Card, SD Memory Card and the Internal Memory.

MEMO

- The size of an image file varies depending on the subject. For this reason, the number recorded may not represent the actual number of frames.
- See p.164, 165 for information on the standard number of available frames.

About internal memory



FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 has internal memory that can store images without Memory Card. 11 appears on the screen when internal memory is active.

When a Memory Card (sold separately) is inserted [Record images]: Record images to a Memory Card. [Playback images]: Playback images in a Memory Card.

When a Memory Card (sold separately) is not inserted [Record images]: Record images to internal memory. [Playback images]: Playback images in internal memory.

About images in the internal memory

Images held in the camera's internal memory may be corrupted or erased due to problems such as camera faults. Save your important data to another media (i.e., DVD-R, CD-R, CD-RW, hard disk, etc.). It is possible to transfer saved images on the internal memory to a Memory Card (→p.99).

 
Turning On and Off



Turning the camera on in Photography mode

Slide the Power switch to turn the camera on in Photography mode.

Slide the Power switch again to turn the camera off.






MEMO Switching between the Photography and Playback mode

Pressing
when the camera is in Photography mode switches the camera to the Playback mode. Pressing the shutter button switches the camera to the Photography mode.



Turning the camera on in Playback mode

 Press for about 1 second to turn the camera on in Playback mode. Pressing when the camera is in Playback mode turns the camera off.





🦥 МЕМО

Press the shutter button to switch to the Photography mode.



Setting the language, date, and time

When using the camera for the first time after purchasing, the language, date, and time are cleared. Set the language, date, and time.

■ 言語/LANG. screen appears when turning the camera on.





 Press ▲. ▼. ◀. or ▶ to select the language.



(2) Press MENU/OK to confirm the setting.

2 Set the date and time.





Day, Hour, or Minute.



② Press ▲ or ▼ to correct the setting.



MEMO

- Holding down ▲ or ▼ changes the numbers continuously.
- When the time displayed passes "12", the AM/PM setting changes.

${m 3}$ Change the date format.





Press ◀ or ▶ to select the date format.



② Press \blacktriangle or \blacktriangledown to set the format.



③ Always press MENU/OK after the settings are completed.

Date format

ex. March 31, 2007 YY.MM.DD: 2007.3.31 MM/DD/YY: 3/31/2007 DD.MM.YY: 31.3.2007



MEMO

 
START MENU screen also appears when the batteries have been removed and the camera has been left for a long period. Once the AC power adapter has been connected or the batteries have been installed for 10 hours or more, the camera settings will be retained for roughly 24 hours even if both sources of power are removed.

Auto power off function

When the Auto power off function is active, if the camera is left unused for 2 or 5 minutes, this function turns the camera off (→p.120). To turn the camera back on, slide the Power switch. To playback images, press ▶ for about 1 second.

Correcting the Date and Time

1 Open the SET-UP menu.





1) Press MENU/OK to open the menu.

 


② Press ▲ or ▼ to select SET-UP.



③ Press ►.

2 Display the DATE/TIME screen.





① Press **◄** or **▶** to select **ይ**1.



2 Press **V** to move to menu item.



③ Press ▲ or ▼ to select ⑤ DATE/TIME.

 


(4) Press .

See "2 Set the date and time." (→p.26).

Selecting the Language

1 Open the SET-UP menu.





 $\ensuremath{\text{\textcircled{1}}}$ Press MENU/OK to open the menu.



② Press ▲ or ▼ to select 🖼 SET-UP.



2 Display the 💿 言語/LANG. screen.





① Press \blacktriangleleft or \blacktriangleright to select \clubsuit 2.



② Press ▼ to move to menu item.



③ Press ▲ or ▼ to select 言語/LANG..



④ Press ▶.


See "1 n 言語/LANG. screen appears when turning the camera on." (→p.26).

Taking Pictures (AUTO AUTO Mode)

This section describes the basic operations.

1 Turn the camera on.

1 Slide the Power switch.

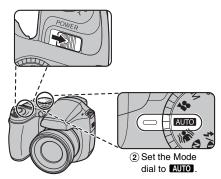

CHECK

Focal range

 
Wide-angle: approx. 30 cm (1.0 ft.) to infinity Telephoto: approx. 1 m (3.3 ft.) to infinity

Select

Macro mode to take close-up shots (→p.66).

2 Switch the display.

Press the EVF/LCD to alternate the display between the viewfinder (EVF) and the LCD monitor.





МЕМО

The EVF/LCD selection is retained even when the camera is off or the mode setting is changed.

Holding the camera correctly

Brace your elbows against your sides and hold the camera with both hands.

Using the viewfinder (EVF) allows for a steady arm position, preventing picture blur.








Do not cover the lens or flash with your fingers.

CAUTION

- · Moving the camera while shooting gives a blurred picture (camera shake). Hold the camera steadily with both hands.
- . If the lens or flash is obscured by your fingers or the strap, subjects may be out of focus or the brightness (exposure) of your shot may be incorrect.

3 Focus on the main subject in the AF frame and press the shutter button down halfway.

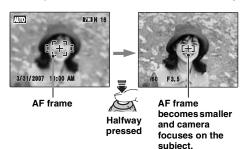

CHECK

- · Focus on the subject Double beep is heard Indicator lamp lit green
- · Not focus on the subject No sound !AF indicated Indicator lamp blinking green



MEMO

- The shutter button has a halfway point at which focus and exposure are automatically optimized before taking the picture by pressing fully down.
- . When pressing the shutter button halfway, a lens operation sound may be heard.



Flash

Pressing the shutter button halfway when the flash is not popped up, camera pops the flash up as required by the shooting conditions.






appears on the screen.

Change the flash mode when you want to take pictures without flash. See p.67 for information on flash.

4 Press the shutter button fully.

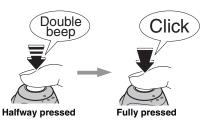

(!) CAUTION

When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.

MEMO

- When the subject is not in the AF frame, use AF/AE lock to take the picture (→p.34).
- When pressing the shutter button down fully in one motion, the camera takes the picture without the AF frame changing.

Compatible filters

46 mm-diameter commercial available filters can be attached.

(!) CAUTION


- Do not use more than one filter at a time.
- The lens cap (included) may not be used when attaching the filter.

(!) CAUTION

- The image shown on the screen before the picture is taken may differ in brightness, color, etc. from the image actually recorded. Play back the recorded image to check it (→p,39).
- When selecting a slow shutter speed that will cause camera shake, !or appears on the screen. Use flash or a tripod.
- See p.149-152 for information on warning displays. See "Troubleshooting" (-p.153-159) for more information.

Indicator lamp display

 The indicator lamp lights or blinks when pressing the shutter button, etc. The indicator lamp shows the camera status.



Display	Status
Бізріцу	Otatus
Lit green	Locking the focus
Blinking green	Camera shake warning, AF warning, or AE warning (ready to shoot)
Blinking green and orange alternately	Recording to Memory Card or internal memory (ready to shoot)
Lit orange	Recording to Memory Card or internal memory (not ready)
Blinking orange	Charging flash (flash will not fire)
Blinking red	Warnings for Memory Card and internal memory Card not formatted, incorrect format, memory full, Memory Card or internal memory error Lens operation error

MEMO

Detailed warning messages appear on the screen (\rightarrow p.149-152).



Taking pictures with the focus and exposure locked



In the above composition, the subjects are not in the AF frame. Pressing the shutter button halfway at this point will result in the subjects being out of focus.

AF/AE lock is useful:

Use AF/AE lock to guarantee best result when shooting a subject that is not suited to autofocusing (\rightarrow p.35).

Using AF/AE lock

Move the camera slightly so that one of the subjects is in the AF frame.



2 Press the shutter button down halfway to focus on the subject.





3 Continue to hold the shutter button down halfway. Move the camera back to the original image and press the shutter button fully.





Fully pressed



- AF/AE lock can be applied repeatedly before the shutter is released
- On FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800, pressing the shutter button down halfway locks the focus and exposure settings (AF and AE lock).

Subjects not suitable for autofocus

FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 uses a high-precision autofocusing mechanism. However, it may have difficulty focusing on the following:





Very shiny subjects such as a mirror or car body

Fast moving subjects

- · Subjects photographed through glass
- · Subjects that do not reflect well, such as hair or fur
- Subjects with no substance, such as smoke or flames
- · Dark subjects
- Subjects with little or no contrast between the subject and the background (such as subjects dressed in the same color as the background)
- Shots where another high-contrast object (not the subject) is close to the AF frame and is either closer or further away than your subject (such as a shot of someone against a background with strongly contrasting elements)

For such subjects use AF/AE lock (\rightarrow p.34) or "MF" Manual focus mode (\rightarrow p.86).



AF-assist illuminator

Use this illuminator to focus on the subject in dimly lit conditions.

When pressing the shutter button down halfway, the camera fires the AF-assist illuminator (orange) while focusing on your subject.






MEMO

- Even when the AF-assist illuminator fires, the camera may have difficulty focusing in some conditions.
- The camera focuses most easily when a picture is taken at a distance of around 2.4 m (7.9 ft.) with wide-angle or telephoto.
- Even though there is no danger to safety, do not expose it directly in someone's eyes.
- When using the AF-assist illuminator in Macro mode, the camera may have difficulty focusing to take closeup shots.
- See p.113 for information on turning the AF-assist illuminator off.
- AF-assist illuminator does not fire in ▲, ¾, ◎, 益,
 AF, ▼, or ※ mode.



Using zoom function

Use the zoom dial to take pictures with zoom function. The zoom bar appears on the screen while the zoom dial is being used.

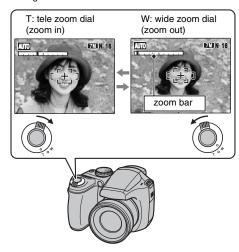



Optical zoom focal length (35 mm camera equivalent)

Approx. 38 mm to 380 mm Max. zoom scale: 10x



MEMO

 
- Select **₩** Macro mode to take close-up shots (→p.66).
- Use digital zoom when you want to shoot the subject closer (→p.118).



 
Adjusting the shot composition

Select the screen display.

Press DISP/BACK to change the screen display.











Post shot assist window displayed

Framing guideline displayed



Best framing

Position the main subject at the intersection of two lines. in this frame or align one of the horizontal lines with the horizon. Use this frame as a guide to the subject's size and the balance of the shot while composing a shot.





MEMO


Always use AF/AE lock when composing a shot. The image may be out of focus if AF/AE lock is not used.

Post shot assist window

Up to the last 3 photographed images appear on the post shot assist window. This serves as a guide for taking other shots with similar compositions.



Format of post shot assist window

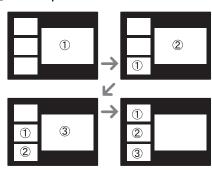



MEMO

Any of the following clears the image in the post shot assist window:

- · Setting the camera to Playback mode
- . Turning the camera off
- Using the PictBridge function (→p.125)
- Connecting to a PC (→p.135) etc.

 
Viewing the Images

Playback your images to check them. For important photographs, always take a test shot and view the image to make sure that the camera is working normally.



Setting the camera to Playback mode

Press D during shooting to change to Playback mode.



When the camera is off, press for about 1 second to turn the camera on in Playback mode.



MEMO

Press **•** to play back the last shot.


 CAUTION Still images viewable on FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800

This camera will display still images recorded on FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 or still images (excluding some uncompressed images) recorded on any FUJIFILM digital camera that supports xD-Picture Cards or SD Memory Cards. Clear playback or playback zooming may not be possible for still images shot on cameras other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800.

When playing back images shot with a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800, 笛 a present icon appears on the screen.

Select the screen display.

Press DISP/BACK during Playback mode to change the screen display.

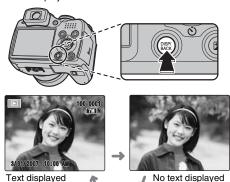



Sorting by date



Single-frame playback





To select the required image:

Press **◄**: last image Press **▶**: next image

Selecting images



To select images on the thumbnail lists screen, hold down ◀ or ▶ for 1 second during playback.
When releasing ◀ or ▶, camera returns to single-frame playback.

Playback zoom

1 Zoom in / Zoom out.

To zoom in an image during single-frame playback:

W: wide zoom dial (zoom out)

T: tele zoom dial (zoom in)



Zoom bar



Turn to W or T to zoom in or out of an image.



Press DISP/BACK to cancel playback zoom.

2 Display another part of the image.



Navigation screen (Current displayed image)



Press \blacktriangle , \blacktriangledown , \blacktriangleleft , or \blacktriangleright to display another part of the image.



Press DISP/BACK to return to the zoom setting.

Zoom scales (FinePix S5700 / FinePix S700)

Quality mode	Max. zoom scale	
7M F (3072 × 2304 pixels)	Approx. 4.8×	
7M N (3072 × 2304 pixels)	Approx. 4.8×	
32 (3072 × 2048 pixels)	Approx. 4.8×	
4M (2304 × 1728 pixels)	Approx. 3.6×	
2M (1600 × 1200 pixels)	Approx. 2.5×	

Zoom scales (FinePix S5800 / FinePix S800)

Quality mode	Max. zoom scale		
8M F (3264 × 2448 pixels)	Approx. 5.1×		
8M N (3264 × 2448 pixels)	Approx. 5.1×		
32 (3264 × 2176 pixels)	Approx. 5.1×		
4M (2304 × 1728 pixels)	Approx. 3.6×		
2M (1600 × 1200 pixels)	Approx. 2.5×		

^{*} Zoom cannot be performed when the images recorded by are played back.



Sorting by date

In sorting by date mode, you can view all images taken on the same day.





1) Press A. V. J. or be to move the cursor (colored frame) to the selecting frame.



(2) Press MENU/OK to enlarge the image.

Selecting the date





① Press ▲, ▼, ◀, or ▶ to move the cursor (colored frame) to <□ on the upper left frame.



② Press ◀ to display the selecting date.



③ Press ▲ or ▼ to move the cursor (colored frame) to select the date.
Press ▲ or ▼ repeatedly to jump to the next page.




④ Press ►.



Multi-frame playback

Use this function to display a single frame, 2 frames or 9 frames. You can compare and select images using the Multi-frame display. Use the zoom dial to change the display.

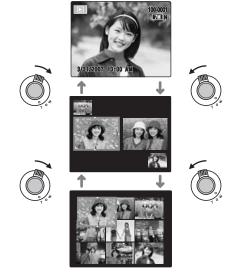

2 frames playback





① Press A, V, ✓ or ► to select the images you want to compare (such as the images taken in ♠/\$ NATURAL & \$ mode).



2 Press MENU/OK to enlarge the image.

9 frames playback





 Press ▲, ▼, ◀ or ▶ to change the colored frame and select an image.
 Press ▲ or ▼ repeatedly to jump to the next page.



2 Press MENU/OK to enlarge the image.

 
■ Erasing the Images/Movies

Use this mode to erase unnecessary images or movies to have ample free space on the Memory Card or internal memory. Your camera calls images "frames".



Using the erase button (m/▲)

Pressing ਜ਼ (▲) erases images easily.





Press ◀ or ► to select the erasing image.



② Press (▲).



→ ③ Press

✓ or

► to select OK.



Press MENU/OK to erase the displayed image.

Erasing the images using Playback menu





 Press MENU/OK to open the PLAYBACK MENU.



② Press ▲ or ▼ to select III ERASE.



③ Press ►.

 


④ Press ▲ or ▼ to select FRAME or ALL FRAMES.



 $\ensuremath{\mathfrak{D}}$ Press MENU/OK to confirm the setting.

Erasing one frame at a time (FRAME)





 Press ◀ or ► to select the erasing frame (file).



② Press MENU/OK to erase the currently displayed frame (file).



To erase another frame (file), repeat above steps. When erasing frames (files) is completed, press DISP/BACK.

(!) CAUTION

Pressing MENU/OK repeatedly erases consecutive frames (files). Take care not to erase a frame (file) by mistake

Erasing all frames (ALL FRAMES)





① Press ◀ or ▶ to select OK.



② Press MENU/OK to erase all the frames (files).





Press DISP/BACK to cancel erasing of all the frames (files). Some unprotected frames (files) will be left unerased.

Continued -



MEMO

- · When using a Memory Card, the images in the Memory Card are erased. When not using a Memory Card, the images in the internal memory are erased.
- · Protected frames (files) cannot be erased. Unprotect the frames (files) before erasing them (→p.98).
- If "DPOF SPECIFIED. ERASE OK?" or "DPOF SPECIFIED. ERASE ALL OK?" appears, press MENU/ OK again to erase the frames (files).

(!) CAUTION

 
Erased frames (files) cannot be recovered. Back up important frames (files) onto your PC or another media.

Using the Photography Functions — Procedure of Setting

Specify the camera settings for taking pictures to get the best result. A general guide is given below.

1 Select the Photography mode.

Turn the Mode dial to select the Photography mode. The camera settings are tailored to the scene being shot.



CAUTION

When you have been used for long periods in places subject to extreme temperature rises, it will lower your image quality and streaking may also be visible in your images. If this occurs, turn the camera off several times to prevent heating the camera.


AUTO Auto	This is the easiest mode for taking pictures (→p.51).			
Picture Stabilization	Used for selecting a fast shutter speed that reduces camera shake and moving-subject blurring (-p.51).			
Natural light	This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions (→p.52).			
ጭ/‡ NATURAL & ‡	This mode shoots 2 images continuously without flash and with flash. Shooting with flash allows you to take a picture of a main subject brightly. This mode is usefu for shooting 2 different types of pictures a the same time (→p.52).			
SP1, SP2 Scene position	Use to select the ideal setting from Scene position menu for the shot. (→p.53).			
P Program AE A Aperture- priority AE S Shutter- priority AE	Used for changing the aperture or shutter speed setting so that the action is frozen, the flow of the motion is conveyed, or the background is out of focus (\rightarrow p.57-61).			
M Manual	All manual settings for taking pictures (→p.62).			
Movie	Use for shooting movies (→p.107).			

Continued -



2 Specify the photography settings.

Pressing buttons or selecting menu allows you to specify photography functions. You can obtain the best result for shooting.

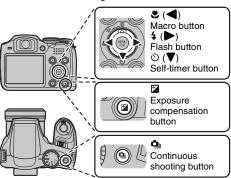



Specifying functions using buttons

Macro	Used for close-up shots (→p.66).
4 Flash	Used for shots in dark locations or for backlit subjects, etc. (→p.67).
♡ Self-timer	Used in situations such as group shots where the photographer is included in the shot (→p.69).
Continuous	Used to take a series of continuous shots or to use auto bracketing (with exposure compensation) (→p.71).
Exposure compensation	Used for changing the image brightness (→p.64).

■ Specifying functions using F-MODE MENU (F button)

  
Press ${\cal F}$ button for about 0.5 seconds to open the ${\cal F}$ -MODE MENU.





IN ISO	Use to specify required sensitivity setting (→p.79).
QUALITY	Use to specify required image size (→p.80).
FinePix COLOR	Use to specify required color tone (→p.81).

 ■ Specifying functions using SHOOTING MENU (MENU/OK button)







SCENE POSITION	Use to select the best setting for the scene being shot. Choose from 12 types of scene (set the Mode dial to SP1 or SP2)(~p.53).			
PHOTOMETRY	Use to select light metering method (set the Mode dial to P, A, S or M) (→p.82).			
WBWHITE BALANCE	Use to adjust the color tone (only P, A, S, M) (→p.83).			
HIGH-SPEED SHOOTING	Use to focus the shot quickly (→p.84).			
■ FOCUSING	Use to specify focusing mode (set the Mode dial to P , A , S , or M) (\rightarrow p.85).			
AF AF MODE	Use to specify focusing area (set the mode dial to P, A, S, or M) (→p.87).			
S SHARPNESS	Use this setting to soften or emphasize the outline and quality of an image (only P, A, S, M) (→p.89).			
FLASH (Brightness Adjustment)	Use this setting to adjust the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect (only P, A, S, M) (¬p.89).			
■ BRACKETING	Use this setting to photograph the same image with different exposure settings (only P, A, S, M) (→p.90).			
SET-UP	Use to change the camera settings (→p.113).			

Setting the Shooting Mode

You can select the most suitable setting according to the subject by selecting one of the Shooting modes.



 
AUTO Auto

This is the easiest mode for providing crisp and clear shots.

Use this mode for ordinary photography.

Camera specifies all settings other than \mathbf{F} -MODE (Quality and FinePix COLOR) automatically.

Set the Mode dial to AUTO.



CHECK

- Available flash modes:
 AUTO, ②, \$, ③
- Only AUTO can be selected for the MI ISO (sensitivity) setting.



Picture Stabilization

Use this mode to select a fast shutter speed that reduces camera shake and moving-subject blurring.



CHECK

- Available flash modes: AUTO, , , ,
- Only AUTO can be selected for the ISO (sensitivity) setting.



Natural Light

This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions.

This mode is also ideal for shooting indoor or situations where the flash cannot be used.

Camera sets the high-sensitivity setting when selecting the Natural light mode. This mode is effective for reducing camera shake and moving-subject blurring when taking pictures in low-light conditions.



Set the Mode dial to .

CHECK

- Flash cannot be used in the Natural light mode.
- Only AUTO can be selected for the ISO (sensitivity) setting.



◆NATURAL & 4

This mode shoots 2 images continuously without flash and with flash. Shooting with flash allows you to take a picture of a main subject brightly. Shooting without flash produces beautiful images that retain the natural ambience. This mode is useful for shooting 2 different types of pictures at the same time.



Set the Mode dial to **₼**/\$.

When pressing the shutter button, first picture is taken without flash and next picture is taken with flash. Always 2 pictures are taken per 1 shot. Do not move the camera until the shooting ended.



MEMO

This mode helps to avoid failed shots that may occur when using other Shooting modes when taking a picture against the sun, etc.

CHECK

 
- Flash fires automatically. Do not use this mode at situations where the flash cannot be used.
- Only AUTO can be selected for the ISO (sensitivity) setting.
- When there is insufficient space on the Memory Card or internal memory for 2 shots, a picture cannot be taken.
- Continuous shooting is disabled when setting ⊕/≰.



SP1, SP2 SCENE POSITION

This mode provides the best Scene position setting for the scene being shot. Choose from 12 types of scene.

Select the Scene position setting in the SCENE POSITION menu.



Set the Mode dial to SP1 or SP2.

About SP1 and SP2 of the Mode Dial

The camera enables to set the scene position for SP1 and SP2 separately.

For example, select • for SP1 and • for SP2 separately at traveling. The setting combination can be used for variety of shooting scene. The menu options of SP1 and SP2 are the same. However the options cannot be set for both SP1 and SP2.



¬ MEMO

- SP1 and SP2 are set to
 and
 as factory default settings.
- See p.68 for information on the available flash modes.
- GF F-CHROME (→p.81) cannot be set.
- AF-assist illuminator does not fire in ▲, ※, ◎, ≝,
 ☆
 ¬ and ※ mode.
- Only AUTO can be selected for the SI ISO (sensitivity) setting.

Selecting Scene position setting





1) Press MENU/OK to open the menu.



② Press ▲ or ▼ to select ⑤ SCENE POSITION.



③ Press ►.



④ Press ▲ or ▼ to select the setting.



(5) Press MENU/OK to confirm the setting.

PORTRAIT

Use this mode for photography to get beautiful skin tones and soft overall tone.



▲ LANDSCAPE

Use this mode for shooting scenery in daylight and provides crisp, clear shots of scenery such as buildings and mountains.



CHECK

Flash cannot be used in the Landscape mode.

% SPORT

Use this mode to take pictures of a moving subject. It gives priority to faster shutter speeds.



CHECK

When setting ★ Sport mode, the camera sets to ☐ High-speed shooting mode (→p.84) automatically.

C NIGHT

Use this mode for shooting evening and night scenes.

A picture is taken with a slow shutter of up to 3 seconds.



CHECK

Use a tripod to prevent camera shake, because a picture is taken with a slow shutter.

FIREWORKS

Use this mode to shoot fireworks

It is effective for taking more vivid shots of fireworks with a slow shutter.



CHECK

- · Flash cannot be used in the Fireworks mode.
- Shutter speed setting: 1/2 sec. to 4 sec.
- · Use a tripod to prevent camera shake in the Fireworks mode.

Selecting the exposure time setting





1) Press 2 to open the setting screen.



② Press ▲ or ▼ to select the exposure time.

SUNSET

Use this mode to shoot sunset, making the colors more vivid.



SNOW

Use this mode to prevent darkening images and provide crisp, clear shots, when shooting at snowy scene where the whole screen appears white.



₽ BEACH

Use this mode to prevent darkening images and provide crisp, clear shots, when shooting at beach under strong sunlight.





MUSEUM

Use this mode for taking pictures in places such as museum where the use of flash and making an operation sound and a shutter sound are restricted.



Flash mode is forcibly set to Suppressed flash, and

operation sound, shutter sound, and the AF-assist illuminator/self-timer lamp are off.



[™] MEMO

Check whether photography is permitted before using this mode

▼ PARTY

Use this mode for shooting at indoor wedding and party.

This mode produces beautiful images that retain the natural ambience when shots are taken in low-light conditions.



*** FLOWER**

Use this mode to take clear close-up shots when zooming up a flower. It is effective for taking more vivid shots of flower petal.



CHECK

- · Flash cannot be used in the Flower mode.
- · Focal range Wide angle: Approx. 4 cm to 3.0 m (1.6 in. to 9.8 ft.) Telephoto: Approx. 60 cm to 3.0 m (2.0 ft. to 9.8 ft.)

TEXT

Use this mode to shoot documents and white board

It is effective for taking clearer shots of letters.



CHECK

Focal range Wide angle:

Approx. 4 cm to 3.0 m (1.6 in. to 9.8 ft.)

Telephoto:

 
Approx. 60 cm to 3.0 m (2.0 ft. to 9.8 ft.)



P Program AE

This is an automatic mode to specify the settings except for the shutter speed and aperture setting.

This is a simple way to take pictures the same as the A Aperture-priority Auto and S Shutter-priority Auto modes (Program shift).



Set the Mode dial to P

 
Photography functions:

- WB WHITE BALANCE (→p.83)
- I FOCUSING (→p.85)
- **AF** AF MODE (→p.87)
- SHARPNESS (→p.89)
- **纽** FLASH (→p.89)
- BRACKETING (→p.90)

CHECK

Available flash modes AUTO. 4. 3. \$4. 9.

Program shift





1) Press 2 to open the setting screen.



(2) Select different shutter speed and aperture setting combinations without changing the exposure setting.

 


(3) Press the shutter button to take pictures.

MEMO

- Program shift can be used when 3 SUPPRESSED FLASH (→p.67) is set in flash mode.
- The shutter speed and aperture setting appear in yellow when the camera is in Program shift mode.
- · Any of following cancels Program shift:
 - Changing the Mode dial setting
 - Switching the flash setting
 - Setting the camera to Playback mode
- Turning the camera off

CAUTION




When the brightness of the subject is outside the camera's brightness metering range. "---" appears as the shutter speed and aperture setting on the screen



A Aperture Priority AE

 This is an automatic mode to set the aperture. Use this mode to have the area in front of and behind the subject out of focus (large aperture) or have both near and far subjects in focus (small aperture).



Set the Mode dial to A.

Photography functions:

 
- PHOTOMETRY (→p.82)
- WB WHITE BALANCE (→p.83)
- ■ FOCUSING (→p.85)
- **AF** AF MODE (→p.87)
- SHARPNESS (→p.89)
- **纽** FLASH (→p.89)
- ■ BRACKETING (→p.90)

CHECK

Available flash modes

◆, 4, ③, S4, ∰

Setting the aperture





 $\textcircled{\scriptsize{1}}$ Press $\begin{tabular}{l} \blacksquare$ to open the setting screen.



2) Press \blacktriangle or \blacktriangledown to select the aperture.

 


3 Press the shutter button to take pictures.


CHECK

Aperture settings F3.5 to F6.8 in 1/3 EV increments F6.8/F13.6 in 2 EV increments

(!) CAUTION



 When the correct exposure cannot be obtained with selected aperture setting, the shutter speed appears in red. When this occurs, adjust the aperture setting again. When \$ FORCED FLASH is set, you can take a picture with a shutter speed of up to 1/45 sec.



When the brightness of the subject is outside the camera's brightness metering range, "----" appears as the shutter speed.

 
Aperture

By adjusting the aperture, you can change the depth of focus (depth of field). Selecting a larger number of aperture (closed) obtains a larger depth of focus. Selecting a smaller number of aperture (open) has the area in front of and behind the subject out of focus.



The area in front of and behind the subject is also in focus in the shot.

Main subject




The area in front of and behind the subject is out of focus



S Shutter Priority AE

 This is an automatic mode to set the shutter speed. Use this mode to freeze a moving subject (fast shutter speed) or convey the impression of movement (slow shutter speed).



Set the Mode dial to S.

Photography functions:

 
- Ø PHOTOMETRY (→p.82)
- WB WHITE BALANCE (→p.83)
- ■ FOCUSING (→p.85)
- **AF** AF MODE (→p.87)
- SHARPNESS (→p.89)
- ## FLASH (→p.89)
- ■ BRACKETING (→p.90)

CHECK

Available flash modes

1 4. 3

Setting the shutter speed





 $\textcircled{\scriptsize{1}}$ Press $\begin{tabular}{l} \blacksquare$ to open the setting screen.



② Press ▲ or ▼ to select the shutter speed.



 $\ensuremath{\mathfrak{J}}$ Press the shutter button to take pictures.

 
CHECK

Shutter speed setting 4 sec. to 1/1000 sec. in 1/3 EV increments

(!) CAUTION



When the correct exposure cannot be obtained with selected shutter speed, the aperture setting appears in red. When this occurs, adjust the shutter speed again.



When the brightness of the subject is outside the camera's brightness metering range, "F---" appears as the aperture setting. When this occurs, press the shutter button down halfway to measure the light level again.

Shutter speed

When shooting a moving subject, you can either "freeze the motion" or "capture the sense of movement" by adjusting the shutter speed.



Freezes the motion of the subject.



 
Photographs the traces left by the subject's movement.



M Manual

This is a shooting mode that allows for settings including the shutter speed and aperture.

Set the Photography functions to manual to easily control yourself.



Set the Mode dial to \mathbf{M} .

Photography functions:

 
- PHOTOMETRY (→p.82)
- WB WHITE BALANCE (→p.83)
- ■ FOCUSING (→p.85)
- **AF** AF MODE (→p.87)
- SHARPNESS (→p.89)
- **ﷺ** FLASH (→p.89)
- ■ BRACKETING (→p.90)

CHECK

Available flash modes:

1 4. 3

Setting the shutter speed



Shutter speed



① Press \blacksquare to open the setting screen.



② Press ▲ or ▼ to select the shutter speed.



 $\ensuremath{\mathfrak{3}}$ Press the shutter button to take pictures.

CHECK Shutter speed setting

4 sec. to 1/1000 sec. in 1/3 FV increments.



 
√ MEMO

- . Use a tripod to prevent camera shake.
- In shots with long exposures, noise (dots) may appear on the image.

(!) CAUTION

If the shutter speed is set to a speed 1/1000 sec., smearing (white stripes) may appear in the image (-p.167).

Setting the aperture





1) Press 🛮 to open the setting screen.



② Press ◀ or ▶ to select the aperture.



 $\ensuremath{\mathfrak{J}}$ Press the shutter button to take pictures.

 
CHECK Aperture settings

F3.5 to F6.8 in 1/3 EV increments F6.8/F13.6 in 2 EV increments



Explanation of Terms "EV" (→p.167).

The exposure indicator



Use the exposure indicator on the screen as a guide when setting the exposure. When the brightness of the subject is outside the camera's brightness metering range, the exposure indicator disappears on the screen.

Adjusting the Image Brightness (Exposure Compensation)

 
Use this menu for shots to get the correct brightness (exposure), such as shots with extremely high contrast between the subject and the background.

Available Photography modes: P, A, S (→p.57, 58, 60)




Adjusting exposure compensation

Press 🗷 to display the exposure compensation setting screen.



! CAUTION

 This function can only be used for P, A, or S in Shooting mode.





1) Press 🛮 to open the setting screen.



② Press ◀ or ▶ to set the compensation value.






 $\textcircled{4}\ \mathsf{Press}\ \mathsf{the}\ \mathsf{shutter}\ \mathsf{button}\ \mathsf{to}\ \mathsf{take}\ \mathsf{pictures}.$

CHECK

- The symbol indicating the compensation direction (– or +) turns yellow.
- The icon also turns yellow while exposure compensation is being set and then turns blue after setting is completed.
- The screen brightness will increase or decrease depending on the exposure compensation setting.

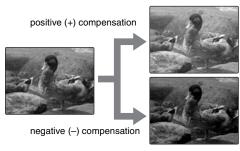

CHECK

- Compensation range: –2 EV to +2 EV (13 steps in 1/3 EV increments)
- Explanation of Terms "EV" (→p.167)



- This setting is retained when the mode is changed or the camera is turned off (icon appears). Set the exposure compensation to "0" unless compensation is required.
- · Any of the following disables exposure compensation:
 - Úsing the flash in AUTO or o mode
 - Shooting dark scenes in 4 mode

Guide to compensation

 Backlit portraits: +2 steps to +4 steps (+2/3 EV to +1 1/3 EV)



 Very bright scenes (such as snowfields) and highly reflective subjects: +3 steps (+1 EV)



 
- Shots made up predominantly of sky: +3 steps (+1 EV)
- Spotlit subjects, particularly against dark backgrounds: –2 steps (–2/3 EV)
- Scenes with low reflectivity, such as shots of pine trees or dark foliage: -2 steps (-2/3 EV)

 
Macro (Close-up)

Use this mode to take close-up shots.

Press ♥ (◀) to select Macro mode.

The Macro mode setting changes each time you press the ♥ (◄).





or appears on the screen indicating that you can take close-up shots.

(!) CAUTION

Super macro cannot be used when **4** NATURAL & **4** is set.

CHECK

 Focal range Wide angle:

Approx. 4 cm to 3.0 m (1.6 in. to 9.8 ft.)

Telephoto:

Approx. 60 cm to 3.0 m (2.0 ft. to 9.8 ft.)

Focal range in Super macro

Approx. 1 cm to 1.0 m (0.4 in. to 3.3 ft.) (Wide-angle only)

· Effective flash range

Approx. 30 cm to 3.0 m (1.0 ft. to 9.8 ft.)

™ MEMO

- Use a tripod to prevent camera shake in Macro mode.
- Any of the following cancels Macro mode:
- Changing the Mode dial to SP1, SP2 or ₽ mode
- Turning the camera off
- If the flash is too bright, use flash brightness adjustment (→P.89).
- AF-assist may not function correctly if the camera is up close to the subject, such as in macro-mode.

 
❖ Setting the Flash (Intelligent Flash)

Flash photography is useful for taking pictures at night or indoor dark locations. Choose from 6 flash modes according to the type of shot. See p.68 for information on the available Photography modes.



MEMO

By calculating subject distance and brightness, the camera automatically adjusts the flash amount and sensitivity to suit shooting conditions. This maintains consistent balance of bright/dark areas across the image in low-light conditions (dimly-lit room, etc). The Intelligent Flash feature guarantees consistent results when using the flash.



The flash setting changes each time you press 4 (>)



MEMO

When pressing the shutter button down halfway, appears on the screen before the flash fires.

AUTO Auto flash (not displayed)

Use this mode for ordinary photography. The flash fires as required by the shooting conditions.

RED EYE REDUCTION

This mode is suitable for shooting portraits in low-light conditions.

Use this mode to minimize red-eye (eyes appear in red in the finished photo).



MEMO Red-eye effect

When using the flash to take a picture of people in lowlight conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye.

4 FORCED FLASH

Use this mode in backlit scenes, or to get the correct colors when taking a picture under bright lighting. In this mode, the flash fires in bright as well as dark conditions.

SUPPRESSED FLASH

This mode is suitable for situations where the flash cannot be used

Use a tripod to prevent camera shake when shooting in Suppressed flash mode in the dark condition. Any time, flash does not fire.

\$\$ SLOW SYNCHRO. RED EYE & SLOW

This mode allows you to take pictures of people at night that clearly show both your subjects and the night time backdrop. To prevent camera shake, always use a tripod. Using synchronizes Red-eye reduction mode. Using C selects slow shutter speeds of up to 3 seconds.

CAUTION

In bright scenes, overexposure may occur.

Continued



CHECK

List of available flash modes in each Photography mode

	AUTO	•	4	3	S \$	SLOT
AUTO	1	1	1	1		
	✓	✓	/	\		
•				✓		
1 /4		✓	1			
3	✓	✓	/	\	\	1
A				>		
*	✓		>	>		
C				\	\	1
0				>		
*		✓		>		
√6 ′	✓	✓	/	\		
Ĩ.	✓	✓	>	>		
♪\$ OFF				>		
¥		✓				
*				>		
TEXT			>	>		
Р	✓	✓	✓	/	/	✓
Α		1	\	\	\	1
S		1	\	\		
М		✓	1	1		

CHECK

Effective flash range (150 : 800)
Approx. 50 cm to 6.2 m (1.6 ft. to 20 ft.)
If you take pictures outside of the effective flash range, the image may appear dark even if the flash is used.

(!) CAUTION Notes on using flash

- If the shutter speed is set to a speed faster than 1/1000 sec., the image may appear dark even if the flash is used
- If pressing the shutter button while the flash is charging (indicator lamp blinking orange), the picture will be taken without the flash (when using AUTO and ②).
- The flash charging time may increase when the batteries are low on charge.
- When taking a picture using the flash, the image may disappear and go dark briefly due to flash charging. The indicator lamp blinks orange during charging.
- The flash fires several times (pre-flashes and the main flash). Do not move the camera until the picture is taken.

Popping the flash up automatically



The flash pops up automatically and fires as required by the shooting conditions. Set to ③ Suppressed flash mode when you want to take pictures without flash.

 
☼ Self-Timer

 
The self-timer is used in situations where the photographer is included in the shot. Available Photography modes: All



Setting self-timer

The self-timer setting changes each time you press \circ **(▼**).






The last displayed setting is the selected mode

- ☼: The picture is taken after 10 seconds.
- ☼: The picture is taken after 2 seconds.



Taking pictures using self-timer

 Press the shutter button down halfway to focus on the subject and press the shutter button fully.




Pressing the shutter button down halfway that focuses on the subject.


Without releasing the shutter button, press the button all the way down (fully pressed) to start the self-timer.




2 Take pictures in selected time.

   A picture is taken after the self-timer lamp changes from lit to blinking (only blinks with the 2-second self-timer).







A countdown appears on the LCD monitor indicating the time remaining until the picture is taken.

Using the 2-second self-timer

This is useful when you worry about camera shake even if attaching the camera on a tripod.




MEMO

- To stop the self-timer, once it has started running, press DISP/BACK.
- Any of the following cancels the self-timer setting:
 - Completing the shooting
 - Changing the Photography mode setting
 - Setting the camera to Playback mode
 - Turning the camera off
- Take care not to stand in front of the lens when pressing the shutter button as this can prevent the correct focus or brightness (exposure) from being achieved.

Taking pictures continuously

Use this mode to take pictures of a moving subject.

 



Hold down \P . Press \P or \P to select the Continuous shooting mode. Release \P to confirm your selection.

: TOP 3 continuous shooting

♣: Auto bracketing

■: LONG PERIOD continuous shooting

(!) CAUTION

- Shooting continues as long as holding the shutter button down. In auto bracketing mode however, just press the shutter button once to shoot 3 frames.
- Number of available frames is limited depending on the available space on the Memory Card or internal memory. When auto bracketing, if there is insufficient space on the Memory Card or internal memory to record 3 frames, no pictures are taken.
- The focus is determined in the first frame and cannot be changed in mid-sequence (except for LONG PERIOD).
- The exposure is determined in the first frame, but in LONG PERIOD continuous shooting the exposure is adjusted for the scene being shot.
- The speed of continuous shooting varies depending on the shutter speed.
- The flash cannot be used as the flash mode is set to ③ SUPPRESSED FLASH (→p.67). However, when the mode is changed back to normal photography, the flash setting specified before continuous shooting was selected is restored.
- For TOP 3 continuous shooting and Auto bracketing, the results are always displayed after you shoot. Note that pictures taken using LONG PERIOD continuous shooting are recorded without displaying the results.
- In LONG PERIOD continuous shooting mode, only 1 frame can be shot when using the LONG PERIOD continuous shooting mode and Self-timer mode together.
- Continuous shooting cannot be selected in 49/4 NATURAL & 4.
- File recording time using TOP3 or Auto bracketing may increase when record to a Memory Card or internal memory.



TOP 3 continuous shooting

Available Photography modes: All (except for 40/4)



Shooting continues as long as holding the shutter button down. This mode shoots up to 3 frames.
(FinePix S5700 / FinePix

S700: max. 1.4 frames/sec.) (FinePix S5800 / FinePix S800: max. 1.3 frames/sec.)

♣ Auto bracketing

Available Photography modes: P, A, S, M



This mode shoots the same image with different exposure settings.

Bracketing shoots 3 continuous frames, each with a different exposure setting.

(A) is correctly exposed, (B) is overexposed and (C) is underexposed.

The exposure range settings can be changed in
Bracketing in the SHOOTING MENU

CHECK

Auto bracketing settings (3) ±1/3 EV, ±2/3 EV, ±1 EV

(!) CAUTION

- If the underexposed or overexposed frame is outside the camera's control range, the picture is not taken with the specified setting increments.
- This function can only be used for P, A, S or M in Shooting mode.

MEMO Changing the setting (exposure range)




Press the MENU/OK to display the menu and change the setting in the
BRACKETING menu option (→p.90).

■ LONG PERIOD continuous shooting

Available Photography modes: All (except for 49/4)

Shooting continues as long as the shutter button is held down (max. 0.6 frames/sec.). This mode shoots up to Memory Card or internal memory end.

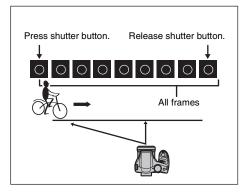

™ MEMO

Continuous shooting mode and assist window (→p.38) can be used together.

 
☼ Increasing LCD Monitor Brightness

 
This is useful when checking the shot composition for outdoor scenes.



Increasing the LCD monitor brightness

Press $\ \stackrel{\Leftrightarrow}{\cdot}\ (\ \ \ \ \ \)$ to increase the LCD monitor brightness. Press $\ \stackrel{\Leftrightarrow}{\cdot}\ (\ \ \ \ \)$ again to return to normal LCD monitor brightness.





blinks on the LCD monitor when the function is active.



MEMO

 
- This function is automatically canceled after each shot.
- When this function is active, it will increase the amount of speckling in images on the screen. This is normal and does not affect the photographed image.
- This function is purely for checking the composition of your shot. It does not increase the brightness of the image.
- Even if you increase the brightness in low-light conditions, you cannot check the subject.
- The color tones may vary depending on the subjects.

Using F-MODE MENU (Photography)/SHOOTING MENU

Use these menus to adjust image quality or focus. You can take pictures in a wide range of conditions.



Setting the F-MODE MENU (Photography)





① Press **F** for about 0.5 seconds to open the **F**-MODE MENU.



② Press \blacktriangle or \blacktriangledown to select the menu.



· ③ Press ▶.



④ Press ▲ or ▼ to change the setting.



5 Press MENU/OK to confirm the setting.



Setting the SHOOTING MENU





 Press MENU/OK to open the SHOOTING MENU.



② Press ▲ or ▼ to select the menu.



③ Press ►.



(4) Press \blacktriangle or \blacktriangledown to change the setting.



(5) Press MENU/OK to confirm the setting.

■ List of *F*-MODE MENU options

Menu	Functions	Settings	Factory default
ISO (→p.79)	Specifies required sensitivity setting of the ambient light around the subject. The larger value of the sensitivity, the higher sensitivity is obtained. The higher sensitivity settings will allow you to take pictures in darker locations.	AUTO/AUTO (800)/ AUTO (400)/1600/ 800/400/200/100/64	AUTO
€ QUALITY	Specifies the image size. The larger image size, the better image quality is obtained. The smaller image size, the larger number of images are recorded.	FinePix S5700 / FinePix S700: 7M F/7M N/32/ 4M/2M/6M	ZM N
(→p.80)		FinePix S5800 / FinePix S800: 8M F/8M N/8:2/4M/ 2M/88M	BM N
FinePix COLOR (→p.81)	Specifies required color tone. This mode is effective for taking more vivid shots or black and white shots.	STD/ Ö F/ Ö F	STD

■ List of SHOOTING MENU options

Menu	Functions	Settings	Factory default
SCENE POSITION (→p.53)	This setting can be used when the Mode dial is set to $SP1$ or $SP2$. Use this setting to provide the best photography menu setting for the scene being shot.	●/▲/%/୯/◎/ ※/優/∭/╬/〒/ ※/図	SP1 : ♣ SP2 : ▲
PHOTOMETRY (→p.82)	This setting can be used when the Mode dial is set to P,A,S or $M.$ Use this setting to specify the light metering method.	0/•/[]	Ō
WB WHITE BALANCE (→p.83)	This setting can be used when the Mode dial is set to P,A,S or $M.$ Use this setting to adjust the color balance to suit the color of the ambient light around the subject.	AUTO/巳/※/を/崇/ 労/端/泰	AUTO
☐ HIGH-SPEED SHOOTING (→p.84)	This setting can be used with any of the modes. This setting is always set to ON when the Photography mode is set to $\%$. Use this setting to reduce the time required for focusing.	ON/OFF	OFF

Menu	Functions	Settings	Factory default	
FOCUSING (→p.85)	This setting can be used when the Mode dial is set to $P,A,S,$ or $M.$ Use this setting to specify the focusing mode.	□/±/□	+	_
AF AF MODE (→p.87)	This setting can be used when the Mode dial is set to $P,A,S,$ or $M.$ Use this setting to specify the focusing area.	⊕/+/⊹	Ð	
S SHARPNESS (→p.89)	This setting can be used when the Mode dial is set to P, A, S or M. Use this setting to soften or emphasize the outline of an image.	HARD/STANDARD/ SOFT	STANDARD	Advanced
£ FLASH (→p.89)	This setting can be used when the Mode dial is set to P,A,S or $M.$ Use this setting to adjust the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect.	-2/3 EV to +2/3 EV in approx. 1/3 EV increments	0	nced Features
BRACKETING (→p.90)	This setting can be used when the Mode dial is set to P,A,S or $M.$ Use this setting to photograph the same image with different exposure settings.	±1/3 EV, ±2/3 EV, ±1 EV	±1/3 EV	
	Continued →		Photography	





 
MEMO

Note that the shooting menu will vary depending on the selected shooting mode.

• AUTO, (18), (10), (10/4)



• SP1, SP2 (The shooting menu options will vary depending on the mode selected.)



• P. A. S. M



F-MODE MENU (Photography)



Changing the sensitivity setting (19 ISO)

Use this menu to specify required sensitivity setting of the ambient light around the subject.

 
The larger value of the sensitivity, the higher sensitivity is obtained. The higher sensitivity settings will allow you to take pictures in darker locations.

CHECK

Settings

AUTO/AUTO(800)/AUTO(400)/1600/800/400/200/100/ 64

Selecting AUTO/AUTO(800)/AUTO(400) as the sensitivity setting, the camera selects the best sensitivity setting for the subject's brightness.



The selected sensitivity setting appears on the screen when the sensitivity setting is set to the setting other than AUTO.

About AUTO(800)/AUTO(400)

AUTO(800)/AUTO(400) can be selected when the Mode dial is set to P. For AUTO(800)/AUTO(400), sensitivity is automatically set in the same way as for AUTO, but the highest sensitivity is limited. Select AUTO(800)/AUTO(400) depending on the scene.



™ MEMO

- When anything other than P, A, S and M in the Photography mode is selected, only AUTO can be selected for the ISO (sensitivity) setting.
- When P, A, S and M in the Photography mode is selected, AUTO cannot be selected for the ISO (sensitivity) setting.

(!) CAUTION

Although higher sensitivity settings will allow you to take pictures in darker locations, they will also increase the amount of speckling in your images. Choose the sensitivity setting that best suits the conditions.



Changing the quality setting (QUALITY)

Use this menu to specify the image size (number of recorded pixels).

Select the quality setting for the scene being shot.

■ Quality settings in Photography mode (FinePix S5700 / FinePix S700)

Quality mode	Sample uses	
7M F (3072 × 2304) 7M N (3072 × 2304)	Printing at up to 10R (25.4 × 30.5 cm/ 10 × 12 in.) / A4 size For better quality, select M F	
32 (3072 × 2048)		
4M (2304 × 1728)	Printing at up to 6R (15.2 \times 20.3 cm/ 6 \times 8 in.) / A5 size	
2M (1600 × 1200)	Printing at up to 4R (10.2 \times 15.2 cm/ 4 \times 6 in.) / A6 size	
(640 × 480)	To use for e-mail or web site	

Quality settings in Photography mode (FinePix S5800 / FinePix S800)

Quality mode	Sample uses	
8M F (3264 × 2448) 8M N (3264 × 2448)	Printing at up to 10R (25.4 × 30.5 cm/ 10 × 12 in.) / A4 size / A3 size For better quality, select F	
32 (3264 × 2176)		
4M (2304 × 1728)	Printing at up to 6R (15.2 \times 20.3 cm/ 6 \times 8 in.) / A5 size	
2M (1600 × 1200)	Printing at up to 4R (10.2 \times 15.2 cm/ 4 \times 6 in.) / A6 size	
(640 × 480)	To use for e-mail or web site	

Area shot and quality setting

Area shot excluding 32



Area shot with 32



Normal shooting provides an aspect ratio of 4:3 and 22 shooting provides an aspect ratio of 3:2 (same aspect ratio as 35 mm film and post card).



MEMO

- The bigger the number of recorded pixels, the better the image quality becomes. As the number of recorded pixels becomes smaller, you will be able to record more frames to a Memory Card.
- The quality setting is retained even when the camera is turned off or the mode setting is changed.
- When changing the quality setting, the number of available frames also changes (-p.164, 165). The numbers to the right of setting show the number of available frames.



Changing the FinePix COLOR setting (FinePix COLOR)

Use this menu to specify required color tone. It is effective for taking vivid shots or black and white shots.

CHECK

FinePix COLOR settings

STD F-STANDARD	The contrast and color saturation are set to standard. Use this mode for normal photography.	
ÖF F-CHROME	The contrast and color saturation are set to high. This mode is effective for taking more vivid shots of subjects such as flowers.	
ĒF <i>F</i> -B&W	This mode converts the colors in the photographed image to black and white.	

When setting \mathbf{F} -CHROME or \mathbf{F} -B&W, the icon appears on the screen.

(!) CAUTION

When the Mode dial is set to SP1 or SP2, GF does not appear on the screen.



MEMO

- The FinePix COLOR setting is retained even when the camera is off or the mode setting is changed.
- F-CHROME may have little visible effect with some subjects or the scene being shot. You may not be able to see any difference on the screen.

 
SHOOTING MENU



Selecting light metering method (PHOTOMETRY)

Available Photography modes: P, A, S, M

Use this setting when the correct exposure cannot be obtained by the shooting conditions.



[O] MULTI (Pattern): Light metering where the camera

assesses the scene and selects the

correct exposure.

[•] SPOT : Light metering where the exposure

is optimized for the center of the

image.

[] AVERAGE : Light metering where an average

value for the entire image is used.

To use the photometry modes effectively

MULTI

In this mode, the camera uses automatic scene recognition to analyze the subject and provide optimum exposure in a wide range of shooting conditions.

SPOT

This mode is useful for subjects with strongly contrasting light and dark areas where you want to achieve the correct exposure for a particular feature.

AVERAGE

 
The advantage of this mode is that the exposure tends not to change for different compositions or subjects. This mode is particularly effective for shots of people wearing black or white clothing and shots of scenery.



Adjusting color balance (WB WHITE BALANCE)

Available Photography modes: P, A, S, M

Adjust the color balance based on white to suit the color of the ambient light around the subject.



AUTO: Automatic adjustment

: Select the white balance be using white paper to

suit the shooting conditions.

* : Shooting outdoors in good weather

* : Shooting in shade

Shooting under Daylight fluorescent lamps Shooting under Warm White fluorescent law

Shooting under Warm White fluorescent lamps Shooting under Cool White fluorescent lamps

: Shooting under Cool Write Indorescent

□ Custom white balance

- ① Select \$\square\$ custom white balance (→p.75).
- ② Hold a piece of white paper under the light source for setting the white balance, so that it fills entire the screen. Then press the shutter button to set the white balance.







NEMO

To use the white balance set previously, press the MENU/ OK without pressing the shutter button.

 
3 When the correct exposure is measured,

"COMPLETED!" appears. Press MENU/OK to confirm the setting.









Set the exposure compensation again, using a negative value (-) when [OVER] appears and a positive value (+) when [UNDER] appears (→p.64).

OVER or UNDER

Example

You can change the white balance for a photographed image by using colored paper instead of white paper.

Last .

MEMO

- In AUTO mode, the correct white balance may not be achieved for subjects such as close-ups of people's faces and pictures taken under a special light source.
 Select the correct white balance for the light source.
- When the flash fires, the white balance (except for custom white balance) setting for the flash is used.
 Consequently, to achieve a particular effect, the flash mode should be set to ③ SUPPRESSED FLASH (→p.67).
- The specified custom white balance is retained until it is reset. This setting is retained even if the batteries are removed.
- The color tones may vary depending on the shooting conditions (light source, etc.).
- After taking the picture, check the image color (white balance).
- Explanation of Terms "White Balance" (→p.168)



Focusing the shot quickly (Fig. HIGH-SPEED SHOOTING)

Available Photography modes: All

Use this mode to reduce the time required for focusing when pressing the shutter button down halfway. It is useful to avoid missing snapshot opportunities.



(!) CAUTION

EVF/LCD MODE in the SI SET-UP menu is automatically set to 60fps (→p.167).

B

MEMO

Focal range

With High-speed shooting set to OFF Wide-angle: approx. 30 cm (1 ft.) to infinity Telephoto: approx. 1.0 m (3.3 ft) to infinity With High-speed shooting set to ON Wide-angle: approx. 1 m (3.3 ft.) to infinity Telephoto: approx. 1 m (3.3 ft) to infinity

- When taking pictures while the High-speed shooting mode is set to ON, the batteries will run down more quickly.
- When setting Sport mode, the camera sets to Highspeed shooting mode automatically.



Specifying the focusing mode (FOCUSING)

Available Photography modes: P, A, S, M


Use this mode to specify focusing mode that best suits the subject.



- ☐: CONTINUOUS
- □: MF

CONTINUOUS

Use this setting to take pictures of a moving subject. The camera continues to focus on the main subject in the AF frame.

 


(!) CAUTION

- When using CONTINUOUS, attention must be given to the battery level.
 - The battery level (power consumption) increases when using
 CONTINUOUS. Because the camera focuses continuously without pressing the shutter button.
- When using CONTINUOUS, AF AF MODE is set to
 © CENTER automatically.



⊞ SINGLE AF

Use this setting to take picture of a static subject such as a landscape.

 

□ MF

This mode is used in situations where you focus manually. Use this setting for alternative focusing or for intentionally out-of-focus shots.





① While pressing ☑, turn the zoom lever towards W or T to focus. The ○ mark changes to yellow when the subject is in focus.



② Press the shutter button to take pictures.



Specifying the focusing area (AF AF MODE)

Available Photography mode: P, A, S, M

Use this mode to specify the focusing area that best suits the subject.



 
☐: CENTER

☐: MULTI

⊡: AREA


■ CENTER

The camera focuses on the center of the screen. Use this setting when taking pictures with AF/AE lock (→p.34).



⊞ MULTI

When pressing the shutter button down halfway, the camera recognizes any strongly contrasting subject near the center of the screen and displays the AF frame over subject in focus.

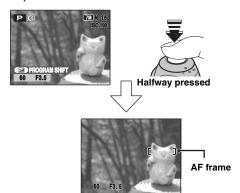

! CAUTION

When taking pictures in Macro mode, the camera focuses on the center of the screen.



 
MEMO

When the AF frame does not appear in the focusing position, select \boxdot CENTER in the AF mode and use AF/ AE lock (\rightarrow p.34).



AREA

The camera changes the focusing position on the screen. Use this setting when composing the shot using a tripod and changing the focusing position.





① Press \blacktriangle , \blacktriangledown , \blacktriangleleft or \blacktriangleright to move the \boxdot (target point) to the focusing position.





② The AF frame appears in the location to which the target point was moved when you press MENU/OK.



3 Press the shutter button to take pictures.



- MEMO
- To reposition the AF frame, repeat step 1.
- Regardless of the AF frame location, the exposure is always set using the area in the center of the screen. To expose the shot for your main subject, use AF/AE lock (→p.34).



Adjust the image outline (hard/soft) (S SHARPNESS)

Available Photography modes: P, A, S, M

Use this setting to soften or emphasize the outline and quality of an image.



HARD:

Emphasizes the outlines. Best for shots of subjects such as buildings or text where sharp images are desirable.

STANDARD:

Best for ordinary

photography. Provides edge sharpness that is ideal for most picture taking situations.

SOFT:

Softens the outlines. Best for shots of subjects such as people, where a softer image is desirable



Adjust the amount of light emitted by the flash (FLASH (Brightness Adjustment))

Available Photography modes: P, A, S, M

Use this setting to change the amount of light emitted by the flash to suit the photography conditions or to achieve a desired effect.





Compensation range:

- -2/3 EV to +2/3 EV in approx. 1/3 EV increments (total: 5 levels selectable)
- Explanation of Terms "EV" (→p.167)

(!) CAUTION

 
- Depending on the type of subject and the shooting distance, brightness adjustment may have no effect.
- The image may appear dark when setting the shutter speed to higher than 1/1000 sec.



Photograph the same image with different exposure (BRACKETING)

Available Photography modes: P, A, S, M

Use this setting to photograph the same image with different exposure settings. Bracketing shoots 3 continuous frames, one of which is correctly exposed while the remaining two are underexposed and overexposed respectively by a set amount.



CHECK

- Bracketing settings (3) ±1/3 EV, ±2/3 EV, ±1 EV
- Explanation of Terms "EV" (→p.167)

(!) CAUTION

- If the underexposed or overexposed frame is outside the camera's control range, the picture is not taken with the specified setting increments.
- · Flash photography cannot be used.
- This feature always takes 3 shots. However, if there is insufficient space on the Memory Card or internal memory for 3 shots, no picture will be taken.



MEMO Auto bracketing

 


After setting the exposure for bracketing:

- 1 Hold down 💁.
- ② Press ▲ or ▼ to select ┺ AUTO BRACKETING.

Playback Information

Use this function to check the photography information. Press **2** to check the information. Press **2** again to return to playback mode.





- 1 Quality mode
- 2 Sensitivity
- 3 Shutter speed/Aperture
- 4 FinePix COLOR
- 5 Flash
- 6 White balance
- (7) Exposure compensation setting
- 8 Frame number
- (9) Histogram

(!) CAUTION

· Highlight warning



Overexposed area blinks in black

Highlight warning

Histograms

A histogram is a chart showing the distribution of brightness in an image (horizontal axis: brightness; vertical axis: pixels).



1 Optimal exposure:

There is an ample distribution of pixels overall with a peak in the middle range.



2 Overexposed:

The number of highlight pixels is high with the distribution sloping upwards to the right.



(3) Underexposed:

The number of shadow pixels is high with the distribution sloping upwards to the left.

! CAUTION

The shape of the graph will vary depending on the subject.

Using F-MODE MENU (Playback)/PLAYBACK MENU

Use these menus to playback photographed images.



Setting the **F**-MODE MENU (Playback)

(1) Set the camera to Playback mode (→p.39).





2 Press **F** button for about 0.5 seconds to open the F-MODE MENU.



③ Press ▲ or ▼ to select the menu.



(4) Press .



(5) Press ▲ or ▼ to change the setting.

 


(6) Press MENU/OK to confirm the setting.



Setting the PLAYBACK MENU

(1) Set the camera to Playback mode (→p.39).





(2) Press MENU/OK to open the PLAYBACK MENU.



③ Press ▲ or ▼ to select the menu.



(4) Press .



(5) Press ▲ or ▼ to change the setting.



 
(6) Press MENU/OK to confirm the setting.

F-MODE MENU (Playback)



Setting automatic playback (SLIDE SHOW)

Use this mode to playback photographed images continuously. You can select type of image transition.





MEMO

- To interrupt automatic playback, press MENU/OK.
- images when selecting NORMAL and FADE-IN.
- The Auto power off function (→p.120) does not operate during playback.
- . Movie starts automatically. When the movie ends, the playback function moves it on.
- · Press DISP/BACK once during playback to display onscreen help.

DPOF set frame (PRINT ORDER (DPOF))

You can specify the image, number of prints, with or without date of printing with a DPOF-compatible printer.



WITH DATE : The date will be imprinted on your

prints.

WITHOUT DATE: The date will not be imprinted on your

prints.


RESET ALL : All DPOF settings will be canceled.

Continued I



WITH DATE / WITHOUT DATE

 Selecting WITH DATE , appears on the screen and the date will be imprinted on your prints.





 Press ◀ or ▶ to display the frame (file) for specifying DPOF setting.



② Press ▲ or ▼ to set a value. Up to 99 sheets are printed. For frames (files) that you do not want printed, set the number of prints to 0 (zero).

To specify more DPOF settings, repeat steps (1) and (2).



③ Always press MENU/OK after the settings are completed.
Pressing DISP/BACK cancels those

Pressing DISP/BACK cancels those settings.



Press MENU/OK again. The total number of prints appears on the screen.



MEMO Canceling DPOF setting

- ① Press **F** to open the **F**-MODE MENU and press **△** or **▼** to select **№** PRINT ORDER (DPOF).
- ② Press ►.
- ③ Press ▲ or ▼ to select WITH DATE or WITHOUT DATE and press MENU/OK to display the print order screen.
- ④ Press ◀ or ▶ to select the frame (file) with the DPOF setting you want to cancel.
- ⑤ Press ▼ to set the number of prints to 0 (zero).

To cancel the DPOF setting for another frame (file), repeat steps (4) and (5).

Always press MENU/OK to complete the settings.

• RESET ALL (→p.95)



MEMO

When DPOF settings were specified on another camera.



When the data includes a frame (file) with DPOF settings that were specified on another camera, "RESET DPOF OK?" appears.

Pressing MENU/OK erases all of the DPOF settings already specified for each frame (file). Specify the DPOF setting for each frame (file) again.

- Prints of up to 999 frames (files) can be ordered on the same Memory Card.
- · DPOF settings cannot be specified for movies.

(!) CAUTION

- Pressing DISP/BACK while choosing settings will cancel all current settings. If there were previous DPOF settings, only the modifications are canceled.
- When selecting the WITH DATE setting, the date is imprinted on your shots using the Print Service or a DPOF-compatible printer (depending on the printer specifications, the date may not be printed in some cases).
- Images photographed with a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 may not be specified DPOF settings.

RESET ALL

To cancel all DPOF settings:



Select RESET ALL in the **F**-MODE MENU (→p.93).



Press MENU/OK.





appears on the screen during playback when the image has specified DPOF settings.

PRINT ORDER (DPOF)



DPOF stands for Digital Print Order Format and refers to a format that is used for recording printing specifications for images shot using a digital camera on media such as a Memory Card. The recorded specifications include information on which frames are to be printed.

*Some printers do not support date and time imprinting or specification of the number of prints.

*The warnings shown below may appear while specifying the prints.

"DPOF SPECIFIED. ERASE OK ?"

"DPOF SPECIFIED. ERASE ALL OK ?" (→p.46)

When erasing the image, the DPOF setting for that image is deleted at the same time.

"RESET DPOF OK ?" (→p.95)

When inserting a Memory Card that contains images specified for printing by another camera, those print specifications are all reset and replaced by the new print specifications.

[DPOF FILE ERROR] (→p.151)

Up to 999 images can be specified on the same Memory Card.

PLAYBACK MENU



When shooting in the vertical position, the image appears horizontal on the screen.

Use this mode to rotate an image and to display correct direction. Your camera calls images "frames".

! CAUTION

Protected frames (files) cannot be rotated. Unprotect the frames (files) before rotating them (→p.98).



An image can be rotated only when playing back using FinePix S5700 / FinePix S700 / FinePix S800.

You may not be able to rotate images that were shot with a camera other than the FinePix S5700 / FinePix S700 / FinePix S800.



① Press ◀ or ▶ to select the rotating frame (file).



② Press MENU/OK to open the PLAYBACK MENU.



③ Press ▲ or ▼ to select ☑ IMAGE ROTATE.




4 Press MENU/OK.





- ⑤ Press ▲ or ▼ to rotate the image.
 - ▼: Rotates the image clockwise at a 90 degree angle.
 - ▲: Rotates the image counterclockwise at a 90 degree angle.

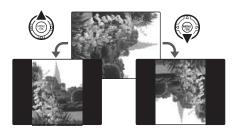



® Press MENU/OK to confirm the setting. Next time the image is played back, it will be automatically rotated. Press DISP/BACK to cancel rotating the

Press DISP/BACK to cancel rotating the image.



Protecting the images (PROTECT)

Use this mode to prevent frames (files) from being accidentally erased. Your camera calls images "frames".

FRAME SET / RESET

To protect or unprotect only the selected frame (file):





Unprotected

Protected (appears)



Press

 or
 to select the protecting/unprotecting frame (file).



② Press MENU/OK to protect/unprotect the currently displayed frame (file). Unprotected: protecting frame (file) Protected: reset frame (file)

To protect another frame (file), repeat steps 1 and 2. When protecting frames (files) is completed, press DISP/BACK.

SET ALL





Press MENU/OK to protect all the frames (files).

RESET ALL





Press MENU/OK to unprotect all the frames (files).



MEMO To stop the procedure midway



If the images are very large, protecting or unprotecting all the frames (files) may take some time.

If you want to take a picture or record a movie during the procedure, press DISP/BACK.

(!) CAUTION

The Format function erases all the frames (files), including protected frames (files) (→p.120).



Copying the images (MT COPY)

It is possible to transfer saved images between the internal memory and a Memory Card. Your camera calls images "frames".

■ Selecting COPY





① Press ▲ or ▼ to select In INTERNAL MEMORY → □ CARD or □ CARD → IN INTERNAL MEMORY.



② Press ►.



Copying one frame at a time (FRAME)





Press ▲ or ▼ to select FRAME.



2 Press MENU/OK.





③ Press ◀ or ▶ to select the copying frame (file).



(4) Press MENU/OK to copy the currently displayed frame (file).



™ MEMO

Copying all frames (ALL FRAMES)





Press ▲ or ▼ to select ALL FRAMES.



2 Press MENU/OK.





③ Press MENU/OK to copy all the frames (files).

(!) CAUTION

- When [MEMORY FULL] or [MEMORY FULL] appears on the screen, copying the data stops on the way.
- When copying the image that has specified DPOF setting, the DPOF setting is not copied.



Adding voice memos to the images (VOICE MEMO)

Voice memos of up to 30 seconds can be added to still images.

Recording voice memos



① Press ◀ or ▶ to select the image to add a voice memo.



(2) Press MENU/OK to open the PLAYBACK MENU



③ Press ▲ or ▼ to select ♀ VOICE MEMO.

 




 


(5) Press MENU/OK to start recording.

The remaining recording time appears during recording.







Face the microphone to record your comment. Hold the camera about 20 cm (7.9 in.) away for the best results





⑥ The voice memo ends when pressing MENU/OK midway or 30 seconds pass.

To record your comment: press MENU/OK. To rerecord the comment: press DISP/BACK.

MEMO

· When the image already has a voice memo



If you select an image that already has a voice memo, a screen appears in which you can select whether to rerecord the memo.

- When "PROTECTED FRAME" appears, unprotect the frame (→p.98).
- Voice memos cannot be added to movies.

 
Playing back voice memo



 Press ◀ or ► to select an image file with a voice memo. ♣ appears on the screen.




② Press ▼ to start playing back the voice memo.



The playback time appears on the screen along with a progress bar.

Progress bar

 (!) CAUTION



Uncover the speaker.
The sound may be difficult to hear.


Continued -

Playing back voice memos

	Control	Description
Playback	d Menu D	Playback begins. The voice memo stops when playback ends.
Pause / Resume	A (MO)	Pauses the voice memo during playback. Press ▼ again to resume playback.
Stop		Stops playback. Press ◀ or ▶ while voice memo playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward / Rewind		Press ◀ or ▶ during playback to skip forwards or backwards through the voice memo. These buttons do not function while playback is paused.

CHECK

 
- Audio recording format: WAVE (→p.167), PCM recording format
- Audio file size:
 Approx. 480 KB (for a 30-second voice memo)



You may not be able to play back some voice memo files recorded on other cameras

Adjusting volume of voice memos

 Volume can be adjusted while playing back voice memos.





Press MENU/OK while playing back voice memo.

The voice memo is paused during playback.



② Press ▲ or ▼ to adjust the volume.



③ Press MENU/OK to confirm your selection. Camera starts to play back the voice memo.



Trimming the images (TRIMMING)

 
Use this mode to trim the required part of the photographed image.

CHECK

Before selecting TRIMMING, select the trimming frame (file).



T:tele zoom dial (Zoom in)



Zoom bar



① Turn to W or T to zoom in or out on an image.



Press DISP/BACK to return to single-frame playback.



Navigation screen (Current displayed image)



② Press ▲, ▼, ◀ or ▶ to move to another part of the image.



(3) Press MENU/OK.





(4) Check the saved image size and press MFNU/OK

The trimmed image is added as a separate file in the final frame.

Continued →





MEMO

- · A saved image size varies depending on the zoom scale of step 1. For 0.3 M, OK YES option appears in yellow.
- Image sizes

4M	Printing at up to 6R (15.2 \times 20.3 cm/6 \times 8 in.) / A5 size
2M	Printing at up to 4R (10.2 \times 15.2 cm/4 \times 6 in.) / A6 size
03M	To use for e-mail or web site

• When 32 quality setting is selected, the image is trimmed to normal size (4:3 aspect ratio).

(!) CAUTION

 
You may not be able to trim images that were shot with a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800.

 
Recording Movies

Use this mode to record movies with sound.

1 Set the camera to # Movie mode.

Set the Mode dial to #.






The available recording time appears on the screen.

 2 Record movies.





Press the shutter button down fully to start recording. During recording, **OREC** and a counter that shows the remaining time appear on the screen.





Recording ends when pressing the shutter button down halfway during recording or the remaining time runs out.

Halfway pressed



MEMO

 
There is no need to hold down the shutter button during recording.





Zooming the image

Turn the zoom dial to zoom in or out during shooting.





Turn the zoom dial to zoom in or out on an image.

CHECK

Optical zoom focal length*
 With IMAGE STABILIZATION set to OFF:
 approx. 38 mm to 380 mm
 Max. zoom scale: 10x
 With IMAGE STABILIZATION set to ON:

approx. 48 mm to 580 mm Max. zoom scale: 12x

· Focal range

Wide-angle: approx. 4 cm (1.6 in.) to infinity
Telephoto: approx. 60 cm (2.0 ft.) to infinity

* 35 mm camera equivalent

CHECK Recording movies

- Specifications: Motion JPEG (→p.167), Monaural sound
- Quality selection method: 640 (640 × 480 pixels)
 320 (320 × 240 pixels)
- Frame rate (→p.167): 30 frames per second (fixed)

107

MEMO

- The brightness and color of the screen shown during movie recording may differ from those shown before recording begins.
- The focus, exposure and white balance will be automatically adjusted to the scene being shot even after recording has started.
- If recording is stopped immediately after it begins,
 1 second of the movie is recorded onto the Memory
 Card or internal memory.

(!) CAUTION

- Because a movie is recorded onto the Memory Card or internal memory as it is saved, it cannot be recorded correctly if the camera suddenly loses power (if the batteries run out or the AC power adapter is disconnected).
- A movie file taken by FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 may not be playable on other cameras.
- Because sound is recorded concurrently with the images, make sure that you do not cover the microphone with a finger, etc. (→p.14).
- Camera operation noises may be recorded during movie shooting.



Using the Image Stabilization Function

IMAGE STABILIZATION enables you to take stable and blur-free images even under difficult shooting conditions, such as telephoto shooting.

Press MENU/OK to open the shooting menu.





1 Press



② Press ▲ or ▼ to change the setting.



③ Press MENU/OK to confirm the setting.

 
? CAUTION

- Image size differs depending on the IMAGE STABILIZATION setting.
- Set IMAGE STABILIZATION to OFF when the camera is used with a tripod. Shooting with ON selected in this case may result in an image that looks unnatural.



Changing movie size

Press **F** to open the **F**-MODE MENU.





① Press ▶.



(2) Press \blacktriangle or \blacktriangledown to change the setting.



3 Press MENU/OK to confirm the setting.

Quality settings in Movie mode

 640×480 pixels): For better quality

320 (320 x 240 pixels): To record longer movies





MEMO

 
- The quality setting is retained even when the camera is turned off or the mode setting is changed.
- In

 Movie mode, you cannot set the
 (sensitivity) setting and FinePix COLOR setting.
- See p.164, 165 for information on recording times per Memory Card or internal memory.

(!) CAUTION

- . If you shoot using the xD-Picture Cards with model numbers containing "M" such as DPC-M1GB, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files. In such a case, erase all frames or format the xD-Picture Card before use. Back up important frames (files) onto your PC or another media.
- · A movie recording will stop automatically when a movie file becomes approx. 2GB. If you want to continue recording another movie, press the shutter button again. The available recording time is displayed based on approx. 2GB.

▶ Playing Back Movies






Press ◀ or ► to select the movie file. ♣ appears on the screen.



 2 Press \blacktriangledown to begin playing back movie.



The playback time appears on the screen along with a progress bar.

Progress bar

■ Playing back movies

	Control	Description
Playback	Q (MENU) D	Playback begins. Playback stops when the end of the movie is reached.
Pause / Resume	d (MBN) D	Pauses the movie during playback. Press ▼ again to resume playback.
Stop	d wenu d	Stops playback. Press ◀ or ▶ while playback is stopped to go back to the previous file or advance to the next file respectively.
Fast forward / Rewind	MENU OK	Press ◀ or ▶ during playback to skip forwards or backwards through the movie.
Skip playback	(MENU)	Press ◀ or ▶ when the movie is paused, the movie advances or goes back one frame. Hold down ◀ or ▶ to move through the frames quickly.





MEMO

If the subject of the shot is very bright, white vertical streaks or black horizontal streaks may appear in the image during playback. This is normal.

(!) CAUTION

- You may not be able to playback some movie files recorded on other cameras.
- To playback movie files on a PC, save the movie file on the Memory Card or internal memory to the PC's hard disk and then playback the saved file.
- · Uncover the speaker. The sound is difficult to hear.

Adjusting volume of movies

Volume can be adjusted while playing back movies.





1) Press MENU/OK while playing back movie.

The movie is paused during playback.



② Press ▲ or ▼ to adjust the volume.



③ Press MENU/OK to confirm the setting. Camera starts to playback the movie.

SET-UP

Using the SET-UP menu

1 Open the SET-UP menu.



1) Press MENU/OK to open the menu.



② Press \blacktriangle or \blacktriangledown to select \blacksquare SET-UP.



③ Press ▶.

2 Change the page.

 






② Press ▼ to move to menu item.

3 Change the setting.





① Press \blacktriangle or \blacktriangledown to select the menu.



② Press ... Different type of screen appears depending on selected item.



③ Press ▲ or \blacktriangledown to change the setting.



4 Press MENU/OK to confirm the setting.



SET-UP menu option

	Setting	Display	Factory default	Explanation	Page
۵	☑ IMAGE DISP.	CONTINUOUS/3 SEC/ 1.5 SEC/ZOOM (CONTINUOUS)/OFF	1.5 SEC	Sets the way for displaying the check image screen (photograph result) after taking a picture. The color tones in images recorded may differ from actual color. Playback the recorded images to check them.	116
	FRAME NO.	CONTINUOUS/ RENEW	CONTINUOUS	Specifies whether frame numbers are assigned consecutively from previous numbers or begin again.	117
	AF ILLUMINATOR	ON/OFF	ON	Specifies whether the AF-assist illuminator is ON or OFF.	36
	Q DIGITAL ZOOM	ON/OFF	OFF	Specifies whether digital zoom is used.	118
	EVF/LCD MODE	30fps/60fps	60fps	Sets the screen display to the fine mode.	-
1عر	DATE/TIME	-	-	Corrects the date or time.	28
	■ BEEP VOLUME	(1)/((1)/((1/(OFF	14+1	Sets the volume of the tone emitted when the camera controls are used.	-
	SHUTTER VOLUME	(1))/((1)/((1/(OFF	14-1	Sets the volume of the sound emitted when the shutter operates.	-
	PLAYBACK VOLUME	-	7	Sets the volume of playing back movie and voice memo.	119
		-	0	Sets the LCD monitor brightness.	119
	■ FORMAT	-	-	Initializes a Memory Card or internal memory. Select this menu to erase all the frames (files).	120

	Setting	Display	Factory default	Explanation	Page
	■ 言語/LANG.	日本語/ENGLISH/ FRANCAIS/DEUTSCH/ ESPAÑOL/ITALIANO/ 中文简/繁體/한글/ PYCCKWI/PORTUGUÊS/ NEDERLANDS/TURKÇE/ CESKY/MAGYAR/ POLSKI/SVENSKA	ENGLISH	Specifies the language used for screen display.	29
2عر	AUTO POWER OFF	5 MIN/2 MIN/OFF	2 MIN	Sets the time of turning camera off when camera is not used.	120
	TIME DIFFERENCE	△ /+	û	Specifies the time difference settings.	121
	BACKGROUND COLOR	-	-	Specifies the colors of menu and background.	-
	■ DISCHARGE	-	-	Discharges Ni-MH batteries.	146
	WIDEO SYSTEM	NTSC/PAL	-	Specifies whether video output is set to NTSC or PAL.	-
3عر	☐ RESET	-	ı	Resets all the camera settings (other than the DATE/TIME, TIME DIFFERENCE, BACKGROUND COLOR, and VIDEO SYSTEM) to the factory default values set at shipment. A confirmation message appears when you press ►. To reset the camera settings, press ◄ or ► to select OK and press MENU/OK.	-

IMAGE DISP.

Use this setting to specify the way for displaying the check image screen (photograph result) after taking a picture.

CONTINUOUS:

The results are always displayed after you shoot. Press the MENU/OK to take another picture.

3 SEC/1.5 SEC:

The image appears for about 3 or 1.5 seconds and is then recorded.

ZOOM (CONTINUOUS):

The image appears enlarged. Use this mode to check details of image.

OFF:

The results are not displayed.

(!) CAUTION

- The color tones in images displayed when 3 SEC or 1.5 SEC is selected may differ slightly from those in the images actually recorded.
- IMAGE DISP. cannot be used when LONG PERIOD (→p.73) is set.

Enlarging images



Navigation screen (Current displayed image)



① Turn to W or T to zoom in or out of an image.



② Press ▲, ▼, ◀, or ▶ to display another part of the image.



 
③ Press MENU/OK to take another picture. The image is recorded automatically.



- When an quality setting is selected, the image cannot be enlarged.
- · Pressing DISP/BACK cancels the zoom setting.
- This function is disabled when setting the continuous shooting.
- This function is disabled when selecting <a>\Psi\$.

FRAME NO.

Use this function to specify whether frame numbers are assigned consecutively from previous numbers or begin again.



* Formatted Memory Card or internal memory used for both A and B.

CONTINUOUS:

 
Pictures are stored beginning from the highest file number stored on the last Memory Card or internal memory used.

RENEW:

Pictures are stored on each Memory Card beginning with a file number 0001.

Each image will be numbered consecutively from the last number used. So when recorded images in the Memory Card are erased, the number of the erased frame will not be used again.

CHECK



The last 4 digits of the 7-digit number in the top right corner of the screen are the file numbers, while the first 3 digits show the directory number.

 


MEMO


- Setting this function to CONTINUOUS makes file management easier as it makes sure that file names are not duplicated when images are downloaded to a PC.
- In CONTINUOUS setting, images are stored beginning from the highest file number on the current Memory Card when the Memory Card already contains image files with file numbers higher than the highest file number on the last Memory Card.
- The displayed frame number may differ for images photographed on other cameras.

DIGITAL ZOOM

Use this function to shoot enlarged images than maximum optical zoom scale.



Zoom bar display

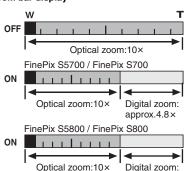

approx.5.1 ×

CHECK

- Optical zoom focal length* Approx. 38 mm to 380 mm
- · Digital zoom focal length*
 - FinePix S5700 / FinePix S700 Approx. 380 mm to 1824 mm Max. zoom scale: approx. 48×
 - FinePix S5800 / FinePix S800 Approx. 380 mm to 1938 mm Max. zoom scale: approx. 51x

* 35 mm camera equivalents



MEMO

When zooming changes between optical and digital, the position of the " \blacksquare " indicator stops. Press the same Zoom button again to start the " \blacksquare " indicator moving again.

(?) CAUTION

Using the digital zoom allows you to enlarge your subject and shoot it. However, it will lower your image quality. Set the digital zoom when requiring it.

PLAYBACK VOLUME

Use this function to adjust volume while playing back movie and voice memo.





 
① Press ▲ or ▼ to adjust the volume. The larger the number, the larger the volume is emitted. 0 (zero) indicates a sound deadening.



2 Press MENU/OK to confirm the setting.

LCD BRIGHTNESS

Use this function to adjust the screen brightness.



① Press ▲ or ▼ to adjust the screen brightness.

The indicator moves to the + to displ



 
The indicator moves to the + to display the screen brightly or to the - to darken the screen.



2 Press MENU/OK to confirm the setting.

FORMAT

Initialize (format) the Memory Card or internal memory for use with the camera



Place of initialize
FORMAT OK?:
Internal memory
FORMAT OK?:
Memory Card





② Pressing MENU/OK initializes the Memory Card or internal memory.

(!) CAUTION

- The Format function erases all the frames (files), including protected frames (files).
 Back up important frames (files) onto your PC or another media.
- Do not open the battery cover or slot cover during formatting. The Memory Card or internal memory could be damaged.

AUTO POWER OFF

When this function is active and the camera remains unused for 2 or 5 minutes, it turns camera off. Use this function when you want to get the maximum possible running time from your batteries.

? CAUTION

The Auto power off function is disabled during slide show (→p.93), discharging rechargeable batteries (→p.146), and when a printer or a PC connection (→p.125, 135) is being used.

MEMO To restore power to the camera

Refer to "Turning On and Off" (→p.25).

TIME DIFFERENCE

Use this function when traveling to destinations in different time zones. This function sets a time difference relative to the date and time currently set. When this setting is enabled, the specified time difference is applied when pictures are taken.

1 Use Time difference function.



Press ▲ or ▼ to change between � HOME and + LOCAL.



To set the time difference, select + LOCAL.

 
+ LOCAL: Your destination time zone

2 Move to TIME DIFFERENCE screen.





Set time difference.





1) Press or to select +/-, hour, and minute.



② Press ▲ or ▼ to change the setting.



(3) Always press MENU/OK after the settings are completed.

CHECK

Available time setting

-23:45 to +23:45 (in 15-minute increments)






In the time difference setting, when you change to the Photography mode, + and the date is displayed for 3 seconds, the date display turns yellow.

CHECK

Upon returning from a trip, always change the time difference setting back to 🏠 HOME and then check the date and time again.

Connecting to a TV

When connecting to a TV, images can be displayed on wider screen. Using slide show function (→p.93) together, you can have fun with folks

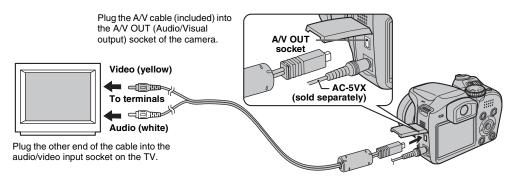

CAUTION

- Plug the A/V cable (included) and the AC power adapter correctly and push them in each terminal.
- See p.146 for the information of the AC power adapter.



 
MEMO

- . When connecting the A/V cable (included) to TV, the camera's screen is turned off.
- The image quality for movie playback is lower than for still images.
- When connecting to a TV, even if you adjust the volume from the PLAYBACK VOLUME, the TV volume cannot be changed. Refer to the instructions provided with your TV for more information on audio/video input for your TV.
- · Use the AC-5VX (sold separately) when FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is connected to a TV for long periods.

Using the AC power adapter (sold separately)

Always use a FUJIFILM AC Power Adapter AC-5VX (sold separately) (→p.141).

Use the AC power adapter to prevent losing power at inconvenient times, such as when downloading photographed images to your PC. You can take pictures and play back images without worrying about depleting the batteries.



Check that the camera is off. Plug the AC power adapter connector into the DC IN 5V socket and then plug the AC power adapter into the power outlet.

(!) CAUTION

- Only connect and disconnect the AC power adapter when the camera is off. Connecting or disconnecting the AC power adapter while the camera is on temporarily interrupts the power supply to the camera, which will stop the recording of any images or movies being shot. Failing to turn the camera off before connecting/disconnecting can also result in damage to the Memory Card, or malfunction during PC connection.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- The shape of the plug and socket-outlet depends on the country of use.
- FUJIFILM is not responsible for any malfunction caused by using any AC power adapter other than FUJIFILM AC Power Adapter AC-5VX.
- Do not connect the AC power adapter to charge the AAsize Ni-MH (nickel-metal hydride) batteries. Use the optional charger to charge the Ni-MH batteries.



MEMO

See p.146 for notes on using the AC power adapter.

Connecting Camera Directly to Printer — PictBridge Function




When a printer that supports PictBridge is available, images can be printed by connecting the camera directly to the PictBridge-compatible printer without a PC.



Connecting to a printer

Connect the camera to your printer using the USB cable.

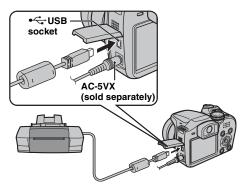



Use the AC-5VX (sold separately) when FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is connected to a printer.

② Connect the camera to a printer and turn the printer on. Press ► for about 1 second to turn the camera on.



" USB" appears on the screen.

3 The following screen appears on the screen after a moment.



"Specifying images for printing"

→p.126

"Printing with DPOF setting"

→p.127



MEMO

Depending on the printer, some functions are disabled.



Specifying images for printing (PRINT WITH DATE / PRINT WITHOUT DATE)





① Press ◀ or ▶ to display the frame (file) for specifying PRINT setting.



② Press ▲ or ▼ to set a value. Up to 99 sheets are printed.

To specify more PRINT settings, repeat steps (1) and (2).



③ Press MENU/OK to display the confirm setting.





④ Press MENU/OK again to download the data to the printer and start printing the specified number of prints.



Even if MENU/OK is pressed with total number of images set at 0 (zero), the screen printing once appears on the screen. Press MENU/OK again and printing starts.

MEMO Printing with date



- 1) Press DISP/BACK to display the setting display.
- ② Press ▲ or ▼ to select PRINT WITH DATE .
- 3 Press MENU/OK.

! CAUTION

PRINT WITH DATE is not available when the camera is connected to a printer that does not support date printing.



Printing with DPOF setting (♣ PRINT DPOF)





1) Press DISP/BACK to open the menu.



② Press ▲ or ▼ to select ♣ PRINT DPOF.



③ Press MENU/OK to display the confirm setting.





Press MENU/OK again to download the data to the printer and start printing the specified frames (files) continuously.

CHECK

To select ♣PRINT DPOF, the DPOF settings must be specified on FinePix S5700 / FinePix S700 / FinePix S800 / FinePix S800 beforehand (→p.93).

(!) CAUTION

Even when WITH DATE \Box is specified in the DPOF settings (\rightarrow p.93), the date is not inserted on printers that do not support date printing.





MEMO



Press DISP/BACK to cancel the printing. Depending on the printer, the printing may not be canceled immediately or printing may stop midway

through.

When printing stops midway, briefly turn the camera off and then on again.

Disconnecting the printer

- (1) Check that "PRINTING" is not displayed on the camera's screen
- (2) Turn the camera off. Unplug the USB cable.



MEMO

DPOF setting can be specified for images on internal memory.



(!) CAUTION

- · In PictBridge function, images photographed on other than a camera may not be printed.
- The camera cannot be used to specify printer settings such as the paper size and print quality.
- Please connect the AC Power Adapter AC-5VX (sold separately) to your camera.
- Use internal memory or a Memory Card that was formatted on FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800
- · Movies cannot be printed.
- · Images photographed with a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 may not be printed.

Installation on a Windows PC



Pre-installation checklist

Hardware and software requirements

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Operating System* ¹	Windows 98 SE Windows Millennium Edition (Windows Me) Windows 2000 Professional*2 Windows XP Home Edition*2 Windows XP Professional*2 Windows Vista*2
CPU 200 MHz Pentium minimum (Windows XP/Vista users: 800MHz Pentium 4 or better recommended)	
RAM	128 MB minimum (512 MB minimum for Windows Vista) 256 MB or better recommended (512 MB or better recommended for Windows Vista users)
Hard disk space	Amount required for installation: 450 MB minimum Amount required for operation: 600 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better)
Display 800 × 600 pixels or better, 16-bit color or better (When using ImageMixer VCD2 LE for FinePix: 1024 × 768 pixels or better	
Internet connection*3	To use the FinePix Internet Service or mail attachment function: An Internet connection or e-mail transmission software is needed Connection speed: 56 k or better recommended

^{*1} Models with one of the above operating systems pre-installed.

^{*2} When you install the software, login using a system administrator account (e.g. "Administrator").

^{*3} Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

■ Recommended system

Operating System	Windows XP	Windows Vista
CPU	2 GHz Pentium 4 or better recommended	3 GHz Pentium 4 or better recommended
RAM	512 MB or better recommended	1 GB or better recommended
Hard disk space	2 GB or better	15 GB or better
Display	1024 × 768 pixels or better, Highest (32 bit)	1024 × 768 pixels or better, Highest (32 bit)
Internet connection	Broadband (ADSL, FTTH, CATV, etc.)	Broadband (ADSL, FTTH, CATV, etc.)

(!) CAUTION

- Connect the camera directly to the PC using the USB cable. The software may not operate correctly when you use an extension cable or connect the camera via a USB hub.
- When your PC has more than one USB port, the camera can be connected to either port.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the
 connection is faulty.
- · Additional USB interface board is not guaranteed.
- Windows 95. Windows 98 and Windows NT cannot be used.
- · Operation is not guaranteed on home-built PCs or on PCs running updated operating system software.
- When you reinstall or remove FinePixViewer, the Internet menu and your user ID and password for the FinePix Internet Service
 are deleted from your PC. Click the [Register now] button, enter your registered user ID and password and download the menu
 again.

Do not connect the camera to your PC until the software installation is completed.

1 Install FinePixViewer as instructed in the Quick start guide.

Launching the installer manually

- 1) Double-click the "My Computer" icon.
- * Windows XP users should click "My Computer" in the "Start" menu.
 - Windows Vista users should click "Computer" in the "Start" menu.
- ② Right-click "FINEPIX" (CD-ROM drive) in the "My Computer" window (Windows Vista users: in the "Computer" window) and select "Open".
- ③ Double-click "SETUP" or "SETUP.exe" in the CD-ROM window.





- * The way file names are displayed differs as described below depending on your PC settings.
 - -File extensions (3-letter suffixes indicating the file type) may be shown or hidden. (e.g. Setup.exe or Setup)
 - -Text may be shown normally or all in uppercase (e.g. Setup or SETUP).

CHECK

For Windows Vista users:

When loading the bundled CD-ROM on your PC, the "AutoPlay" window may appear. In this case, click "SETUP.exe".

When "User Account Control" window appears, click "Allow".

Installing other applications

You may see messages for installing ImageMixer VCD2 LE for FinePix. Install this application as directed by the on-screen instructions.

2 Install DirectX as directed by the on-screen instructions and then restart your PC. If the latest version of DirectX is already installed on your PC, this installation is not performed.

! CAUTION

- If the latest version is already installed, this window does not appear.
- Do not remove the CD-ROM during this procedure.
- 3 After restarting the PC, a message appears stating "Installation of the FinePixViewer has been completed".

Installation on a Mac OS X



Pre-installation checklist

Hardware and software requirements

To run this software, you must have the hardware and software described below. Check your system before you begin the installation.

Compatible Mac*1	Power Macintosh G3* ² , PowerBook G3* ² , Power Macintosh G4, iMac, iBook, Power Macintosh G4 Cube, PowerBook G4, Power Macintosh G5, MacBook, MacBook Pro, or Mac mini	
Operating System	Mac OS X (compatible with version 10.3.9 to 10.4.8)	
RAM	256 MB minimum	
Hard disk space	Amount required for installation: 200 MB minimum Amount required for operation: 400 MB minimum (When using ImageMixer VCD2 LE for FinePix: 2 GB or better)	
Display	800 \times 600 pixels or better, at least 32,000 colors (When using ImageMixer VCD2 LE for FinePix: 1024 \times 768 pixels or better)	
Internet connection*3	To use the FinePix Internet Service or mail attachment function: An Internet connection or e-mail transmission software is needed Connection speed: 56 k or better recommended	

^{*1} PowerPC, Intel processor loaded

(!) CAUTION

- Connect the camera directly to the Macintosh using the USB cable. The software may not operate correctly if you use an extension cable or connect the camera via a USB hub.
- Push the USB connector fully into the socket to ensure that it is securely connected. The software may not operate correctly if the connection is faulty.
- · Additional USB interface board is not guaranteed.

^{*2} Models with a USB port as a standard feature

^{*3} Required to use the FinePix Internet Service. The software can still be installed even if you do not have an Internet connection.

- 1 Turn your Macintosh on and start up Mac OS X. Do not launch any other applications.
- When the bundled CD-ROM is loaded into the CD-ROM drive, the "FinePix" icon appears. Double-click the "FinePix" icon to open the "FinePix" volume window.
- **3** Double-click on "Installer for MacOSX".
- 4 The Installer setup dialog appears. Click the [Installing FinePixViewer] button.



(!) CAUTION

For more information on what is installed, click the [Read Me First] button and [Using FinePixViewer] button.

- 5 The "Authenticate" dialog appears. Enter the name and password for the administrator account and then click the [OK] button.*
- * The administrator account is the user account used for Mac OS X installation and you can confirm the user account in the Accounts dialog in the System Preferences.
- 6 The "License" dialog appears. Read the agreement carefully and then, if you agree to the terms of the Agreement, click the [Accept] button.
- 7 The "Read me" dialog appears. Click the [Continue] button.
- 8 The "FinePixInstallOSX" window appears. Click the [Install] button to install FinePixViewer.

Continued -

- 9 The ImageMixer VCD2 LE for FinePix installer automatically starts up and a window showing the installation progress appears (Installation may take several minutes).
- 10 The "FinePixViewer installation completed" message dialog appears. Then click exit button and close it.

(!) CAUTION

When Safari is used as the Web browser, a message may be displayed and the CD-ROM may not be removed. If this happens, click the Safari icon in the Dock to make Safari the active application and then select "Quit Safari" in the "Safari" menu to shut down Safari.

- 11 Launch "Image Capture" from the "Applications" folder.
- 12 Change the Image Capture settings.
 Select "Preferences..." from the "Image Capture" menu.



- 13 Select "Other..." from "When a camera is connected, open".
- 14 Select "FPVBridge" from "FinePixViewer" folder in the "Applications" folder and click the [Open] button.



15 Select "Quit Image Capture" menu in the "Image Capture" menu.

Connecting to a PC

By connecting the camera to a PC, your system can be expanded to fill a wide range of uses. Using "FinePixViewer" performs images saving, browsing and file management etc.



MEMO

the software.

If the power cuts out during data transmission, the data will not be transmitted correctly. Always use the AC power adapter when connecting the camera to a PC.

Refer to Software Installation (→p.129, 132) the first time you connect the camera to your PC. Install the software first. Do not connect the camera to the PC before installing all




CD-ROM (Software for FinePix CX)

① Insert the Memory Card with images into the camera (→p.22).

You can use the **xD-Picture Card** and the SD Memory Card with the FinePix S5700 / FinePix S700 / FinePix S800. In this Owner's Manual, these cards are expressed as "Memory Card".

(!) CAUTION

- Do not format the Memory Card in the camera on the PC.
- Use the Memory Card with images taken by a FUJIFILM Digital camera.
- When connecting to a PC, if the Memory Card contains large image or movie files, connection or transmission may take time or images may not be stored. In these cases, use the Image Memory Card Reader (sold separately), etc. Note that the Image Memory Card Reader DPC-R1 is not compatible with the SD Memory Card.
- 2 Connect the camera to your PC using the USB cable.

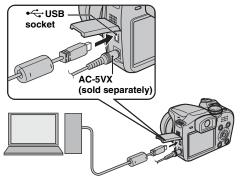

③ Press ▶ for about 1 second to turn the camera on.



(!) CAUTION

- FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is compatible with PTP (Picture Transfer Protocol)/MTP (Media Transfer Protocol). A PTP/MTP-compatible camera is a camera which can recognize the PC and printer automatically when connected.
- Always use the FUJIFILM AC Power Adapter AC-5VX (sold separately). If the camera suddenly loses power during data exchange, the Memory Card or internal memory could be damaged.
- Do not disconnect the USB cable when the camera is communicating with a PC. If disconnecting the USB cable during communication, the files on the Memory Card or internal memory may cause damage.
- In Mac OS X, you must set the automatic setup when the first time you connect the camera to your PC.
- Make sure that USB cable is connected correctly and pushed in.
- Perform pre-arranged steps to disconnect and turn off the camera (→p.137-138).
- When the camera and PC are exchanging data, the indicator lamp blinks alternately green and orange.
- Auto power off is disabled during USB connection.
- Before replacing the Memory Card, always disconnect the camera from the PC. See p.137, 138 for information on the disconnection procedure.
- The camera and PC may be exchanging data even when "Copying" disappears on your PC screen. Before disconnecting the USB cable, always check that the indicator lamp is off.
- Always use FinePixViewer to transfer images with voice memos to a PC.
- When Windows 98 SE is used, the supplied software must be installed first before connecting the camera to a PC using the USB cable. The PC will not recognize the camera if it is connected before the installation.

4 Set a PC.

Windows 98 SE / Me / 2000 Professional / Macintosh

(!) CAUTION

The Windows CD-ROM may also be required during installation. In this event, change CD-ROMs as directed by the on-screen instructions.

 FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.



* Screen for Windows 2000 Professional

M P

MEMO

- You can only see images saved on a PC. Save images on a PC.
- If you cancel saving by clicking the [Cancel] button, set the Power switch to OFF to turn off the camera and then disconnect it from the PC.

Windows XP / Vista

① The help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

(!) CAUTION

This step is not required for subsequent connections.

② FinePixViewer automatically starts up and the Save Image Wizard window (Save Image dialog box) appears. Follow the instructions provided on screen to save the images. To proceed without saving the images, click the [Cancel] button.



- You can only see images saved on a PC. Save images on a PC.
- If you cancel saving by clicking the [Cancel] button, set the Power switch to OFF to turn off the camera and then disconnect it from the PC.

Proceed to "Using FinePixViewer" (→p.138).

Disconnecting the camera

1 Windows

Once the image has been saved, the window below appears (Save Image Wizard window). To disconnect the camera, click the [Remove] button.



Macintosh

 
Once the image has been saved, the window below appears. To disconnect the camera, click the [OK] button.



Continued



- 2 1 Slide the Power switch to turn the camera off.
 - 2 Unplug the USB cable from the camera.





Using FinePixViewer

Mastering FinePixViewer

For all information on FinePixViewer functions, refer to "How to Use FinePixViewer" in the Help menu for details.

• What is explained in "How to Use FinePixViewer"... "How to Use FinePixViewer" covers a range of topics, including batch processing and ordering prints.

Example: Looking up slide shows

- ① Click "How to Use FinePixViewer" in the FinePixViewer Help menu.
- ② Click "Basic Operation" and then click "Slide Show" in the menu that appears.
- 3 The "Slide Show" information appears. Press the "<<<" key to view the previous page or the ">>>" key to view the next page.

Uninstalling the software


Only perform this operation when you no longer require the installed software or when the software was not installed correctly.

Windows

- (1) Check that the camera is not connected to the PC.
- 2 Quit all currently running applications.
- ③ Open the "My Computer" (Windows XP/Vista users should click "Control Panel" in the "Start" menu.) window. Then open the "Control Panel" (Windows Vista users: open the "Programs") and double-click on "Add/Remove Programs" (Windows Vista users: "Programs and Features").



4 The "Add/Remove Programs Properties" (Windows Vista users: "Programs and Features") window appears. Select the software to be uninstalled (FinePixViewer or the driver) and then click the [Add/ Remove] button (Windows Vista users: [Uninstall/ Change] button).

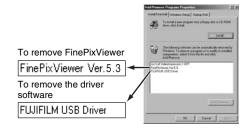

⑤ When the message appears, click the [OK] button. Check your selection carefully since the process cannot be canceled once you click the [OK] button.



Automatic uninstallation begins.

When uninstallation ends, click the [OK] button.


Macintosh

Quit FinePixViewer. Then drag the installed FinePixViewer folder to the Trash and select "Empty Trash" in the "Finder" menu

System Expansion Option

By using FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.

Accessory availability may vary by country. Please check with your local Fujifilm representative to confirm product availability.

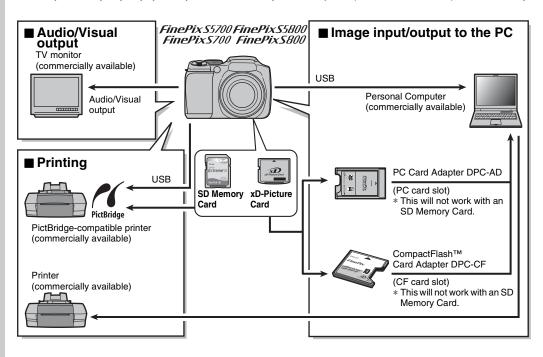

Accessories Guide

Visit the FUJIFILM web site for the latest information on camera accessories.

http://www.fujifilm.com/products/digital/index.html

Accessory availability may vary by country. Please check with your local Fujifilm representative to confirm product availability.

xD-Picture Card

Use the following **xD-Picture Cards**: 256MB/512MB/1GB/2GB

There are two types of **xD-Picture Card**: standard type and Type M (containing "M" in the model number, such as DPC-M1GB).

FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is compatible with Type M, however they may not be compatible depending on the device used (Image Memory Card Reader, etc.).



AC Power Adapter AC-5VX

Use the AC-5VX when taking pictures or play back images for long periods or when FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is connected to a PC.

 \ast The shape of the AC power adapter, the plug, and power outlet depend on the country.



PC Card Adapter DPC-AD

The PC Card Adapter allows the **xD-Picture Card** and SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type ${\mathbb I}$).

-Compatible with xD-Picture Card of 16 MB to 512 MB, and SmartMedia of 3.3 V, 2 MB to 128 MB. * This is not compatible with the SD Memory Card.



CompactFlash™ Card Adapter DPC-CF

Loading an **xD-Picture Card** into this adapter allows you to use the card as a CompactFlash card (Type I).

* This is not compatible with the SD Memory Card.



MEMO

Appendices

Using Your Camera Correctly

Read this information and the "Safety Notes" (→p.176), to make sure you use your camera correctly.

Places to Avoid

Do not store or use the camera in the following types of locations:

- $\bullet\,$ In the rain or in very humid, dirty, or dusty places
- In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer
- · Extremely cold places
- · Places with strong vibration
- · Places with smoke or steam
- Places subject to strong magnetic fields (such as near motors, transformers, or magnets)
- · In contact with chemicals such as pesticides
- · Next to rubber or vinyl products

Damaged by Water or Sand

FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 can be damaged on the inside and outside by water and sand. When you are at the beach or close to water, make sure that the camera is not damaged by water or sand. Take care not to place the camera on a wet surface.

Damaged by Condensation

If the camera is carried from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, turn the camera off and wait an hour before using the camera. Condensation may also form on the Memory Card. In this event, remove the Memory Card and wait a short time.

When the Camera is Not Used or is stored Periods of Time

If you do not intend to use the camera for a long period of time, remove the batteries and the Memory Card.

Cleaning Your Camera

- Use a blower brush to remove any dust on the lens, LCD monitor or viewfinder, and then gently wipe the camera with a soft, dry cloth. If any soil remains, apply a small amount of lens cleaning liquid to a piece of FUJIFILM lens cleaning paper and wipe gently.
- Do not scratch hard objects against the lens, LCD monitor or viewfinder.
- Clean the body of the camera with a soft, dry cloth. Do not use volatile substances or cleaning products these items can cause damage.

Using the Camera When Traveling

When traveling overseas, do not place your camera in the check-in baggage. Baggage can be subjected to violent shocks, and the camera may be damaged inside or outside.

Power Supply and Batteries

Applicable Batteries

- . In the camera, use AA-size alkaline or Ni-MH (nickelmetal hydride) rechargeable batteries. Do not use AA-size manganese, nickel-cadmium (Ni-Cd) or lithium batteries in your FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 because the heat created by the batteries could damage the camera or
- · The life of alkaline batteries varies between brands. The life of batteries you purchase may be shorter than those provided with the camera.

Notes on the Batteries

cause it not to work

Incorrect use of the batteries could cause them to leak. become hot, ignite, or burst. Always observe the precautions given below.

- . Do not heat the batteries or throw them into a fire.
- · Do not carry or store batteries with metal objects such as necklaces or hairpins.
- Do not expose the batteries to water, and keep batteries from aetting wet or stored in moist locations.
- Do not attempt to take apart or change the batteries. including battery casings.
- Do not subject the batteries to strong impacts.
- Do not use batteries that are leaking, deformed, discolored.
- Do not store batteries in warm or humid places.
- · Keep the batteries out of reach of babies and small children.
- Make sure that the battery polarity (\oplus and \ominus) is correct.
- · Do not use new with used batteries. Do not use charged and discharged batteries together.
- Do not use different types or brands of batteries at the same time.

- If you do not intend to use the camera for a long period of time, remove the batteries from the camera. Note if the camera is left with the batteries removed, the time and date settings are cleared.
- The batteries feel warm right after being used. Before removing the batteries, turn the camera off and wait for the batteries to cool down.
- · Since batteries do not work well in cold weather or locations, warm the batteries by placing them inside your garments before use. Batteries do not work well when cold. They will work again when the temperature returns to normal.
- · Soil (such as fingerprints) on the battery terminals makes the batteries charge less reducing the number of images. Carefully wipe the battery terminals with a soft dry cloth before loading.



If any liquid at all leaks from the batteries, wipe the battery compartment thoroughly and then load new batteries



If any battery fluid comes into contact with your hands /!\ or clothing, flush the area thoroughly with water. Note that battery fluid can cause loss of evesight if it gets into your eyes. If this occurs, do not rub your eyes. Flush the fluid out with clean water and contact your physician for treatment.

Using the AA-size Ni-MH batteries correctly

- As a power source in digital cameras, AA-size Ni-MH batteries (referred to hereafter as Ni-MH batteries) are superior to alkaline batteries in several ways, such as allowing more shots to be taken with the camera. However, care must be taken with the way Ni-MH batteries are used if their original performance is to be maintained
- Ni-MH batteries left unused in storage for long periods can become "deactivated". Also, repeatedly charging Ni-MH batteries that are only partially discharged can cause them to suffer from the "memory effect". Ni-MH batteries that are "deactivated" or affected by "memory" suffer from the problem of only providing power for a short time after being charged. To prevent this problem, discharge and recharge them several times using the camera's "Discharging rechargeable batteries" function. By repeating this cycle several times, the temporary reduction in performance caused by "memory" or "deactivation" can be remedied and the batteries can be restored to their original performance levels

Deactivation and memory are specific to Ni-MH batteries and are not in fact battery faults. See p.146-147 for the procedure for "Discharging rechargeable batteries".

(!) CAUTION

Do not use the "Discharging rechargeable batteries" function when alkaline batteries being used.

- To charge Ni-MH batteries, use the quick battery charger (sold separately). Refer to the instructions supplied with the charger to make sure that the charger is used correctly.
- Do not use the battery charger to charge other batteries.
- Note that the batteries feel warm after being charged.
- Due to the way the camera is constructed, a small amount of current is used even when the camera is turned off. Note in particular that leaving Ni-MH batteries in the camera for a long period will overdischarge the batteries and may render them unusable even after recharging.
- Ni-MH batteries will self-discharge even when not used, and the time for which they can be used may be shortened as a result.
- Ni-MH batteries will deteriorate rapidly if overdischarged (e.g. by discharging the batteries in a flashlight). Use the "Discharging rechargeable batteries" function provided in the camera to discharge the batteries
- Ni-MH batteries have a limited service life. If a battery can only be used for a short time even after repeated discharge-charge cycles, it may have reached the end of its service life.

Disposing of Batteries

When disposing of batteries, do so in accordance with your local waste disposal regulations.

Continued •



AC Power Adapter

Always use the AC Power Adapter AC-5VX with the camera.

The use of an AC power adapter other than AC-5VX can be damaged to your digital camera.

- · Use the AC power adapter for indoor use only.
- Plug the connection cord plug securely into the DC input terminal of the FUJIFILM Digital camera.
- Turn off the FUJIFILM Digital camera before disconnecting the cord from the FUJIFILM Digital camera's DC input terminal. To disconnect, pull out the plug gently. Do not pull on the cord.
- Do not use the AC power adapter with any device other than your camera.
- During use, the AC power adapter will become hot to the touch. This is normal.
- Do not take apart the AC power adapter. Doing so could be dangerous.
- Do not use the AC power adapter in a hot and humid place.
- Do not subject the AC power adapter to strong shocks.
- The AC power adapter may emit a humming. This is normal
- If used near a radio, the AC power adapter may cause static. If this happens, move the camera away from the radio



Discharging rechargeable batteries

The Discharging rechargeable batteries function can only be used with Ni-MH batteries.

The Discharging rechargeable batteries function should not be used with alkaline batteries as it will completely drain the battery charge.

Use the Discharging rechargeable batteries function in the following situations:

- When the batteries only last for a short time after being charged normally
- When the batteries have not been used for a long period
- · When you purchase new Ni-MH batteries

Do not use the Discharging rechargeable batteries function while using the AC power adapter. In these situations, the Ni-MH batteries will not be discharged due to the external power supply.

To discharge rechargeable batteries:



1) Press **b** to turn the camera on.



② Press MENU/OK to display the menu on the screen.



③ Press \blacktriangle or \blacktriangledown to select ৃ SET-UP.



④ Press ► to display the SET-UP menu.



(5) Press \blacktriangleleft or \blacktriangleright to select $\cancel{\triangleright}$ 2.



⑥ Press ▲ or ▼ to select ■ DISCHARGE.





⑦ Press ►.



(8) Press MENU/OK.



(9) Press ◀ or ▶ to select OK.



① The screen changes and discharging begins.

When the battery level indicator blinks red and discharging ends, the camera turns off.

! CAUTION

To cancel discharging, press DISP/BACK.

Notes on the **xD-Picture Card™**, the SD Memory Card and the Internal Memory

Handling Memory Card

- . When inserting the Memory Card into the camera, hold the Memory Card straight as you push it in.
- Never remove the Memory Card or turn the camera off during data recording or erasing (Memory Card formatting) as this could be damaged to the Memory Card
- The use of xD-Picture Cards is recommended with FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800.

The recording quality cannot be guaranteed when xD-Picture Cards other than those manufactured by FUJIFII M are used

- The Memory Card may feel warm when it is removed from the camera after taking pictures. This is normal.
- · Do not put labels on the Memory Card. Peeling labels can cause the camera not to work properly.



MEMO Type M and H of xD-Picture Card

Type M

There are two types of xD-Picture Card: standard type and Type M (containing "M" in the model number, such as DPC-M2GB).

FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 is compatible with Type M.

Type H

Type H and M share the same compatibility.

Usable USB drive

Type H cannot be used with xD-Picture Card USB drive DPC-UD1, while Type M can.

Internal Memory

- Images held in the camera's internal memory may be corrupted or erased due to problems such as camera faults. Save your important data to another media (i.e., DVD-R, CD-R, CD-RW, hard disk, etc.).
- · Data stored in the camera's internal memory cannot be quaranteed in the event that the camera is submitted for repairs.
- · When the camera is repaired, any data stored in the camera's internal memory is subject to checking by the repairer.

Using Memory Card or Internal Memory with a PC

- When taking pictures using a Memory Card or internal memory that has been used on a PC, reformat the Memory Card using your camera.
- · When formatting, a directory (folder) is created. Image data is then recorded in this directory.
- Do not change or delete the directory (folder) or file names on the Memory Card or internal memory because this will make it impossible to use the Memory Card or internal memory in your camera.
- · Always use the camera to erase image data.
- To edit image data, copy or transfer the image data to the PC and edit the copied or transferred data.

Warning Displays

The table below lists the warnings that are displayed on the screen.

Warning Displayed	Explanation	Remedy
(Lit red)	The batteries are low or completely out of charge.	Load new or fully charged batteries.
<u></u> [0]	There is a strong likelihood of camera shake because the shutter speed is slow.	Use flash photography. A tripod may be recommended, depending on the scene and mode.
!AF	The AF (autofocus) cannot work effectively.	If the image is too dark, take the picture at a distance of around 2 m (6.6 ft.) from the subject. Use AF lock to take the picture (→p.34). Select Macro mode when taking close-up shots.
Aperture/ Shutter speed display (Lit red)	The camera cannot shoot the picture at the correct brightness due to too bright or dark shooting condition.	The picture can be taken, but the correct brightness (exposure) will not be obtained.
FOCUS ERROR ZOOM ERROR	Camera malfunction or fault.	Turn the camera on again, taking care not to touch the lens. Turn the camera off and on again. If the message still appears, contact your FUJIFILM dealer.
NO CARD	Memory Card is not inserted when transferring images.	Insert a Memory Card.
CARD NOT INITIALIZED	The Memory Card or internal memory is not formatted. The Memory Card was formatted on a PC. The Memory Card contact area is soiled.	Format the Memory Card or internal memory on the camera (→p.120). Format the Memory Card on the camera. Wipe the contact area on the Memory Card with a soft, dry cloth. It may be necessary to format the Memory Card (→p.120). If the message still appears, replace the Memory Card.
	Camera fault.	Contact your FUJIFILM dealer.

Continued →

Warning Displayed	Explanation	Remedy
CARD ERROR	The Memory Card contact area is soiled. The Memory Card format is incorrect.	Wipe the contact area on the Memory Card with a soft, dry cloth. It may be necessary to format the Memory Card (→p.120). If the message still appears, replace the Memory Card.
CARD ERROR	Camera fault. The Memory Card is damaged. Inserted Memory Card is not compatible with your camera.	Contact your FUJIFILM dealer. Insert a compatible Memory Card that is operation-checked at FUJIFILM Corporation.
MEMORY FULL MEMORY FULL	The internal memory or Memory Card is full.	Erase some images in internal memory or Memory Card (→p.44), or use a Memory Card that has ample free space.
WRITE ERROR	The data could not be recorded due to an Memory Card error or a connection error between the Memory Card and camera. The image cannot be recorded as it is too large to fit in the available space on the Memory Card. The Memory Card or internal memory is not formatted.	 Re-insert the Memory Card or turn the camera off and then on again. If the message still appears, contact your FUJIFILM dealer. Use a new Memory Card. Format the Memory Card or internal memory on the camera (→p.120).
PROTECTED CARD	The SD Memory Card switch is slide to the "Lock" side.	Unlock the protection by sliding it back (→p.23)
INTERNAL MEMORY IS FULL	The data could not be recorded or copied since the internal memory is full.	Erase some images from the internal memory (→p.44), or use a Memory Card that has ample free space.
INSERT A NEW CARD.		
₽ BUSY	The timing for recording was incorrect because the Memory Card was formatted on a PC.	Use a Memory Card that was formatted on the camera.
FRAME NO. FULL	The frame number has reached 999-9999.	Insert a formatted Memory Card into the camera. Set RENEW as the FRAME NO. setting in the sale Set T-UP menu (→p.117). Start taking pictures (The frame number starts from "100-0001").

Warning Displayed	Explanation	Remedy
READ ERROR	 The played back file was not recorded correctly. The Memory Card contact area is soiled. Camera fault. An attempt was made to play back the image or the movie that was not recorded on this camera. 	This file cannot be played back. Wipe the contact area on the Memory Card with a soft, dry cloth. It may be necessary to format the Memory Card (→p.120). If the message still appears, replace the Memory Card. Contact your FUJIFILM dealer. The movie and image cannot be played back.
TOO MANY FRAMES	An attempt was made to show 5,000 or more image by date sorting.	No more than 4,999 images can be shown by date sorting.
PROTECTED FRAME	 An attempt was made to erase a protected file. An attempt was made to add a voice memo to protected file. An attempt was made to rotate a protected file. 	Protected files cannot be erased. Remove the protection (→p.98). Protected files cannot be added to voice memos. Remove the protection (→p.98). Protected files cannot be rotated. Remove the protection (→p.98).
₽ ERROR	The voice memo file is faulty. Camera fault.	The voice memo cannot be played back. Contact your FUJIFILM dealer.
□ NO IMAGE ••• NO IMAGE	An attempt was made to transfer images from the Memory Card or internal memory that memory was empty.	It is impossible to copy.
CAN NOT TRIM	An attempt was made to trim a 0.3M image.	The image cannot be trimmed.
CAN NOT TRIM	An attempt was made to trim an image shot using a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800. The image is damaged.	The image cannot be trimmed.
DPOF FILE ERROR	Prints were specified for 1000 or more frames in the DPOF frame settings.	The maximum number of frames for which prints can be specified on the same Memory Card is 999. Copy the images for which you want to order prints onto another Memory Card and then specify the DPOF settings.

Warning Displayed	Explanation	Remedy
CAN NOT SET DPOF	An attempt was made to specify DPOF settings for a movie or an image that is not supported by DPOF.	DPOF printing cannot be used with this image format.
CAN NOT SET DPOF		
CAN NOT ROTATE	An attempt was made to rotate a movie or an image shot using a camera other than FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800.	These images cannot be rotated by image formats.
COMMUNICATION ERROR	The camera is not connected to a PC or printer.	Check that the USB cable is connected correctly. Check that your printer is turned on.
PRINTER ERROR	Displayed for PictBridge.	Check that the printer is not out of paper or out of ink. Turn the printer off briefly and then turn it back on. Refer to the user manual supplied with your printer.
PRINTER ERROR RESUME?	Displayed for PictBridge.	Check that the printer is not out of paper or out of ink. Printing automatically restarts when the error is cleared. If the message still appears after checking, press MENU/OK to restart printing.
CANNOT BE PRINTED	Displayed for PictBridge.	Refer to the user manual for the printer being used and check whether the printer supports the JFIF-JPEG or Exif-JPEG image format. If not, the printer cannot print the images. Movies cannot be printed. Was the image data photographed using FinePix S5700 / FinePix S700 / FinePix S5800? You may not be able to print some images photographed on other cameras.

Troubleshootin

Troubleshooting

■ Getting ready

Matters	Problems	Possible causes	Solutions	Page
		The batteries have run out.	Load new or fully charged batteries.	19, 21, 144
	Nothing happens	The batteries are loaded backward.	Load the batteries in the corrected direction.	20
	when sliding the Power switch or	The batteries cover or slot cover is not closed securely.	Close the batteries cover or slot cover securely.	20
	pressing • .	The camera and AC power adapter are not connected correctly.	Connect the camera and AC power adapter correctly.	124, 146
		The camera has been left for a long period with batteries and AC power adapter removed.	Load the batteries or connect the AC power adapter, and wait a short time before turning the camera on.	19, 25, 124
Batteries and power supply		Camera is used in extremely cold conditions.	Put the batteries in your pocket or another warm place to heat it and then load it into the camera just before you take a picture.	19, 21, 144
ромог одрргу		The battery terminals are soiled.	Wipe the battery terminals with a clean, dry cloth.	21, 144
	Batteries run out quickly.	Same batteries have been used for a long period.	The batteries can no longer be recharged. Load a new batteries.	19, 21, 144
		The rechargeable batteries (if used) have become deactivated, or the battery capacity has diminished due to the memory effect.	Use the rechargeable battery discharging function to restore the rechargeable batteries to full capacity.	146
	Power cuts out	The batteries have run out.	Load new or fully charged batteries.	19, 21, 144
	during operation.	The camera and AC power adapter are not connected correctly.	Connect the camera and AC power adapter correctly.	124, 146

Setting menu etc.

Matters	Problems	Possible causes	Solutions	Page
LCD monitor display	displayed in	A language other than English is selected in the 言語/LANG. setting in the SET-UP menu.	Select ENGLISH.	29

Shooting

Matters	Problems	Possible causes	Solutions	Page
		The Memory Card or internal memory is full.	Insert a new Memory Card or erase some unnecessary frames.	22, 44
		The Memory Card or internal memory is not formatted.	Format the Memory Card or internal memory on the camera.	113, 120
	No photograph is taken when	The Memory Card contact area is soiled.	Wipe the Memory Card contact area with a soft, dry cloth.	22, 148
	pressing the shutter button.	The Memory Card is damaged.	Insert a new Memory Card.	22
Basic operations	Situater button.	The batteries have run out.	Load new or fully charged batteries.	19, 21, 144
		The Auto power off function has turned the camera off.	Turn the camera on.	25
	The screen darkens after taking a picture.	You took pictures with flash.	The screen may darken for charging flash. Wait a short time.	68
Focusing	Camera has difficulty in focusing on the subject.	You took a close-up shot without selecting Macro mode.	Select Macro mode.	66
		You photographed scenery with Macro mode selected.	Cancel Macro mode.	66
		You are shooting a subject that is not suited to autofocusing (→p.35).	Use AF/AE lock or "MF" Manual focus mode to take the picture.	34, 86

Matters	Problems	Possible causes	Solutions	Page
Macro	Cannot set the camera to Macro (close-up) mode.	The Shooting mode is set to ♥, ▲, ❖, C, ⊚, , ጭ, 赴, or ▼.	Change the Shooting mode.	51
		The shutter button was pressed while the flash was charging.	Wait until the charging is completed before pressing the shutter button.	68
		The Shooting mode is set to ��, ▲, ⑥, ♣, ⑥, ♠, ⑥, or 桊.	Change the Shooting mode.	51
	Cannot use the flash.	The batteries have run out.	Load new or fully charged batteries.	19, 21, 144
		Continuous shooting is selected.	Set continuous shooting to OFF.	71
		The flash is set to ③ SUPPRESSED FLASH mode.	Set to another flash mode excluding the ③ SUPPRESSED FLASH mode.	67
Flash		& Super macro mode is selected.	Cancel & Super macro mode.	66
Cannot pop up the flash. The flash settings are restricted and cannot be selected. The playback image is dark	Cannot pop up the	The flash is set to ③ SUPPRESSED FLASH mode.	Set to another flash mode excluding the ③ SUPPRESSED FLASH mode.	67
	flash.	The shooting condition is bright enough not to need flash.	Set to \$ FORCED FLASH mode when you want to take pictures with flash.	67
		The Shooting mode is set to anything other than ③ and P.	The flash settings are restricted because the camera settings are tailored to the scene being shot. Change the Shooting mode for a wider range of flash settings.	51, 68
	image is dark	The subject is too far away.	Move to within the effective flash range before taking the picture.	66, 68
	even though the flash was used.	Your finger was covering the flash.	Hold the camera correctly.	31

Continued →

Troubleshooting

Matters	Problems	Possible causes	Solutions	Page
		The lens is dirty.	Clean the lens.	143
	The image is blurred.	PAF appeared when taking pictures.	Check the focus on the subject and take pictures.	31, 34, 149
Photographed images		gr appeared when taking pictures.	It may cause camera shake. Hold the camera steadily.	33, 149
	There is speckling on the image.	The picture was taken with a slow shutter speed (long exposure) in a high-temperature environment.	This is a characteristic of CCDs and does not indicate a camera fault.	-
Recording images	Photographed images or movies are not recorded.	AC power adapter was connected or disconnected during turning the camera on.	Connect or disconnect the AC power adapter only when the camera is off. Failing to turn the camera off first can result in damage to the Memory Card or malfunctions during PC connection.	124, 146
Continuous shooting	Only 1 frame can be shot even though continuous shooting mode was set.	A picture is taken using self-timer when setting LONG PERIOD continuous shooting mode.	Only 1 frame can be shot when using LONG PERIOD continuous shooting mode and Self-timer mode together.	71

■ Playing back

Matters	Problems	Possible causes	Solutions	Page
		The camera volume is set too low.	Adjust the volume.	104, 112, 113, 119
Playing back movie / voice memo	The camera does not emit any sound.	The microphone was blocked during shooting/recording.	Take care not to block the microphone during shooting/recording.	14, 102, 108
		There is something covering the speaker during playback.	Make sure that the speaker is uncovered.	14, 103, 112
	Erasing FRAME does not erase the frame.	Some frames may be protected.	Unprotect frames using the camera on which the protection was first applied.	
Erasing	Erasing ALL FRAMES does not erase all the frames.			98
Frame No.	CONTINUOUS in the frame number setting does not function.	You opened the battery cover without turning the camera off when replacing the batteries or Memory Card.	Always turn the camera off when replacing the batteries or Memory Card. Opening the battery cover without turning the camera off may cause the frame number memory to not function.	25





■ Connecting

Matters	Problems	Possible causes	Solutions	Page
		The camera is not connected to the TV correctly.	Connect the camera and TV correctly.	123
	There is no image	The included A/V cable was connected during movie playback.	After the movie playback mode is stopped, connect the camera and TV correctly.	111, 123
Connecting to TV	or sound on the TV.	"TV" is selected as the TV input.	Set the TV input to "VIDEO".	-
Connecting to 1 v		The video output setting is incorrect.	Change the setting to NTSC or PAL.	113, 115
		The TV volume is turned down.	Adjust the volume.	-
	The TV image is black and white.	The video output setting is incorrect.	Change the setting to NTSC or PAL.	113, 115
Connecting to PC	PC does not recognize the camera.	The USB cable is not correctly connected to the PC or camera.	Set up the camera, and connect the USB cable correctly.	135
Connecting to printer	Cannot print with PictBridge.	The USB cable is not correctly connected to the printer or camera. The printer is not turned on.	Set up the camera, and connect the USB cable correctly. Turn the printer on.	125

Others

Matters	Problems	Possible causes	Solutions	Page
Camera operation etc.	Nothing happens when pressing the buttons on the	Camera malfunction may be caused temporarily.	Briefly remove the batteries or disconnect the AC power adapter. Then reload the batteries or reconnect the AC power adapter and try again.	19, 20, 124, 146
	camera.	The batteries have run out.	Load new or fully charged batteries.	19, 21, 144
	The camera no longer works correctly.	Camera malfunction may be caused temporarily.	Briefly remove the batteries or disconnect the AC power adapter. Then reload the batteries or reconnect the AC power adapter and try again. If you think the camera is faulty, contact your FUJIFILM dealer.	19, 20, 124, 146

Specifications

System					
Model	Digital camera	a FinePix S5700 / FinePix S700	Digital camera FinePix S5800 / S800		
Effective pixels	7.1 million pix	els	8.0 million pixels		
CCD	1/2.5-inch CC	:D			
Storage media	Internal memo	ory (approx. 27 MB)	Internal memory (approx. 26 MB)		
	xD-Picture C (→p.22))	ard (16/32/64/128/256/512 MB/1 GB/2	2 GB)/SD Memory Card (FUJIFILM recommendation		
File format	C *I Movie: AVI fo	till image: DCF-compliant Compressed: Exif ver.2.2 JPEG, DPOF-compatible *Design rule for Camera File System compliant/DPOF compatible fovie: AVI format, Motion JPEG udio: WAVE format. Monaural sound			
Number of recorded pixels (Still image)	2304 × 1728	pixels/3072 × 2048 pixels/ pixels/1600 × 1200 pixels/ els (7M/52/4M/2M/6M)	3264 × 2448 pixels/3264 × 2176 pixels/ 2304 × 1728 pixels/1600 × 1200 pixels/ 640 × 480 pixels (6M/62/4M/2M/6M)		
File size	See the table	on the p.164	See the table on the p.165		
Lens	Fujinon 10× o F3.5-F3.7	ptical zoom lens			
Focal length	f=6.33 mm-63.3 mm (Equivalent to approx. 38 mm-380 mm on a 35 mm camera)				
Digital zoom		(10× optical zoom lens is used zoom scale: approx. 48×)	Approx. 5.1× (10× optical zoom lens is used together: Max. zoom scale: approx. 51×)		
Aperture (Wide-angle)	F3.5 to F13.6, 7 steps in 1/3 EV increments Manual/Auto selectable				
Focal range	Normal: Wide-angle: approx. 30 cm (1.0 ft.) to infinity (In High-speed shooting mode: approx. 1.0 (3.3 ft.) to infinity) Telephoto: approx. 1.0 m (3.3 ft.) to infinity (In High-speed shooting mode: approx. 1.0 (3.3 ft.) to infinity)				
	Macro:	Wide-angle: 4 cm to 3.0 m (1.6 in. to Telephoto: 60 cm to 3.0 m (2.0 ft. to	o 9.8 ft.)		
	Super macro: approx. 1 cm to 1.0 m (0.4 in. to 3.3 ft.) (Wide-angle only)				

System			
Sensitivity	Auto/Auto (800)/Auto (400)/Equivalent to 64/100/200/400/800/1600 (Standard output sensitivity)		
Photometry	TTL 256-zones metering Multi, Spot, Average		
Exposure control	Program AE (When using P mode : Program Shift is enabled)/Shutter priority AE/Aperture priority AE/Manual exposure		
Scene position	● (NATURAL LIGHT), ●/\$ (NATURAL & \$), ● (PORTRAIT), ▲ (LANDSCAPE), ※ (SPORT), Ե (NIGHT), ◎ (FIREWORKS), 溢 (SUNSET), ● (SNOW), 並 (BEACH), 絆 (MUSEUM), ▼ (PARTY), ※ (FLOWER), 図 (TEXT)		
Picture Stabilization	Available		
Exposure compensation	-2 EV to +2 EV in 1/3 EV-step increments (P, A, S)		
Shutter speed	AIIO, (私), ①, ②/4, ②, ▲, 冬, 益, 《 , 益, 《 , 适, 未 , 顾 : 1/4 sec. to 1/1000 sec*. ★: 3 sec. to 1/1000 sec.* ③: 4 sec. to 1/2 sec.* ★: 1/4 sec. to 1/1000 sec.* (flash only). P, A, S: 4 sec. to 1/1000 sec.* M: 4 sec. to 1/1000 sec.* *depend on Exposure mode		
Continuous shooting	Top-3: Number of recorded frames: up to 3 frames (FinePix S5700 / FinePix S700: max. 1.4 frames/sec.) (FinePix S5800 / FinePix S800: max. 1.3 frames/sec.) Long-period: Number of recorded frames: FinePix S5700 / FinePix S700: Depend on memory size. 1.7 sec. interval at M N depending on quality level. (Max. 0.6 frames/sec.) FinePix S5800 / FinePix S800: Depend on memory size. 1.8 sec. interval at M N depending on quality level. (Max. 0.6 frames/sec.)		
Auto bracketing	± 1/3 EV, ± 2/3 EV, ± 1 EV		
Focus	Mode: Single AF, Continuous AF, Manual focus AF system: TTL contrast-type, AF-assist illuminator AF frame selection: AF (CENTER), AF (MULTI), AF(AREA)		

Continued →

System				
White balance	Automatic scene recognition/Preset (Fine, Shade, Fluorescent (Daylight), Fluorescent (Warm White), Fluorescent (Cool White), Incandescent) /Custom			
Self-timer	Approx. 2 sec./10 sec.			
Flash type	Popping the flash up automatically Effective range: (ISI): 800): approx. 50 cm-6.2 m (1.6 ft20 ft.) (Macro): approx. 30 cm-3.0 m (1.0 ft9.8 ft.)			
Flash mode	Auto, Red-eye Reduction, Forced Flash, Suppressed Flash, Slow Synchro, Red-eye Reduction + Slow Synchro			
Viewfinder	0.24 inches, approx. 230,000 pixels low-temperature polysilicon TFT color LCD finder, Approx. 97% coverage			
LCD monitor	2.5 inches, Aspect ratio: 4:3; approx. 230,000 pixels low-temperature polysilicon TFT color LCD monitor, Approx. 97% coverage			
Movie	640 × 480 pixels/320 × 240 pixels (\$\overline{\text{L0}}\$/\fixed) (30 frames per second with monaural sound) A series of continuous image can be recorded depending on the available space on an Memory Card or internal memory. A movie recording will stop automatically when a movie file becomes approx. 2GB. If you want to continue recording another movie, press the shutter button again. The available recording time is displayed based on approx. 2GB.			
Photography functions	High-speed shooting, Best framing, Post shot assist window, Frame No. memory, Histograms			
Playback functions	Trimming, Slide Show, Multi-frame playback, Sorting by date, Image rotate, Histograms (Highlight warning), Voice memo			
Other functions	PictBridge, Exif print, Language (日本語, English, Francais, Deutsch, Español, Italiano, 中文简, 繁體, 한글 Русский, Português, Nederlands, Türkçe, Česky , Magyar, Polski, Svenska), Time difference, FinePix photo mode(<i>F</i> -mode), Discharging rechargeable batteries			

Input/Output Terminal	
A/V OUT (Audio/Visual output)	NTSC/PAL-type (with monaural sound)
Digital input/output	USB 2.0 Full-Speed, PTP (Picture Transfer Protocol)/MTP (Media Transfer Protocol)
DC input socket	AC Power Adapter AC-5VX (sold separately)

Power Supply and Others

Power supply

Use one of the following:

- 4x AA-size alkaline batteries
- 4x AA-size Ni-MH (Nickel-Metal Hydride) batteries (sold separately)
- AC Power Adapter AC-5VX (sold separately)

Guide to the number of available frames for battery operation

Battery Type	With LCD monitor ON	With viewfinder (EVF) ON	
Alkaline batteries	Approx. 300 frames	Approx. 300 frames	
Ni-MH batteries 2500 mAh	Approx. 500 frames	Approx. 500 frames	

According to the CIPA (Camera & Imaging Products Association) standard procedure for measuring digital still camera battery consumption (extract):

When using alkaline batteries, use the batteries supplied with the camera. You can use Ni-MH batteries also. The storage media should be **xD-Picture Card**.

Pictures should be taken at a temperature of +23°C (+73°F), with the LCD monitor turned on, the optical zoom moved from full wide-angle to full telephoto (or vice-versa) and back again to its original position every 30 seconds, the flash used at full power every second shot and the camera turned off and then on again once every 10 shots.

 Note: Because the number of available shots varies depending on the capacity of alkaline batteries or the level of charge in Ni-MH batteries, the figures shown here for the number of available shots using batteries are not guaranteed.

The number of available shots will also decline at low temperatures.

Camera dimensions (W/F	Camera dimensions (W/H/D) 106.1 mm × 75.7 mm × 80.7 mm/4.2 in. × 3.0 in. × 3.2 in. (not including accessories and attachments)			
Camera mass (weight)	FinePix S5700 / FinePix S700: Approx. 306 g/10.8 oz. (not including accessories, batteries and Memory Card) FinePix S5800 / FinePix S800: Approx. 307 g/10.8 oz. (not including accessories, batteries and Memory Card)			
Weight for photography	FinePix S5700 / FinePix S700: Approx. 400 g/14.1 oz. (including batteries and Memory Card) FinePix S5800 / FinePix S800: Approx. 402 g/14.2 oz. (including batteries and Memory Card)			
Operating Conditions	Temperature: 0°C to +40°C (+32°F to +104°F) 80% humidity or less (no condensation)			

FinePix S5700 / FinePix S700

Standard number of available frames/recording time per xD-Picture Card, SD Memory Card and internal memory

The number of available frames and recording time is approximate. Actual number of frames and recording time varies depending on the types of Memory Card or shooting condition. Also, the number of frames and recording time displayed in the LCD monitor may not decrease regularly.

Quality	setting	7M F	7M N	3:2	4M	2M	03M	640 (30 fps)	(30 fps)
Number pixels	of recorded	3072 >	< 2304	3072 × 2048	2304 × 1728	1600 × 1200	640 × 480	640 × 480	320 × 240
Image da	ata size	3.5 MB	1.8 MB	1.6 MB	980 KB	630 KB	130 KB	-	-
Internal (approx.		7	15	17	27	44	215	30 sec.	47 sec.
	16 MB	4	9	10	16	25	124	17 sec.	27 sec.
	32 MB	9	18	20	32	51	249	34 sec.	55 sec.
Š	64 MB	18	36	41	64	102	499	70 sec.	1.8 min.
xD-Picture	128 MB	36	73	82	128	204	999	2.3 min.	3.7 min.
are (256 MB	73	146	164	257	410	1999	4.7 min.	7.4 min.
Card	512 MB	147	293	329	515	819	3995	9.3 min.	14.8 min.
	1 GB	294	586	659	1031	1640	7996	18.7 min.	29.6 min.
	2 GB	586	1163	1305	2063	3199	15995	36.8 min.	59.2 min.
	512 MB	142	283	319	499	793	3868	9 min.	14.3 min.
SD Memory Card	1 GB	285	568	638	999	1589	7746	18.1 min.	28.7 min.
ž	2 GB	568	1127	1265	2000	3100	15504	35.6 min.	57.4 min.
SDHC Memory Card	4 GB	1124	2229	2502	3955	6131	30655	70.5 min.*	113.5 min.*
골호문	8 GB	2252	4463	5010	7919	12275	61375	141.1 min.*	227.3 min.*

^{*} A movie recording will stop automatically when a movie file becomes approx. 2GB. If you want to continue recording another movie, press the shutter button again. The available recording time is displayed based on approx. 2GB.

FinePix S5800 / FinePix S800

■ Standard number of available frames/recording time per xD-Picture Card, SD Memory Card and internal memory

The number of available frames and recording time is approximate. Actual number of frames and recording time varies depending on the types of Memory Card or shooting condition. Also, the number of frames and recording time displayed in the LCD monitor may not decrease regularly.

Quality	setting	8M F	8M N	3:2	4M	2M	03M	640 (30 fps)	(30 fps)
Number pixels	of recorded	3264 >	< 2448	3264 × 2176	2304 × 1728	1600 × 1200	640 × 480	640 × 480	320 × 240
Image d	ata size	3.9MB	2.0MB	1.8MB	980 KB	630 KB	130 KB	-	-
Internal (approx.	memory . 26 MB)	6	13	15	27	43	211	29 sec.	46 sec.
	16 MB	4	8	9	16	25	124	17 sec.	27 sec.
	32 MB	8	16	18	32	51	249	34 sec.	55 sec.
Ě	64 MB	16	32	36	64	102	499	70 sec.	1.8 min.
xD-Picture	128 MB	32	64	72	128	204	999	2.3 min.	3.7 min.
ıre (256 MB	65	130	145	257	410	1999	4.7 min.	7.4 min.
Card	512 MB	130	259	290	515	819	3995	9.3 min.	14.8 min.
<u></u>	1 GB	261	520	581	1031	1640	7996	18.7 min.	29.6 min.
	2 GB	520	1031	1163	2063	3199	15995	36.8 min.	59.2 min.
	512 MB	126	251	281	499	793	3868	9 min.	14.3 min.
SD Memory Card	1 GB	252	503	563	999	1589	7746	18.1 min.	28.7 min.
, <u>7</u>	2 GB	504	1000	1127	2000	3100	15504	35.6 min.	57.4 min.
SDHC Memory Card	4 GB	996	1977	2229	3955	6131	30655	70.5 min.*	113.5 min.*
필명	8 GB	1995	3959	4463	7919	12275	61375	141.1 min.*	227.3 min.*

^{*} A movie recording will stop automatically when a movie file becomes approx. 2GB. If you want to continue recording another movie, press the shutter button again. The available recording time is displayed based on approx. 2GB.

If you shoot using the **xD-Picture Cards** with model numbers containing "M" such as DPC-M1GB, movie recording time may be reduced if you repeatedly record and erase (frame erase) image files. In such a case, erase all frames or format the **xD-Picture Card** before use. Back up important frames (files) onto your PC or another media.

- These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from
 errors in this Owner's Manual.
- The LCD monitor on your digital camera is manufactured using advanced high-precision technology. Even so, small bright
 points and anomalous colors (particularly around text) may appear on the monitor. These are normal display
 characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.
- The operation error may be caused in a digital camera by the strong radio interference (i. e. electric fields, static electricity, line noise, etc.).
- Due to the nature of the lens, the edges of images may appear distorted. This is normal.

Explanation of Terms

Deactivated batteries

Leaving an Ni-MH battery unused in storage for a long period may cause a rise in the level of substances that inhibit current flow inside the battery and result in a dormant battery. A battery in this state is referred to as deactivated.

Because current flow is inhibited in a deactivated Ni-MH battery, the battery's original level of performance cannot be achieved. **EV**

A number denotes Exposure Value. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed. When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

Frame rate (fps)

The frame rate refers to the number of images (frames) that are photographed or played back per second. For example, when 10 frames are continuously photographed in a 1-second interval, the frame rate is expressed as 10 fps. For reference. TV images are displayed at 30 fps (NTSC).

JPEG

Joint Photographic Experts Group

A file format used for compressing and saving color images. The higher the compression rate, the greater the loss of quality in the decompressed (restored) image.

Memory effect

If an Ni-MH battery is repeatedly charged without first being fully discharged, its performance may drop below its original level. This is referred to as the "memory effect".

Motion JPEG

A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

Smear

A phenomenon specific to CCDs whereby white streaks appear on the image when there is a very strong light source, such as the sun or reflected sunlight, in the photography screen.

WAVE

A standard format used on Windows systems for saving audio data. WAVE files have the ".WAV" file extension and the data can be saved in either compressed or uncompressed format. Uncompressed recording is used on this camera.

WAVE files can be played back on a personal computer using the following software:

Windows: MediaPlayer

Macintosh: QuickTime Player

* QuickTime 3.0 or later

White Balance

Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance.

Exif Print

Exif Print Format is a newly revised digital camera file format that contains a variety of shooting information for optimal printing.

FUJIFILM Digital Camera Worldwide Network

If you have technical questions or if you need repair service, ask the following local distributor.

Please present the warranty card and your purchase receipt when you ask for repairs. Refer to the warranty card for conditions of the warranty. There is a case that repair and Technical support cannot be accepted for some models which your local distributor does not deal with. These lists are subject to change without notice.

NORTH AMERIC	A	
Canada	FUJIFILM Canada, Inc. Technical support	600 Suffolk Court Mississauga Ontario, L5R 4G4 TEL 1-866-818-FUJI (3854) http://www.fujihelp.ca
	Repair service	600 Suffolk Court Mississauga Ontario, L5R 4G4 TEL 1-800-263-5018 FAX 1-905-755-2993 http://www.fujihelp.ca
U.S.A.	FUJIFILM U.S.A., Inc. Technical support	1100 King George Post Rd., Edison, NJ 08837 TEL 800-800-3854 FAX 732-857-3487 digitalinfo@fujifilm.com
	Repair service	1100 King George Post Rd., Edison, NJ 08837 TEL 732-857-3000 FAX 732-857-3471 njcamerarepair@fujifilm.com
Hawaii	FUJIFILM Hawaii, Inc. Technical support & Repair service	94-468 Akoki Street, Waipahu, Hl. 96797 TEL 1-808-677-3854, ext. 209 FAX 1-808-677-1443 kurt_kmett@fujifilmhawaii.com
CENTRAL & SO	UTH AMERICA	
Argentina	Imagen e informacion S.A. Technical support & Repair service	Fondo de la Legua 936 San Isidro Pcia. de Buenos Aires TEL +54-11-4836-1000 FAX +54-11-4836-1144 servtec@imageneinformacion.com.ar
Bolivia	Reifschneider Bolivia Ltda. Technical support & Repair service	Calle H N.° 5 - Equipetrol Norte - Santa Cruz TEL +591 33 44 1129 FAX +591 33 45 2919 gciagral@bibosi.scz.entelnet.bo
Brazil	FUJIFILM do Brasil Ltda. Technical support & Repair service	Av. Vereador José Diniz, 3400 - Campo Belo, Sào Paulo/SP TEL 0800-12-8600 FAX +55 11 5091-4150 camarasdigitais@fujifilm.com.br
Chile	Reifschneider SA Technical support & Repair service	Av. El Conquistador del Monte 5024, Huechuraba, Santiago, Chile TEL 02-4431500 FAX 02-4431596 ceciliacalvo@reifschneider.cl
Colombia	Animex de Colombia Ltda. Technical support & Repair service	Calle 44 N.° 13-43 Piso 2 Apartado 18001 - Bogotá TEL +57 1 338-0299 FAX +57 1 288-2208 animex@etb.net.co
Ecuador	Espacri Cia Ltda Technical support & Repair service	Bolivar 5-69 y Hermano Miguel TEL 593-72-835526 FAX 593-72-833157

Ecuador	Importaciones Espacri Cia. Ltda. Technical support & Repair service	Simón Bolivar 5-69 y Hno. Miguel - Cuenca TEL +593 783 5526 FAX +593 783 3157 portiz@fujifilm.com.ec
Mexico	Fujifilm de Mexico, S.A. de C.V. Technical support	Av. Ejercito Nacional 351, Col. Granada 11520 Mexico, D.F. TEL (52-55) 5263-5566 / 68 FAX (52-55) 5254-1508 jlgiraud1@fujifilm.com.mx
	Repair service	Av. Presidente Juarez 2007, Col. Tepetlacalco, 54090 Tlalnepantla, Edo. de Mexico TEL (52-55) 5263-5500 FAX (52-55) 5254-1508 jlgiraud1@fujifilm.com.mx
Paraguay	Errece S.R.L. Technical support & Repair service	Edificio Unitas 15 de Agosto 1035, Asunción TEL +595 21 444256 FAX +595 21 444651 jmarbulo@fujifilm.com.py
Peru	Procesos de Color S.A. Technical support & Repair service	Pablo Bermudez 111 Apartado 3794 - Esq. Arequipa - Lima 11 TEL +51 14 33 5563 FAX +51 14 33 7177 jalvarado@fujifilm.com.pe
Uruguay	Fotocamara S.R.L. Technical support & Repair service	Cuareim 1439, montevideo, Uruguay TEL +598-2-9002004 FAX +598-2-9008430 fotocam@adinet.com.uy
Uruguay	Kiel S.A. Technical support & Repair service	Maldonado 1787 Montevideo- Uruguay TEL (05982) 419 4542 FAX (05982) 412 0046 kiel@fujifilm.com.uy
Venezuela	C. Hellmund & Cia Sa Technical support & Repair service	Av. Ppal Diego Cisneros Caracas Venezuela Edf Oficentro TEL 0212-2022300 FAX 0212-2399796 hellmund@hellmund.com

EUROPE Austria	Fuji Film Oesterreich Technical support & Repair service	Traviatagasse/Pfarrgasse, 1230 Vienna, Austria TEL 0043 1 6162606/51 or 52 FAX 0043 1 6162606/58 kamera.service@fujifilm.at
Belgium	Belgian Fuji Agency Technical support & Repair service	20, Avenue Lavoisier, Wavre, 1300, Belgium TEL 3210242090 FAX 3210238562 info@fuji.be
Croatia	I&I d.o.o. Technical support	Hondlova 2, Zagreb, Croatia TEL 38512319060 FAX 2310240 dsaravanja@fujifilm.hr
	Repair service	Hondlova 2, Zagreb, Croatia TEL 38512316228 FAX 2310240 info@fujifilm.hr
Cyprus	PMS IMAGING LTD Technical support & Repair service	11, Dighenis Akritas Avenue, P.O.BOX 22315, 1586 Nicosia TEL 35722746746 FAX 35722438209 mariosashiotis@fujifilm.com.cy

Cyprus	Doros Neophytou CAMERA REPAIRS Technical support & Repair service	28B, Agiou Demetriou, Acropoli, Nicosia TEL 35722314719 FAX 35722515562 dorosn@logosnet.cy.net
Czech Republic	Fujifilm Cz., s.r.o. Technical support	U nakladoveho nadrazi 2/1949, 130 00 Praha 3 TEL 00420 234 703 411 FAX 00420 234 703 489 fricman@fujifilm.cz
Czech Republic	AWH servis Repair service	Milesovska 1, 130 00 Praha 3, Czech republic TEL 00420 222 721 525 FAX 00420 222 720 122 awh@awh.cz
Denmark	Fujifilm Denmark A/S Technical support & Repair service	Stubbeled 2, 2950 Vedbæk Denmark TEL 0045 45662244 FAX 0045 45662214 fujifilm@fujifilm.dk
Finland	Fuji Finland Oy Technical support & Repair service	Martinkyläntie 41, 01720 Vantaa, Finland TEL +358 9 825951 FAX +358 9 870 3818 fuji@fuji.fi
France	FUJIFILM France Technical support & Repair service	2, Avenue Franklin, 78186 Saint-Quentin en Yvelines, France FAX 33 1 01 30 58 58 65 direction.technique@fujifilm.fr
Germany	FUJIFILM (Europe) GmbH Technical support & Repair service	Heesenstr. 70, 40549 Düsseldorf International call TEL +49 211 50890 FAX +49 211 5089668 service@fujifilm.de National call* TEL 0180 5898980 FAX 0180 5898982 *12 Cent/Min aus dem deutschen Festnetz
Greece	FUJIFILM HELLAS S.A. Technical support & Repair service	1, Ihous & Ag. Anargiron str., 175 64 P.Phaliro, Athens, Greece TEL 0030 210 9404100 FAX 0030 210 9404397 fujifilm@fujifilm.gr
Hungary	Fujifilm Hungary Ltd. Technical support	Vaci ut 19. Budapest, 1134, Hungary TEL 3612389410 FAX 3612389401 fujifilm@fujifilm.hu
Iceland	Icephoto (Ljosmyndavorur) Technical support & Repair service	Skipholt 31, 105 Reykjavik, Iceland TEL 354 568 0450 FAX 354 568 0455 framkollun@fujifilm.is
Italy	FujiFilm Italia S.p.A. Technical support	Via Dell'Unione Europea, 4 - 20097 San Donato Milanese (MI), Italy TEL 039-02895821 FAX 039-0289582912 info@fujifilm.it
	Repair service	Fujifilm On Line - Call center TEL 039-026695272 info@fujifilm.it
Lithuania	Fujifilm Lithuania Technical support & Repair service	Gerosios Vilties str. 38, LT-03143 Vilnius, Lithuania TEL 370-5-2130121 FAX 3705-5-2134066 info@fujifilm.lt

Malta	Ciancio (1913) Co.Ltd. Technical support & Repair service	Fuji Tech Centre, Ciancio House, Cannon Road, Qormi, QRM05 TEL 0356-21-480500 FAX 0356-21-488328 info@fujifilm.com.mt
Netherlands	Fujifilm Nederland BV Technical support	Hoogstraat 39, 3011 PE, Rotterdam, The Netherlands TEL 010-2812345 FAX 010-2812334 fuji@fujifilm.nl
	Repair service	Hoevenseweg 43, 4877 LA, Etten-Leur, The Netherlands TEL 010-2812345 FAX 076-7502641 reparatie@fujifilm.nl
Norway	Fujifilm Norge AS Technical support	Lilleakerveien 10, 0283 Oslo, Norway TEL 0047-22736000 FAX 0047-22736020 http://www.fujifilm.no/mailto:post@fujifilm.no
	Repair service	Liaveien 1, 5132 Nyborg, Norway TEL 0047-55393880 FAX 0047-55195201 http://www.camera.no/ mailto:service@camera.no
Poland	Fujifilm Polska Distribution Sp. z o.o. Technical support	Poland AlJerozolimskie 178; 02-486 Warszawa TEL +48-22-517-66-00 FAX +48-22-517-66-02 fujifilm@fujifilm.pl
	Repair service	Poland, Muszkieterow 15, 02-273 Warszawa TEL +48-22-886-94-40 FAX +48-22-886-94-42 serwis@fujifilm.pl
Portugal	Fujifilm Portugal, Lda Technical support	Av. Fontes Pereira de Melo, 342, 4100-259 Porto, Portugal TEL (351) 226194200 FAX (351) 226194213 finepix@fujifilm.pt
	Repair service	Av. Fontes Pereira de Melo, 342, 4100-259 Porto, Portugal TEL (351) 226194200 FAX (351) 225194662 cameras@fujifilm.pt
Romania	CTS-Cardinal Top Systems Ltd Technical support & Repair service	112, Calea Dorobanti street, 4 flat, 1sector, Bucharest, Romania TEL 4021-230-09-82 FAX 4021-230-09-82 cts_tirla@hotmail.com
Russia	ZAO "Fujifilm RU" Technical support	Bld. 1, 10, Rozanova str., Moscow, 123007, Russia TEL +7-095-956-9858 FAX +7-095-230-6217 info@fujifilm.ru
	Repair service	18, Shelepikhinskaya Naberezhnaya str., Moscow, 123290, Russia TEL +7-095-797-3434 FAX +7-095-797-3434
Slovakia	Fujifilm Slovakia Technical support	Pribylinska 2, 831 04 Bratislava, Slovakia TEL 00421 2 44 888 077 FAX 00421 2 44 889 300 fujifilm@fujifilm.sk
	Repair service	FIS Tatracentrum, Hodzovo nam. 4 - Tatracentrum, 811 06 Bratislava, Slovakia TEL 00421 2 54 647 347 fis.tatracentrum@stonline.sk
Spain	Fujifilm España S.A. Technical support	Aragón 180, 08011 Barcelona (España) TEL 902012535 FAX 934515900 / 933230330 info@fujifilm.es
	Repair service	Aragón 180, 08011 Barcelona (España) TEL 934511515 FAX 934515900 / 933230330 tallersat@fujifilm.es

Sweden	Fujifilm Sverige AB Technical support	Sveavägen 167 104 35 Stockholm TEL 46 8 506 141 70 FAX 46 8 506 142 09 kamera@fujifilm.se
	Repair service	Sveavägen 167 104 35 Stockholm TEL 46 8 506 513 54 FAX 46 8 506513 54 kameraverkstaden@fujifilm.se
Switzerland / Lichtenstein	Fujifilm (Switzerland) AG Technical support & Repair service	Niederhaslistrasse 12, 8157 Dietlikon, Switzerland TEL +41 44 855 5154 FAX +41 44 855 5329 RepairCenter@fujifilm.ch
Turkey	Fujifilm Turkiye Sinfo A.S. Technical support	Fujifilm Plaza, Dereboyu Cad. 39 34660 Halkali, Istanbul, Turkey TEL +90 212 696 5090 FAX +90 212 696 5009 csarp@fujifilm.com.tr
	Repair service	Fujifilm Plaza, Dereboyu Cad. 39 34660 Halkali, Istanbul, Turkey TEL +90 212 696 5090 FAX +90 212 696 5010 servis@fujifilm.com.tr
U.K.	FUJIFILM UK Ltd. Technical support	St Martins Way St Martins Business Centre Bedford MK42 0LF TEL +44 (0)123 424 5383 FAX +44 (0)123 424 5285 fujitec@fuji.co.uk
	Repair service	St Martins Way St Martins Business Centre Bedford MK42 0LF TEL +44 (0)123 421 8388 FAX +44 (0)123 424 5285 fujitec@fuji.co.uk
Ukraine	Image Ukraine CJSC Technical support & Repair service	12, Kontraktova ploshcha, Kyiv 04070, Ukraine TEL +380-44-4909075 FAX +380-44-4909076 d@fujifilm.ua
MIDDLE EAST		
Iran	Tehran Fuka Co. Technical support & Repair service	229, "Fuji" Bldg., Mirdamad Blvd., Tehran 19189, Iran TEL (+98-21)2254810-19 FAX (+98-21)2221002 fuka@neda.net
Israel	Shimone Group Ltd. Technical support	Efal 33 keyriat Arie Petah Tikva 49130, Israel TEL (+) 972 3 9250666 digital@fujifilm.co.il
	Repair service	Efal 33 keyriat Arie Petah Tikva 49130, Israel TEL (+) 972 3 9250666 FAX 972 3 9250699 khaim@shimone.com
Jordan	Grand Stores Technical support & Repair service	Al- Abdali, Amman / Jordan TEL 009626-4646387 FAX 009626-4647542 gstores@go.com.jo
Qatar	Techno Blue Technical support	Blue Salon Bldg, 3rd Floor, Suhaim bin Hamad st, Al- Saad, Doha TEL 00974 44 66 175 FAX 00974 44 79 053 prabu@techno-blue.com
Saudi Arabia	Emam Distribution Co. Ltd. Technical support	P.O. Box 1716, Jeddah 21441, Saudi Arabia TEL 96626978756 FAX 96626917036 service@fujifilm.com.sa

Syria	Film Trading Company Technical support	Al-Shahbandar P.O. Box:31180 Damascus SYRIA TEL + 963 11 2218049 FAX + 963 11 44673456 f.t.c@Net.SY
	Repair service	Al-cheikh Taha P.O. Box: 6171 Aleppo SYRIA TEL + 963 21 4641903 FAX + 963 21 4641907 filmtradin@Net.SY
U.A.E.	Grand Stores Technical support & Repair service	P. O. Box 2144, Saleh Bin Lahej Building, Al Garhoud, Deira, Dubai TEL + 971-4-2823700 FAX + 971-4-2828382 photography@grandstores.ae
Yemen	Al-Haidary Trading Technical support	P.O.Box-2942 Haddah St. HTC, Sana'a, Yemen TEL 00967-1-503980 FAX 00967-1-503983
	Repair service	P.O.Box-2942 Haddah St. HTC, Sana'a, Yemen TEL 00967-1-503977 FAX 00967-1-503983
AFRICA		
Egypt	Foto Express Egypt Technical support & Repair service	426 Pyramids St., Giza, Egypt TEL (202) 7762062 FAX (202) 7760169 fotoegypt@access.com.eg
Kenya	Fuji Kenya Ltd Repair service	P.O.Box 41669-00100, Fuji Plaza, Chiromo Road, Nairobi, Kenya. TEL (254-20)4446265-8 FAX (254-20)4448515 / 7 info@fujifilm.co.ke
OCEANIA		
Australia	FUJIFILM Australia Pty Ltd Technical support Repair service	Locked Bag 5100, Brookvale NSW 2100 TEL 1800 226 355 FAX +61 (2) 9466 2854 digital @fujifilm.com.au
Fiji	Brijlal & Co. Ltd Technical support & Repair service	70-72 Cumming Street,Suva,Fiji TEL (679)3304133 FAX (679)3302777 kapadia@connect.com.fj
New Caledonia	Phocidis SARL Technical support & Repair service	58, rue Higginson - B.P.661 - 98845 TEL (00 687) 25-46-35 FAX (00 687) 28-66-70 phocidis@phocidis.nc
New Zealand	Fujifilm NZ Ltd Technical support & Repair service	Cnr William Pickering & Bush Road Albany, Auckland TEL +64-9-4140400 FAX +64-9-4140410 glenn.beaumont@fujifilm.co.nz
Papua New Guinea	Oceania PNG Limited Technical support	Section 15, Allotment 1, Reke St, Boroko NCD. PNG. Mail: PO Box 2167, Boroko NCD. PNG. TEL +675 3256411 FAX +675 3250311 oceania@daltron.com.pg

ASIA		
Hong Kong	Fuji Photo Products Co., Ltd. Technical support & Repair service	8/F.,TSUEN WAN IND. CENTRE, 220 TEXACO RD., TSUEN WAN, HONG KONG TEL (852)2406 3287 FAX (852)2408 3130 rsd@chinahkphoto.com.hk
Indonesia	PT Modern Photo Tbk Technical support & Repair service	Jl.Matraman Raya 12, Jakarta Timur 13150 TEL +62 021 2801000 FAX +62 021 8581620+62 021 2801012 assd_kmr@modemphoto.co.id
Malaysia	FUJIFILM (Malaysia) Sdn. Bhd. Technical support	Letter Box 1, Level 10, 11 & 12, Menara Axis, No 2, Jalan 51A/223, 46100 Petaling Jaya, Selangor Darul Ehsan, Malaysia TEL 603-79584700 FAX 603-79584110 digital@fujifilm.com.my
	Repair service	Letter Box 1, Level 10, 11 & 12, Menara Axis, No 2, Jalan 51A/223, 46100 Petaling Jaya, Selangor Darul Ehsan, Malaysia TEL 603-79584700 FAX 603-79584110 technical@fujifilm.com.my
Philippines	YKL Development & Trdg. Corp. Technical support	24 Sto. Domingo St., Quezon City 1100, Philippines TEL 632-7436601~06 FAX 632-7324661 digital@yklcolor.com
	Repair service	24 Sto. Domingo St., Quezon City 1100, Philippines TEL 632-7436601~06 FAX 632-7324661 tech_services@yklcolor.com
Singapore	FUJIFILM (Singapore) Pte Ltd Technical support & Repair service	10 New Industrial Road Fujifilm Building Singapore 536201 TEL 65-6380 5557 FAX 65-6281 3594 service@fujifilm.com.sg
South Korea	Korea Fujifilm Co., Ltd. Technical support	30-1, Mukjeung-dong, Jung-gu, Seoul, Korea TEL +82-2-3282-7363 FAX +82-2-2269-7435 photo@fujifilm.co.kr
South Korea	Yonsan AS Center (Fujidigital) Repair service	#301, 3F, Jeonjaland, 16-9, Hangangro3-ga, Yongsan-gu, Seoul, Korea TEL +82-2-701-1472 FAX +82-2-718-1331 1bowl@hanmail.net
South Korea	Kangnam AS Center (Digitalgallery) Repair service	2F, Hyeongin Tower, 23-2, Bangyi-dong, Songpa-gu, Seoul, Korea TEL +82-2-2203-1472 FAX +82-2-418-5572 nurijili@hanmail.net
South Korea	Busan AS Center (Digital-Sewon) Repair service	241-4, Bujeon-dong, Busanjin-gu, Busan, Korea TEL +82-51-806-1472 FAX +82-51-817-0083 merahan@yahoo.co.kr
Taiwan	Hung Chong Corp. Technical support & Repair service	No. 38, Min-Chuan E. Rd. Sec. 6, Taipei (114), Taiwan, R.O.C. TEL 886-2-6602-8988 FAX 886-2-2791-8647 dah@mail.hungchong.com.tw
Thailand	FUJIFILM (Thailand) Ltd. Technical support	388 SP Building, 8th Floor, Phayathai, Bangkok 10400 TEL +662-2730029 ext. 755 FAX +662-2730239 supaleark@fujifilm.co.th
	Repair service	388 SP Building, 8th Floor, Phayathai, Bangkok 10400 TEL +662-2730029 ext.761,762 FAX +662-2730239 warin@fujifilm.co.th

Safety Notes

- Make sure that you use your FinePix S5700 / FinePix S700 / FinePix S5800 / FinePix S800 camera correctly. Read these Safety Notes and your Owner's Manual carefully before use.
- · After reading these Safety Notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

⚠ WARNING	This icon indicates that death or serious injury can result if the information is ignored.
⚠ CAUTION	This icon indicates that personal injury or material damage can result if the information is ignored

The icons shown below are used to indicate the nature of the information which is to be observed.



Triangular icons tell you that this information requires attention ("important").



Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").



Filled circles with an exclamation mark tell you an action that must be performed ("Required").



/ WARNING

If a problem arises, turn the camera off, remove the batteries, disconnect and unplug the AC power adapter.

Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.



Unplug from power socket.

· Contact your FUJIFILM dealer.

Do not allow water or foreign objects to enter the camera.

If water or foreign objects get inside the camera, turn the camera off, remove the batteries and disconnect and unplug the AC power adapter.



Continued use of the camera can cause a fire or electric shock

Contact your FUJIFILM dealer.

Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.



Do not use in the bathroom or shower

Never attempt to change or take apart the camera. (Never open the casing.) Do not use the camera when it has been dropped or the casing is damaged.

This can cause a fire or electric shock.

Contact your FUJIFILM dealer.



 
disassemble

↑ WARNING Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord.

These actions could damage the cord and cause a fire or electric shock.



· If the cord is damaged, contact your FUJIFILM dealer.







This can cause the camera to fall or tip over and cause injury.

Never attempt to take pictures while in motion.



  
Do not use the camera while you are walking or driving a vehicle.








  This can cause an electric shock due to induced current from the lightning discharge.







↑ WARNING

Do not heat, change or take apart the batteries.

Do not drop or subject the batteries to impacts.

 
Do not attempt to recharge lithium or alkaline batteries.

 
Do not store the batteries with metallic products.



Do not use chargers other than the specified model to charge the batteries.

Any of these actions can cause the batteries to burst or leak and cause fire or injury as a result.







The use of other power sources can cause a fire

If the battery leaks and fluid gets in contact with your eyes, skin or clothing. Flush the affected area with clean water and seek medical attention or call an emergency number right away.



Do not use the charger to charge batteries other than those specified here.

The charger is designed for Fujifilm HR-AA Ni-MH batteries. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.



⚠ WARNING

When discarding or storing batteries, cover the battery terminals with insulation tape.

Contact with other metallic objects or batteries could cause the batteries to ignite or burst.



Keep Memory Cards out of the reach of small children.

Because Memory Cards are small, they can be swallowed by children. Be sure to store Memory Cards out of the reach of small children. If a child swallows a Memory Card, seek medical attention or call an emergency number.



<u>A</u> CAUTION

Do not use this camera in locations affected by oil fumes, steam, humidity or dust.



This can cause a fire or electric shock.

Do not leave this camera in places subject to extremely high temperatures.



Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.



Keep out of the reach of small children. This product could cause injury in the hands of a child.

Do not place heavy objects on the camera.



This can cause the heavy object to tip over or fall and cause injury.

Do not move the camera while the AC power adapter is still connected. Do not pull on the connection cord to disconnect the AC power adapter.



This can damage the power cord or cables and cause a fire or electric shock.

Do not use the AC power adapter when the plug is damaged or the plug socket connection is loose.



This could cause a fire or electric shock.

Do not cover or wrap the camera or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.





CAUTION

When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the batteries and disconnect and unplug the AC power adapter.



Failure to do so can cause a fire or electric shock.

When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire.



Using a flash too close to a person's eyes may temporarily affect the eyesight.



Take particular care when photographing infants and young children.

When a Memory Card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.



Request regular internal testing and cleaning for your camera.

Build-up of dust in your camera can cause a fire or electric shock



- Contact your FUJIFILM dealer to request internal cleaning every 2 years.
- Please note this is not a free of charge service





FUJIFILM

FUJIFILM Corporation 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN http://www.fujifilm.com/products/digital/