



For your safety — Read this user guide carefully to ensure proper use of the product and to avoid any danger of physical damage.



Please use your Mp4 player properly in case of explosion, fire, electric shock, etc.



When using your player, pay attention to your health, especially the hearing power.



Do not leave the player in a place subject to moisture or temperature higher than 35 C or lower than 5 C.



Do not use the earphones while driving or riding a bicycle.



Do not repair the player by yourself, or it will cause damage.



It may cause traffic accident if you turn up the volume of the earphones while walking down the street.



Do avoid getting the player wet or drop it in water.



Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.



Stop using the device or turn down the volume if you have ringing in your ears.



Please backup important data onto your computer as repair or other causes may result in data loss.



Always use the accessories provided by or approved by our company, also do not spray water on the player

Note: Please recharge the digital player before using it!

Function features

- ◆ The player supports MP3/WMA/WAV/OGG/APE/AIFF/MS_ADPCM/MPC/FLAC format music files.
- ◆ Support USB 2.0 capability, much faster than USB 1.1, to enable faster communication with your PC.
- ◆ The player can record outside voice and FM radio.
- ◆ The player has repeat functions.
- ◆ The player has Video Playback, Photo Viewer, E-book functions, etc.
- ◆ The player can power off automatically after a preset time.

Accessories



USB Cable



Earphones

 


Quick Start Guide



Installation CD

Components and Button functions

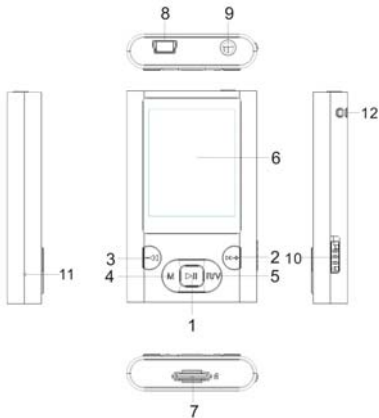

1. Power on/off or play/pause
2. Forward/Volume up
3. Backward/Volume down
4. MENU button
5. Record/Volume
6. LCD display
7. Micro SD/T-flash card slot
8. USB port
9. Earphone jack
10. HOLD button
11. RESET hole/Microphone
12. Hang strip hole

NOTE: You need a card which has songs and videos in it to play, this player can't save data without card.

Charging Li –polymer battery safely

1. Connect the PC USB port and the MP3 USB port with the provided USB cable.
2. The power sign is shown dynamic when charging, once full charged, the power sign will stop moving, power is full, please shut off the power. The charging time is approximately 3 hours.
3. To stop recharging, disconnect the USB cable.

Notes

- Before your first time use, please recharge your digital player.
- Your computer must be turned on while connected to your player for charging.
- Do not overcharge your player, or it may shorten the battery's life.
- The times of charge/discharge are no less than 300 cycles.
- The li-polymer battery is consumptive material, so recharge it periodically is needed even if the player is not be used.

CAUTION

1. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Do not disassemble, crush, short-circuit or incinerate your battery as it may cause fire, injury, burns, or other hazards.

Basic operations

Turn power on and play music

1. Connect earphone to earphone jack.
2. Switch **HOLD** ► button to unlock position.

3. Insert the card into Micro SD/T-Flash card slot in power off mode.
4. Press and hold **▶||** button to turn on and enter main menu.
5. To return main menu: Press and hold **【M】** button.
To Pause/Play: Short press **▶||** button.
To change tracks: Short press **【▶▶+/-◀◀】** button.
To turn unit off: Press and hold **▶||** button.

NOTE: Please reset your player by pressing the RESET hole while failing to power on or hanging up in power on mode.

Volume Adjustment

In Audio playing or tuning FM radio mode, short press **【R/V】** button to select volume rim, then short press **【▶▶+/-◀◀】** button to turn up/turn down the volume.

Adding/Removing files/Folders – you can use the player as a removable USB storage.

1. Plug SD card into the card slot
2. Connect the PC USB port and the player USB port with the provided USB cable.
3. Add files/folders to the USB storage's folder. Select "USB Disk" or "MTP Device",
I . Open files/folders to transfer from your computer.
II . Open My Computer → Removable Disk from the desktop.
III. Select the files/folders to transfer from your computer and draw and put them to a folder of your choice in the Removable Disk (you also can transfer files on your PC to the player using the "Copy" and "Paste" functions).

CAUTION:

- ❖ Do not remove the player while files within the USB Mass Storage are being played on your computer.
- ❖ Do not disconnect the player from your computer or press **M** / **▶||** button while transferring files, or it will cause damage to the player or data loss.

Menu Navigation

M button: Enter main menu, submenu, confirm, long press return to main menu.

Skip button **▶▶+/-◀◀** : Shift menus/long press fast backward/long press fast forward

Play/Pause button **▶||**: Play, Pause, or return.

1. Press and hold **【M】** button to enter main menu.
2. Press **【▶▶+/-◀◀】** buttons to select your desired option (e.g. Music, Movie, Record, Play, Radio, Picture, Text, Browser, Setting, Tools).

Music

Select "Music" in main menu and press **【M】** button to enter.

Press **【▶▶+/-◀◀】** buttons to select music files and press **▶||** to playback it, press **▶||** to pause.

Music Playback Submenu

In music playback mode, short press **【M】** button to enter submenu and short press **【▶▶+/-◀◀】** buttons to select your desired mode

NOTE:

1. How to delete songs: When in playing status, press **▶||** to pause, and then press **M**, shows "Delete file" and Delete all" in the end of the submenu, you can delete songs.
2. All songs/Album/Artist/Genre all these items are created by Create Playlist, when

choose these items, it shows “playlist” on the top, user can update the playlist.

After plug out the USB, player creates the playlist automatically.

Now playing

1. Press **M** to play .

All songs

1. Press **【M】** to show all songs in card
2. Press **【▶▶+/-◀◀】** to choose the song you want to play
3. Press **【M】** to play

Album

1. Press **【M】** to show all the albums
2. Short press **【▶▶+/-◀◀】** buttons to select the album you want

Artists

1. Press **【M】** to show all the artists
2. Short press **【▶▶+/-◀◀】** buttons to select the artist
3. Press **【M】** to confirm to show all the songs of this artist
4. Short press **【▶▶+/-◀◀】** buttons to select the song you want
5. Short press **【M】** to play

Genre

1. Short press **【M】** to show all the genres
2. Short press **【▶▶+/-◀◀】** buttons to select the genre
3. Short press **【M】** to choose genre you want

Favourite

1. Short press **【M】** to show the items

2. Short press **【▶▶+/-◀◀】** buttons to select the item

I . View favourite

II. Add favourite

III. Delete favourite

IV. Exit

Card folder

1.Short press **【M】** to show all the folders in card

2. Short press **【▶▶+/-◀◀】** buttons to select the folder

3.Short press **【M】** to show the files in the folder

Create playlist

Short press **【M】** to create the playlist

Setting

Short press **【M】** to show the items:

I. *Repeat*

1. Select Repeat and short press **【M】** button to enter.

2. Short press **【▶▶+/-◀◀】** buttons to select your desired option (e.g. Normal, Repeat one, Repeat All, Shuffle,Intro).

3. Short press **【M】** button to confirm.

II. *Equalizer*

1. Select Equalizer and short press **【M】** to enter.

2. Short press **【▶▶+/-◀◀】** buttons to select your desired option (e.g. Natural, Rock, PoP, Classic, Soft, Jazz, DBB, SRS WOW(*)HD).

3. Short press M button to confirm.

SRS WOW(*)HD:

- a. Select SRS WOW(*)HD and short press M button to enter.
- b. Short press 【▶▶+/-◀◀】 buttons to select your desired option (e.g.SRS WOW(*)HD,SRS WOW, User setting, Disable SRS WOW(*)HD).

User setting: Short press 【▶▶+/-◀◀】 to select: SRS 3D, TruBass, FOCUS, CENTER, DEFINITION, Speakersize, Limiter, Exit. Press M to enter and press 【▶▶+/-◀◀】 to setup it as your opinion.

SRS 3D:Adjust the effect of horizontal surround, press 【▶▶+/-◀◀】 button to adjust it.

TruBass: Adjust DBB effect, press 【▶▶+/-◀◀】 button to adjust it.

FOCUS: Adjust the effect of vertical surround, press 【▶▶+/-◀◀】 button to adjust it.

- c. Short press ▶|| button to confirm.

WOW, SRS and  are trademarks of SRS Labs, Inc.

WOW technology is incorporated under license from SRS Labs, Inc.

III. Tempo rate

1. Select Tempo rate and short press M button.
2. Short press 【▶▶+/-◀◀】 buttons to select your desired option (-8-8).
3. Short press M button to confirm.

NOTE: Only mp3 format file support “Tempo rate” mode.

IV. *Replay*

1. Select Replay mode and short press **【M】** button to enter.
2. short press **▶▶+** to select A point, short press **▶▶+** again to select B point and replay the music playback period.
3. Short press **【M】** button to cancel .

V. *Bookmark*

1. Select Bookmark and short press **【M】** button to enter.
2. Short press **【▶▶+/-◀◀】** buttons to select: Bookmark select, Bookmark delete, Bookmark add, Exit. Short press **【M】** button to enter.

Movie

In order to play video files in this digital player, you must change the video files to AMV format.

RECORD

- 1 Two ways to enter:
 - a. In main menu, short press **【▶▶+/-◀◀】** button to select “Record” mode and enter by pressing **【M】** button.
 - b. Long press **【R/V】**
- 2 Short press **【M】** button to enter submenu: Card folder, Record format, Change volume ,Short press M button to enter.
- 3 Press **【▶||】** to start and pause recording
- 4 Short press **【M】** to save the recorded file .

Play

- 1 In main menu, short press **【▶▶+/-◀◀】** button to select “Play “ mode and enter by pressing **【M】** button.
- 2 Press**【▶▶+/-◀◀】**button to select the recorded file and short press**【▶||】**button to play, short press **【▶||】** button to pause.
- 3 In playback mode, short press **【M】** button to enter submenu: Now playing, Card folder, Setting.
- 4 In pause mode, short press**【M】**button to enter submenu: Now playing, Card folder, Setting, Delete file, Delete all.
- 5 Long press **【M】** to return to main menu.

Radio(Optional function)

1. In main menu, short press **【▶▶+/-◀◀】** buttons to select “Radio“ mode, and short press **M** button to enter.
2. Short press **【▶▶+/-◀◀】** button to tune FM frequency from 87.5 to 108MHz(At intervals of 0.1MHz),short press **【M】** button to enter the submenu: Save, Record, Delete, Delete all, Auto search, Exit.

Save: Press **M** button to select **save** to save the station.

Record:Press **【M】** button to select Record , press **▶||** to start and stop, long press **【M】** to save and return.

Delete: Select the preset band, short press **【M】** button to select Delete and then short press **▶||** delete the preset band.

Delete all: Select Delete all and press ► button to delete all saved band.

Auto search: Short press **【M】** button to enter submenu. Short press **【▶▶+/-◀◀】** and **【M】** button to start “Auto Search”. You may need to wait several minutes to let all detectable stations be found and saved.

3. In normal mode, short press ► button to switch to preset mode.
4. Long press **【M】** to return to main menu.

Picture

- 1 In main menu, short press **【▶▶+/-◀◀】** buttons to select “Picture” mode and enter by pressing **M** button.
- 2 Short press **【M】** to enter submenu: Card folder, Playback set, Scan mode, Auto rotation, Delete file, Delete all. Short press **【▶▶+/-◀◀】** to select and short press **M** to enter

Card folder: Short press **【▶▶+/-◀◀】** button to select your desired photo file and press ► button to browse.

Playback set: Short press **【▶▶+/-◀◀】** button to select: Manual play, Auto play. Short press **M** to enter.

Scan mode: Short press **【▶▶+/-◀◀】** button to select file list and picture browse

Delete file: Short press **【▶▶+/-◀◀】** to select your desired photo file and press **M** to select: No or Yes.

Delete all: Short press **【M】** to select: No or Yes.

- 3 Short press and hold **【M】** to return to main menu.

TEXT

1. In main menu, short press 【▶▶+/-◀◀】 buttons to select TEXT mode and enter by pressing **M** button.
2. Press 【▶▶+/-◀◀】 to select: Local folder, Playback set, Delete file, Delete all, Exit. short press **M** to enter.

Local folder: Short press 【▶▶+/-◀◀】 button to select your desired text file and press ▶|| to browse. In manual play mode, short press 【▶▶+/-◀◀】 to turn to previous or next page. short press 【**M**】 button to enter the submenu: Bookmark select, Bookmark delete, Bookmark add, Exit.

Playback set: Short press【▶▶+/-◀◀】button to select: Manual play, Auto play. Short press ▶|| to enter.

Delete file: Short press【▶▶+/-◀◀】to select your desired text file and press **M** to select: No or Yes.

Delete all: Short press 【▶▶+/-◀◀】 to select: No or Yes.

3. In Short press 【**M**】 button to return to previous menu, press and hold【**M**】to return to main menu.

Note: the E-BOOK function only can browse .TXT files.

Browser

1. In main menu, short press 【▶▶+/-◀◀】 buttons to select browser and enter by pressing **M** button.
2. Short press 【▶▶+/-◀◀】 buttons to select Local folder and then press **M** to enter.

3. Short press **【▶▶+/-◀◀】** to choose your desired file(including Video files, music files, photo files, recorded files and TXT files, etc)
4. Short press **【M】** button to confirm and play the selected file.
5. Press and hold **【M】** button to return to main menu.

Setting

1. In main menu, short press **【▶▶+/-◀◀】** buttons to select “Setting” mode and enter by pressing M button.
2. Short press **【▶▶+/-◀◀】** buttons to select the submenu: LCD set, Language, Power off, Firmware version, Exit. Short press M button to enter the next submenu.

LCD set:

Short press **【▶▶+/-◀◀】** button to select: Dark mode, Exit. Select Dark mode and press **▶▶** button to enter, so press **【▶▶+/-◀◀】** to adjust it.

Language:

1. Select language mode and short press M button to confirm.
2. Short press **【▶▶+/-◀◀】** to select your desired option (e.g. English, French, Germany, Italian, Dutch, Portuguese, Spanish, Swedish, Czech, Denish, Poland ,Russian, Turkey, Hungarian, Romanian and so on)
3. Short press **M** button to confirm.

Power off:

Short press **【▶▶+/-◀◀】** button, choose the number (Off time :0m-120m) , short press **▶▶** button to confirm.

Firmware version -- You can scan the firmware version.

Tools

1. In main menu, short press **【▶▶+/-◀◀】** buttons to select “Tools” mode and enter by pressing M button.
4. Short press **【▶▶+/-◀◀】** buttons to select the submenu: Set calendar, System time, Stopwatch, Memory info, Key tone. Short press M button to enter the next submenu.

Set calendar

1. Press **【M】** to enter
2. Press **▶||** to return and not save
3. Press **【M】** to return and save the setting

System time

Short press **【R/V】** and **【▶▶+/-◀◀】** button to adjust the time. then press M button to save your setup.

Stopwatch

1. Press **【M】** to enter
2. Press **▶||** to start and stop the stopwatch
3. Press **【▶▶+/-◀◀】** to choose stopwatches

Memory info

Press **【M】** button to show the information of memory

Key Tone:

Select it and press **▶||** button to enter, then you can adjust from 0 to 31.

USB Driver Installation

 
 
The player will be recognized automatically under Windows Me, 2000, XP and Vista. You will need to install a driver for Win98 SE.

- (1) Put CD disk to CD driver.
- (2) Double click" setup" to install the driver automatically.
- (3) Close the DOS window, then you can use the player.

Disconnecting safely from the computer in Win98 SE—Please right-click the removable disk and choose:"remove"to disconnect the player from PC.

Format the player

If you wish to format it, right click removable disk and choose "Format" mode, then click "Start" to format in operating system. As following pictures show:

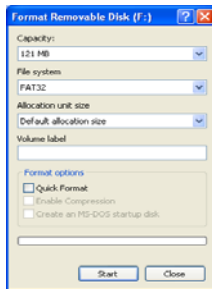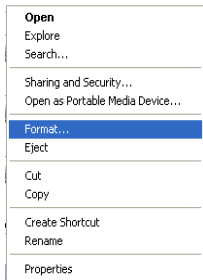

Notice

- Be careful using the player while raining outdoor.
- Attention should be drawn to the environmental aspects of battery disposal.
- Please use provided USB cable to connect the player with PC directly.
- **The user guide is only for reference. It is standard by the sample.**

The contents of our Installation CD had been detected by the following anti-virus software:

| | |
|-----------------------|----------------|
| Norton Antivirus | VER:15.0.0.58 |
| Kaspersky | VER:7.0.0.125 |
| PC-Cillin | VER:16.00.1671 |
| McAfee VirusScan Plus | VER:12.0 |

| | |
|--------------------|-----------------|
| Symantec Antivirus | VER:10.0.1.1000 |
|--------------------|-----------------|

Video Conversion

For movie and music synchronisation and conversion, please use MPMANAGER software supplied in the CD ROM.

This software can be used also for UPDATE of your player

MPMANAGER manual is included in your CDROM

Technical Specification

| No. | Name | Description |
|-----|-----------------------|--|
| 1 | USB Interface | USB2.0 (High Speed) |
| 2 | LCD Display | 1.5" CSTN(128x128) |
| 3 | Power supply | Li-Polymer |
| 4 | S/N ratio | $\geq 80\text{dB}$ |
| 5 | Audio Frequency Range | 20Hz – 20kHz |
| 6 | EQ | Natural, Rock, Pop, Classic, Soft, Jazz, DBB, SRS WOW(*)HD |
| 7 | Support file format | Audio:MP3/WMA/WAV/OGG/APE/MS_ADPCM/ MPC/AIFF/FLAC Video: AMV Picture: BMP/JPG/GIF |
| 8 | FM | Normal band:87.50 -- 108.00MHz |
| 9 | File System | FAT16, FAT32 |
| 10 | Operating Moisture | 10%—75% |
| 11 | Operating Temperature | 5°C ---35 °C (41 °F---95 °F) |

Ver: 1.1



For more information please check our website

www.mpmaneurope.com



A pleine puissance, l'écoute
prolongée du baladeur peut
endommager l'oreille de
l'utilisateur

