



INSTRUCTION MANUAL

XV-DK700HDMI



IMPORTANT
READ THESE INSTRUCTIONS
BEFORE USE AND RETAIN
FOR FUTURE REFERENCE.

PROGRESSIVE SCAN

IMPORTANT SAFEGUARDS

 
For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference. Carefully observe all warnings, precautions and instructions on the appliance and in the operating instructions, and adhere to them.

INSTALLATION

Water and Moisture - Do not use powerling operated appliances near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.




Heat - Do not place the appliance near or over a radiator or heat register, or where it is exposed to direct sunlight.

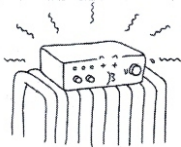

Ventilation - The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the appliance, and to protect it from overheating, these slots and openings must never be blocked or covered.

 
- Never cover the slots and openings with a cloth or other materials.




- Never block the slots and openings by placing the appliance on a bed, sofa, rug or other similar surface.



 - Never place the appliance in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.



 Accessories - Do not place the appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or an adult, and serious damage to the appliance. Use only a cart, stand, tripod, bracket, or table recommended.



- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



WALL or Ceiling Mounting - If your appliance can be mounted to a wall or ceiling, mount it only as recommended.

USE

Power Source - This appliance should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those appliances designed to operate from battery power, or other sources, refer to the operating instructions.

 


Grounding or Polarization - This appliance is equipped with a polarized AC power cord Plug (a plug having one blade wider than the other), or with two-wire grounding type plug (Plug having a second pin for grounding). A follow the instructions below:

- For the appliance with a polarized AC power Cord plug:
This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing The plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet Installed. Do not defeat the safety purpose of the Polarized plug by forcing it in.



Overloading - Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



When Not in use - Unplug the power cord of the appliance from the outlet when left unused for a long period of time.
To disconnect the cord, pull it out by grasping the plug. Never pull the plug out by the cord.



Power-Cord Protection - Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

 


Lightning - For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and powerline surges.

Cleaning - Unplug the appliance from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the appliance. Clean the appliance only as recommended.



Object and Liquid Entry - Never push objects of any kind into the appliance through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the appliance.




ANTENNAS

Outdoor Antenna Grounding - If an outdoor antenna or cable system is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits. **WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.**

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code provides information with respect to proper grounding of the mast and supporting structure. Grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

 Antenna Grounding According to the National Electrical code

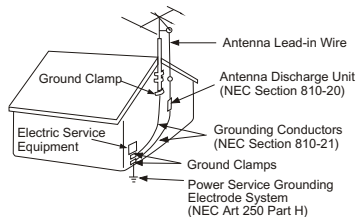

NEC-NATIONAL ELECTRICAL CODE

SERVICE

Damage Requiring Service-Unplug the appliance from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.



- If liquid has been spilled or objects have fallen into the appliance.



 
- If the appliance has been exposed to rain or water.



- The appliance does not appear to operate normally or exhibits a marked change in performance. - This indicates a need for service.



- If the appliance does not operate normally when following the operating instructions, adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to normal operation.



- If the appliance has been subject to excessive shock by being dropped, or the cabinet has been damaged.



Servicing - Do not attempt to service the appliance yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement parts-When replacement parts are required, be sure the service technician has used replacement parts specified that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check - Upon completion of any service or repairs to the appliance, ask the service technician to perform routine safety checks (as specified) to determine that the appliance is in safe operating condition.

 


1. **WARNING** : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
2. **WARNING**: The mains plug is used as the disconnect device, the devices shall remain readily operable.

FRONT PANEL AND REAR PANEL ILLUSTRATION


FRONT PANEL

The front of the DVD player

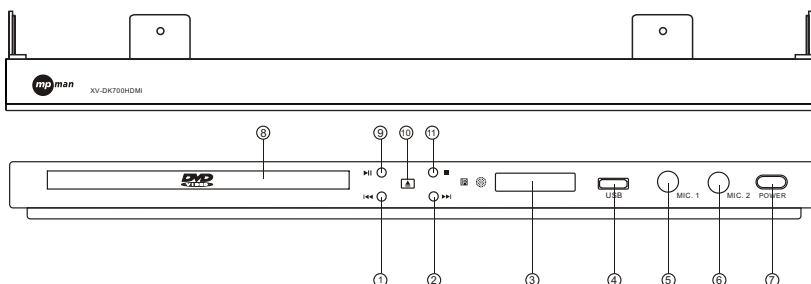

- | | | | |
|-----------|--------------|--------------|--------------|
| ① PREV | ④ USB FAUCET | ⑦ POWER | ⑩ OPEN/CLOSE |
| ② NEXT | ⑤ MIC1 | ⑧ CD DOOR | ⑪ STOP |
| ③ DISPLAY | ⑥ MIC2 | ⑨ PLAY/PAUSE | |

 
The back of the DVD player

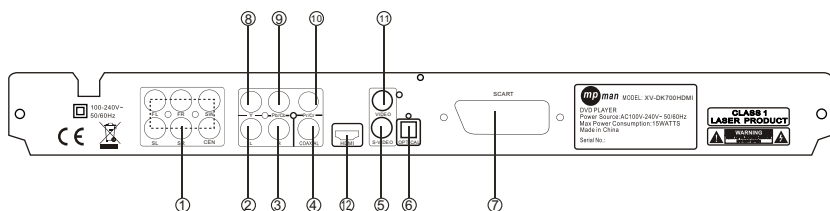

- | | | | |
|---------------------|--------------------------------------|---------------------|---------------------|
| ① 5.1CH output jack | ④ Digital signal COAXIAL output jack | ⑦ SCART output jack | ⑩ Pr/Cr output jack |
| ② LEFT output jack | ⑤ S-Video output jack | ⑧ Y output jack | ⑪ VIDEO output jack |
| ③ RIGHT output jack | ⑥ SCART output jack | ⑨ Pb/Cb output jack | ⑫ HDMI output jack |

REMOTE CONTROL

 
- When use, direct the remote control to the infra-red sensor (within 45 degrees)
- Do not put remote control near to the place with high temperature or moisture
- Do not put water or any other object on remote control
- Do not use new and old batteries or different type batteries together
- Please replace batteries when find remote control is out of work or weak sensitivity.

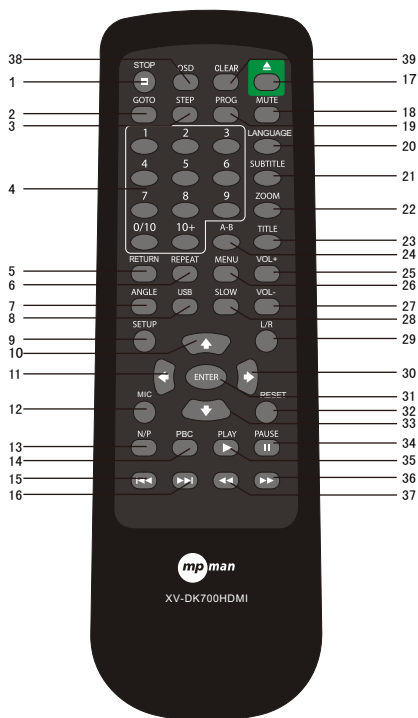

- | | |
|--------------|-------------|
| ① STOP | ②① SUBTITLE |
| ② GO TO | ②② ZOOM |
| ③ STEP | ②③ TITLE |
| ④ 0-9 NUMBER | ②④ A-B |
| ⑤ RETURN | ②⑤ VOL + |
| ⑥ REPEAT | ②⑥ MENU |
| ⑦ ANGLE | ②⑦ VOL - |
| ⑧ USB | ②⑧ SLOW |
| ⑨ SETUP | ②⑨ L/R |
| ⑩ UP | ③⑩ RIGHT |
| ⑪ LEFT | ③① ENTER |
| ⑫ MIC | ③② RESET |
| ⑬ N/P | ③③ DOWN |
| ⑭ PBC | ③④ PAUSE |
| ⑮ PREV | ③⑤ PLAY |
| ⑯ NEXT | ③⑥ FWD |
| ⑰ OPEN/CLOSE | ③⑦ REV |
| ⑱ MUTE | ③⑧ OSD |
| ⑲ PROG | ③⑨ CLEAR |
| ⑳ LANGUAGE | |

OSD SETUP

 This player allows you to customise the performance to your personal preferences.

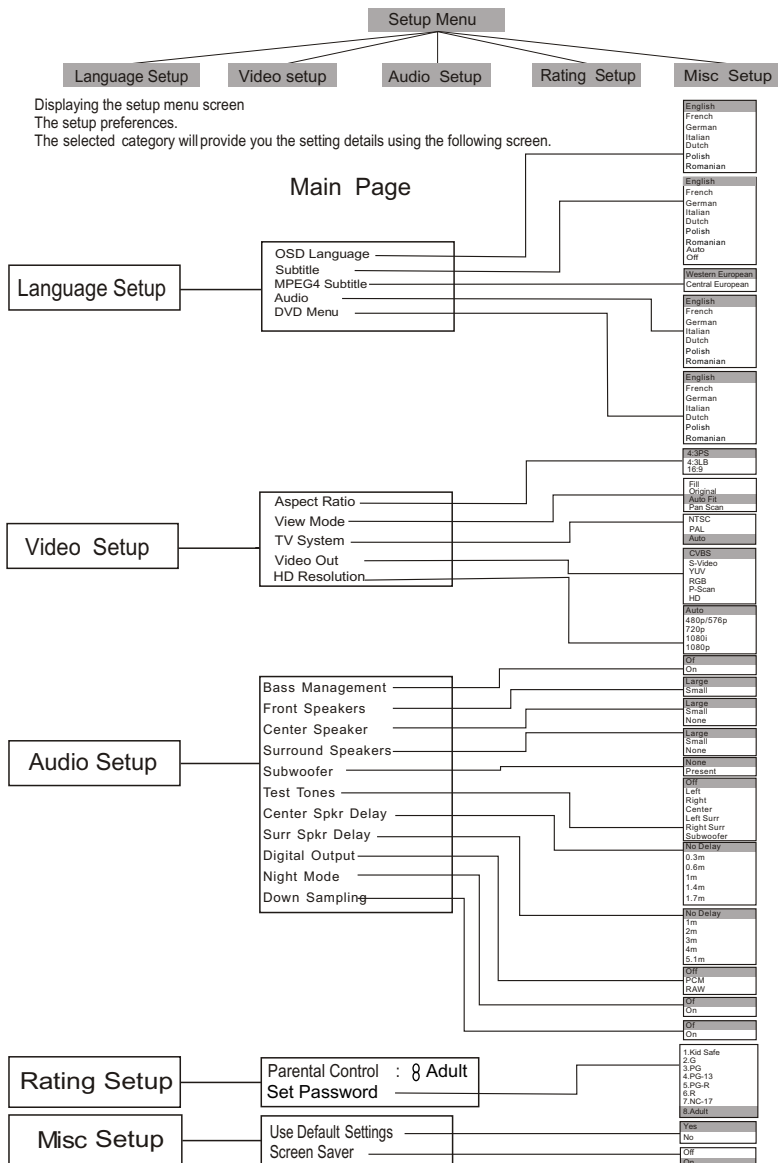

Set on "PARENTAL CONTROL" under "Rating", Press "enter" and input code 8888 (The original factory code is 8888). After input and confirm the code, press "PARENTAL CONTROL" and choose the desired rating. Move below to "SET PASSWORD", press enter and input the code "8888", then input the new code, Under "SET PASSWORD", input again the code, and confirm. The function of "PARENTAL CONTROL" is effective.

REMOTE CONTROL OPERATION

- OPEN/ CLOSE**
- To open the disc tray, press OPEN/CLOSE
To close the disc tray, press OPEN/CLOSE again.
- TITLE**
- During DVD playback, press TITLE to display the DVD title menu or play the first title.
Note: this function is subject to the disc.
- MENU**
- During DVD playback, press MENU to display the disc menu of the current title.
Note: This function is subject to the disc
- RESET**
- Im Stop Modus, drücken Sie diese Taste um den DVD-Player wieder auf den Standardmodus zu setzen, dies wird nicht Ihre Passwort-Einstellung wiederherstellen.
- OSD**
- During VCD/DVD playback, press OSD to display the current time counter position as follows.
- | | |
|--|--|
| <p>VCD 2.0</p> <p>Time _ _ : _ _ / _ _ : _ _</p> <p>↓ ↓</p> <p>Elapsed time Left time for the current track</p> | <p>DVD VIDEO</p> <p>Time _ _ : _ _ / _ _ : _ _</p> <p>↓ ↓</p> <p>Elapsed time Left time for the current track</p> |
|--|--|
- PBC**
- During VCD/SVCD playback, Press PBC to select the mode of PBC On or PBC Off
PBC is: playback control used to navigate VCD/SVCD
- 0-10 Keys**
- These keys are used to input the time, as well as title, chapter and track numbers
 - When a CD,DVD or VCD is playing (with PBC off), press the 0-10 keys to select a track Directly.
- SLOW**
- When a numeric item is displayed on the screen, press the 0-10 keys to select the desired entry,
 - During MPEG4,DVD, VCD or SVCD playback, press SLOW for slow motion playback.
 - Once you press SLOW, the disc will play at 1/2, 1/4,1/6 and 1/8 normal speed.
- PREV**
- Press PLAY to resume normal playback.
- NEXT**
- During MPEG4,DVD, CD or VCD playback, press PREV to play the previous chapter,title or track.
 - During MPEG4,DVD, CD or VCD playback, press NEXT to play the next chapter, title or track.
- REPEAT**
- Each press of the REPEAT button will change the repeat mode.
 - During VCD,CD ,MP3playback,there are three modes: repeat Single, repeat All and Off.
 - During MPEG4/DVD,playback,there are three modes: repeat charpter,repeat title and Off.
 - Note:During VCD playback,the PBC mode must be set to Off
- A-B**
- During playback, press A-B to select point A
 - Press it again to select point B. The player will repeat the section from A to B automatically.
 - Press A-B a third time to cancel A-B repeat and clear points A and B.
 - Note: During MPEG4/CD/VCD/SVCD playback,points A and B must be within the same track.
- REV**
- During MPEG4/DVD playback, points A and B can be selected from different chapters.
 - During MPEG4/DVD, CD or VCD playback, press REV To in reverse.
 - the disc at 2, 4, 8 and 16 times speed
- FWD**
- Press PLAY to resume normal playback.
 - During MPEG4/DVD, CD or VCD playback, press FWD to forward. The disc at 2, 4, 8 and 16 times speed.
 - Press PLAY to resume normal playback.
- N/P**
- Press N/P when in STOP mode to select the mode from PAL / AUTO /NTSC .

REMOTE CONTROL OPERATION

MUTE

Press MUTE to turn off the audio.
Press MUTE again to resume normal sound.

R/L

During VCD/SVCD playback, press R/L repeatedly to select the channel of audio-output: Left / Right / Mix / Stereo.

CLEAR

Press CLEAR to delete the numbers you have entered.

PLAY/PAUSE

Press PAUSE during playback to pause playback.
Press again to step forward one frame
Press PLAY to resume normal palyback.
NOTE:the step function is not available during CD playback

STOP

Press STOP once during playback to stop and hold playback.
Press PLAY to resume playback from the point you have pressed STOP.
Press STOP twice to stop playback completely.

 
RETURN

When the PBC is on, press return ,and you can select once again from the menu displaying.
This function is only valiable to VCD.

ZOOM

During VCD/SVCD/DVD/MPEG4 playback, press ZOOM to magnify the image

as follows:



This function can zoom,can't lessen

STEP

When playing MPEG4/DVD,DVD ,SVCD disc ,press STEP once , the picture changes to next frame ,Press PLAY to resume normal play.

SETUP

Press the SETUP button on you remote control to access the setup menu.The setup menu is a Multi-level Menu.
Use the ▼ or ▲ buttons to select the menu option that you need.
Use the ◀ and ▶ to go back to previous level menu or to enter the next level menu.
Press ENTER button to confirm selection.
Press SETUP button to exit setup.

RESET

Under the stop mode,Press this key to reset the DVD player to default mode,this will not recover your Password set up.

REMOTE CONTROL OPERATION

VOL

Press VOL + to increase the volume.
Press VOL - to reduce the volume.

ANGLE

During DVD playback,
Press ANGLE to view scenes from different camera angles.
Press ANGLE repeatedly to change from one camera angle to another.
Note: This function is disc specific.

SUBTITLE

 
During DVD playback,
Press SUBTITLE repeatedly to select from up to 32 subtitle languages.
Note: This function is disc specific (language will vary).

LANGUAGE


Press LANGUAGE repeatedly to select from up to 8 audio languages/formats during DVD playback.
Press repeatedly to select from up to 4 audio languages/formats during SVCD playback.
Note: This function is disc specific LANGUAGE

GOTO

During MPEG4/DVD,VCD playback,press GOTO, and the menu will display as follow:



 Use ⬆ ⬆ to select TITLE ,CHAPTER,TIME.
Use the number keys to input the desired time or track, then press ENTER to Confirm.
During DVD playback, press SEARCH, and the menu will display as follow:



Use ⬆ ⬆ to select TRACK, TIME or DISC TIME.
Use the number keys to input the desired time, title or chapter, then press ENTER to confirm.

Note: 1) TIME searches for an exact time in the track.
2) TRACK searches for a desired title or chapter.
3) For some DVD discs, the search function is unavailable.

USB

Choose this button to setup DVD, USB mode

Disc only: if you're only playing Disc (but no usb), after you put disc into the tray then it will play disc automatically.

USB only: if you're only playing USB (but no disc), after you insert USB into USB port, you have to press 'USB' button on the remote control, then you can see 'Disc' shown on the screen, press 'UP/DOWN' button to choose 'USB' and then press 'Enter' button thus can play USB.

USB/DISC both: if you put disc in the tray and also insert the usb into the usb port at the meantime, then it will play the disc automatically. if you want to switch to play usb, you have to press 'stop' button, then press 'USB' button and choose 'USB' by pressing 'UP/DOWN' button, then press 'Enter' and it play USB then. and if you want to switch to play 'DISC' again, then also you have to press 'stop' button, then press 'USB' button again, choose 'DISC' and press 'Enter' button thus could play disc.

Karaoke (Microphone)

- 1.connect microphone into the Mic output on the front panel of the dvd player
- 2.press 'Mic' button on remote control, then change "Karaoke: Off" to "Karaoke: On" by pressing 'Enter' button, press 'Mic' button again to confirm.
- 3.if you want to adjust "Echo" and "Volume", please press "Mic" button, then press "Enter" button to choose "Echo" or "Volume" and adjust accordingly.

PROG

Press PROG to get program menu when reading DVD & VCD, then program your wanted songs. (DVD programme needs TITLE and MENU.)

REMOTE CONTROL OPERATION

Program:

When playing music, press “right”, “up” or “down” and “enter” to choose edit mode, and then Press “left” and “enter” to choose the music you want.

After that, press “right” and “enter” to choose “add to program”, and then “up” and “enter” to choose “program view”, next press “up” to choose “edit mode” and then press “Left” and “enter” to choose the music, press “play” to play the music.

Cancel program:

After program, press “stop” twice, and press “right” to choose “edit mode”, and then press “left” to choose the music you’d like to cancel and “enter” to confirm your operation.

Press “right” and “enter” to choose “clear program”, then press “Right” to “browse view” and return to play in order.

Note :

If you are playing songs or viewing Jpeg pictures, the maximum supported files on each folder is 500.

In the case of having more than 500 pictures or songs, then you need to create a new folder and make sure each of them. Do not exceed more than 500 files. For example: if you have 1020 files then you need to create 3 different folders where in 2 of them you will need to record 500, Files in each and the third folder with the remaining 20 files. This way the unit will be able to recognize the folders and thus play all the content .

HDMI Function:

1. Connect HDMI cable to HDMI output of the rear panel of DVD player and TV.
2. Set TV mode to 'HDMI' mode
3. Press 'setup' button on remote control, in system setup/HD output, please choose the HDMI mode (720P, 1080i, 1080P) you want.

Note :

If you are playing Mp3 songs or viewing Jpeg pictures, the maximum supported files on each folder is 500. In the case of having more than 500 pictures or songs, then you need to create a new folder and make sure

3 different folders where in 2 of them you will need to record 500, Files in each and the third folder with the remaining 20 files. This way the unit will be able to recognize the folders and thus play all the content .

Support Hard Disc

This dvd player support an external hard disc up to 250G (but only if the hard disc file system format is FAT32), if the file system format is NTFS, FAT or others, please find professional people to change it to FAT32.

TROUBLE SHOOTING

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

- Check the batteries of remote control and make sure that they are powerful and in good conductivity
- Direct the remote control to the IR sensor of the player.
- Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

- Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray.

Type of Disc	DVD/VCD/HDCD/CD/DVD±R/RW, MPEG4/WMA, Kodak Picture CD	Frequency Response	CD: 4Hz 20KHz (EIA) DVD: 4Hz 22KHz (48K) 4Hz 44KHz (96K)
Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3	S/N ratio	> 92 dB
		THD	< 0.04%
Signal Output	Color System: PAL/NTSC/MULTI Audio System: AC-3 Digital output Audio DAC 16bit/48KHz Video Output: 1 Vpp (at 75 ohm) Audio Output: 2 Vpp	Output Terminals	Video (composite) output X 1 S-Video output X 1 2.0ch output X 1 Digital coaxial output X1 YPbPr output X1 Scart output X1 Optical output X1 HDMI output X1
		Power input	AC100-240V~ 50/60Hz 15W
		Dimensions	Body size : W360XD235XH38mm Net weight : 2.8KG

Notes :

- There are many non-standardized MPEG4/DVD/WMA/CD-recording procedures and copyprotection procedures now in use, and many different kinds of DVD±R, DVD±RW, CD-R and CD-RW blank disks. Therefore, in some cases read errors or read delays may be encountered. This is not a defect of the device.
- For CD-RW of CD-R, it may not be played according to the type of this disc.

