 


FEATURE CHART

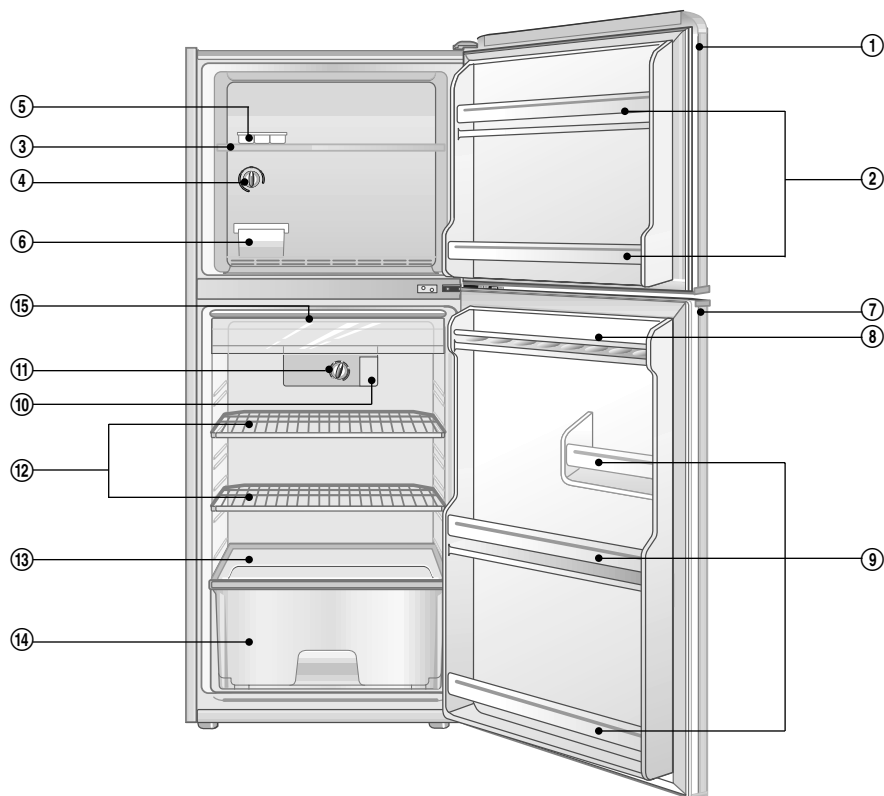

- | | |
|------------------------------------|---|
| ① FREEZER DOOR GASKET | ⑧ EGG POCKET |
| ② FREEZER POCKET | ⑨ REFRIGING-ROOM POCKET |
| ③ FREEZER REMOVABLE SHELF | ⑩ LAMP COVER |
| ④ FREEZER TEMPERATURE CONTROL KNOB | ⑪ REFRIGERATOR TEMPERATURE CONTROL KNOB |
| ⑤ ICE TRAY | ⑫ REMOVABLE SHELF |
| ⑥ ICE BOX | ⑬ GLASS SHELF |
| ⑦ REFRIGING-ROOM DOOR GASKET | ⑭ VEGETABLE BOX |
| | ⑮ CHILLED TRAY |

Here are the features of your new refrigerator.

Take a moment to know all the features and convenience it was designed to provide. Numbers match those in the illustration on page 1.

Ice tray

Fill tray 3/4 full to allow expansion of water during freezing. Place tray in freezer chest. To release cubes, twist lid slightly.

Removable shelf

Shelves can be removed by pulling forward. The shelf can be placed at your desirable position.

Crisper

May be used for fruit and vegetable storage. Both the crisper and its cover shelf are removable for easy cleaning. Simply slide forward to remove.

Egg Pocket

Egg supporter in this pocket can be turned upside down. May be used for small size goods.

Convertible Function

This refrigerator is designed to convert the function. Refrigerator can be converted to refrigerator of 'function off'

- CAUTION:**
1. Be sure to check with your voltage, before inserting the power supply cord into the socket.
 2. Contact the earthing conductor to this unit with an attachment earthing screw.
 3. Don't make it spill to this unit.
 4. Don't work with flammable spray, such as painting, near this unit.
 5. Don't put ignitable materials, such as benzine, L.P. Gas, alcohol, etc., into this unit.
 6. Be careful of the leakage of any gas equipment near this unit.
 7. Be sure not to hold to the door of this unit by children.
 8. Be sure not to reinsert the power supply cord within 5 minutes after release it from socket. If not, a trouble may be occurred to compressor.

HOW TO INSTALL

Location

Install refrigerator in a convenient location away from extreme heat and cold. Allow sufficient clearance between the refrigerator and side wall so it is easy for refrigerator to radiate heat. Refrigerator is not designed for recessed installation.

Leveling

Level refrigerator so it rests solidly on the floor, without rocking. There are two Adjustable foot, one at each front corner. Turn to the left to raise a corner, to the right to lower it. Use shims under rear corners, if necessary.

If you want, the refrigerator door to close when not held open, adjust feet so that the front of the refrigerator is raised. However, front corners must be level with each other, and rear corners with each other.

NOTE: Make sure all packing material is removed. If the shipping tape has left a residue on the door, clean it with isopropyl alcohol (most rubbing alcohol is this type). Do not use a solvent, such as cleaning fluid, nor an abrasive cleanser.

HOW TO CLEAN



CAUTION

 
To Avoid The Risk of Electrical Shock or Death unplug the power cord before replacing a burned out light bulb or cleaning.

- Cleaners** : Do not use harsh, abrasive cleaners, heavy-duty cleaners, or solvents on any surface. These cleaners may cause cracking, discoloring or scratching the surface.
- Exterior** : Wash with warm, soapy water, rinse and dry.
Use appliance polish or wax periodically to keep the exterior looking like new.
- Door gasket** : Clean at least twice a year with mild soap and water. Rinse and dry. Apply a light film of petroleum jelly to the gaskets to keep them soft.
- Interior** : Wash the liner with warm, soapy water, rinse and dry.

HOW TO OPERATE

TEMPERATURE CONTROL

Temperature is controlled automatically. The TEMPERATURE CONTROL at the inside of the refrigerator and freezer section control the degree of cooling of each compartment.

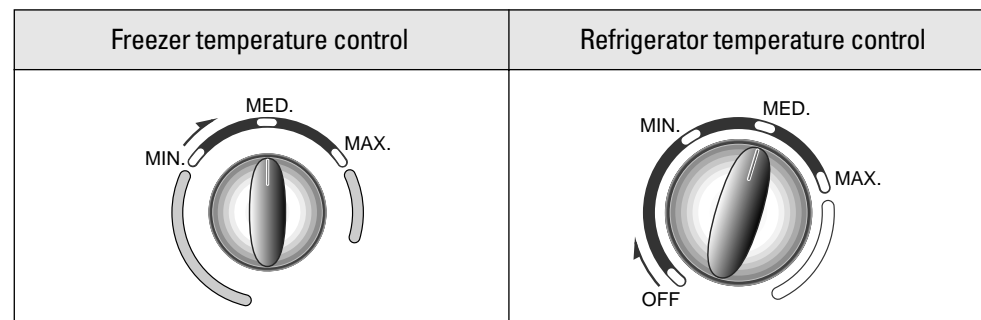

ECONOMIC FUNCTION

When you have small foods to stuff or the stuffed is already frozen enough, use this function and you'll save the electric power consumption.

OFF FUNCTION

When you want to use "FREEZER" only, set the "REFRIGERATOR CONTROL DIAL" at "OFF"

Starting your new refrigerator

1. Clean the refrigerator thoroughly: Wipe the outside with a soft dry cloth, the inside with a damp cloth.
2. Set TEMPERATURE CONTROL at MED.
3. Connect the power supply cord.

To change temperature

You may want to adjust the control according to the season and your needs. When adjusting the temperature:

Turn TEMPERATURE CONTROL toward MAX for colder temperature in refrigerator and freezer sections, and toward MIN for warmer temperature in refrigerator and freezer sections.

Allow approximately 2 hours for temperature to stabilize. Then check to see if further adjustments are needed.

WHAT TO DO...

When out of operating for a long time.

- Remove the power supply cord.
- Dry your refrigerator, opening the door for 2-3 days.

When you get ready to move

- Securely fasten removable interior parts (or move and package them separately).
- Do not lay your refrigerator horizontally, or compressor may be damaged.

When you need service; Before calling for service check

a few things noted below for yourself first.

If the refrigerator is not operating:

- Is the power supply cord unplugged?
- Is home fuse blown or circuit breaker off?

If refrigerator is warmer than usual:

- Has the door been open frequently or for a long period?
- Is refrigerator overcrowded preventing good air circulation?
- Is the clearance between side and rear plate of the refrigerator and the wall allowed sufficiently?

If there are unusual sounds:

 
- Is refrigerator placed on the level?
- Are foreign objects behind the refrigerator?
- Are dishes on refrigerator shelves vibrating?
- If so, re-arrange the dishes.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similiary qualified person in order to avoid a hazard.



REFRIGERATOR INSTRUCTION MANUAL

Model No.: **GV-251**

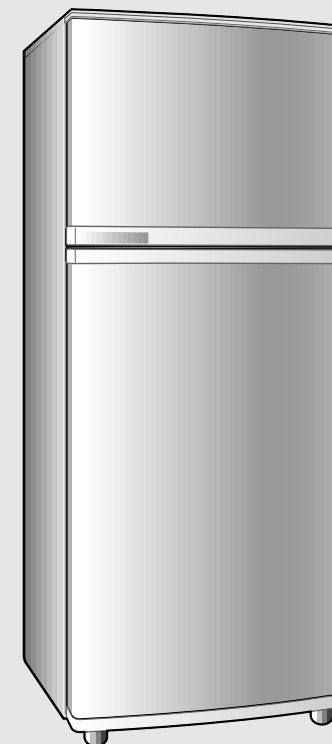

Thank you for selecting this refrigerator.
Before using this refrigerator, please read this manual carefully.