

Gigaset

S810

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.



GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY



Gigaset S810 – more than just a telephone

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are excellent, providing you with first-class voice quality in handsfree mode, while the various ports (Bluetooth, USB) offer you enormous flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

Your phone can do a whole lot more:

- ◆ You can use Bluetooth™ for wireless communication with other devices (e.g. headsets) that also use this technology.
- ◆ You can synchronise your directories on your telephone, mobile phone and PC via Bluetooth™ or the USB port using the Gigaset QuickSync software (→ page 79).
- ◆ You can save appointments (→ page 54) and anniversaries, e.g., birthdays (→ page 39), in your phone and it will remind you of them in advance.
- ◆ You can designate important people as VIPs to identify important calls from the ringtone (→ page 36).
- ◆ You can assign a picture to entries in the directory – in future the picture will appear every time you receive a call from this number (→ page 36).
- ◆ If you do not want to take calls where the caller has withheld their number, just set your handset to only ring if Calling Line Identification has not been withheld (→ page 67).
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient (→ page 67). VIP calls are still connected.
- ◆ You can assign important numbers to the number keys on your phone. The number is then dialled by simply pressing a key (→ page 63).
- ◆ Adapt your Gigaset to suit your handsfree requirements (→ page 66).
- ◆ View your personal pictures as a screensaver slide show (→ page 64).
- ◆ You can set the display to large font to increase readability in particularly important situations (e.g., the directory and lists) (→ page 65).
- ◆ You can adapt the menu display to suit your individual requirements so that only the most important functions (**standard mode**) or all functions (**expert mode** ) are displayed (→ page 26). Menu options that are only available in expert mode are marked with the  icon.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. Details about our ECO DECT products can be found at www.gigaset.com/service.

You can find additional information about your phone at www.gigaset.com/gigasetS810.

Have fun using your new phone!

The handset at a glance



- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 17)
- 3 **Side keys**
Set call (→ page 66) or ringtone volume (→ page 67)
- 4 **Display keys** (→ page 21)
- 5 **Message key** (→ page 41)
Access to call and message lists;
Flashes: new message or new call
- 6 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 7 **Hash key**
Keypad lock on/off (press and hold in idle status);
toggles between upper/lower case and digits
- 8 **Mute key** (→ page 32)
Mute the microphone
- 9 **Microphone**
- 10 **Recall key**
- Consultation call (flash)
- Insert a dialling pause (press and hold)
- 11 **Star key**
Ringtone on/off (press and hold);
with an open connection: switch between pulse dialling/tone dialling (press briefly);
text input: open table of special characters
- 12 **Headset socket** (→ page 18)
- 13 **Key 1**
Dial network mailbox (press and hold)
- 14 **Talk key**
Flashes: incoming call;
Accept a call; open redial list (press briefly);
start dialling (press and hold);
When writing an SMS: send SMS
- 15 **Handsfree key**
Switch between earpiece and handsfree mode
- 16 **Control key** (→ page 20)
- 17 **Signal strength** (→ page 17)
Green: Eco Mode (→ page 53) activated


Base



Registration/
Paging key
(→ page 57)

Display symbols

The following symbols are displayed dependent on the settings and the operating status of your telephone:

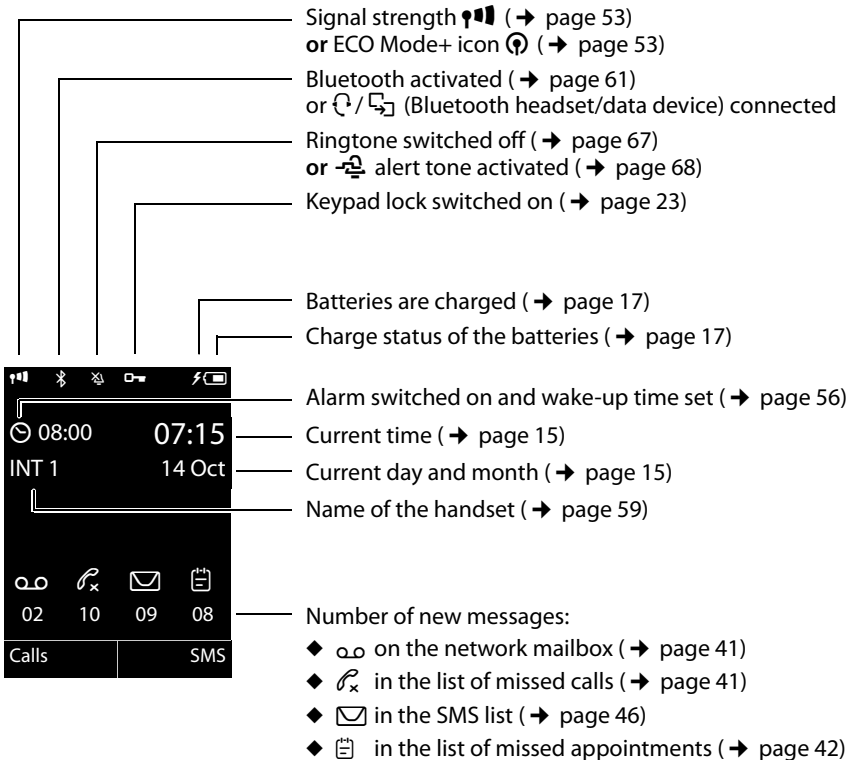

Signalling

External call (→ page 30)



Alarm (→ page 56)



Internal call (→ page 57)



Anniversary (→ page 54)



Appointment (→ page 54)



Contents

Gigaset S810 – more than just a telephone	1
The handset at a glance	2
Display symbols	3
Safety precautions	7
First steps	8
Checking the package contents	8
Setting up the base and charger (if included)	9
Connecting the base	9
Connecting the charger (if included)	10
Setting up the handset for use	11
Changing the display language	14
Setting the date and time	15
Connecting the headset	18
Connecting the USB data cable	18
What would you like to do next?	19
Using the phone	20
Control key	20
Display keys	21
Keys on the keypad	21
Side keys	21
Correcting incorrect entries	21
Using the menus	22
Activating/deactivating the handset	23
Activating/deactivating the keypad lock	23
Using this guide	24
Menu overview	26
Making calls	29
Making an external call	29
Ending a call	29
One Touch Call	29
Accepting a call	30
Calling Line Identification	30
Notes on calling line display (CLIP)	31
Handsfree mode	31
Switching to mute	32
Making calls using network services	33
Call waiting during an external call	33
Call divert (CD)	33
Consultation call, call swap, conference	34
Further functions	35

Using the directory and lists	36
Directory	36
Redial list	40
Incoming SMS message list	40
Call lists	40
Message key function	41
List of missed alarms	42
Making cost-effective calls	43
Automatic network provider code (preselection)	43
SMS (text messages)	44
Writing/sending an SMS	44
Receiving an SMS	46
SMS with vCard	47
Notification via SMS	48
SMS mailboxes	48
Setting SMS centres	49
SMS services	50
SMS on a PABX	50
Activating/deactivating SMS function	50
SMS troubleshooting	51
Using the network mailbox	52
Configuring fast access for the network mailbox	52
Viewing the network mailbox message	52
ECO DECT	53
Setting an appointment (calendar)	54
Displaying missed appointments, anniversaries	55
Setting the alarm clock	56
Using multiple handsets	56
Registering handsets	56
De-registering handsets	57
Locating a handset ("Paging")	57
Changing the base	57
Making internal calls	57
Listening in to an external call	59
Changing the name of a handset	59
Changing a handset's internal number	59
Using a handset as a room monitor (Babyphone)	60
Using Bluetooth devices	61

Handset settings	63
Quick access to numbers and functions	63
Changing the display language	64
Setting the display	64
Setting keypad illumination	65
Activating/deactivating auto answer	65
Changing the speaker/earpiece volume	66
Setting a handsfree profile	66
Changing ringtones	67
Resource Directory	68
Activating/deactivating advisory tones	69
Setting your own area code	69
Restoring the handset default settings	69
Setting the base	70
Activating/deactivating music on hold	70
Repeater support	70
Protecting against unauthorised access	70
Resetting the base to the factory settings	70
Connecting the base to the PABX	71
Dialling modes and recall	71
Saving an access code (outside line code)	71
Setting pauses	72
Switching temporarily to tone dialling (DTMF)	72
Customer Service & Assistance	73
Questions and answers	74
Authorisation	75
Guarantee Certificate	75
Protecting our environment	76
Appendix	77
Caring for your telephone	77
Contact with liquid	77
Specifications	77
Writing and editing text	78
Additional functions via the PC interface	79
Accessories	81
Mounting the base on the wall	84
Mounting the charger on the wall	84
Index	85

Safety precautions

Warning

Be sure to read this user guide and the safety precautions before using your telephone. Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 77**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.



Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof (→ page 77).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your Gigaset to a third party, make sure you also give them the user guide.



Remove faulty bases from use or have them repaired by our Service department, as they could interfere with other wireless services.

Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.


First steps

Checking the package contents



- 1 One Gigaset S810 base
- 2 One power adapter
- 3 One Gigaset S810H handset
- 4 One phone cord
- 5 Two batteries
- 6 One battery cover
- 7 One belt clip
- 8 One plastic headset socket cover
- 9 One user guide

If you have purchased a **model with multiple handsets** the package should contain two batteries, a battery cover, a belt clip and a charger 9 with power adapter 10 for each additional handset.

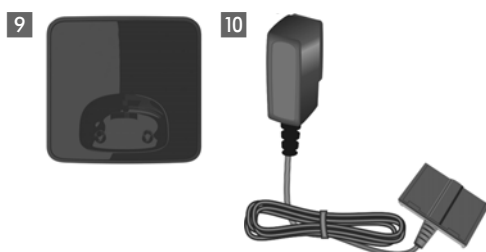

Setting up the base and charger (if included)

The base and charger are designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base at a central point in the building on a level, non-slip surface or mount the base or charger on the wall (→ page 84).

Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode (→ page 53) is activated.


The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the base


- ▶ **First** connect the telephone jack **2** and insert the cables into the cable ducts.
- ▶ **Then** connect the power adapter **1**.

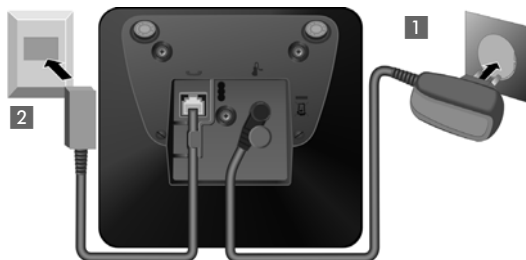

Please note:


- ◆ The power adapter must **always be connected**, as the phone will not operate without a mains connection.
- ◆ Use only the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 78).

Connecting the charger (if included)

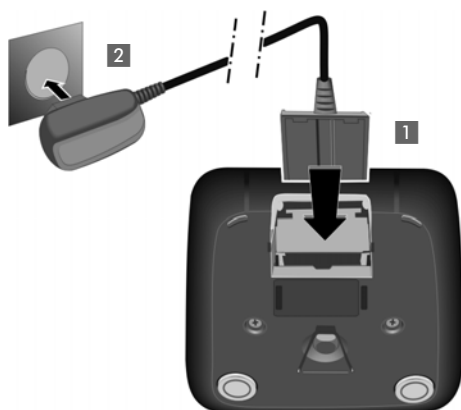

- Connect the flat plug from the power adapter **1**.
- Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

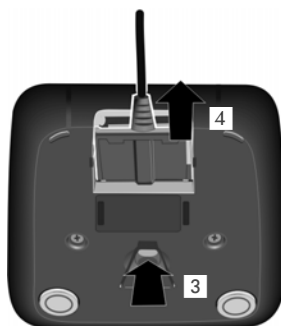

Setting up the handset for use

The display and keypad are protected by plastic films.
Remove the protective films!

Inserting the batteries and closing the battery cover

Warning


Use only rechargeable batteries recommended by Gigaset Communications GmbH (→ page 77), i.e., Never use conventional (non-rechargeable) batteries, as this could result in significant health risks and personal injury. For example, the outer casing of the batteries could be damaged or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in/on the battery compartment.



- ▶ First insert the battery cover at the top ①.
- ▶ Then press the cover ② until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the left-hand side of the casing, then pull the battery cover in an upward direction.

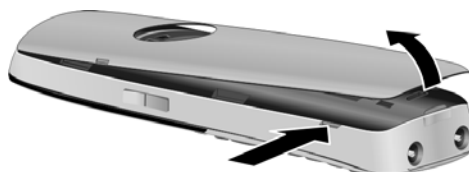

First steps


- ▶ Insert the plastic cover provided for the headset socket to ensure optimum sound in handsfree mode.



Attaching the belt clip

The handset has notches on each side to attach the belt clip.


- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – press the centre of the belt clip firmly with your right thumb, push the fingernail of your left index finger up between the clip and the housing and pull the clip in an upward direction.

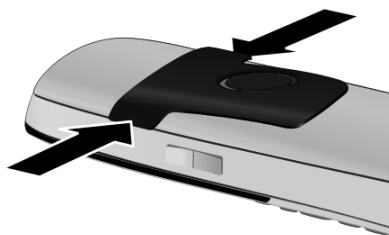

Initial charging and discharging of the batteries

The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- Charge the handset in the base for **8.5 hours**.

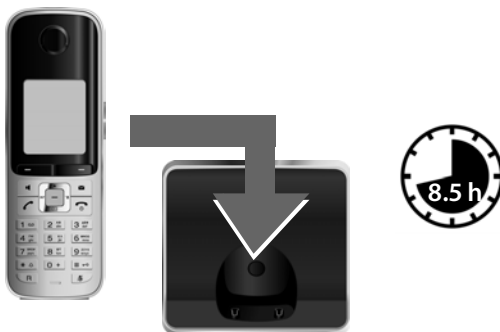

Please note

The handset must only be placed in the designated Gigaset S810 base or charging cradle.


- After charging, remove the handset from the base and only replace it when the batteries are **fully discharged**.

Please note

- ◆ Each handset is registered with the base at the factory. You do not need to register the handset again. If you wish to use your handset with a different base or use further handsets with your base, you will need to register the handset manually (→ page 56).
- ◆ After the initial battery charge **and** discharge, you may place your handset in the base after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

Changing the display language


Change the display language if you do not understand the language currently set.

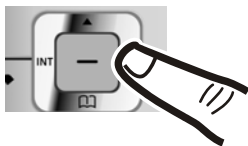


► Press right on the control key.




► **Slowly** press keys **9** and **5** one after the other.

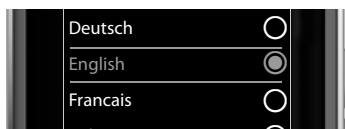

The display for setting languages appears.
The current language (e.g. English) is selected.

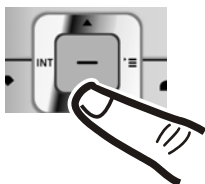


► Press down on the control key  ...




... until the language you wish to use is marked, e.g., French.

► Press the **right** key directly below the display to select this language.




The selection is marked with .

► Press and **hold** the end call key  to return to idle status.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

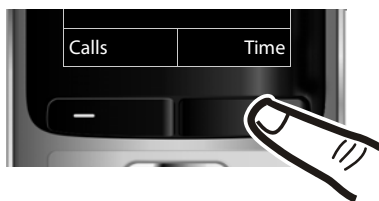

- ▶ Press the key below **Time** on the display screen to open the input field.
(If you have already set the time and date, open the input field via the menu → page 28.)



The **Date/Time** submenu is shown on the display.


- ▶ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g.,

1	0
---	---


4	1	0	0
---	---	---	---

2	0
---	---

 for 14/10/2011.

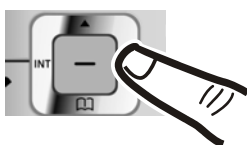

Press the **right** or **left** control key to change the input position and correct an entry.

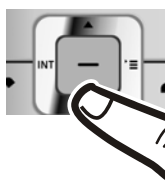

- ▶ Press **down** on the control key to switch to the time input field.

- ▶ Enter the hours and minutes in 4-digit format via the keypad, e.g.,

0	+
---	---

7	1	0	5
---	---	---	---


 for 07:15 am. Change the input position with the control key if necessary.



First steps



- Press the key below **Save** on the display screen to confirm your entry.

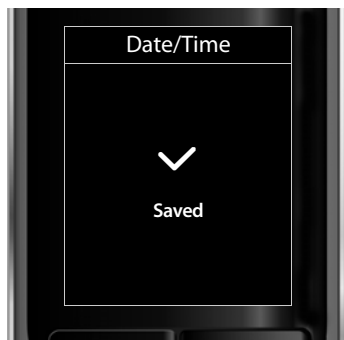






The display shows **Saved**. You will hear a confirmation tone and the handset will automatically return to idle status.

Display in idle status

Once the phone is registered and the time is set, the idle display is shown as in this example.










Displays


◆ Reception between the base and the handset:

- Poor to good:    
- No reception: 

Green: Eco Mode activated (→ page 53)

◆ Battery charge status:

-  white: charged over 66%
-  white: charged between 34% and 66%
-  white: charged between 11% and 33%
-  red: charged below 11%
-  flashes red: battery almost empty (less than 10 minutes talktime)
-     white: battery charging

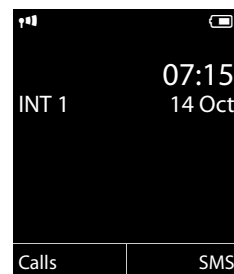


Please note

If you have chosen a colour scheme with a white background, the white symbols are displayed in black.

◆ INT 1

Internal name of the handset (→ page 59)

If **Eco Mode+** (→ page 53) is activated, the  icon is displayed in the top left corner of the display.

Your phone is now ready for use!

Connecting the headset



After removing the plastic cover, you can connect a headset to the left-hand side of your telephone with the 2.5 mm jack connector.

See the relevant product page at www.gigaset.com for information on recommended headsets.

The headset volume corresponds to the settings for the handset volume (→ page 66).

After using the headset, replace the plastic cover to enable optimum sound in handsfree mode.

Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the back of your handset to connect the handset to a PC (→ page 79).

- ▶ Remove the belt clip (if attached) (→ page 12).
- ▶ Remove the battery cover (→ page 11).
- ▶ Connect the USB data cable to USB socket **1**.

Please note










Please connect your handset **directly** to the PC; do **not** connect via a USB hub.



What would you like to do next?

Now you have successfully set up your Gigaset, you will certainly want to adapt it to your personal requirements. Use the following guide to quickly locate the most important topics.



If you are unfamiliar with menu-driven devices such as other Gigaset telephones, read the section entitled "Using the phone" (→ page 20) first.

Information on is located here.
Setting the ringtone and volume	 page 67
Setting the earpiece volume	 page 66
Setting Eco Mode / Eco Mode+	 page 53
Preparing the telephone for SMS reception	 page 44
Operating the telephone on a PABX	 page 71
Registering existing Gigaset handsets to a base	 page 56
Transferring directory entries from existing Gigaset handsets to new handset(s)	 page 38
Using Bluetooth devices	 page 61
Connecting the phone to the PC	 page 79


If you have any questions about using your phone, please read the tips on troubleshooting (→ page 74) or contact our Customer Care team (→ page 73).

Using the phone





Control key

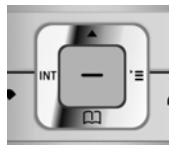Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.,  for "press right on the control key" or  for "press the centre of the control key".





The control key has a number of different functions:



When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 66).







In the main menu

- , ,  or  Navigate to the required function.




In submenus and lists

-  /  Scroll up/down line by line.

In input fields

Use the control key to move the cursor up , down , right  or left . Press and **hold**  or  to move the cursor **word by word**.

During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.


- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus, selection and input fields**, the key takes on the function of the display keys **OK**, **Yes**, **Save**, **Select** or **Change**.

Please note

These instructions demonstrate the main menu being opened by pressing the right of the control key and functions being actuated by pressing the appropriate display key. However, if you prefer, you can use the control key as described above.

Display keys

The functions of the display keys change depending on the particular operating situation. Example:

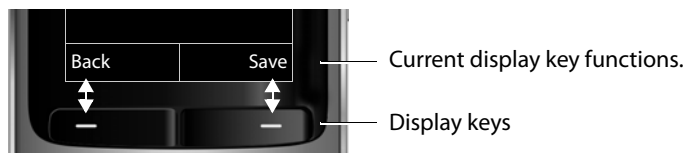

Some important display keys:

Options	Open a menu for further functions.
OK	Confirm selection.
< C	Delete key: delete character by character/word by word from right to left.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the redial list.

Keys on the keypad

- / / etc.
 Press the matching key on the handset.
- Enter digits or letters.

Side keys

- / Press the keys on the right of the handset to set the volume for the **handset, ringtone, speaker, alarm**, signalling of **appointments** and the **headset** depending on the situation.


Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Delete the **character** to the left of the cursor with the display key **< C** (**press and hold** to delete the **word**)
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character, e.g., when entering time and date.

Using the menus


Your telephone's functions are accessed using a menu that has a number of levels.

The menu display can be extended (**expert mode** ) or restricted (**standard mode**). Expert mode is the active default setting.

Settings or functions that are only available in expert mode are marked in these instructions by the  icon.


Switching between standard mode/expert mode and the menu overview (→ page 26).

Main menu (first menu level)


- ▶ When the handset is in idle status press the **right** control key  to open the main menu.

The main menu functions are shown in the display with icons. The icon for the selected function is highlighted in orange and the name of the associated function appears in the display header.

To access a function, i.e., to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


Briefly press the display key **Back** or the end call key  to revert back to idle status.

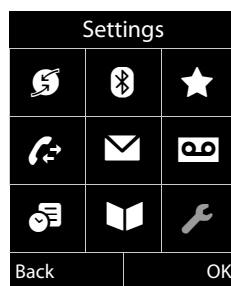


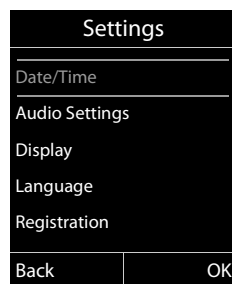
Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

Briefly press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.



Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display keys **OK**, **Yes**, **Save** or **Change** are lost.

An example of the display in idle status is shown on page 17.

Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.

Press and **hold** the end call key again to switch the handset on.

Please note

When the handset is switched on, an animation showing the **Gigaset** logo is displayed for several seconds.

Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

If the keypad lock is activated, you will see a message when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note




When the keypad lock is active, you cannot even call emergency numbers.

Using this guide


The operating steps are shown in abbreviated form.


Example:

The illustration:


 →  → **Eco Mode** → **Eco Mode+** ( = on)

means:

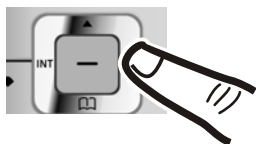


- ▶ Press **right** on the control key  to open the main menu.



- ▶ Press right, left, down and up on control key  to navigate to the **Settings** submenu.


- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Eco Mode** menu option appears on the display.

- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Eco Mode+** menu option appears on the display.


- ▶ Press the display key **Change** to activate/deactivate the function.



The change is effective immediately and does not need to be confirmed.



- ▶ Press the key below **Back** on the display screen to jump back to the previous menu level.

or




Press and **hold** the end call key  to return to idle status.

Menu overview

Setting standard mode or expert mode

The menu display can be extended (**expert mode** ) or restricted (**standard mode**). Menu options that are only available in expert mode are marked with the  icon.

To change these settings:

Select  →  → **Menu View** → **Simplified** (standard mode) or **Complete** (expert mode) → **Select** (the active mode is marked with )

Open the main menu: press  when the phone is in idle mode.


Select Services

Network Mailbox	→ page 35						
All Calls	<table><tr><td>Call Divert</td><td>→ page 33</td></tr><tr><td>Call Waiting</td><td>→ page 33</td></tr><tr><td>Fixed Destin. Call</td><td>→ page 35</td></tr></table>	Call Divert	→ page 33	Call Waiting	→ page 33	Fixed Destin. Call	→ page 35
Call Divert	→ page 33						
Call Waiting	→ page 33						
Fixed Destin. Call	→ page 35						

Bluetooth

Activation	→ page 61
Search for Headset	→ page 62
Search Data Device	→ page 62
Known Devices	→ page 62
Own Device	→ page 63

Additional Features

Room Monitor	→ page 60								
One Touch Call	→ page 29								
 Resource Directory	<table><tr><td>Screensavers</td><td>→ page 68</td></tr><tr><td>Caller Pictures</td><td>→ page 68</td></tr><tr><td>Sounds</td><td>→ page 68</td></tr><tr><td>Capacity</td><td>→ page 68</td></tr></table>	Screensavers	→ page 68	Caller Pictures	→ page 68	Sounds	→ page 68	Capacity	→ page 68
Screensavers	→ page 68								
Caller Pictures	→ page 68								
Sounds	→ page 68								
Capacity	→ page 68								

Call Lists



All Calls	→ page 40
Outgoing Calls	→ page 40
Accepted Calls	→ page 40
Missed Calls	→ page 40

SMS


You have activated an SMS mailbox (general or private) without a PIN

New SMS	→ page 44
Incoming	→ page 46
Draft	→ page 45

You have activated an SMS mailbox with a PIN or 2–3 mailboxes

Mailbox	New SMS	→ page 44
	Incoming	→ page 46
	Draft	→ page 45
Mailbox 1 Mailbox 2 Mailbox 3	New SMS	→ page 44
	Incoming	→ page 46
	Draft	→ page 45
 SMS Service		→ page 50
 Settings	Service Centres	→ page 49
	SMS Mailboxes	→ page 48
	Notification	→ page 48

Voice Mail

Play Messages	Network Mailbox	→ page 52
 Network Mailbox		→ page 52

Organizer

Calendar	→ page 54
Alarm Clock	→ page 56
Missed Alarms	→ page 55

Directory → page 36



Settings

Date/Time	→ page 15
Audio Settings	Handset Volume → page 66
	Handsfree Profiles → page 66
	Advisory Tones → page 69
	Ringtones(Handset) → page 67
	Music on hold → page 70
Display + Keypad	Screensaver → page 64
	Large Font → page 65
	Colour Schemes → page 65
	Display Backlight → page 65
	Keypad Illumination → page 65
Language	→ page 64
Registration	Register Handset → page 56
	De-reg. Handset → page 57
	Select Base → page 57
Telephony	Auto Answer → page 65
	Area Codes → page 69
	Listening In → page 59
	Preselection → page 43
	Access Code → page 71
	Dialling Mode → page 71
	Recall → page 71
System	Handset Reset → page 69
	Base Reset → page 70
	Repeater Mode → page 70
	System PIN → page 70
Menu View	Simplified → page 26
	Complete → page 26
Eco Mode	Eco Mode → page 53
	Eco Mode+ → page 53

Making calls

If the backlight is deactivated (→ page 65) it is switched on by pressing any key. **Digit keys** appear on the display for pre-dialling; **all other keys** do not have any further functions.

Making an external call

External calls are calls using the public telephone network.



Enter the number and press the talk key.

or:



Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

You are shown the duration of the call while the call is in progress.

Please note

Dialling with the directory (→ page 36), call list (→ page 40), redial list (→ page 40) and automatic redial (→ page 40) saves you from repeatedly keying in phone numbers.

Continuing a call on a Bluetooth headset

Prerequisite: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 61).

Press the talk key on the headset; it may take up to 5 seconds to establish a connection to the handset.

The menu to set the earpiece and microphone volume can be called up during a call by pressing the side keys.

For further details about your headset, see the accompanying user guide.

Ending a call



Press the end call key.

One Touch Call

You can set up your phone in such a way that pressing **any** key dials a previously stored number. This allows children, for example, who cannot enter a number, to call a certain number.

→ ★ → **One Touch Call**

► Change multiple line input:

Activation:


Select **On** to activate.

Call to:

Enter or change number.

► Press **Save** to save the settings.

When the function is activated, the idle display appears as shown below:

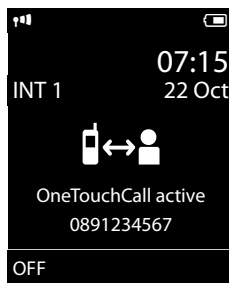


By pressing any key the saved number is dialled. Press the end call key, to cancel the dialling operation or to end the call.

Deactivating the One Touch Call



► In **idle status**, press the display key **OFF**.

► Press and **hold** the hash key, to deactivate the One Touch Call.

Accepting a call

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

Accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ press the display key **Accept**.

If the handset is in the base/charger and the **Auto Answer** function is activated (→ page 65), the handset automatically answers the call when you remove it from the base/charger.

To deactivate the ringtone, press the **Silence** display key. You can accept the call as long as it is displayed on the screen.

Accepting a call on a Bluetooth headset

Prerequisite: Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 61).

Only press the talk key on the headset when the headset rings; it can take up to 5 seconds.

The menu to set the earpiece and microphone volume can be called up during a call by pressing the side keys.




For further details about your headset, see the accompanying user guide.


Calling Line Identification




When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

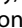- ◆ Your network provider supports CLIP, CLI.
 - CLI (Calling Line Identification): the caller's number is transmitted.
 - CLIP (Calling Line Identification Presentation): the caller's number is displayed.
- ◆ You have requested CLIP from your network provider.
- ◆ The caller has requested CLI from the network provider.

Call display with CLIP/CLI

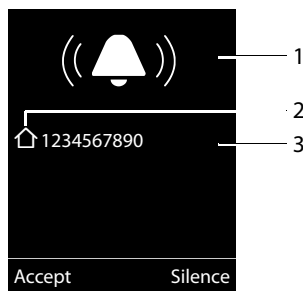If the caller's number is saved in your directory, the number is replaced by the corresponding directory entry ( /  /  symbol and name/number). If you have assigned a caller picture to that caller, this will also be displayed.

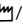

- 1 Ringtone icon
- 2  /  /  symbol from directory
- 3 Number or name of caller

The following is displayed in place of the number:

- ◆ **External**, if no number is transmitted.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

Please note

The ringtone can be switched off for unknown calls (calls with Calling Line Identification withheld) (→ page 67).

Notes on calling line display (CLIP)

By default, the number of the caller is shown in the display of your Gigaset telephone. You do not have to make any other settings on your Gigaset telephone.

However, if the caller's number is not displayed, this can be due to the following:

- ◆ You have not ordered CLIP from your network provider or
- ◆ Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.

Is your telephone connected via a PABX/gateway?

You can establish this by checking for an additional device connected between your telephone and house connection, e.g., a PABX, gateway etc. In most cases, simply resetting this device will remedy the situation:

- ▶ Briefly disconnect the mains plug of your PABX. Re-insert the plug and wait for the device to restart.

If the caller number is still not displayed:

- ▶ Check the CLIP settings of your PABX and activate this function if necessary. In the user guide for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number transmission", "caller ID", ...). If necessary, contact the device manufacturer.

If this does not resolve the problem, it is possible that your network provider does not the CLIP service for this number.

Have you ordered the calling line display service from your network provider?

- ▶ Check whether your provider supports calling line display (CLIP) and that the function has been activated for you. If necessary, contact your provider.

Additional information on this subject can be found on the Gigaset homepage at: www.gigaset.com/service

Handsfree mode

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.

Activating/deactivating handsfree mode

Activating while dialling



Enter the number and press the handsfree key.

- ▶ Inform your caller before you use the handsfree function so that the caller knows a third party may be listening.


Switching between earpiece and handsfree mode



Press the handsfree key.

During a call, activate or deactivate handsfree mode.

If you wish to place the handset in the base/charger during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the speaker volume (→ page 66).

Please note

If you have a headset connected, you can switch between the headset and handsfree mode.

Switching to mute

You can deactivate the microphone in your handset during an external call.





Press key to mute the handset.

The display shows **Microphone is off**.

Press the key again to reactivate the microphone.

Please note

- ◆ If the telephone is muted, all keys except the mute key  and the end-call key  will not work.
- ◆ A connected headset will also be muted.

Making calls using network services

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ It is not possible to reprogram the network services.
- ▶ If you require assistance, please contact your network provider.

Call waiting during an external call

If the function is activated, during an external call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP (→ page 30), the number of the waiting caller or the corresponding directory entry is shown in the display.

Activating/deactivating call waiting

 →  → All Calls → Call Waiting

Status Activate/deactivate.

Send Press the display key.

Accepting a waiting call

You are making an external call and hear the call waiting tone.

You have the following options:

If CLIP (→ page 30) is **activated**

Accept Press the display key.

If CLIP is **not activated**

Options → Accept Waiting call

Once you have accepted the waiting call you can switch between the two callers ("call swap" → page 34) or speak to both at the same time ("conference" → page 34).

Rejecting a waiting call

You can hear the call waiting tone but do not want to speak to the caller.

Options → Reject Waiting call

The caller hears the busy tone.

Call divert (CD)

When diverting a call, the call is forwarded to another connection.

The following options are available:

- ◆ **All Calls:** Calls are diverted immediately. No more calls are signalled on your phone.
- ◆ **No Answer:** Calls are diverted if no one accepts the call within several rings.
- ◆ **When Busy:** Calls are forwarded when your line is busy. Call is diverted without a call waiting tone.

 →  → All Calls → Call Divert

- ▶ You can enter data in the following fields:

When:

Select **All Calls** / **When Busy** / **No Answer**.

Phone Number:

Enter the number to which the call is to be diverted.

Status:

Activate/deactivate call divert.

Send

Press the display key.



After the announcement, press the end call key.

Consultation call, call swap, conference

These functions enable you to:

- ◆ Call a second external caller (consultation call)
- ◆ Switch between two calls (call swap)
- ◆ Talk to two external callers at the same time (conference)

Consultation call

You can call a second external caller. The first call is placed on hold.

During an external call:

Ext. Call Press the display key.
The previous call is placed on hold. The other participant hears an announcement.



Enter the second participant's telephone number.

The phone number is dialed. You are connected to the second participant.

If the caller does not answer, select the display key **End** to return to the first participant.

Please note

You can also select the second participant's phone number from the directory (→ page 37) or the call list (→ page 39).

Ending a consultation call

Options → **End Active Call**

You are reconnected to the first caller.


You can also end the consultation call by pressing the end call key. The connection is briefly interrupted and you will receive a call back. Once you have pressed the talk key, you are reconnected to the first caller.

Call swap

You can speak to both callers one at a time (call swap).

Prerequisite: You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

► Use  to swap between the participants.

The caller you are currently speaking to is marked with the  icon.

Ending the current call.

Options → **End Active Call**


You are re-connected to the waiting caller.

Conference

You can speak to both participants simultaneously.

Prerequisite: You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

Conf. Press the display key.

You and the other two callers (both marked by the  icon) can hear and speak to each other simultaneously.

Ending a conference call



Press the end call key to end the call with both participants.

or:

EndConf Press the display key.


You return to the "call swap" status. You are reconnected to the caller with whom you started the conference call.



You can continue your conversation with the other callers.

Each of the callers can end their participation in the conference call by pressing the end call key and replacing the handset.

Further functions

Connecting without dialling

If you remove the telephone from the base/charger or press the talk key , the stored number is automatically dialled after five seconds without having to press a button.

 →  → **All Calls** → **Fixed Destin. Call**

► You can enter data in the following fields:

Phone Number:

Enter the telephone number.

Status:

Activate/deactivate function.

Send Press the display key.

Activating/deactivating the network mailbox

The network mailbox can be activated and deactivated.

 →  → **Network Mailbox**

Status: Activate/deactivate.

Send Press the display key.

Using the directory and lists

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Incoming SMS message list
- ◆ Call lists
- ◆ List of missed appointments

You can create a personalised directory for your own handset. You can also send lists/entries to other handsets (→ page 38).

Directory

You can save up to 500 entries in the directory.


Please note

To quickly access a number from the directory (quick dial), you can assign the number to a key (→ page 63).

Directory

In the **directory**, you can save:

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail addresses
- ◆ Anniversaries with reminder
- ◆ VIP ringtone with VIP icon
- ◆ Caller pictures.

You open the directory in idle status using the  key.

Length of the entries

3 numbers:

each max. 32 digits

First name and surname:

each max. 16 characters

E-mail address:

max. 64 characters

Saving a number in the directory

 → <New Entry>

► You can enter data in the following fields:

First Name:/Surname:

Enter first names and/or surnames.

If you do not enter a name in either of the fields, the phone number is saved and displayed in place of a surname.


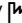

(For instructions on entering text and special characters, please see

→ page 78.)

Phone (Home): / Phone (Office): /

Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-mail:

Enter the e-mail address.

Anniversary:

Select **On** or **Off**.

With setting **On**:

Enter **Annivers. (Date)** and **Anniversary (time)** and select reminder type:

Anniversary (tone) → page 39.


Caller Picture:

If required, select a picture to be displayed when this person calls (see "Resource Directory", page 68).

Prerequisite: Calling Line Identification (CLIP).

Caller Melody (VIP):

Mark a directory entry as a **VIP** (Very Important Person) by assigning a specific ringtone to it. VIP calls are recognised by the ringtone.

When scrolling through the directory, VIP entries are highlighted by the  icon.

Prerequisite: Calling Line Identification (CLIP).



Press the display key.

Order of directory entries

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

Select a directory entry



 Open the directory.




You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been entered, the directory searches for the first name.



Select from the directory

 →  (Select entry)

 Press the talk key.
(If several numbers are entered, select the required number by pressing  and press the talk key  again).
The number is dialled.


Managing directory entries

Viewing entries


 →  (Select entry)

View Press the display key. The entry is displayed.

Options Press the display key.

The following functions can be selected with :

Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

Delete Entry

Delete selected entry.



Copy Entry

to Internal: Send a single entry to a handset (→ page 38).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.



Editing entries

 →  (Select entry)


View **Edit** Press display keys one after the other.

► Carry out changes and save.



Using other functions

 →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

Display Number

Edit or add to a saved number and then dial with  or save as a new entry; to do so, press  after the number is displayed.

Edit Entry

Edit selected entry.

Delete Entry

Delete selected entry.

Copy Entry

to Internal: Send a single entry to a handset (→ page 38).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

Delete All

Delete all entries in the directory.

Using the directory and lists

Copy All

to Internal: Send the complete list to a handset (→ page 38).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

Available Memory

Display the number of entries that are still available in the directory (→ page 36).



Using quick dial keys

- ▶ Press and **hold** the required quick dial key (→ page 63).

Transferring the directory to another handset


Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 →  (Select entry)

→ **Options** (Open menu)

→ **Copy Entry / Copy All** → **to Internal**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied - Copy next entry?** prompt with **Yes**.



A successful transfer is confirmed by a message and confirmation tone on the receiving handset.

Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Pictures and sounds assigned to entries are not transferred.

Transferring the directory as a vCard with Bluetooth

In Bluetooth mode (→ page 61), you can transfer directory entries in vCard format, e.g., to exchange entries with your mobile phone.

 →  (select entry)

→ **Options** (open menu)

→ **Copy Entry / Copy All**

→ **vCard via Bluetooth**

The list of "Known Devices" (→ page 62) is displayed.

 Select device and press **OK**.

Receiving a vCard with Bluetooth

If a device from the "Known Devices" list (→ page 62) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:



Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

Copying the displayed number to the directory

You can copy numbers displayed in a list, e.g., the call list or the redial list, or in an SMS, to the directory.



A number is displayed:


Options → **Copy to Directory**

- ▶ Complete the entry (→ page 36).

Copying a number or e-mail address from the directory



In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.

- Depending on the operating situation, open the directory with  or .


 Select entry (→ page 37).


Storing an anniversary in the directory

For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: **Anniversary: Off**).

 →  (Select entry)

View **Edit** Press display keys one after the other.

 Scroll to the **Anniversary** line.

 Select **On**.

- You can enter data in the following fields:

Annivers. (Date)

Enter day/month/year in 8-digit format.

Anniversary (time)

Enter the hour/minute for the reminder call in 4-digit format.

Anniversary (tone)



Select the reminder type.

Save Press the display key.


Please note


A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

Deactivating anniversaries

 →  (Select entry)

View **Edit** Press display keys one after the other.


 Scroll to the **Anniversary** line.

 Select **Off**.

Save Press the display key.

Reminder call on an anniversary

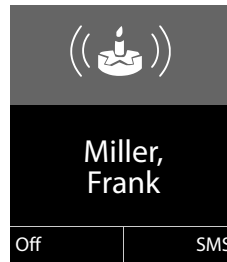

In **idle status**, a reminder call is indicated on the handset display and by the selected ringtone and volume that has been set for internal calls (→ page 67).



You can:

SMS Write an SMS.

Off Press the display key to acknowledge and end the reminder call.

During the reminder call, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).




When you are on the phone, a reminder call is indicated on the handset with a **single advisory tone**.

Anniversaries that are indicated during a call and are not acknowledged are entered in the **Missed Alarms** list (→ page 42).

Redial list



The redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If one of the numbers is in the directory, the corresponding name is displayed.


Manual redial

-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again. The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

Managing entries in the redial list

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.


The following functions can be selected with :

Copy to Directory

Copy an entry to the directory (page 36).

Automatic Redial

The selected number is automatically dialled at fixed intervals (at least every 20 seconds). The handsfree key flashes and "open listening" is activated.

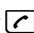- Party answers:
Press the talk key . The function is ended.
- Party does not answer:
The call is terminated after approx. 30 seconds. The function is ended after pressing any key or after ten unsuccessful attempts.

Display Number (as in the directory, page 37)

Delete Entry (as in the directory, page 37)

Delete All (as in the directory, page 37)

Incoming SMS message list

All received SMS messages are saved in the incoming message list (→ page 46).

Call lists

Prerequisite: Calling Line Identification (CLIP, page 30)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.





When in idle status, open the call lists by selecting the **Calls** display key or via the menu:







List entry

New messages are displayed at the top.

Example of list entries:

All Calls	
  Frank	14.10.11, 15:40
 089563810	14.10.11, 15:32
 ...0123727859362922	14.10.11, 15:07
View	Options

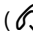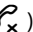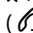- ◆ List type (in header)
- ◆ Status of entry
Bold: New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 15)
- ◆ Type of entry:
 - Accepted calls ()
 - Missed calls ()
 - Outgoing calls ()

Press the talk key  to call the selected caller back.

Press the **View** display key to access additional information, including for example the number linked to the name.

Select the **Options** display key to select the following options:

Copy to Directory

Copy the number to the directory.

Delete Entry

Delete selected entry.

Delete All

Delete all entries.

When you quit the call lists, all entries are set to the status "old", i.e., the next time you call up the list, they will no longer be shown in bold.

Message key function





Opening lists

Use the message key  to open the following list selection:

- ◆ network mailbox, if your network provider supports this function and fast access is set for the network mailbox (→ page 52).
- ◆ Incoming SMS message list (→ page 46)
If **multiple** mailboxes are set up (→ page 48), several lists are displayed.
- ◆ List of missed calls
- ◆ List of missed alarms (→ page 42)

An advisory tone sounds as soon as a **new message** arrives in a list.

In **idle status**, the display shows an icon for the new message:


Icon	New message...
	...on the network mailbox
	... in the missed calls list
	... in the SMS list
	... in the Missed Alarms list:

The number of **new** entries is displayed under the corresponding icon.

			
02	10	09	08

Please note

If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).


After pressing the message key , you can see all lists containing messages and the network mailbox list.

Lists containing new messages are at the top of the list and are marked in a bold font.


Messages & Calls	
Calls:	(3)
Missed Alarms	(1)
SMS:	(2)
Back	OK

Select a list with . To open, press **OK**.


Disable/enable flashing of the message key

You can select whether the message key  flashes (default setting) or does not flash when new messages arrive. Please do the following:


- Press the key sequence:

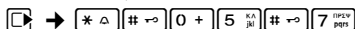


The following is displayed:

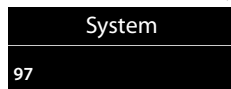



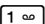
- Press one of the following keys to select the message type:

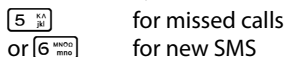



or  for new SMS

Your selection is displayed (e.g. 5 for missed calls); the current setting flashes:

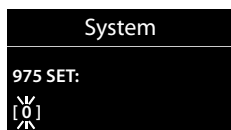



- Press key  or , to set the behavior for new messages:

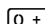 message key flashes (it stops when the key is pressed)

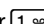or  message key does not flash


Your selection is displayed (e.g. 1):

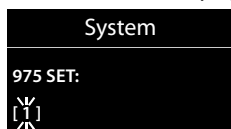

- Press the display key .

List of missed alarms

Missed (unacknowledged) appointments from the calendar (→ page 54) and anniversaries (→ page 39) are saved in the **Missed Alarms** list under the following circumstances:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (→ page 40).
- ◆ Open the list by pressing the **message key**  (→ page 41).

Each entry is displayed with:

- ◆ Number or name
- ◆ Date and time

The most recent entry is at the head of the list.

Press the display key , to delete the selected entry.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Making cost-effective calls

Make phone calls through a network provider who offers particularly low-cost call rates (call-by-call).

Automatic network provider code (preselection)

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the "**With Preselection**" list, specify the access codes or the first digits of the access codes that you wish to assign to the preselection number.

In the "**No Preselection**" list, enter the exceptions to the "**With Preselection**" list.



Example:

Preselection No.	0999
With Preselection	08
No Preselection	081 084

All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999.

Phone number		Dialled number
07112345678	→	07112345678
08912345678	→	0999 08912345678
08412345678	→	08412345678

Saving preselection numbers

 →  → **Telephony** → **Preselection**
→ **Preselection No.**



Enter or change the preselection number (call-by-call number).


Save

Press the display key.

Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**With Preselection**" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

 →  → **Telephony** → **Preselection**
→ **With Preselection / No Preselection**



Select entry.





Enter or edit the first digits of the number.



Save

Press the display key.

Temporarily cancelling preselection

 (press and hold) → **Options**
→ **Preselection off** →  (dial number)

Permanently deactivating preselection

 →  → **Telephony** → **Preselection**
→ **Preselection No.**

<C

Press and **hold** the display key until the preselection number is deleted.

Save

Press the display key.

SMS (text messages)

Your phone is delivered ready to send SMS messages immediately.

Prerequisites:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS messages.
- ◆ To receive SMS messages, you must be registered with your service provider. This occurs automatically when you send your first SMS.

Please note

If your phone is connected to a PABX, please read → page 50.

Writing/sending an SMS

Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

Please note

- ◆ For instructions on entering text and special characters, please see page 78.
- ◆ An SMS may contain up to 612 characters. If there are more than 160 characters, the SMS is sent as a **linked SMS** (up to 4 SMS messages with 153 characters each). The top right of the display shows how many characters are still available and which part of a linked SMS is currently being written.

Sending an SMS



Press the talk key

or:



Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with access code (even if you are in that area) from the directory or enter directly. For sending SMS messages to an SMS mailbox: add the mailbox ID to the **end** of the number.

Send

Press the display key. The SMS is sent.

Please note

- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft SMS list.
- ◆ If the memory is full, or if the SMS function on the base is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

Draft SMS list

You can save an SMS in the draft SMS list, and edit and send it later.




Saving an SMS in the draft SMS list

- You are writing an SMS (→ page 44).


Options Press the display key.

Save Entry Select and press **OK**.

Opening the draft message list

 →  → , if necessary 
(mailbox, mailbox PIN), → **Draft**


The first entry in the list is displayed, e.g.:

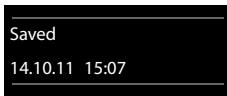


If the entry has been saved with the phone number, i.e., when the SMS was saved from the incoming message list, the number is displayed in the first line.

Reading or deleting SMS messages

- Open the draft message list and then:

 Select SMS.

Read Press the display key. The text is displayed. Scroll line by line using .

or delete the SMS with

Options → **Delete Entry** → **OK**.

Writing/editing an SMS

- You are reading an SMS in the draft SMS list.

Options Open menu.

You have the following options:

Send

Send stored SMS.

Edit

Edit the text of the saved SMS and then send it (→ page 44).

Character Set

Display text in the selected character set.

Deleting draft SMS list

- Open the draft message list and then:



Options Open menu.



Delete All Select, press **OK** and confirm with **Yes**. The list is deleted.

Sending SMS messages to an e-mail address

If your service provider supports the **SMS as e-mail** feature, you can also send your SMS messages to e-mail addresses.

The e-mail address must be at the beginning of the text. You must send the SMS to your SMS send centre's e-mail service.

 →  → (mailbox, mailbox PIN)
→ **New SMS**

 /  Copy the e-mail address from the directory or enter it directly. End the entry with a space or colon (depending on the service provider).

 Enter the SMS text.

Options Press the display key.

Send Select and press **OK**.

E-mail Select and press **OK**. If the number of the e-mail service is not already entered (→ page 49), enter the number of the e-mail service.

Send Press the display key.

Sending SMS messages as a fax

You can also send an SMS to a fax machine.

Prerequisite: Your network provider supports this feature.

► You are writing an SMS (→ page 44).

Options

Press the display key.

Send

Select and press **OK**.

Fax

Select and press **OK**.



Select number from the directory or enter it manually. Enter the number with access code (even if you are in the same area).

Send

Press the display key.

Receiving an SMS

All received SMS messages are saved in the incoming SMS list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, **regularly delete SMS messages from the list**.


The display tells you if the SMS memory is full.

Activating/deactivating first ringtone muting

Each incoming SMS is signalled by a single ring (ringtone as for external calls). If you accept such a "call", the SMS is lost. To prevent this ring, suppress the first ringtone for all external calls.



Open the main menu.

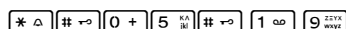

Press keys.



Make the first ringtone audible.

or:



Mute the first ringtone.

Incoming message list

The incoming message list contains:

- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset S810H handsets by the icon on the display, the flashing message key and an advisory tone.

Opening the incoming message list with the key



Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):

SMS: (2)

Bold: new entries

Normal font: old entries

If necessary select a mailbox and open list by selecting **OK** (enter mailbox PIN if required and confirm by pressing **OK**).

The number and date of receipt are displayed in the entry list.

0123727859362922

14.10.11 09:07

Opening the incoming message list via the SMS menu

→ → (If necessary, select mailbox, enter mailbox PIN) → **Incoming**

Deleting the incoming message list

All **new** and **old** SMS messages in the list are deleted.

► Open the incoming message list.

Options

Open menu.

Delete All

Select, press **OK** and confirm with **Yes**. The list is deleted.

Reading or deleting SMS messages

- Open the incoming message list, then:



Select SMS.

Read

Press the display key. The text is displayed. Scroll line by line using

or delete the SMS with

Options → **Delete Entry** → **OK**.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

Changing the character set

- Read the SMS

Options

Press the display key.

Character Set

Text is shown in the selected character set.

Replying to or forwarding SMS messages

- Read the SMS

Options

Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender (→ page 44).

Edit

Edit the text in the SMS and return it to the sender (→ page 44).

Forward

Forward the SMS to another number (→ page 44).

Copying the number to the directory

Copying the sender's number

- Open the incoming message list and select the SMS (→ page 46).

Options

→ **Copy to Directory**

- Complete the entry → page 38.

Please note

An attached mailbox identifier is added to the directory.

Copying/dialling numbers from an SMS

- Read the SMS and scroll to the telephone number.

The digits are highlighted.



Press the display key.

Complete the entry (→ page 38).

or:



Press the talk key to dial the number.

If you wish to use the number to send an SMS:

- Save the number with the local area code (access code) in the directory.

SMS with vCard

The vCard is an electronic business card. It is displayed by the icon in the body of the SMS.

A vCard can include:

- ◆ Name
- ◆ Private number
- ◆ Business number
- ◆ Mobile phone number
- ◆ Birthday

Entries in a vCard can be saved to the directory individually.

Opening the vCard

- Read the SMS containing the vCard.

View

Press the display key. To return to the body of the SMS, press **Back**.



Select number.

Save

Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

- If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.



Notification via SMS

You can be notified about missed calls via SMS.

Prerequisite: For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to save the telephone number to which you wish the notification to be sent.

 →  → **Settings** → **Notification**

► You can enter data in the following fields:

To:

Enter the number to which the SMS should be sent.

On missed call

Select **On** if you require SMS notification.

 **Save**

Press the display key.

Warning

Do **not** enter your own fixed line network number for the notification of missed calls. This can lead to chargeable endless looping.

SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can set up three additional **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

Please note:

- ◆ If you operate a number of devices (bases) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case, you must also change the preset ID of the general mailbox ("0").

- ◆ Only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base's default settings. This will **delete all SMS messages from all mailboxes**.



Setting up and editing a personal mailbox

Setting up a personal mailbox

 →  → **Settings** → **SMS Mailboxes**



Select mailbox, e.g., **Mailbox 2** and press **Edit**.

► You can enter data in the following fields:

Activation:

Activate or deactivate mailbox.

Name:

Enter name.

Box ID:

Select mailbox ID (0–9). You can only select the available numbers.

Protection:


Activate/deactivate PIN protection.

SMS PIN

If necessary, enter 4-digit PIN.

 **Save**

Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

Deactivating a mailbox

► Set **Activation** to **Off**. Confirm message with **Yes** if necessary.




All SMS messages saved in this mailbox are deleted.


Deactivating PIN protection

► Set **Protection** to **Off**.


The mailbox PIN is reset to "0000".

Changing the name of a mailbox




 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Press the display key.

 Enter new name.

 Press the display key.

Changing a mailbox's PIN and ID

 →  → **Settings** → **SMS Mailboxes**
→  (Select mailbox)

 Enter mailbox PIN if necessary and press .

- ▶ Set **Box ID**, **Protection** and **SMS PIN** (→ page 48).

Sending an SMS to a personal mailbox

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Along with this SMS, your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

Setting SMS centres



SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.



Your SMS messages are sent via the **SMS centre** that is entered as the **active send service centre**. However, you can activate any other SMS centre as the active send service centre to send a current message (→ page 49).

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (→ page 49).

Entering/changing SMS centres


- ▶ Find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → **Settings** → **Service Centres**

 Select SMS centre (e.g., **Service Centr.1**) and press .

- ▶ You can enter data in the following fields:

Active Send:


Select  if SMS messages are to be sent via the SMS centre. For the SMS centres 2 to 4, the setting only applies to the next SMS.

SMS Service Centre no.:

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

Send e-mail to:

Enter the number of the e-mail service.

 Press the display key.

Please note

Ask your service provider for details on entering service numbers if you wish to use personal mailboxes (prerequisite: your service provider supports this function).

Sending an SMS via another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.



This setting only applies to the next SMS to be sent. After that, the setting returns to **Service Centr.1**.

SMS services


You can have your service provider send you specific information by SMS (e.g., weather forecast or the lottery numbers). A total of up to 10 SMS services can be saved. You can obtain information about the SMS services available and their costs from your service provider.

Setting up/ordering an SMS service

Ordering an SMS service


 →  → SMS Service


 Select SMS service.


 Press the display key.

Setting up an SMS service

► Select an empty entry, delete beforehand if necessary. Then:


 Press the display key.

 If necessary, enter code, designation and destination number.


 Press the display key.


Editing an SMS service entry

► Select the SMS service (see above). Then:

 Open menu.


Edit Entry Select and press **OK**.

 If necessary, change the code, designation or destination number.

 Press the display key.

Deleting an SMS service

► Select the SMS service (see above). Then:

 Open menu.

Delete Entry Select and press **OK**.

SMS on a PABX

- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded** to the extension of the PABX (CLIP). The CLIP evaluation of the SMS centre number is completed in your **Gigaset**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre. If in doubt, test your PABX, e.g., by sending an SMS to your own number: once with and once without the access code.
- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case, the recipient cannot reply to you directly.






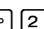






Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base.

Activating/deactivating SMS function

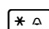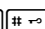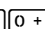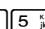If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings you have made for sending and receiving SMS messages (e.g., the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after deactivation.



 Open the main menu.

Enter the digits.

 **OK** Deactivate the SMS function.

or:

  **OK** Activate the SMS function (default setting).

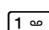SMS troubleshooting

Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed; see self-help.

Self-help with errors

The following table lists problem situations and possible causes and provides advice on troubleshooting.

You cannot send messages.

1. You have not requested the CLIP service (Calling Line Identification Presentation).
 - ▶ Ask your service provider to enable this service.
2. SMS transmission has been interrupted (e.g., by a call).
 - ▶ Re-send the SMS.
3. The network provider does not support this feature.
4. No number or an invalid number is entered for the SMS centre set as the active send service centre.
 - ▶ Enter the number (→ page 49).

You receive an incomplete SMS.

1. Your phone's memory is full.
 - ▶ Delete old SMS messages (→ page 45).
2. The service provider has not yet sent the rest of the SMS.

You have stopped receiving SMS messages.

1. You have changed the ID of your mailbox.
 - ▶ Give your SMS contacts your new ID or undo the change (→ page 49).
2. You have not activated your mailbox.
 - ▶ Activate your mailbox (→ page 49).
3. Call divert (redirecting) is set to **When: All Calls** or **All Calls** is activated for the network mailbox.
 - ▶ Change the call divert settings (→ page 33).

The SMS is played back.

1. The "display call number" feature is not activated.
 - ▶ Ask your service provider to activate this function (chargeable).
2. No agreement is in place between your mobile phone operator and your fixed line network SMS service provider.
 - ▶ Obtain information from your fixed line network SMS service provider.
3. Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e., you are not registered with the provider.
 - ▶ Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

The terminal is recorded in your SMS provider's database as having no fixed line network SMS functionality, i.e., you are not registered with the provider.

- ▶ Obtain information from your fixed line network SMS service provider.
- ▶ Send any SMS to automatically register your telephone to receive SMS.

Using the network mailbox

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

Configuring fast access for the network mailbox

With fast access, you can dial the network mailbox directly.

Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Network Mailbox



Enter the number for the network mailbox.

Save

Press the display key.


The setting for fast access applies to all Gigaset S810H handsets.

Calling the network mailbox

 1 ∞

Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key  if required. You will hear the network mailbox announcement.

Viewing the network mailbox message

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, the new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed call list and the message key flashes (→ page 41).

Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the call list will then show this designation.

ECO DECT

You are helping to protect the environment with your Gigaset S810.

Reducing energy consumption

By using a power-saving adapter plug, your telephone consumes less power.

Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ **Handset:** The closer the handset is to the base, the lower the radiation.
- ◆ **Base station:** The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode**.



- ◆ **Eco Mode**
Reduces the radiation of the base station and handset by 80% - whether you are making a call or not. **Eco Mode** reduces the range of the base station by approx. 50%. Using **Eco Mode** always makes sense when a reduced range is sufficient.


Switching off radiation

- ◆ **Eco Mode+**
When you activate **Eco Mode+**, radiation (DECT transmission power) from the base and handset is switched off in the idle state.
This is also true when multiple handsets are used, provided the handsets support **Eco Mode+**.






Eco Mode / Eco Mode+ can be activated/deactivated independently of one another and can also be used with multiple handsets. The handset must not be placed in the base.

Activate/deactivate Eco Mode /Eco Mode+:


 →  → **Eco Mode**
→ **Eco Mode / Eco Mode+**

Change Press the display key ( = on).

Status displays

Display icon	
	Signal strength: – good to poor – no signal
 white	Eco Mode deactivated
 green	Eco Mode activated
 white	Eco Mode+ activated (displayed instead of the reception strength icon when in idle status)
 green	Eco Mode and Eco Mode+ activated

Please note

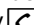
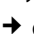
- ◆ With **Eco Mode+** activated, press and **hold** the talk key () to check that the base can be reached. You will hear the dial tone if the base can be reached.
- ◆ When **Eco Mode+** is activated:
 - Call setup is delayed by approx. two seconds.
 - Handset standby time is reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** will cause the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode / Eco Mode+** and repeater support (→ page 70) cancel each other out, i.e., if you use a repeater, you cannot use **Eco Mode** or **Eco Mode+**.


Setting an appointment (calendar)

You can use your handset to remind yourself of up to **30 appointments**. Anniversaries (→ page 39) entered in the directory are automatically recorded in the calendar.



Saving an appointment.

Prerequisite: The date and time have already been set (→ page 15).

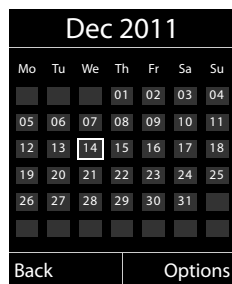
 →  → **Calendar**




- ◆ The current day is selected (highlighted in white).
- ◆ Days on which appointments have already been saved are highlighted in white.

  Select the required day in the graphical calendar.

The selected day is highlighted in white. The current day is no longer highlighted.

 Press the centre of the control key.

- ◆ If appointments have already been entered, this will open the list of saved appointments on that day. Select **<New Entry>** →  to open the data input window.
- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.

- You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Date:

Enter day/month/year in 8-digit format.

Time:


Enter hours/minutes in 4-digit format.

Text:

Enter text (max. of 16 characters). The text appears as the appointment name in the list and is displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

Signal:



Select the reminder type.

 Press the display key.


Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

Signalling appointments and anniversaries

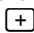An appointment reminder is signalled in idle status for 60 seconds with the selected ring-tone at the volume that has been set for internal calls (→ page 67). **During the reminder call**, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

The name is displayed for anniversaries, while the entered text is displayed for appointments along with the date and time.

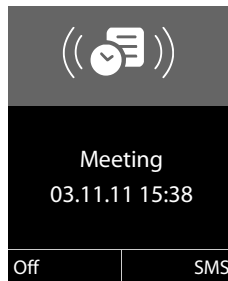

You can either deactivate or answer an appointment reminder:

Off

Press the display key to deactivate the appointment reminder.

or:

SMS

Press the display key to respond to the appointment reminder with an SMS.

Please note


During a call, the appointment reminder is signalled by a short tone.

Managing appointments

 →  → **Calendar**

Editing individual appointments



Select a day in the graphical calendar and press the control key . (Days on which appointments have already been saved are highlighted in white in the calendar).



Select appointment for the day.

You have the following options:

View

Press the display key and edit or confirm the entry.

or

Options

Open the menu for editing, deleting and activating/deactivating.

Deleting all appointments for one day


Options → **Delete all Appts.** → **OK**


Confirm the security prompt with **Yes**.
All appointments are deleted.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 39) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.
- ◆ Automatic redial was activated at the time of an appointment/anniversary (→ page 40).

The icon  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by pressing the **message key**  (→ page 41) or via the **menu**:

 →  → **Missed Alarms**

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

Delete

Delete appointment.

SMS

Write an SMS.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Setting the alarm clock

Prerequisite: The date and time have already been set (→ page 15).

Activating/deactivating and setting the alarm clock

 →  → Alarm Clock

► You can enter data in the following fields:

Activation:

Select **On** or **Off**.

Time:

Enter the wake-up time in 4-digit format.

How often:

Select **Daily** or **Monday-Friday**.

Volume:

Set the volume (1–6).



Melody:

Select melody.

Save Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ringtone (→ page 3). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

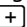While the wake-up call sounds, you can permanently change the volume by pressing the side keys  (louder) or  (quieter).

During a call, the wake-up call is only signalled by a short tone.

Deactivating the wake-up call/ repeating after a pause (snooze mode)

Prerequisite: A wake-up call is sounding.

OFF Press the display key. The wake-up call is deactivated.

or

Snooze

Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

Using multiple handsets

Registering handsets

You can register up to six handsets to your base.

A Gigaset S810H handset can be registered on up to four bases.

Manually registering a Gigaset S810H to a Gigaset S810

You must activate manual registration of the handset on both the handset (1) and the base (2).

When the registration process has completed successfully, the handset returns to idle status. The handset's internal number is shown in the display e.g., **INT 1**. If not, repeat the procedure. .

1) On the handset


The handset is not registered to a base.


Register Press the display key.

The handset is already registered to a base:

 →  → **Registration**
→ **Register Handset**

If the handset is already registered to four bases:

 Select base, e.g., **Base 3** and press **OK**.

 If required, enter the system PIN for the base and press **OK**.

A message appears stating that the handset is searching for a base that is ready for registration.

2) On the base

Within 60 seconds press and **hold** the registration/paging key on the base (→ page 2) (approx. 3 seconds).

Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows. .

1) On the handset

- ▶ Start to register the handset as described in its user guide.



2) On the base

Press and **hold** the registration/paging key on the base (→ page 2) (approx. 3 sec.).

De-registering handsets

You can de-register any other registered handset from any registered Gigaset S810H handset.

 →  → **Registration**
→ **De-reg. Handset**

 Select the internal subscriber you wish to de-register and press **OK**.
(The handset you are currently using is highlighted with <).
 Enter the current system PIN and press **Save**.

 Enter the current system PIN and press **Save**.


Yes Press the display key.

Locating a handset ("Paging")

You can locate your handset using the base.




- ▶ **Briefly** press the registration/paging key on the base (→ page 2).
- ▶ All handsets will ring simultaneously ("paging"), even if the ringtones are deactivated.

Ending paging

- ▶ **Briefly** press the registration/paging key on the base or press the talk key  on the handset.

Changing the base



If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).

 →  → **Registration** → **Select Base**
 Select one of the registered bases or **Best Base** and press **Select**.




Making internal calls

Internal calls to other handsets registered on the same base are free.

Calling a specific handset

 Initiate internal call.
 Enter the number of the handset.


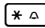
or:

 Initiate internal call.
 Select handset.
 Press the talk key.

Calling all handsets ("group call")

 Press and **hold**.


or:

 Initiate internal call.
 Press the star key.
or
Call All Select

 Press the talk key.



All handsets are called.

Ending a call

 Press the end call key.


Transferring a call to another handset

You can transfer an external call to another handset (connect).

-  Open the list of handsets.
The external participant hears music on hold, if activated (→ page 70).
-  Select a handset or **Call All** and press **OK**.


When the internal participant answers:

- ▶ If necessary, announce the external call.

-  Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End** to return to the external call.

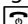

When transferring a call, you can also press the end call key  before the internal participant answers.

Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an **external** call:

-  Open the list of handsets.
The external participant hears music on hold, if activated (→ page 70).
-  Select handset and press **OK**.
The internal participant is called.



If the participant picks up, you can **either**:

- End** Press the display key.
You are reconnected with the external participant.

or:


- Conference** Press the display key.
All 3 participants are connected with each other.

Please note

- ◆ If only **two** handsets are registered, the other handset is called **immediately** by pressing the  key.
- ◆ Pressing and **holding** the  key calls **all** handsets **immediately**.

Ending a conference call

-  Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). With Calling Line Identification, the caller's number will appear in the display.

Ending an internal call, accepting an external call

- Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

Rejecting the external call

- Reject** Press the display key.

The call waiting tone is turned off. You remain connected to the internal participant. The ringtone can still be heard on other registered handsets.


Listening in to an external call

Prerequisite: The **Listening In** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of additional listeners by a signal tone.


Activating/deactivating listening in

 →  → **Telephony** → **Listening In**

Press **Change** to activate/deactivate the function ( = on).


Internal listening in

The line is engaged with an external call. Your screen will display information to that effect. To listen in to the external call.


 Press and **hold** the talk key.

You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

Ending listening in


 Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

Changing the name of a handset


The names "INT 1", "INT 2" etc. are assigned automatically on registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

 Open the list of handsets. Your own handset is indicated by ◀.

 Select handset.

Options Open menu.


Rename

 Enter name.

Save Press the display key.

Changing a handset's internal number


A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).

 Open the list of handsets. Your own handset is indicated by ◀.

Options Open menu.

Assign Handset No.

Select and press **OK**.

 Select number. Only numbers that have not been assigned are displayed.

Save Press the display key to save the input.

Using a handset as a room monitor (Babyphone)

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number is terminated after approximately 90 seconds. The room monitor call to an internal number (handset) is terminated after approximately 3 minutes (depending on the base). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker can be switched on or off (Two Way Talk = **On** or **Off**). If Two Way Talk is switched on, you can answer the room monitor call.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

Warning!

- ◆ Always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an external number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the base/charger. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the destination number

 → ★ → Room Monitor


► You can enter data in the following fields:



Activation:

Select **On** to activate.

Alarm to:

Select **Internal** or **External**.

External number: Select the number from the directory (press display key ) or enter it manually.

Internal number: Select display key  → . Select handset or **Call All** to call all registered handsets → .


In idle status, the destination number or the internal destination number is displayed.

Two Way Talk:


Switch the handset's speaker on or off (select **On** or **Off**).

Sensitivity:

Select noise level sensitivity (**Low** or **High**).

► Press  to save the settings.

When the room monitor function is activated, the idle display appears as shown below:

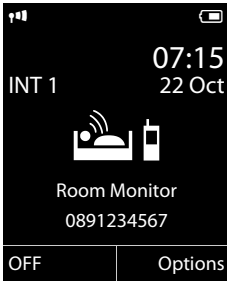

Changing the set destination number

→ ★ → **Room Monitor**

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 60).

Cancel/deactivate room monitor

Press the end call key to cancel the call when the **room monitor is activated**.

In **idle status**, press the display key **OFF** to deactivate room monitor mode.

Deactivating the room monitor remotely

Prerequisites: The phone must support tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys .

The room monitor function will deactivate after the call ends. There are no further room monitor calls. The other room monitor settings on the handset (e.g., no ringtone) will remain activated until you press the display key **OFF** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 60).

Using Bluetooth devices

Your Gigaset handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset to the handset. You can also register up to five data devices (PCs, PDAs and mobile phones) to send and receive directory entries as vCards or exchange data with the computer (→ page 79).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 69).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.

Please note

- ◆ You can operate headsets on your handset that have the **headset** or **handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.
- ◆ It can take up to five seconds to establish a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the headset.

Activating/deactivating Bluetooth mode

→ → **Activation**

Press **Change** to activate or deactivate Bluetooth mode (= activated).

In idle status, the icon on the handset shows that Bluetooth mode is activated (→ page 3).

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

Please note

- ◆ If you register a headset, any headset that is already registered will be over-written.
- ◆ If you would like to use a headset with your handset that is already registered to another device (e.g., to a mobile phone), please **deactivate** this connection before you start the registration process.

→ → Search for Headset / Search Data Device

The search can take up to 30 seconds.

Once the device has been found, its name is shown on the display.

Options Press the display key.

Trust Device

Select and press **OK**.



Enter the PIN for the Bluetooth device **you want to register** and press **OK**.

The device is saved in the list of known devices.

Cancelling/repeating current search

To cancel search:

Cancel Press the display key.

Repeat search if necessary:

Options Press the display key.

Repeat Search



Select and press **OK**.


Editing the list of known (trusted) devices

Open list

 →  → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding icon is shown in the header of the display instead of .

Viewing entries

Open list →  (select entry)

View Press the display key.

Device name and address are displayed.

Go back with **OK**.

Deregistering Bluetooth devices

Open list →  (select entry)

Options Press the display key.

Delete Entry

Select and press **OK**.

Please note

If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

Changing the name of a Bluetooth device

Open list →  (select entry)

Options Press the display key.

Edit Name Select and press **OK**.



Change the name.

Save Press the display key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

◆ Reject



Briefly press the end call key.

◆ Accept



Enter the PIN for the Bluetooth device **you want to accept** and press **OK**.

If you have accepted the device, you can use it temporarily (i.e., as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the device's PIN has been confirmed

- Save to the list of known devices: press display key **Yes**.
- Use temporarily: press display key **No**.

Changing the Bluetooth name of the handset

You can change the handset name used to identify it on the display of another Bluetooth device.



→ → **Own Device**

Change

Press the display key.



Change the name.

Save

Press the display key.

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Quick access to numbers and functions

You can assign a **number from the directory** to each of the **digit keys** and to



The left and right **display keys** have a default **function**. You can change the assignment (→ page 64).

The number is then dialled or the function started by simply pressing a key.

Assigning digit keys

Prerequisite: You have not yet assigned a number to the digit key.

- ▶ Press and **hold** the digit key **or**
Press the digit key **briefly** and press the display key **QuickDial**.

The directory opens.

- ▶ Select an entry and press **OK**.

The entry is saved to the corresponding digit key.

Please note

If you delete or edit the entry in the directory at a later date, this will not affect the assignment to the number key.

Selecting numbers/changing an assignment

Prerequisite: The digit key already has a number assigned to it.

When the handset is in idle status

- ▶ Press and **hold** the digit key:
The number is dialled immediately.

or

- ▶ **Briefly** press the digit key.
Press the display key with the number/
name (abbreviated if necessary) to select
the number **or**
press the display key **Change** to change
the assignment or to delete the assign-
ment.

Changing display key assignments

- ▶ Press and **hold** the left or right side of the display key.

The list of possible key assignments is opened. The following can be selected:

Room Monitor

Assign menu for setting and activating
the room monitor to a key (→ page 60).

Alarm Clock

Assign menu for setting and activating
the alarm clock to a key (→ page 56).

Calendar

Display graphical calendar (→ page 54).

Bluetooth

Assign the Bluetooth menu to a key
(→ page 61).

Redial

Display the redial list.

More Functions...

More features are available:

Call Lists

Display call lists (→ page 40).

INT

Internal calls (→ page 57).

SMS

Assign menu for SMS functions to a
key (→ page 44).

- ▶ Select an entry and press **OK**.

Changing the display language



You can view the display texts in different languages.


 →  → **Language**

The current language is indicated by a ●.

 Select language and
press **Select**.

If you accidentally choose a language you do
not understand:

 → 

 Select the correct language and
press the **right display key**.

Setting the display

Setting the screensaver/slide show

When in idle state, a picture or a slide show
(all the pictures are displayed one after the
other) from the **Screensaver** folder of the
Resource Directory (→ page 68) or the
time can be displayed as a screensaver. This
will replace the idle state display.

The screensaver is not displayed in certain
situations, e.g., during a call or if the handset
is de-registered.

If a screensaver is activated, the **Screensaver**
menu option is marked with ✓.

 →  → **Display + Keypad**
→ **Screensaver**

The current setting is displayed.

- ▶ You can enter data in the following fields:


Activation:

Select **On** (screensaver is displayed) or
Off (no screensaver).


Selection:

Select screensaver **or**

View Press the display key. The active
screensaver is displayed.

 Select screensaver and press
OK.

Save Press the display key.

Briefly press the end call key  to return to the idle display.

Please note

If the **analogue clock** has been set as the screensaver, the **second hand** is shown only when the handset is in the base.

Setting large font

You can increase the font size of print and symbols in call lists and in the directory to improve readability. Only one entry is shown at a time on the display instead of several entries and names are abbreviated if necessary.

 →  → **Display + Keypad**
→ **Large Font**

Change Press display key (☑ = on).

Setting the colour scheme

You can set the display to be shown in various colour combinations.

 →  → **Display + Keypad**
→ **Colour Schemes**

Select **Colour Scheme** (1 to 5) and press **OK**.

Setting the display Backlight

Depending on whether or not the handset is in the base/charger, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed. If the backlight is deactivated it is switched on by pressing any key. **Digit keys** appear on the display for pre-dialling; **all other keys** do not have any further functions.

 →  → **Display + Keypad**
→ **Display Backlight**

The current setting is displayed.

► You can enter data in the following fields:

In Charger

Select **On** or **Off**.

Out of Charger

Select **On** or **Off**.

Please note

With the **On** setting, the standby time of the handset can be significantly reduced.

Save

Press the display key.

Setting keypad illumination

The brightness of the keypad illumination can be set to one of five levels.

 →  → **Display + Keypad**
→ **Keypad Illumination**

The current setting is displayed.

► You can enter data in the following fields:


Brightness:


Select **1** (darkest) to **5** (brightest).

Save

Press the display key.

Activating/deactivating auto answer

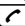If you activate this function, when you receive a call you can simply lift the handset out of the base/charger without having to press the talk key .

 →  → **Telephony** → **Auto Answer**





Change

Press display key (☑ = on).



Changing the speaker/earpiece volume

You can set the loudspeaker volume for handsfree mode and the earpiece volume to five different levels.

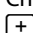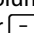
During a conversation via the earpiece or in handsfree mode:

 /  Press the side key to call up the **Handset Volume** menu.
Change the volume by pressing  (louder) or  (quieter).

or

 Press the control key to call up the **Handset Volume** menu. Set the earpiece or speaker volume by pressing .

The setting will automatically be saved after approximately 3 seconds, if not then press the display key **Save**.

If  is assigned to another function, e.g., call swap (→ page 34):

Options Open menu.

Volume Select and press **OK**.

Configure setting (see above).

Please note

- ◆ The settings for the earpiece also apply to a connected headset.
- ◆ You can also set the call volume using the menu (→ page 28).

Setting a handsfree profile

You can set different handsfree profiles to optimally adapt your phone to your environment.

Profile 1

The optimum setting for most connections and set as default.

Profile 2

Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).

Profile 3

Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

Profile 4

Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

In idle status:

 →   → **Audio Settings**
→ **Handsfree Profiles**

 Select handsfree profile (1 to 4).


Select Press the display key to save the setting.

During a conversation:

Options Open menu.

Handsfree Profiles

Select and press **OK**.

 Select handsfree profile (1 to 4).

Select Press the display key to save the setting.

Changing ringtones

◆ Volume:

You can choose between five volumes (1–5; e.g., volume 3 =) and the "crescendo" ringtone (6; volume increases with each ring =).

◆ Ringtones:

You can select a ringtone from a list of pre-loaded melodies.

You can select various ringtones, melodies or any sound from the Resource Directory (→ page 68).

You can set different ringtones for the following functions:

- ◆ Int. Calls
- ◆ Extern. Calls

Setting volume/melodies

In idle status:

→ → **Audio Settings**
→ **Ringtones(Handset)**
→ **Volume/Melodies**

Setting volume/melodies for internal calls and anniversaries.

Scroll to the next line.

Setting volumes/melodies for external calls.

Save Press the display key to save the setting.

While the phone is ringing, you can permanently change the volume by pressing the side keys (louder) or (quieter).

Additionally for external calls:

You can specify a time period when you do not want the telephone to ring, e.g., during the night.

→ → **Audio Settings**
→ **Ringtones(Handset)** → **Time Control**

For external calls:

Select **On** or **Off**.

If the time control is activated:

Suspend ring. from:

Enter the start of the period in 4-digit format.

Suspend ring. until:

Enter the end of the period in 4-digit format.

Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

Activating/deactivating the ringtone for unknown calls

You can set your handset so that it doesn't ring for calls where Calling Line Identification has been withheld. The call will only be signalled on the display.

In idle status:

→ → **Audio Settings**
→ **Ringtones(Handset)**
→ **Anon. Calls Silent**

Press **Change** to activate or deactivate the function (= on).

Activating/deactivating the ringtone

You can deactivate the ringtone on your handset before you answer a call or when the handset is in idle status; the ringtone can be deactivated permanently or just for the current call. The ringtone cannot be re-activated while an external call is in progress.

Deactivating the ringtone permanently

Press and **hold** the star key.

The icon appears in the display.

Reactivating the ringtone

Press and **hold** the star key.

Handset settings

Deactivating the ringtone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

In place of the ringtone, you can activate an alert tone. When you receive a call, you will hear a **short tone** ("Beep") instead of the ringtone.

*** Δ** Press and **hold** the star key and **within 3 seconds**:

Beep Press the display key. A call will now be signalled by **one** short alert tone.
-🔔 appears in the display.

Resource Directory



The resource directory on the handset manages sounds, which you can use as ringtones, and pictures, which you can use as caller pictures or as screensavers. Prerequisite: Calling Line Identification (CLIP). The resource directory can manage the following media types:

Type	Format
Sound	
Ringtones	Internal
Monophonic	Internal
Polyphonic	Internal
Imported sounds	WMA, MP3, WAV
Picture	
– Caller picture	BMP, JPG, GIF
– Screensaver	128 x 86 pixels
	128 x 160 pixels


Various mono and polyphonic sounds and pictures are preconfigured on your handset. You can listen to the available sounds and view the pictures.

You can download pictures and sounds from a PC (→ page 79). If there is not enough memory available, you must first delete one or more pictures or sounds.

Playing back sounds/viewing caller pictures


 →  → **Resource Directory**
→ **Screensavers / Caller Pictures / Sounds** (select entry)

Pictures:

View Press the display key. The selected picture is displayed. Switch between pictures using the  key.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.

Sounds:

The selected sound is played back immediately. Switch between the sounds using the  key.

You can set the volume during playback.

Options Open menu.

Volume Select and press **OK**.


 Set volume.

Save Press the display key.

Deleting/renameing a picture/sound

You have selected an entry.

Options Open menu.

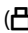If a picture/sound cannot be deleted () , these options are not available. You can select the following functions:

Delete Entry



The selected entry is deleted.

Rename

Change the name (max. 16 characters) and press **Save**. The entry is stored with the new name.

Checking the memory

You can check how much memory is available for screensavers and caller pictures.



 →  → **Resource Directory**
→ **Capacity**

Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:

- ◆ **Key tone:** every key press is confirmed.
- ◆ **Acknowledge tones:**
 - **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in or call list
 - **Error tone** (descending tone sequence): when you make an incorrect entry
 - **Menu end tone:** when scrolling to the end of a menu
- ◆ **Battery low beep:** the battery needs charging.

In idle status:

 →  → **Audio Settings**
→ **Advisory Tones**

► You can enter data in the following fields:

Key Tones:


Select **On** or **Off**.

Confirmation:

Select **On** or **Off**.

Battery:

Select **On** or **Off**.

 Press the display key.

Setting your own area code






To transfer phone numbers (e.g., in vCards), it is essential that your area code (international and local area code) is saved on the phone.

Some of these numbers are already preset.

 →  → **Telephony** → **Area Codes**

Check that the (pre)set area code is correct.

► You can enter data in the following fields:

-  Select/change input field.
-  Navigate in the input field.
-  If necessary, delete number: press the display key.
-  Enter number.
-  Press the display key.

Example:




Area Codes	
International code:	
00 - 30	
Local area code:	
0 - []	
< C	Save

Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset:



- ◆ Registration to the base
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, the call lists, the SMS lists and the content of the resource directory

 →  → **System** → **Handset Reset**
 Press the display key.

Setting the base

The base settings are carried out using a registered Gigaset S810H handset.

Activating/deactivating music on hold

 →  → **Audio Settings**
→ **Music on hold**

Press **Change** to activate or deactivate the music on hold (☒ = on).

Repeater support

With a repeater, you can increase the range and signal strength of your base. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

Prerequisite: A repeater is registered.

 →  → **System** → **Repeater Mode**

Press **Change** to activate or deactivate repeater mode (☒ = on).

After activating or deactivating the repeater, switch your handset off and on again (→ page 23).

— Please note —



- ◆ Eco Mode / Eco Mode+ (→ page 53) and repeater support cancel each other out, i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+.
- ◆ Encrypted transmission activated at the factory is deactivated when a repeater is registered.

Protecting against unauthorised access

Protect the system settings of the base with a PIN known only to yourself. The system PIN must be entered when, for example, registering/de-registering a handset to/from the base or when restoring the default settings.

Changing the system PIN

You can change the 4-digit system PIN set on the base (default setting: **0000**) to a 4-digit PIN known only by you.

 →  → **System** → **System PIN**



Enter the current system PIN and press **OK**.



Enter your new system PIN and press **OK**.

Resetting the system PIN

If you have forgotten your system PIN, you can reset the base to the original code **0000**:

Disconnect the power cable from the base. Hold down the registration/paging key on the base while reconnecting the power cable to the base. Hold down the key for at least 5 seconds.

The base has now been reset and the system PIN set to **0000**.

— Please note —

All handsets are de-registered and must be re-registered. All settings are reset to the factory settings.

Resetting the base to the factory settings

When the settings are restored:

- ◆ Date and time are retained
- ◆ Handsets are still registered
- ◆ **Eco Mode** is activated and **Eco Mode+** is deactivated,
- ◆ The system PIN is not reset.

 →  → **System** → **Base Reset**



Enter the system PIN and press **OK**.

Yes


Press the display key.

Connecting the base to the PABX

The following settings are only necessary if your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.

Dialling modes and recall


The current setting is indicated by .

Changing the dialling mode

The following dialling modes can be selected:

- ◆ Tone dialling (DTMF)
- ◆ Pulse dialling (PD).


 →  → **Telephony** → **Dialling Mode**

 Select dialling mode and press **Select** (● = selected).

Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

 →  → **Telephony** → **Recall**

 Select recall and press **Select** (● = set value).

Possible values are:

80 ms, 100 ms, 120 ms, 180 ms,
250 ms, 300 ms, 400 ms, 600 ms,
800 ms.

Saving an access code (outside line code)

Prerequisite: You may have to enter an access code in front of the number for external calls in your PABX, e.g., "0".

 →  → **Telephony** → **Access Code**



Enter or change access code, max. 3 digits.

Save


Press the display key.

If an access code has been saved:






- ◆ The access code is prefixed automatically when you dial a number from the following lists: SMS centre numbers, call lists or .
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers or SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C**.

Setting pauses


Changing the pause after line seizure

You can change the length of the pause that is inserted between pressing the talk key  and sending the number.

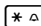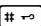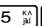 Open the main menu.

  0 +   1 





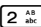
Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 3 secs.; 3 = 7 secs.) and press **OK**.


Change pause after recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

 Open the main menu.

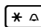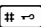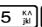  0 +   1 





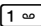
Press keys.

 Enter a number for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.


Changing a dialling pause (pause after access code)


Prerequisite: You have saved an access code (→ page 71).

 Open the main menu.

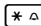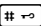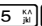  0 +   1 

Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 2 secs.; 3 = 3 secs.; 4 = 6 secs.) and press **OK**.

To insert a dialling pause: press and hold  for 2 seconds. A P appears in the display.

Switching temporarily to tone dialling (DTMF)

If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call.

Prerequisite: You are conducting a call or have already dialled an external number.

 Press the star key.

After the call ends, pulse dialling is automatically activated again.

Customer Service & Assistance

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this **User Manual** and in the **service pages of our Gigaset online portal**.

Please register your phone right after purchase on www.gigaset.com/gr/service thus enabling us to provide you even with better service in case of questions or in case of a warranty claim. Your personal user account enables you to directly contact our customer service by email.

In our constantly updated online service on www.gigaset.com/gr/service you can find:

- ◆ Extensive information about our products
- ◆ FAQ compilations
- ◆ Keyword search to help find topics quickly
- ◆ Compatibility database: Find out which base stations and handsets can be combined.
- ◆ Product comparison: Compare the features of several products with each other.
- ◆ Downloads for user manuals and current software updates
- ◆ E-mail contact form to our customer service

Our service representatives are available on the **telephone** for more advanced questions or in-person consultation.

Service Greece 801 1000 500

(0.026 € per minute from the Greek phone network. For calls from mobile phone networks, other prices may apply.)



Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

Questions and answers

If you have any questions about the use of your phone, you can contact us 24/7 at www.gigaset.com/service.

The table below contains a list of common problems and possible solutions.

<p>Registration or connection problems with a Bluetooth headset.</p> <ul style="list-style-type: none"> ▶ Reset the Bluetooth headset (see the user guide for your headset). ▶ Delete registration data from the handset when deregistering the device (→ page 62). ▶ Repeat the registration process (→ page 62).
<p>The display is blank.</p> <ol style="list-style-type: none"> 1. The handset is not switched on. <ul style="list-style-type: none"> ▶ Press and hold the end call key . 2. The battery is empty. <ul style="list-style-type: none"> ▶ Charge the battery or replace it (→ page 11).
<p>Not all menu items are displayed.</p> <p>The menu display is restricted (standard mode).</p> <ul style="list-style-type: none"> ▶ Activate extended menu display (expert mode  (→ page 26).
<p>No Base flashes on the display.</p> <ol style="list-style-type: none"> 1. The handset is outside the range of the base. <ul style="list-style-type: none"> ▶ Move the handset closer to the base. 2. The base's range is reduced because Eco Mode is activated. <ul style="list-style-type: none"> ▶ Deactivate Eco Mode (→ page 53) or reduce the distance between the handset and the base. 3. The base is not switched on. <ul style="list-style-type: none"> ▶ Check the base power adapter (→ page 9).
<p>Please register handset flashes on the display.</p> <p>Handset has not been registered with the base or has been deregistered.</p> <ul style="list-style-type: none"> ▶ Register the handset (→ page 56).
<p>Handset does not ring.</p> <ol style="list-style-type: none"> 1. The ringtone is deactivated. <ul style="list-style-type: none"> ▶ Activate the ringtone (→ page 67). 2. Call divert set for "All Calls". <ul style="list-style-type: none"> ▶ Deactivate call divert (→ page 33). 3. The phone only rings if the phone number has been transferred. <ul style="list-style-type: none"> ▶ Switch on the ringtone for unknown calls (→ page 67).

You cannot hear a ringtone/dialling tone from the fixed line network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 9).

The connection always terminates after approx. 30 seconds.

Repeater activated/deactivated (→ page 70).

- ▶ Activate/deactivate the handset (→ page 23).

Error tone sounds after system PIN prompt.


You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 70).

Forgotten the system PIN.

- ▶ Reset the system PIN to 0000 (→ page 70).

The other party cannot hear you.

You have pressed the mute button . The handset is "muted".

- ▶ Reactivate the microphone (→ page 32).

The number of the caller is not displayed despite CLIP.

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to enable Calling Line Identification (CLI).

You hear an error tone when keying an input (a descending tone sequence).

Action has failed/invalid input.

- ▶ Repeat the operation.
Watch the display and refer to the user guide if necessary.

You cannot listen to messages on the network mailbox.

Your PABX is set for pulse dialling.

- ▶ Set your PABX to tone dialling.

Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated. As a pixel is made up of three sub-pixels (red, green, blue), it is possible that pixel colours may vary.

This is completely normal and does not indicate an error.

Authorisation

This device is designed for the analogic telephone connection in the greek telephone net.

Gigaset Communications GmbH hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

If you require a copy of the original, visit the **website:**

www.gigaset.com/docs

CE 0682

Guarantee Certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (e.g., batteries, keypads, casings), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the equipment defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- ◆ This Guarantee shall not extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software

downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Gigaset Communications Austria GmbH, Businesspark Marximum Objekt 2 / 3, Stock, Modecenterstraße 17, 1110 Vienna, Austria.
- ◆ Any claims that differ from or extend beyond these mentioned in this manufacturer's warranty shall be excluded, except from cases expressly specified in the applicable law. (In no event shall Gigaset Communications be liable for any loss of business, profits or data, additional software loaded by the customer or other information. The customer shall also bear the responsibility for the creation of backup copies of their files. The limitation of liability shall not apply if and to the extent liability is mandatory under the applicable law, e.g. according to product liability law or in the event of intentional misconduct, severe negligence, personal injury, damage to parts of the human body or to personal health, or in case of violations of conventional obligations. However, the claims for damages related to violation of conventional obligations shall be limited to predictable damages, representative of such conventions, as long as there is no intention or severe negligence, personal injury, damage to parts of the human body or to personal health, according to the product liability law.)

Protecting our environment

- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions do not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Protecting our environment

Our environmental mission statement

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

ISO 14001 (Environment): certified since September 2007 by TüV SÜD Management Service GmbH.

ISO 9001 (Quality): certified since 17/02/1994 by TüV SÜD Management Service GmbH.

Ecological energy consumption

The use of ECO DECT (→ page 53) saves energy and makes an active contribution towards protecting the environment.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities.



If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC.

The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.

For further information on disposing of your used equipment, please contact your local authority, your refuse collection service.

Appendix

Caring for your telephone

- ▶ Wipe the device with a **damp cloth** or an **antistatic cloth**. Do not use solvent or a microfibre cloth.
- ▶ Impairments in the high-gloss finish can be carefully removed using display polishes for mobile phones.

Never use a dry cloth as this can cause static.

Contact with liquid

If the device comes into contact with liquid:

1. **Unplug the power supply** and/or **remove the battery** from the handset **immediately**.
2. Allow the liquid to drain from the device.
3. Pat all parts dry. Place the device (handset with the battery compartment open and the keypad facing down) in a dry, warm place **for at least 72 hours** (not in a microwave, oven etc.).
4. **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Specifications

Batteries

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. The use of special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way they are used. (All times are maximum possible times).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)*	140/ 50	165/ 58	185/ 67	230/ 83
Talktime (hours)	11	12	14	17
Operating time for 1.5 hrs of calls per day (hours)**	85	95	110	135
Charging time in base (hours)	7,5	8,5	10	12
Charging time in charger (hours)	6,5	7,5	8,5	10,5

* without/with display backlight

** without display backlight

(Setting the display Backlight → page 65)

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

www.gigaset.com/service

Base power consumption

In standby mode:
approx. 1.1 watt

During the conversation:
approx. 1.0 watt

General specifications


DECT

DECT standard	Is supported
GAP standard	Is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ PD (pulse dialling)

Bluetooth

Radio frequency range	2402–2480 MHz
Transmission power	4 mW pulse power

Pin connections on the telephone jack

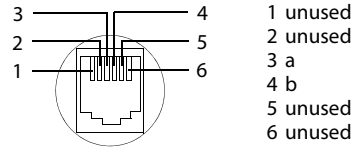

Writing and editing text

The following rules apply when writing text:

- ◆ Each key between **[0 +]** and **[9 221x wwy]** is assigned several letters and characters.
- ◆ Control the cursor with **[←]**, **[→]**, **[↶]**, **[↷]**. Press and **hold** **[←]** or **[→]** to move the cursor **word by word**.
- ◆ Characters are inserted at the cursor position.
- ◆ Press the star key **[* Δ]** to display the table of special characters. Select the required character and press the display key **[Insert]** to insert the character at the cursor position.
- ◆ Press and **hold** **[0 +]** to **[9 221x wwy]** to enter digits.
- ◆ Press display key **[<C]** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **[# ↔]** to change the text input mode.

123	Writing digits
Abc	Upper case *
abc	Lower case

* First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing an SMS/names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 00	1									
2 ABC	a	b	c	2	ä	á	à	â	ã	ç
3 DEF	d	e	f	3	ë	é	è	ê		
4 GHI	g	h	i	4	ï	í	ì	î		
5 JKL	j	k	l	5						
6 MNO	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 PQRS	p	q	r	7	ß					
8 TUV	t	u	v	8	ü	ú	ù	û		
9 WXYZ	w	x	y	9	ÿ	ý	æ	ø	å	
0 +	1)	.	,	?	!	2)	0			

- 1) Space
- 2) Line break

Greek

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x
1 00	1											
2 ABC	α	β	α	2	a	b	c					
3 DEF	δ	ε	φ	ε	3	d	e	f				
4 GHI	γ	η	ι	ή	ί	ϊ	ϊ	4	g	h	i	
5 JKL	κ	λ	5	j	k	l						
6 MNO	μ	v	o	ω	ó	ώ	6	m	n	o		
7 PQRS	π	p	ς	σ	ψ	7	p	q	r	s		
8 TUV	θ	τ	8	t	u	v						
9 WXYZ	ζ	ξ	u	χ	ú	ü	ü	9	w	x	y	z
0 +	1)	.	,	?	!	2)	0					

- 1) Space
- 2) Line break

Additional functions via the PC interface

To enable your handset to communicate with the PC, the "Gigaset QuickSync" program must be installed on your PC (free to download at www.gigaset.com/gigaset810).

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth (→ page 61) or a USB data cable (→ page 18).

Please note

Please connect your handset **directly** to the PC; do **not** connect via a USB hub.

If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle.

Please note

- ◆ If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- ◆ If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

Transferring data

Start the "Gigaset QuickSync" program.

You can now:

- ◆ Synchronise your handset directory with Outlook
- ◆ Download caller pictures (.bmp) from the computer to the handset,
- ◆ Download pictures (.bmp) as a screen-saver from the computer to the handset.
- ◆ Download sounds (ringtones) from the computer to the handset.

During the transfer of data between handset and PC, you will see **Data transfer in progress** on the display. During this time the keypad is disabled, and incoming calls will be ignored.



Completing a firmware update

- ▶ Connect your phone to your PC using a **USB data cable** (→ page 18).
- ▶ Start the "**Gigaset QuickSync**" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select [**Settings**] → [**Device properties**] to open the [**Device**] tab.
- ▶ Click on [**Firmware update**].

This launches the firmware update.

The update process can take up to 10 minutes (not including the download time). **Do not interrupt the process or remove the USB data cable.**

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.

The display on your phone is switched off and the message key  and the talk key  start flashing.



Once the update is complete, your phone will automatically restart.

Procedure in case of an error



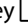
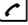
If the update procedure fails or your phone does not work properly following the update, repeat the update procedure as follows:

- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 11).
- ▶ Replace the battery.
- ▶ Complete the firmware update as described.

If the update procedure fails several times or you can no longer connect to the PC, proceed as follows (**emergency update**):

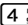- ▶ Close the "**Gigaset QuickSync**" program on the PC.
- ▶ Remove the USB data cable from the telephone.
- ▶ Remove the battery (→ page 11).
- ▶ Press and hold keys  and  with the index and middle finger.

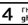

- ▶ Replace the battery.
- ▶ Release keys  and . The message key  and the talk key  will flash alternately.
- ▶ Complete the firmware update as described.

Please note

Personal pictures and sounds that you have loaded to your handset should always be saved on your PC as they will be deleted during an **emergency update**.

Accessories

Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

Gigaset S810H handset

- ◆ Brilliant sound quality in handsfree mode
- ◆ High-quality genuine metal keypad with illumination
- ◆ Plus/minus key for simple volume control
- ◆ 1.8" TFT colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 13h/180h, standard batteries
- ◆ Large font for call lists and directory
- ◆ Brilliant sound quality in handsfree mode:
4 handsfree settings
- ◆ Caller pictures, screensaver (analogue and digital clock)
- ◆ Download ringtones
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from unknown calls
- ◆ Room monitor (Babyphone), One Touch Call mode
- ◆ SMS with up to 640 characters

www.gigaset.com/gigaset810h



Gigaset C610H handset

- ◆ Social life management with room monitor and birthday reminders
- ◆ Individual programming of ringtones with 6 VIP-groups
- ◆ High-quality keypad with illumination
- ◆ 1.8" TFT colour display
- ◆ Directory for up to 150 vCards
- ◆ Talk/standby time of up to 12h/180h, standard batteries
- ◆ Large font for call lists and directory
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver (digital clock)
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from unknown calls
- ◆ Room monitor (Babyphone), One Touch Call mode
- ◆ SMS with up to 640 characters

www.gigaset.com/gigasetc610h



Gigaset SL400 handset

- ◆ Genuine metal frame and keypad
- ◆ High-quality keypad illumination
- ◆ 1.8" TFT colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 14h/230h
- ◆ Large font for call lists and directory
- ◆ Brilliant sound quality in handsfree mode:
4 handsfree settings
- ◆ Caller pictures, slide show and screensaver
(analogue and digital clock)
- ◆ Silent alert, download ringtones
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone deactivation
- ◆ No interruptions from unknown calls
- ◆ Room monitor (Babyphone), One Touch Call mode
- ◆ SMS with up to 640 characters

www.gigaset.com/gigaset/sl400



Gigaset SL78H handset

- ◆ Real metal frame
- ◆ Modern keypad with high-quality illumination
- ◆ 2.2" TFT QVGA colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 14h/200h
- ◆ Brilliant sound quality in handsfree mode
- ◆ Caller pictures, slide show and screensaver
(analogue and digital clock)
- ◆ Download ringtones
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringtone
deactivation
- ◆ Room monitor (Babyphone)
- ◆ SMS with up to 640 characters

www.gigaset.com/gigaset/sl78h



Gigaset E49H handset

- ◆ Resistant to shocks, dust and water splashes
- ◆ Hardy illuminated keypad
- ◆ Colour display
- ◆ Directory for up to 150 entries
- ◆ Talk/standby time of up to 12h/250h
Standard batteries
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Room monitor (Babyphone)
- ◆ SMS with up to 640 characters

www.gigaset.com/gigasete49h



L410 handsfree clip for cordless phones

- ◆ Move during a call without any restrictions
- ◆ Handy clip belt
- ◆ Brilliant sound quality in handsfree mode
- ◆ Simple to transfer calls from the handset
- ◆ Weight approx. 30 g
- ◆ ECO-DECT
- ◆ Five different volume levels
- ◆ Status indication via LED
- ◆ Talk/standby time of up to 5 h/120 h
- ◆ Range of up to 50 m indoors and up to 300 m outdoors

www.gigaset.com/gigasetl410



Gigaset repeater

The Gigaset repeater can be used to increase the reception range between your Gigaset handset and the base.

www.gigaset.com/gigasetrepeater



Compatibility

For more information on handset functions in relation to Gigaset bases, please visit:


www.gigaset.com/compatibility

All accessories and batteries are available from your phone retailer.





Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.


Mounting the base on the wall

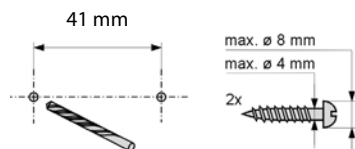

Approx.
5.5 mm

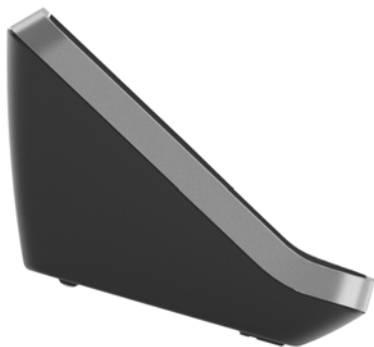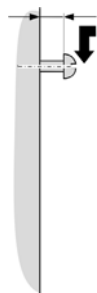

Mounting the charger on the wall

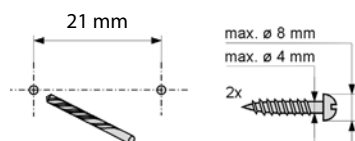

Approx.
4 mm



Index

A

Access code	71
for a PABX	71
Access protection	70
Accessories	81
Acknowledge tones	69
Activating	
advisory tones	69
appointment	54
handset	23
keypad lock	23
listening in	59
muting ringtone	46
network mailbox	35
room monitor	60
Advisory tones	69
Alarm clock	56
Alert tone	68
Anniversary	39
deactivating	39
missed	42, 55
saving in the directory	39
Appointment	54
Appointment/anniversary	
display missed	55
Appointments	
activating/deactivating	55
deleting	55
managing	55
Area code	
setting own area code	69
Assigning a number key	63
Authorisation	75
Auto answer	30, 65
Automatic	
network provider preselection	43
redial	40

B

Babyphone	60
Backlight, keypad	65
Base	
changing	57
connecting	9

connecting to PABX	71
restoring to factory settings	70
setting up	9
settings	70
system PIN	70

Battery

charging	2, 3, 13
display	2, 3
icon	2, 3
inserting	11
tone	69

Best base

 see Anniversary

Bluetooth

accepting a call	30
activate	61
changing device name	62, 63
deregistering devices	62
list of known devices	62
registering devices	62
transferring directory (vCard)	38

C

Calendar

Call

accepting	30
accepting (Bluetooth)	30
connect participant	59
ending	29
external	29
internal	57
transferring (connecting)	58, 59

Call divert

Call duration

Call lists

Call swap

Call waiting

accepting/rejecting	33
activating/deactivating	33
external call	33
internal call	58

Call-by-call

Caller Picture

Calling

external	29
internal	57

Calling line display, notes

Index

Calling Line Identification 30
Cancelling
 preselection 43
Care of the telephone 77
Caring for your telephone 77
CD, see Call divert
Changing
 destination number (room monitor) .. 61
 device name (Bluetooth) 62, 63
 dialling mode 71
 display language 14, 64
 earpiece volume 66
 internal number of a handset 59
 name of a handset 59
 pauses 72
 ringtone 67
 speaker volume 66
 system PIN 70
Character set 45, 47, 79
Charge status display 2, 3
CLI, CLIP 30
Colour scheme 65
Conference 34
 internal 58
Confirmation tone 69
Connecting
 base to PABX 71
 headset 18
Consultation call 34
 internal 58
Control key 2, 20
Correcting incorrect entries 21
Customer Care 73
Customer Service & Assistance 73

D

Deactivating
 advisory tones 69
 appointment 54
 handset 23
 keypad lock 23
 listening in 59
 muting ringtone 46
 network mailbox 35
 room monitor 61
Delete key 21
Deleting, characters 21
De-registering (handset) 57
Deregistering devices (Bluetooth) 62
Destination number (room monitor) 60

Dialling
 using quick dial 38, 63
 using the directory 37
Dialling mode 71
Dialling pause 72
Directory 36
 copying number from text 38
 managing entries 37
 opening 20
 order of entries 37
 saving anniversary 39
 saving entry 36
 saving sender's (SMS) number 47
 sending entry/list to handset 38
 transferring a vCard (Bluetooth) 38
 using to enter numbers 39

Display

 backlight 65
 changing display language 14, 64
 colour scheme 65
 directory memory 38
 in idle status 17, 23
 memory (resource directory) 68
 missed anniversaries 42
 missed appointments/anniversaries .. 55
 network mailbox message 52
 number (CLI/CLIP) 30
 screensaver 64
 setting 64
 slide show 64
Display keys 2, 21
 assigning 63
Disposal 76
Draft message list (SMS) 45

E

Earpiece volume 66
ECO DECT 53
Eco mode 53
Eco mode+ 53
E-mail address 45
 copying from the directory 39
End call key 2, 29
Ending, call 29
Entry
 saving (network mailbox) 52
 saving, changing (preselection) 43
 selecting from directory 37
Environment 76
Error tone 69

Expert mode 26, 74
 External call
 call waiting 33

F

Fast access
 network mailbox 52
 Fax (SMS) 46
 Firmware update 80
 Flashing of the message key
 disable/enable 42

G

General troubleshooting 74
 Group call 57
 Guarantee Certificate 75

H

Handset
 activating/deactivating 23
 advisory tones 69
 changing internal number 59
 changing name 59
 changing the number 59
 changing to a different base 57
 changing to best reception 57
 colour scheme 65
 contact with liquid 77
 de-registering 56, 57
 display backlight 65
 display language 14, 64
 earpiece volume 66
 idle status 23
 keypad backlight 65
 large font 65
 list 20
 locating 57
 muting 32
 paging 57
 registering 56
 registering to a different base 57
 restoring to factory settings 69
 screensaver 64
 set up for use 11
 setting 63
 speaker volume 66
 transferring a call 58
 using multiple 56
 using room monitor 60

Handset mode 31
 Handset operating time
 in room monitor mode 60
 Handsfree
 set profile 66
 Handsfree key 2
 Handsfree mode 31
 Handsfree profile 66
 Hash key 2, 23
 Headset (Bluetooth) 61
 Headset socket 18
 Hearing aids 7
 Help 74

I

Icon
 alarm clock 56
 for new messages 41
 keypad lock 23
 new SMS 46
 ringtone 67
 Idle status (display) 17, 23
 Idle status, returning to 23
 Incoming message list (SMS) 46
 Incorrect entries (correction) 21
 Info services (SMS) 50
 Installing, base 9
 Internal
 conference 58
 consulting 58
 listening in 59
 making calls 57
 Internal call 57
 call waiting 58

K

Key
 assigning to a function or number 63
 Key 1 (fast access) 2
 Keypad backlight 65
 Keypad lock 23
 Keys
 control key 2, 20
 delete key 21
 display keys 2, 21
 end call key 2, 29
 fast access 2
 handsfree key 2
 hash key 2, 23

Index

- message key 2
- mute key 2
- on/off key 2
- quick dial 38
- recall key 2
- side keys 2
- star key 2
- talk key 2, 29
- L**
- Language, display 14, 64
- Large font 65
- Linking, see SMS
- Liquid 77
- List
 - call lists 40
 - handsets 20
 - known devices (Bluetooth) 62
 - missed calls 40
 - network mailbox 41
 - SMS draft message list 45
 - SMS incoming message list 46
 - SMS list 41
- Listening in to a call 59
- Locating, handset 57
- Lock
 - activating/deactivating keypad lock .. 23
- M**
- Mailbox ID, see SMS
- Mailboxes, see SMS
- Making calls
 - accepting a call 30
 - cost-effective calls 43
 - external 29
 - internal 57
- Manual redial 40
- Medical equipment 7
- Memory
 - directory 38
 - resource directory 68
- Menu
 - end tone 69
 - opening 20
 - overview 26
 - using 22
- Menu display
 - expert mode 26, 74
 - standard mode 26, 74
- Message key 2
- disable/enable flashing 42
- open list 46
- opening lists 41
- Microphone 2
- Missed
 - anniversary 55
 - appointment 55
- Missed calls 40
- Music on hold 70
- Mute key 2
- Muting
 - first ringtone 46
 - handset 32
- N**
- Name of a handset 59
- Network mailbox 52
- Network provider preselection,
 - automatic 43
- Network services 33
- Night mode, see Time Control
- Notification via SMS 48
- Number
 - as destination for room monitor 60
 - copying from an SMS text 47
 - copying from directory 39
 - copying to the directory 38
 - displaying caller's number (CLIP) 30
 - entering network mailbox number ... 52
 - entering with directory 39
 - fixed destination call 35
 - saving in directory 36
- O**
- On/Off key 2
- One Touch Call 29
- Order in directory 37
- P**
- PABX
 - connecting base 71
 - pauses 72
 - saving access code 71
 - setting dialling mode 71
 - setting recall 71
 - SMS 50
 - switching to tone dialling 72

Package contents	8
Paging	57
Paging key.....	2
Pause	
after access code.....	72
after line seizure	72
after recall key	72
PC interface	79
PD (pulse dialling).....	71
Picture	
Caller	36, 68
deleting.....	68
renaming.....	68
PIN change	
system PIN	70
Pin connections.....	78
Power adapter	7
Power consumption.....	78
Preselection	43
cancelling	43
Protecting the phone against	
access.....	70
Pulse dialling	71

Q

Questions and answers	74
Quick dial.....	36, 63

R

Range	9
Recall	71
Recall key.....	2, 72
Reception booster, see Repeater	
Redial	40
Redirect, see Call divert	
Registering (handset).....	56
Registering devices (Bluetooth)	62
Registration key.....	2
Reminder call	39
Repeater	70
Resource directory	68
Ringtone	
changing.....	67
muting.....	46
setting volume.....	67
Ringtone deactivated for unknown	

call	67
Room monitor	60

S

Saving (access code).....	71
Screensaver	64
Search directory	37
Sending	
directory entry to handset	38
Sensitivity (room monitor)	60
Setting the date.....	15, 28
Setting the time.....	15, 28
Setting up	
handset	11
Side keys	2
Signal tone, see Advisory tones	
Slide show.....	64
SMS.....	44
active send service centre	49
changing mailbox.....	49
deleting.....	45, 47
draft message list	45
forwarding	47
incoming message list.....	46
info services	50
linked	44
list.....	41
mailbox ID.....	48
mailboxes	48
notification by SMS	48
PIN protection	48
reading	45, 47
receiving	46
replying to or forwarding	47
saving number.....	47
self help with error messages	51
sending as a fax.....	46
sending to a personal mailbox	49
sending to an e-mail address.....	45
to PABXs	50
troubleshooting	51
vCard	47
writing	44, 78
SMS centre	
changing number.....	49
setting	49

Index

Snooze mode	56
Sound, see Ringtone	
Special functions	71
Specifications	77
Standard mode	26, 74
Star key	2
System settings	70

T

Talk key	2, 29
Telephone jack, pin connections	78
Text message, see SMS	
Three-party conference	34
Time Control (Night mode)	67
Tone dialling	71, 72
Troubleshooting (SMS)	51
Two Way Talk (room monitor)	60

U

Update	80
USB connection	18

V

vCard (SMS)	47
Viewing the network mailbox message	52
Volume	
earpiece	66
handset speaker volume	66
loudspeaker	66
ringtone	67

W

Warning tone, see Advisory tones	
Writing (SMS)	44
Writing and editing text	78

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

www.gigaset.com