


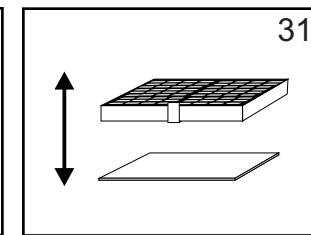
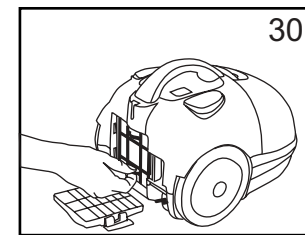
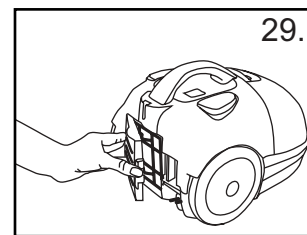
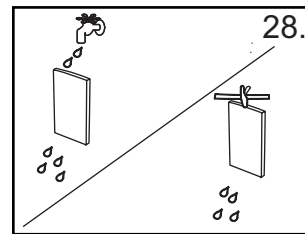
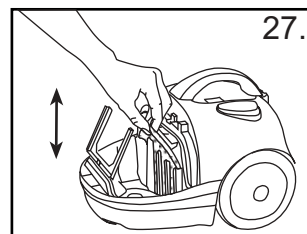
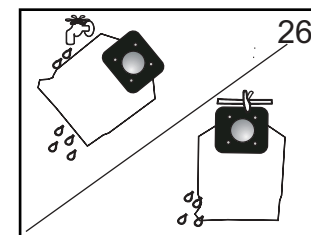
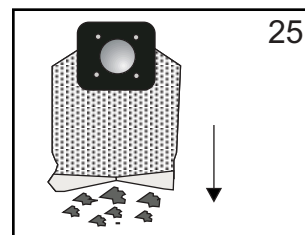
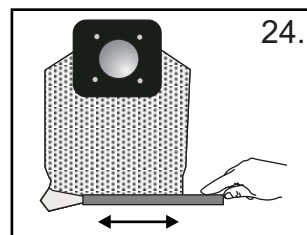
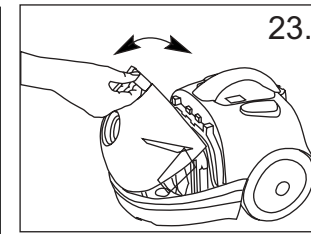
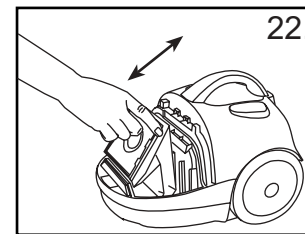
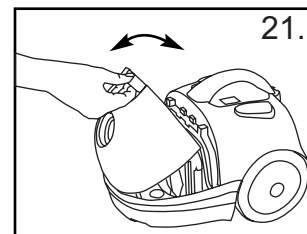
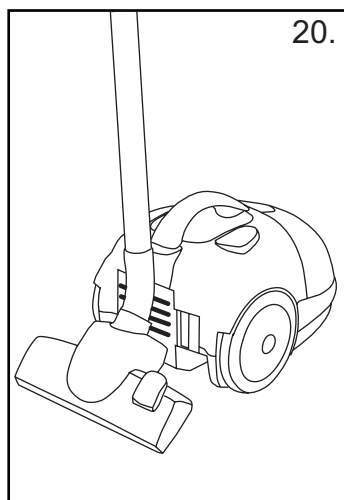


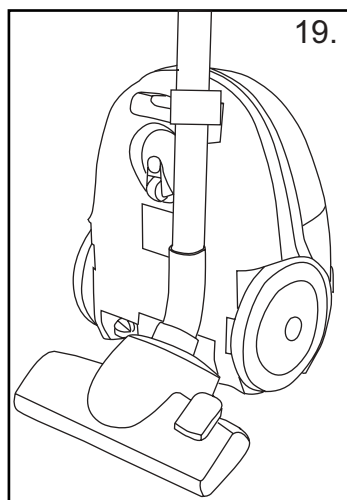

PC3200
PC3201
PC3205

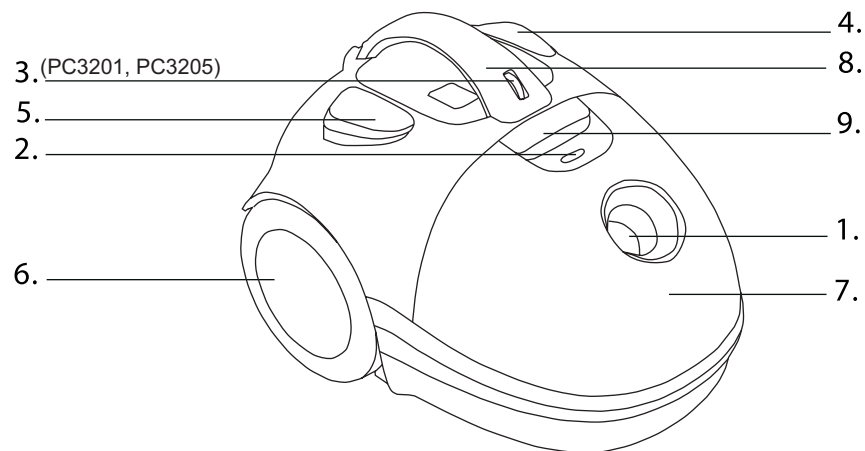

3302 02 03 02

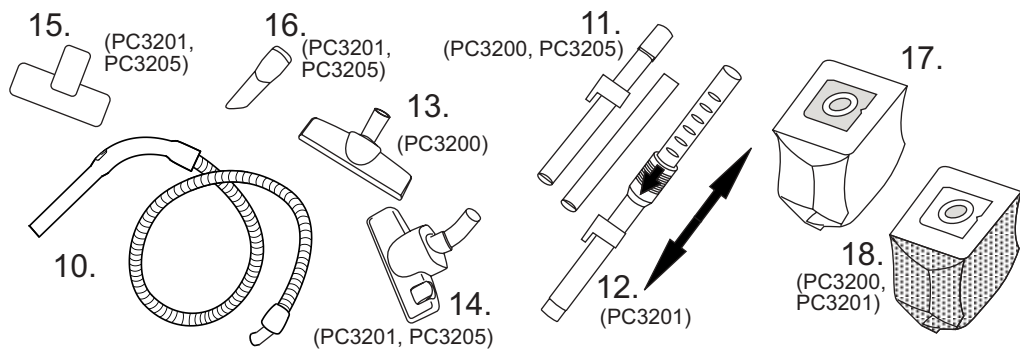

English

Français

Italiano

Español

Português

Magyar

Polski

Hrvatski

Slovensky

Česky

DESCRIPTION

1.	Suction inlet	11.	Metal tubes (PC3200, PC3205)
2.	Dustbag full indicator	12.	Telescopic tube (PC3201)
3.	Variable power control (PC3201, PC3205)	13.	Floor nozzle (PC3200)
4.	On/off switch	14.	Dual purpose floor nozzle (PC3201, PC3205)
5.	Cable rewind button	15.	Upholstery nozzle (PC3201, PC3205)
6.	Wheel	16.	Crevice nozzle (PC3201, PC3205)
7.	Dustbag compartment	17.	Dustbag
8.	Carrying handle	18.	Clothbag (PC3200, PC3201)
9.	Compartment open button	19.	Vertical parking
10.	Hose	20.	Horizontal parking

IMPORTANT SAFEGUARDS

- Read this instruction booklet carefully.
- Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate.
- Do not switch the appliance on if it appears to be faulty in any way or it has a damaged cord or plug. Do not try to repair the appliance by yourself. For repairs or accessories, contact Electrolux Customer Services on 08706 055 055.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any cleaning or maintenance operations.
- Never leave the appliance unattended when it is switched on. Keep the appliance out of reach of children.
- This appliance is for domestic use only. Use as described in this instruction booklet.
- Do not pull the appliance by the cord. Do not unplug by pulling on the cord.
- Do not use appliance on wet surfaces or to vacuum liquids, mud, ash and burning cigarette butts. Do not vacuum up any highly flammable or explosive substances or gases.
- Do not unplug the vacuum cleaner with wet hands.
- Do not operate the vacuum cleaner too close to heaters and radiators, stoves etc.
- Before you start using the vacuum cleaner, please remove large or sharp objects from the floor to prevent damage to the cloth dustbag.

INSTRUCTIONS FOR USE

- Before placing into operation make certain that the filters are in the proper position.
- Before using the appliance, unwind a sufficient length of cable and insert the plug into the power socket. A YELLOW mark on the power cable shows the ideal cable length. Do not extend the cable beyond the RED mark.
- Press the ON/OFF button to switch the appliance on. It is advisable to set the power control to MIN before switching on the appliance (PC3201, PC3205).
- To rewind the power cable, press the rewind button with foot, and guide the cable with hand to ensure that it does not whip causing damage.
- By moving the variable power control, the suction power can be adjusted (PC3201, PC3205).

MAINTENANCE

REPLACING THE DUSTBAG

- Always operate the cleaner with the dustbag installed.
- If you forget to attach the dustbag or attach it in the wrong manner, the dust cover may not close completely.
- After removing the flexible hose, open the front cover (fig. 21).
- Remove the support of the bag.
- Remove the dustbag and insert a new one (fig. 22).
- Close the cover by pressing down until it clicks (fig. 21).
- Dustbag reference number Menalux T183.

Textile dustbag (PC3200, PC3201)

- Remove the textile bag from the holder (fig. 23).
- Slide the plastic clip away from the bag to open and empty it (fig. 23-24).
- Replace the plastic clip ensuring that both sides of the bag are parallel (fig. 23).
- Replace the bag into the holder (fig. 23).

Note: The bag may be washed in luke warm water and dried completely. It should not be washed in washing machine (fig. 26).

- Close the cover by pressing down until it clicks (fig. 21).

REPLACING THE FILTERS

- The dustbag must be replaced if the window of the dustbag full indicator is completely red when the cleaner is operating at maximum power and the nozzle is raised from the floor.
- Filters should be replaced at least twice a year or when they become visibly soiled.
- Always operate the cleaner with filters installed to avoid reduced suction.
- Disconnect from electrical outlet before changing the filters.
- Do not use a washing machine to rinse filters.
- Pull dustbag upward and remove the motor protection filter (fig. 27).
- Rinse the filter under tap water and dry it completely (fig. 28).
- Place the filter back into the cleaner (fig. 27).
- Open the filter cover to remove the exhaust filter with grill (fig. 29, 30).
- Take the filter out of the grill (fig. 31).
- Rinse the filter under tap water and dry it completely (fig. 28).
- Place the filter back into the grill and put it back into the cleaner (fig. 30, 31).
- Close the filter cover (fig. 29).

PROTECTING THE ENVIRONMENT

- Attempt to recycle packaging material and old appliances.
- The cardboard packaging can be placed in the waste paper collection.
- Deposit the plastic bag made of polyethylene (PE) at the PE collection point for recycling.

Recycling the Appliance at the end of its life:

- The plastic components all carry a material identification marking so that, like the other materials, they can be recycled at the end of the life of the appliance.
- Please inquire with your local authority.

Blocked air flow and dirty filters:

- The cleaner stops automatically if a blockage occurs in the nozzle/tube/hose or if the filters are blocked with dirt.
- Disconnect from mains and allow the cleaner to cool for 20-30 minutes. Remove blockage and/or clean filters.
- Restart the cleaner.