

# **AKAI**

## **Operator's manual**

***21" (51CM) COLOUR TELEVISION  
CT-S21MTD-E3***



**Operator's manual**

**(GB)1~16**

**Gebruiksaanwijzingen**

**(NL)1~16**

**Mode d'emploi**

**(F)1~16**

# CT-S21MTD-E3: 21 inch (51 cm) Colour TV/Monitor with DVD/AUDIO CD/MP3/Picture CD player and Remote Control.

## FEATURES

### Safety information

#### ○ Note:

This unit can be used only where the power supply is AC 220-240V, 50Hz. It cannot be used elsewhere.

#### ● CAUTION:

- DVD PLAYER IS A CLASS 1 LASER PRODUCT. HOWEVER THIS PLAYER USES A VISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE PLAYER CORRECTLY AS INSTRUCTED.
- WHEN THIS PLAYER IS PLUGGED TO THE WALL OUTLET, DO NOT PLACE YOUR EYES CLOSE TO THE OPENINGS TO LOOK INTO THE INSIDE OF THIS PLAYER.
- USE OF CONTROLS OR ADJUSTMENTS OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT ON HAZARDOUS RADIATION EXPOSURE.
- DO NOT OPEN COVERS OR ATTEMPT TO REPAIR THIS PRODUCT BY YOURSELF. ALWAYS REFER SERVICING TO QUALIFIED PERSONNEL.

#### ● WARNING:

- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.
- TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PICTURE & SOUND INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

## CONTENTS

FEATURES.....	2
IMPORTANT SAFETY INSTRUCTIONS .....	3
LOCATION OF CONTROLS .....	5
REMOTE CONTROL .....	6
ANTENNA CONNECTIONS .....	7
POWER SOURCE.....	7

### TV OPERATION

PRESETTING THE TV CHANNELS .....	8
CHANNEL SELECT AND VOLUME CONTROL .....	9
OPERATING WITH REMOTE CONTROL .....	10

### TELETEXT

TELETEXT OPERATIONS .....	11
---------------------------	----

### DVD PLAYBACK

BASIC OPERATION .....	12
PLAY DISCS .....	12
DVD SETUP MODE .....	12
DVD MENU .....	12
AUDIO .....	12
PROGRAM MODE .....	14

### MP3 OPERATION .....

PICTURE CD .....	15
SPECIFICATIONS.....	16

## ATTENTION

THE SCART CONNECTOR OUTPUTS ONLY THE TV SIGNAL



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



 
The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

1. **READ INSTRUCTIONS**- All the safety and operating instructions should be read before the product is operated.
2. **RETAIN INSTRUCTIONS**- The safety and operating instructions should be retained for future reference.
3. **HEED WARNINGS**- All warnings on the product and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS**- All operating and use instructions should be followed.
5. **CLEANING**-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. **ATTACHMENTS**- Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. **WATER AND MOISTURE**- Do not use this product near water-for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. **ACCESSORIES**- Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A Product and Cart Combination Should Be Moved with Care- Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
9. **VENTILATION**- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation, such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. **POWER SOURCES** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. **GROUNDING OR POLARIZATION**- This product may be equipped with a polarized alternating-current line plug ( a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature: If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **POWER-CORD PROTECTION**- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where exit from the product.
13. **NONUSE PERIODS** - The power cord of the product should be unplugged from the outlet when left unused for long periods of time.
14. **OUTDOOR ANTENNA GROUNDING**- If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and

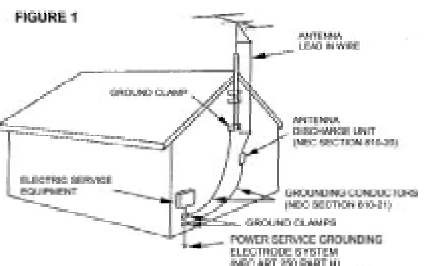


supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure 1.

15. **LIGHTENING**-For added protection for this product during a lightening storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightening and power-line surges.
16. **POWER LINES** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. **OVERLOADING**-Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. **OBJECT AND LIQUID ENTRY**- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. **SERVICING**-Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. **DAMAGES REQUIRING SERVICE**-Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
  - a) When the power-supply cord or plug is damaged.
  - b) If liquid has been spilled, or objects have fallen into the product.
  - c) If the product has been exposed to rain or water.
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that covered by the operating instructions as an improving adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e) When the product exhibits a distinct change in performance- this indicates a need for service.
21. **REPLACEMENT PARTS**- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part, Unauthorized substitutions may result in fire, electric shock or other hazards
22. **SAFETY CHECK**- Upon completion of any service or repair to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. **HEAT**- The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

## LOCATION OF CONTROL

 ---

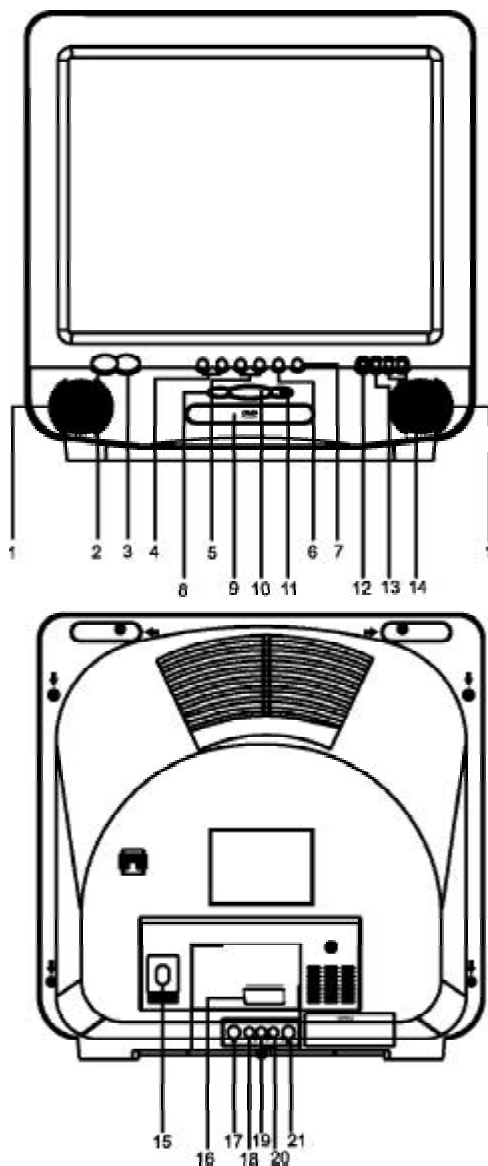


1. Speaker
2. Power Button
3. Remote Sensor
4. Channel Buttons
5. Volume Buttons
6. TV Menu Button
7. TV/AV/DVD Button
8. Open/Close Button
9. DVD Loader
10. DVD Play Button
11. DVD Stop Button
12. Earphone
13. Front Video Input
14. Front Audio Input
15. 75 ohm Antenna
16. Scart connector
17. S-Video out for DVD
18. Video out for DVD
19. Audio out (L) for DVD
20. Audio out (R) for DVD
21. Audio digital Out Socket  
(For DVD only)

# REMOTE CONTROL
 
## DESCRIPTION OF CONTROLS

1. DVD Subtitle Button
2. Eject Button
3. Mark Button
4. PAL/NTSC Button
5. Program Button
6. Audio Button
7. +10 Button
8. Angle Button
9. Direction Up Button
10. Clear Button
11. Direction Left Button
12. Pause/step Button
13. TV Channel Buttons
14. Fast Reverse Button (Back)
15. Stop Button
16. Slow Buttons
17. Repeat Button
18. Numeric Buttons
19. Two Digit program button
20. Teletext Conceal Buttons
21. Teletext Enlarge Button
22. Teletext Time Display Button
23. TV System/Teletext Cancel Button
24. Mute Button
25. Stand-by button
26. Repeat A-B Button
27. DVD Menu Button
28. Display Button
29. Setup Button
30. DVD Zoom Button
31. Search Button
32. DVD Enter Button
33. Direction Right ► Button
34. Direction Down ▼ Button
35. Volume Buttons
36. Fast Forward Button (Next)
37. Play Button
38. DVD Skip Backward/Forward Button
39. TV Menu Button
40. TV Personal Preference Button
41. DVD Button
42. AV/TV Button
43. TV Button
44. Teletext Index Button
45. Teletext Stop Button
46. Teletext/TV Mode Button
47. Teletext Mix Mode Button



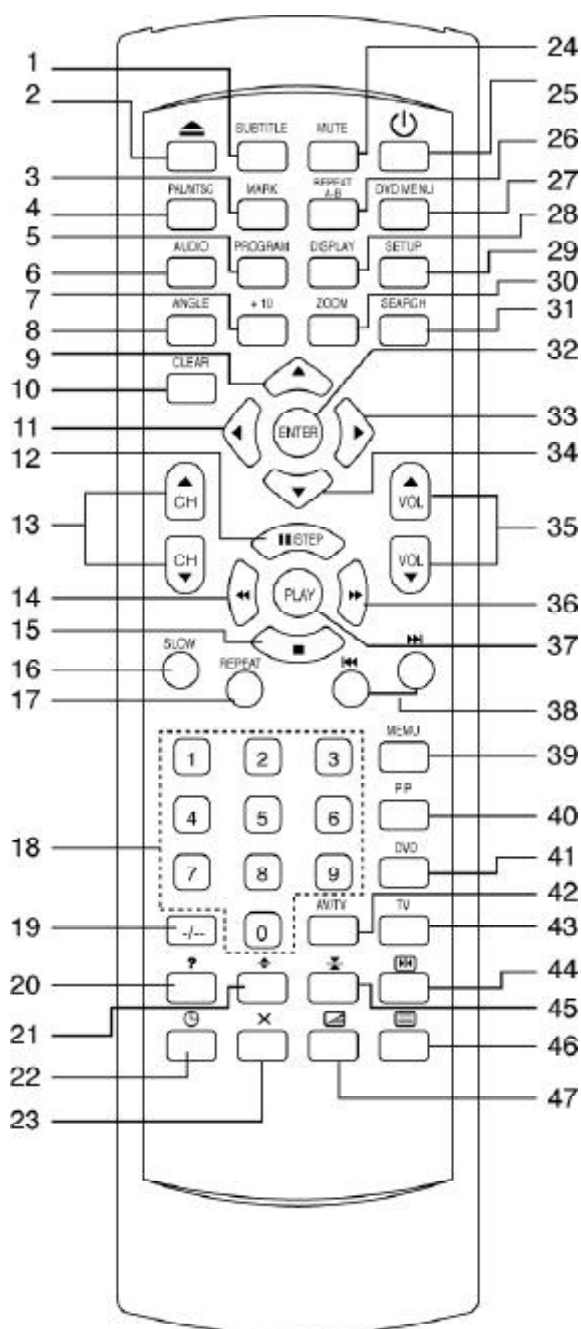


## REMOTE CONTROL

---

### BATTERY INSTALLATION

   1. Open the battery compartment cover.
2. Install two "AA/UM-3" (penlight size) batteries.
3. Replace the cover.

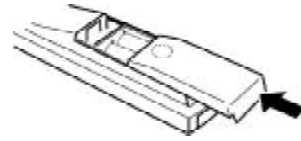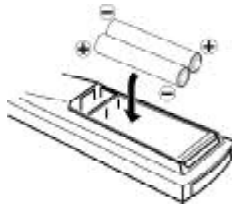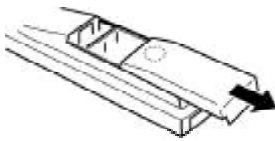

### BATTERY CAUTIONS

 
- Use two "AA/UM-3" size penlight batteries for the remote control handset.
- Use only the size and type of batteries specified.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix different types of batteries together (e.g. alkaline and carbon-zinc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, it is required to remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries which is not intended to be recharged; they can overheat and rupture. ( follow battery manufacturer's directions)
- Weak batteries can leak and severely damage the unit.
- Always remove batteries as soon as they become weak.
- The batteries of remote control handset may last approximately one year depending on how much the remote control handset is used.
- For the best performance it is recommended the batteries of remote control handset be replaced on a yearly basis, or when remote control operation becomes erratic.

### REMOTE CONTROL OPERATION

The following cases, the remote control may not operate:

- When there is an obstacle between your TV/DVD and the remote control.
- If you try to operate your TV/DVD from a distance greater than 7 metres.
- If you try to operate your TV/DVD away from the normal viewing angle (over 30° either side of the remote sensor).

**NOTE:** When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote sensor, the remote control operation may be unstable.

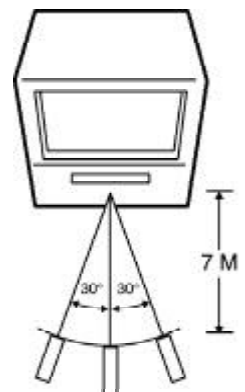

### ANTENNA CONNECTION

---

Connect an indoor or outdoor antenna to the antenna socket (15) at the rear panel.

For all antenna circuit problems, please consult your local dealer.

### EXTERNAL ANTENNA

The type of antenna required depends on the position of your home, its distance from the transmitter and local interference. If you do not have an antenna and you are uncertain of what to buy, you should seek the advice of a local antenna contractor.

### POWER SOURCE

 
---

Insert the AC Outlet cord plug into 230V/50Hz AC outlet.

After you have connected the Antenna and Power source, you must check that your TV/DVD is properly installed.

Press MAIN POWER switch on the front panel, the red standby indicator will light.

Turn on your TV/DVD by pressing POWER on the front panel or on the remote control.

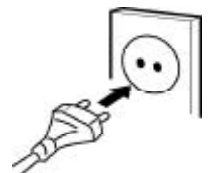

# TV OPERATION

Connect your TV aerial to the aerial input socket located on the back of the TV.


Push the Main Power Switch, Power Indicator will be illuminated. After a few seconds the TV screen will light up. Should white dots appear on the screen the TV will require tuning into the available TV stations in your area.

## Pre-setting the TV stations into the Memory

(Note: Preset tuning can only be carried out in TV Mode)

1. Press MENU button to see main MENU.
2. Press the VOL button ▲/▼ to select TUNE mode as shown in figure 1.

 FIG.1

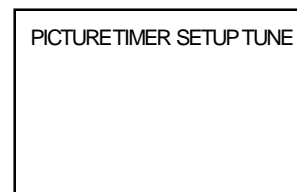

## AUTOSEARCH

1. Press the CH button ▼ to select the AUTO SEARCH (auto memory store) mode as shown in figure 2.
2. Press the VOL button ▼ to start the automatic scanning processes, the on air stations will automatic store into memory as shown in figure 3.
  - When scanning is completed, the set will tune to lowest program and show lowest program number on the screen.
  - If want to stop auto search function, press the MENU button.
  - Press the CH button ▼ to select the SKIP and press VOL ▲/▼ to select on or off, This function use for delete some unwanted channels.

FIG.2

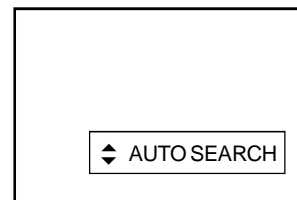 



FIG.3



## SEARCH (manual)

1. Press MENU button.
  2. Press the VOL ▲/▼ to select TUNE
  3. Press the CH ▲ or ▼ button and select SEARCH.
  4. Press the VOL ▼ or ▲ button to start searching up or down the frequency.
  5. When a TV station is located, the station will show.
  6. Press CH ▲/▼ button until Program shows.
  7. Press the VOL ▲/▼ button and select which position.  
To store the TV station i.e BBC1=1, BBC2=2 and so on.
  8. To store the station, press the CH ▲/▼ button until Store shows. Now press the VOL ▼ button to store the station.
- Repeat 2 to 7 above and store the remaining TV channels in your area.

 FIG.4

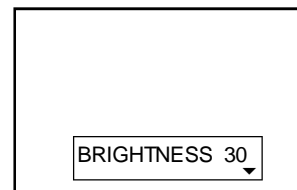


## PICTURE

1. Press the MENU button to see main MENU.
2. Press the VOL button ▲/▼ select the PICTURE mode .
3. Press the CH button ▲/▼ to select the BRIGHTNESS / COLOUR / CONTRAST / SHARPNESS as show in figure 4.
4. Press the VOL button ▲/▼ to adjust the level of currently selected item, The steps can be adjust from 0 ~ 63 .

## TIMER

1. The TV can switch ON/OFF the power automatically by the following procedure.
2. Press the MENU button to main MENU.
3. Press the VOL button ▲ to select the TIMER mode, press the CH button ▼ to adjust the clock time as shown in figure 5 .
4. Press the VOL button ▲/▼ to adjust the hour time 1 7 : \_\_ ;  
Press the CH button ▲ to select the minute 1 7 : 0 0 ;  
Press the VOL ▲/▼ to adjust the minute time 1 7 : 3 0 .
5. Continue press the CH ▼ and VOL button ▲/▼ to set the  
ON TIME \_\_ : \_\_ . ON PROG. OFF TIME \_\_ : \_\_ .
  - To make the timer function effective, the TV must set to standby mode, after process is completed.

 FIG.5

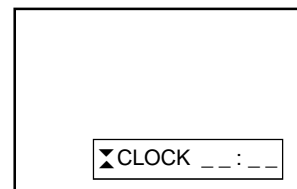



# OPERATING THE TELEVISION RECEIVER


## SETUP

1. Press the MENU button to see main MENU.
2. Press the VOL button ▲ to select SETUP mode.

## LANGUAGE

1. Press the CH button ▼ to select the language, as shown in figure 6.
2. Press the VOL button ▲/▼ to select the desire ENGLISH, RUSSIAN, DUTCH, ITALIAN, GERMAN, FRENCH, SPANISH, PORTUGUESE Languages.

 FIG.6

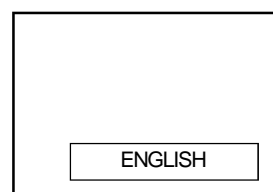


## BLUE BACK (blue back-ground)


Press the CH button ▼ to select the BLUE BACK, press the VOL button to set the blue background ON / OFF.

## CHANNEL SELECT AND VOLUME CONTROL

 - 1) Press CH. ▼/▲ buttons to select TV station. (TV Mode Only)

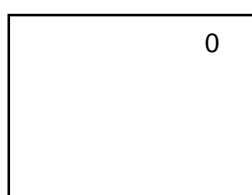


 Press CH. "▼", the program no. will appear on the top right corner and change from higher no. to lower no.

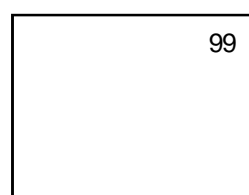


Press CH. "▲", the program no. will change from lower no. to higher no.

 - 2) Press VOL ▼/▲ to ADJUST sound level.

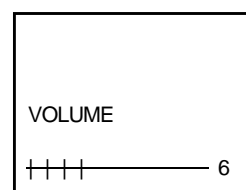

## TV/AV/DVD Mode Button (on the main unit)

 - If video/audio input socket are in use, press AV/TV Mode button, "AV" will display on the top right corner of the screen.
- Press TV/AV/DVD button to turn on DVD. In duration on changing to DVD mode, the screen is dark as it will take a few seconds to show up the "DVD" at the TOP right corner of the screen.



# OPERATING WITH REMOTE CONTROL

---

## TO SELECT TV STATION USING THE PROGRAM NUMBERS:

### 1. Program Number Up and Down [13]

Press the CH. "▲" or "▼" button to select a higher or lower program number.

### 2. 0 - 9 Digit Button

To select TV stations using program numbers **0 - 9**. The selected program number will be shown in the left corner of the top of screen in yellow colour.

For example:

Press "9" digit button to select program "9".

### 3. Two Program Number [19]

To select TV station using program numbers "10" - "99".

For example: selecting program 12

 
\* Press the button "-/-"

\* Then press the number "1" button, on screen will show "1-"

\* Then press the number "2" button, channel "12" will show.

### 4. Personal Preferences Button ( PP ) [40]

Press (PP) button to select the picture effect.



### Stand-By Button ( ⏻ ) [25]

- Press the "⏻" button to switch ON/OFF the picture and sound.
- To switch on the TV from stand-by mode, just press any desired program number (0-9).

### Mute Button [24]

- Press the mute button to switch OFF the sound, press once again to switch ON the sound.

### TV Mode Button [43]

- Press the TV Mode button to select the TV mode.

### TV/AV Mode Button [42]

- Press the AV/TV mode Button to select AV mode, press again back to TV mode.

### DVD Mode Button [41]

- Press the DVD Button to select DVD mode.(It need a few seconds to start the DVD).

### NOTE:



 
 
- The transmission code of the remote control is different between TV and DVD, before using the remote control handset to control the TV, press the TV button. To control the DVD, press the DVD button, to make sure the transmission code is correct for TV and DVD, otherwise some keys on the remote hand set will not function.

# TELETEXT FUNCTION CONTROL

---

Teletext - is an information system that displays text on your TV screen. Using the Teletext information system you can select a page of information on a subject that is available in its list of contents (index).


## To Operate Teletext

1. Press the TV Mode Button .  
Select a TV station on which Teletext is being transmitted (check with a TV programme guide).
2. Press the Teletext Button (  ) [46]  
The list of contents (index) is displayed on the screen.
3. To select a Page of Teletext  
Press the appropriate Digit button for the required Teletext page number.  
The selected page number is displayed at the top left corner of the screen. The Teletext page counter searches until the selected page is located, so that the required information is displayed on the screen.
4. Program + (CH  )  
Press the CH " + " button to set up to the next higher teletext page.
5. Program - ( CH  )  
Press the CH " - " button to set up the next lower teletext page.
6. Press the (  ) button to return the teletext page to page number 100.


## To Exit Teletext

Press the TV Mode button, the previously selected TV station appears again on the screen.

## Mix Mode Button ( )


- Press button "  " to superimpose the text over the TV program on the screen.
- Press once again to return to Teletext page.

## Enlarge Button ( )

- Press button "  " to display top half of the page at double height text.
- Press again to display bottom half of the page.
- Press again to get full page at normal height text.

## Stop Button ( )

More information may follow the page of Teletext you have selected, and it is automatically displayed after a short period of time.

- Press button "  " to hold the page.
- Press again to resume automatic page changing.

## Cancel Button ( x ) (System)

To switch between Teletext and TV programme.

 
- Press button " x " the TV programme appears.
- Press once again to return to the Teletext page.

## Conceal Button ( ? )

Sometimes a Teletext page contains concealed information, for example, in a quiz or puzzle.

- Press button " ? " to display the concealed information, press once more to clean.


## To Display the Time ( ) (In TV Programme Mode)

- Press button "  ", the current time is displayed in the top right corner of the screen (e.g. 21:00).
- Press the button again to remove the time display.

NOTE : The time can only be displayed when Teletext is available on the selected TV station.

## To Select a Subcode Page

Subcode pages are subsections of long Teletext pages that can only be displayed on the screen one section at a time.

- Select the required Teletext page.
- Press the "  " button.
- Press a digit button (for the required subcode page).
- If the subcode page is not immediately available then press the " X " button to return to the TV programme. When the subcode page becomes available, the subcode number is displayed in the top left corner of the screen.
- Press the " X " button to display the subcode page.

## **DVD PLAYER OPERATION**

### **Basic Operation**

1. Press "TV/AV/DVD" button on the unit or press the DVD MODE direct key on the remote handset to turn ON DVD.
2. Press "OPEN / CLOSE (EJECT)" button to load disc in disc tray.
3. Press "OPEN / CLOSE" button to close the tray.
- Hold the disc without touching either of its surfaces, position it with the printed title side facing up.

### **Play Discs**

1. Press the OPEN/CLOSE Button on the front panel and load the Disc on the tray.  
The label side should be facing upwards. For a Double-sided DVD Disc, put the disc with label A/1 up.
2. Press the OPEN/CLOSE button again to close the tray and the disc will be loaded.
3. The Disc will be played automatically.
  - If it is a DVD disc, it will show the Menu/Title Page on the screen.
  - If it is a CD, it will play the first track directly.
4. Press the STOP Button if you want to stop the Disc playback You can resume playback by pressing the PLAY button and it will start at the location where you have pressed stopped (Resume Play).
5. Press the STOP Button twice to have the Disc really stopped.

### **// (PAUSE)/STEP**

This function is applicable for DVD and CD audio.

- For DVD, the picture will become static.
  - For CD audio, it will become silent.
1. Press the ( || ) Button will cause the player to enter PAUSE/STEP mode.
  2. Press the PLAY Button again will resume to Play State.

### **DVD Setup Mode**

- Setup Mode provides the menu for the configuration of TV DISPLAY Mode, OSD LANGUAGE mode, DOLBY Mode, AUDIO Mode, PARENTAL Mode, PASSWORD, etc.
  - Item selection in the SETUP menu is done by using the Navigation Arrow and the ENTER button.
  - To exit the SETUP Mode to press the SETUP button again.
  - The initial password for PARENTAL Mode is set at 1369.
- Note: To setup the TV display mode must be in stop mode.

#### **SETUP MENU -- MAIN PAGE**

General Setup Page	
TV Display	LB
Angle Mark	ON
OSD Lang	ENG
Captions	ON
Screen Saver	ON

Go To General Setup Page

### **OSD**

There are 4 OSD languages embedded in the DVD Player : English, Spanish, German and French.

1. Press the SETUP button on the remote controller to enter the setup menu GENERAL SETUP PAGE.
2. Go to the OSD LANG option and use the Navigation Arrows to do the selection.
3. Press ENTER to confirm.

### **DVD Menu**

The DVD Menu Play function is only applicable for DVD movie. User can access the Casting information, Production History, Movie Introduction etc. directly through this function.

1. Press the DVD MENU Button on the remote controller to enter the Root Menu.
2. Use the Navigation Arrows ( ◀ ▶ ▲ ▼ ) or input the item index through the Number keys (0-9) to do the selection.
3. Press ENTER to confirm the selection.

### **Audio**

This function is applicable for DVD and CD audio but with different effects.

- Pressing the AUDIO Button will change the Audio channel.

### **SCAN ( ◀▶ )**

This function is applicable for DVD and CD audio but with different effects. The FAST FORWARD key and FAST BACKWARD key are used to achieve fast play function.

- For DVD, there are 5 different levels of speed (2x, 4x, 8x, 16x, 32x). Every successive key press will increment the speed of quick play.
- For CD audio, the FORWARD/BACKWARD will perform quick rolling on the music output.

Note : Press PLAY Button at any stage will resume to normal speed.

### **PREV./NEXT ( ◀ / ▶ )**

During playback, press one of the PREV./NEXT buttons (PREVIOUS button and NEXT button)

- When the PREV. button is pressed once, the pickup returns to the beginning of the PREVIOUS playing chapter or track.
- When the NEXT button is pressed once, the pickup will go to the beginning of next chapter or track.

### **Slow**

The Slow Forward is applicable for DVD. There are 4 steps of slow motion speed, 1/2, 1/4, 1/8, 1/16. Successive key presses will decrement the playback speed.

Note : Press Play Key to switch back to normal playback speed.

### **Repeat Mode**

This function is applicable for DVD and CD audio but with different effects.

- For DVD disc playback, user can choose to repeat the current chapter, the current title or disc. Subsequent key press of the REPEAT key can change between these three options.
- For CD, user can choose to repeat the current track or the whole disc (Repeat All). Subsequent key press of the REPEAT key can change between these two options.

### **Repeat AB**

This function is applicable for DVD and CD audio. User can specify the repeating interval by marking the starting point and the end point.

1. Press the REPEAT AB Button to mark the starting point. (Playback will continue).
2. Press the REPEAT AB Button to mark the end point. (The marked part will be repeated automatically)

Note : Press the REPEAT AB Button during repetition will disable the Repeat mode.

### **Subtitle**

This function is only applicable for DVD disc. It can change the subtitle language shown on the screen.

Note : Number of subtitle available depends on the DVD disc.

### **Angle**

Some discs may have multiple viewing angles during production. The ANGLE button is to select the viewing angle shown on the screen.

Note : The number of Angle of View depends on the Disc.

### **Search**

 
This function is applicable for DVD and CD audio. Through this function, the user can access a specific location or a specific track by key in the target time or the track number.

1. Press the SEARCH Button Enter to search mode.
2. Input the target time through the number button (0~9) and the player will jump to the target Location immediately.

### **Display (Remain Time)**

This function is applicable for DVD only. It will display the timing information of the playback on the screen.

- For DVD playback, subsequent key press on the DISPLAY Button will show the Title Elapsed Time, Title Remain Time, Chapter Elapse Time and Chapter Remain Time one by one.

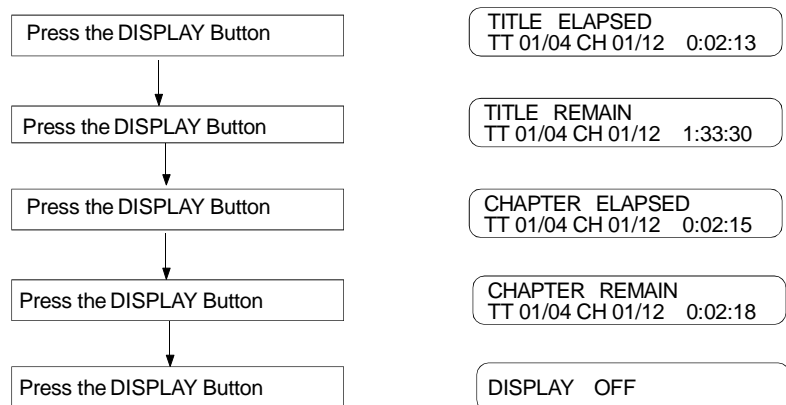

### Resume Play

This function is applicable for DVD and CD audio. During the disc playback, when the STOP Button is pressed once, the player will enter the Resume Play mode. At this time, if the PLAY Button is pressed, the player will resume playback at the location where the STOP Button is pressed. If the STOP button is pressed (i.e. STOP Button is pressed twice), the player will be Stop.

### Zoom

 
This function is applicable for DVD . User can enlarge or reduce a static picture or a moving picture by pressing the ZOOM buttons. There are 6 levels of zooming (2x, 3x, 4x, 1/2x, 1/3x, 1/4x) and they can be achieved one by one through subsequent key presses on the ZOOM button.

NOTE: User can select the portion of the picture to be enlarged by using the Navigation buttons ( ◀ ▶ ▲ ▼ ).


### Program Mode

This function is applicable for DVD and CD audio. User can assign the playback sequence according to his/her preference. For CD audio, user can assign the track sequence while for DVD disc, user can assign both the Title and Chapter sequence.


1. Press the PROGRAM button. The Program Sequence table will be shown on the screen.

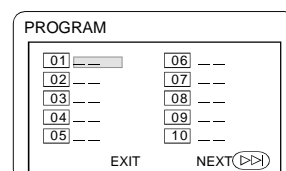

 2. Enter the track numbers according to the user preference through the Number keys (0-9).

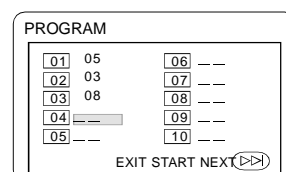

 3. After assigning the playback sequence, move the highlight cursor to the START option by using the Navigation Arrows.  
Press ENTER on the remote controller to confirm.

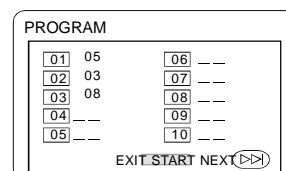

To Remove the program


move the highlight cursor to desire Program By use the Navigation arrows then press the clear button to Remove the selected program.

### MP3 Operation

 This unit can support ISO9660 file system CD-ROM navigation. Multi-Media files such as MP3 thus can be played in the player.

#### Operation

- Insert the MP3 disc into the tray. Navigation Menu will be displayed. The menu will show up the files in the root directory, and the MP3 files then be play automatically.
- In MP3 Menu show Blue and orange cursor, the Blue cursor is for indicate the current playing MP3 song,the orange cursor is for next desire select song.

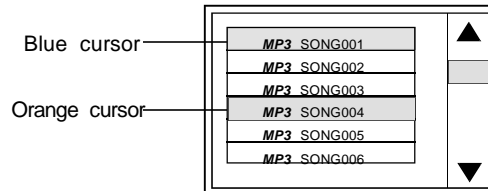

- While the current MP3 song is playing ,user can select the other song by use the Navigation arrows button or direct input the song number by press the number key button, the orange cursor will move to other desire song then press ENTER to confirm.

Note:Use the direct song number to select the next song,when key in the third digit,the third digit number may not appear immediately need to wait for a while.

### Picture CD

Digital picture (JPEG) from a digital camera can be burnt on to a disc and played on this TV. Insert a picture CD into the tray and the disc will be loaded automatically. If the disc type can be identified, the player will start showing the pictures one by one (Slide Show Mode).

#### Operations

*During Slide Show Mode: -*

- Press the STOP Button will shift to the Digest Mode in which 12 pictures will be shown on the screen each time.
- Press the PAUSE Button will freeze the screen so that the current picture can be held for a long time. To resume the slide show mode, press PLAY Button.
- Press the NEXT Button on the remote controller will skip the next picture.
- Press the PREVIOUS Button on the remote controller will repeat the current picture.

## SPECIFICATIONS

---

### TV SECTION

Receiving Channels	
VHF <sub>L</sub>	CH 2 - 4
VHF <sub>H</sub>	CH 5 - 12
UHF	CH 21- 69
Hyperband	S1-S41
Tuner Type	100 Channel , VS TUNING

### DVD SECTION

Laser Wave length	655nm
Laser power :	Class 1
Signal System	PAL/NTSC output
Digital audio output	Coaxial digital output; pin jack
S-video Y output level	1Vp-p (75 Ohm);
C output level	0.300Vp-p (75 Ohm) (PAL), 0.286Vp-p (75 Ohm) (NTSC)
Headphone	
Stereo in DVD mode	
Mono in TV mode	

### GENERAL SECTION

AC Power Input	230V~ 50 Hz
AC Power Consumption	90W
Speaker	3" 8ohm x 2
Audio Output	2.5W + 2.5W
Dimensions	521x 482x 524.5 (mm)
Net Weight	22.7 Kg

Specifications subject to change without notice.



# **AKAI**

AKAI ELECTRIC CO., LTD. JAPAN

[www.akai.com](http://www.akai.com)