



 

4. USING YOUR PHONE

4.1. Make a Call




4.1.1. Preparatory Dialing

Enter the phone number and press  or  (Versatis F250 Only) to dial the number. Press  to clear the entry.

 


 
 
4.1.2. Direct Dialing

Press  or  (Versatis F250 Only) to take the line and enter the phone number.

 
4.1.3. Dial from Direct Memory Keys

In idle or off hook mode, press and hold // to dial the direct memory number. You have to store number to the related key first. See section 7.4 for reference.

4.1.4. Call from the Redial List

Press  (Versatis F200 Only) or  (Versatis F250 Only) to access the redial list and press  to select the desired redial number. Press  or  (Versatis F250 Only) to dial out to the selected redial number.

 









4.2. Handset Speakerphone (Versatis F250 Only)

During a call, you can press  to alternate between handsfree and normal handset use.




 


5. PRIVATE PHONEBOOK

Your phone can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1. Add a New Phonebook Entry

- In idle:
- Press  to access the phonebook.  
OR  
Press  and  to select **PHONEBOOK** main menu item and then press  to access the phonebook.
  - Press  to select **ADD**.
  - Press  to enter the name.
  - Press  to enter the number.
  - Press  and  to select the desired ringtone for your phonebook entry.
  - Press  to store the phonebook entry.

5.2. Call from the Phonebook

- In idle:
- Press  to access the phonebook.  
OR  
Press  and  to select **PHONEBOOK** main menu item and then press  to access the phonebook.
  - Press  or  (Versatis F250 Only) to dial out to the selected phonebook entry.





 
6. CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your telephone service provider. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.




 
 
If the caller number is disabled to send caller information, "**WITHHELD**" will display.  
If the caller number is not provided, "**OUT OF AREA**" will display.  
In standby, if three unanswered calls are received, "**3 NEW CALLS**" will be displayed.

6.1. View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a ★ at the centre of the bottom line of the display.


 
 

 




- Press  to access the call list.  
OR  
Press  and  to select **CALL LIST**.
- Press  to select the desired entry.
- Press  to view the caller's number if applicable.

6.2. Call from the Call List


 

 
 

 
 


- In idle:
- Press  to access the call list.  
OR  
Press  and  to select **CALL LIST**.
  - Press  or  (Versatis F250 Only) to dial out to the selected phonebook entry.

7. PHONE SETTINGS

7.1. Set the Ringer Melody for Internal/External Calls


- Press  and  to select **HS SETTINGS**.
  - Press  and  to select **RING SETUP**.
  - Press  and  to select **INT RING** or **EXT RING**.
  - Press  and  to select the desired ringer melody from the melody list.
- Note:** The respective ringer melody will be played while browsing the melody list.
- Press  to confirm.

7.2. Set the Ringer Volume

- Press  and  to select **HS SETTINGS**.
  - Press  and  to select **RING SETUP**.
  - Press  and  to select **RING VOLUME**.
  - Press  and  to select the desired ringer volume (a total of 6 ringer volume levels including **VOLUME OFF**).
- Note:** The respective ringer volume will be played during your selection.
- If **VOLUME OFF** is selected,  icon will display.
- Press  to confirm.


 

 

 


7.3. Adjust Earpiece and Handsfree (Versatis F250 Only) Volume

 
 

There are 5 levels (**VOLUME 1** to **VOLUME 5**) to choose from for each of earpiece and handsfree (Versatis F250 Only) volume.

During a call:  
Press  to select volume 1-5. The current setting is shown.  
When you end the call, the setting will remain at the last selected level.

 
7.4. Store Direct Memory Access Number



 
 

You can store three direct access numbers into digit KEY 1, KEY 2 and KEY 3, which will be convenient for you to dial to these numbers directly.

 
 
- Press  and  to select **HS SETTINGS**.
- Press  and  to select **DIRECT MEM**.
- Press  and  to select any one from **KEY 1**, **KEY 2** and **KEY 3**.
- Press  and then enter the number you would like to store, or edit the number existed before.
- Press  to confirm.

**Note:** Press and hold ,  or  to call the stored number.

8. REGISTRATION

Your handset and base station is pre-registered. Up to five handsets can be registered to a single base station.  
If for some reason, the handset is not registered to the base station ( flashes even when the handset is near the base station), register your handset according to the following procedure.

- Press and hold  on the base station for about five seconds, the base station is entered into registration mode.
- Press  and  to select **REGISTRATION**.
- Press  and you are requested to enter the 4-digit system PIN (default PIN is 0000).
- Enter the 4-digit system PIN.
- Press  to confirm.

If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.


9. TECHNICAL DETAILS

Free Field Range	Up to 300 metres*
Indoor Range	Up to 50 metres*
Handset Battery Life (average values)	10 hours talk time** 100 hours standby**
Number of Handsets	Up to 5
Intercom Mode	Yes
Three-Way Conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical Connection/Base Mains Adaptor/Charger	Base main adaptor: Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/450 mA  Charger adaptor: Input: 100-240 V/50-60 Hz/0.15 A Output: 6 V DC/450 mA  Only use the adaptors supplied with the telephone Caution: The network voltage is classified as a hazard by the criteria of this standard.
Telephone Connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line.
Batteries	AAA – 1.2 V – 400 mA Only use the batteries supplied with the telephone. Use any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating Temperature	From 5°C to 40°C

\* Values may vary according to environment.  
\*\* Depending on initial battery charge.

10. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.  
As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solutions
No dialing tone when pressing  key	a. The connection cord of the base station is not plugged in.	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket.
	b. The adapter cord is not plugged in correctly in the base station.	b. Check the base station plug and the AC plug (remove and plug-in).
	c. The line is busy, as another handset is used.	c. Wait until the line is unoccupied.
	d. Wrong connection cord.	d. Use the original connection cord.
"OUT OF RANGE" is displayed.	a. Base station out of range.	a. Reduce the range.
	b. Base station is not connected to mains.	b. Connect base station to mains.
The call does not work.	Service not activated or wrong operator.	Check your Subscription with network.
No display.	Empty battery.	Recharge battery.

The store where you bought your telephone can also provide you with information and after-sales support.

11. SAFETY

In the event of an electrical hazard, the mains adapter acts as AC power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the AC socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power or if there is a mains power failure, telephones that use cordless handsets will not work.


You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

***! Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.***

It is recommended that you avoid using this device during electrical storms.  
Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

12. ENVIRONMENT

 This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.  
- If you are a professional user, please follow your supplier's instructions.  
- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

***Help us protect the environment in which we live!***