

**SANYO****INSTRUCTION MANUAL****DVD-DX501****DVD Player****Please Read This Manual.**

Because DVD is a new technology, we recommend that you read this manual carefully before connecting your DVD video player and operating it for the first time. Keep this manual in a safe place for future reference.



1AD6P1P2011--A  
(CA)

English

# TABLE OF CONTENTS

<b>IMPORTANT SAFETY PRECAUTIONS ....</b>	<b>2</b>	<b>PLAYING A DESIRED SCENE.....</b>	<b>20</b>
<b>FEATURES .....</b>	<b>5</b>	To skip scenes in a disc.....	20
<b>ABOUT DISCS .....</b>	<b>6</b>	Directly moving to a desired title (DVD/VCD) ..	20
<b>BEFORE OPERATION.....</b>	<b>8</b>	Playing a disc containing MP3 files .....	21
<b>PREPARATIONS BEFORE OPERATION. 10</b>		Repeat Play .....	21
Front Panel .....	10	Repeating a defined period from A to B (DVD) ..	22
Rear Panel .....	11	Select a Subtitle Language .....	22
Display.....	12	Searching.....	23
Names and Layout of Remote Controls .....	13		
<b>CONNECTIONS .....</b>	<b>14</b>	<b>PLAY DISCS IN VARIOUS WAYS.....</b>	<b>24</b>
<b>BASIC OPERATIONS.....</b>	<b>15</b>	Select Angle.....	24
Play Discs .....	15	Zoom Play.....	24
System Setting.....	16	Book Mark .....	25
V-Mode .....	16	Program Play (DVD).....	26
Display.....	16	Program Play (VCD) .....	27
Fast Play.....	17	Play MP3, CD, JPEG or PICTURE CD .....	28
Slow Play.....	17		
Pause/ Step.....	17	<b>FUNCTION SETTING .....</b>	<b>30</b>
Select Audio Language.....	18	Menu Setting.....	30
Select Channels .....	18	Language.....	32
		Video .....	32
		Audio.....	34
		Preference .....	35
<b>MICROPHONE CONTROL.....</b>	<b>19</b>	<b>OTHERS.....</b>	<b>36</b>
Microphone Set up .....	19	Troubleshooting .....	36
		Technical Specifications.....	37

## IMPORTANT SAFETY PRECAUTIONS

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

**WARNING :** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION :** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

### IMPORTANT FOR LASER PRODUCTS

- **LASER :** This Digital Video Disc Player employs a Laser System. To ensure proper use of this product please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location - see service procedure.

Use of control adjustments or the performance of procedures other than those specified may result in hazardous radiation exposure.

To prevent direct exposure to the laser beam, do not try to open the enclosure. Visible laser radiation when open and interlocks defeated.

DO NOT STARE INTO THE BEAM.

- **DANGER :** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- **CAUTION :** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

**CLASS 1**  
**LASER PRODUCT**

**CAUTION:** Any changes or modification in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**ATTENTION:** KEEPING THE STATUS OF STOP MORE THAN 5 MINUTES ENTERS SCREEN SAVE MODE. WHEN THE SCREEN SAVE MODE IS KEPT MORE THAN AN HOUR, THE SET ENTERS STAND-BY MODE.

**CAUTION:** Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT SAFETY PRECAUTIONS

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

### 1 READ INSTRUCTIONS

All the safety and operating instructions should be read before the unit is operated.

### 2 RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

### 3 HEED WARNINGS

All warnings on the unit and in the operating instructions should be adhered to.

### 4 FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

### 5 CLEANING

Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

### 6 ATTACHMENTS/ACCESSORIES

Do not use attachments unless recommended by the unit's manufacturer as they may cause hazards.

Caution : Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### 7 WATER AND MOISTURE

Do not use this unit near water- for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.

### 8 PLACEMENT

Do not place this unit on an unstable cart, stand, tripod, bracket, or table. The unit may fall, causing serious injury to a child or adult as well as serious damage to the unit. Use this unit only with a cart, stand, tripod, bracket, or table recommended by the manufacturer.

### 8A

A unit and cart combination

PORTABLE CART WARNING  
(symbol provided by  
RETAC)



should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the video product and cart combination to overturn.

### 9 VENTILATION

Slots and openings in the case are provided for ventilation to ensure reliable operation of the unit and to protect it from overheating. These openings must not be blocked or covered. These openings must not be blocked by placing the unit on a bed, sofa, rug, or other similar surface. This unit should never be placed near or over a radiator or heat radiator. This unit should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

### 10 POWER SOURCES

This unit should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult

your video dealer or local power company. For units intended to operate from battery power, or other sources, refer to the operating instructions.

### 11 GROUNDING OR POLARIZATION

This unit is equipped with a polarized alternating - current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way.

This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. To prevent electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted without blade exposure. If you need an extension cord, use a polarized cord.

### 12 POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs and the point where they exit from the unit.

### 13 LIGHTNING

For added protection for this unit during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system.

## IMPORTANT SAFETY PRECAUTIONS

This will prevent damage to the unit due to lightning and power line surges.

### 14 DISC TRAY

Keep your fingers well clear of the disc as it is closing. It may cause serious personal injury.

### 15 OVERLOADING

Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

### 16 OBJECT AND LIQUID ENTRY

Never press objects of any kind into this unit through openings as they may touch dangerous voltage points or "short-out" parts that could result in a fire or electric shock. Never spill liquid of any kind on the unit.

### 17 BURDEN

Do not place a heavy object on or step on the product. The object may fall, causing serious personal injury and serious damage to the product.

### 18 DISC

Do not use a cracked, deformed or repaired disc. These discs are easily broken and may cause serious personal injury and product malfunction.

### 19 SERVICING

Do not attempt to service this unit yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### 20 DAMAGE REQUIRING SERVICE

Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions.

- A. When the power-supply cord or plug is damaged.
- B. If liquid has been spilled, or objects have fallen into the unit.
- C. If the unit has been exposed to rain or water.
- D. If the unit does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the unit to its normal operation.
- E. If the product has been dropped or the cabinet has been damaged.

F. When the unit exhibits a distinct change in performance-this indicates a need for service.

### 21 REPLACEMENT PARTS

When replacement parts are required, have the service technician verify that the replacements he uses have the same safety characteristics as the original parts. Use of replacements specified by the unit manufacturer can prevent fire, electric shock, or other hazards.

### 22 SAFETY CHECK

Upon completion of any service or repairs to this unit, ask the service technician to perform safety checks recommended by the manufacturer to determine that the unit is in safe operating condition.

### 23 WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

### 24 HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### FCC NOTICE :



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception; which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experience radio/TV technical for help.

## FEATURES

Thank you for choosing SANYO. Please read this manual carefully to obtain maximum benefits from your product.

### OUTSTANDING SOUND QUALITY

Dolby Digital  system developed by Dolby Laboratories and DTS  developed by DTS Inc., features high quality surround sound which can be played in DVD or CD disc at home, to reproduce high quality sound effects.

### HIGH DEFINITION

The unit adopts MPEG2 coding format and good high horizontal resolution.

### SPECIAL FUNCTIONS

Multi-angle and multi-language bring additional functions.

Parent lock makes it easy to control the content of discs.

### SCREEN

Regular 4:3 screen and wide screen (16:9) are available.

### COMPATIBILITY

The unit can play DVD-video discs, and is compatible with CD, CD-G, CD-R, CD-RW, PIC-CD, MP3, DVD-R, DVD-RW, DVD+RW.

### ZOOM

It can enlarge pictures.

### MULTI-FUNCTIONS

Fast forward, fast reverse, forward and reverse slow, frame play, repeat play and program play.

### TIME SEARCH

It can search a specific part on a disc, especially good for watching fiction movies.

### RESUME PLAY

It can memorize the position where the disc is stopped and resume playback.

### VIDEO OUTPUT

Standard video, S-video, component (progressive, interlace) video output mode.

### AUDIO OUTPUT

Analog audio output, coaxial and optical digital audio output, can be connected with the appropriate amplifier to enjoy high-quality sound.

### KARAOKE

Sing along with the music! Microphone input, KARAOKE channel selection.

## ABOUT DISCS

 
### PLAYABLE DISCS

DVD-video	Region number 1 or Region number ALL
DVD-R/+R	DVD video
DVD-RW/+RW	DVD video
DVD-ROM	DVD video
CD-G	Playback audio/ graphic files
CD-DA	Digital audio files
CD-R/ CD-RW	Digital audio/ MP3/ JPEG format files
CD-DA/JPEG/MP3	Total disc capacity : over 4M, Each file : under 1M
CD-ROM	Digital audio/ MP3/ JPEG format files


### NONE PLAYABLE DISCS

DVD-video	Different region number
DVD-ROM	Files for PC application / Data files
CD-ROM	Files for PC application / Data files
CD-MP3	Files under windows format
DVD-RAM	All format

### STRUCTURE OF DVD

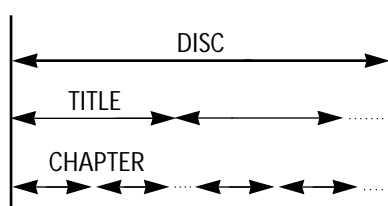

### STRUCTURE OF CD

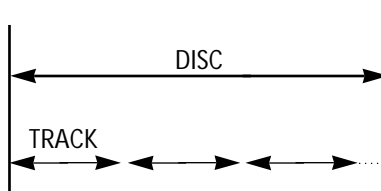 

### TITLE

The images or music of a DVD are divided into some units, among which title is the biggest one.

When playing a DVD, the movie is the title.

When playing a CD, the combined tracks make up the title.

## ABOUT DISCS

### CHAPTER

It is smaller than title among the units of a DVD. A title is made up of several chapters, and each chapter has a number for search. But some discs may not have numbered chapters.

### TRACK

In a CD, each track has a number to enable search functions.

### SCENE

The menu pictures, motion and motionless pictures of a CD can be divided into some parts, these parts are scenes. Each scene has a number for search.

#### REGION MANAGEMENT INFORMATION

This unit is designed and manufactured to respond to the Region Management information that is recorded on a DVD disc. The region number of this player is "1". If the region number described on the DVD discs does not correspond to the Region number of this player, the player will not play this disc. This player will play DVD discs made for "ALL" regions. Therefore, this player will play DVD discs marked with labels containing the region number "1" or "ALL".



(Region 1)



(Region ALL)

#### MACROVISION

This product incorporates copyright protection technology that is protected by U.S patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.



## BEFORE OPERATION

### SECURITY

- Before operation, check if the voltage of the unit is in line with the local voltage.
- Hold the plug to disconnect it from the AC outlet. Do not pull the power cord.
- When the plug of the unit is connected to the mains outlet, the unit will be still connected to AC even if the power is turned off.
- Disconnect the plug as soon as liquid or objects enter the unit. The unit can not be used until being checked by experts.
- Do not open the cabinet as laser rays employed by the unit may damage eyes. Any servicing should be done by qualified service personnel.

### PLACEMENT

- Put the unit where ventilation is good enough to prevent overheating.
- Never put the unit in direct sunlight or near heat sources.
- Put the unit horizontally, never put any heavy object on the unit.
- To protect the pickup, do not put the unit where there is dust. If there is dust on the pickup, use a cleaning disc to clean it. Paying particular attention to the operating instructions of the cleaning disc.

### CONDENSATION

Moisture will appear on the pickup lens in the following cases:

- The unit is suddenly moved from a cold place to a warm place.
- The unit is put in a room with a heater, or in cold air from an air-conditioner.
- Using the unit in a humid place. In these cases, the unit can not work. Unload the disc and leave the unit on for about one hour to evaporate the moisture.

### CLEANING

- Use a soft cloth with a little neutral detergent to wipe the cabinet, panel and controls.
- Never use abrasive paper, polishing powder, solvent like alcohol or gasoline.

### HANDLING DISC





- To keep the disc clean, do not touch the playsides of the disc.
- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.

### CLEANING DISC

- Before playback, wipe the disc outward from the centre with clean cloth.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray.

 
**BEFORE OPERATION****CHECK ACCESSORIES**

Check if you have all the accessories after the carton is opened.

Remote control	AAA batteries	Video/Audio cord	Instruction manual
			

**USE REMOTE CONTROL**

- 1 Open the battery compartment.
- 2 Insert two AAA batteries, make sure to match "+" and "-" of the batteries to the marks in the battery compartment.
- 3 Close the battery compartment.
- 4 Point the remote control at the remote sensor.

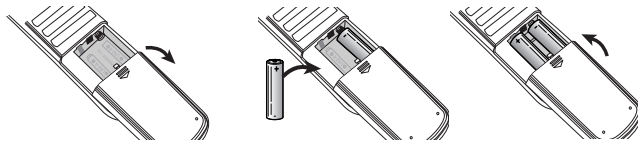

Note:

1. Batteries can last for about 6 months generally. Change the batteries if that does not work.
2. If the remote control is not used for a long time, remove the batteries to prevent battery leakage.

## PREPARATIONS BEFORE OPERATION

 
### FRONT PANEL



- ① **STANDBY/ON button**  
To switch the unit On or Off when connected to AC power outlet
- ② **OPEN/CLOSE button**  
To open or close the disc tray.
- ③ **PLAY button**  
To play the loaded disc. Press this button to go to the preferred item when the menu is displayed on the TV screen.
- ④ **STOP**
- ⑤ **PREV button**  
To skip back from the current chapter (for DVD) or track (for CD).
- ⑥ **NEXT button**  
To skip forward to the next chapter (for DVD) or track (for CD).
- ⑦ **REMOTE SENSOR**  
Receives a light signal from the remote control.
- ⑧ **DISPLAY**  
Displays operation status
- ⑨ **Microphone Level adjustment knob.**
- ⑩ **Microphone Echo adjustment knob.**
- ⑪ **Microphone Jack 1 & 2**

## PREPARATIONS BEFORE OPERATION

### REAR PANEL

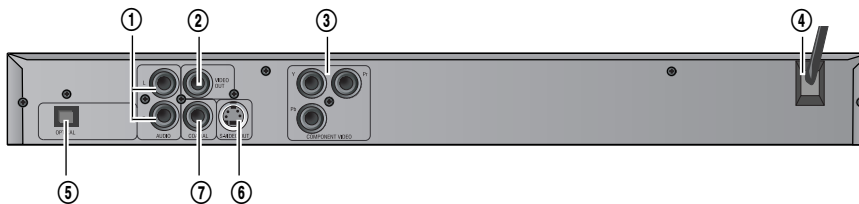

#### ① AUDIO OUT (L/R TRACK)

Two phono sockets for analogue 2 Channel audio in order to a TV or stereo amplifier.

#### ② VIDEO OUT

Connects composite video signal to input AV or PHONO sockets of TV or monitor to achieve high fidelity colour reproduction.

#### ③ COMPONENT (Y.Pb.Pr)

Connects to TV or monitor equipped with Component input . In order to achieve a sharper and cleaner picture than when connected via VIDEO OUT (composite video).

#### ④ POWER SUPPLY SOCKET WIRE

Creates POWER between wall outlet and the unit..

#### ⑤ DIGITAL AUDIO OPTICAL OUT

Connects digital audio under play mode into an AV amplifier or a receiver equipped with digital audio decoder for you to enjoy the theatre-quality sound in your home.

#### ⑥ S-VIDEO OUTPUT

 
Connects to TV or monitor equipped with S-VIDEO input. In order to achieve a sharper and cleaner picture than when connected via VIDEO OUT (composite video).

#### ⑦ DIGITAL AUDIO COAXIAL OUT

Connects digital audio under play mode into an AV amplifier or a receiver equipped with digital audio decoder for you to enjoy the theatre-quality sound in your home.

## PREPARATIONS BEFORE OPERATION

### ■ Display

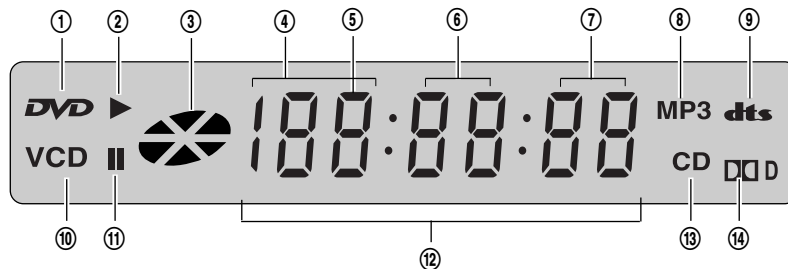


- |  |  |
|--|--|
| <p>① Recognized DISC TYPE indicator<br/>: DVD</p> <p>② PLAY indicator</p> <p>③ DISC LOAD/PLAY indicator<br/>This indicator is lit up after recognizing the disc.</p> <p>④ DVD/CD/MP3 indicator<br/>Indicates the chapter or track number.</p> <p>⑤ DVD/CD indicator<br/>Indicates the hour.</p> <p>⑥ DVD/CD indicator<br/>Indicates the minutes.</p> <p>⑦ DVD/CD indicator<br/>Indicates the seconds.</p> <p>⑧ Recognized DISC TYPE indicator<br/>: MP3</p> <p>⑨ DVD AUDIO STREAM indicator<br/>: dts</p> <p>⑩ Recognized DISC TYPE indicator<br/>: VCD</p> <p>⑪ PAUSE indicator</p> | <p>⑫ NUMBER/ CHARACTER indicator<br/>Chapter, track number, and time are displayed in loading DVD/CD disc, while track number and time are displayed in loading MP3.<br/><br/> <i>DP EN</i> : Tray is opened<br/> <i>CLD SE</i> : Tray is closed<br/> <i>LD Rd</i> : Disc is loaded<br/> <i>NO dISC</i> : There is no disc in tray<br/> <i>Error</i> : Disc has some error</p> <p>⑬ Recognized DISC TYPE indicator<br/>: CD</p> <p>⑭ DVD AUDIO STREAM indicator<br/>Indicates the audio type of the disc under playing is DOLBY DIGITAL.</p> |
|--|--|

## PREPARATIONS BEFORE OPERATION
 
### NAMES AND LAYOUT OF REMOTE CONTROLS

\* After setting the mode by using SETUP menu (for example, NTSC select in NTSC/PAL/AUTO setup), the setting is kept though you switch the unit off and turn it on.

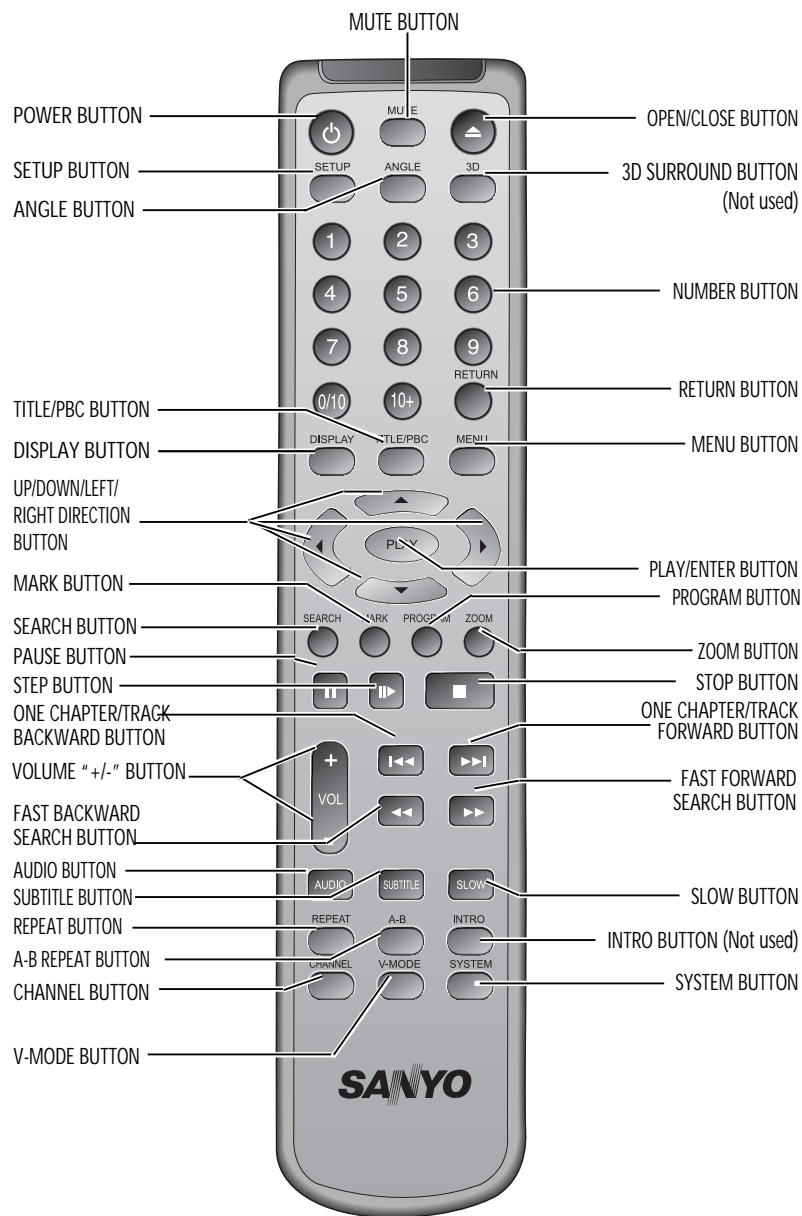


## CONNECTIONS

Turn off all equipment before operation.

The unit has many kinds of output modes like A/V output, S-VIDEO output and digital signal output (COAXIAL, OPTICAL). You may select as you need.
 
### CONNECTED TO A TV AND AN AUDIO AMPLIFIER

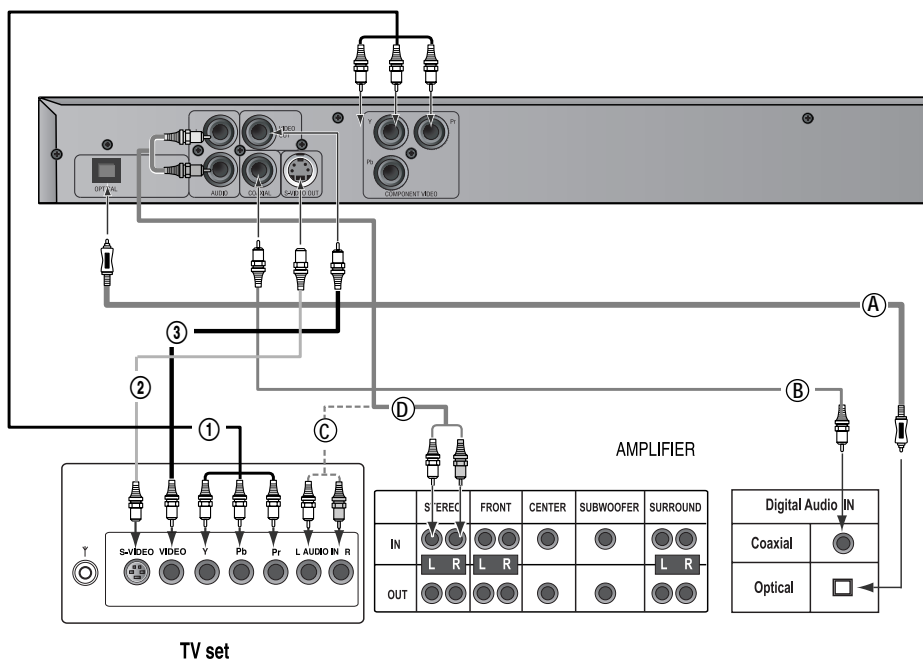

Connects either ①+A, ②+A, ③+A, ①+B, ②+B, ③+B, ①+C, ②+C, ③+C, ①+D, ②+D or ③+D .

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works.

©1992-1997 Dolby Laboratories, Inc. All rights reserved.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

## BASIC OPERATIONS

### PLAY DISCS

 
- 1 Press "POWER" button on the TV and audio system, Press "TV/VIDEO" button on the TV, select VIDEO mode (TV).

Select S-Video mode if using an S-VIDEO connection.



TV/VIDEO

- 2 Select the correct audio input on the amplifier.
  - Each amplifier is different from another, please refer to the manual for the amplifier. (e.g., connect the audio output of the DVD player to the DVD audio input of an amplifier.)



DVD/LD

#### Note:

*The Step2 can be cancelled if you do not connect it to the amplifier.*

- 3 Press "STAND BY/ON" button on the front panel or "⏻" button on the remote control to turn the unit on.

- 4 Press "OPEN/CLOSE ▲" button to open the disc tray and insert the disc with its label upward. Press "OPEN/CLOSE ▲" button again to close the disc tray. The unit begins to read the disc. The TV screen shows the DVD menu and title menu.

- When playing a DVD, DVD menus and titles are displayed on TV screen.
- In the case of CD, the disc plays in order of its track number.

- 5 Stop playback.  
Press ■.

- 6 Press ▲ to remove the disc.



## BASIC OPERATIONS

 
### SYSTEM SETTING (NOT ON ALL MODELS)

According to the system of the TV to be connected, set the system of the unit to make it match the TV.

Press SYSTEM button on the remote control, then choose TV TYPE.

- When you press the [SYSTEM] button, the TV screen shows the information as : "If you want to change, press [SYSTEM] again." Press the [SYSTEM] button again, the video out system changes as follows.

SYSTEM




### V-MODE (WHEN SELECTING INTERLACE, PROGRESSIVE OR S-VIDEO)

- When connecting to your TV's component video inputs, press the V-MODE on the remote control to select INTERLACE, PROGRESSIVE or S-VIDEO.

When you press the [V-MODE] button, the TV screen shows the information as : "If you want to change, press [V-MODE] again." Press the [V-MODE] button again to change the video mode.

 V-MODE



If you connect to Composite (basic A/V) inputs after selecting one of the 3 above option, picture is not displayed. Press the V-MODE on the remote control to select Composite video.

### DISPLAY

Each time you press the "DISPLAY" button when playing a disc, the TV screen shows the information as :

#### DVD

TITLE ELAPSED → TITLE REMAIN → CHAPTER ELAPSED →  
CHAPTER REMAIN → DISPLAY OFF

 
#### VCD

SINGLE ELAPSED → SINGLE REMAIN → DISPLAY OFF

#### MP3 / CD

Folder / Filelist

DISPLAY



## BASIC OPERATIONS

### FAST PLAY

When playing disc, you may play it forward fast or reverse it fast to find what you need.

#### Note:

 
Press **PLAY** to play normally when playing fast.

#### Note:

The marked **FAST PLAY** speed on owner's manual and real fast play speed can be different depending on which disc you play.

1


Press **▶▶** to play forward fast. Each time you press the button, the speed of picture changes like the right sides.



- ① **▶▶** FF X2
- ② **▶▶** FF X4
- ③ **▶▶** FF X8
- ④ **▶▶** FF X16
- ⑤ **▶▶** FF X32
- ⑥ **PLAY**

2

 Press **◀◀** to reverse the disc fast. Each time you press the button, the speed of picture changes like the right sides.



- ① **◀◀** FR X2
- ② **◀◀** FR X4
- ③ **◀◀** FR X8
- ④ **◀◀** FR X16
- ⑤ **◀◀** FR X32
- ⑥ **PLAY**

### SLOW PLAY

#### Note:

Press **PLAY** to play normally.

Press "SLOW" button to play slowly.



#### Note:

Press **PLAY** to play normally.

### PAUSE/ STEP

Press **PAUSE** on the remote control to make the playback pause.  
Pressing **STEP** again moves the picture forward frame by frame.

## BASIC OPERATIONS

### SELECT AUDIO LANGUAGE

You can choose the language according to your choice when playing multi-language DVD.

Press "AUDIO" button, select different languages.



**Note:**

1. Different disc has different languages
2. You can press "AUDIO" button to choose the language you want when you play multi-language DVD discs.

 
**\*Attention:**

Please select the AUDIO language in SETUP menu to keep the setting!!!

### SELECT CHANNELS (VCD)

You may select the right channel or left channel or stereo from a multi-channel.

Press "CHANNEL" button, the screen show alternately and select the desired audio channel:

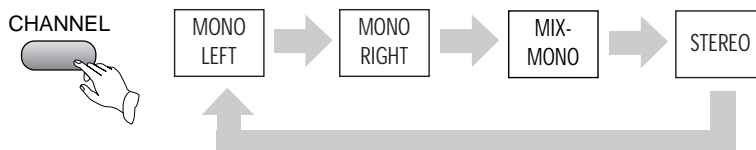

**Note:**

Use channel function when you play the disc, to choose mono audio output (left or right channel), stereo or mix-mono

## MICROPHONE CONTROL

### **Sing along with the music. Microphone set up** (1-2 microphones required, not supplied)

- 1 Turn on Microphone Switch.
- 2 Connect the Microphone to the input socket on the front panel.



- 3 Insert a Karaoke disc (label side uppermost) and select track to play.
- 4 Adjust the microphone level & echo on the front panel of DVD.



- 5 Select either the Left, Right, Mixed or Stereo mode, using channel button on the remote control.
- 6 Adjust to a comfortable volume using the volume (+/-) button on the remote control of the DVD player and the volume on the Monitor/TV.

## PLAYING A DESIRED SCENE

### ■ TO SKIP SCENES IN A DISC

- 1 Press **▶▶** to move to the next chapter (or track).  
The current chapter (or track) moves to the next chapter (or track).
- 2 Press **◀◀** to move to previous chapter (or track).  
The current chapter (or track) moves to the previous chapter (or track) or first scene of current chapter (or track).

### ■ DIRECTLY MOVING TO A DESIRED TITLE (DVD, VCD)

Some movie discs may contain multiple titles. If the disc has a movie title menu recorded on it, the [TITLE/PBC] button can be used to select the movie title. Details of operation may differ depending on the disc used.

- 1 Press the [TITLE/PBC] or [MENU] button .  
A list of the titles on the disc is displayed.  
If using some disc, the menu screen will appear only when the disc has PBC function and PBC ON is activated.



#### Note:

*You can select the desired title directly by using number button.*

\* In the case of PBC play, press RETURN to return to the sub-menu, press it again to return to the home menu.

- 2 Press the [PLAY] button after pressing the [**◀▶▲▼**] or number button to select the desired title.  
The selected title now starts playing.

## PLAYING A DESIRED SCENE

### PLAYING A DISC CONTAINING MP3 FILES

 
- 1 When a MP3 disc is loaded, MP3 menu screen is displayed automatically depending on MP3 disc's folder structure.
- 2 Use the direction button to select the folder you want to play and press the [PLAY] button. This button allows you to see the file lists under the folder.
- 3 Use the direction button to select a MP3 title. Press the PLAY button then play will start automatically. When you know the title number, enter the MP3 title number using the numeric buttons on the remote control and then press [PLAY] button.
- 4 Press **▶▶** on the remote control to choose next title (next files in play mode). Press **◀◀** for previous title (previous files in play mode).

When you know the title number, enter MP3 title number using the numeric buttons on the remote control and then press [PLAY] button.

### REPEAT PLAY

When play a disc, this function can be used to repeatedly play a title, chapter or disc.


Press "REPEAT" button, the screen shows orderly.



#### • DVD


 
#### • VCD



#### • MP3 / CD

 


## PLAYING A DESIRED SCENE

### REPEATING A DEFINED PERIOD FROM A TO B

You may press A-B to enjoy some parts repeatedly when playing a disc.

1. Press "A-B" to set a starting point A.
2. Press "A-B" twice to an end point B.  
Afterwards, the unit plays from A to B.
3. Press "A-B" three times to remove A-B repeat.



### SELECT A SUBTITLE LANGUAGE

 
When play a multi-subtitle DVD, you may select one subtitle to show it on the screen.

#### Note:

1. For some discs, subtitles cannot be removed.
2. Subtitle function is only available for some discs with subtitle recorders.

- 1 Keep pressing [SUBTITLE] button till the user's preferred language appears.

If a DVD disc includes subtitle information, every time the user presses [SUBTITLE] button, ENGLISH, FRENCH, SPANISH and others appear one by one.



- 2 Remove the subtitle.

Press SUBTITLE button until the screen shows "Subtitle Off".

## PLAYING A DESIRED SCENE

### SEARCHING

#### SEARCHING DVD WITH A TITLE/CHAPTER NUMBER OR A TIME

- You may directly enter a title or chapter number to search fast on a disc. The unit plays from the point.

Press the [SEARCH] button to play at a desired Title, Chapter or Time.

Press the [SEARCH] button to select SEARCH mode.

Press ◀ or ▶ button highlight desired item.

Title 01/01 Chapter /02

Title 01/01 Time : :

Chapter 01/02 Time : :

TITLE --- Input title number

CHAPTER --- Input chapter number

TIME---:---:--- Input time

#### SEARCHING VCD WITH A DISC /TRACK TIME OR TRACK NUMBER

- Press the [SEARCH] button to play at a desired Time or Track.

Press the [SEARCH] button to select SEARCH mode.

Press ◀ or ▶ button highlight desired item.

Disc Go To --:--

Track Go To --:--

Select Track -- / 02

Disc Go To -- : -- Input disc time

Track Go To -- : -- Input track time

Select Track --/02 Input track number



## PLAY DISCS IN VARIOUS WAYS

### SELECT ANGLE

Some discs have images with different screen angles, you may select among them. For example, when you watch a running train, you may select to watch it from the front, the left window or the right window without stopping it.

Keep pressing [ANGLE] button till the preferred angle appears.

 2/4 (select ANGLE2)


 3/4 (select ANGLE3)

 4/4 (select ANGLE4)



ANGLE



 
 **Note:** Multi Angle function is limited to a DVD disc supporting multi angle information.

### ZOOM PLAY

This function can be used to enjoy a motion or motionless picture.

- 1 Press "ZOOM" button when playing, the screen shows orderly:

ZOOM

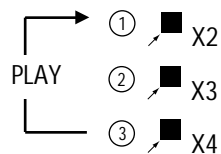

- 2 Press "UP/DOWN/LEFT/RIGHT [◀▶▲▼]" button to move the enlarged picture.

## PLAY DISCS IN VARIOUS WAYS

### Book Mark

- 1** Press MARK button , the screen will show the following frame:


- 2** Moving direction button to select the saving position on the screen.  
Press PLAY button to save the time tag.

- 3** Press MARK button when you need book mark function, then choose the item you want to resume playing, then press PLAY button to continue playing from the saving point.

	02			05	
	08				

#### Note:

*If you erase a book mark function, press "RETURN" button.*

## PLAY DISCS IN VARIOUS WAYS

### PROGRAM PLAY (DVD)

 
You may program the title and chapter on a disc and play them in the programmed order.

#### Note:


- First one is title, second one is chapter.
- If the disc has only one title, TT will not be displayed.

- 1 Press "PROGRAM" button, the screen shows:

PROGRAM

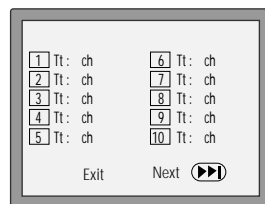

 - 2 Input the sequence number you want to program playing.

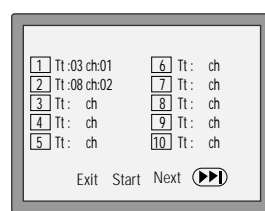

- 3 After the programming is finished, move cursor to "START" by direction button and press "PLAY" button to start playing.

- 4 Press "STOP" button two times to remove program play.

\* If you want to remove any program no, put the cursor in the position of the program number, press "RETURN" button.



## PLAY DISCS IN VARIOUS WAYS
  
### PROGRAM PLAY (VCD)


You may program the track on a disc and play them in the programmed order.

- 1 Press "PROGRAM" button, the screen shows:

PROGRAM

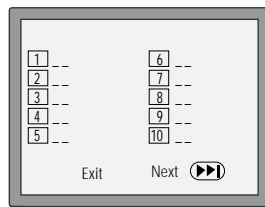

 - 2 Input the sequence number you want to program playing.

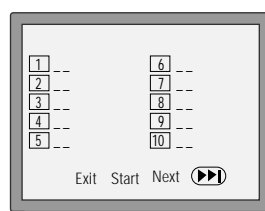

- 3 After the programming is finished, move cursor to "START" by direction button and press "PLAY" button to start playing.

- 4 Press "STOP" button two times to remove program play.

\* If you want to remove any program no, put the cursor in the position of the program number, press "RETURN" button.

## PLAY DISCS IN VARIOUS WAYS

### ■ PLAY MP3, CD, JPEG OR PICTURE CD

#### ■ SELECT TRACKS

**1** The screen will display as right after the disc is loaded

 
 
**2** Each time you press the PROGRAM button, FOLDER and FILE LIST appear one by one.

At this time you can select the item in the list.

**3** You can select the file you want using the direction buttons.

**4** Press the PLAY button after selecting the file you want.

The file will be played back.

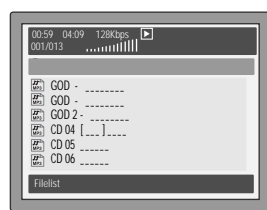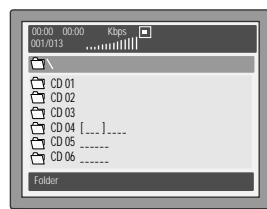

#### Note:

*If you go to Menu screen or File list during Playback mode, press STOP button.*

## PLAY DISCS IN VARIOUS WAYS

### ■ SELECT REPEAT PLAYBACK MODE (MP3/CD)

Press "REPEAT" button, you can select "Single", "Repeat One", "Repeat Folder" and "Repeat Off".

- Single mode: the player will stop after finished playing the current item
- Repeat One mode: repeat the current item
- Repeat Folder mode: repeat the items in the current directory

 
**Note:**

*If you go to Menu screen or File list during Playback mode, press STOP button.*

# FUNCTION SETTING

## MENU SETTING

According to the recorded information and external equipment, set the following functions for DVD to obtain the best playing status. Press "SETUP" button to set the main menu.

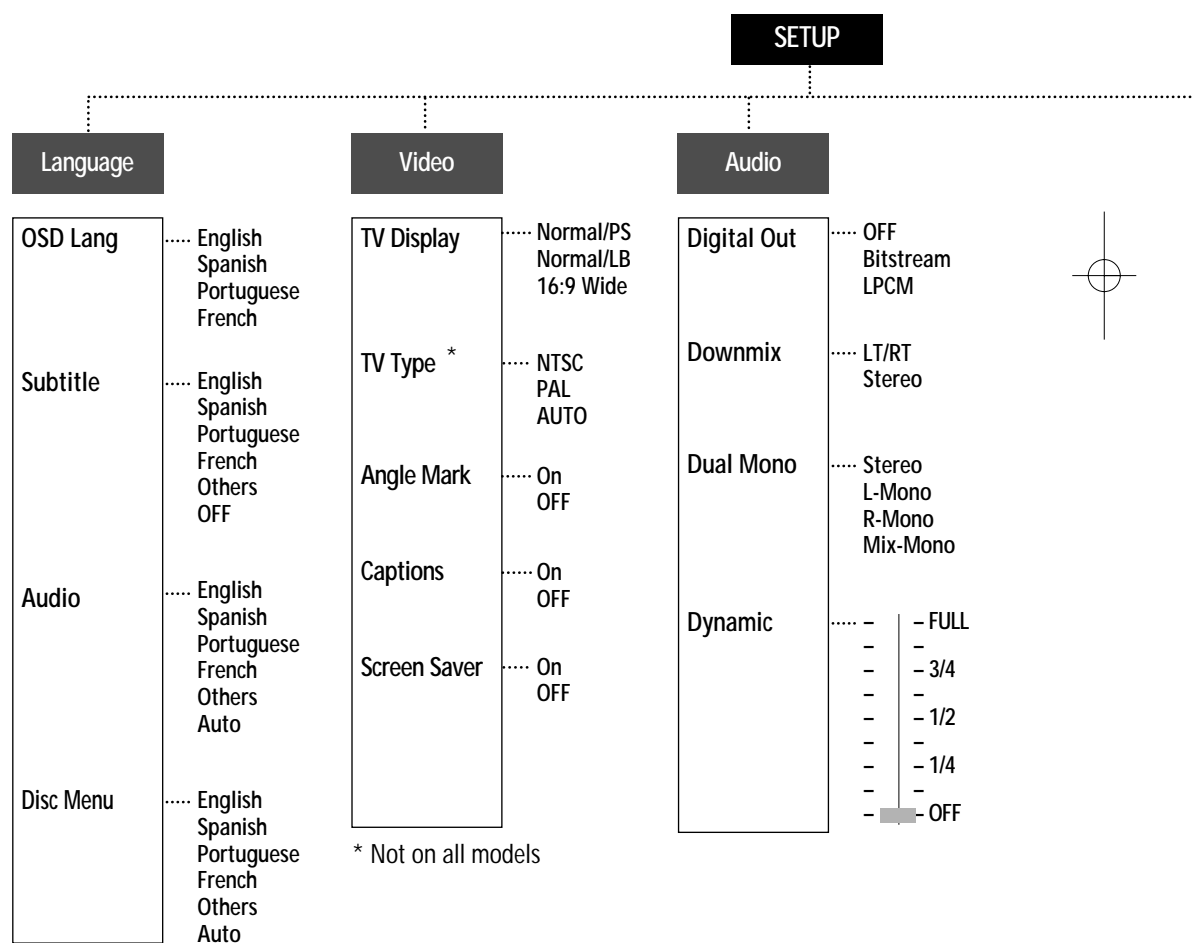

## FUNCTION SETTING

### BASIC NAVIGATION

To navigation through the setting on the screen, use the direction buttons to scroll through the list of settings and use "PLAY" button to select the high lighted function.

### SETUP MENU

Press the SETUP button to enter the On Screen Display and to exit at any time. In each of the menus, selecting MAIN PAGE (SETUP menu) will immediately return you to the initial screen.

### Others Language Setting Value

No	Code Value	Language	No	Code Value	Language	No	Code Value	Language
1	6565	Afar	47	7383	Icelandic	93	8373	Singhalese
2	6566	Abkhazian	48	7384	Italian	94	8375	Slovak
3	6570	Afrikaans	49	7387	Hebrew	95	8376	Slovenian
4	6577	Amharic	50	7465	Japanese	96	8377	Samoan
5	6582	Arabic	51	7473	Yiddish	97	8378	Shona
6	6583	Assamese	52	7487	Javanese	98	8379	Somali
7	6588	Aymara	53	7565	Georgian	99	8381	Albanian
8	6590	Azerbaijani	54	7575	Kazakh	100	8382	Serbian
9	6665	Bashkir	55	7576	Greenlandic	101	8385	Sundanese
10	6669	Byelorussian	56	7577	Cambodian	102	8386	Swedish
11	6671	Bulgarian	57	7578	Kannada	103	8387	Swahili
12	6672	Bislama	58	7579	Korean	104	8465	Tamil
13	6678	Bengali	59	7583	Kashmiri	105	8469	Tegulu
14	6679	Tibetan	60	7585	Kurdish	106	8471	Tajik
15	6682	Breton	61	7589	Kirghiz	107	8472	Thai
16	6765	Catalan	62	7665	Latin	108	8473	Tigrinya
17	6779	Corsican	63	7678	Lingala	109	8475	Turkmen
18	6783	Czech	64	7679	Laotian	110	8476	Tagalog
19	6789	Welsh	65	7684	Lithuanian	111	8479	Tonga
20	6865	Danish	66	7686	Latvian/Lettish	112	8482	Turkish
21	6869	German	67	7771	Malagasy	113	8484	Tatar
22	6890	Bhutani	68	7773	Maori	114	8487	Twi
23	6976	Greek	69	7775	Macedonian	115	8575	Ukrainian
24	6978	English	70	7776	Malayalam	116	8582	Urdu
25	6979	Esperanto	71	7778	Mongolian	117	8590	Uzbek
26	6983	Spanish	72	7779	Moldavian	118	8673	Vietnamese
27	6984	Estonian	73	7782	Marathi	119	8679	Volapuk
28	6985	Basque	74	7783	Malay	120	8779	Wolof
29	7065	Persian	75	7784	Maltese	121	8872	Xhosa
30	7073	Finnish	76	7789	Burmese	122	8979	Yoruba
31	7074	Fiji	77	7865	Nauru	123	9072	Chinese
32	7079	Faeroese	78	7869	Nepali	124	9085	Zulu
33	7082	French	79	7876	Dutch			
34	7089	Frisian	80	7879	Norwegian			
35	7165	Irish	81	7982	Oriya			
36	7168	Scots/Gaelic	82	8065	Punjabi			
37	7176	Galician	83	8076	Polish			
38	7178	Guarani	84	8083	Pashto/ Pushto			
39	7185	Gujarati	85	8084	Portuguese			
40	7265	Hausa	86	8185	Quechua			
41	7273	Hindi	87	8277	Rhaeto-Romance			
42	7282	Croatian	88	8279	Romanian			
43	7285	Hungarian	89	8285	Russian			
44	7289	Armenian	90	8365	Kinyarwanda			
45	7365	Interlingua	91	8368	Sanskrit			
46	7378	Indonesian	92	8372	Serbo-Croatian			

Preference

Password

..... Change

Parental

..... 1 KIDS SAFE  
2 G  
3 PG  
4 PG-13  
5 PG R  
6 R  
7 NC-17  
8 Adult  
No Parental

Defaults

..... Reset



## FUNCTION SETTING

### LANGUAGE

Note:

"OSD" means  
"On Screen  
Display".

#### OSD LANG.

When select a language, the screen show this language.

For example, if you select ENGLISH, the OSD is in English.

#### SUBTITLE

##### • Selecting Subtitle language.

Please set it as the preferred language. In case the subtitle language is set and recorded in the DISC, it is automatically played in the set language in every playing. For example, English is set and recorded as subtitle language in the DISC, it is played in English.

#### AUDIO

##### • Selecting an audio language.

Set it as the preferred audio language. In case the audio language is set and recorded in the DISC, it is automatically played in the set language in every playing. For example, English is set and recorded as audio language in the DISC, it is played in English.

#### DISC MENU

##### • Selecting Disc Menu language.

Please set it as the preferred DISC MENU language. In case the DISC MENU language is set and recorded in the DISC, it is automatically played in the set language in every playing. For example, English is set and recorded as a DISC MENU language in the DISC, it is played in English.

 
### VIDEO

#### TV DISPLAY

1

##### NORMAL/PS


This is selected when the unit is connected with a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

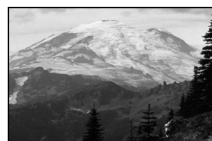

## FUNCTION SETTING

### 2 NORMAL/LB

 This is selected when the unit is connected with a normal TV. Wide-screen images are shown on screen, with black belts on the top and bottom.

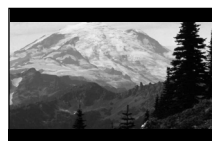

### 3 16:9 WIDE

This is selected when the unit is connected with a wide-screen TV.



## ■ TV TYPE

You may select according to the colour system of the TV to be connected.

- Select "NTSC" for a NTSC TV.
- Select "PAL" for a PAL TV.
- Select "AUTO" for a multi-system TV.

## ■ ANGLE MARK

This only works when there is an angle mark on the disc.

- Select "ON", the screen shows the mark when playing a DVD.
- Select "OFF", the mark is not shown.

## ■ CAPTIONS

The hidden subtitle is shown or turn off.

## ■ SCREEN SAVER

Start the screen saver, the screen saver image appears when the unit stops or the image is motionless for a few seconds. This saver can keep the screen from being damaged.

## FUNCTION SETTING

### AUDIO

#### Digital Out

- **OFF**  
No signal is output from the coaxial, optical port.
- **Bitstream**  
Select this when the DVD player is connected with a power amplifier through optical or coaxial port. Please refer to the page 14. when a Dolby Digital DVD, DTS DVD or MPEG DVD is played, select this, the coaxial or optical port will output in the corresponding digital format (source code). The power amplifier to be connected must have Dolby Digital, DTS and MPEG DVD is played, the optical or coaxial port will output in PCM 2-channel format.
- **LPCM**  
Select this when the DVD player is connected with a TV or a power amplifier through audio cord.

#### Down Mix

Select Down Mix mode to LT/RT or Stereo

#### DUAL MONO

This is the output mode of the L and R signals of the set audio output. If it is set to "MIX MONO", the function only works when the DVD being played is 2.0-channel.

- **STEREO**  
Choose this option, the audio output should be dummy stereo signal.
- **L-MONO**
- **R-MONO**
- **MIX-MONO**

#### DYNAMIC RANGE

Set "Off" to view a program in the dynamic range as recorded in disc. To hear loud sound softer and soft sound louder, set "Full".

- FULL  
-  
- 3/4  
-  
- 1/2  
-  
- 1/4  
-  
- OFF

 
## FUNCTION SETTING

### ■ PREFERENCE

#### ■ PASSWORD

Select "PASSWORD" in PREFERENCE SETUP menu to setup password, input a password.

Enter a password according to the screen.

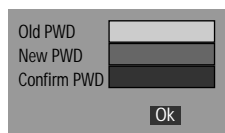

Old PWD

New PWD

Confirm PWD

OK

#### Note:

- The password is 3308 when the unit is turned on initially or you forget the password.
- The password is set by yourself.

#### ■ PARENTAL

The content of a disc with lock function is evaluated by grades. You can select an age grade as your need.

Example: Select "1 KIDS SAFE", the scenes of violence inadvisable to children are not played.

For adults, the screen suggests you enter the code after pressing "PLAY" button, you can watch if the code is right.

#### ■ DEFAULT>> RESET

Each function setting returns to the factory initial status if you select this.

## OTHERS

### ■ TROUBLESHOOTING

If you experience the following problems while using the unit, this troubleshooting guide can help you.

- **NO SOUND**

- Check if the unit is connected securely.
- Make sure you operate the TV or amplifier correctly.

- **NO IMAGE , IMAGE ROLLS AND NO COLOR**

- Check if the unit is connected securely.
- Make sure you operate the TV correctly.
- Make sure you set the color system correctly.

- **BAD SOUND QUALITY**

- Make sure the audio output mode is set correctly.
- Make sure the audio connection between the unit and amplifier is right.

- **DISC CAN NOT BE PLAYED**

- There is no disc in the unit.
- Insert the disc on the disc tray properly with the label side up.
- Clean the disc.
- Moisture has condensed in the unit.  
Remove the disc and leave the unit on for about one hour.

- **NO MICROPHONE SOUND**

- Switch on the microphone.
- Turn the MIC LEVEL away knob clockwise.

- **MICROPHONE DISTORTION**

- Keep the microphone far away from the speaker
- Turn down the volume
- Turn down the volume of microphone and echo.

- **REMOTE CONTROL DOES NOT WORK**

- Remove barriers between the remote control and the unit.
- Replace the batteries with new ones.
- Point the remote control at the remote control sensor of the unit.

- **ATTENTION: KEEPING THE STATUS OF STOP MORE THAN 5 MINUTES ENTERS SCREEN SAVE MODE. WHEN THE SCREEN SAVE MODE IS KEPT MORE THAN AN HOUR, THE SET ENTERS STAND-BY MODE.**

## OTHERS

## TECHNICAL SPECIFICATIONS

Laser		wavelength 650nm
Video		PAL/AUTO/NTSC
Frequency response		20Hz ~ 20KHz ( $\pm 1$ dB)
Signal/noise ratio		$\geq 90$ dB
Channel separation		$\geq 85$ dB ( 1KHz)
Dynamic range		$\geq 80$ dB ( 1KHz)
Output Audio	Analog	output level : $2.0 \pm 0/-0.2$ Vrms (Load impedance : 1,0K $\Omega$ )
	Digital	output level : $0.5 \pm 0.1$ Vp-p (Load impedance : 75 $\Omega$ )
Output Video	Composite	output level : $1.0 \pm 0.1$ Vp-p (Load impedance : 75 $\Omega$ , imbalance, negative polarity)
	S-video	output level : brightness (Luma) $1.0 \pm 0.1$ Vp-p chromaticity (Color) $0.286 \pm 20\%$ (Load impedance : 75 $\Omega$ )
	Component	Y: 1Vp-p, Pb/Pr: 0.7Vp-p (Load impedance : 75 $\Omega$ )
Power		100-240V ~ , 50Hz/60Hz 12W
Dimensions	Body (W x H x D)	430 x 38 x 245 mm
	Packing	510 x 88 x 305mm
Weight (Gross/ Net)		2.9Kg / 2.2Kg

Notes : Design and specifications in this instruction manual are subjected to change without prior notice to improve quality and function.

## THE SANYO COMFORT WARRANTY AUDIO/VIDEO PRODUCTS

### WARRANTY APPLICATION

New, unused Sanyo Audio/Video products purchased through a Sanyo authorized dealer in Canada are warranted against manufacturing defects in materials and workmanship for **ONE YEAR** from the date of purchase by the original retail purchaser. This warranty only applies in favor of the original retail purchaser of the warranted product.

### SANYO CANADA INC.'S RESPONSIBILITY

During the warranty period, SANYO Canada Inc. will repair, or at our option, replace an Audio/Video product which shows evidence of a manufacturing defect in materials or workmanship.

Replacement PARTS are warranted for the remaining portion of the warranty period.

### WHAT IS NOT COVERED

- (a) Products purchased outside Canada.
- (b) Products purchased in a used condition.
- (c) Problems due to product set-up and installation.
- (d) Adjustments that are outlined in the Operating Manual.
- (e) Accessory items including antenna, batteries, cassette tapes, cables, etc.
- (f) Damage in or due to transportation.
- (f) Damage due to improper maintenance, improper wiring, accident, abuse, misuse or negligence.
- (h) Damage caused by lightning and power surges.

### ORIGINAL RETAIL PURCHASER'S RESPONSIBILITY

You, the original retail purchaser, must present your original, dated bill-of-sale together with this warranty to SANYO Canada Inc. or to an authorized Sanyo Service Depot when you make a claim under this Warranty.

You, the original retail purchaser, are responsible for any costs of TRANSPORTING the product to and from SANYO Canada Inc. or an authorized Sanyo Service Depot. You also are responsible for the cost of any MAINTENANCE necessary in respect of the product.

### WARRANTY BECOMES VOID

This warranty becomes void if the product's serial numbers are altered or removed or if any repair to the product is made

other than by SANYO Canada Inc. or by an authorized Sanyo Service Depot.

### LIMITATIONS

- (a) SANYO Canada Inc. reserves the right to change or improve the design of the model of the product warranted hereunder without incurring any obligation to make any modifications to or to install any improvement in or on the product.
- (b) In no event shall SANYO Canada Inc. or any of its Authorized Dealers be liable for special or consequential damage arising from the use of this product.

### STATUTORY WARRANTIES

The above provisions do not preclude the operation of any applicable provincial statute which in certain circumstances may not allow some of the limitations and exclusions described in this Warranty. Where any terms of this Warranty are prohibited by such a statute, they shall be deemed null and void but the remainder of this warranty shall remain in effect.

 
 
 
### HOW TO OBTAIN WARRANTY SERVICE

Please contact the Sanyo Authorized Dealer from whom the product was purchased, or contact us directly at:

**SANYO Canada Inc.**  
1-300 Applewood Cres.  
Concord, Ont. L4K 5C7  
(905) 760-9944  
1-800-263-2244

<http://www.sanyocanada.com>

(R12)



P/N:97P95600D0-  
(1E 10/05)

**SANYO**

SANYO Electric Co., Ltd.

Printed in China

