

bifinett

KH1120



Bedienungsanleitung
gemäß
EN 62079

Ⓞ Operating and safety instructions

Sandwich Maker KH 1120

Congratulations

... on your purchase of the **Bifinett** Sandwich Maker.!

Using the Sandwich Maker, you can conveniently make mouth-watering sandwiches with fillings of your choice at home.

Technical specifications

Status: September 2003

Dimensions (W x H x D) . . . 23 x 10 x 23 cm
Net weight 1,5 kg
Input voltage 230 V / 50 Hz
Power cord length 100 cm
Power consumption 700 W



For your personal safety

- Before you start using your Sandwich Maker, please read the instructions manual carefully.
- Keep this instructions manual in an appropriate place close to the appliance. Pass it on, as the case may be, to the next owner of the appliance.
- **Use the Sandwich Maker only for its intended purpose in accordance with the instructions given here.**

Prevent electrical shock hazards by following the measures given below

- You may use the Sandwich Maker only indoors in a dry place. Keep the appliance away from splashing water even when it is switched off.
- Use the appliance only if the local power supply voltage corresponds to the voltage specified for the appliance (230 V AC at 50 Hz).
- Do not connect the appliance to multi-socket adapter, from which many other electrical devices may be simultaneously drawing power, as this can lead to overloading on the circuit.
- After each use, switch the appliance off and unplug the unit.
- While cleaning, make sure that water does not seep into the internal areas of the appliance. Never attempt to clean the appliance under running water. Never dip the appliance into water.
- Protect the power cord from damages caused by entanglement with other objects. Keep it away from hot surfaces. Do not let the power cord hang loosely from the table or over the hot plate.
- Never open the housing of the appliance.
- Never use the appliance if the power cord or the plug is damaged or wet. In such a case, the appliance may need repairs.
- Only service centres authorised by the manufacturer or experienced technicians may undertake repairs (see "Repair & Customer Service").

Prevent fire hazards and injuries

- Place your Sandwich Maker on an even, non-slippery and heat-resistant base and never on or near other appliances that may radiate high levels of heat (e.g. toaster or cooking-range).
- Do not operate the appliance near inflammable objects, for example, close to curtains or near tissue paper rolls in the kitchen.
- Even during general use, some components of the appliance may become very hot (e.g. the top and bottom housing plates). Do not touch the surface immediately after switching off the appliance until it cools down completely.
- While operating, you can open or close the Sandwich Maker safely using the heatinsulated handle.
- Never operate the appliance without proper supervision. Provide supervision, if children or frail individuals are allowed to operate the appliance.
- After use, allow the appliance to cool down completely before you clean and keep it away.

Prevent damages to the appliance

- Use a plastic or wooden spatula or any other suitable non-metallic utensil to take the sandwiches out so as not to damage the non-stick coating of the hot plate of the Sandwich Maker.
- For the same reason, do not use any corrosive detergents or pointed instruments while cleaning the appliance.

Before you use the appliance for the first time

1. Unpack your new Sandwich Maker and remove all extra fittings such as plastic wrappers and cable clamps meant for protection during transportation.
2. Read the instructions manual carefully.
3. Install the appliance as described in the safety precautions.

i When using the Sandwich Maker for the first time, you may notice fumes caused by heating. These fumes are not injurious to health. However, they may affect the taste of your first few sandwiches.

Therefore, before making sandwiches for the first time, we advise you to switch on the Sandwich Maker once without any food items and allow it to heat up for a few minutes.




Toasting Sandwiches

i

Before switching on the Sandwich Maker, prepare all required ingredients for the sandwiches and keep them ready.

We recommend toast bread for making sandwiches. Besides wheat bread, you can also try the whole-wheat or mixed grain toast bread.

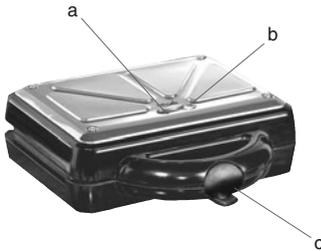

1. Open the lid of the Sandwich Maker by pulling the locking clasp on the handle (c) towards you and tilting the lid up to the stopper. If necessary, remove all the fallen crumbs from the hot plate surface using a dry cloth.
2. Dab some oil or butter on the hot plate surface.
3. Close the lid the lid of the Sandwich Maker. The appliance is fully closed when the locking clasp on the handle (c) audibly snaps into position.
4. Insert the plug into a power socket to switch on the appliance.

Now the Sandwich Maker started getting hot. The red pilot light "POWER" (a) on the lid turns on.

5. Wait for about 4 minutes till the green pilot light "READY" (b) turns on. This indicates the end of the pre-heating time: Now the appliance has reached its operating temperature.

6. Open the lid up to the stopper and place the prepared sandwich ingredients in the correct order:

- Apply some butter or any oil of your choice on one side of the bread slice.
- Place the buttered slice facing downwards on another slice of bread.
- Now spread the other ingredients over the slice of bread.
- Apply some butter or any oil of your choice on another slice and cover your sandwich with it. At this time the buttered side of the slice must face upwards from the upper surface of the other bread slice.

i

Make sure to spread the filling evenly.

7. Close the lid gently until the locking clasp on the handle audibly snaps into position.

Now your sandwich is ready for toasting.

During the preparation, the green pilot light "READY" (b) may turn off from time to time as the built-in thermostat continuously regulates the temperature.

8. Open the Sandwich Maker after about 2-3 minutes and check if your sandwich is sufficiently browned.

i

Depending on the quantity and type of ingredients and your personal taste, you may try out different cooking times for your sandwich to obtain different sandwiches combinations.

9. Remove your sandwiches with a woodenspatula or any other suitable non-metallic utensil.

10. To make more sandwiches, close the lid and repeat steps 5 to 9.
11. You can switch off the Sandwich Maker by unplugging the appliance from the socket. Now both the pilot lights are turned off.
12. Open the lid up to the stopper. Take care not to touch any hot area on the appliance. Allow the appliance to cool down completely and then clean the hot plate surface with a wet cloth.

Cleaning & Maintenance



Before cleaning, unplug the appliance and wait till it has completely cooled down.

Never attempt to clean the appliance under running water and never dip it in water.

Do not use any corrosive detergents or pointed objects for cleaning.

In order not to damage the non-stick coating of the Sandwich Maker, only use a soft cloth wetted in hot water to clean the appliance thoroughly. Thereafter, wipe it with a dry cloth.

Just use a wet cloth to clean the outer surface appliance as well. Before you use your Sandwich Maker the next time, make sure that all components are fully dry.

Storage

You can store away the Sandwich Maker in the horizontal or upright position.

Your Sandwich Maker has an integrated compartment for storing the power cord at the bottom of the housing. You can wind up the power cord in it when the appliance is not in use. This way you can prevent the power cord from getting entangled or soiled or from becoming a likely cause of accidents.

Warranty,

Repair & Customer Service

Your Sandwich Maker has a **3-years-warranty** from the date of purchase as per our standart business conditions and proper use and maintenance.

To prolong the lifespan of your Sandwich Maker, follow the directions given under "Cleaning & Maintenance".

In case your Sandwich Maker fails to function as expected, it must be given for repairs to a service centre authorised by the manufacturer or a qualified technician. For this purpose, please contact our customer service. The address is given in the enclosed warranty certificate.

Disposal

Consult your city or community administrative authorities, if necessary, about procedures for the environmentfriendly and systematic disposal of the Sandwich Maker.

- i** Before disposal, remove the power cord from the appliance to make it unusable. This is a preventive measure to rule out the risk of an accident if children use it as a play object.

