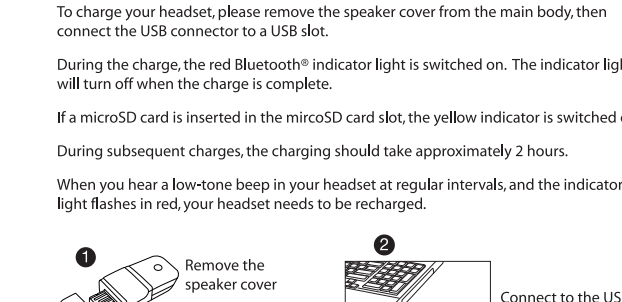
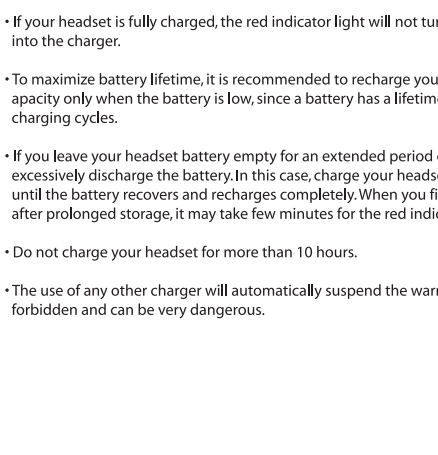
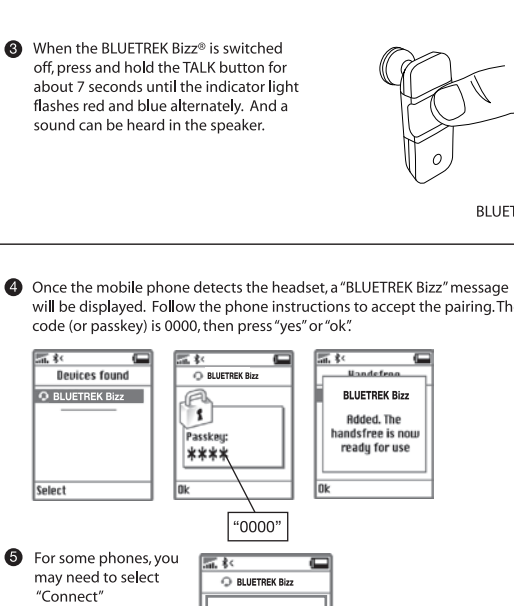
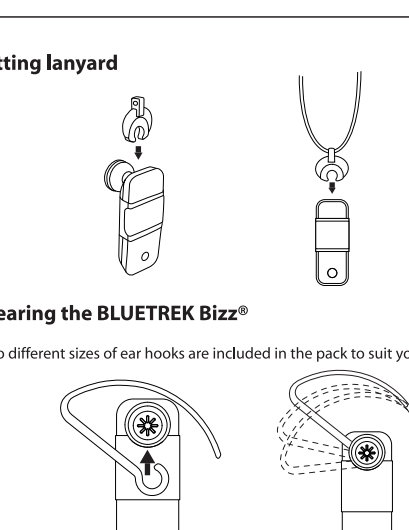
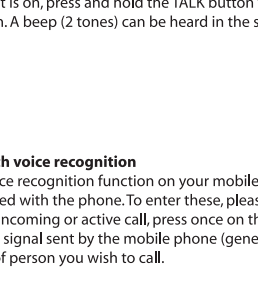
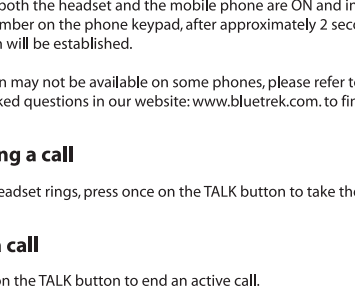
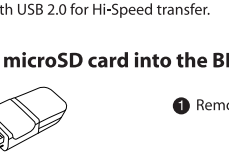
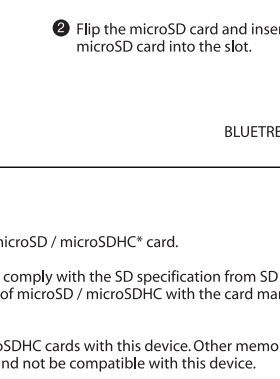
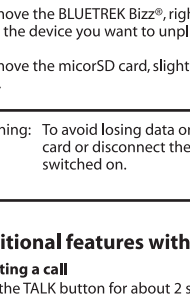
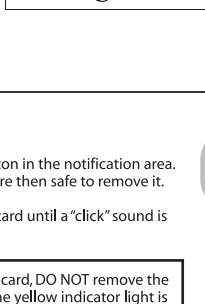


English	<p>Before using your headset for the first time</p> <p>• You must charge it continuously for about 4 hours, until the red indicator light turns off. Please refer to the "Charging the BLUETREK Bizz®" section of this manual. • Pair the headset with a mobile phone. Please refer to the "Pairing the BLUETREK Bizz®" section of this manual.</p> <p>Introduction</p> <p>The BLUETREK Bizz® headset is a wireless headset based on the Bluetooth® technology. It complies with Bluetooth® 2.0 protocol, supporting Headset and Hands-free profile.</p> <p>The BLUETREK Bizz® headset has 1 button: - "TALK" button (main button)</p>  <p>1 BLUETREK Bizz</p>
English	<p>Charging the BLUETREK Bizz®</p> <p>To charge your headset, please remove the speaker cover from the main body, then connect the USB connector to a USB slot.</p> <p>During the charge, the red Bluetooth® indicator light is switched on. The indicator light will turn off when the charge is complete.</p> <p>If a microSD card is inserted in the microSD card slot, the yellow indicator is switched on. During subsequent charges, the charging should take approximately 2 hours.</p> <p>When you hear a low-tone beep in your headset at regular intervals, and the indicator light flashes in red, your headset needs to be recharged.</p>  <p>Because of the width of the connector, you may not be able to connect it to certain USB ports on your computer. If that's the case, you can use the provided USB cable to make the connection.</p> <p>BLUETREK Bizz 12</p>
English	<p>Important:</p> <p>• If your headset is fully charged, the red indicator light will not turn on when plugging into the charger.</p> <p>• To maximize battery lifetime, it is recommended to recharge your headset to full capacity only when the battery is low, since a battery has a lifetime of about 500 charging cycles.</p> <p>• If you leave your headset battery empty for an extended period of time, it could excessively discharge the battery. In this case, charge your headset for 2 hours or more until the battery recovers and recharges completely. When you first charge the headset after prolonged storage, it may take few minutes for the red indicator light to turn on.</p> <p>• Do not charge your headset for more than 10 hours.</p> <p>• The use of any other charger will automatically suspend the warranty. It is strictly forbidden and can be very dangerous.</p> <p>3 BLUETREK Bizz</p>
English	<p>Pairing the BLUETREK Bizz®</p> <p>Before using the BLUETREK Bizz® headset, you must pair it with your Bluetooth® mobile phone. Pairing is the process of linking 2 Bluetooth® devices, so that they can communicate.</p>  <p>BLUETREK Bizz 14</p>
English	 <p>If pairing was successful, the indicator light will switch to blue and flashes slowly. If you haven't started the discovery mode within 5 minutes, the headset will go to the standby mode. You must then switch off your headset and start the pairing again.</p> <p>5 BLUETREK Bizz</p>
English	<p>Fitting lanyard</p>  <p>Wearing the BLUETREK Bizz®</p> <p>Two different sizes of ear hooks are included in the pack to suit your ear size.</p>  <p>BLUETREK Bizz 16</p>
English	<p>Switching the BLUETREK Bizz® ON and OFF</p> <p>Switching BLUETREK Bizz® ON When your headset is off, press and hold the TALK button for about 3 seconds until the blue indicator light is on. A beep (2 tones) can be heard in the speaker. Release the TALK button.</p> <p>Switching BLUETREK Bizz® OFF When your headset is on, press and hold the TALK button for about 7 seconds until the red indicator light is on. A beep (2 tones) can be heard in the speaker then release the TALK button.</p> <p>Making a call</p> <p>Mobile phone with voice recognition Make sure the voice recognition function on your mobile is activated and your voice tags have been recorded with the phone. To enter these, please refer to your phone's manual. When there is no incoming or active call, press once on the TALK button. Wait for the audio signal sent by the mobile phone (generally a short tone). Speak the name of person you wish to call.</p> <p>7 BLUETREK Bizz</p>
English	<p>Mobile without voice recognition Make sure both the headset and the mobile phone are ON and in stand-by mode. Dial the number on the phone keypad, after approximately 2 seconds the audio connection will be established.</p> <p>This function may not be available on some phones, please refer to the trouble shooting frequent asked questions in our website: www.bluetrek.com, to find out more.</p> <p>Answering a call</p> <p>When the headset rings, press once on the TALK button to take the call.</p> <p>Ending a call</p> <p>Press once on the TALK button to end an active call.</p> <p>Adjusting the volume</p> <p>Adjust the volume from your mobile phone during an active call.</p> <p>BLUETREK Bizz 18</p>
English	<p>Muting the microphone</p> <p>Mute the microphone from your mobile phone during an active call.</p> <p>Transferring a call from BLUETREK Bizz® to the mobile phone</p> <p>During an active call, press the TALK button for about 3 seconds. (This function only works in the Hands-Free Profile.)</p> <p>In the Headset profile, you can simply turn off your headset.</p> <p>Transferring a call from the mobile phone to the BLUETREK Bizz®</p> <p>During an active call, press the TALK button for about 3 seconds. (This function only works in the Hands-Free Profile.)</p> <p>In the Headset profile, you can simply turn on your headset.</p> <p>9 BLUETREK Bizz</p>
English	<p>Call waiting</p> <p>When you hear a call waiting alert while you are on a call, press approx. 3 seconds on the TALK button to accept the second call and place the current call on hold.</p> <p>To switch between an active call and a hold call, press approx. 3 seconds on the TALK button.</p> <p>To end the active call and take the hold call, press once on the TALK button.</p> <p>This function may not be available, depending on your phone. However, you can always answer the second call from your phone keypad.</p> <p>BLUETREK Bizz 10</p>
English	<p>Fitting the Ergobud®</p> <p>4 different sizes of Ergobud® are included in the pack to suit your ear size. You can adjust the Ergobud position that you feel the most comfortable.</p>  <p>To replace the Ergobud®, remove the speaker cover by pulling gently out from the speaker.</p>  <p>* Registered trademark</p> <p>11 BLUETREK Bizz</p>
English	<p>Using the BLUETREK Bizz® as flash storage device</p> <p>System Requirements</p> <p>The BLUETREK Bizz® works with default driver from Windows ME/2000/XP/Vista, Mac OS X/OS 10 or above, and Linux OS with kernel 2.6 or above.</p> <p>For Windows 98/2000 and Mac OS 9, it is supported by vendor driver from Alcor. To download the driver, please visit www.bluetrek.com</p> <p>It is compatible with USB 2.0 for Hi-Speed transfer.</p> <p>Inserting the microSD card into the BLUETREK Bizz®</p>  <p>1 Remove the speaker cover.</p> <p>2 Flip the microSD card and insert the microSD card into the slot.</p> <p>BLUETREK Bizz 12</p>
English	<p>microSD Card Compatibility</p> <p>To ensure interoperability, use only microSD / microSDHC* card.</p> <p>The microSD / microSDHC card must comply with the SD specification from SD Association. Check the compatibility of microSD / microSDHC with the card manufacturers or providers.</p> <p>Use only compatible microSD / microSDHC cards with this device. Other memory cards may not fit in the memory card slot and not be compatible with this device.</p> <p>Using an incompatible memory card may damage the memory card as well as the device, and data stored on the incompatible card may be corrupted or lost.</p> <p>Note: Keep all memory cards out of the reach of small children.</p> <p>*The microSD and microSDHC logos are trademarks of the SD Card Association.</p> <p>Connecting the BLUETREK Bizz® to the computer</p> <p>Plug the headset into the computer directly in a USB slot.</p> <p>When you connect the BLUETREK Bizz® to your computer, it will be detected automatically for most operation systems. If not, please follow the prompt messages and procedures to install the driver.</p>  <p>The microSD card indicator light is always on and keeps blinking when data is being transferred from or to the microSD card.</p> <p>13 BLUETREK Bizz</p>
English	<p>Removing the flash storage device and the microSD card</p> <p>To remove the BLUETREK Bizz®, right-click on the hot plug icon in the notification area. Select the device you want to unplug then click STOP. You are then safe to remove it.</p> <p>To remove the microSD card, lightly press on the microSD card until a 'click' sound is heard.</p> <div><p>Warning: To avoid losing data or corrupting the microSD card, DO NOT remove the card or disconnect the BLUETREK Bizz® when the yellow indicator light is switched on.</p></div> <p>Additional features with some phones</p> <p>Rejecting a call Press the TALK button for about 2 seconds to reject a call.</p> <p>Redial the last number When there is no incoming or active call, press the TALK button for about 3 seconds until you hear a beep.</p> <p>Troubleshooting guide</p> <p>The first thing you should do when encountering a problem that you cannot solve with this manual is to switch off your headset and your mobile phone, and switch them on again. To find out more, please refer to the trouble-shooting frequent asked questions in our website: www.bluetrek.com.</p> <p>BLUETREK Bizz 14</p>
English	<p>Guidelines for safe use</p> <p>Read those guidelines before using your headset.</p> <p>The volume level of the Bluetooth® headset may vary, depending on your mobile phone. Before using your headset for the first time, adjust the headset volume to the lowest, then increase the volume gradually until you reach to an acceptable level.</p> <p>High levels of volume may result in hearing loss, avoid using the headset at high volume continuously. If you experience ringing in your ears or muffled speech, consult your doctor immediately and stop using the headset.</p> <ul style="list-style-type: none">Do not drop or try to alter the shape of your headset.Do not expose your headset to liquid or moisture.Do not expose your headset to extreme temperatures. Temperature range :0-40C.Do not expose your headset to fire or open flames.Do not try to disassemble your headset. Service and Maintenance can only be performed by authorized BLUETREK® dealers.Keep your headset away from dust and dirt.Do not let children play with your headset, since it contains small parts that could become detached and create a choking hazard.Check the regulation in your area if you plan to use your headset while driving.Turn off your headset before boarding an airplane. <p>CAUTION: Danger of explosion if battery is incorrectly replaced. Dispose of batteries according to local regulations. Do not dispose as household waste.</p> <p>15 BLUETREK Bizz</p>