

SIEMENS

Gigaset
3000
Comfort

ENGLISH



Operating Instructions
and Safety Precautions 

 **Information and
Communications**

Brief overview



The display is protected by a film.
Please remove protective film.



Idle display, display keys



Reception range

Current functions


of the display keys, e.g. network access list, caller list*, calling internal number, redialling number

Display keys

- Functions vary depending on the display
- **If there are 2 functions**, press either the left **or** right side of the key

* Dependent on the base station, country and carrier services

Important menus

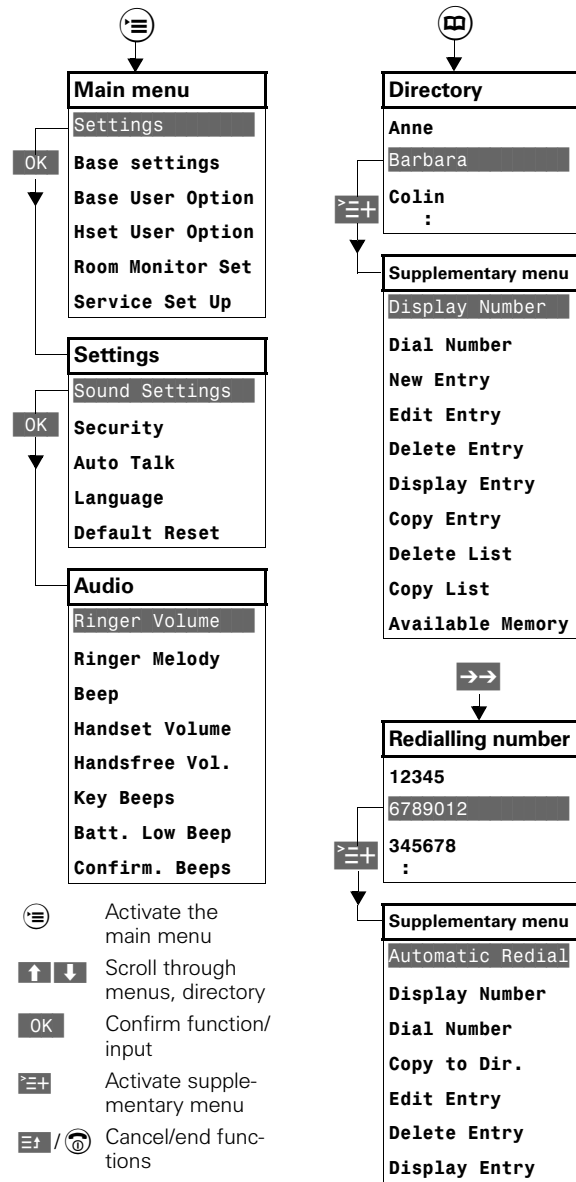

Safety precautions

- Never use ordinary (non-rechargeable) batteries. Only use **approved batteries of the same type** (rechargeable), otherwise the battery casings may be destroyed (dangerous). See table on page 7.
- The handset's battery compartments feature the following diagrams:
 Insert rechargeable batteries correctly in accordance with polarity symbols.
 Operate battery type in accordance with these operating instructions.
- Never use non-Siemens charging units as these can damage the batteries.
- Batteries heat up during charging - this is a normal occurrence and is not dangerous.
- The functionality of medical equipment can be affected by the handset.
- The handset can cause an unpleasant humming sound in hearing aids.
- Do not install the base station in bathrooms or showers.
- Do not operate the telephone in environments where there is risk of explosion (e.g. paint shops).
- Always include the operating instructions when passing your handset on to third parties.
- The batteries and handset should be disposed of in an environmentally-friendly manner.

Display symbols

The following symbols appear in display, depending on the operating situation:

	Network access list		Internal dialling
	On/off		Redialling number
	Left/right		Confirmation
	Mailbox function: e.g. new entry in the caller list		End function
	Delete character		Cancel/higher menu level
			Supplementary menu

Contents

Brief overview	2
Idle display, display keys.....	2
Important menus	3
Safety precautions.....	4
Display symbols	4
Preparing the handset.....	6
Inserting the batteries.....	6
Charging the batteries.....	7
Fitting the attachment clip	8
Activating/deactivating the handset.....	8
Activating/deactivating keypad protection	8
Registering the handset.....	9
Making calls	10
Making external calls	10
Direct internal dialling.....	10
Answering a call.....	10
Handsfree talking	11
Transferring a call, making an enquiry call	11
Redial	12
Manual redial	12
Automatic redial	12
Directories	13
Storing a call number	13
Dialling from the directory.....	13
Entering names.....	14
Network access support	16
Caller list	17
Audio settings	17
Handset/loudspeaker volume	17
Ringer volume/melody	18
Setting short beeps (advisory beep)	18
Activating/deactivating warning and signal beeps	18
Security.....	19
Changing the telephone PIN	19
Hot key selection (direct station selection)	20
Telephone lock.....	20
Dialling the emergency number	21
Further settings.....	21
Auto talk.....	21
Setting the display language.....	21
Resetting the handset to the default configuration	22
Base settings	23
Registering the handset.....	23
User options (short cuts)	24
Room monitor	26
Appendix	27

Preparing the handset


Contents of the package

Gigaset 3000 Comfort enhanced handset, two batteries, attachment clip, operating instructions.

Inserting the batteries



- Never use ordinary (non-rechargeable) batteries. Only use **approved batteries of the same type** (rechargeable), otherwise the battery casings may be destroyed (dangerous). See table on page 7.
- The handset's battery compartments feature the following diagrams:
 -  Insert rechargeable batteries correctly in accordance with polarity symbols.
 -  Operate battery type in accordance with these operating instructions.
- Never use non-Siemens charging units as these can damage the batteries.
- Please dispose of old, defective batteries in an environmentally-friendly manner.

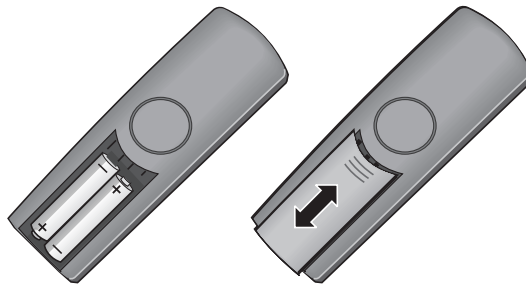

- Insert the batteries, ensuring **correct polarity** – see figure on left.
- Slide the cover approx. **3 mm into the battery compartment** and push gently forwards until it clicks into place.
- **To open** the cover, press the grooved area on the cover and slide **back**.

Charging the batteries

The batteries supplied are **not charged**. To charge the batteries, insert the handset either into the base station or the Gigaset 3000L charging unit – you will hear the confirmation beep. The charging operation is indicated by a flashing LED on the handset:

	Batteries flat		Batteries $\frac{2}{3}$ charged
	Batteries $\frac{1}{3}$ charged		Batteries full

- Initially charge the batteries **thoroughly**; we recommend charging the batteries for at least **16 hours without interruption** – irrespective of the charging status icon.
- Once the first charging operation is complete, you can replace the handset in the base station after any call. Charging is controlled electronically. This ensures optimum charging and prolongs battery life.
- The batteries heat up during charging.
- The battery charging status is only correctly displayed after uninterrupted charging/discharging.


Approved batteries:

Nickel-cadmium (NiCd)	Nickel-metal-hydride (NiMH)
Sanyo N-3U (700 mAh)	Saft VHA AH 1300 (1300 mAh)
Mobile Power 700 (700 mAh)	Panasonic HHR-110 AA (1100 mAh)
Panasonic P-60AA DT (600 mAh)	Friwo NiMH (1400 mAh)
Varta 751 RS (700 mAh)	Sanyo H-3 U (1500 mAh)
GP GP60AAKC (600 mAh)	Toshiba TH-1200 AARE (1200 mAh)
	GP GP130 AAHC (1300 mAh)
	GP GP150 AAHC (1500 mAh)
	Varta VH 1101 (1100 mAh)

Always insert two batteries and only use batteries of the same type/from the same manufacturer.

Handset operating time/charging time:

Capacity (mAh)	Standby time (hours)	Talktime (hours)	Charging time (hours)
700	up to 100	over 10	approx. 5
1100	up to 160	over 15	approx. 9
1500	up to 220	over 20	approx. 12

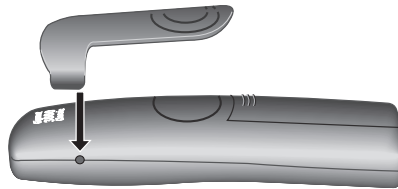Fitting the attachment clip

Push the clip onto the back of the handset until the protrusions slot into place.

Activating/deactivating the handset

Press the end call key for **1 second**.

The handset is activated automatically by inserting the batteries and placing it in the base station/charging unit.

Activating/deactivating keypad protection

If you activate keypad protection, nothing happens when you press a key.

Press the talk key  to answer an incoming call – keypad protection is automatically deactivated for the call.



To activate/deactivate, press and hold down for **longer than 1 second**.

Registering the handset

You can change the display language (see page 21). After doing this, switch your handset off and then on again.

You must register a new handset at the base station before you can make any telephone calls. When you switch on your handset, the message **Register?*** appears.

Step 1:

- You must first prepare the **Siemens base station**:

Gigaset	Preparing the base station
3010/pocket 3015	Press the coloured key on the base station for approx. 10 seconds until you hear the signal tones .
3020, 3025 3030, 3035	In the base station menu select registration option and confirm.
ISDN models	Press the LED – flashes during registration.
1000/2000 models	See above for appropriate successor models in the 3000 range, e.g. 3010 for 2010.

Step 2:

- Now enter the following **in the handset within one minute**:

YES

Press the display key.

Enter base PIN

Enter the base station's system PIN (factory setting: 0000) and confirm – unsigned internal numbers are displayed.

OK

e.g. 

Enter the required call number – the base name, e.g. **Base 1**, is displayed (no longer flashing).

Your handset is now ready for use!

- To register at multiple base stations or to change base names, see page 23.
- To modify the internal call number: re-register your handset at the same base, see page 23.

* English is the default factory setting

Making calls

Making external calls



Enter the call number.
If necessary, correct with .



Press the talk key to start dialling.

Ending a call:

Press the end call key .

- You can **cancel the dial operation** with the end call key .
- You can enter a **pause** with the recall key  (hold down key).
- You can opt to **not save entries**, e.g. when controlling external telephone services: press the menu key , select **Switch to Tone** and confirm with **OK** – **none** of the numbers entered afterwards will be saved.

Direct internal dialling



Press the display key – your own internal number is displayed.

e.g. 

Enter the internal call number.

To call all handsets:

CALL ALL or 

Ending a call:


Press the end call key .

Answering a call



Press the talk key

or



If "Auto talk" is activated simply remove handset from the base station/charging unit.

Handsfree talking

Handsfree talking, with the loudspeaker switched on, offers the following advantages:

- other parties can listen in and participate in the conversation
- your hands are free, you can place the handset on any convenient surface or, **holding down the handsfree talking button**, place it in the base station/charging unit
- the dial tone, for example, can be heard when dialling without lifting the handset to the ear.

When **handsfree talking is activated**, the handsfree talking button  is lit. You can place the handset on the table in front of you, for example.

• Handsfree talking during a call



Activate handsfree talking.

To set the volume:
press the handsfree talking button  once more.



Change from handsfree talking to talking with the handset.



End the call.

• Handsfree talking when dialling/answering a call



Press the handsfree talking key instead of the talk key .

Transferring a call, making an enquiry call

Siemens base stations allow you to transfer an external call to another handset or to hold a call while making an internal enquiry call.



Press the display key.

e.g. 

Dial the internal number.

When the user answers:

- **transfer the call:** press the end call key .
- **end the enquiry call:** press  to revert to the caller placed on hold.

Redial

Manual redial

You can access the last five call numbers dialled.



Display and select the call number.



Start the dial operation.

Automatic redial

This function is not available in all countries!

The handset redials the last call number.



Display and select the call number.



Open the supplementary menu.



Confirm **Automatic Redial**.

Dialling activates the handsfree talking function. The handsfree talking button flashes.

If the user answers:

Press the talk key .

To cancel automatic redial:

press **CANCEL**.

Additional functions

All functions in the supplementary menu start as follows:



Display and select call numbers.



Open the supplementary menu.



Select the **required function** and confirm:

Display Number (add to/change the number to be called before dialling); **Dial Number** (dial the selected call number); **Copy to Dir.** (save the call number in the directory); **Edit Entry** (change the call number); **Delete Entry** (delete the call number/name); **Display Entry** (display the entire call number).

Directories

With the **directory** , you can store up to 100 call numbers and then dial them at the push of a button.

You can store prefixes for telephone companies and frequently used call numbers in the **network access list**  (see also Network access support, page 16).

Apart from the entry operation, using the directory and the network access list is identical.

Storing a call number

	Display the directory/network access list.
	Open the supplementary menu.
 OK	Select New Entry .
Name	Enter the name, see page 14.
	Scroll to the next line.
	Enter the call number, see also note below.
	Open the supplementary menu.
 OK	Confirm Save Entry .

- When entering the number, you can insert a pause with the recall key  or a number from the network access list via the supplementary menu .
- You can, for example, store the number of a company's switchboard so that you only have to dial the extension when making a call.
- You can also save incoming or outgoing call numbers during a call.

Dialling from the directory

	Display the directory/network access list.
e.g.  	Enter the first letters of the name, e.g. press the key  twice for "E" or scroll with  .
	Press the talk key to start dialling.

Entering names

To enter **names**, you can choose letters, digits and symbols with the appropriate key:

Press the appropriate key repeatedly or hold it down:

	1x	2x	3x	4x	5x	6x	7x	8x	9x
	1								
	a	b	c	2	ã	à	â	ā	ç
	d	e	f	3	ë	é	è	ê	
	g	h	i	4	ï	î			
	j	k	l	5					
	m	n	o	6	ö	ñ	ó	ô	õ
	p	q	r	s	7	ß			
	t	u	v	8	ü	ú	ù	û	
	w	x	y	z	9	ý	æ	ø	â
	␣*	.	–	0	,	+	:	?	!
	a→A	*	/	(	)	=	&	@	
	#	£	\$						

* Blank

The entries are **sorted as follows**:

★, #, space, digit (0-9), letter (in alphabetical order), **–**, other characters.

Upper/lowercase:

The **first letter** of the name is **written automatically in upper case**, the letters immediately afterwards are written in lower case.



Manual shift to upper/lower case for **one character**.

Controlling the cursor:



Move the cursor to the left or right or to the end of the word/line in the next line (press briefly or hold down).



Scroll up or down one line.

Deleting a character:



The character to the left of the cursor is deleted (press briefly or hold down).

Inserting characters:

Characters are always inserted to the left of the cursor.

Additional functions



Display the directory/network access list.

e.g. 

Enter the first letter of the name, e.g. press  for "T".



Open the supplementary menu.



Select the **required function** and confirm:

Display Number (add to/change a call number before dialling); **Dial Number** (dial the selected call number); **New Entry** (see page 13); **Edit Entry** (change the call number/name); **Delete Entry** (delete the call number/name); **Display Entry** (display the call number/name);

Copy Entry

Prerequisite: both handset and base station support this function.

You can copy the entry to another Comfort handset.

If **Copy entry to INT Hset:** is displayed:

e.g.  

Enter the number of the handset called and confirm.

The **handset called** rings:



e.g.  Accept the call.

Tel. PIN 

Enter the telephone PIN of the handset called and confirm – the entry is transferred.

Delete List

All entries are deleted.

Copy List

Procedure as for "Copy Entry".

Available Memory

Indicates the memory available. This is shared by the directory, the network access list and the short cuts.

Network access support

• Linking call numbers

This function allows you to merge two parts of a number.



Open the network access list and select an entry.



Open the supplementary menu.



Confirm **Display Number** – the number is displayed.

e.g. 

Either enter the user's call number **or** open the directory and select a number.



Start the dial operation – the two parts of the call numbers are dialled one after the other.

• Speed dialling from the network access list

- You can save 10 numbers (**0-9**) in the call-by-call list for speed dialling. These **speed dialling numbers (0-9)** must be entered **before** the name, e.g. "**1** Name".
- Hold down the relevant digit key (**0-9**) to display the number saved.

Prerequisite: speed dialling number is saved!

e.g. 

Hold down the relevant digit key – e.g. 1, and the number saved under the name "**1** Name" is displayed.

e.g. 

Enter the user's call number **or** open the directory and select the number.



Start the dial operation – the two parts of the call numbers are dialled, one after the other.

Caller list

Unanswered calls are also, for example, stored in the **caller list**^{*}.

New entries in the caller list are indicated by the display symbol .



Press the display key – the caller list, for example, is displayed.



Scroll to the required entry.

e.g. dial the call number:



Press the talk key.

In the case of **base stations with answering machines**, this symbol  also indicates that new messages have been recorded. Please refer to the appropriate operating instructions.

Audio settings

Handset/loudspeaker volume

You can set the handset volume to any of three levels and the loudspeaker to any of five levels – even during a call! For information on changing the handsfree volume, see also page 11.



Press the menu key.



Select **Settings**.



Select **Sound Settings**.



Select **Handset Volume** or **Handsfree Vol.**



Change the volume and save.

^{*} Dependent on the base station, country and carrier services

Ringer volume/melody

- You can choose between **5 ringer volumes**, the **crescendo ring** (=C; increasing volume) and **ringer off** (=0).
- You can choose between **10 ringer melodies**.



Press the menu key.

OK

Select **Settings**.

OK

Select **Sound Settings**.



OK

Select **Ringer Volume** or **Ringer Melody**.



OK

Change the setting and save.

Setting short beeps (advisory beep)

A call is signalled by a single short advisory beep when you set the **Beep** function.



Press the menu key.

OK

Select **Settings**.

OK

Select **Sound Settings**.



OK

Select **Beep**.

✓ = activated.

Activating/deactivating warning and signal beeps

- **Key Beeps:** every keystroke is confirmed.
- **Batt. Low Beep:** the battery needs to be charged.
- **Confirm. Beeps:** confirmation beep (1 beep) at the end of the input/settings and when replacing the handset in the charging unit; error beep (4 short tones) following an incorrect entry.



Press the menu key.

OK

Select **Settings**.

OK

Select **Sound Settings**.



Select the **required function**.

OK

Activate or deactivate the function.

✓ = beep activated.

Security

You can change the telephone PIN, set up direct station selection or lock your telephone (handset).

The security functions begin as follows:



Press the menu key.

OK

Select **Settings**.



OK

Select **Security**.

Tel. PIN OK

Enter the telephone PIN (factory setting: 0000, display *****).



Select the **required function**:

Changing the telephone PIN

Important functions/settings are protected by the PIN (**P**ersonal **I**dentification **N**umber) on your handset.

Do not forget your telephone PIN! It can only be reset by calling the **Siemens hotline**, see back cover.

First steps are as described at the start of the **Safety precautions** section, then:

OK

Select **Change PIN**.

Tel. PIN OK

Enter the new telephone PIN

Tel. PIN OK

(4 digits) **twice** and confirm – the new telephone PIN is saved.

Hot key selection (direct station selection)

This function is not available in all countries!

When hot key selection is activated, **every keystroke** initiates a call to the previously stored hot key number. Sick people and the elderly, for example, can thus summon help in emergencies. The handset, however, can still receive calls. Simply press the talk key  to take incoming calls.

Saving/changing/deleting a hot key number:

First steps are as described at the start of the **Safety precautions** section, page 19, then:

OK

Select **Hot Key Set Up**.
See also note below!



Enter the hot key number, change it or delete it with .

>=+

Select the supplementary menu.

OK

Select **Save Entry**.

When entering a number, if necessary open the supplementary menu  and enter **I** for an internal hot key number (e.g. **I3**), a **pause** or a **number from the network access list**.

Activating the hot key:

First steps as described at the start of the **Safety precautions** section, page 19, then:

OK 

Select **Hot Key** and activate.
✓ = activated.

Deactivate: OFF enter the telephone PIN OK .

Telephone lock

If the telephone lock is activated, with the exception of the emergency call, all functions are disabled. The handset, however, can still receive calls. Simply press the talk key  to take incoming calls.

First steps are as described at the start of the **Safety precautions** section, page 19, then:

OK 

Select **Handset Lock** and activate.
✓ = activated.

Deactivate: OFF enter the telephone PIN OK .

Dialling the emergency number

When the hot key/telephone lock is activated, you can dial the emergency numbers saved on the base station – see base station operating instructions!

Further settings

Auto talk

If this function is activated, simply remove the handset from the base station/charging unit to answer a call.



Press the menu key.

OK

Select **Settings**.

↓ OK

Select **Auto Talk** and activate or deactivate the function.
✓ = activated.

Setting the display language



Press the menu key.

OK

Select **Settings**.

↓ OK

Select **Language**.
✓ = language set.

↓ OK

Select the language and confirm.

Language setting displays:

Einstellungen	Sprache	Deutsch
Settings	Language	English
Réglages	Langue	Français
Impostazioni	Lingua	Italiano
Ajustes	Idioma	Español
Programações	Língua	Português
Instellingen	Taal	Nederlands

Resetting the handset to the default configuration

The **telephone PIN** is **not** reset, the **directory**, **network access list** and the **caller list** are **not** deleted.

Handset factory settings:

Language setting	English
Hot key, redial	deleted
Auto talk, key beep, battery low beep, confirmation beeps	on
Handset volume, ringer tone	1
Loudspeaker volume	3
Ringer volume	5
Short beep	off
Room monitor level	2



Press the menu key.

OK

Select **Settings**.



OK

Select **Default Reset**.

Tel. PIN OK

Enter the telephone PIN and confirm (factory setting: 0000).

Base settings

Registering the handset

You can operate your handset at up to **4 base stations**.
For information on registering at **non-Siemens** GAP base stations, see the relevant base station operating instructions.

- To prepare the **base station**, see page 9.
- Enter the following **in the handset within one minute**:



Press the menu key.



Select **Base settings**.



Open the supplementary menu.



Select **Register**.

System PIN

Enter the base station's system PIN
(factory setting: 0000) and confirm.

Additional base settings

All other base settings begin as follows:



Press the menu key.



Select **Base settings**.



Select the base and open the supplementary menu.



Select the **required function**:

Change Base Name

You can change the base name, e.g. **Base** to **Internal 3**; in this case, "3" is the handset's internal number.



Select **Chnge Base Name**
(Change Base Name).

Name

Enter the required name.
For information on entering the name,
see page 14.



Select **Save Entry**.

Select Base

You can set the handset permanently to a **specific base station** or to **Best Base – automatic switch** to the base station with the strongest reception.

OK

Select **Select Base**.

ISDN Config.

Only possible in conjunction with some Siemens ISDN base stations. Refer to the appropriate operating instructions.

User options (short cuts)

Base station user options

Only available with Gigaset 3000 base stations!
Refer to the appropriate operating instructions.

Handset user options (handset short cuts)

You can save multiple operating steps (inputs) as a handset "short cut" and assign an appropriate name to it. You can edit and copy short cuts via the supplementary menu  in the same way as directory entries.

Saving handset user options:



Press the menu key.



OK

Select **Hset User Option**.



Open the supplementary menu.



OK

Select **New Entry**.

Name

Enter the name of the short cut.



Scroll to the next line.

Contents

Enter the contents for the short cut.



OK

Open the supplementary menu and confirm **Save Entry**.

Additional supplementary menu functions when entering the short cut contents:**Insert Function**

The following letters are displayed for the functions:

C Request PIN	I INT
N Request No.	E End Call
Q Req. Acknowl.	M Temp. Tone
P Insert Pause	



Select a function and confirm.

Show Function

The meaning of the character at the current cursor position is displayed.

Network Access

To insert a number from the network access list.

Starting a handset short cut:

Press the menu key.



Select **Hset User Option**.



Select the required short cut and start it with the talk key.

Room monitor

When the room monitor feature is activated, an **internal call** to another handset is triggered as soon as the noise level in the monitored room reaches the level set. You can hear the noises in the room when you answer the call. The room monitor remains active even after you replace the handset. Calls are only shown on the monitoring handset's display. The **distance** between the handset placed there and the area to be monitored should be between **1 and 2 meters**.

Saving the call number



Press the menu key.



Select **Room Monitor Set**.



Select **Room Monit. No.**



Enter the number of the handset to be called by the monitoring handset and confirm.

If you entered a 2-digit number by accident: enter a "zero" before the number.

Setting the noise level



Press the menu key.



Select **Room Monitor Set**.



Select **Set Level**.



Change the level and save.
Level 1 = sensitive!

Activating the room monitor

Prerequisite: call number saved.



Press the menu key.



Select **Room Monitor Set**.



Activate **Room Monitoring** and terminate the function.
✓ = activated.

Deactivating the room monitor

OFF

The handset returns to idle state.

Appendix

Settings at the base

The setting options in the **Service Set Up** menu item are dependent on the base station.

Refer to the appropriate base station operating instructions.

Range

The range is up to 300 m outdoors and approx. 50 m indoors. The reception strength symbol indicates the strength of radio contact between the base station and the handset:

- ▀▀▀▀ High reception strength
- ▀▀▀▀ Low reception strength

Guarantee/service

Over a guarantee period of six months from the date of purchase from the stockist, Siemens AG will rectify all material or manufacturing defects by repairing or replacing the defective terminal.

The guarantee does not cover damage caused by incorrect use, wear and tear, or third-party access. The guarantee does not cover consumables or defects which only have a minor effect on the value or operability of the terminal.

Service telephone number (see back cover).

Approval

The Gigaset 3000 Comfort handset has been approved throughout the EU.

